
ELECTRICAL WIRING <EVOLUTION-VI>

CONTENTS

HOW TO READ THE WIRING DIAGRAMS	A
ELECTRICAL WIRING (L.H. DRIVE VEHICLES)	B
ELECTRICAL WIRING (R.H. DRIVE VEHICLES)	C



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

DASH PANEL






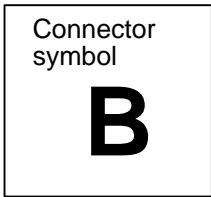


<Without relay box in passenger compartment>

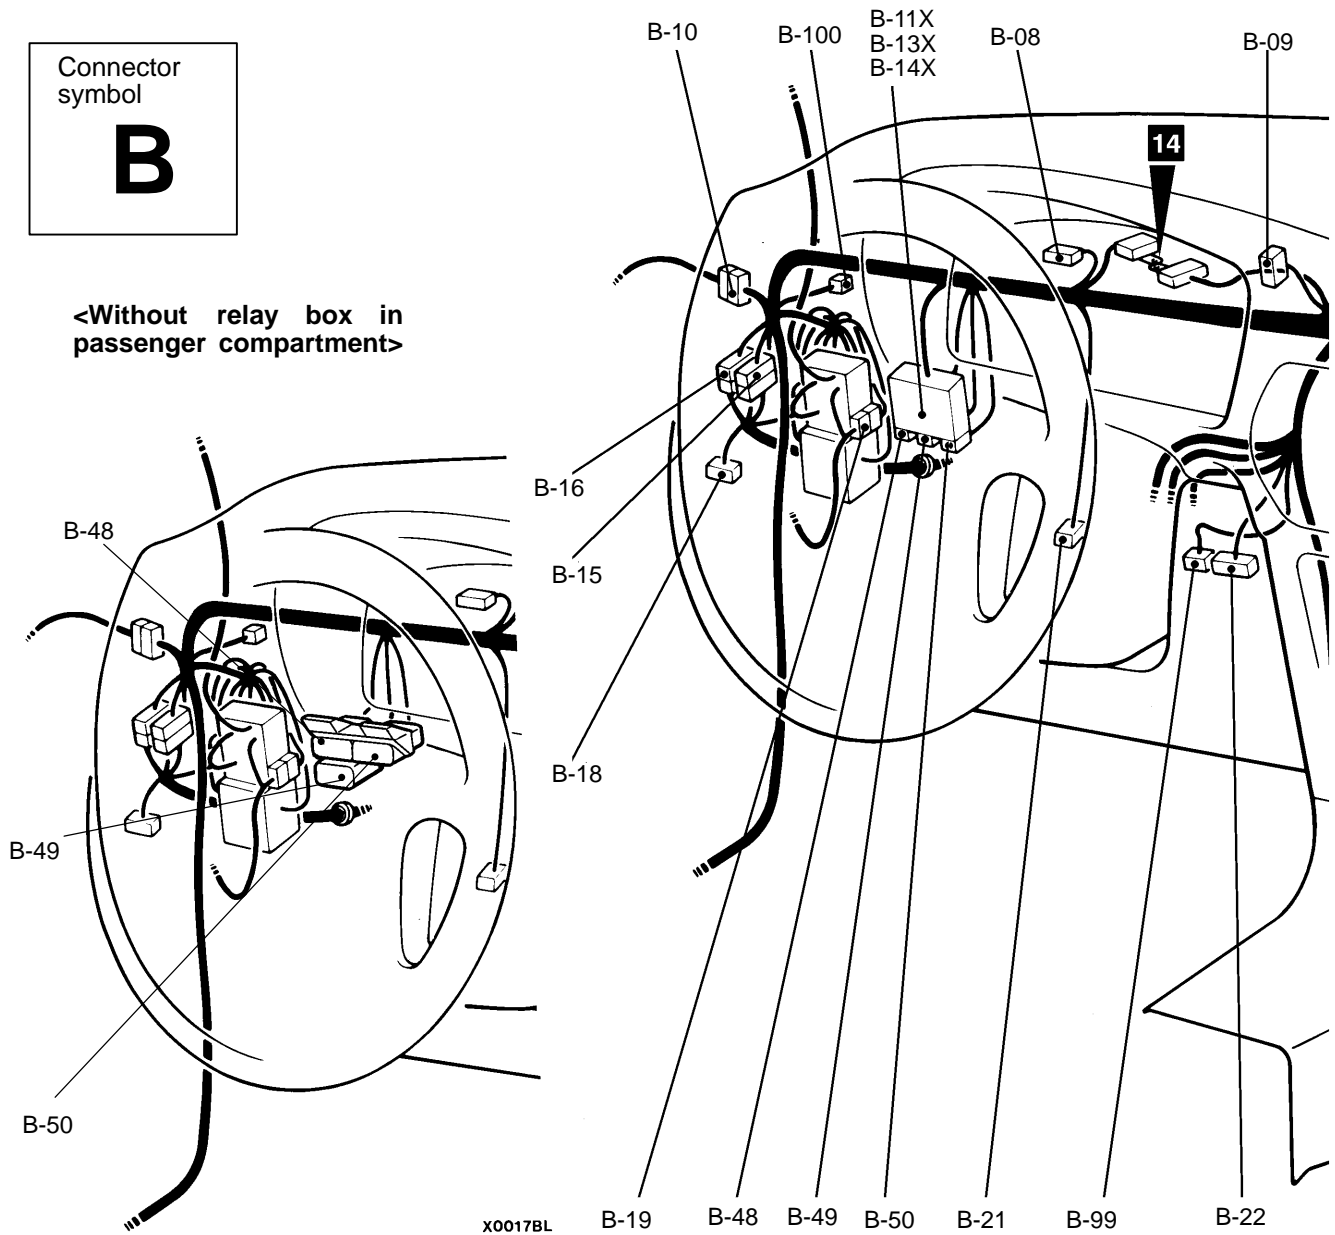



X0017BL

- | | | | |
|------------|---|-------------|--|
| B-01 (2-R) | Air bag module (squib) (passenger's side) | B-18 (19) | J/C (1) |
| B-07 (8) | Blower switch <A/C> | B-19 (22) | Instrument panel wiring harness and body wiring harness combination |
| B-08 (25) | Combination meter | B-21 (2) | Stop lamp switch |
| B-09 (25) | Combination meter | B-22 (16-B) | Diagnosis connector |
| B-10 (22) | Front door wiring harness (driver's side) and body wiring harness combination | B-27 (4) | Engine control relay |
| B-11X (8) | Rear intermittent wiper relay | B-28 (4) | Fuel pump relay |
| B-13X (5) | Power window relay | B-30 (14) | Space connector (Radio) |
| B-14X (5) | Front fog lamp relay | B-35 (22) | Front door wiring harness (passenger's side) and body wiring harness combination |
| B-15 (20) | Front wiring harness and body wiring harness combination | B-37 (4) | Resistor |
| B-16 (6) | Front wiring harness and body wiring harness combination | | |

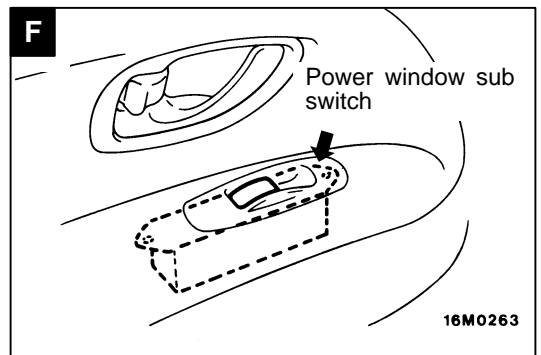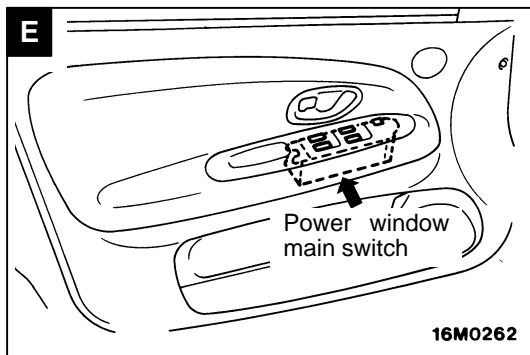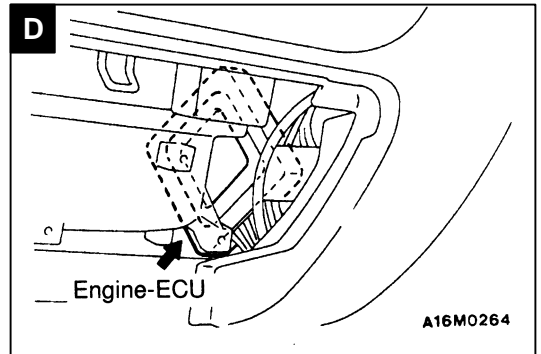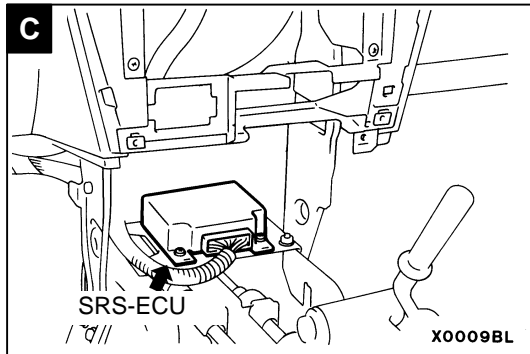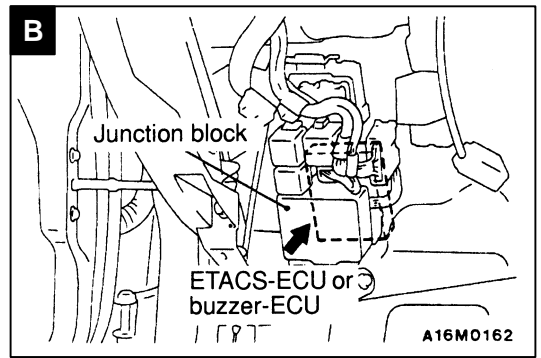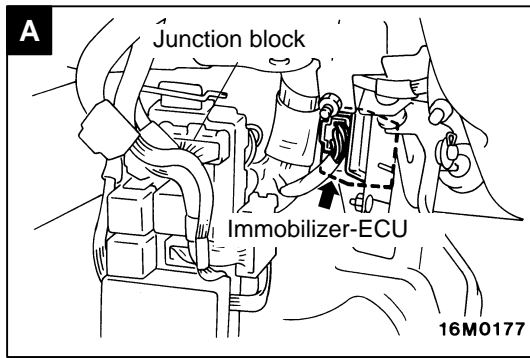


JOINT CONNECTOR (J/C)


NOTE
 IN ACTUAL VEHICLES, ANY OF THE TERMINALS CONNECTED IN J/C ARE USED.
 THE TERMINALS DESCRIBED IN THE CIRCUIT DIAGRAM MAY NOT BE
 IDENTICAL TO THOSE OF THE VEHICLES.

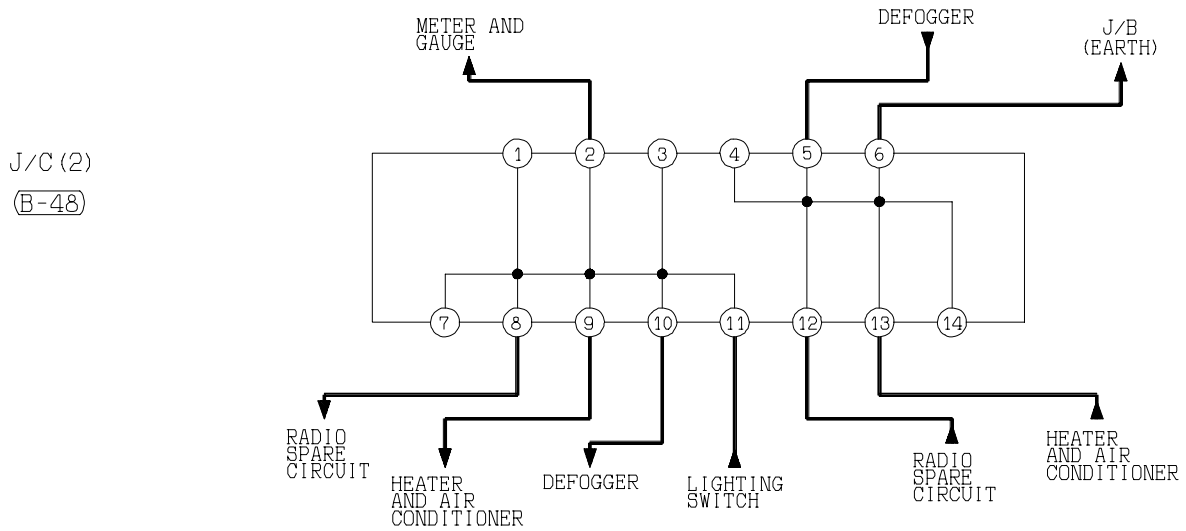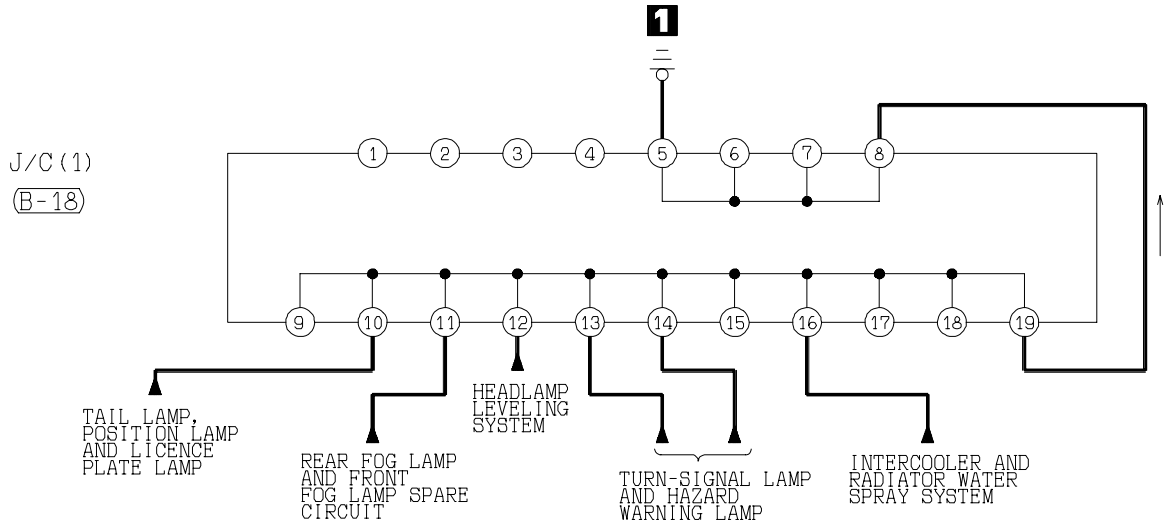


(B-18)

 


(B-48)

 

(B-49)

 


(B-50)

 


POWER DISTRIBUTION SYSTEM (CONTINUED)

3

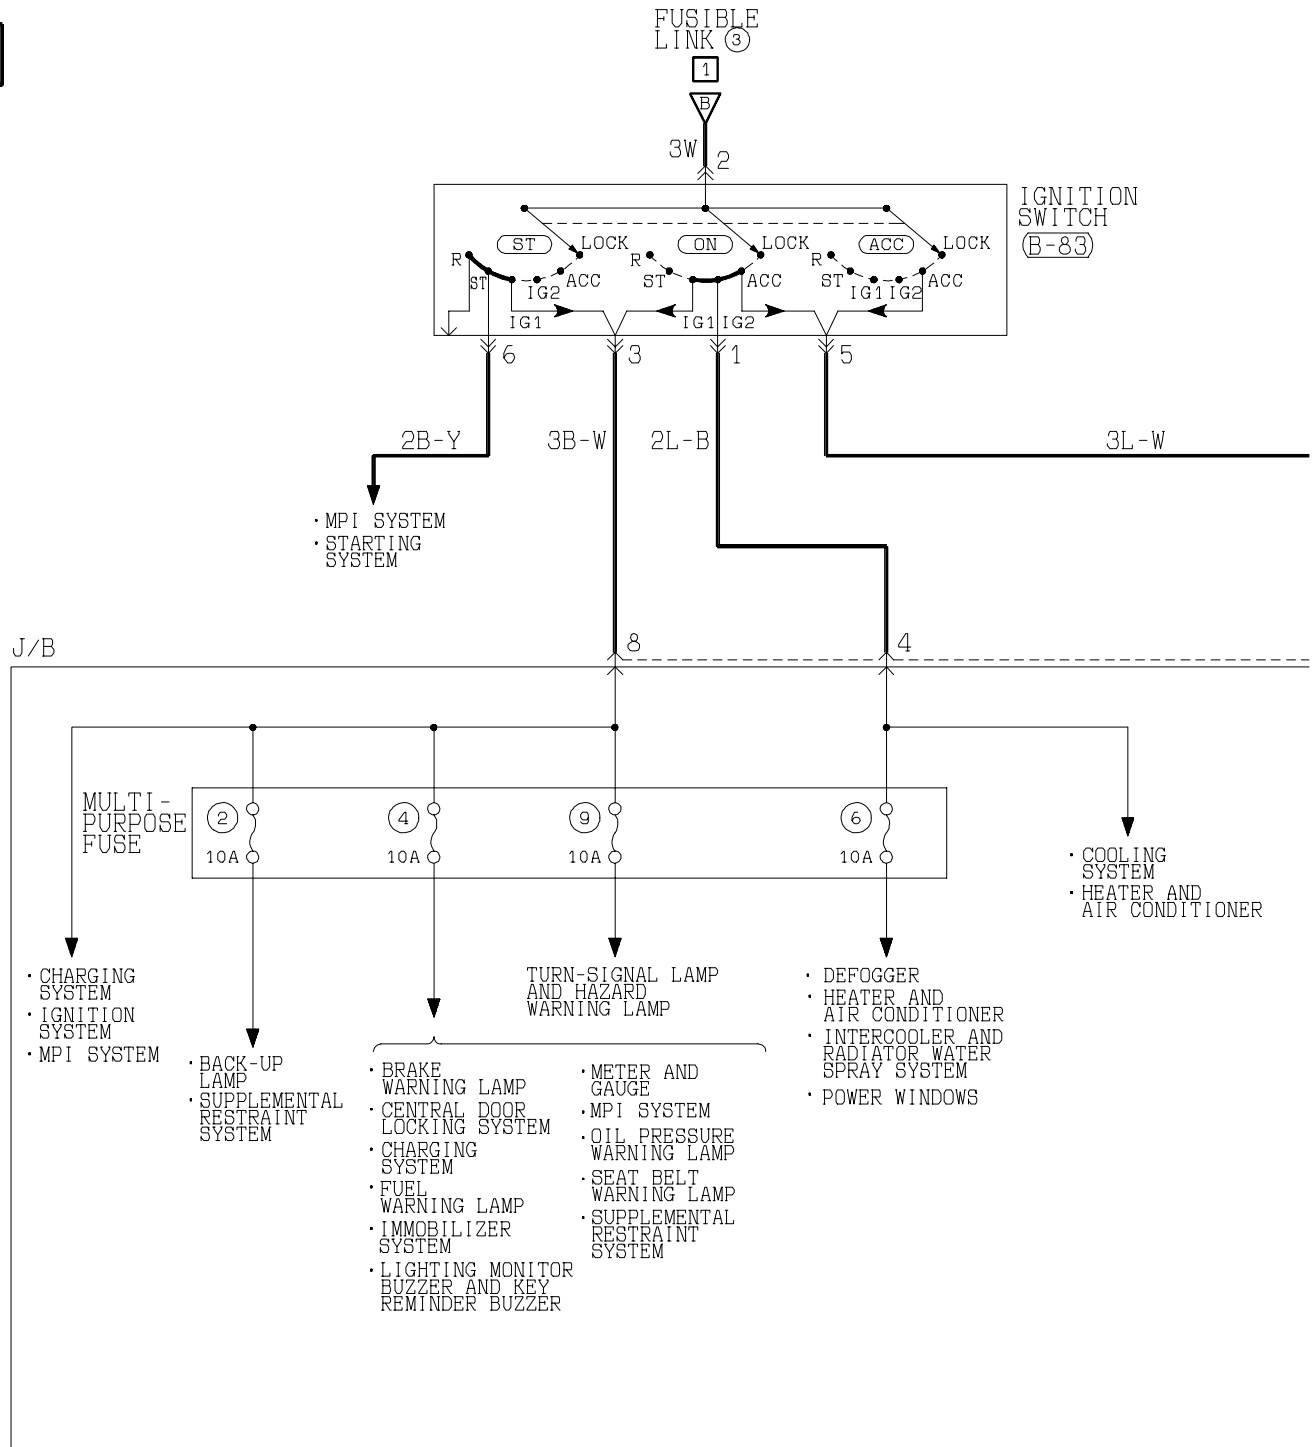

B-67

 

B-76





B-83



MPI SYSTEM (CONTINUED)


5

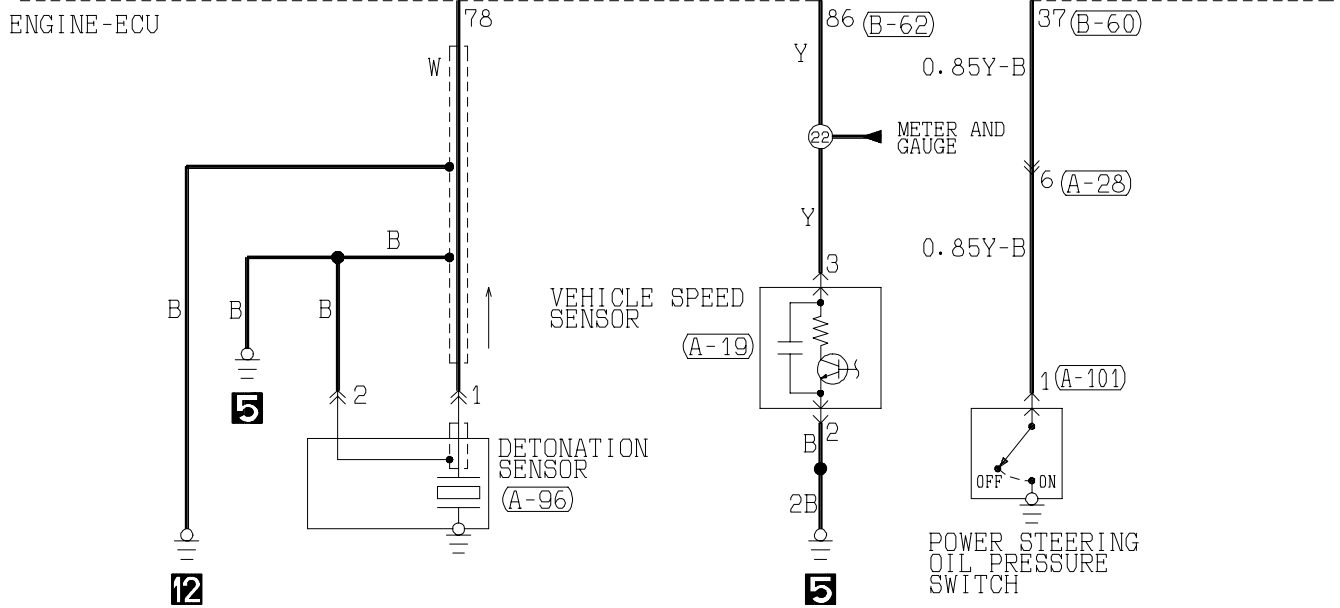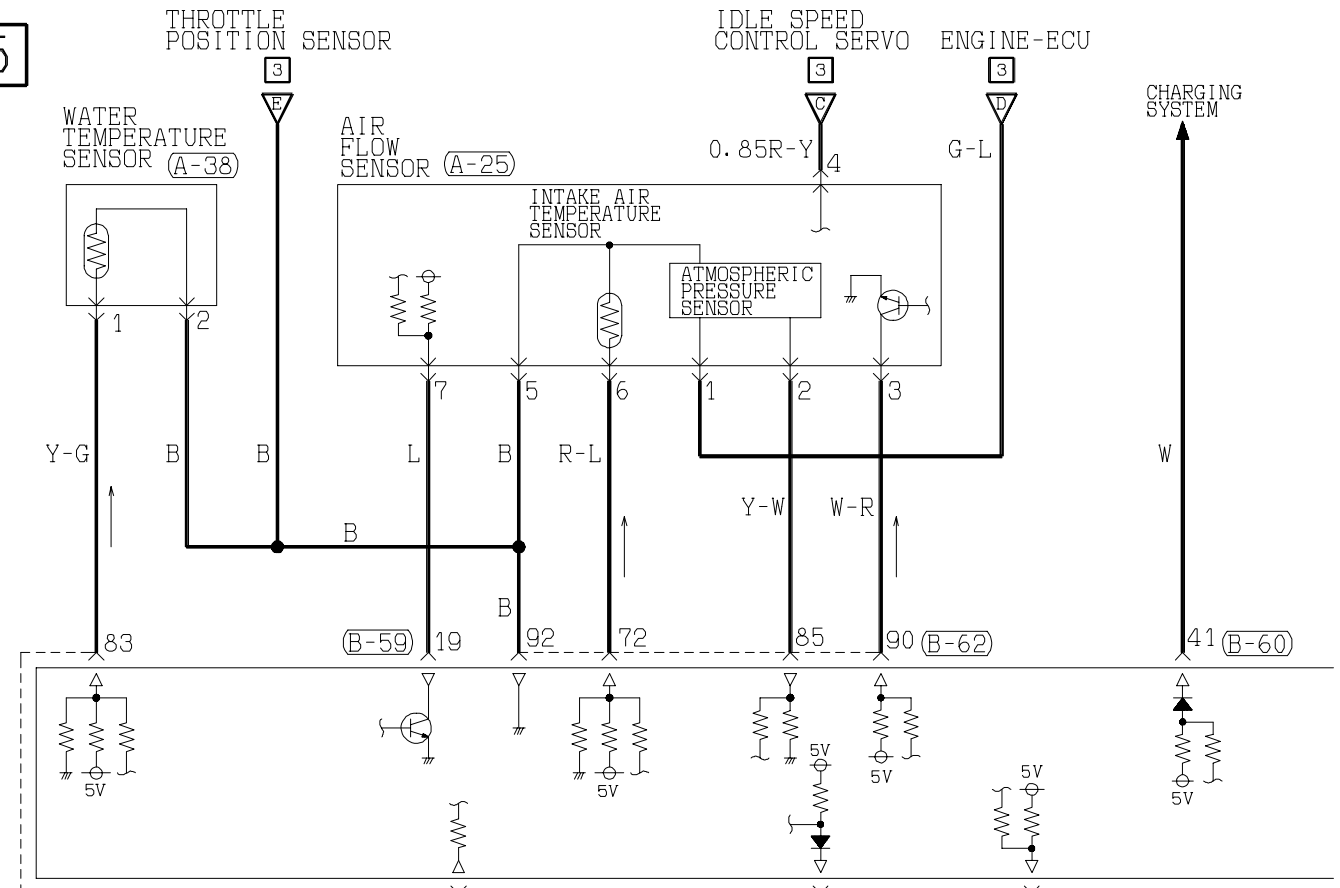

- (A-12) [1 2]
- (A-19) [1 2 3]
- (A-23) [1 2]
- (A-25) [1 2 3 4 5 6 7]
- (A-28) [1 2 3 4 5 6 7 8]
- (A-38) [1 2]
- (A-73) [1]
- (A-88) [1 2 3 4 5 6]
- (A-96) [1 2]
- (A-101) [1]
- (A-127) [1 2]

REAR FOG LAMP AND FRONT FOG LAMP SPARE CIRCUIT (CONTINUED)

3

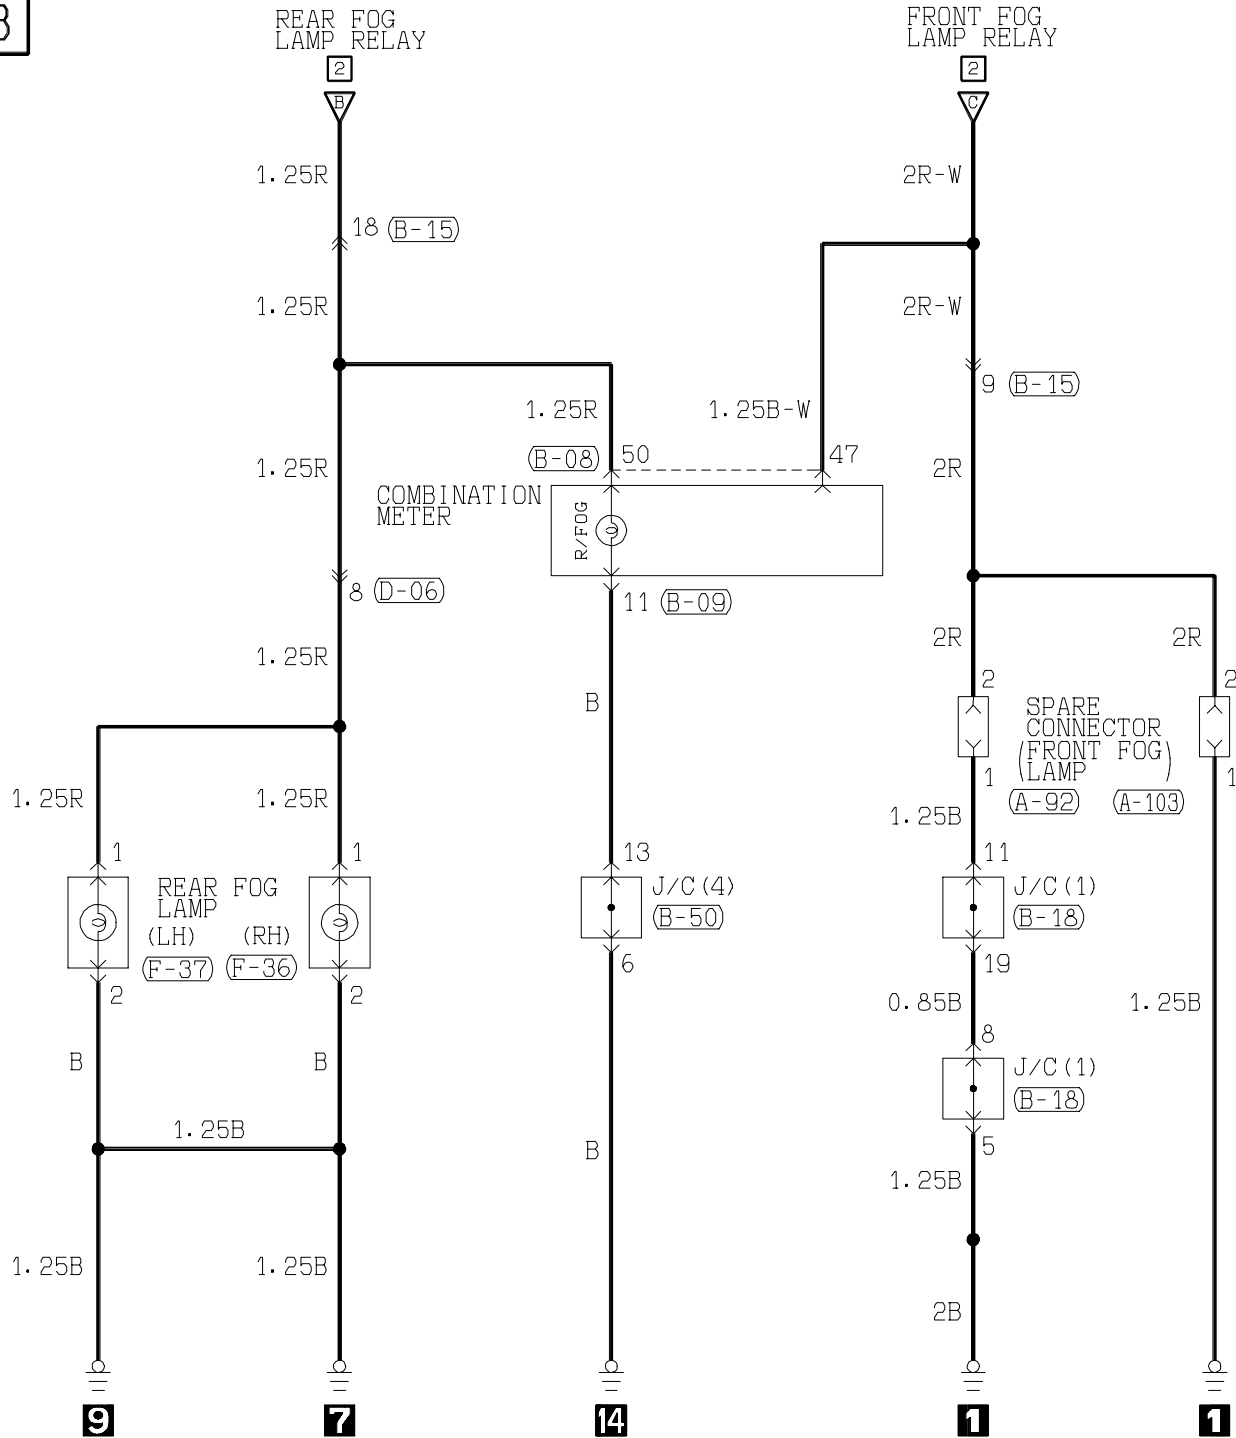

(A-92)

1	2
7	8

(A-103)

1	2
7	8

(B-08)

31	32	33	34	35	36	37	38	39	40	41	42
					43						
44	45	46	47	48	49	50	51	52	53	54	55

(B-09)

1	2	3	4	5	6	7	8	9	10	11	12
							13				
14	15	16	17	18	19	20	21	22	23	24	25

(B-15)

1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	18
19	20							

(B-18)

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16
17	18	19					

(B-50)

1	2	3	4	5	6
7	8	9	10	11	12
13	14				

(D-06)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(F-36)

1	2
7	8

(F-37)



1	2
7	8

Wire colour code
 B : Black LG: Light green G : Green L : Blue
 BR: Brown O : Orange GR: Gray R : Red
 W : White SB: Sky blue P : Pink Y : Yellow
 V : Violet

HORN


<Vehicles without SRS>

 1

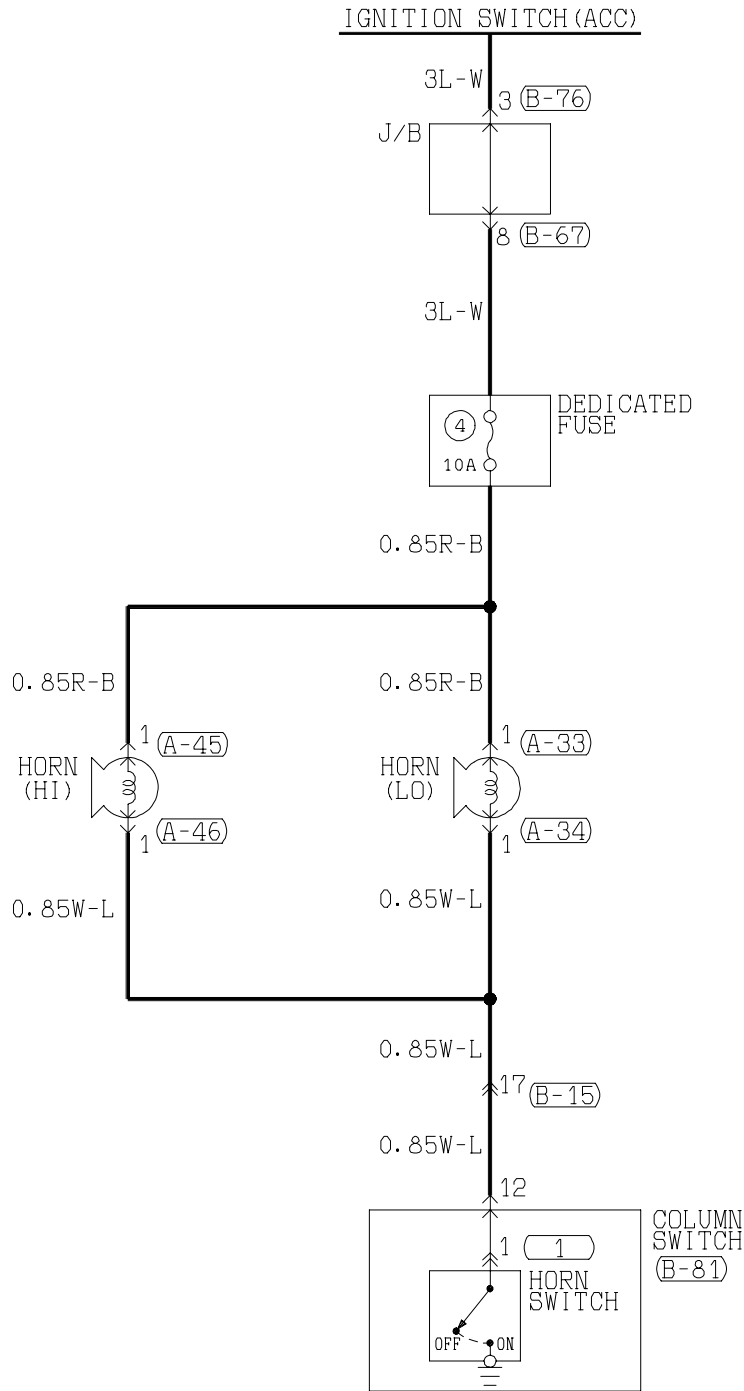

Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

POWER WINDOWS

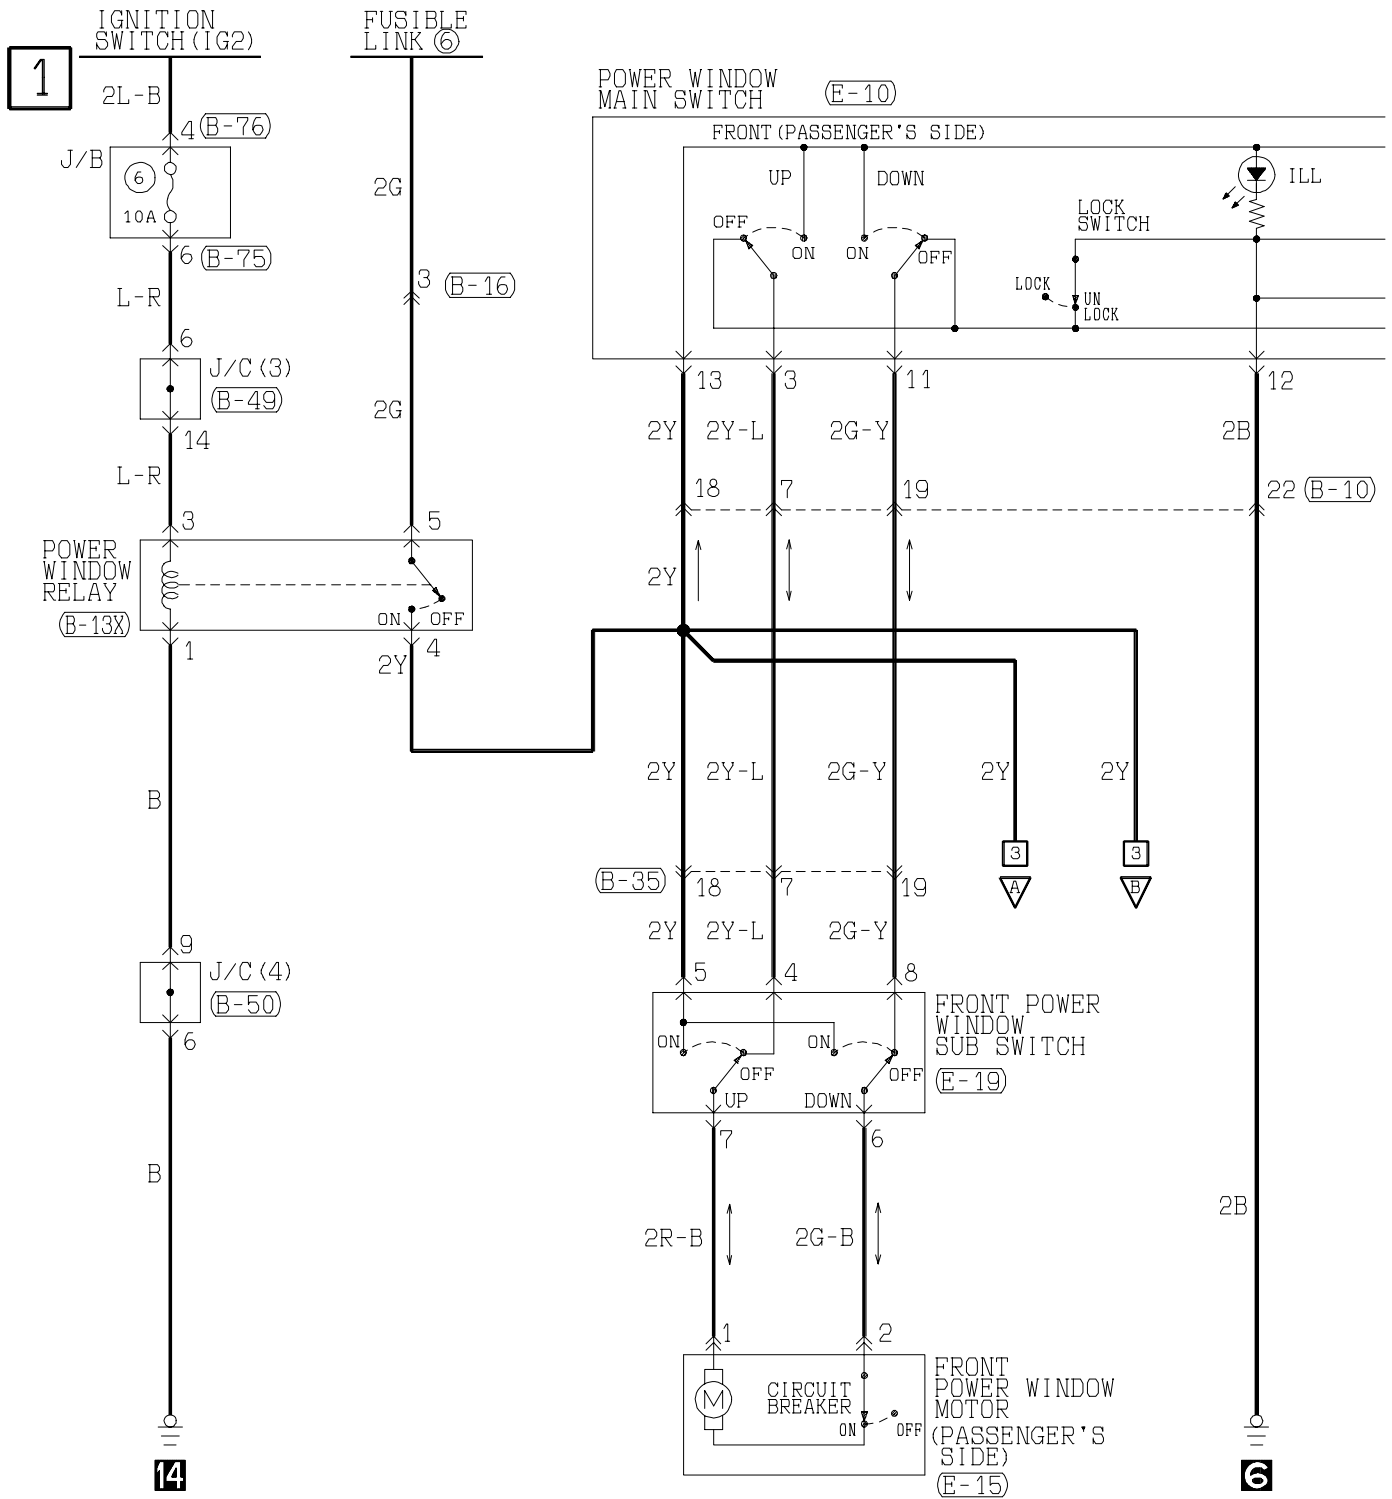

(B-10)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(B-13X)

1	2	3
4		
5		

(B-16)

1	2
3	4
5	6

(B-35)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

(B-49)

1	2	3	4	5	6
7	8	9	10	11	12
13	14				

(B-50)


1	2	3	4	5	6
7	8	9	10	11	12
13	14				

(B-75)

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					


DEFOGGER

1

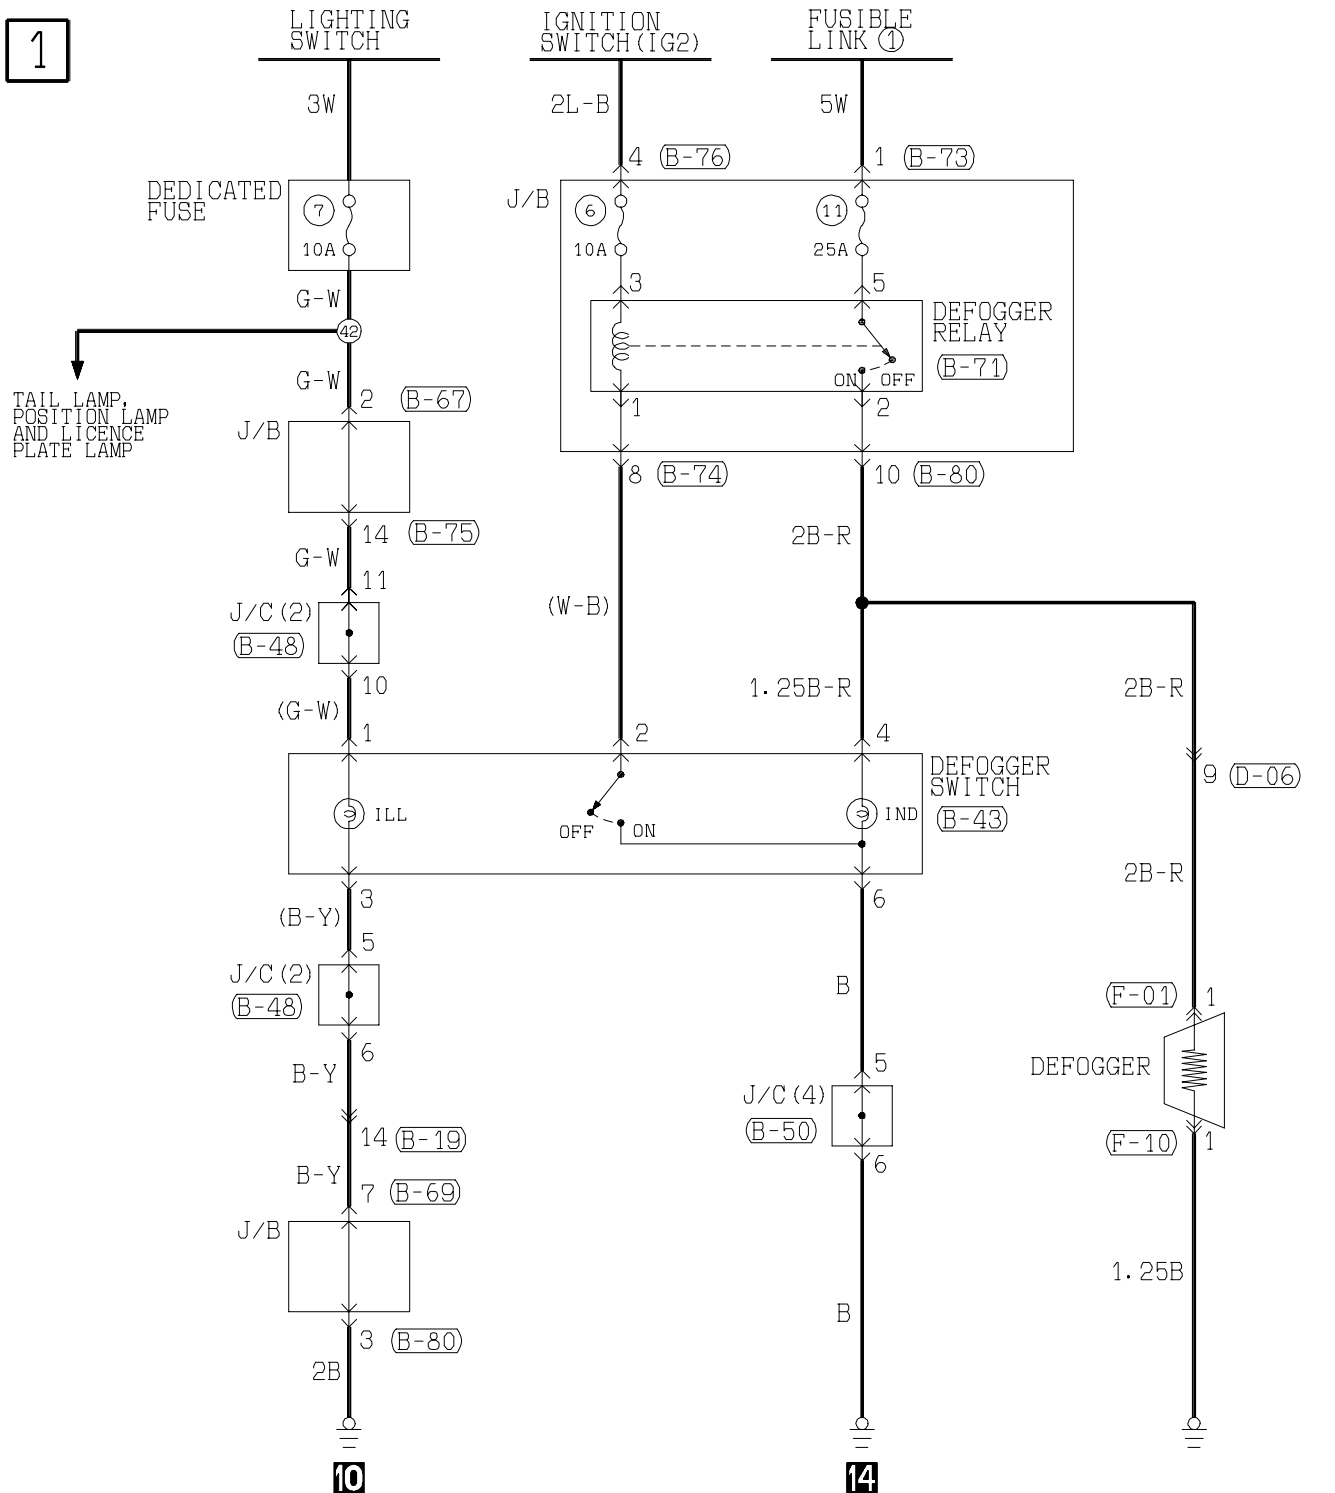

10

14

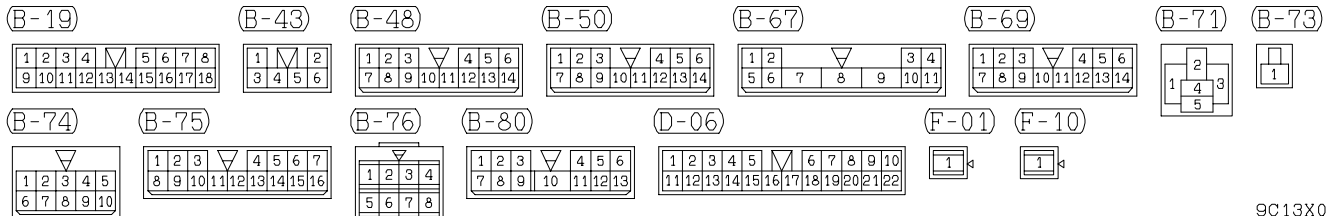

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below

 
 
 
 
 
 
 



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

IMMOBILIZER SYSTEM










1

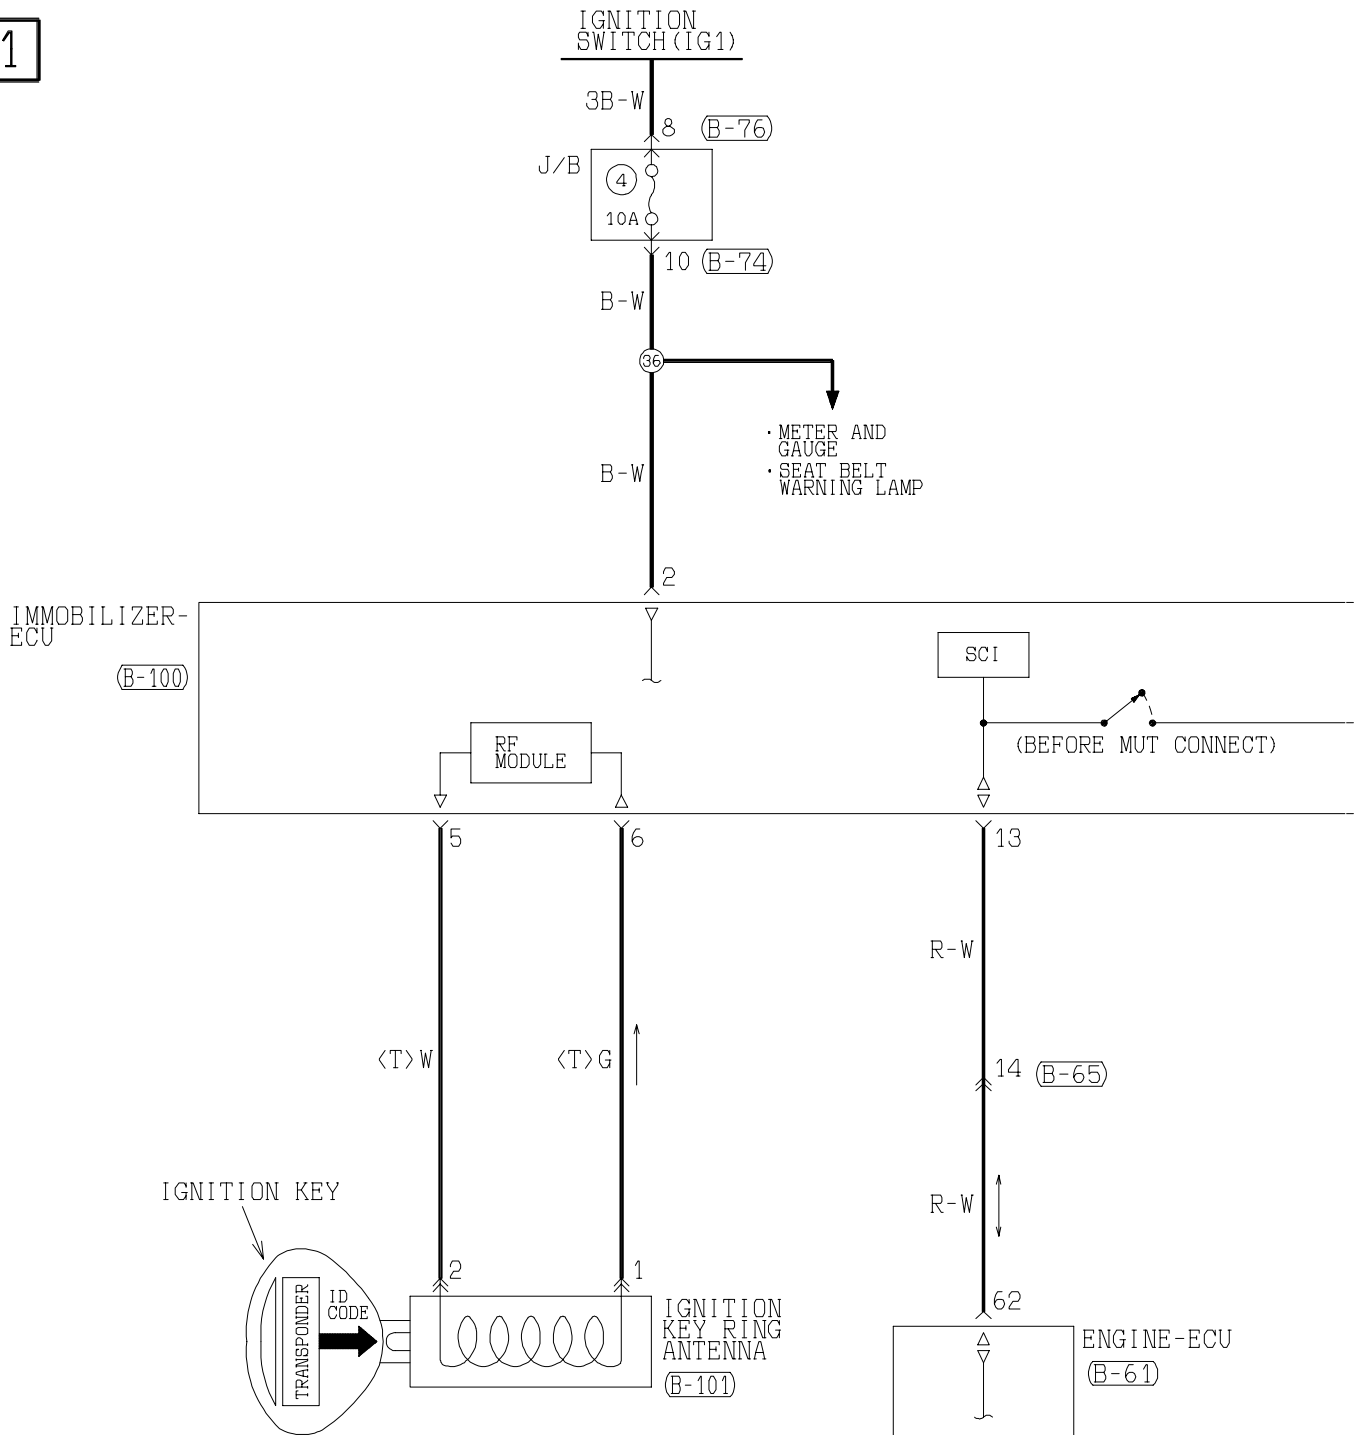


DASH PANEL

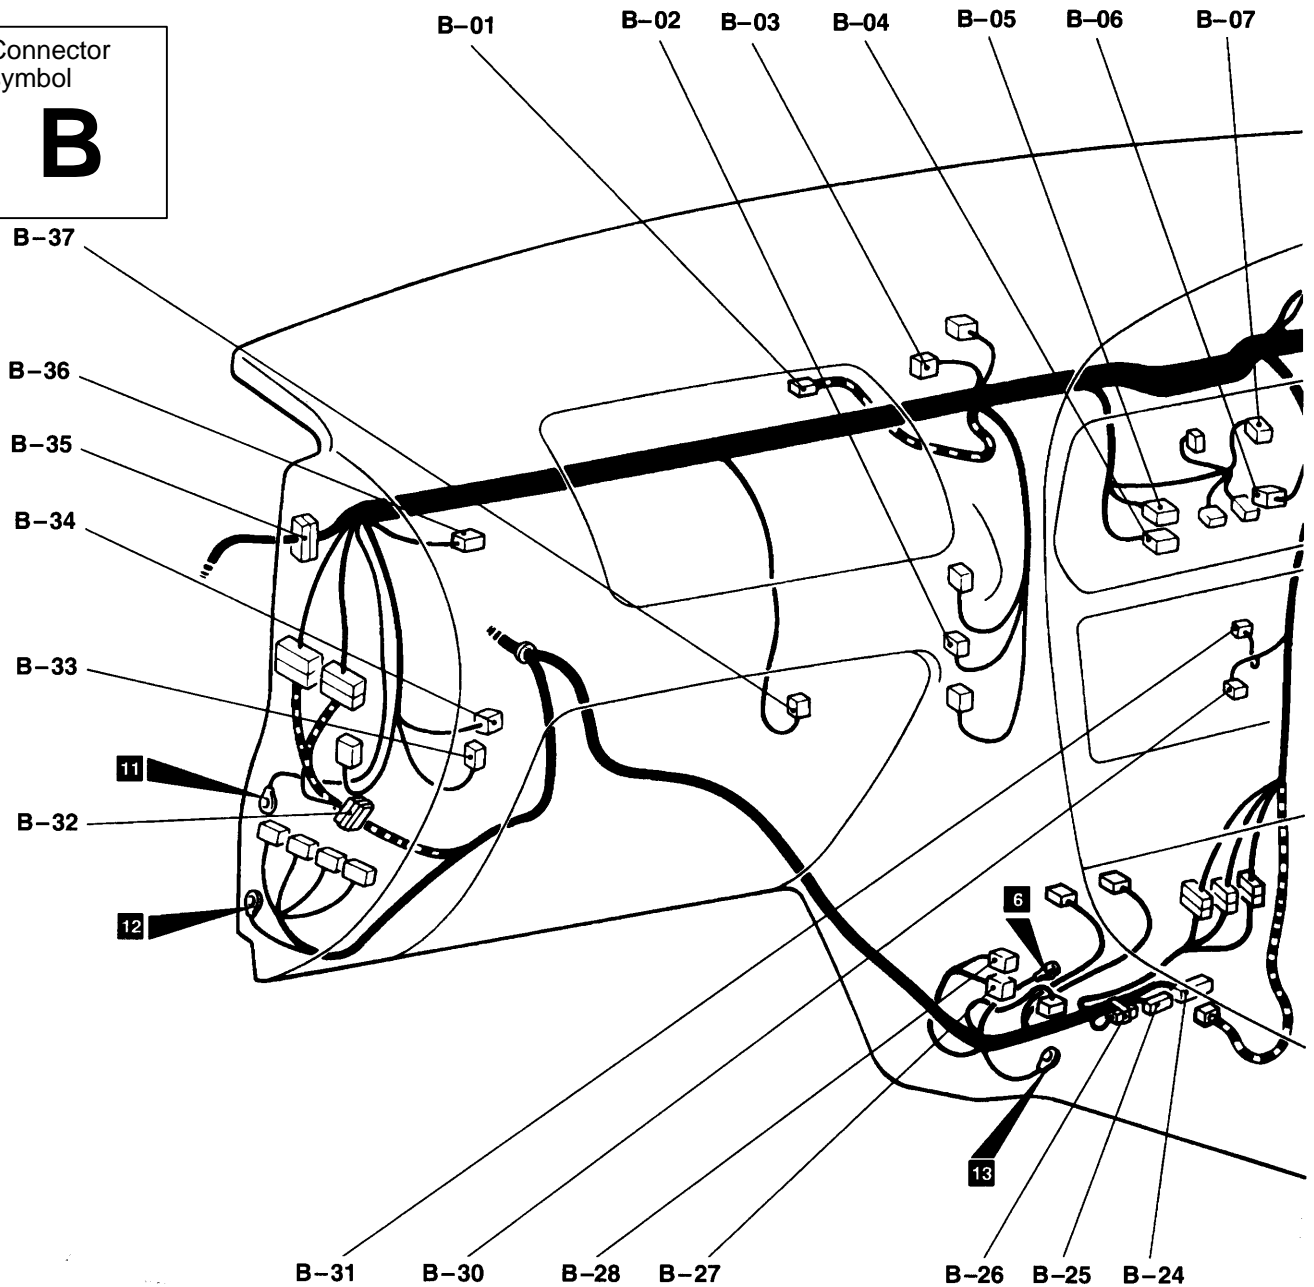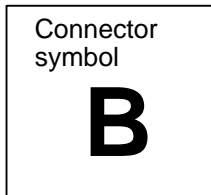

- | | | | |
|-------------|---|-----------|---|
| B-01 (2-R) | Passenger seat air bag module (squib) | B-09 (25) | Meter and gauge |
| B-02 (2) | Heater water temperature sensor <vehicles with fully automatic air conditioner> | B-10 (22) | Body harness and front door harness (driver's side) combination |
| B-03 (2-B) | Air thermo sensor <vehicles with fully automatic air conditioner> | B-11X (8) | Rear intermittent wiper relay |
| B-04 (20-B) | A/C-ECU <vehicles with fully automatic air conditioner> | B-13X (5) | Power window relay |
| B-05 (16-B) | A/C-ECU <vehicles with fully automatic air conditioner> | B-15 (20) | Front harness and body harness combination |
| B-06 (6) | Air outlet change-over damper motor and potentiometer <vehicles with fully automatic air conditioner> | B-16 (6) | Front harness and body harness combination |
| B-07 (8) | Blower switch <vehicles with manual air conditioner> | B-17 (14) | Front harness and body harness combination <ABS> |
| B-08 (25) | Meter and gauge | B-18 (19) | J/C (1) |
| | | B-19 (22) | Body harness and instrument panel harness combination |

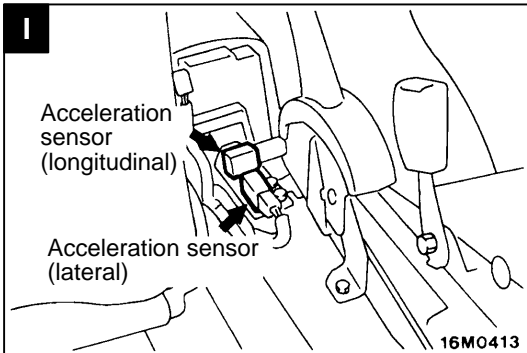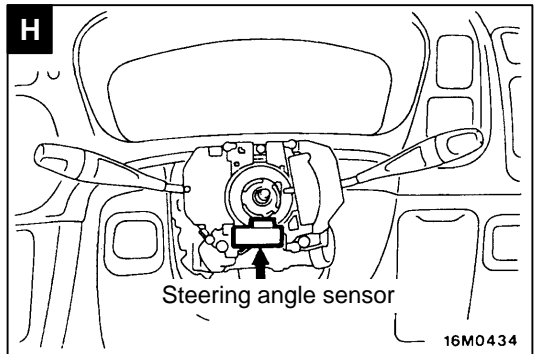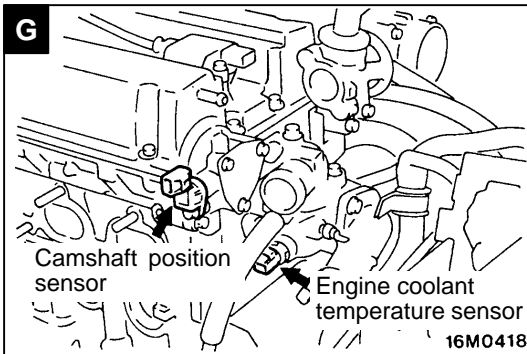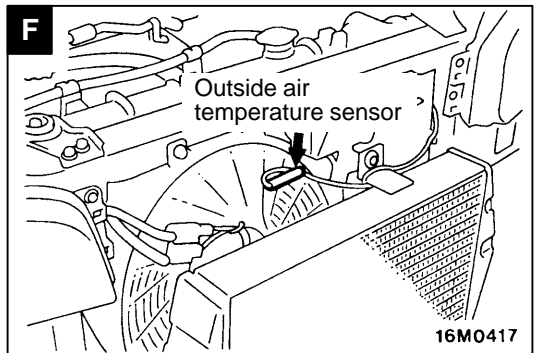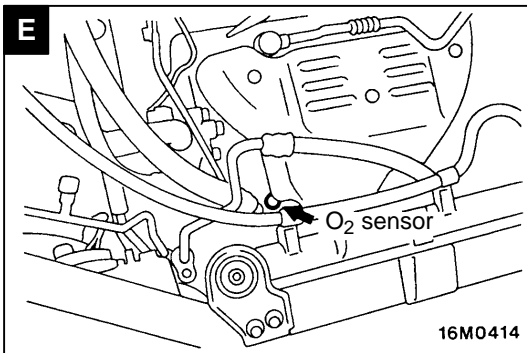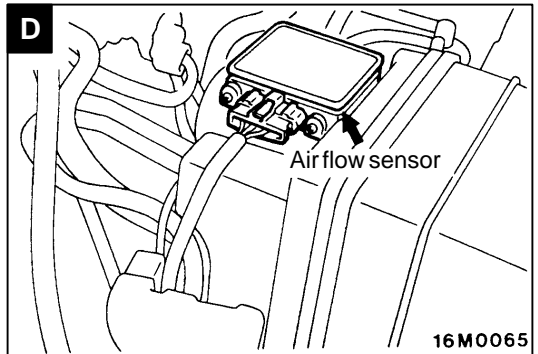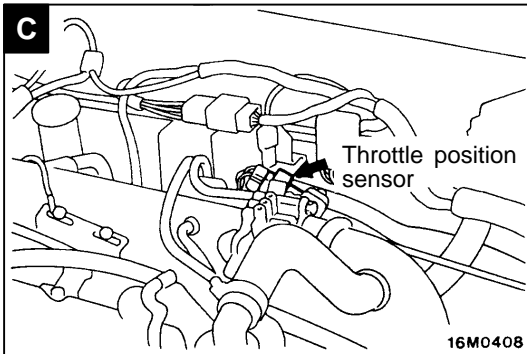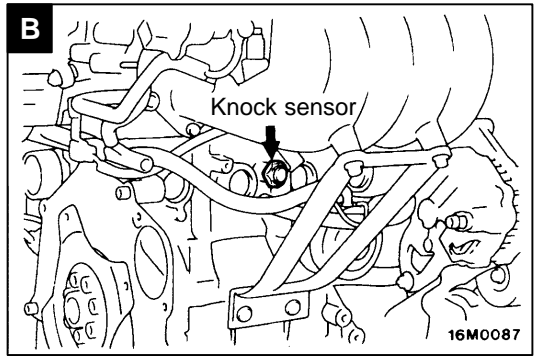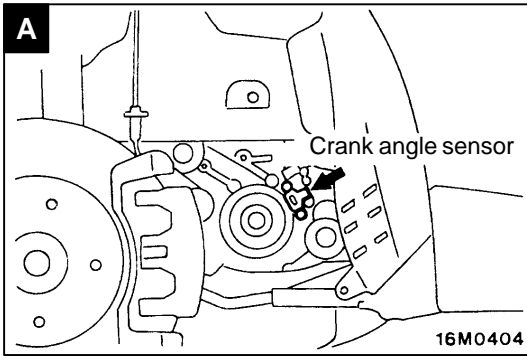

POWER DISTRIBUTION SYSTEM (CONTINUED)

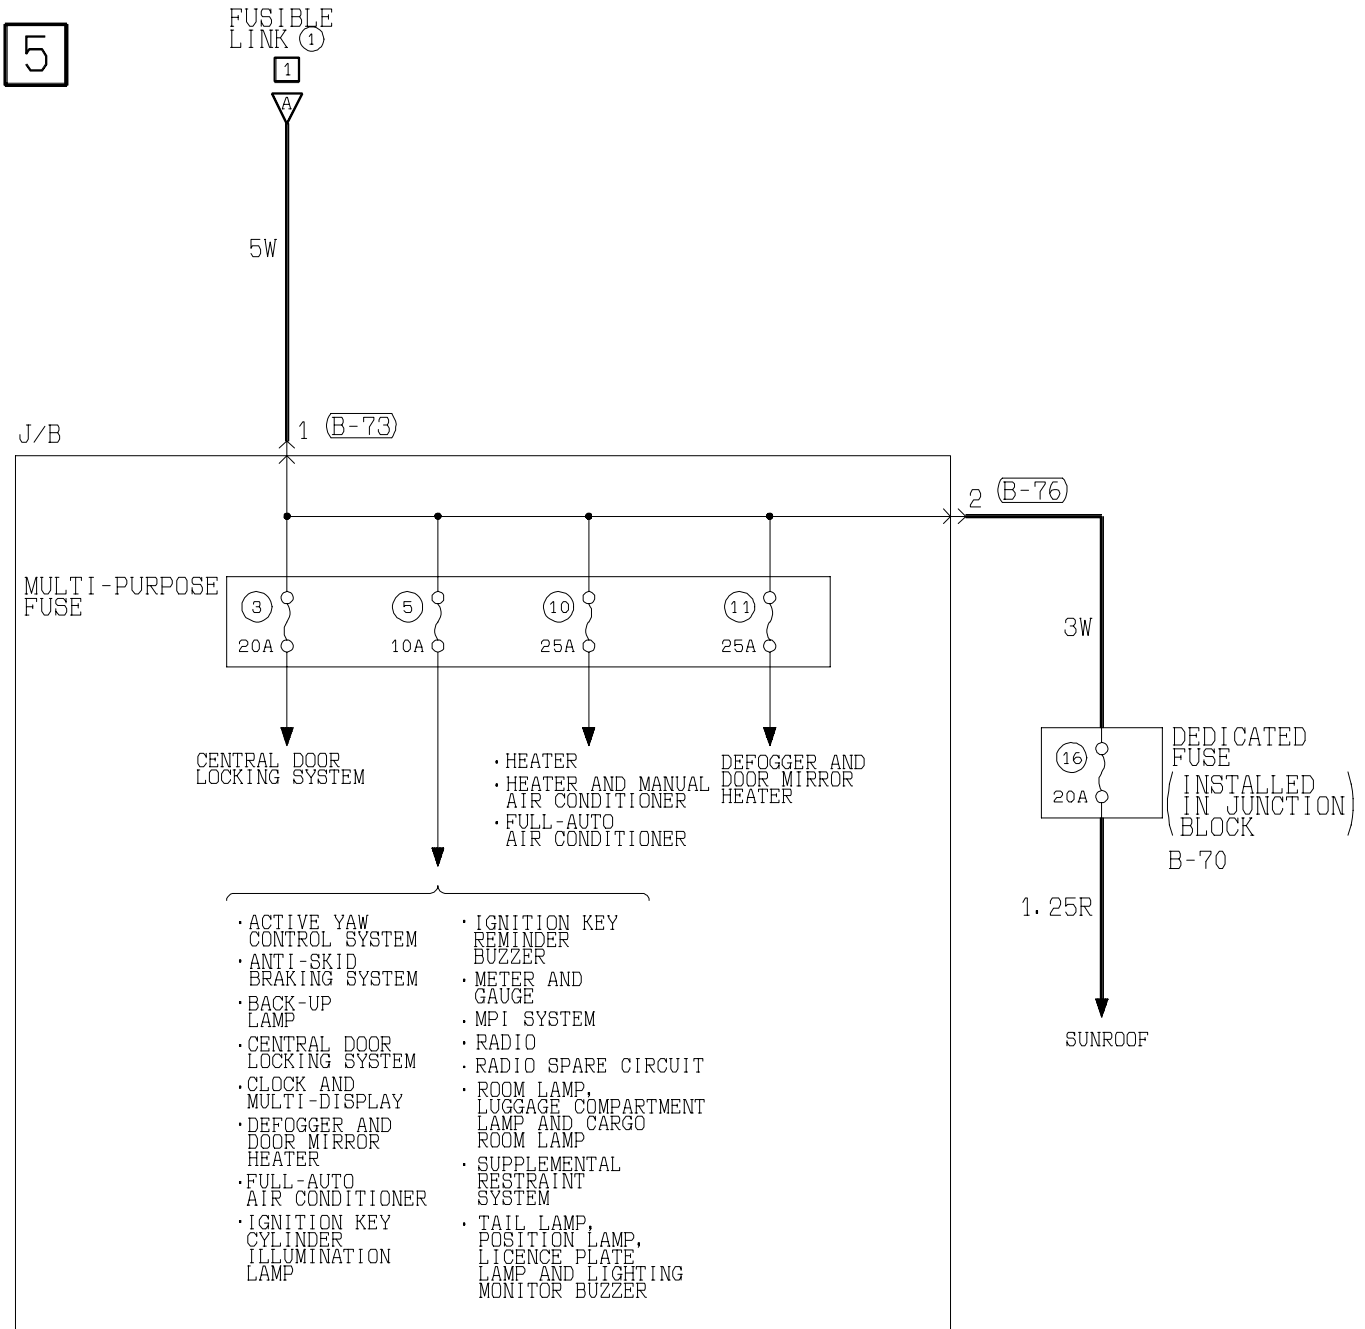

(B-73) (B-76)




Wire colour code


B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
 BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet

COOLING SYSTEM

1

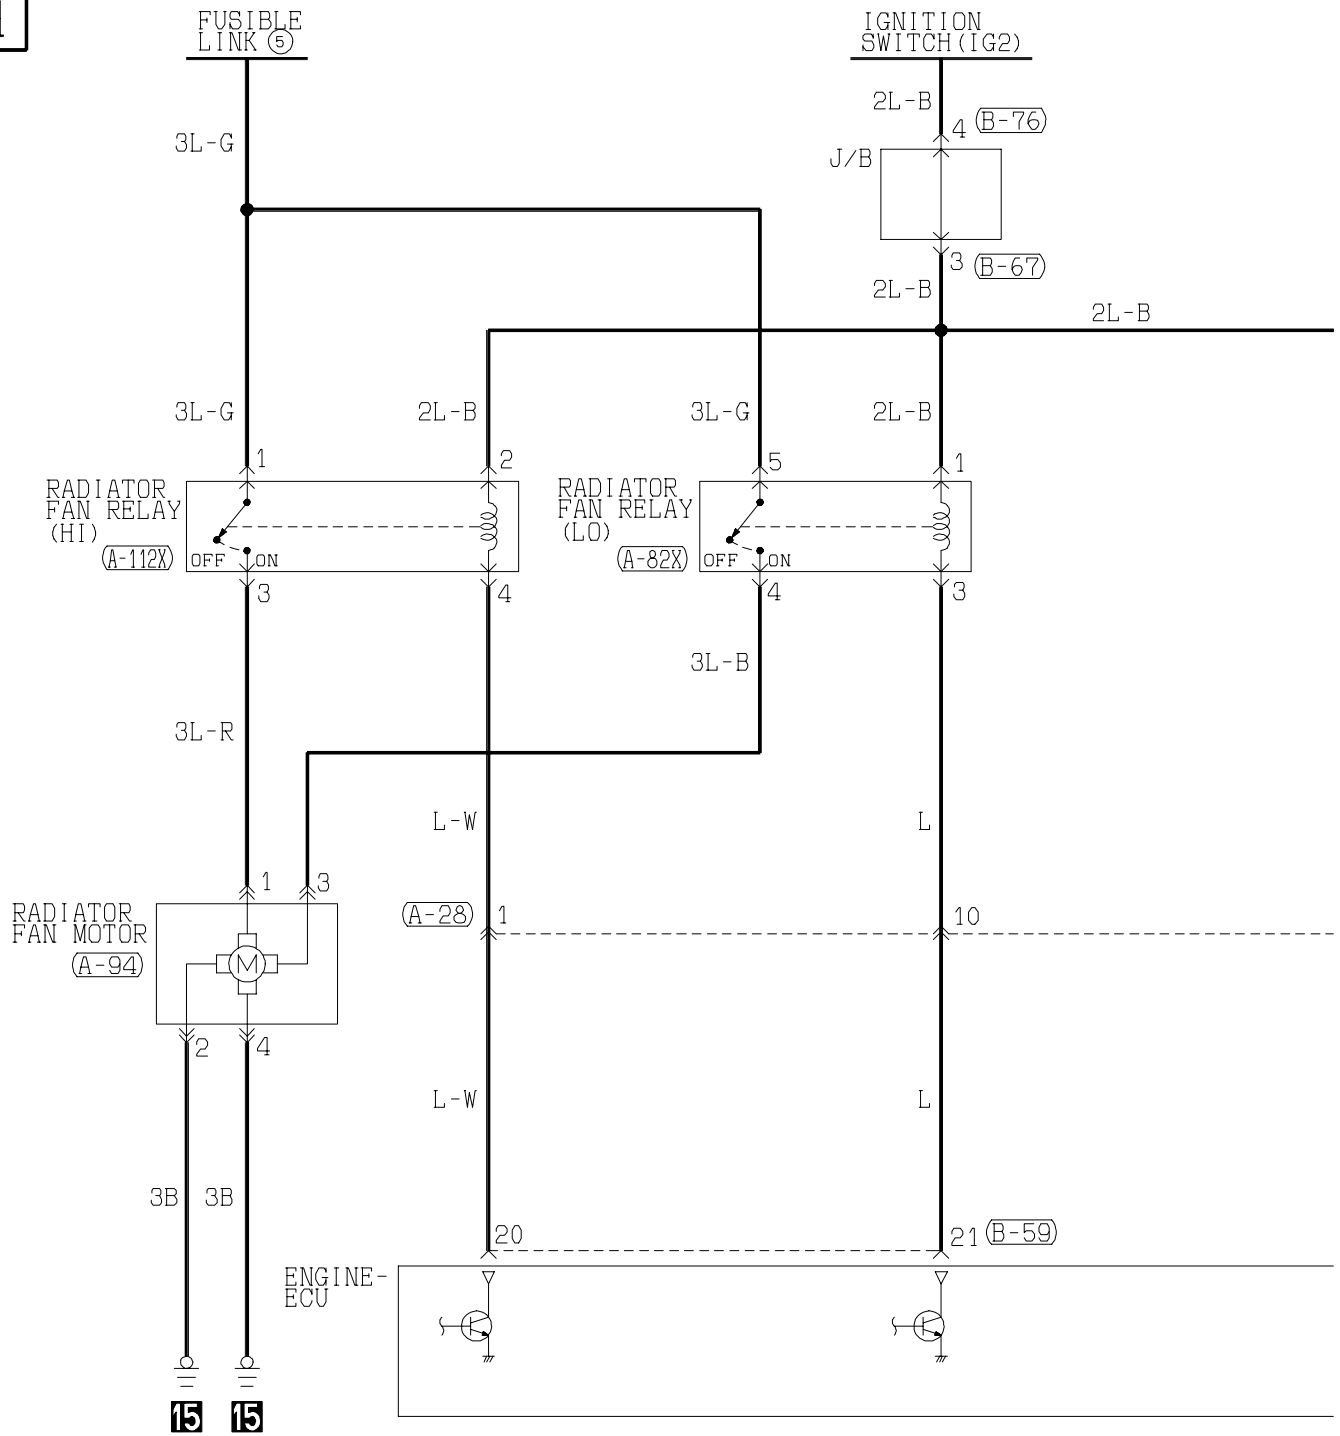

(A-28)

 

(A-82X)



(A-94)



(A-99)



(A-112X)



(A-113X)



(A-114X)



 
(A-128)



(B-59)










(B-60)








CENTRAL DOOR LOCKING SYSTEM <WITHOUT KEYLESS ENTRY SYSTEM>

      1

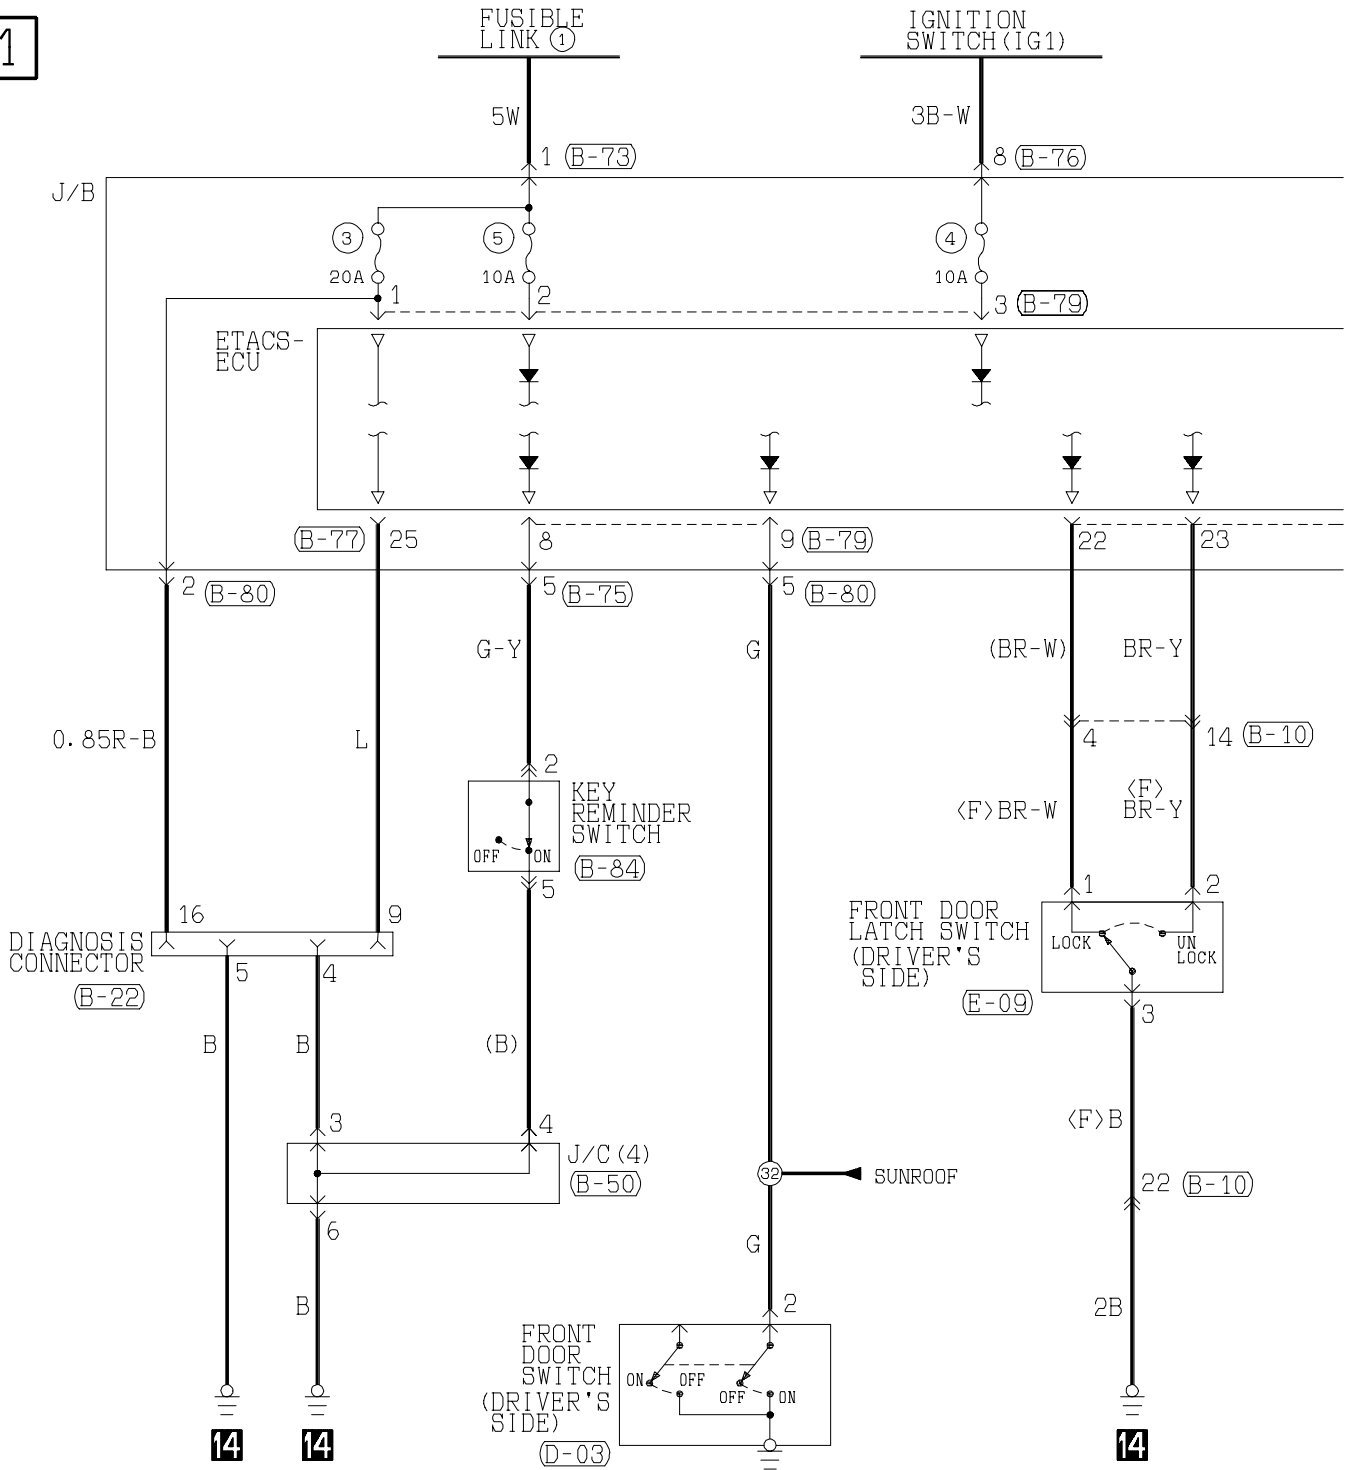

HEATER AND AIR CONDITIONER (CONTINUED)

    5

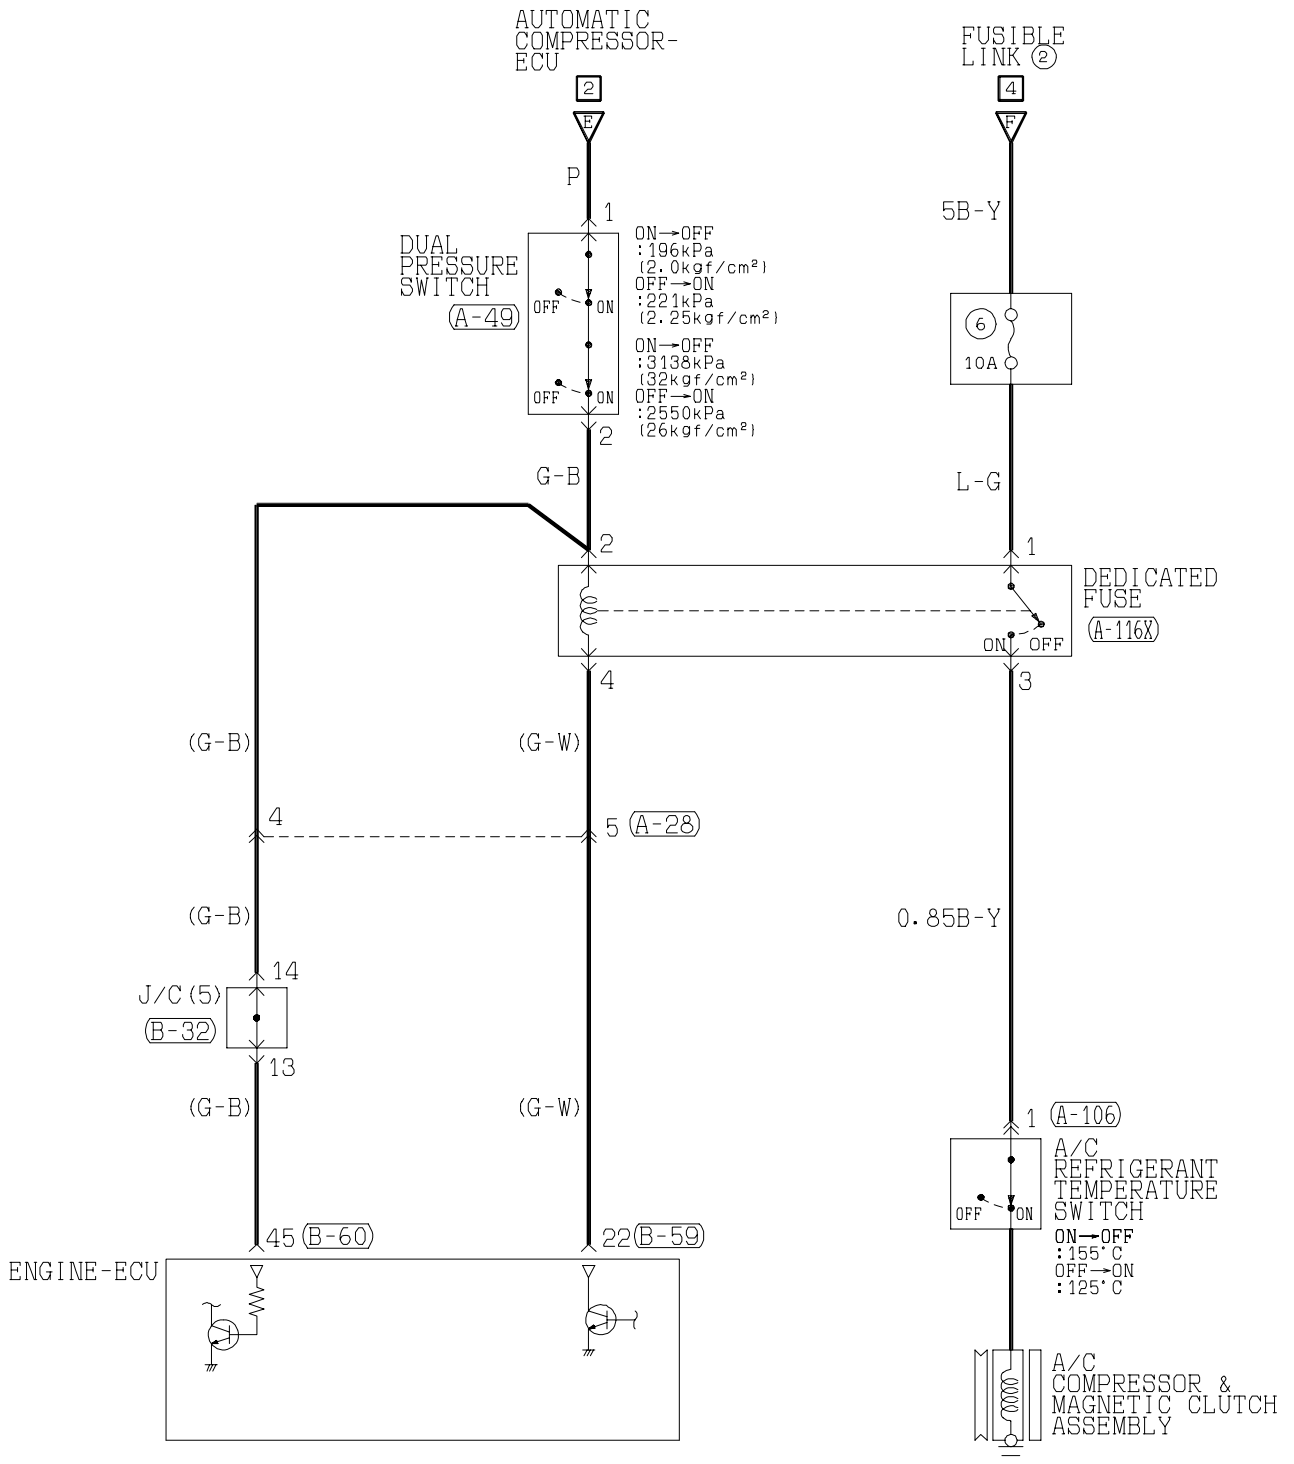


Wire colour code
 B:Black LG:Light green G:Green L:Blue W:White Y:Yellow SB:Sky blue
 BR:Brown O:Orange GR:Gray R:Red P:Pink V:Violet

C-78 CIRCUIT DIAGRAM – Windshield Wiper and Washer <With Intermittent Wiper>

WINDSHIELD WIPER AND WASHER <WITH INTERMITTENT WIPER>

1

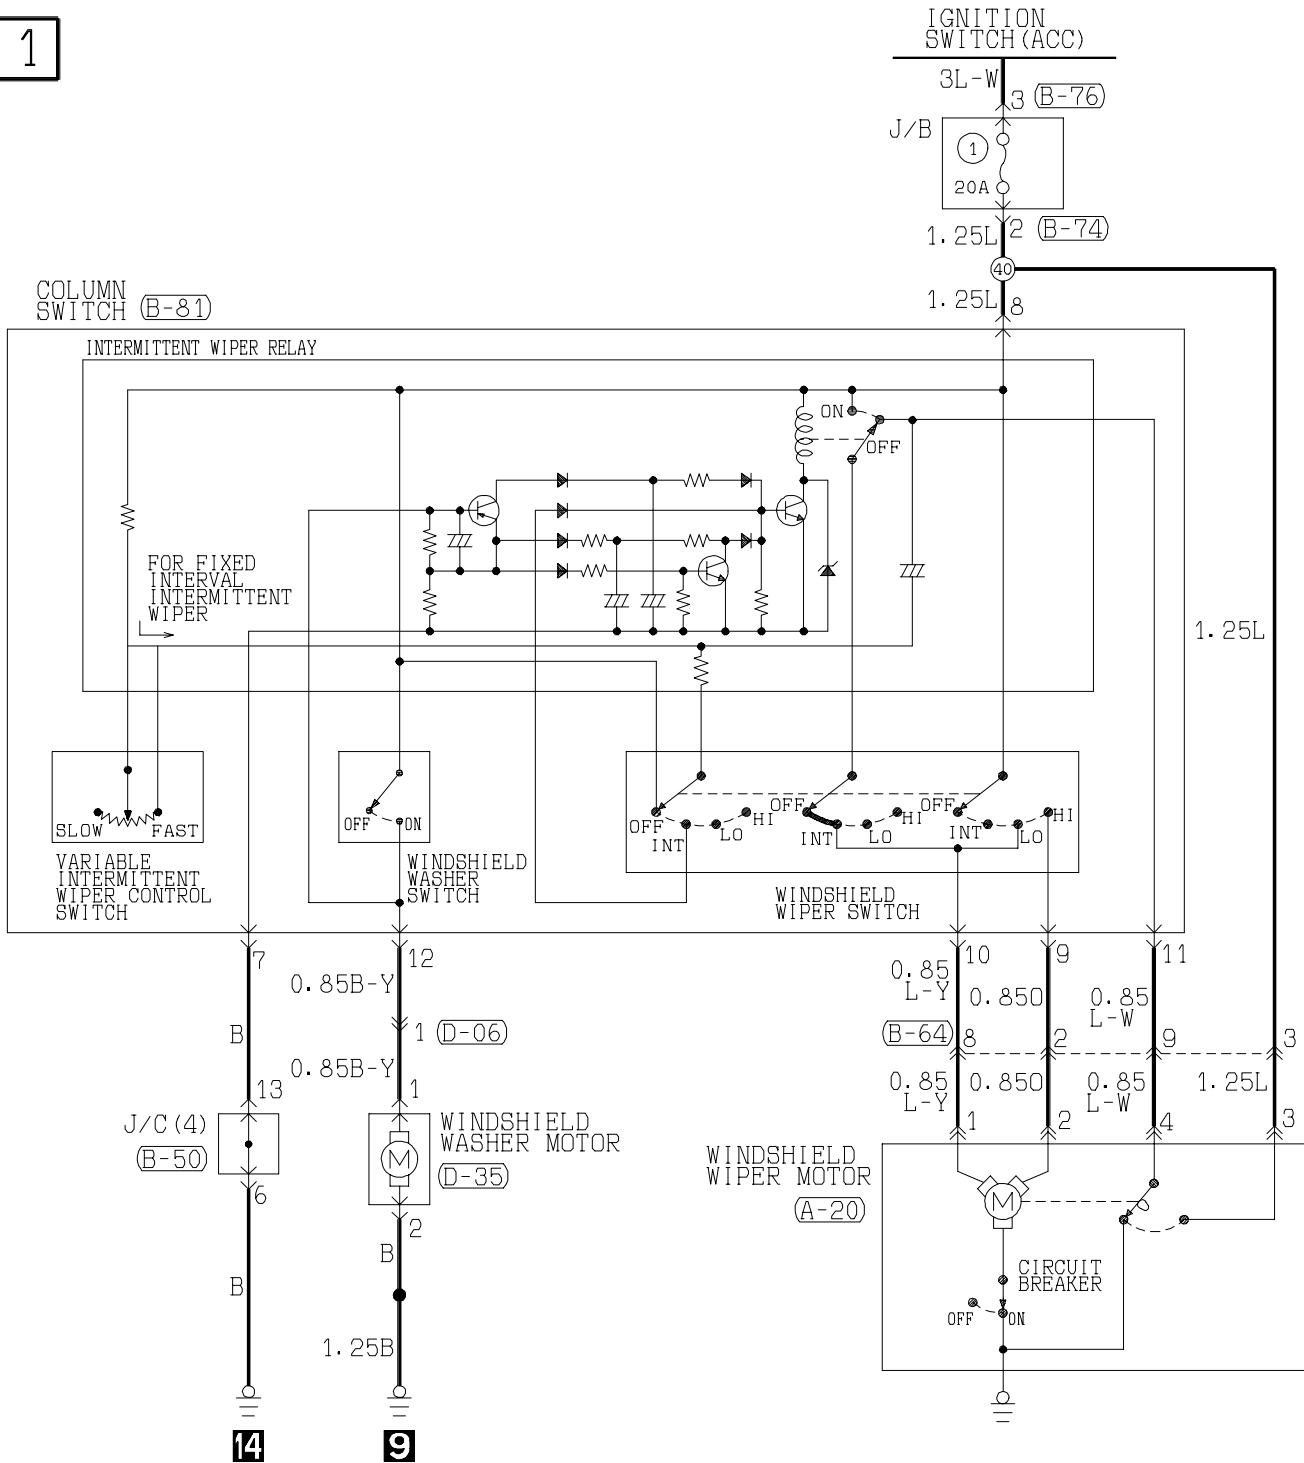

(A-20)

(B-50)

(B-64)

 
 
 
 
 
(B-74)

(B-76)

(B-81)

(D-06)


(D-35)



Wire colour code

B :Black LG:Light green G :Green L :Blue W :White Y :Yellow SB:Sky blue
 BR:Brown O :Orange GR:Gray R :Red P :Pink V :Violet

RADIO <4 SPEAKER, 6 SPEAKER> (CONTINUED)

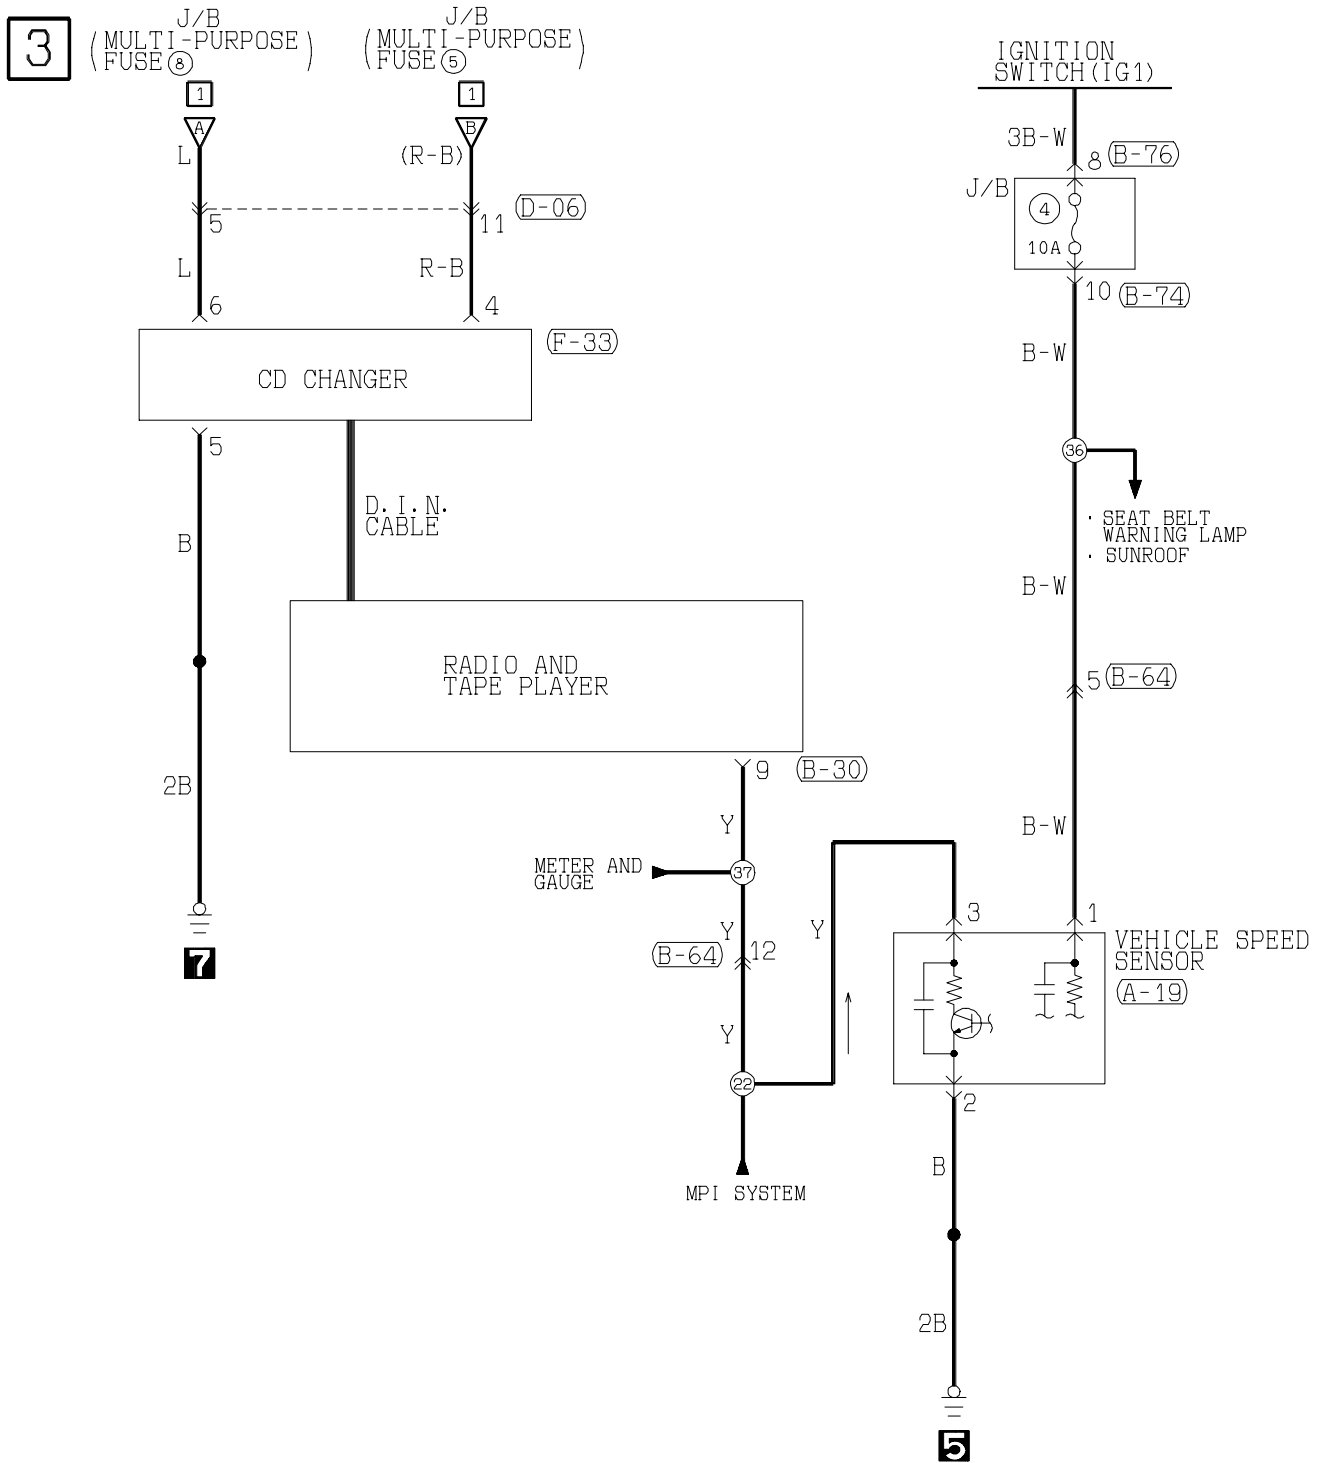

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL