

Table of content

Atlet Original Instruction Handbook	3
Truck modification.....	5
Environmental considerations.....	6
Atlet AB is an environmentally aware company	6
Supervisor's Responsibility	7
Truck Driver	8
Authorization to drive a truck	8
Driver requirements.....	8
Maintenance of the truck.....	8
Machine plate.....	9
Driving Instructions	11
Atlet Low Picker trucks, (PP-TEMPO)	11
Atlet Powered trucks (PLP, TS, PLE, PLL, PS, PSH, PSD, PSL).....	15
Atlet Ride-on stacker (A-Ergo).....	21
Atlet Sit-on stacker (X-Ergo).....	27
Atlet Order Picker trucks (OPM, OPH, OPC, OPS)	35
Atlet Reach trucks (UNS, UHS, UHH, UFS, USS)	39
Atlet Narrow aisle trucks (URF)	39
Atlet Truck Computer ATC	51
UNS, UHS, UHH, UFS, USS, URF.....	51
Atlet Truck Computer ATC	65
X-Ergo, PLE, PLL, PLP, PS, PP*, PSD, PSL.....	65
General when Loading and Unloading.....	74
General when Stacking and Picking.....	75
Service Instructions	76
Daily maintenance (before each shift)	76
Daily Service (after each shift).....	77
Weekly service (30 operating hours)	78
Continuous Maintenance	79
B Service	79
A-Service.....	80
Safety Regulations	81

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Driving Instructions


Atlet Low Picker trucks, (PP-TEMPO)

PP-TEMPO with tiller arm, Mk2

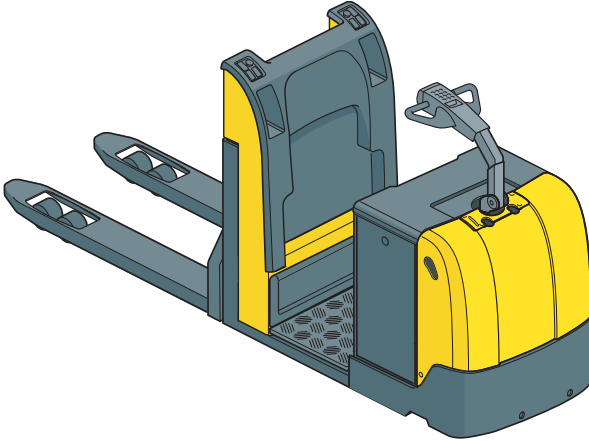



1062

1. Connect the battery plug and start the truck according to the description of the truck computer. See section “Atlet truck computer ATC”. Release the parking brake by moving the control lever backwards -downwards (but not to the bottom position).
2. The truck begins to move when the lever on the operating handle is pushed forwards/backwards. The further the speed controller is moved the faster the truck will move.
3. There are two ways of braking the truck:
 - Brake the truck by reversing, i.e. changing the direction of travel.
NOTE: *The further the speed controller is moved the greater the braking capacity.*
 - Brake by moving the lever back to neutral position and moving the operating handle up or down to the end position.
NOTE: *The brakes function whether the lever is released or not.*
4. If the main power needs to be disconnected in an emergency: Pull out the battery plug or push the emergency stop button if the truck is fitted with one. The emergency stop buttons are on the left and right hand sides of the driver cab facing the forks.

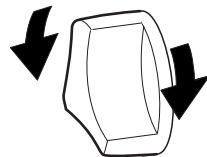

1057

Atlet Ride-on stacker (A-Ergo)

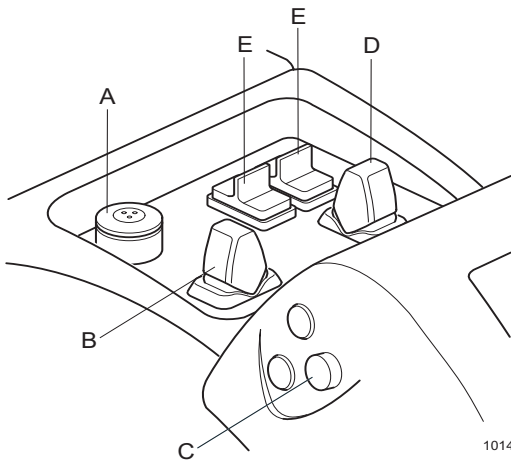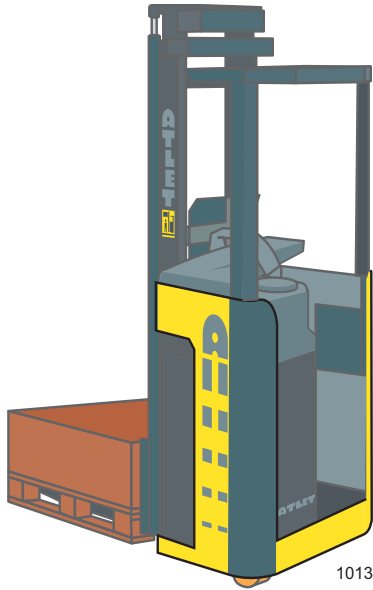


- A. Emergency stop
- B. Speed controller
- C. Signal button

- D. Control for fork lift
- E. Control for telescopic forks, straddle lift and/or side stabilisers (option)

Battery maintenance

1. Remove the battery plug.
2. Lift up the battery lock.
3. Roll out the battery. Note that a safety stop is activated when the battery has been pulled halfway out.
4. Carry out battery maintenance, see chapter “Service instructions”.
5. Roll in the battery after completed service.
6. Lock the battery in place with the battery lock and replace the battery plug.

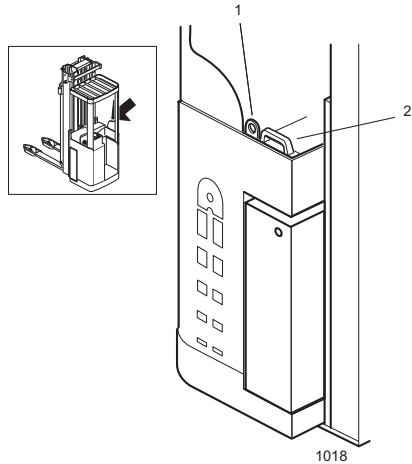

NOTE: *The battery is locked when the handle (1) is pushed to the lowermost position and the battery plug (2) is pushed down*

Driving

1. Enter the driver cab and start the truck according to the description of the truck computer. See section “Atlet truck computer ATC”. If the truck is equipped with electric lock (option): Turn the power lock to “ON”.

NOTE: *A security function prevents the truck from starting if any of the levers are activated when attempting to start the truck.*

2. Grip the wheel spinner with your left hand, or keep your hand on the mini steering wheel according to the instructions under item 3. Keep your right hand on the arm support, your left foot on the foot support (furthest to the left) so the left foot pedal is depressed, and your right foot on the brake (in the middle).
3. If the truck is equipped with a mini steering wheel, place the entire palm of your left hand upon the small knob on the mini steering wheel, resting your arm on the arm support. The arm support is adjusted according to the movements you make. To adjust the arm support, see “Adjusting the driver’s seat”. The truck may be equipped with a midi

Adjusting the driver's seat

The driver's seat is equipped with adjustable, gas damper which may be adjusted according to body weight. The lumbar support can be adjusted in three positions. The arm support can be rotated to give a comfortable working position and lifted to assist entering and alighting from the driver compartment.

Adjusting Tergo seat

UNS/UHS/UHH-Tergo is equipped with a manually tilting seat with head rest which is more comfortable when performing high stacking, it also minimises the risks of strains.

A. Adjusting the damper: The dampening is adjusted using the knob on the seat frame behind the seat back.


B. Adjusting the back of the chair: Using the lever to the right of the back of the chair, the back may be set in three different positions.

C. Adjusting the arm support: By using the screw on the inside of the arm support, it may be set to a comfortable working position.


D. Adjusting the chair forward/backward: Using the loop at the front under the chair, the chair may be moved further forward or backward.

E. Adjusting the height of the front of the seat cushion: The front of the seat cushion may be adjusted to three different heights. The cushion is released by grasping the front edge and pulling it forwards. When the required height is obtained, push the cushion back in its new position.

F. Tilting the manual Tergo seat: Tilt the seat by leaning backwards. The seat cushion slides forwards at the same time as the seat tilts 15°. When the seat is raised it returns to the original position.

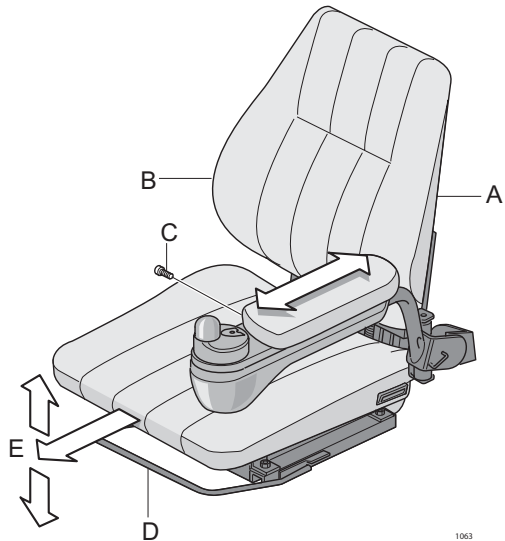


1063

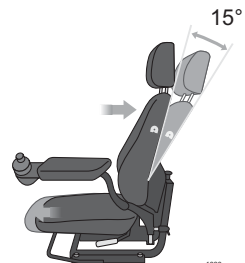

1030

Atlet Truck Computer ATC

UNS, UHS, UHH, UFS, USS, URF

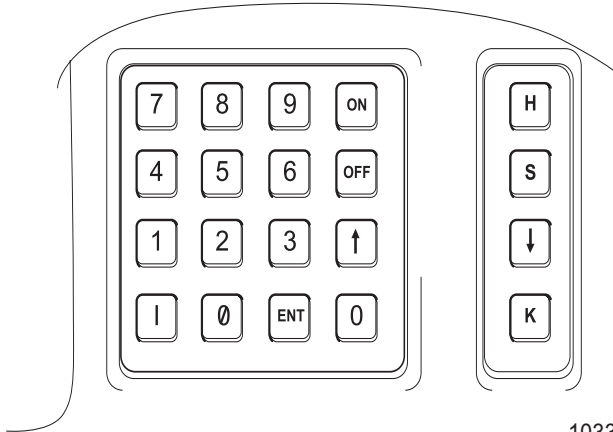

1033

General

Some of the Atlet trucks are equipped with a truck computer. In these cases, information is transmitted to the truck via the keyboard and is displayed on a panel. The truck is not equipped with a manual start key but is started and stopped by pressing buttons on the keyboard. The driver will need a user number and a password to start the truck. The truck computer consists of a keyboard, a display panel and a control unit.

Handling

To select collection, press “O” or for deposit press “I”.

Select Level:
1

1111

The display reads “Select level”. Press the number for the required level.

001:0261 (0202)
1

1112

Operate the lifting control until the forks stop. The display shows the current lift height. Now let the control return to the neutral position.

A lift can be cancelled, to then be continued, without losing the selection.

With collection, the forks first go passed the level and then lower to the right level.

001:0261 (0260)
Level reached !!

1113

When the control is in the neutral position and the level is reached the display shows “Level reached!!”.

Error messages

BAD level !!
100% 305h

1114

If the forks are above the selected level the error message “BAD level!” is shown and the selection is not approved.

Lower to floor !
100% 305h

1115

If the forks have not activated the resetting -sensor, after logging on, the display shows “Lower to floor!” and the height preset cannot be activated.


Cancel

001:0261 (0202)
Level CANCELLED

1116


To cancel/reset a selection, move the lifting lever to lowering for a moment. The display shows “Level CANCELLED”.

Menus

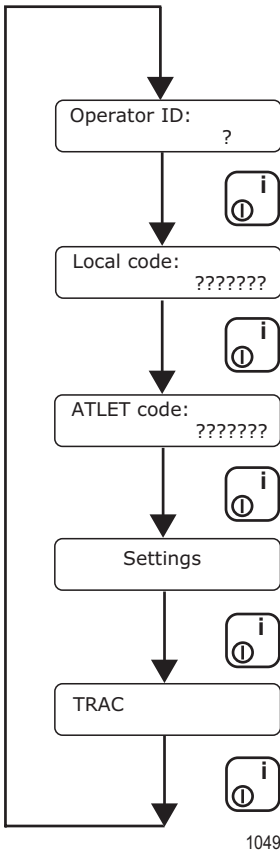

1049

ATC has a number of functions that are available in a menu system. There are five basic menus with several sub-menus. Use the

 button to navigate between the basic menus. Certain basic menus require passwords to make them accessible.

- Operator: Menu to start the truck.
- Local: For use by local warehouse management.
- Atlet: For use by authorised service-personnel.
- Settings: Under “settings” there is an option to set the language to be used on the display. ATC supports Swedish, English, German, and French. One more additional languages may be installed using a special software.
- Trac: For use by authorised service-personnel.

Safety Regulations

The driver has the authority and the responsibility to refuse to drive the truck in the following cases:

- If the truck constitutes a clear safety hazard.
- If the load constitutes a clear safety hazard.
- If the truck has been repaired, changed or adjusted without the corrections being approved by the supervisor.
- If the truck driver's physical or psychological condition is such that he/she can be a safety hazard.

The driver has the authority to:

- Prevent unauthorized persons from using the truck for which he/she is responsible. An unauthorized person is someone who has not received permission from the supervisor and someone who lacks training.
- Prevent anyone from walking or standing under a raised lift, whether this is empty or full.

WARNING! *Take great care in the machinery compartment, for hot surfaces etc.*

Climbing the truck

It is not allowed to climb on a truck that has not been fitted with a footstep or a driver lifting platform. Be careful when entering and disembarking. Use the handle if one is installed and take into account the height difference between the floor and truck.

General traffic regulations

Follow the general traffic regulations of the Road Traffic Ordinance and the local traffic directives for public areas (and where these are applicable, also within private grounds, industrial zones etc.).

Driving in public areas

The truck must not be driven on public roads outside a private area.

Distance between vehicles

Remember that the vehicle in front of you may stop suddenly. Keep a reasonable distance.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL