




Bobcat®

Operation & Maintenance Manual Bob-Tach Backhoe

S/N 074600101 & Above

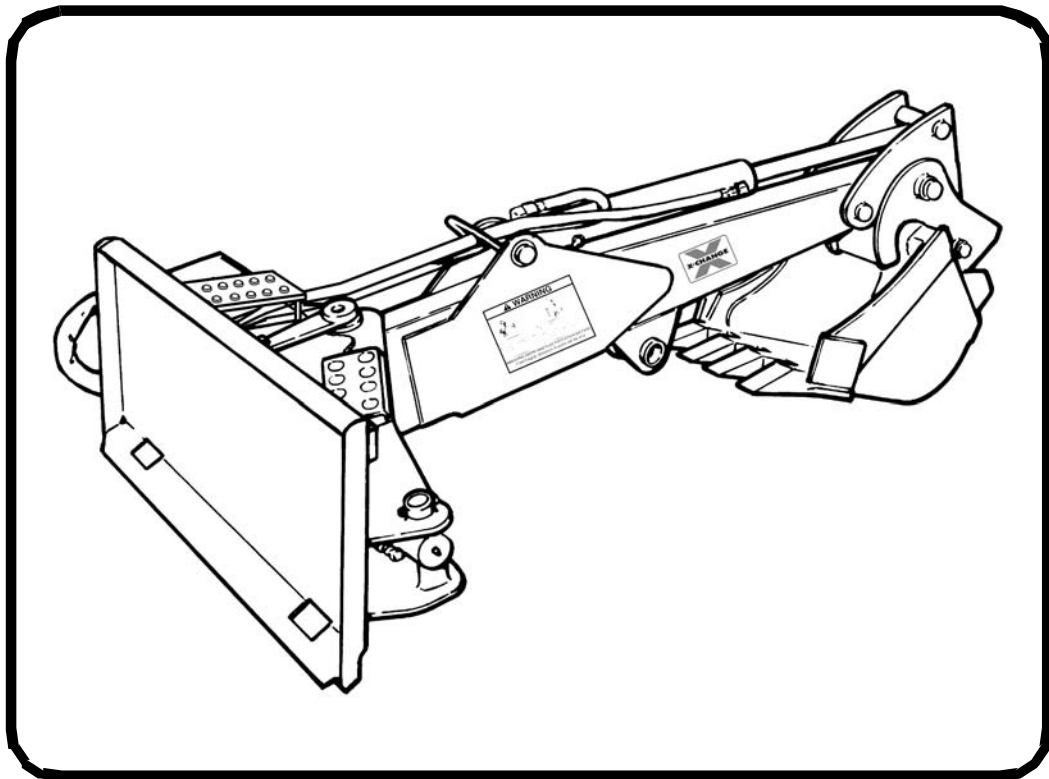

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL



Bobcat®

OPERATING PROCEDURE WITH LOADERS

Approved Loader Models & Requirements

Figure OI-9

LOADER MODEL	BOB-TACH BACKHOE
S150	X
S160	X
S175	X
S185	X
S205	X
T180	X
T190	X

The chart [Figure OI-9] lists the loader models approved for use with the Bob-Tach backhoe.


The warranty is void if this attachment is used on a non-approved carrier. See your Bobcat dealer for an updated list of approved carriers.



Never use attachments or buckets which are not approved by the Bobcat Company. Attachments and buckets for safe loads of specified densities are approved for each model. Unapproved attachments and buckets can cause injury or death.

W-2662-0108

Figure OI-10

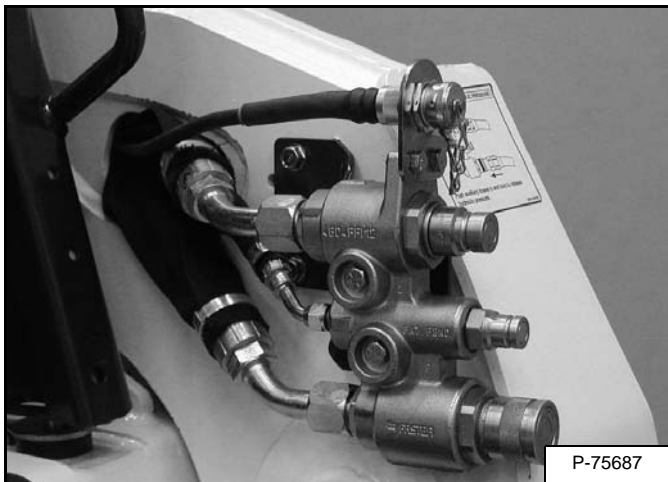

The loader must be equipped with the electrical attachment control kit and front auxiliary hydraulics [Figure OI-10] for proper operation of the Bob-Tach backhoe. See your Bobcat dealer for available kits.

OPERATING PROCEDURE WITH LOADERS (CONT'D)

Operation With The Loader (Con'td)


Digging With The Bob-Tach Backhoe (Cont'd)

Figure OI-34



While raising loader arms, tilt Bob-Tach forward until the teeth of the bucket come in contact with the ground [Figure OI-34].

Figure OI-35

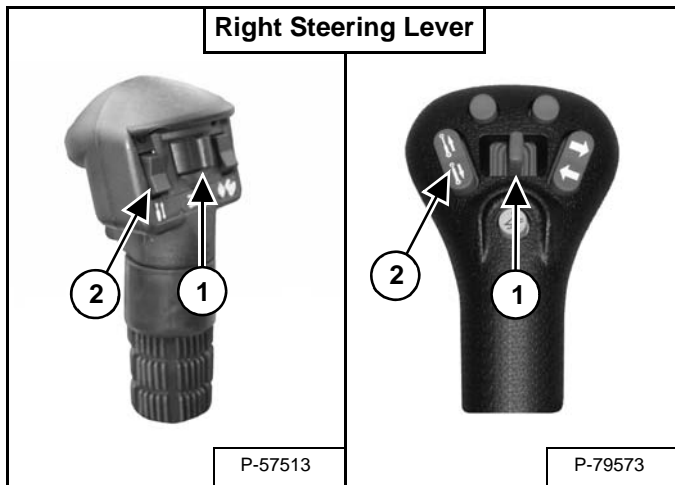

Move the center switch (Item 1) [Figure OI-35] on the right steering lever to the right, to open the bucket [Figure OI-34].

NOTE: When using a 14-pin harness, switch (Item 2) [Figure OI-35] is used to open and close the bucket.

Figure OI-36



With the bucket is in position, move the center switch (Item 1) [Figure OI-35] on the right steering lever to the left, to close the bucket [Figure OI-36].

While closing the bucket, tilt the Bob-Tach forward until the desired depth is reached.

Pull Bob-Tach backhoe towards the loader until the bucket is full.

Close the bucket all the way.

Figure OI-37



While lifting loader arms, tilt Bob-Tach back until Bob-Tach backhoe is at the height needed [Figure OI-37] to swing to one side or the other.

BUCKET

Removal And Installation

! WARNING

AVOID INJURY OR DEATH

- Personnel must keep at least 10 feet (3 m) away from the machine and attachment when operating.
- Never leave operator seat when the engine is running.

W-2700-0108

With the bucket closed, lower the Bob-Tach backhoe to the ground.

Stop the engine, engage the parking brake and exit the machine. (See Entering And Exiting The Loader on page OI-6.)

! WARNING


Before you leave the operator's position:

- Lower the lift arm(s) fully.
- Stop the engine and engage the parking brake.
- Move all pedals, handles, joysticks, and other controls until they are LOCKED or in the NEUTRAL position.

SEE THE MACHINE OPERATION & MAINTENANCE MANUAL FOR MORE INFORMATION.

W-2500-0404

Figure PM-6

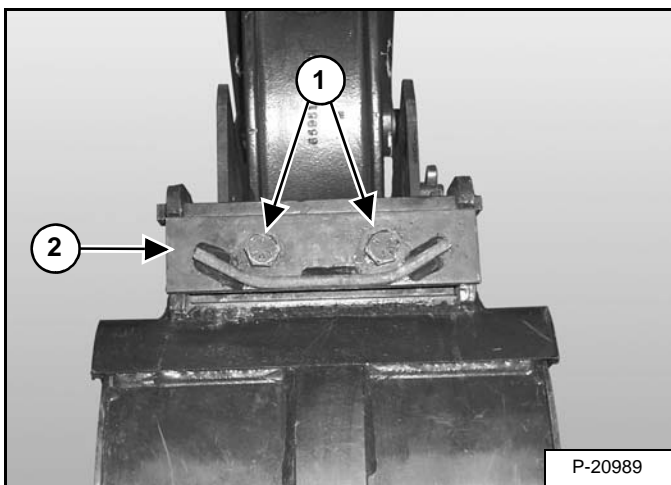


Remove the bolts (Item 1) and mounting plate (Item 2) [Figure PM-6].

Enter the machine.

Fasten seat belt, lower the seat bar, start the engine and release the parking brake.

Figure PM-7

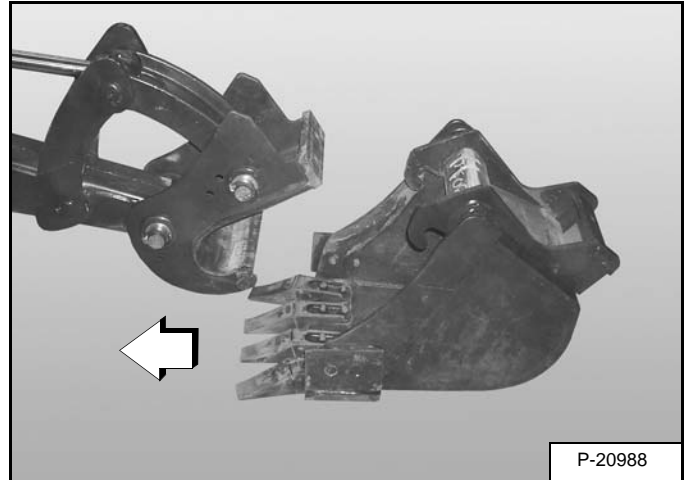

Raise the lift arms and tilt Bob-Tach forward enough to release the bucket from the boom [Figure PM-7].

Move the center switch on the right hand control lever to the right, tilting the quick change mount away from bucket.

After the bucket is released, back loader away from the bucket [Figure PM-7].

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL