



 
# Bobcat®

---

## Operation & Maintenance Manual Sod Layer

---

(Sod Layer) S/N 679100101 & Above

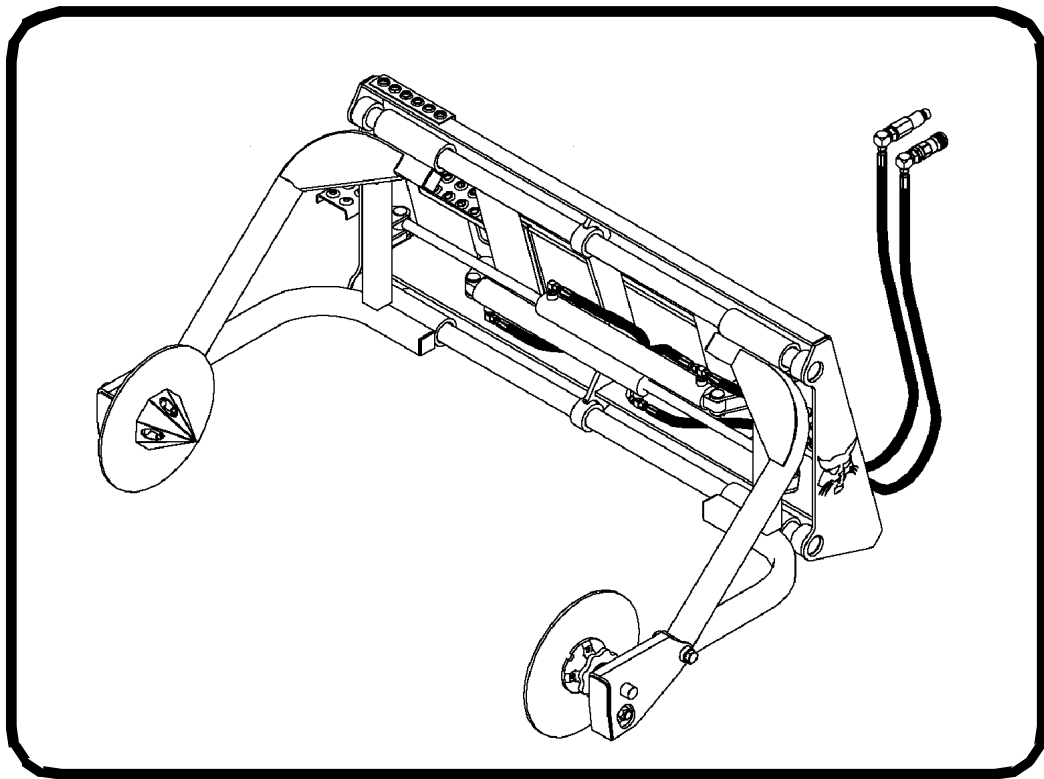

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

## **FEATURES AND ACCESSORIES**

### **Standard Items**

The sod layer is equipped with the following Standard Items:

 
- Relief Valve Prevents Over Squeezing Of Sod Rolls
- Built-in Storage For Sod Staples

## ATTACHMENT SIGNS (DECALS) (CONT'D)


### Pictorial Only Safety Signs

Safety signs are used to alert the equipment operator or maintenance person to hazards that may be encountered in the use and maintenance of the equipment. The location and description of the safety signs are detailed in this section. Please become familiarized with all safety signs installed on the machine / attachment.

*Vertical Configuration*

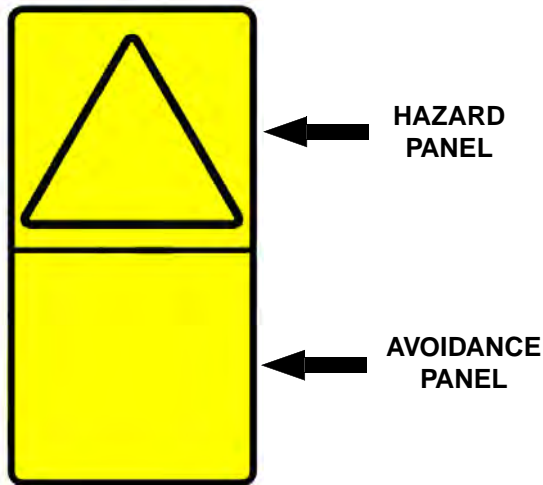

*Horizontal Configuration*

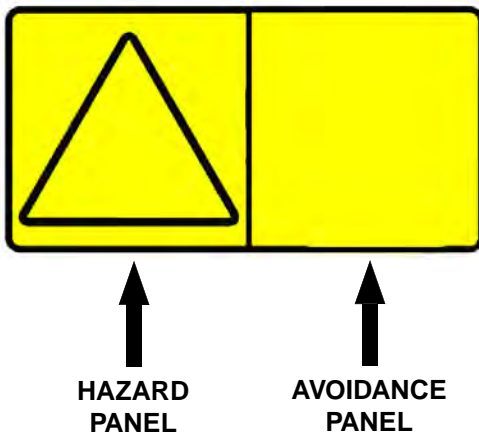 

The format consists of the hazard panel(s) and the avoidance panel(s):

Hazard panels depict a potential hazard enclosed in a safety alert triangle.

Avoidance panels depict actions required to avoid the hazards.

A safety sign may contain more than one hazard panel and more than one avoidance panel.

**NOTE:** See the numbered ATTACHMENT SIGNS (DECALS) on Page 18 for the location of each correspondingly numbered pictorial Only decal.

#### 1. Tripping Hazard (7130141)

This safety sign is located on the Sod Layer.



**DO NOT ENTER OR EXIT ON THIS SIDE**  
You could slip, trip or fall and become seriously injured.

W-2809-1009

## OPERATING PROCEDURE WITH LOADERS (CONT'D)

### Entering And Exiting The Loader

#### Entering



#### AVOID INJURY OR DEATH

When operating the machine:

- Keep the seat belt fastened snugly.
- The seat bar must be lowered.
- Keep your feet on the pedal controls or footrests and hands on the controls.

W-2261-0909

Figure 19



Use the attachment steps, grab handles and safety treads (on the loader lift arms and frame) to get on and off the loader [Figure 19].

Figure 20



Enter the loader. Fasten the seat belt and adjust it so the buckle is centered between your hips [Figure 20].

Figure 21



Lower the seat bar and engage parking brake [Figure 21].

Put the foot pedals or hand controls in neutral position.

**NOTE: Keep your hands on the steering levers and your feet on the foot pedals (or footrests) while operating the loader.**

See the loader's Operation & Maintenance Manual and Operator's Handbook for detailed information on operating the loader.

#### Exiting

Lower the lift arms and put the attachment flat on the ground.

Stop the engine and engage the parking brake.

Lift the seat bar and make sure the lift and tilt functions are deactivated.

Remove the key.

Exit the loader.



#### AVOID INJURY OR DEATH

Before you leave the operator's position:

- Lower the lift arms, put the attachment flat on the ground.
- Stop the engine and engage the parking brake.
- Move all pedals, handles, joysticks, and other controls until they are LOCKED or in the NEUTRAL position.

**SEE THE MACHINE OPERATION & MAINTENANCE MANUAL FOR MORE INFORMATION.**

W-2722-0208

## OPERATING PROCEDURE WITH LOADERS (CONT'D)

### Control Functions

Enter the loader. Fasten the seat belt, lower the seat bar and start the engine. Release the parking brake.

Engage auxiliary hydraulics. (See the loader's Operation & Maintenance Manual and Operator's Handbook for correct procedure.)

**NOTE: The auxiliary hydraulics must be activated prior to attachment operation.**

Figure 43


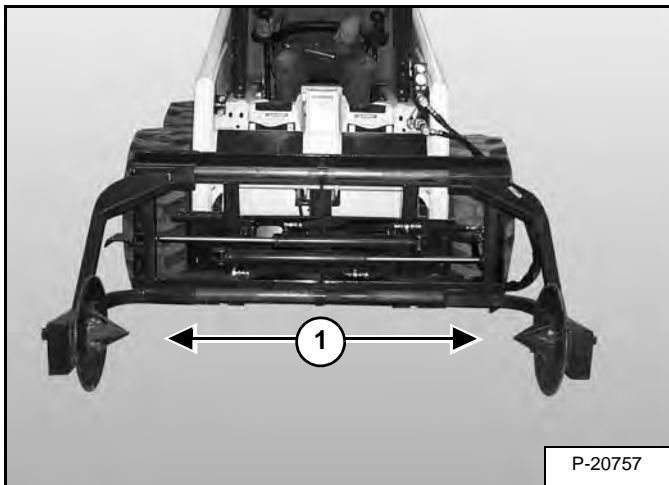 


Figure 44

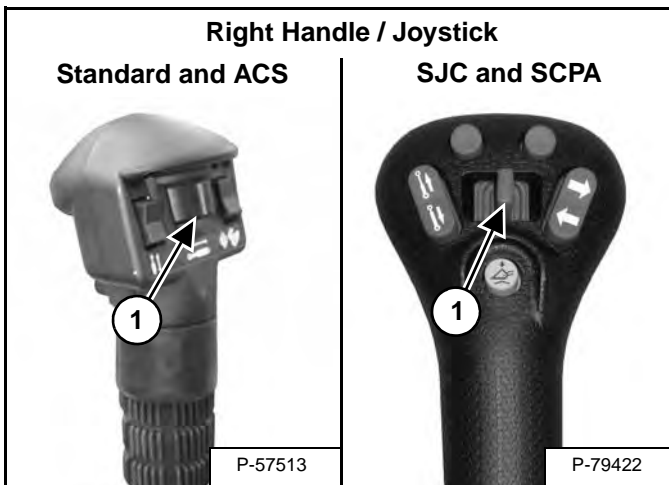 

To open the sod layer arms (Item 1) [Figure 43] press the right steering handle switch (Item 1) [Figure 44] to the right.

To close the sod layer arms press the right steering handle switch (Item 1) [Figure 44] to the left.

## OPERATING PROCEDURE WITH UTILITY WORK MACHINES (CONT'D)

### Entering And Exiting The Work Machine

#### Entering



#### AVOID INJURY OR DEATH

When operating the machine:

- Keep the seat belts fastened snugly.
- The arm rest must be lowered.
- Keep your feet and arms inside the cab.

W-2454-1102

Enter and exit the operator seat of the work machine from the left side.

**NOTE:** The left side of the work machine as viewed from the operator seat.

Figure 65



Enter the cab [Figure 65].

**NOTE:** Maintain three-point contact at all times while entering or exiting the work machine. Do not jump.

Figure 66



Fasten the seat belt (Item 1) and lower the operator arm rest (Item 2) [Figure 66].

Put the Travel Direction Control Lever (Item 3) [Figure 66] in "PARK".

See the work machine's Operation & Maintenance Manual and Operator's Handbook for detailed information on operating the work machine.

#### Exiting

Put the Travel Direction Control Lever (Item 3) [Figure 66] in "PARK".

Lower the lift arm and put the attachment flat on the ground.

Lower the attachment to the ground (if equipped).

Stop the engine.

Raise the operator arm rest, unfasten seat belt and remove the key.

Exit the work machine.



#### AVOID INJURY OR DEATH

Before you leave the operator's seat:

- Lower the lift arm, put attachment and implement (if equipped) flat on the ground.
- Put Travel Direction Control Lever in PARK.
- Stop the engine.
- Raise operator arm rest.

W-2740-0608

## OPERATING PROCEDURE WITH UTILITY WORK MACHINES (CONT'D)

### Control Functions

Enter the work machine. Fasten the seat belt, lower the operator arm rest and start the engine. Release the parking brake.

Engage auxiliary hydraulics. (See the work machine's Operation & Maintenance Manual and Operator's Handbook for correct procedure.)

**NOTE: The auxiliary hydraulics must be activated prior to attachment operation.**

Figure 90


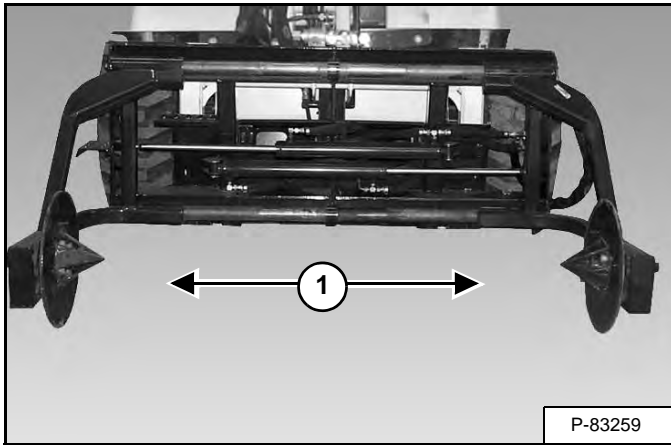 


Figure 91

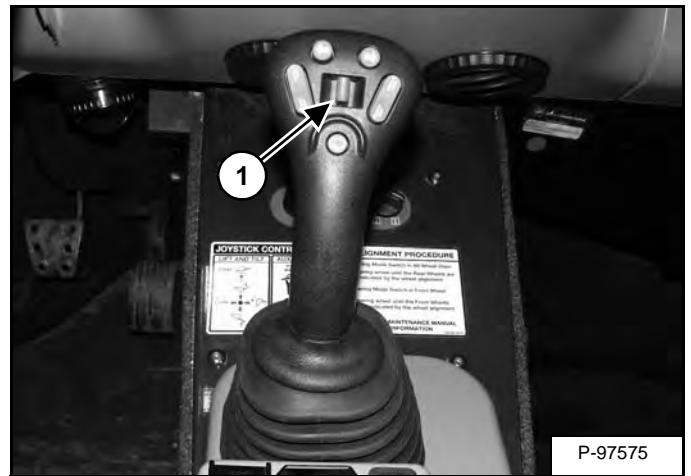 

**NOTE: Later model joystick shown in [Figure 91] but procedure is the same for all versions.**

To open the arms (Item 1) [Figure 90] of the sod layer, press the switch (Item 1) [Figure 91] on the joystick to the right.

To close the arms of the sod layer, press the switch (Item 1) [Figure 91] on the joystick to the left.

## PREVENTIVE MAINTENANCE

MAINTENANCE SAFETY .....	71
TROUBLESHOOTING .....	73
Chart .....	73
LUBRICATION .....	74
Lubrication Locations .....	74
ATTACHMENT STORAGE AND RETURN TO SERVICE .....	74
Storage .....	74
Return To Service .....	74

## SPECIFICATIONS

SOD LAYER SPECIFICATIONS .....	.81
Dimensions .....	.81
Performance .....	.81
Capacity .....	.81

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL