




Bobcat®

Operation & Maintenance Manual Spreader

(Spreader) S/N 006400101 & Above

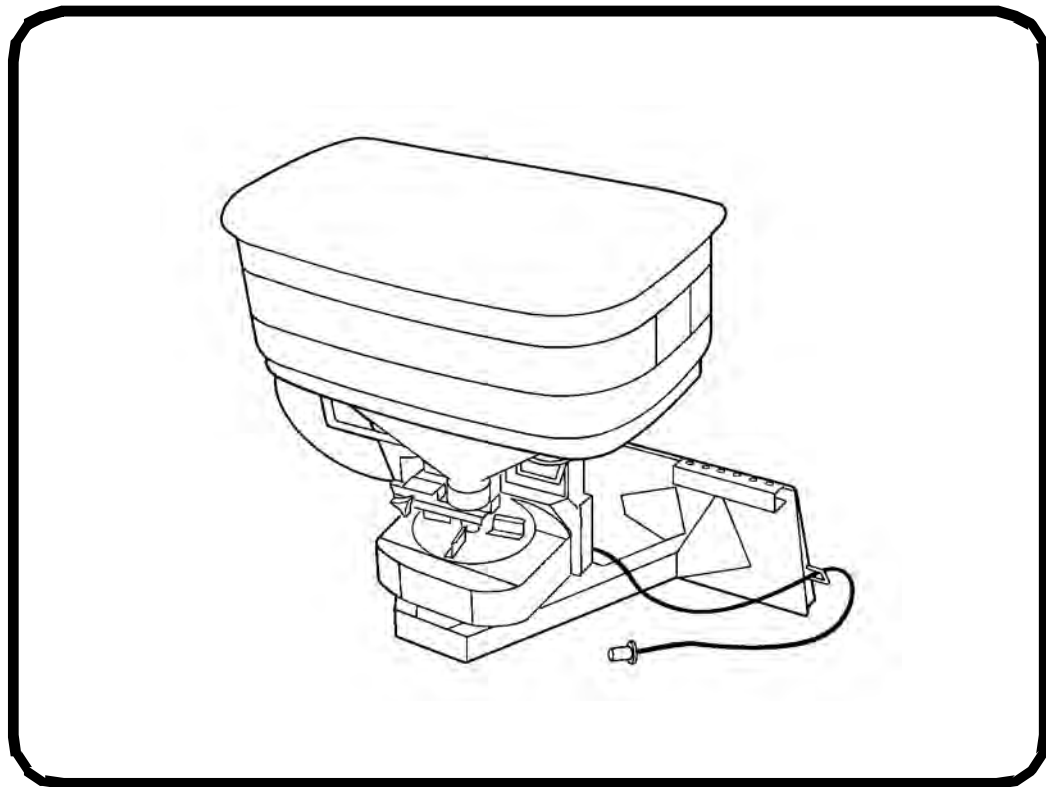

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


SAFETY AND TRAINING RESOURCES

SAFETY INSTRUCTIONS	11
Safe Operation Is The Operator's Responsibility	11
Safe Operation Needs A Qualified Operator	11
Use Safety Rules	12
Call Before You Dig	12
Avoid Silica Dust	12
FIRE PREVENTION	13
Maintenance	13
Operation	13
Electrical	13
Hydraulic System	13
Fueling	13
Starting	13
Spark Arrester Exhaust System	13
Welding And Grinding	14
Fire Extinguishers	14
PUBLICATIONS AND TRAINING RESOURCES	15

DAILY INSPECTION

Loader Mount


Figure 4

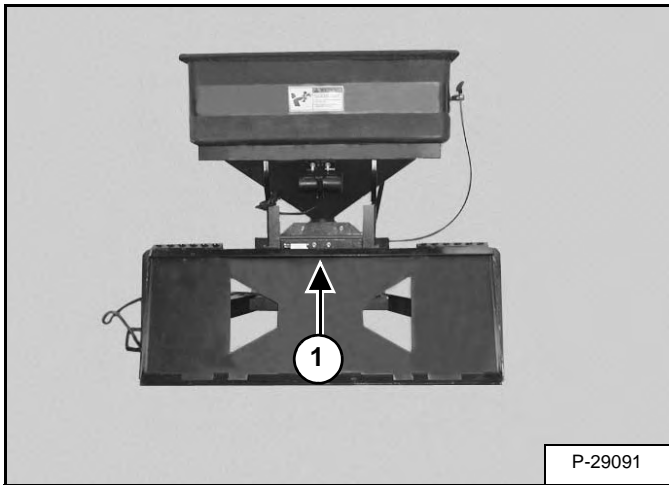

Inspect the Spreader mounting flange (Item 1) **[Figure 4]**, and all welds on the mount for wear and damage each time the Spreader is removed from the loader.

Vehicle Mount

Figure 5

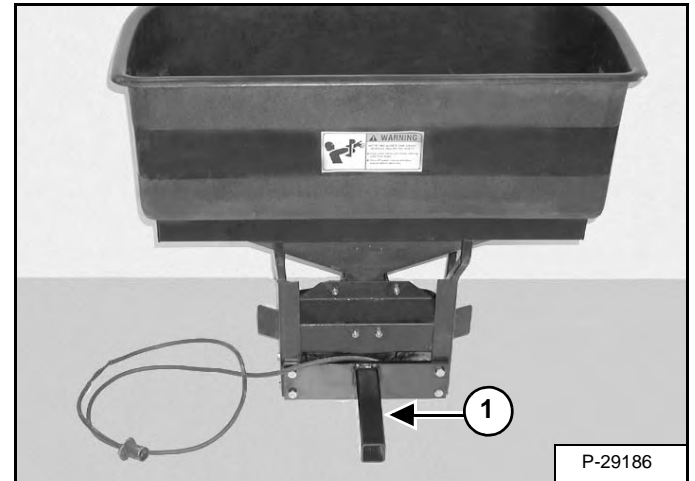

Inspect the vehicle mount (Item 1) **[Figure 5]** and all welds for wear and damage each time the spreader is removed.

OPERATING PROCEDURE WITH LOADERS (CONT'D)

Entering And Exiting The Loader (Cont'd)

Exiting

Lower the lift arms and put the attachment flat on the ground.

Stop the engine and engage the parking brake.

Lift the seat bar and make sure the lift and tilt functions are deactivated.

Remove the key.

Exit the loader.



AVOID INJURY OR DEATH

Before you leave the operator's position:

- **Lower the lift arms, put the attachment flat on the ground.**
- **Stop the engine and engage the parking brake.**
- **Move all pedals, handles, joysticks, and other controls until they are LOCKED or in the NEUTRAL position.**


SEE THE MACHINE OPERATION & MAINTENANCE MANUAL FOR MORE INFORMATION.

W-2722-0208

OPERATING PROCEDURE WITH VEHICLES


Vehicle Receiver Mount

Figure 56

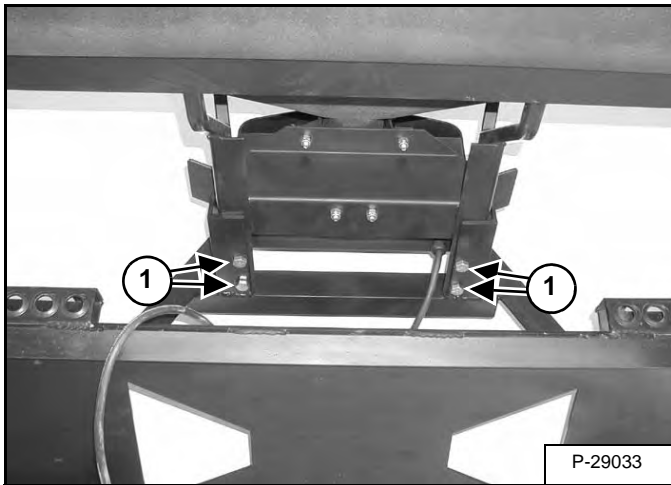

To install a vehicle receiver mount, remove the four bolts and nuts (Item 1) [Figure 56].

Figure 57

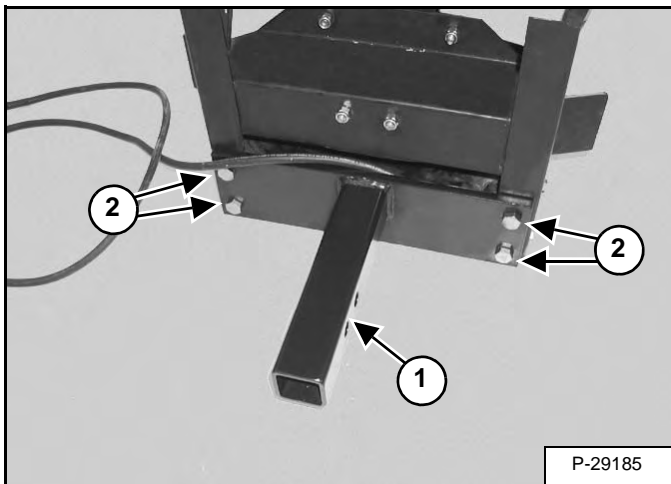

Install the vehicle mount (Item 1) [Figure 57]. Tighten the bolts (Item 2) [Figure 57] to 88 - 95 N•m (65 - 70 ft-lb) torque.


PREVENTIVE MAINTENANCE

MAINTENANCE SAFETY51
SEED GATE53
Installation53
ADJUSTABLE DEFLECTOR60
Installation60
VIBRATORY MOTOR62
Installation62
ATTACHMENT STORAGE AND RETURN TO SERVICE65
Storage65
Return To Service65

SEED GATE (CONT'D)

Installation (Cont'd)


Figure 105

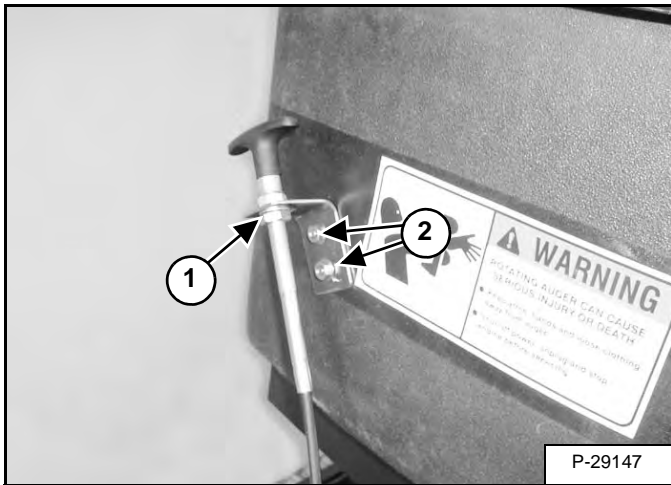

Install the gate control cable (Item 1) **[Figure 105]** and bracket to the hopper with two bolts and nuts (Item 2) **[Figure 105]**.

Tighten the bolts to 9 - 10 N•m (80 - 90 in-lb) torque.

SCHEMATICS

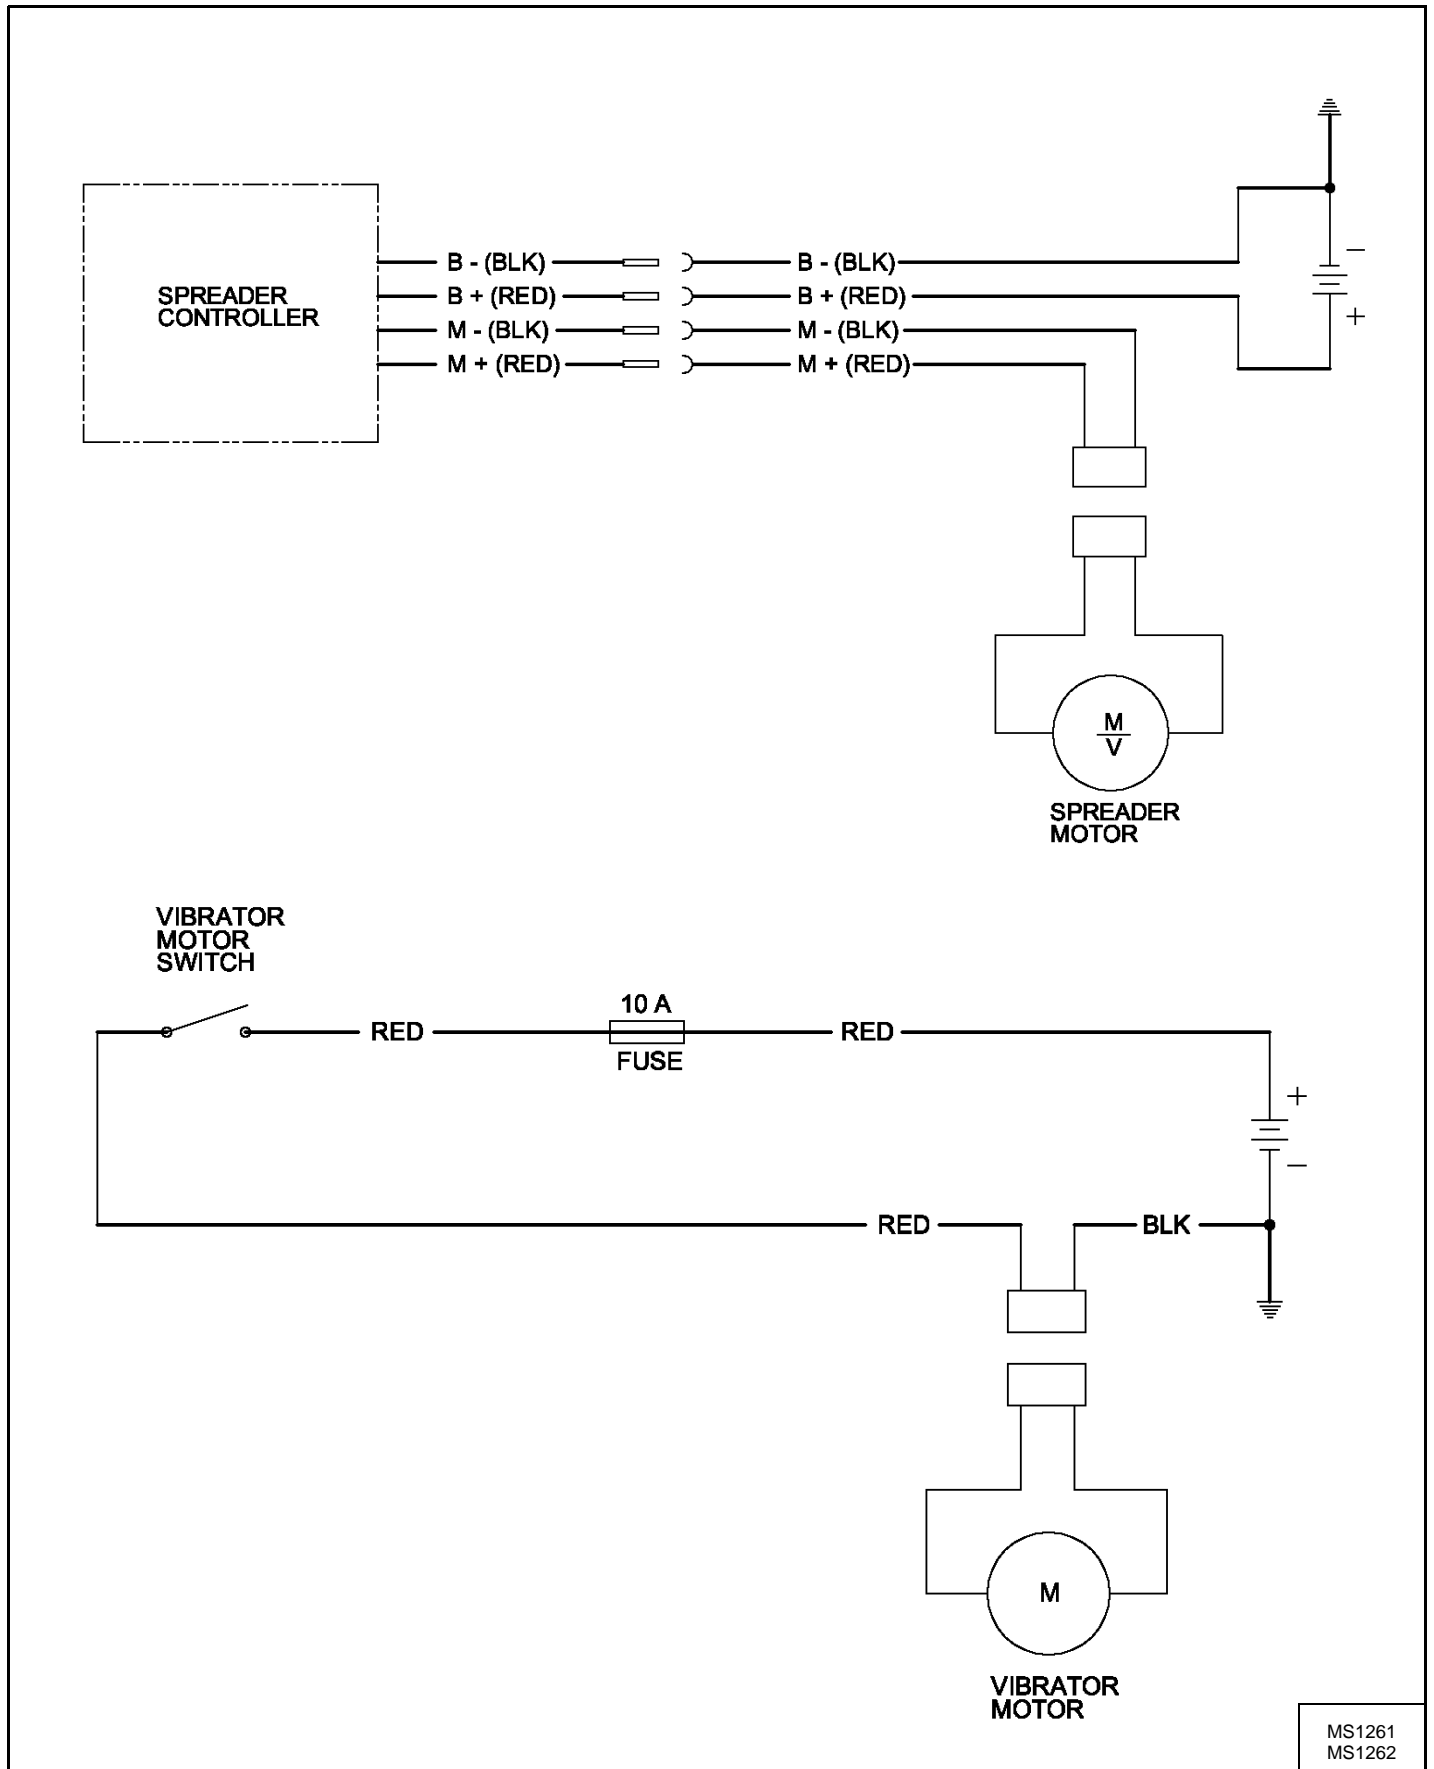

MS1261
MS1262

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL