 


---

# Operator's Manual

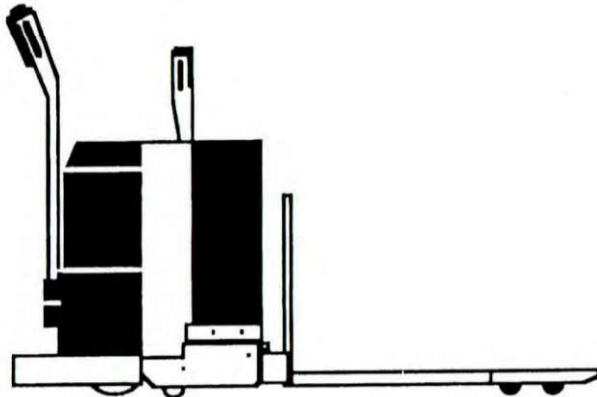

P 40/60 & HWP 40/60

---

**CLARK**

Book No. 2398574  
OM-541

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



 
- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

# Operator Maintenance Maintenance Problem

**DO NOT OPERATE A LIFT  
TRUCK THAT HAS A  
MAINTENANCE PROBLEM.**

Remove the key and put  
an "Out of Service" tag  
on the truck.


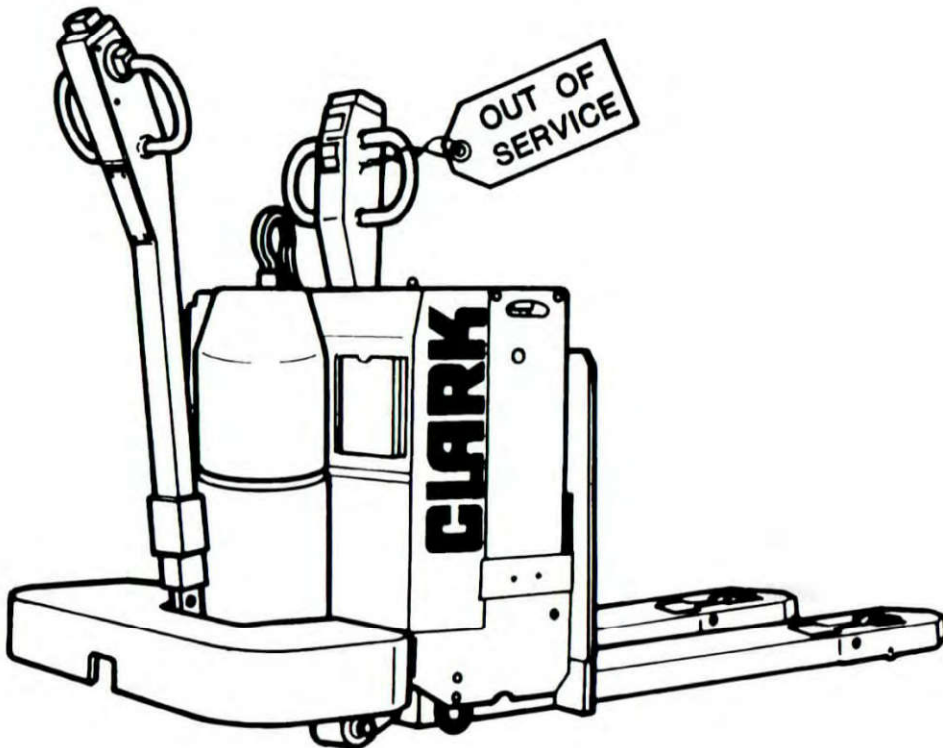


# General Safety Rules


## Parking

Park trucks in designated parking areas only.

  Do not obstruct traffic lanes or aisles.

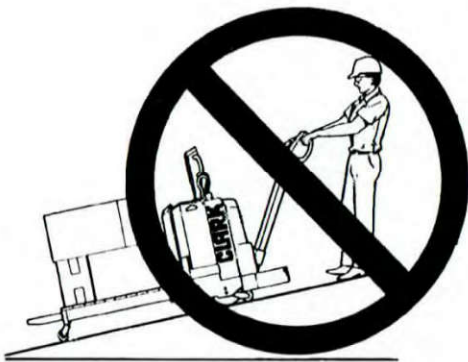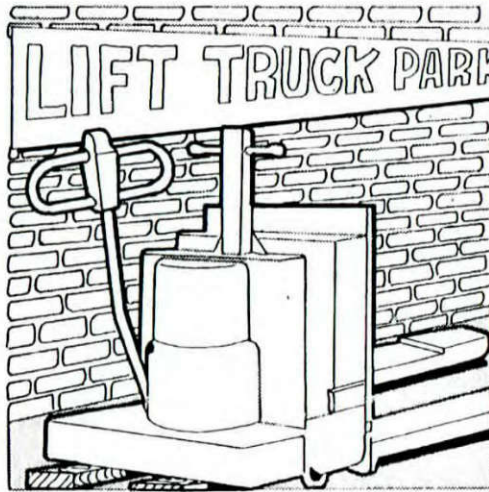

Never park on a grade.

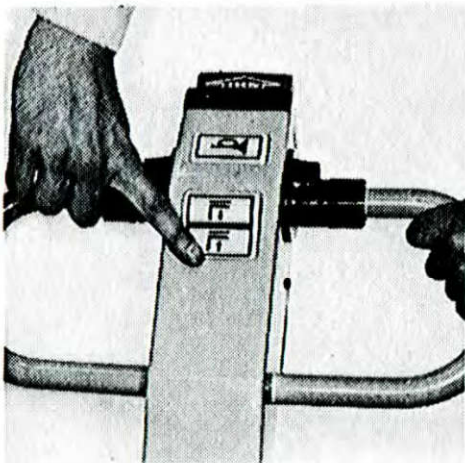 

Place control handle in full turn and raise handle to "full-up" position so that truck brake is applied.

Fully lower pallet forks to floor or as near to the floor as possible.



## Know Your Truck Truck Data and Safety Plates

Know the rated capacity of your truck and its attachment (if any) and never exceed it.

Study your truck data/capacity plate and learn the facts stamped in areas one through eight.

Know the construction type of your truck and never take an unauthorized truck into a restricted area.

### Operator Safety Warning Plate

 
 
The operator's warning plate describes basic instructions for safe operation of a lift truck. Read and understand these instructions and the other safety messages in this manual and on the lift truck.

- Do not operate this motorized hand truck unless you are trained and authorized. Read and understand the operator's manual before starting truck.
- Do not operate damaged or faulty truck. Do not attempt repairs unless you are trained and authorized.
- Keep hands on designated grips and feet away from truck. Do not operate truck with wet or greasy hands or shoes.
- Enter confined areas with load end first. Be very careful when operating in confined areas to avoid being pinned.
- Avoid uneven or slippery surfaces and loose materials.
- Travel slowly and with caution on slopes and do not turn. Always travel with load end down grade.
- Do not load truck over capacity on nameplate. Do not handle shaky loads. Be very careful when handling long, high or wide loads.
- Do not exceed floor weight limits.

# Know Your Truck

## General Data

### P Series Dimensions

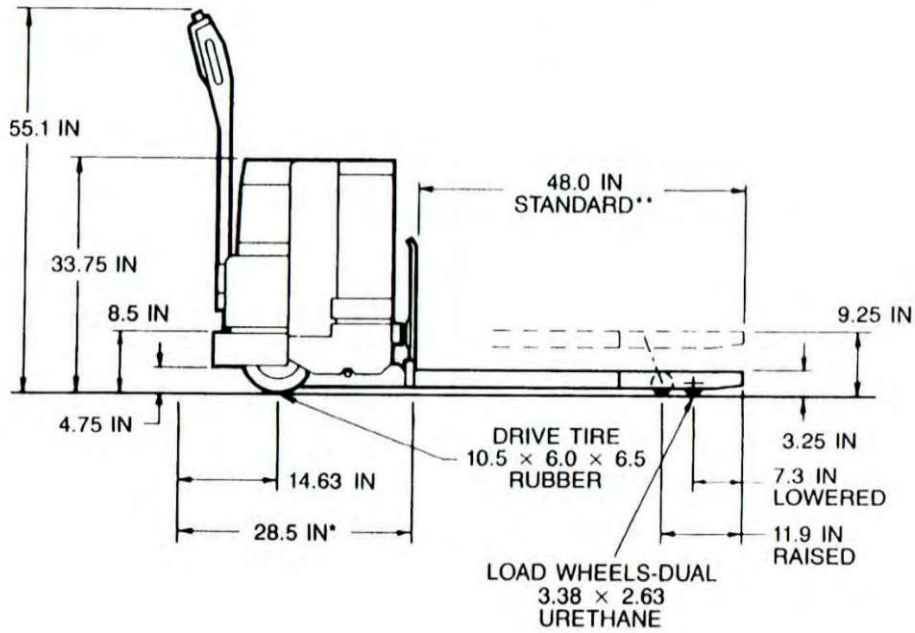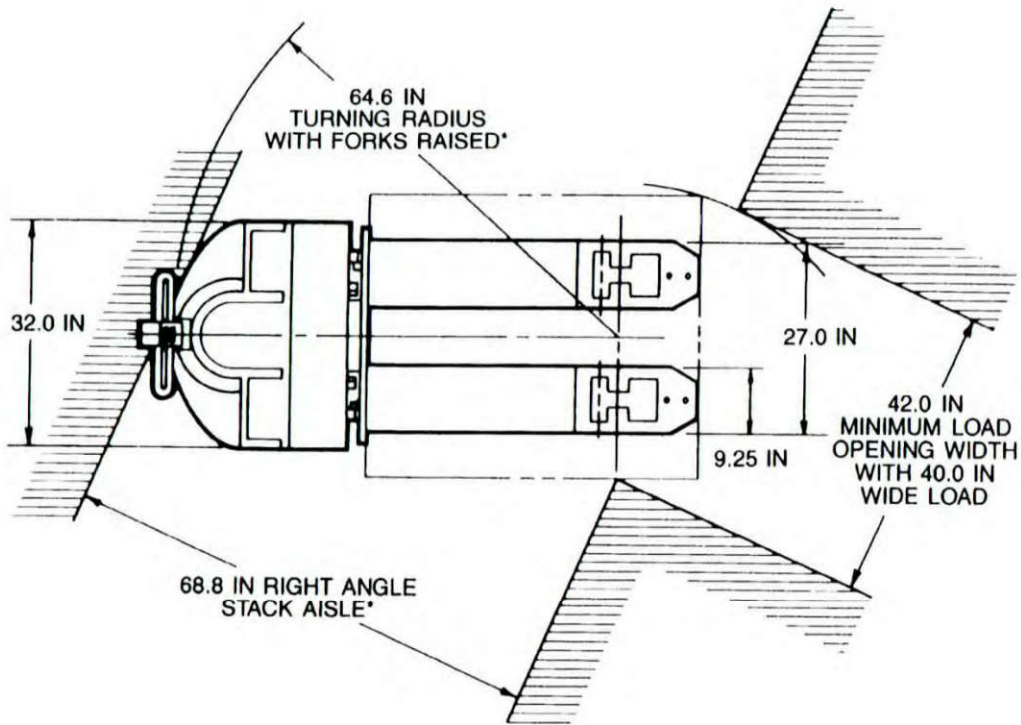


\*ADD 5.5 INCHES FOR TRUCKS WITH OPTIONAL DOUBLE ROW BATTERY COMPARTMENT.

\*\*OTHER FORK LENGTHS AVAILABLE. SEE CHART UNDER GENERAL DATA.


## Operating Procedures Before Operation

 19. Lower handle to comfortable operating level and put thumb of right (or left) hand on upper "wing" of directional control switch. Press switch "wing" gently and truck will move in reverse (away from you).

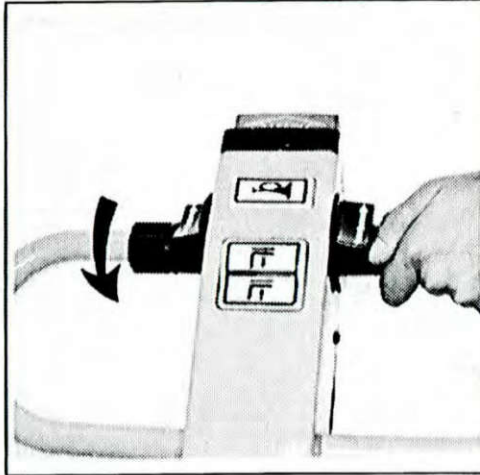

23684

 20. Apply truck brake by raising handle to the full up position.

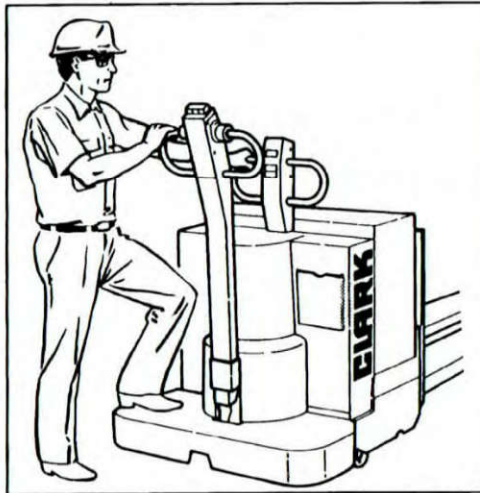

25499

21. For P model trucks, advance to step number 29. For HWP models, step on the rider platform and make sure that your feet are well positioned on the rider platform and that they do not stick out beyond platform edges.



25500







CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL