 


Jeep

 
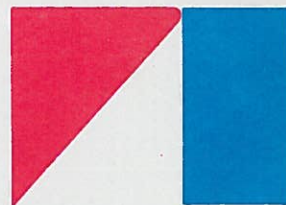 


J-SERIES F-77073 ILLUSTRATION SUPPLEMENT TO PARTS CATALOG F-76073

62 thru 73

ISSUE DATE
SEPTEMBER 1972

PRINTED IN U.S.A.

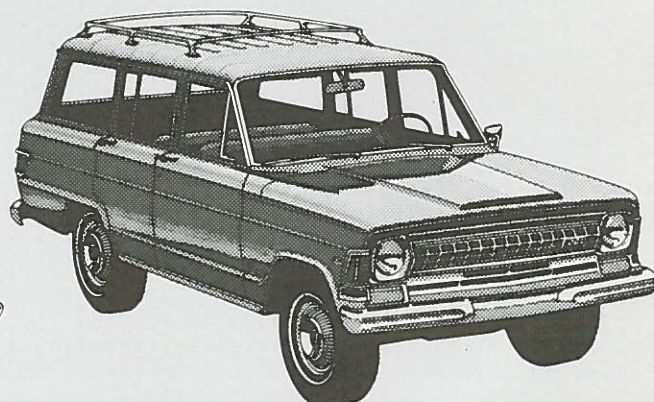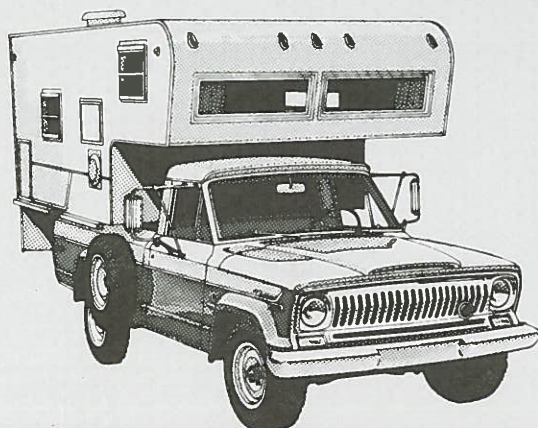

**American
Motors**



**PARTS AND DISTRIBUTION
SERVICES DIVISION**

3280 SOUTH CLEMENT AVENUE
MILWAUKEE, WISCONSIN 53201

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
C - Cont.		C - Cont.	
CONNECTOR, Gasoline Filler Neck Tube To Tank	4.141-13	COVER, Brake Cylinder Hole Plate	20.120-4
CONNECTOR, Oil Filter By-Pass	1.223-1	COVER, Brake Master Cylinder Filler	8.038-1
CONNECTOR, Seat Adjuster Wire	29.133-1	COVER, Brake Pedal Pad Rubber	8.148-1
CONNECTOR, Stator Sleeve	6.660-4	COVER, Carburetor Air Cleaner	4.088-7
CONNECTOR, Vacuum Tube	13.020-18a	COVER, Clutch	5.005-1
CONNECTOR, Windshield Washer Hose	22.053-4	COVER, Clutch Housing	5.054-3
CONNECTOR, Windshield Washer Hose (Two Speed)	22.053-3	COVER, Clutch Mounting Hole Plate	20.120-12
CONNECTOR, Wiring	3.165-2	COVER, Clutch Pedal Pad	5.144-1
CONTACT, License Plate Lamp	3.341-11	COVER, Clutch Push Rod	20.120-10
CONTACT ASSEMBLY, Horn	3.406-2	COVER, Cylinder Head	1.068-1
CONTACT KIT, Ignition	3.002-1	COVER, Cylinder Head Water Outlet	1.059-6
CONTACT SET, Ignition	3.031-1	COVER, Engine Oil Pump	1.164-1
CONTROL, Diaphragm (WQT)	18.565-1	COVER, Expansion Tank Vapor Hose Plate	31.050-5
CONTROL, Distributor Vacuum	3.046-1	COVER, Floor Gear Shift Lever	7.013-1
CONTROL, Fresh Air Duct	22.020-6	COVER, Foot Operated Parking Brake Lever Rubber	8.180-4
CONTROL, Front Door Latch Remote	23.056-1	COVER, Fresh Air Duct	22.020-3
CONTROL, Rear Door Latch Remote	23.056-3	COVER, Front Axle Housing	9.037-1
CONTROL, Tailgate Remote	23.039-3	COVER, Front Bucket Seat Back Pivot Arm	29.120-6
CONTROL, Windshield Wiper	22.038-1	COVER, Front Floor Pan Transmission Access	20.005-3
CONTROL ASSEMBLY, Heater And Defroster	13.017-1	COVER, Front Seat Center Armrest Support Bracket	29.145-1
CONTROL ASSEMBLY, Overdrive Cable	6.350-1	COVER, Front Suspension Upper Control Arm Ball Joint Dust	10.067-4
CONVERSION KIT, Solid Clutch Linkage	5.044-1	COVER, Gasoline Tank Expansion Tank	4.132-2
CONVERTER, Automatic Transmission	16.030-1	COVER, Gasoline Tank Filler Tube Protective	4.143-1
CONVERTER, Hydramatic Transmission	6.519-1	COVER, Gear Shift Lever	7.001-11
COOLING KIT, Heavy Duty	15.015	COVER, Headlamp Opening	2.050-11
CORE, Air Conditioning Condenser	13.450-1	COVER, Headlining Trim Panel Joint Retainer	29.014-6
CORE, Air Conditioning Evaporator	13.475-1	COVER, Heater Motor Opening	20.120-2
CORE, Heater	13.028-1	COVER, Hydramatic Transmission Governor	6.545-2
CORE, Radiator	2.020-1	COVER, Hydramatic Transmission Oil Pump	6.535-2
CORE, Speedometer Cable	3.575	COVER, Hydramatic Transmission Rear Servo	6.540-5
COUNTERSHAFT, Transmission	6.159-1	COVER, Instrument Panel Clock Opening	22.100-6
COUPLING, Exhaust Emission Air Filter To Pump	4.546-1	COVER, Instrument Panel Heater	22.100-4
COUPLING, Extension Rod Parking Brake	8.214-8	COVER, Instrument Panel Radio Opening	22.100-8
COUPLING, Steering Gear Lower Shaft To Intermediate Shaft	10.721-1	COVER, Power Brake Master Cylinder Filler	8.510-2
COUPLING, Steering Gear Lower Shaft To Steering Gear	10.740	COVER, Power Steering Gear Pitman Shaft	10.610-1
COUPLING, Steering Gear Upper Shaft To Lower Shaft	10.720-1	COVER, Power Steering Pump Body	10.445-1
COUPLING, Tailgate Window Regulator Motor To Transmission	23.306-7	COVER, Power Steering Pump Oil Reservoir	10.465-4
COURTESY LAMP KIT (Incl. Switch And Terminal)	3.349-2	COVER, Power Take-Off Transfer Case Cover (WQT)	18.515-1
COURTESY LAMP KIT (Incl. Switches, Wire, Harness And Lamps)	3.349-1	COVER, Rear Axle Housing	9.007-1
COVER, Automatic Transmission Converter Housing Front	16.040-7	COVER, Rear Door Ash Receiver Outside	23.182-2
COVER, Automatic Transmission Rear Bearing Retainer Inspection	16.175-9	COVER, Rear Door Hinge (Lower)	23.018-3a
COVER, Auxiliary Gas Tank End Panel	4.131-23	COVER, Rear Door Hinge (Upper)	23.017-4
COVER, Auxiliary Gas Tank Filler Opening Plate	4.131-30	COVER, Rear Floor Pan Gas Gauge Access	20.035-6
COVER, Back-Up Lamp Hole	12.125-14	COVER, Rear Propeller Shaft Grease Flat	9.113-6
COVER, Bolt Latch Striker Plate	23.051-4	COVER, Reduction Unit Power Take-Off	18.610-7
COVER, Brake Adjusting Hole	8.030-1	COVER, Roof Top Vinyl	20.422-1
COVER, Brake Cylinder And Overdrive Hole Plate	20.120-5	COVER, Shift Fork Vent (WQT)	18.560-1
		COVER, Steering Column Access Plate	20.120-14
		COVER, Steering Gear Housing Cross Shaft	10.300-1
		COVER, Steering Gear Shaft Lock	10.702-1
		COVER, Steering Housing Worm	10.296-1
		COVER, Steering Linkage Tie Rod End Dust	10.232-1

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
K - Cont.		L - Cont.	
KNOB, Carburetor Hand Choke.....	4.030-3	LEVER, Automatic Transmission Front Servo	16.060-6
KNOB, Cigar Lighter	3.352-3	LEVER, Automatic Transmission Manual And Park.....	16.225-2
KNOB, Directional Signal Lever	3.324-3	LEVER, Automatic Transmission Manual Control	16.225-1
KNOB, Front Door Lock Push	23.054-1	LEVER, Automatic Transmission Parking Brake Toggle	16.090-5
KNOB, Gear Shift Lever	7.030-1	LEVER, Automatic Transmission Parking Brake Toggle Lift	16.090-11
KNOB, Hazard Warning	3.690-12	LEVER, Automatic Transmission Parking Brake Torsion	16.090-12
KNOB, Heater And Defroster Control	13.017-3	LEVER, Automatic Transmission Rear Servo	16.070-3
KNOB, Lighting Switch	3.150-1	LEVER, Brake Shoe Parking Brake.....	8.024-1
KNOB, Rear Door Lock Push	23.054-2	LEVER, Brake Shoe Self-Adjusting	8.012-1
KNOB, Rear Seat Back Lock Plunger.....	29.217-4	LEVER, Clutch Throwout	5.123-1
KNOB, Remote Control Valve Assembly (WQT)	18.585-3	LEVER, Column Gear Shift Upper	7.020-1
KNOB, Station Selector And ON -OFF.....	15.320-3	LEVER, Directional Signal (Incl. Knob)	3.324-2
KNOB, Tone Control	15.320-4	LEVER, Directional Signal (Less Knob)	3.324-1
KNOB, Transfer Case Shift Lever.....	18.130-1	LEVER, Emergency Brake Cam	8.191-7
KNOB, Windshield Wiper And Washer Control	22.039-2	LEVER, Emergency Brake Operating	8.191-1
KNOB, Windshield Wiper Control	22.039-1	LEVER, Floor Gear Shift	7.001-1
KNUCKLE, Steering.....	10.004-1	LEVER, Floor Gear Shift Selector.....	7.080-1
- L -		LEVER, Gear Shift (Hydramatic).....	7.130-5
LAMP, Brake Pressure Warning Lamp.....	3.651-2	LEVER, Gear Shift (Low And Reverse - Outer)	7.130-4
LAMP, Courtesy	3.349-3	LEVER, Gear Shift (Remote Control)	7.130-10
LAMP, Parking And Front Directional Signal	3.292-1	LEVER, Gear Shift (Second And High - Outer)	7.130-2
LAMP, Parking Brake Warning.....	3.650-2	LEVER, Gear Shift Operating Shaft.....	7.085-1
LAMP ASSEMBLY, Back-Up.....	3.315-2	LEVER, Hydramatic Transmission Dedent...	6.551-7
LAMP ASSEMBLY, License.....	3.335-1	LEVER, Low And Reverse Gear Shift Operating Shaft	7.085-1a
LAMP ASSEMBLY, Tail, Stop And Side Marker	3.300-2	LEVER, Neutral Safety And Back-Up Light Switch Actuating	7.005-1
LAMP ASSEMBLY, Tail And Stop.....	3.300-1	LEVER, Reduction Unit Control	18.630-1
LAMP KIT, Transfer Case Indicator	18.176-1	LEVER, Release Cover Assembly.....	5.014-1
LATCH, Front Door	23.050-1	LEVER, Standard Transmission Shifter Interlock Low And Reverse	6.198-5
L - Cont.		LEVER, Standard Transmission Shifter Interlock Second And High.....	6.198-6
LATCH, Passenger Seat Catch	29.105-16	LEVER, Steering Wheel Release	10.801-1
LATCH, Rear Door.....	23.051-1	LEVER, Transfer Case Shift	18.125-1
LATCH, Rear Seat Back.....	29.226-1	LEVER, Transfer Case Shift Lever Shifting Link Cross Shaft	18.127-1
LATCH, Tailgate	23.039-1	LEVER, Transverse Left (Low And Reverse)	7.140-2
LATCH, Tailgate Lock	31.132-1	LEVER, Transverse Left (Second And High).	7.140-1
LEAF, Front Spring No. 1	11.072-1	LEVER AND SHAFT ASSEMBLY, Floor Gear Shift.....	7.001-1a
LEAF, Front Spring No. 2	11.072-2	LEVER ASSEMBLY, Foot Operated Parking Brake.....	8.180-1
LENS, Back-Up Lamp	3.317-1	LEVER ASSEMBLY, Gear Shift (Intermediate).....	7.130-9
LENS, Clock	3.369-2	LEVER ASSEMBLY, Reduction Unit Shift ...	18.630-4
LENS, Domelamp	3.346-3	LEVER ASSEMBLY, Transfer Case Shift Lever Shifting Trunnion	18.129-1
LENS, Front Fender Side Lamp	3.726-1	LID, Rear Seat Well	29.227-1
LENS, Instrument Cluster	3.515-2a	LIGHTER ASSEMBLY, Cigar.....	3.352-2
LENS, Instrument Cluster (Kilos)	3.515-2	LIGHT KIT, Parking Brake Warning	15.195-1
LENS, Instrument Cluster (Miles)	3.515-1	LIGHT KIT, Parking Brake Warning And Split Brake	15.195-2
LENS, License Plate Lamp	3.339-1		
LENS, Parking And Front Directional Lamp (Inner).....	3.292-4		
LENS, Parking And Front Directional Lamp (Outer).....	3.929-5		
LENS, Rear Side Marker	3.740-1		
LENS, Tail, Stop And Side Marker Lamp (Wagon)	3.306-2		
LENS, Tail And Stop Lamp (Truck).....	3.306-3		
LENS, Tail And Stop Lamp (Wagon)	3.306-1		
LENS KIT, Tail, Stop And Rear Directional	3.306-3a		

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
R - Cont.		R - Cont.	
RING, Transmission Front Ball Bearing Lock	6.048-1	ROD ASSEMBLY, Bellcrank To Right	
RING, Transmission Front Ball Bearing Snap	6.044-1	Steering Arm Tie	10.118-5
RING, Transmission Main Shaft Snap	6.068-6	ROD ASSEMBLY, Connecting.....	1.136-1
RING, Transmission Rear Ball Bearing Lock		ROD ASSEMBLY, Left Tie Rod To Right	
(On Bearing).....	6.056-1	Steering Arm Tie	10.118-7
RING, Transmission Rear Ball Bearing Lock		ROD ASSEMBLY, Power Steering Control	
(On Shaft)	6.056-2	Valve To Bellcrank.....	10.118-9
RING, Transmission Synchronizer Clutch		ROD ASSEMBLY, Power Steering Control	
Snap Second And High	6.080-5	Valve To Bellcrank Tie	10.118-3
RING, Valve Rocker Arm Shaft Retaining....	1.098-15	ROD ASSEMBLY, Right Tie Rod To Left	
RING, Valve Tappet Snap	1.088-2	Steering Arm Tie	10.118-8
RING, Wheel Trim.....	8.274-5	ROD ASSEMBLY, Steering Arm To Steering	
RING AND SEAL KIT, Power Steering Gear		Arm Tie.....	10.118-1
Valve.....	10.625-1	ROD ASSEMBLY, Steering Gear To	
RING KIT, Power Steering Gear "O"	10.550-1	Bellcrank Tie.....	10.118-2
RING SET, Piston	1.146-1	ROD ASSEMBLY, Steering Gear To Steering	
RING SET, Standard Transmission		Arm Tie.....	10.118-4
Synchronizer Clutch Friction Second		ROD KIT, Transfer Case Shift Control	18.165-5
And High.....	6.090-1	ROLLER, Fourspeed Transmission Main	
ROCKER ARM KIT, Valve	1.097-2	Shaft Gear.....	6.120-2
ROD, Accelerator Pedal	4.045-1	ROLLER, Overdrive Free Wheeling Set	6.332-1
ROD, Automatic Transmission Solenoid		ROLLER, Transmission Countershaft Rear	
(Hook)	16.235-9	Bearing	6.167-1
ROD, Automatic Transmission Solenoid		ROLLER, Transmission Reverse Idler Gear	
(Push)	16.235-2	Bearing	6.170-4
ROD, Bellcrank To Clutch Pedal Shaft.....	5.160-1	ROLLER, Transmission Spline Shaft Pilot	
ROD, Bellcrank To Rear Door Latch.....	23.057-4	Bearing	6.076-1
ROD, Bellcrank To Rear Door Lock Push		ROLLER KIT, Hydramatic Transmission	
Knob	23.057-3	Center Support Low Clutch	6.556-3
ROD, Clutch Release Upper Bellcrank To		ROOF ASSEMBLY, Canopy Top.....	31.178-1
Lower Bellcrank	5.160-7	ROTOR, Distributor	3.035-1
ROD, Front Door Locking	23.055-1	ROTOR, Power Steering Pump	10.435-4
ROD, Hydramatic Transmission Gear Shift....	7.125-1	ROTOR - VANE - RING KIT, Power Steering	
ROD, Parking Brake Cable Adjusting	8.214-4	Pump	10.435-3
ROD, Power Brake Unit Valve Push	8.480-1		
ROD, Power Steering Pump Brace	10.430-5		
ROD, Push Fuel Pump.....	4.110-6		
ROD, Standard Transmission Gear Shift			
(Low And Reverse)	7.125-4		
ROD, Standard Transmission Gear Shift			
(Second And High)	7.125-3		
ROD, Steering Bellcrank Bracket Support....	10.116-3		
ROD, Steering Gear Jacket Tube Support	10.340-1		
ROD, Sun Visor End Retaining.....	29.004-1		
ROD, Tailgate Counter Balance Torque	23.006-11		
ROD, Tailgate Latch Actuating Bellcrank			
To Latch.....	31.131-1		
ROD, Tailgate Latch Release Handle			
To Bellcrank	31.130-1		
ROD, Transfer Case Shift	18.100-1		
ROD, Transfer Case Shift Control	18.100-9		
ROD, Transfer Case Shift Control	18.160-1		
ROD, Transfer Case Shift Control	18.165-1		
ROD, Transfer Case Shift Control Rod			
Torsion Spring Retaining	18.165-3		
ROD, Valve Push	1.095-1		
ROD ASSEMBLY, Bellcrank To Clutch			
Release Lever	5.187-1		
ROD ASSEMBLY, Bellcrank To Left Steering			
Arm Tie.....	10.118-6		

- S -

SCREEN, Automatic Transmission	16.045-1
SCREEN, Crankcase Ventilation	1.118-3
SCREEN, Engine Oil Pump Inlet Tube	1.167-4
SCREEN, Hydramatic Transmission Governor	6.545-6
SCREEN, Oil Filler Cap Tube.....	1.022-4
SCREW, Automatic Transmission Front Servo	
Adjusting	16.060-8
SCREW, Automatic Transmission Rear Servo	
Adjusting	16.070-16
SCREW, Brake Shoe Adjusting.....	8.014-1
SCREW, Brake Wheel Cylinder Bleeder.....	8.088-1
SCREW, Emergency Brake Adjusting	8.190-3
SCREW, Front Axle Bushing Cross Shaft	
Center Bearing.....	9.387-1
SCREW, Front Axle Differential Side Bearing	
Cap	9.318-1
SCREW, Headlamp Adjusting	3.268-1
SCREW, Headlamp Bulb Retaining Ring	3.275-2
SCREW, Hydramatic Transmission Center	
Support	6.556-5
SCREW, Rear Axle Differential Case	9.024-3
SCREW, Rear Axle Differential Side Bearing	
Cap	9.018-1

ALPHABETICAL INDEX

DESCRIPTION	GROUP NO.	DESCRIPTION	GROUP NO.
- W -		W - Cont.	
WASHER, Automatic Transmission Front Clutch Cylinder	16.115-12	WASHER, Hydramatic Transmission Forward Clutch Hub Thrust.....	6.595-11
WASHER, Automatic Transmission Front Clutch Cylinder Hub Thrust.....	16.115-10	WASHER, Hydramatic Transmission Front Servo Piston.....	6.530-6
WASHER, Automatic Transmission Front Clutch Cylinder Thrust (Bronze).....	16.115-11	WASHER, Hydramatic Transmission Output Shaft To Case Thrust	6.635-7
WASHER, Automatic Transmission Input Shaft Thrust	16.105-2	WASHER, Hydramatic Transmission Pump To Forward Clutch Drum	6.538-1
WASHER, Automatic Transmission Output Shaft Bearing Spacer.....	16.160-4	WASHER, Hydramatic Transmission Reaction Carrier To Output Carrier.....	6.590-3
WASHER, Automatic Transmission Parking Brake Toggle Link	16.090-3a	WASHER, Hydramatic Transmission Rear Servo Piston.....	6.540-8
WASHER, Automatic Transmission Parking Brake Torsion Lever Pin	16.090-14	WASHER, Ignition Cylinder Wave.....	3.135-4
WASHER, Automatic Transmission Planetary Carrier Thrust	16.150-2	WASHER, Lever To Clutch Throwout Lever Pin.....	5.123-2
WASHER, Automatic Transmission Rear Servo Lever	16.070-15	WASHER, Overdrive Main Shaft Bearing	6.284-2
WASHER, Automatic Transmission Sun Gear Thrust (Front)	16.145-7	WASHER, Overdrive Shift Rail Assembly "C"	6.295-2
WASHER, Automatic Transmission Sun Gear Thrust (Rear)	16.145-8	WASHER, Propeller Shaft Sleeve Yoke Dust Cap Seal	9.110-4
WASHER, Brake Shoe Adjusting Screw	8.014-4	WASHER, Rear Axle Differential Pinion Gear Thrust	9.033-1
WASHER, Brake Shoe Parking Brake Lever Strut.....	8.024-4	WASHER, Rear Axle Differential Side Gear ..	9.029-1
WASHER, Clutch Cover To Flywheel	5.050-2	WASHER, Rear Axle Pinion Nut.....	9.050-5
WASHER, Crankshaft Thrust.....	1.024-1	WASHER, Remote Control Handle	23.058-3
WASHER, Cylinder Head Bolt.....	1.063-2	WASHER, Rocker Arm Retaining Shaft	1.098-13
WASHER, Door Window Regulator Handle....	23.104-1	WASHER, Spare Tire Retaining	8.359-6
WASHER, Felt.....	8.480-5	WASHER, Standard Transmission Main Drive Gear Bearing	6.040-3
WASHER, Floor Gear Shift Pivot Shaft	7.003-7	WASHER, Steering Column Lock Inhibitor Wave	10.337-8
WASHER, Floor Gear Shift Selector Lever Wave	7.080-7	WASHER, Steering Column Locking Bolt Spring Thrust	10.337-5
WASHER, Fourspeed Transmission Reverse Idler Gear Thrust.....	6.170-6	WASHER, Steering Gear Cross Shaft Adjusting Screw Thrust	10.306-3
WASHER, Fourspeed Transmission Second Speed Gear Thrust.....	6.120-3	WASHER, Steering Gear Jacket Tube Upper Bearing Thrust.....	10.344-6
WASHER, Fourspeed Transmission Shifting Shoe Reverse "C"	6.085-6	WASHER, Steering Gear Jacket Tube Upper Bearing Wave	10.344-2
WASHER, Fourspeed Transmission Shift Rail End Reverse Plunger "C".....	6.020-5	WASHER, Steering Gear Shaft Lower Bearing Spring Thrust.....	10.771
WASHER, Front Axle Bushing Cross Shaft Center Bearing.....	9.387-2	WASHER, Steering Gear Shaft Upper Bearing Lock Tab	10.829-1
WASHER, Front Axle Differential Pinion Gear Thrust	9.333-1	WASHER, Steering Gear Upper Shaft To Lower Or Intermediate Shaft Coupling Bearing Retainer	10.730-1
WASHER, Front Axle Differential Side Gear Thrust.....	9.329-1	WASHER, Thrust.....	3.039-6
WASHER, Front Axle Drive Pinion Nut.....	9.350-5	WASHER, Thrust (WQT).....	18.520-11
WASHER, Front Axle Mounting Sleeve Center Bearing.....	9.380-6	WASHER, Transfer Case Front Output Shaft Gear Thrust	18.035-2
WASHER, Front Axle Shaft Thrust.....	9.368-4	WASHER, Transfer Case Front Yoke To Shaft	18.110-2
WASHER, Front Output Shaft Thrust (WQT) ..	18.540-3	WASHER, Transfer Case Intermediate Gear Shaft Thrust	18.050-5
WASHER, Front Wheel Bearing.....	8.296-4	WASHER, Transfer Case Rear Yoke To Shaft	18.115-2
WASHER, Front Wheel Bearing Nut.....	8.296-5	WASHER, Transfer Case Yoke To Output Shaft	18.570-2
WASHER, Hood Lock Lower Dovetail Spring ..	12.060-6a	WASHER, Transmission Countershaft Gear Bearing Roller.....	6.167-3
WASHER, Hydramatic Transmission Center Support Thrust	6.556-8	WASHER, Transmission Countershaft Gear Thrust (Front)	6.166-1
WASHER, Hydramatic Transmission Forward Clutch Hub And Direct Housing Clutch Thrust	6.595-12		

ILLUSTRATIONS INDEX

GROUP 25 DOORS - HARDWARE

DOOR LOCK HARDWARE	DOOR LOCK HARDWARE
DOOR LOCK HARDWARE	DOOR LOCK HARDWARE
DOOR LOCK HARDWARE	DOOR LOCK HARDWARE
DOOR LOCK HARDWARE	DOOR LOCK HARDWARE
DOOR LOCK HARDWARE	DOOR LOCK HARDWARE

GROUP 26 CLASS - CHANNELS

CLASS 26 CHANNELS

GROUP 27 BODY MOUNTINGS

GROUP 27 BODY MOUNTINGS

GROUP 28 BODY HARDWARE

GROUP 28 BODY HARDWARE

GROUP 29 SEATS - SEAT YIM

SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM
SEAT YIM	SEAT YIM

GROUP 31 PICK UP BOX - STAKE BODY

PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX
PICK UP BOX	PICK UP BOX

The following is a listing of the TWO-TONE paint options. The first paint listed is the basic body color. To aid in locating the intermix formula number for the paints listed, use the numbers in parenthesis re: (226) as quick reference guides and refer to the preceding chart for the vendors stock number.

480 - Spruce Tip Green (392)
 Champagne White (432)
 483 - Spring Green (433)
 Champagne White (432)
 485 - Vintage Gold (434)
 Champagne White (432)
 487 - Island Blue (M) (477)
 Champagne White (432)

481 - President Red (226)
 Champagne White (432)
 484 - Avocado Mist (M) (431)
 Champagne White (432)
 486 - Burnished Bronze (M) (435)
 Champagne White (432)
 488 - Candlelight Yellow (478)
 Champagne White (432)

1972

SOLID PAINT CODE NO.	TWO-TONE PAINT CODE* NO.	COLOR NAME	DITZLER AIR DRY ENAMEL NO.	DUPONT AIR DRY ENAMEL DULUX* NO.	DITZLER DURACRYL ACRILYC LACQUER NO.	DUPONT LUCITE* ACRILYC LACQUER NO.
226	481	President Red	DQE71334	93-95678	DDL71334	6963H
431	484	Avocado Mist	DQE44115	7316D	DDL44115	7316L
432	...	Champagne White	DQE8818	7314D	DDL8818	7314L
490	498	Butterscotch Gold	DQE2399	5406D	DDL2399	5406L
491	499	Julep Green Metallic	DQE44478	7663D	DDL44478	7663L
492	500	Jetset Blue Metallic	DQE2392	5395D	DDL2392	5395L
493	501	Yuca Tan Metallic	DQE2397	5404D	DDL2397	5404L
494	502	Skyway Blue	DQE2391	5394D	DDL2391	5214LH
504	...	Forest Green	DQE44586	7762D	DDL44586	7762L
508	525	Renegade Orange	DQE60696	7874D	DDL60696	7874L
517	524	Copper Tan	DQE23796	5520D	DDL23796	5520L

FLEET ONLY


21	496	Raven Black	DQE9000	93-005	DDL9000	44
81	...	Transport Yellow	DQE80020	83928D	DDL80020	83928L
135	...	Omaha Orange	DQE60281	83215D	DDL60281	83215L
221	...	Federal Gray	DQE31817	93-91640		253-91640
394	497	Marlin Blue Metallic	DQE13156	98001D	DDL13156	98001L

* Lower (solid) color as listed with Upper or Accent color Champagne White (432).

INTERIOR "LOW GLOSS" PAINT . . .


"Low Gloss" interior paint is not available from the factory for refinish or touch-up work. The following colors are available from your local Ditzler or DuPont paint jobber by requesting the intermix formula code:

COLOR NAME	INTERMIX NUMBER DITZLER	DUPONT
"Low Gloss" Black	9390	99306
"Low Gloss" Blue	14264	99276
"Low Gloss" Buff	23716	99706

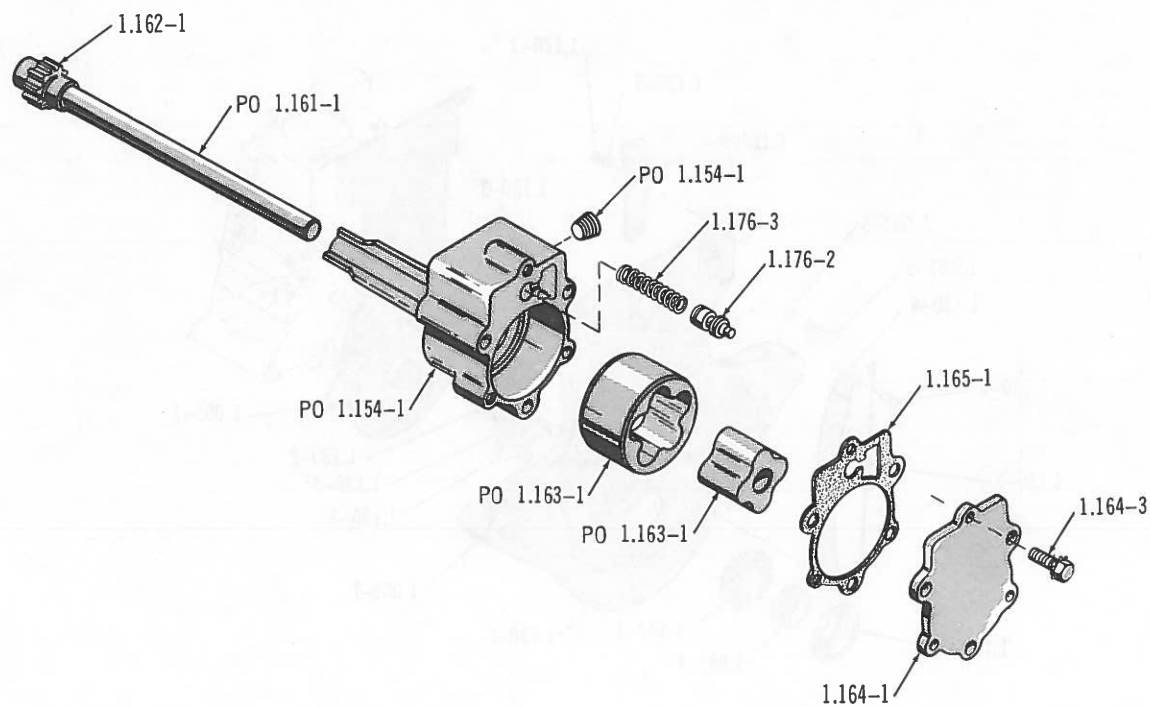 


OIL PUMP ... SIX (230)

 4423

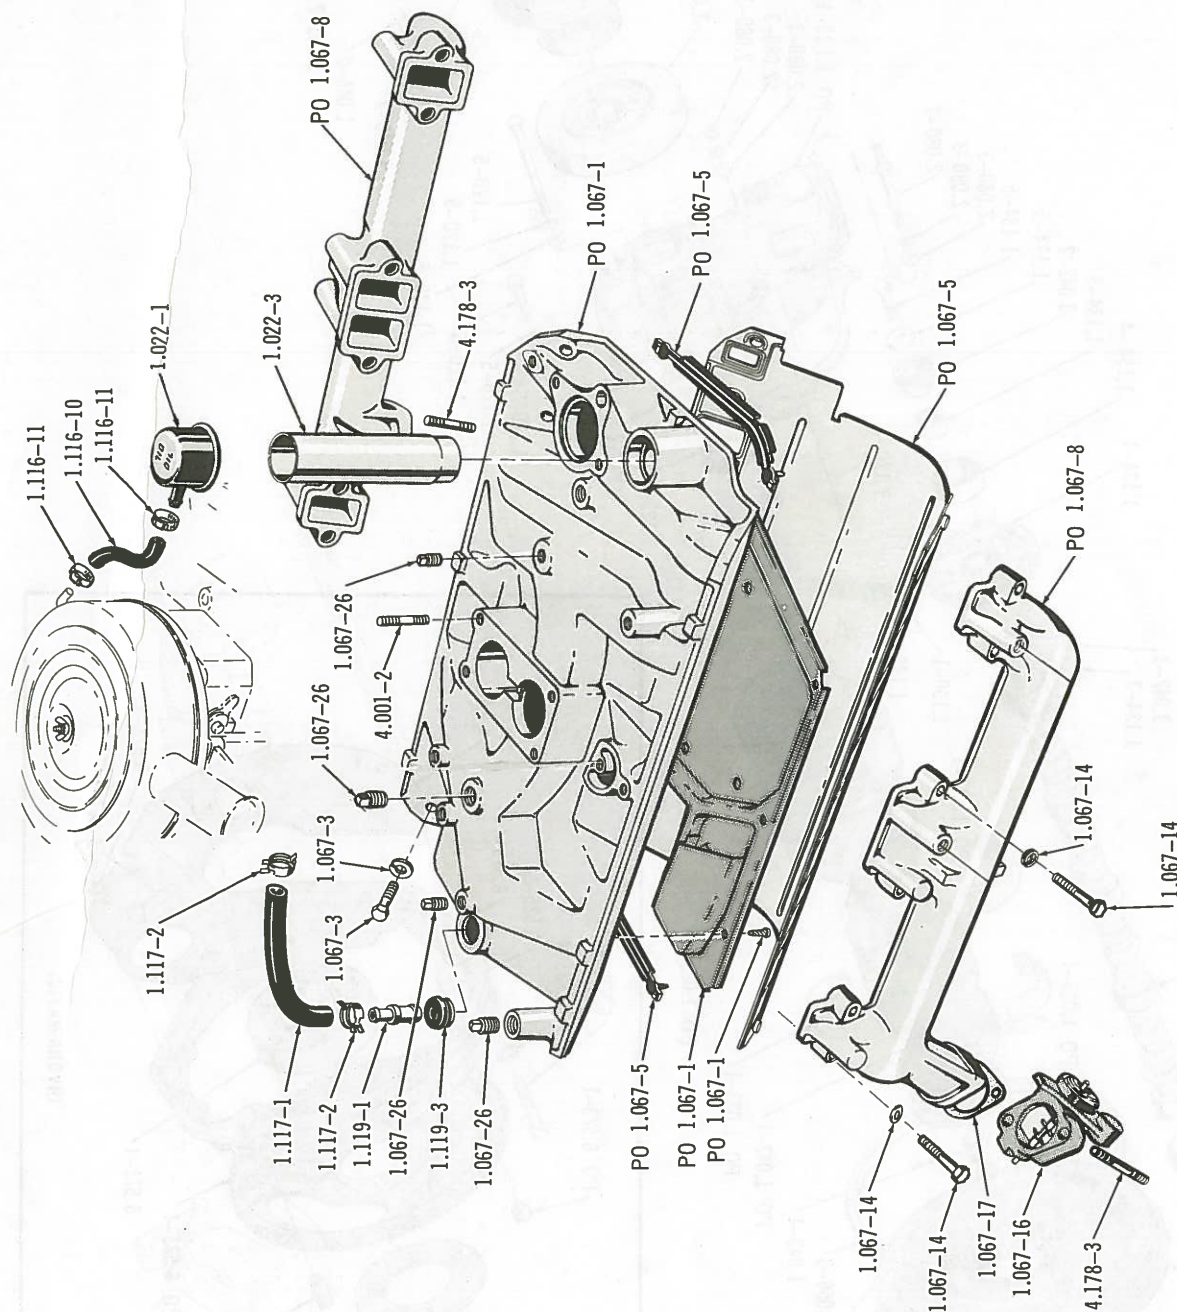


MANIFOLDS . . . V8 - 1971 (304)(360)

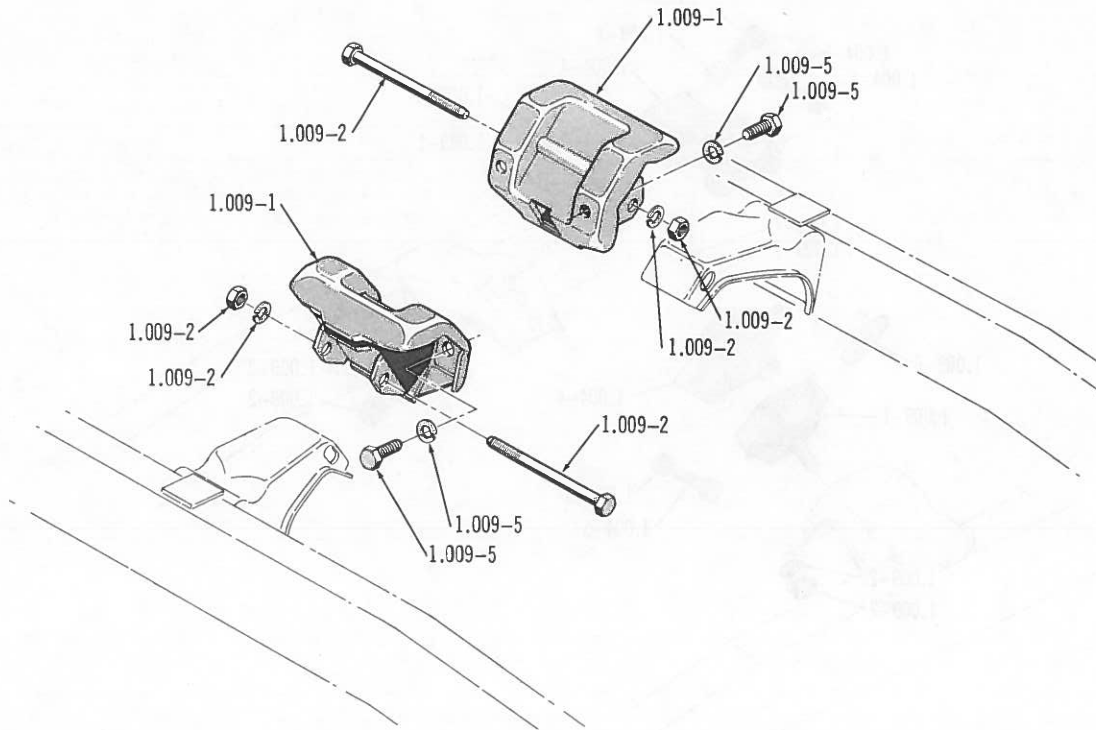 


ENGINE FRONT MOUNTING ... V8 (350)

 
4363

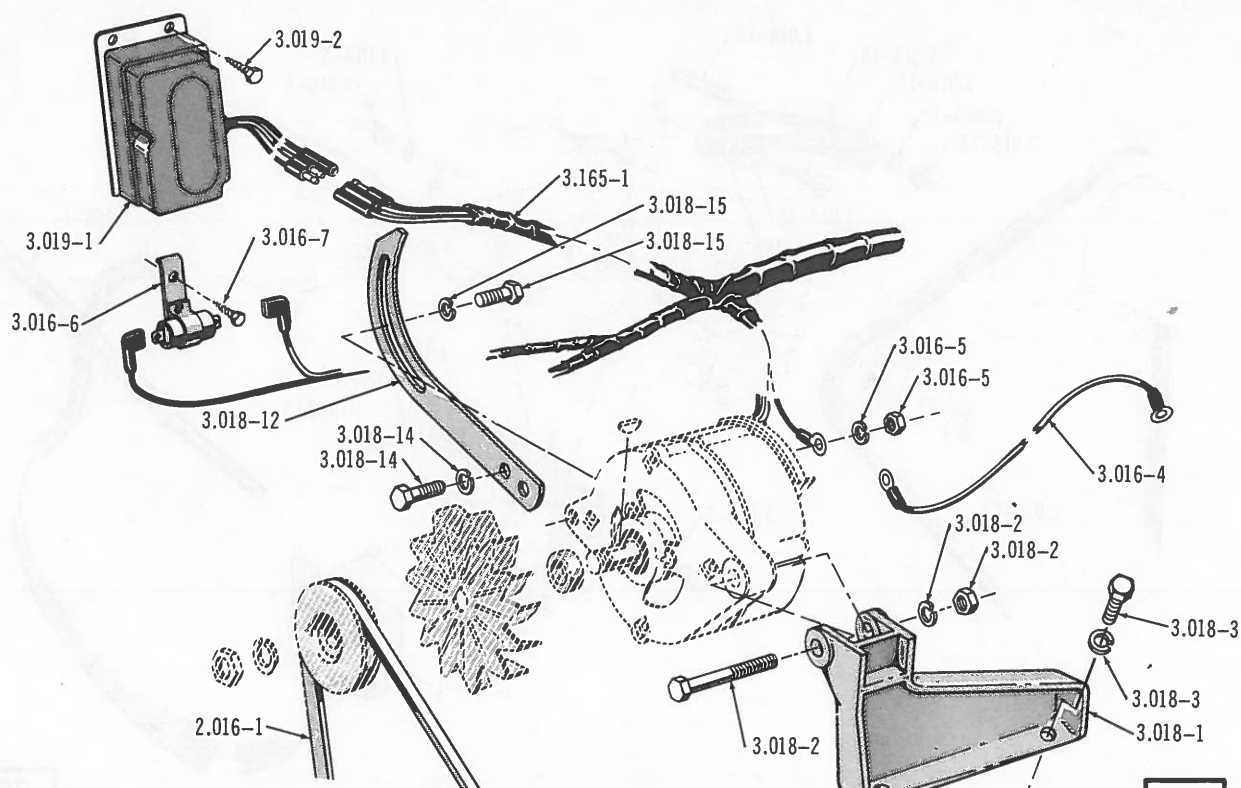

ALTERNATOR MOUNTING ... V8 (327)

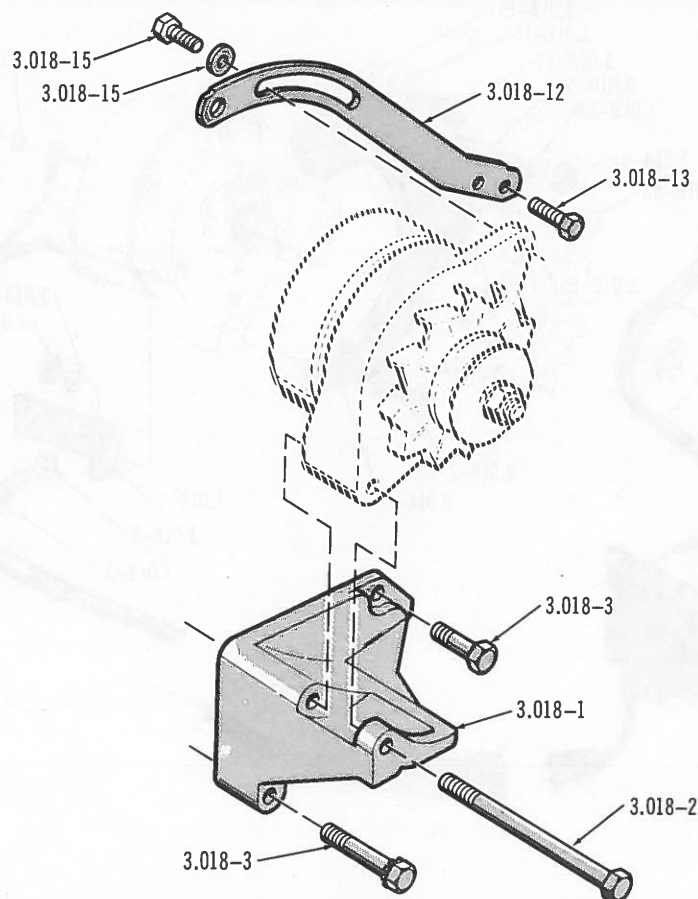 


ALTERNATOR MOUNTING ... V8 (350)

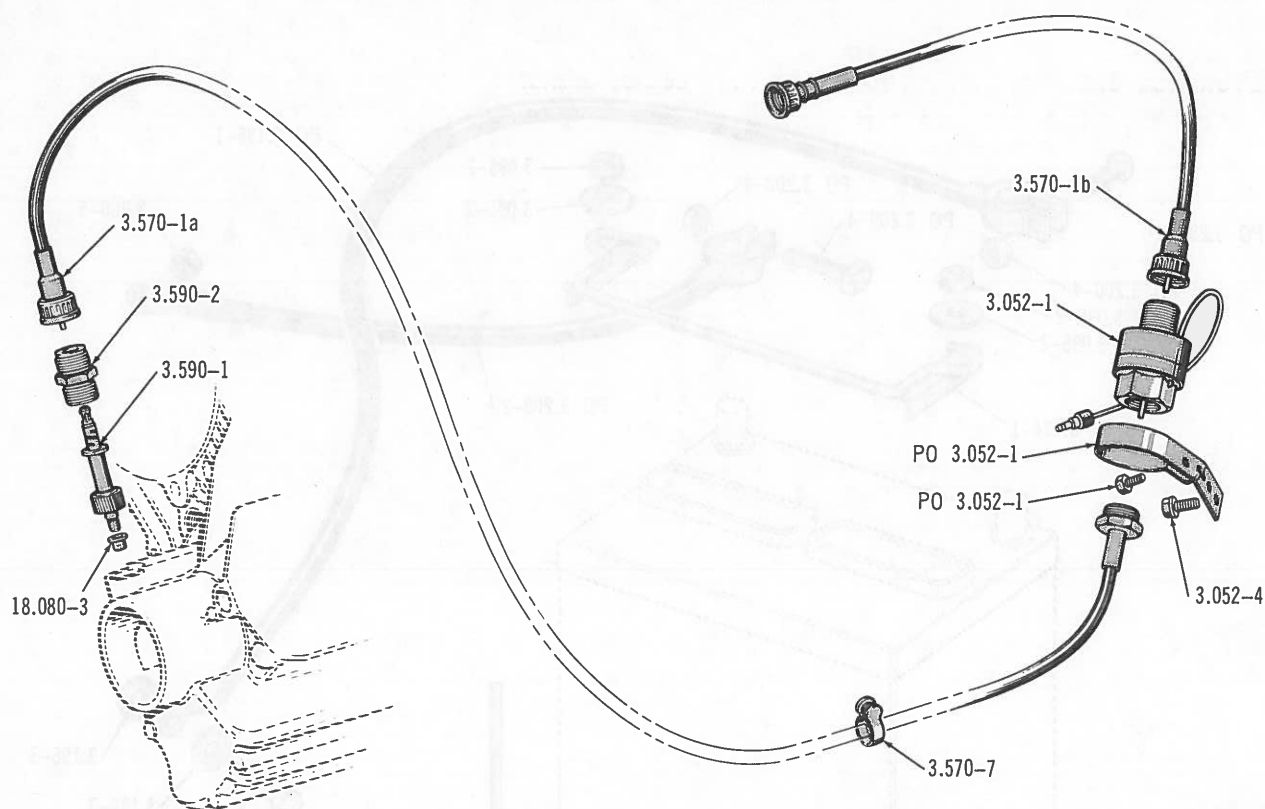 

SPEEDOMETER CABLES AND SWITCH . . . 1973 (WAT)

 
5688

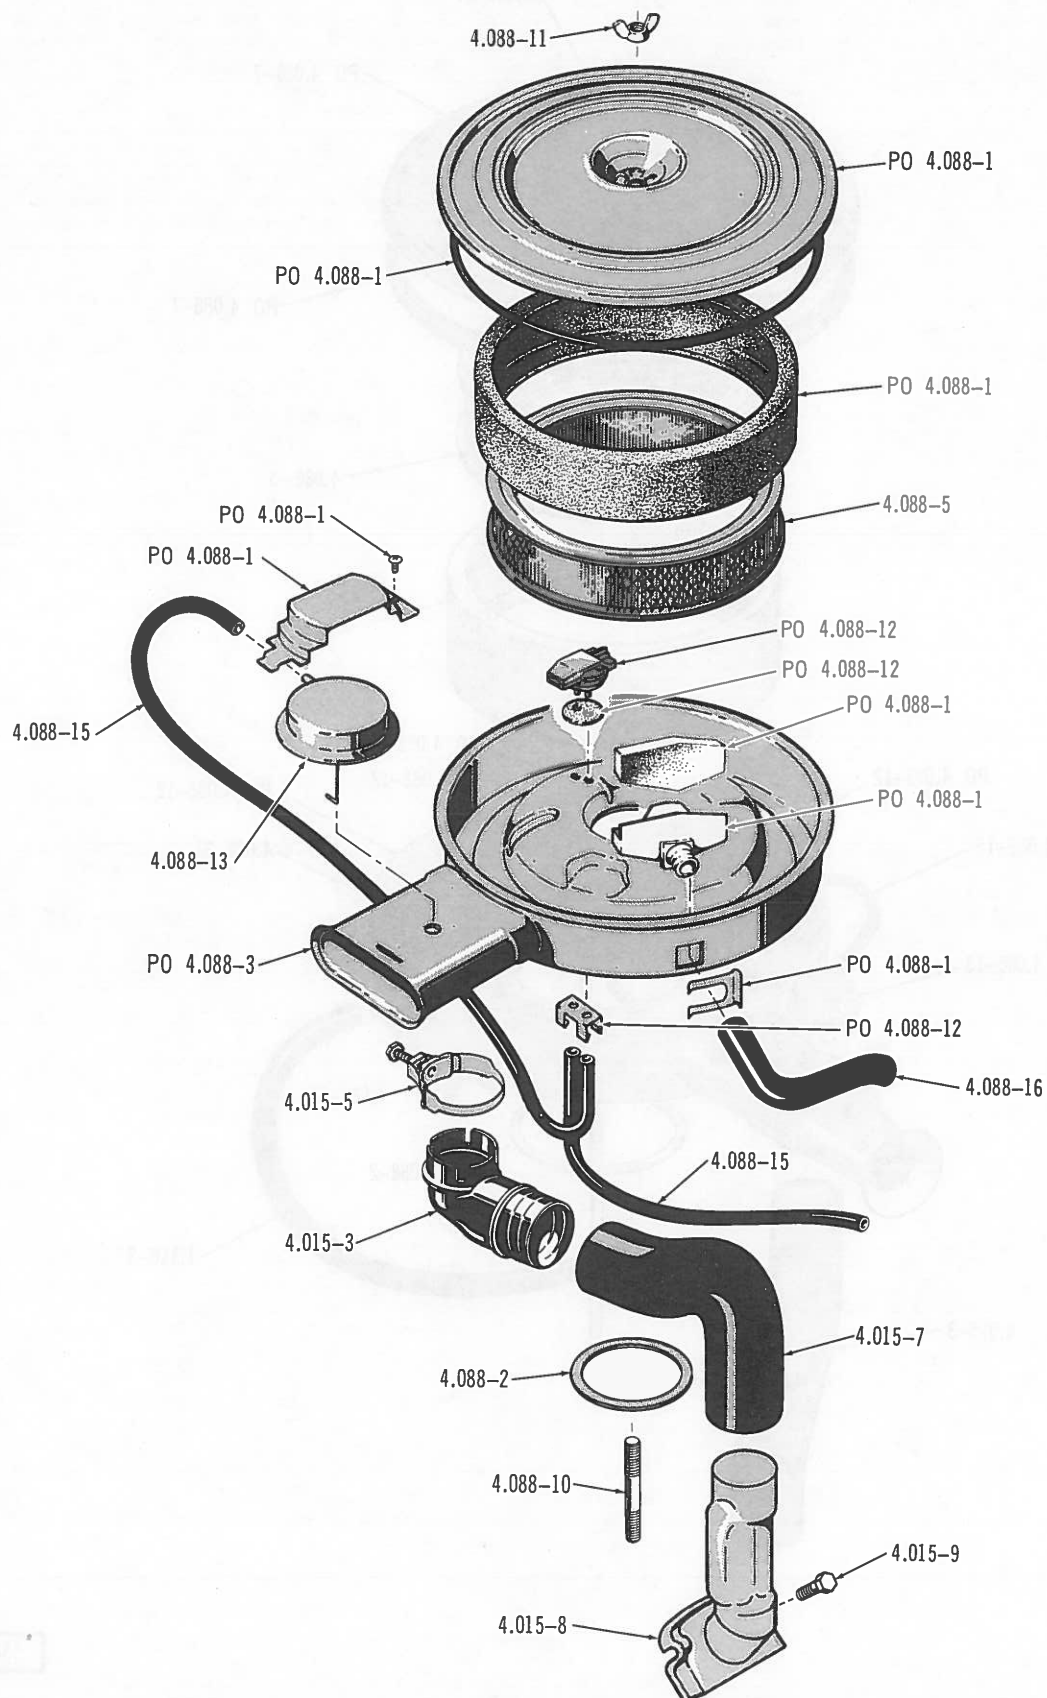


4382

CARBURETOR AIR CLEANER (DRY TYPE) ... V8 (350)

 
4414

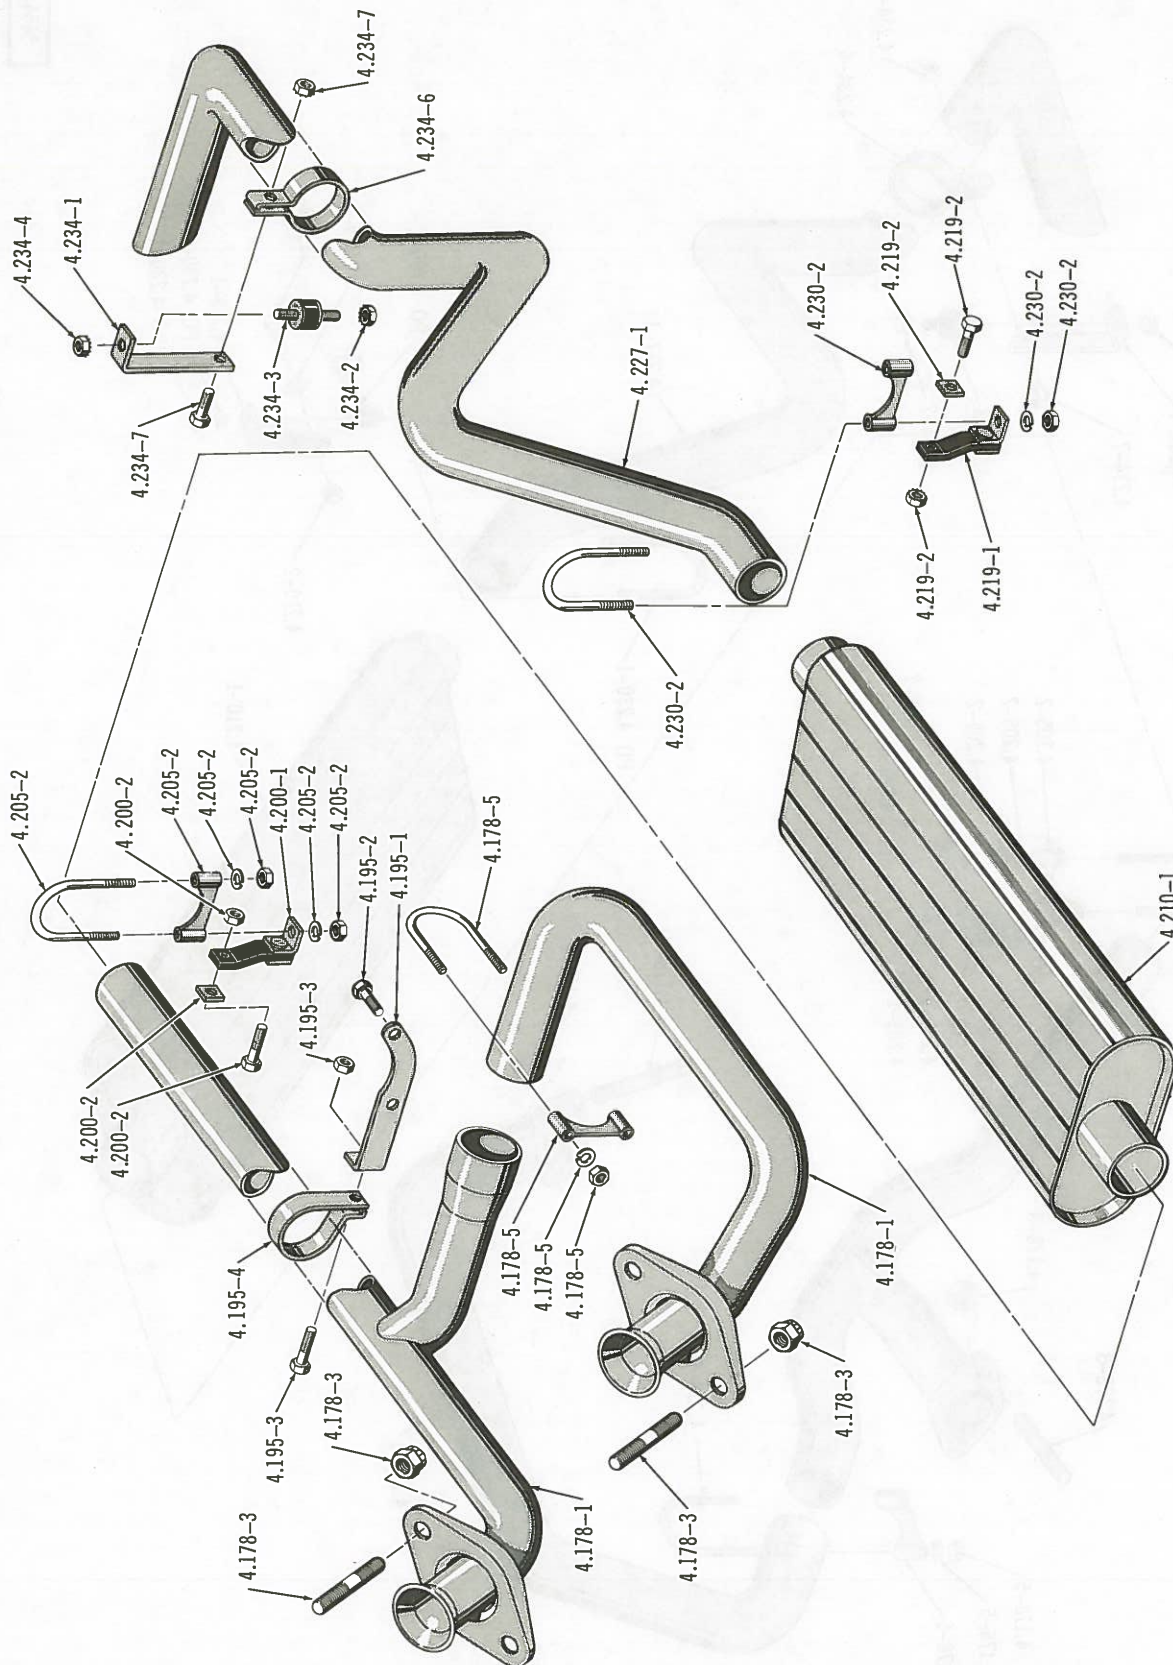


EXHAUST SYSTEM - WAGONEER ... V8 (350)

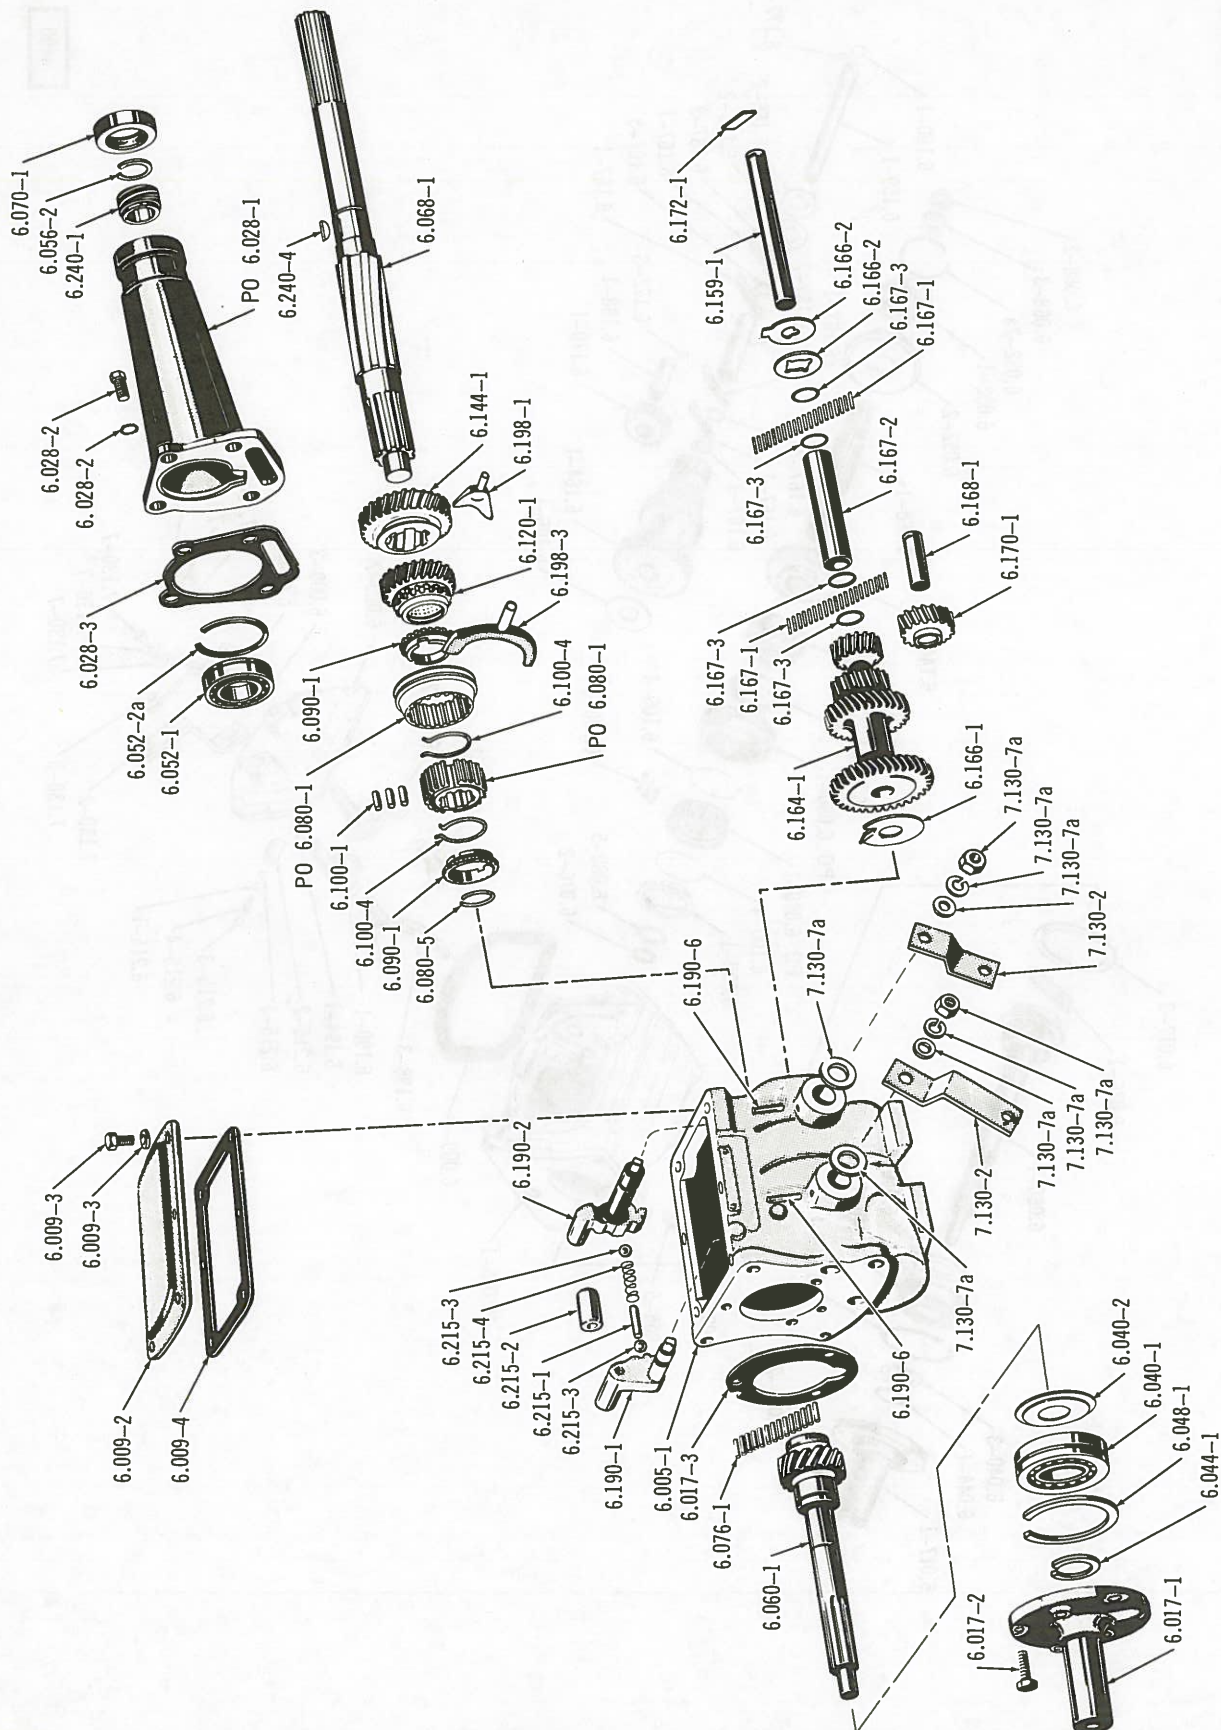 

TRANSMISSION ASSEMBLY ... T86 (2WD)

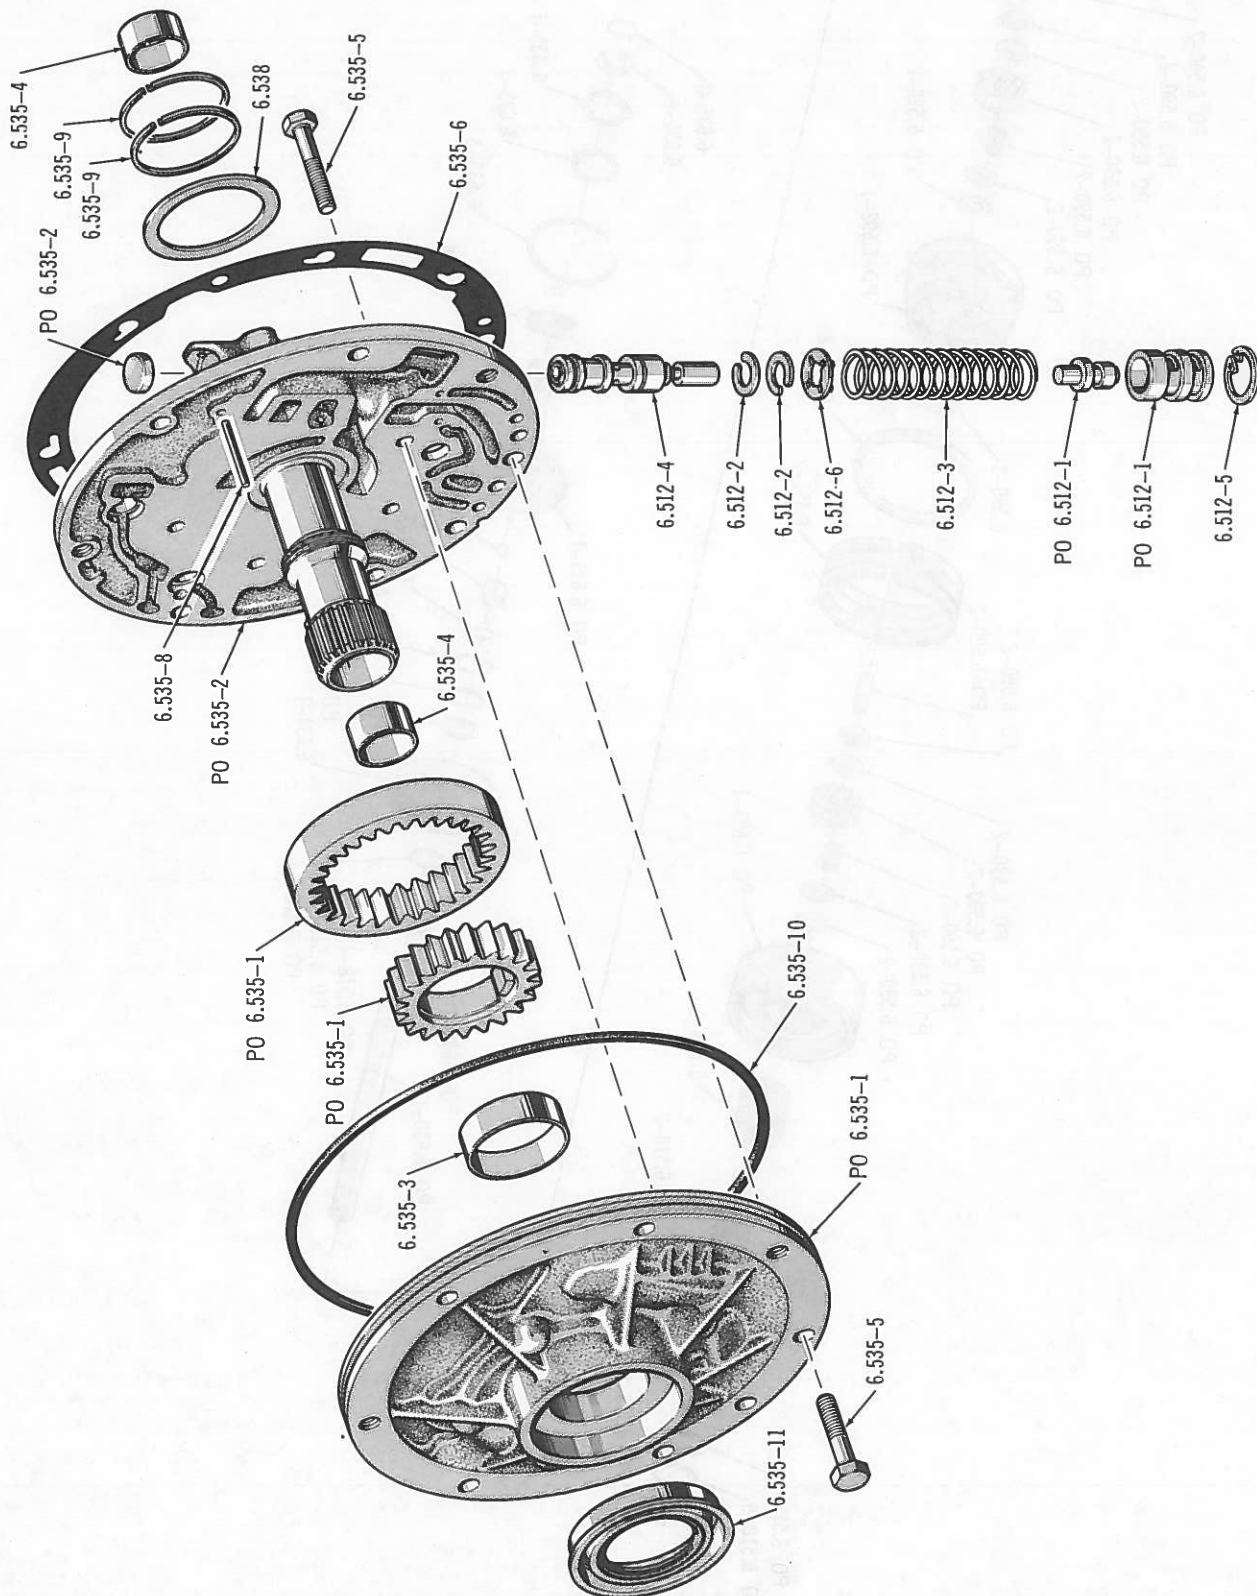 


HYDRA-MATIC PUMP ASSEMBLY

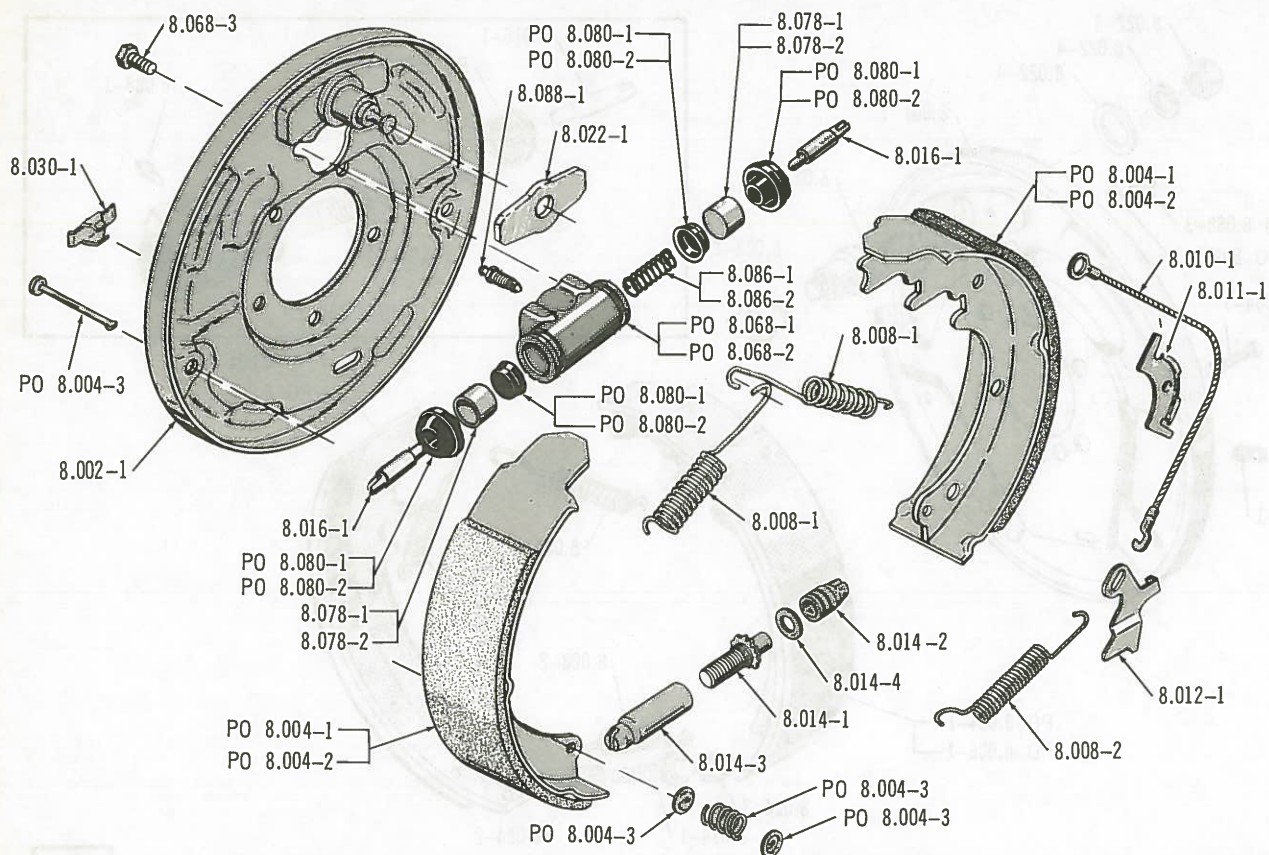 

WHEEL BRAKE ASSEMBLY (SELF ADJUSTING)

 
4368

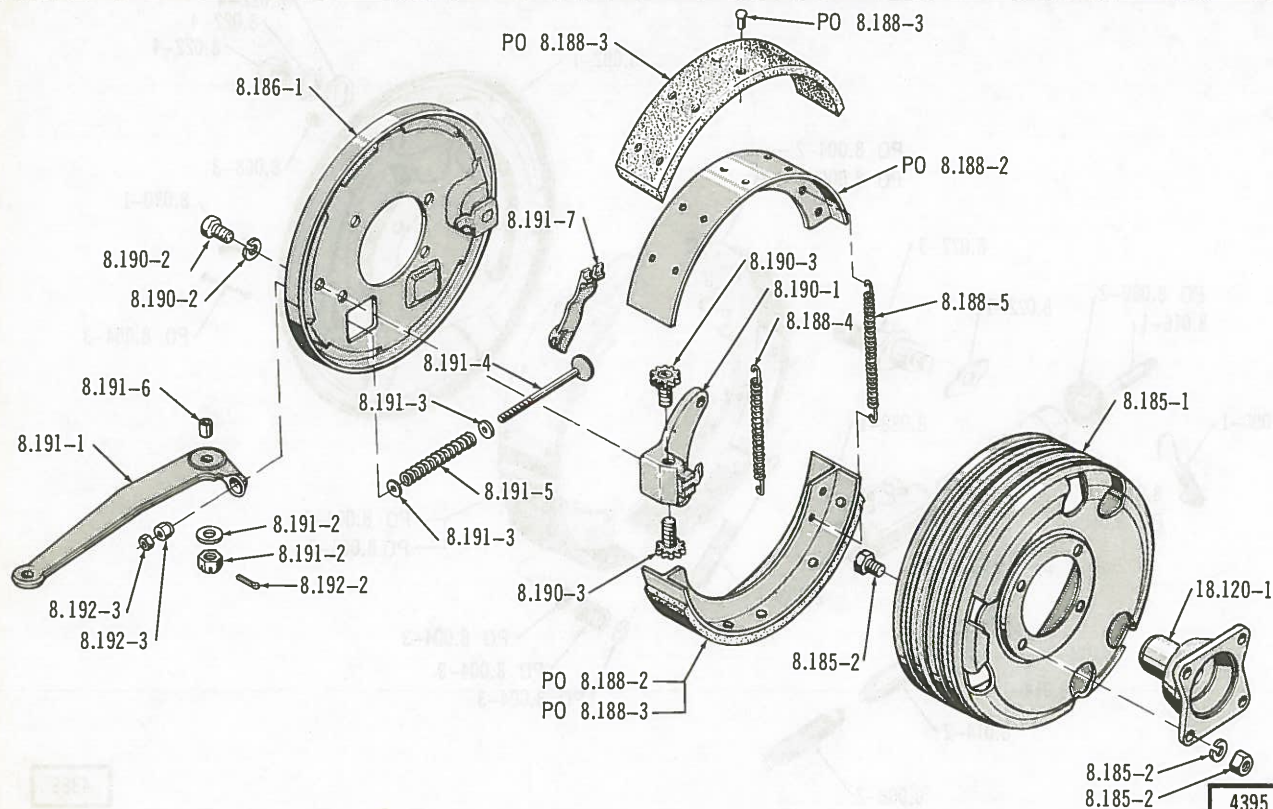

TRANSMISSION BRAKE


4395

 5664

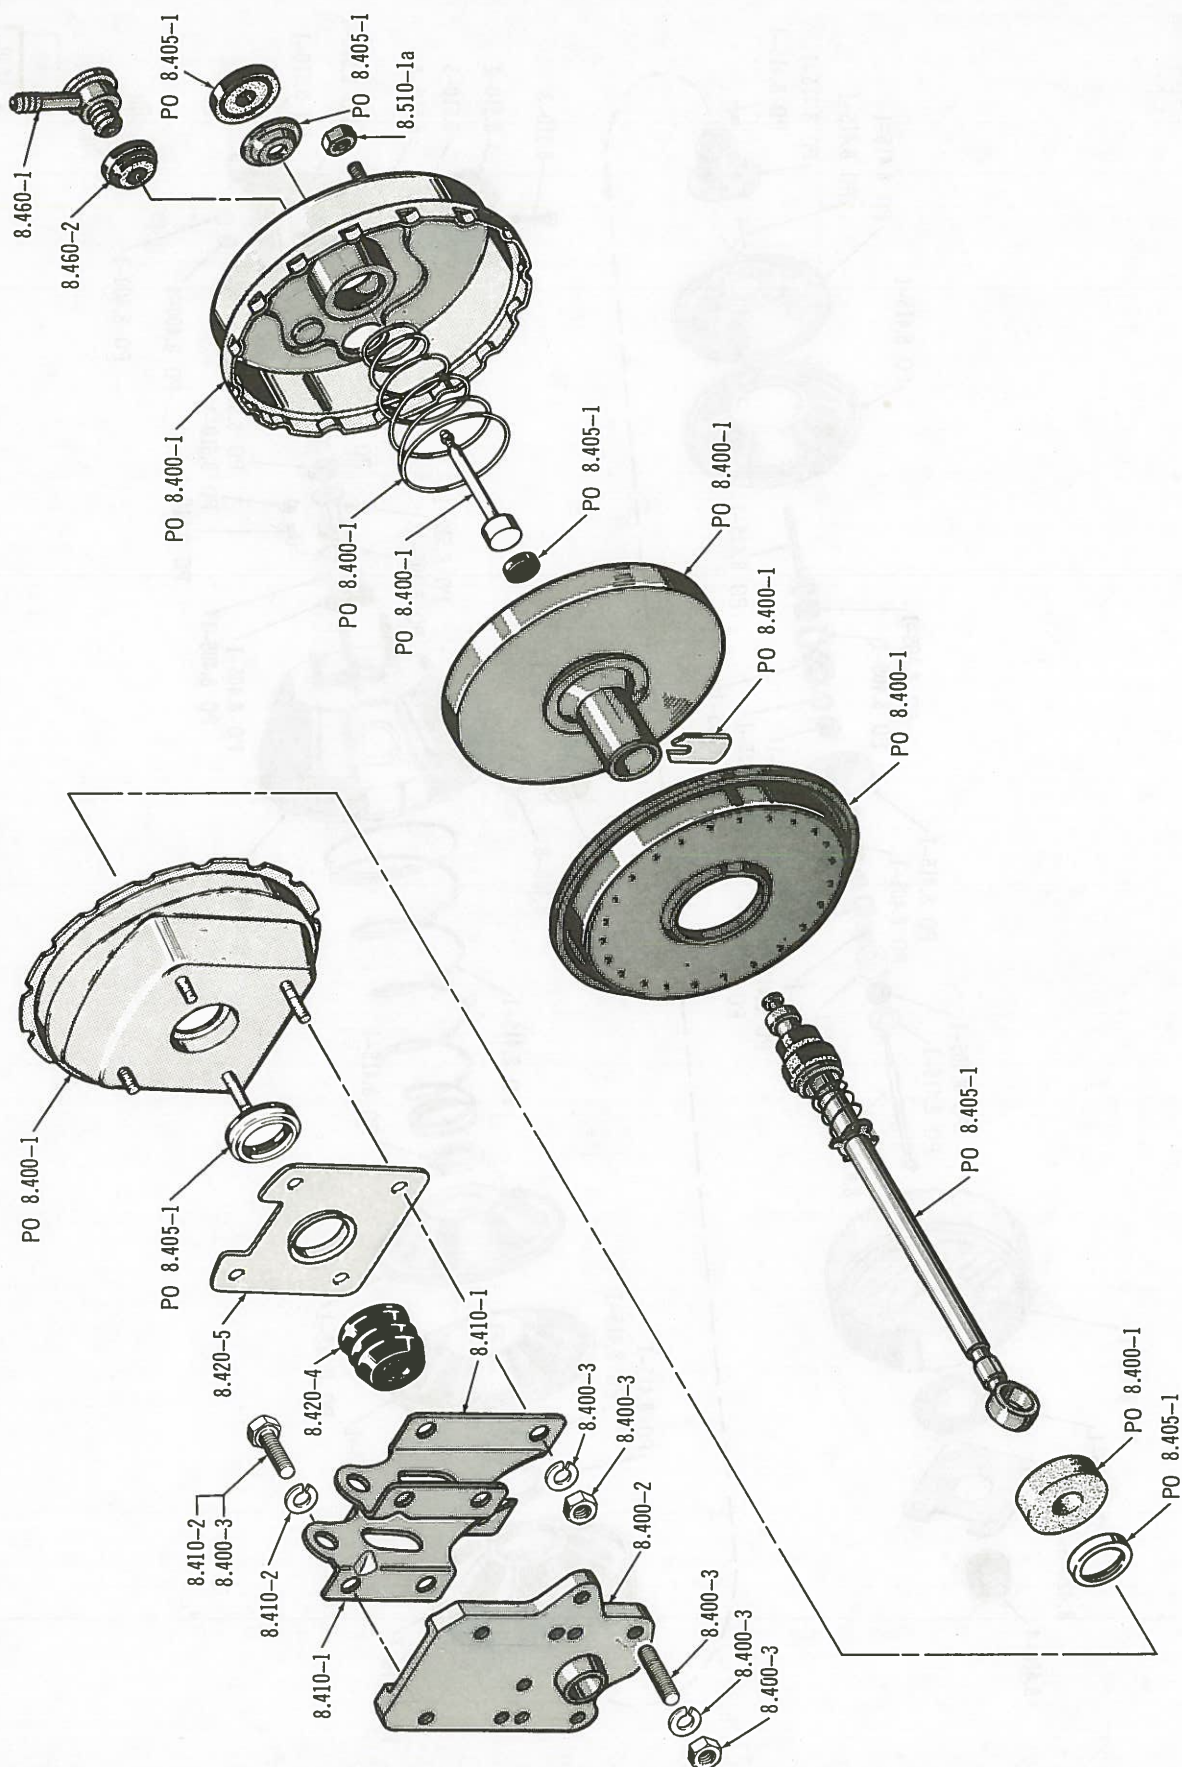


POWER BRAKE POWER UNIT . . . SIX (E/230), V8

 4354

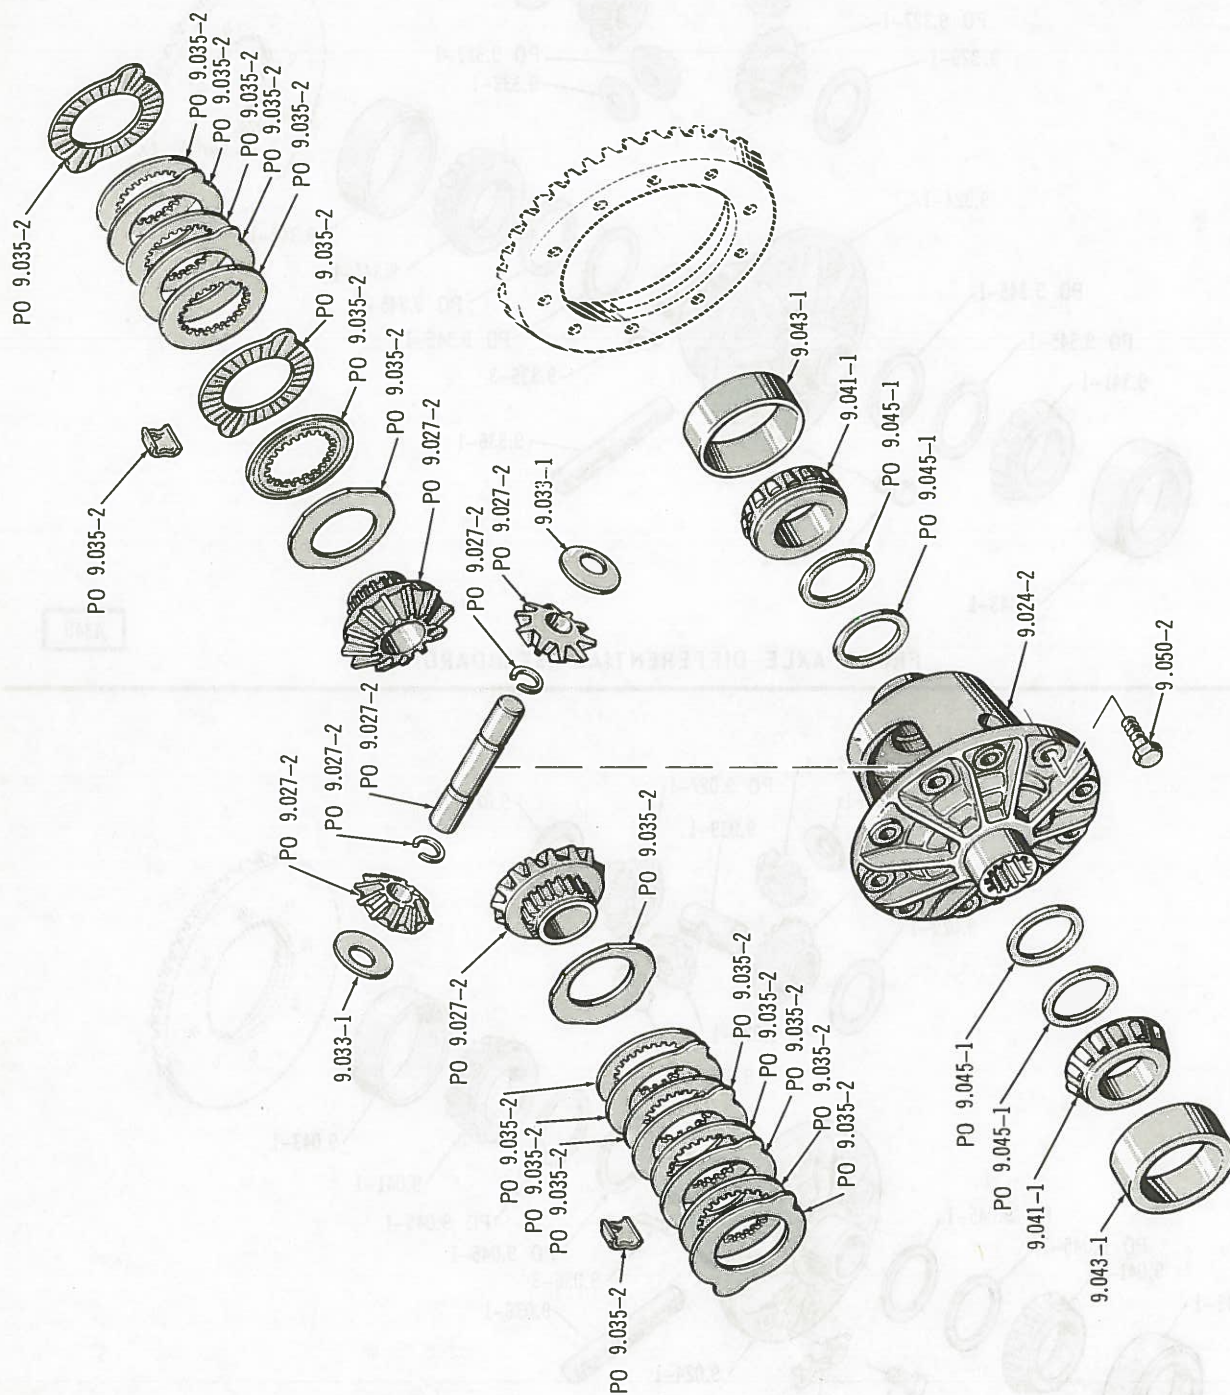


REAR AXLE DIFFERENTIAL (TRAC-LOK)

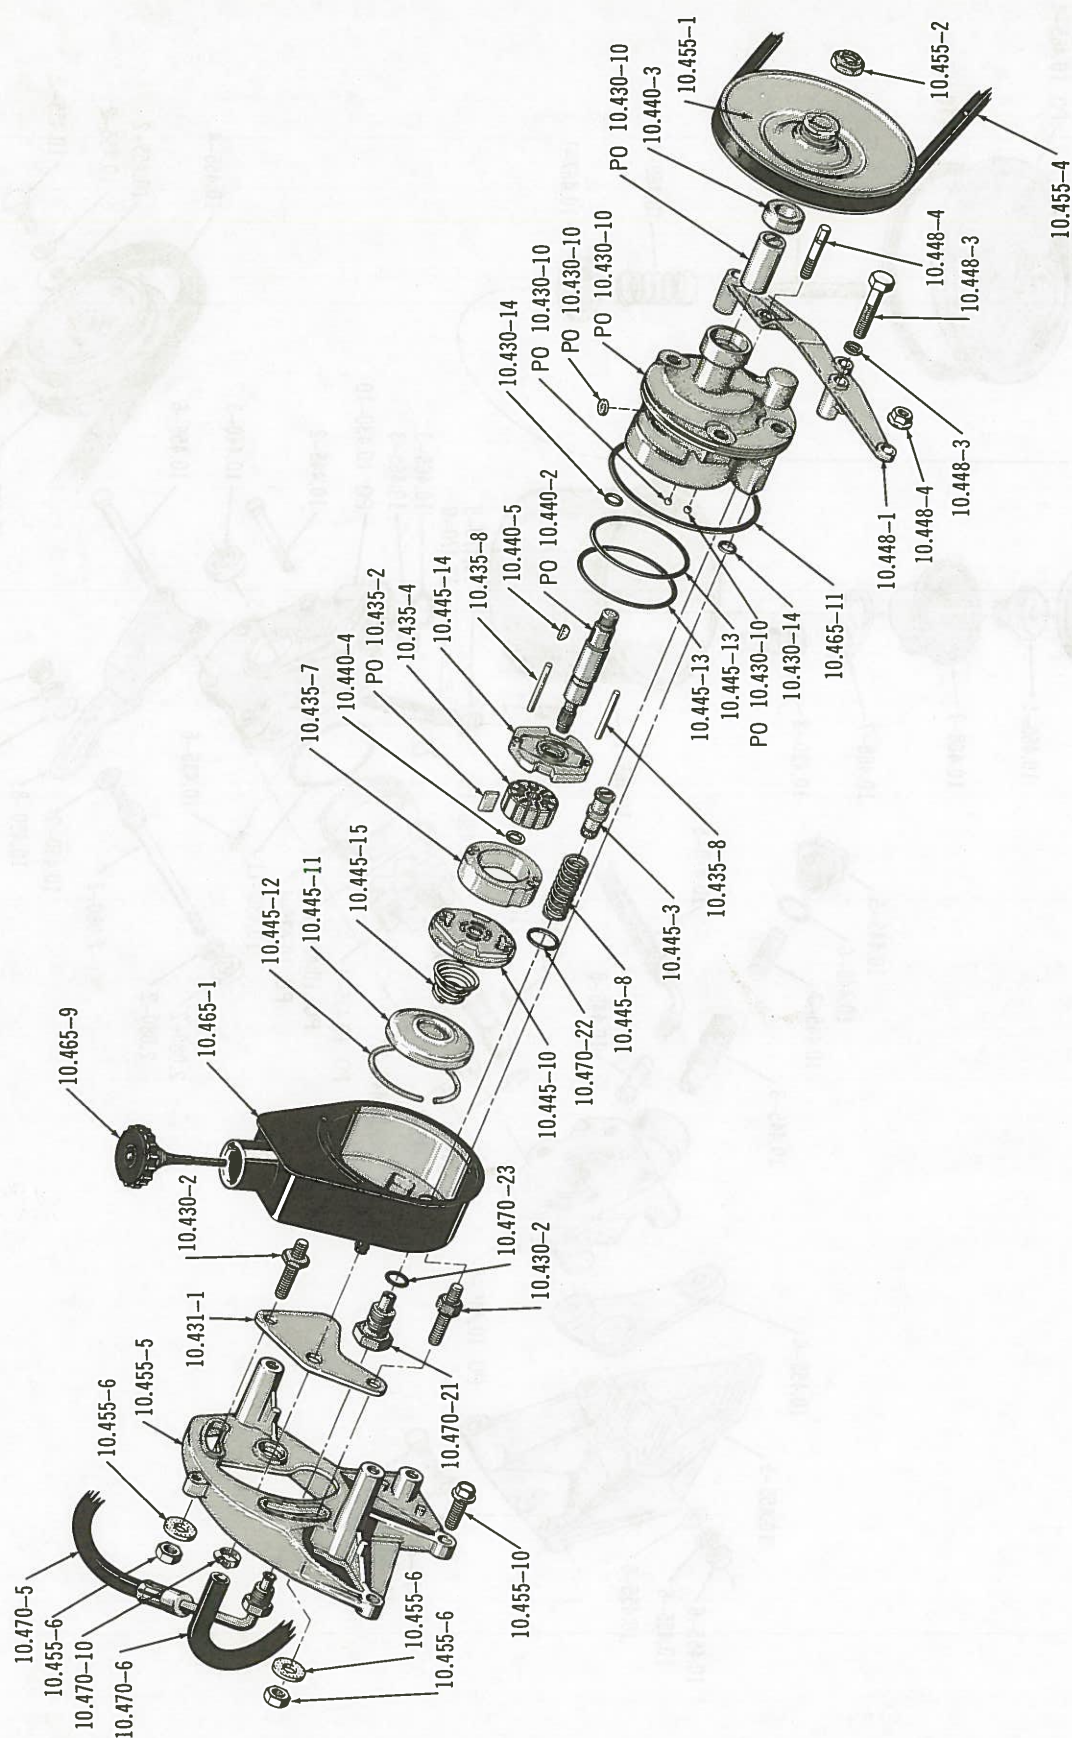 


5680

 POWER STEERING PUMP, RESERVOIR AND HOSES . . . 1973 (V8)

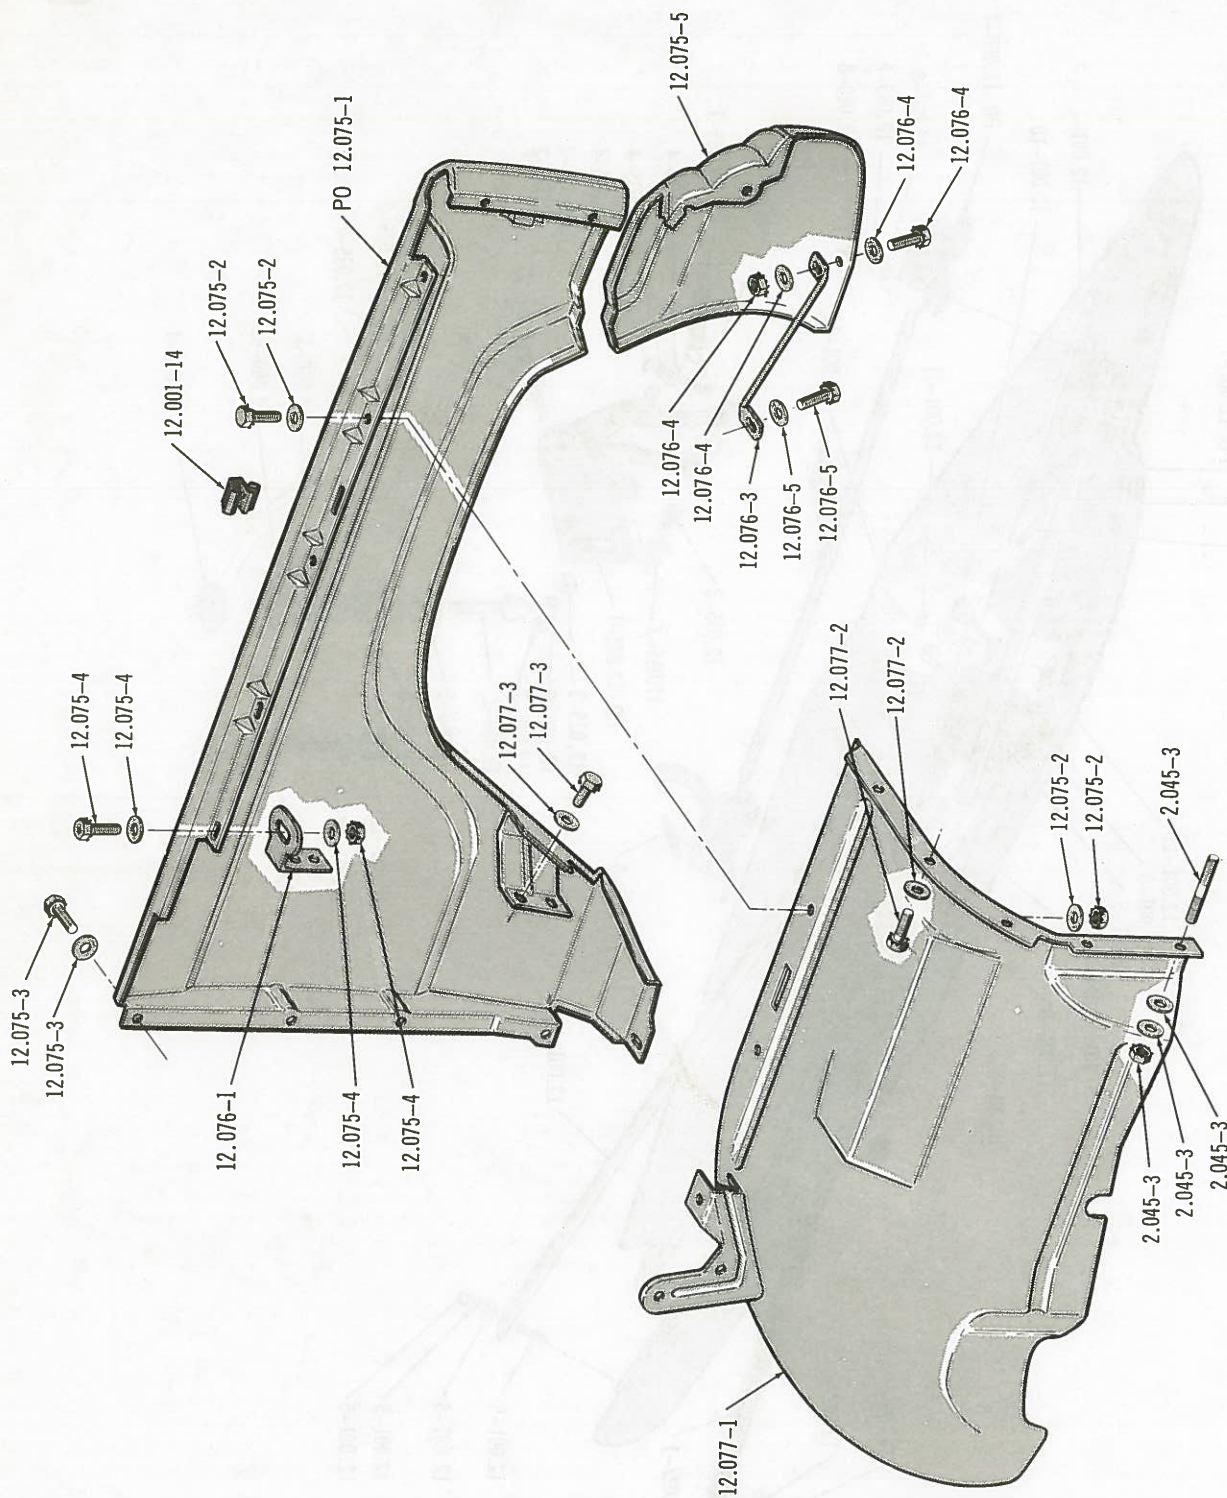


FRONT FENDER AND ATTACHING PARTS

 4468

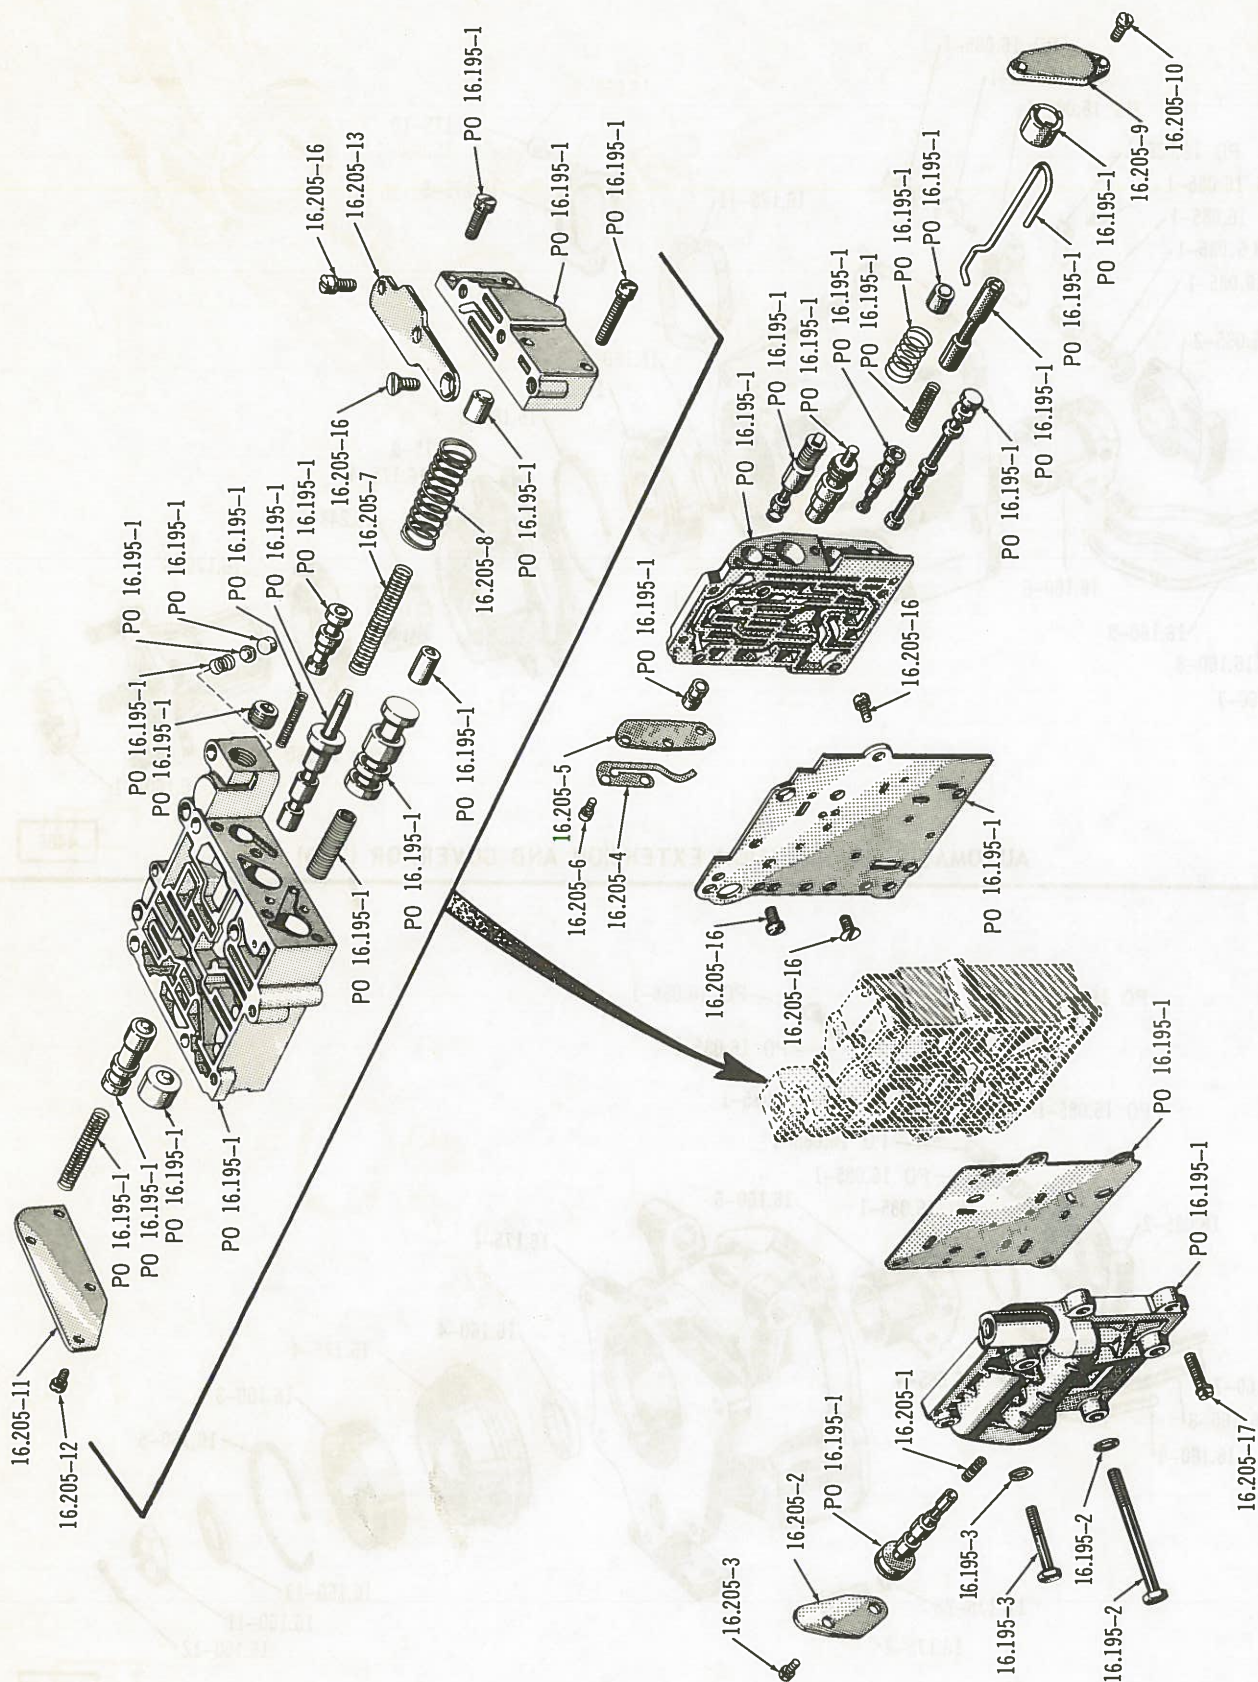


AUTOMATIC TRANSMISSION VALVE BODY ASSEMBLY

 4456

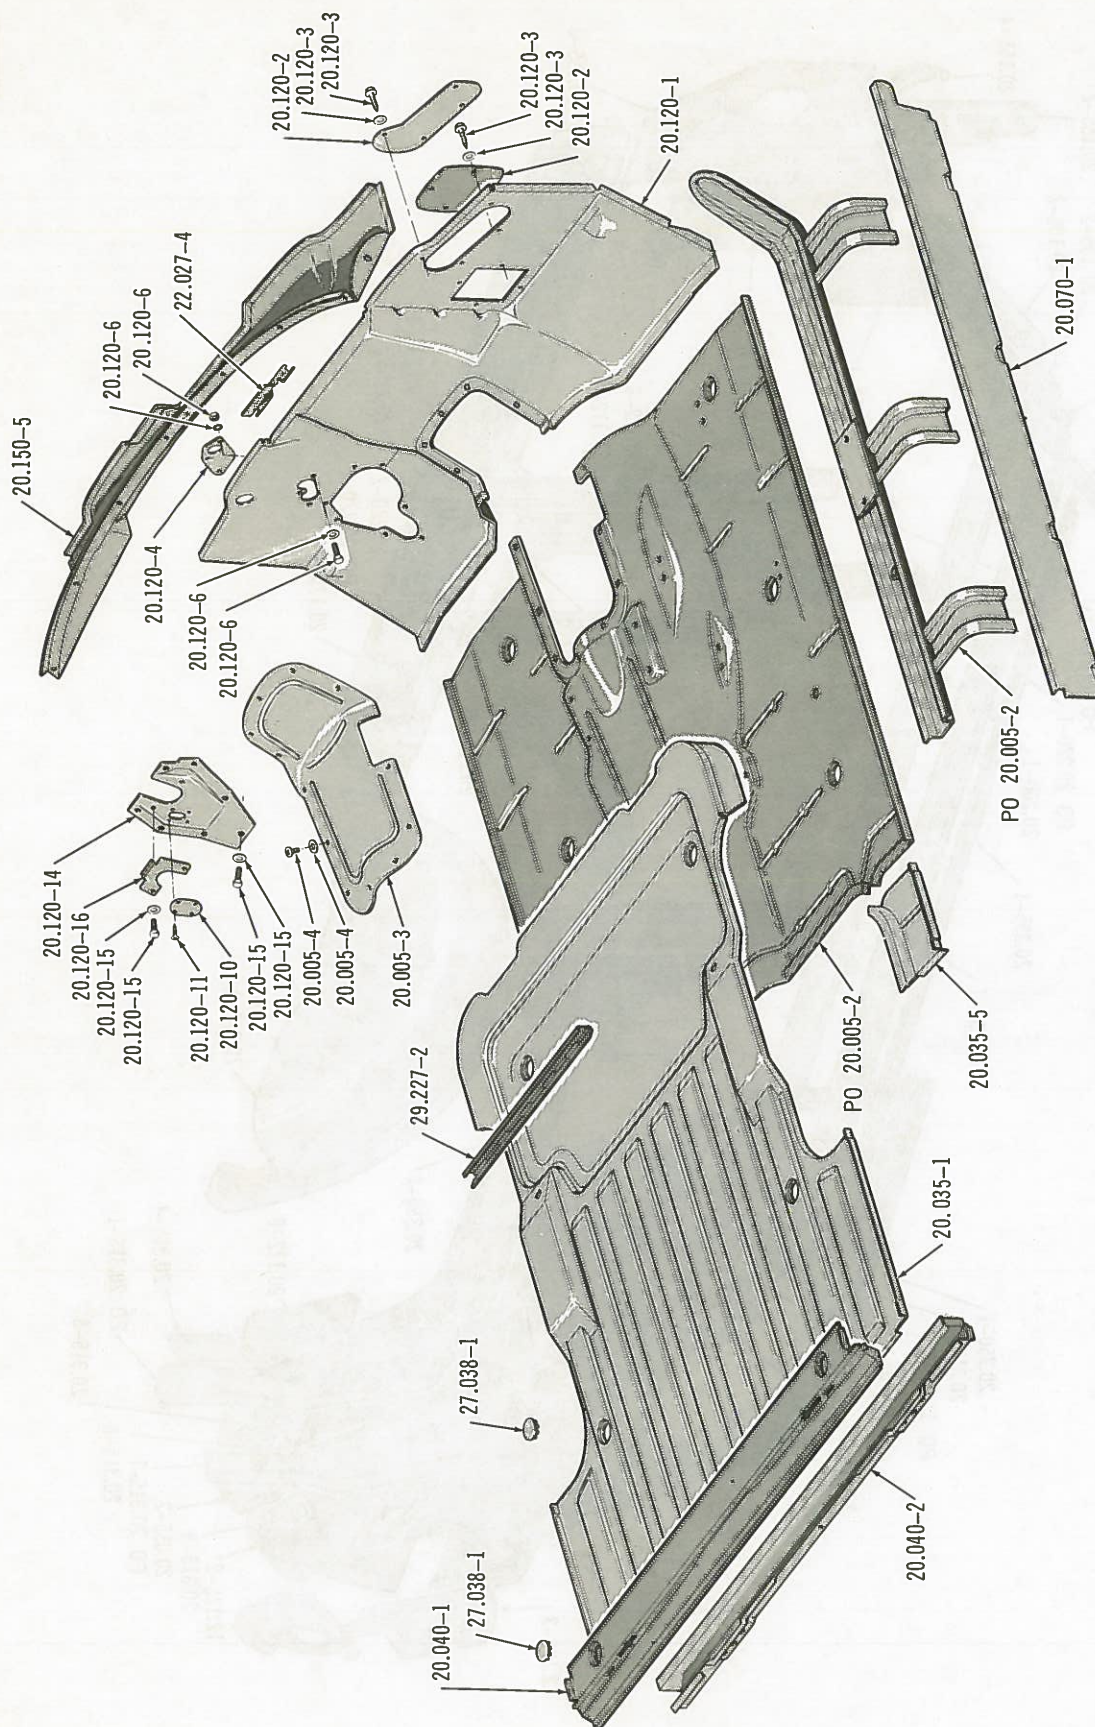


FLOOR PANS AND COWL TOP ... WAGONEER

 
4486

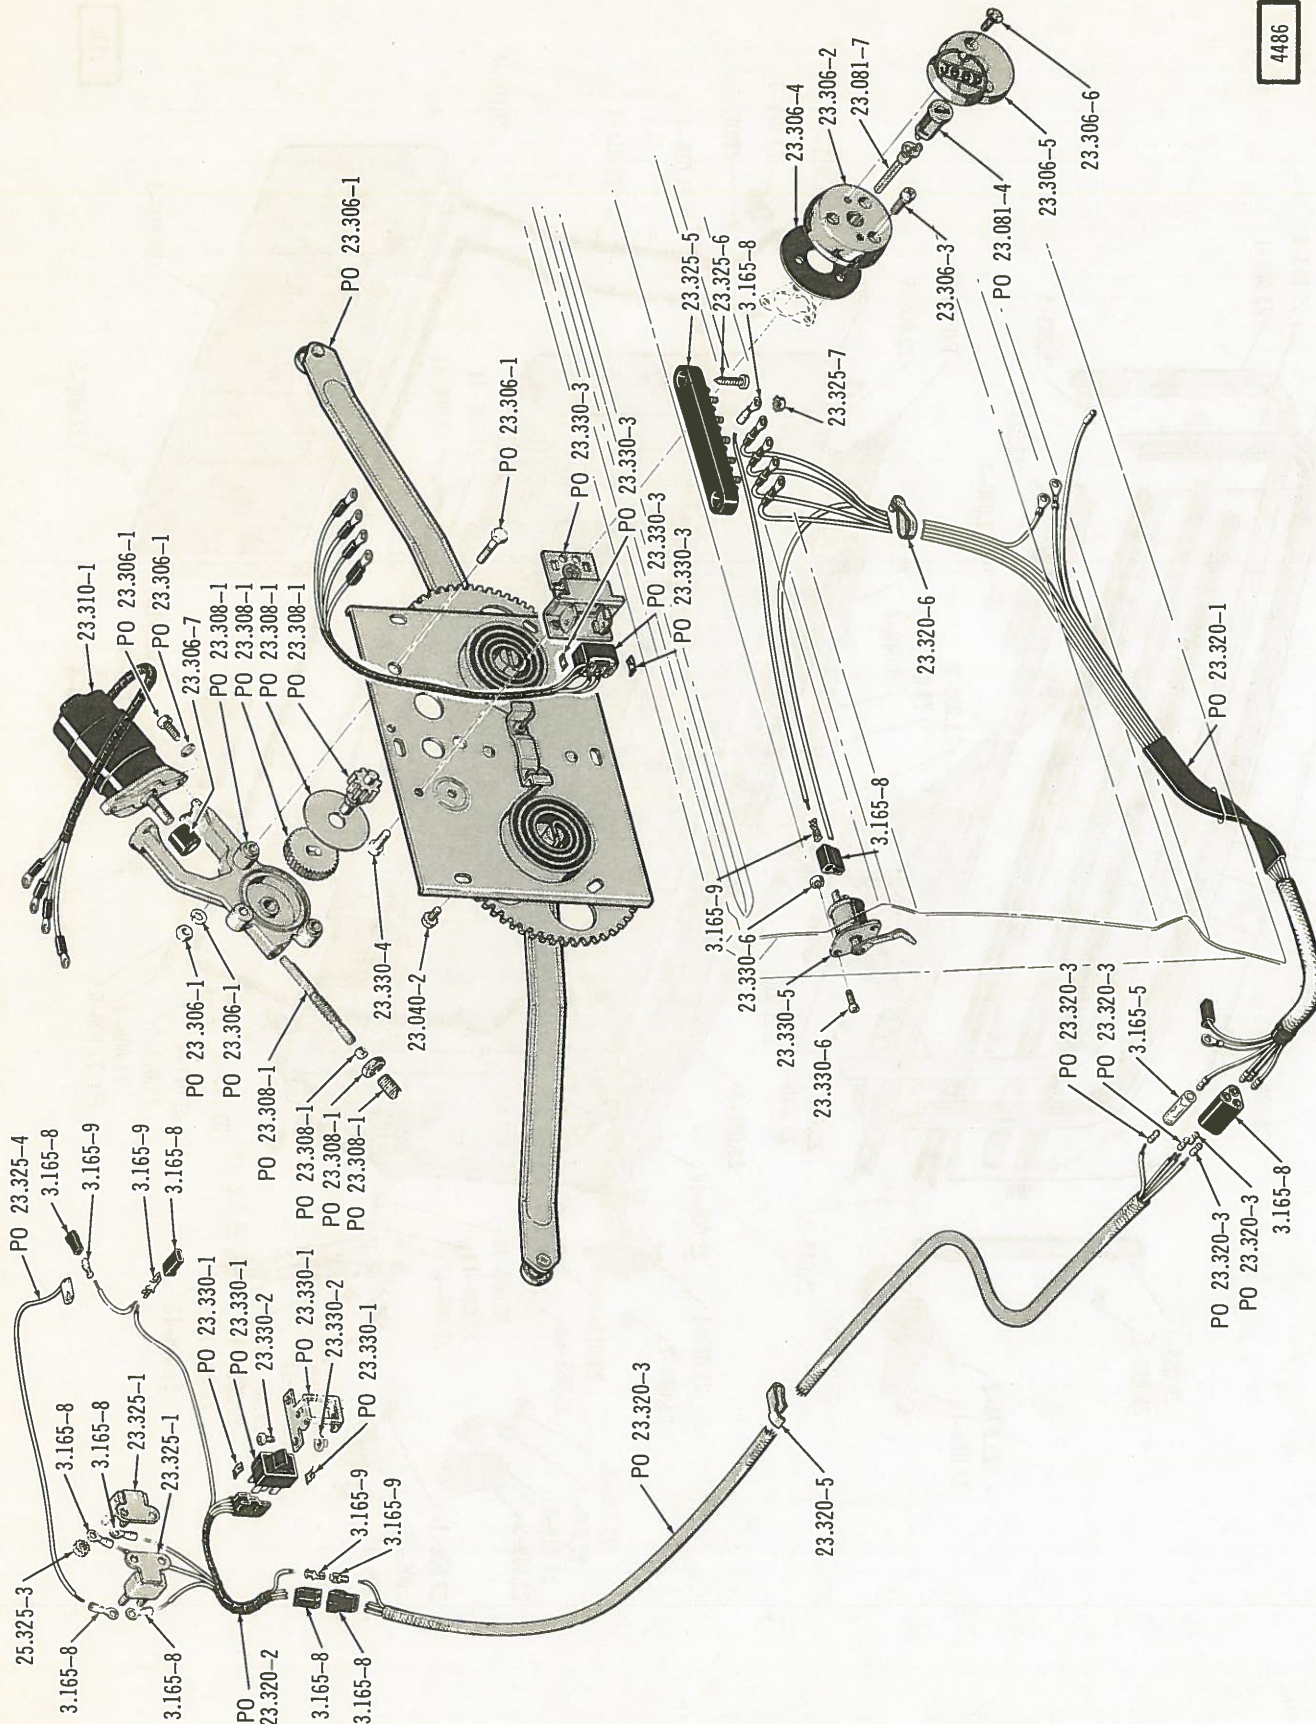

 ELECTRIC TAILGATE REGULATOR AND WIRING... WAGONEER



4473

 

4472



1.041

ENGINE

1.041-7 ATTACHING PARTS, Plate To Deck

NUT, Hexagon.....	ALL	230.....	17.	2	G120368
STUD.....	ALL	230.....		2	928 884
WASHER, Lock.....	ALL	230.....	17.	2	G120214

1.041-8 ATTACHING PARTS, Plate To Cylinder Block

SCREW.....	ALL	327.....	17.	3	G179814
WASHER, Lock.....	ALL	327.....	17.	3	G138485

1.041-9 TUBE, Camshaft Deck Oil Line

ALL	230.....		1	931 221
-----	----------	-------	---	---------

1.041-10 CLIP, Oil Line To Cam Deck

ALL	230.....		1	932 052
-----	----------	-------	---	---------

1.041-11 TUBE, Camshaft Oil Line (Head To Block)

ALL	230.....		1	928 954
-----	----------	-------	---	---------

1.042-1 CRANKSHAFT ASSEMBLY

ALL	230 (-.010-Domestic-LAT).....		1	992 983
ALL	230 (-.010-Domestic-LAT)...(Less Bearings).....		1	994 756
ALL	230 (WAT-* 1-11)...(Incl. Drive Plate).....		1	938 165
ALL	230 (WAT-* 1-12)...(Incl. Drive Plate).....		1	938 074
ALL	232 (Up To Engine Code 10: * 1-13).....	27		320 8627
ALL	232 (WST-Starting With Engine Code 10 And Incl. 1971: * 1-13).....	27		320 8794
ALL	232 (WHT-Starting With Engine Code 10 And Incl. 1971: * 1-13).....	27		448 5658
ALL	258 (WST-1971: * 1-13).....	27		448 8665
ALL	258 (WHT-1971: * 1-13).....	27		812 0051
ALL	258 (1972/).....	27		812 0508
ALL	304-360 (1971).....	28		448 7237
ALL	304-360 (1972/).....	28		812 0509
ALL	327.....		1	320 0303
ALL	350.....		1	137 8346
ALL	230 (Export-LAT)...(Less Bearings).....		1	938 166

1.043-1 BUSHING, Crankshaft Front (Bearing, Clutch Shaft Front)

ALL	230 (LHT-For 3/4" Hole).....		1	939 896
ALL	230 (LHT-For 13/16" Hole).....		1	K 729 521
ALL	230 (WHT).....		1	910 504
ALL	232-258 (LHT-1971 And Prior).....		1	317 4730
ALL	232-258 (WHT-1971 And Prior).....		1	318 1430
ALL	232-258-304-360 (1972).....		1	321 3751
ALL	304-360 (1971).....		1	317 4730
ALL	327.....		1	59 789
ALL	350.....		1	375 2487

1.043-2 WICK, Crankshaft Bushing Oil

ALL	232-258-304-360 (WST)(W4ST).....		1	318 9314
-----	----------------------------------	-------	---	----------

1.045-1 DAMPER, Crankshaft Vibration (Balanced)

ALL	230.....		1	931 170
ALL	232 (1970 And Prior).....		1	317 7345
ALL	232-258 (1971/).....		1	321 1894
ALL	304.....		1	319 6924
ALL	327.....		1	315 8527
ALL	350.....		1	137 9555
ALL	360 (1971/1972).....		1	319 6925
ALL	360 (1973).....		1	321 6084

ENGINE

1.077-6 DEFLECTOR, Intake Or Exhaust Valve Stem

ALL	230...(Incl. 12 Seals)	1	936 983
ALL	232-258 (Rubber-1972 And Prior)	6	317 2320
ALL	258 (1973)	6	319 6824
ALL	304-360 (Used With Std. Valves-1971/1972)...(Incl. Retainer)	8	318 5148
ALL	304-360 (Used With .003, .015, .030 Valves-1971/1972)	8	320 8125
ALL	360 (Used With Std. And .003 Oversize Valves-1973)	8	321 8976
ALL	360 (Used With .015 Oversize Valves-1973)	8	321 8977
ALL	360 (Used With .030 Oversize Valves-1973)	8	321 8978

1.078-1 VALVE, Exhaust

ALL	(Std.) 230	6	938 192
ALL	(Std.) 232-258 (1965/1971)	6	317 2328
ALL	(Std.) 258 (1972: * 1-1)	6	317 2328
ALL	(Std.) 258 (1972: * 1-2)	6	318 2584
ALL	(Std.) 258 (1973)	6	321 8730
ALL	(Std.) 304 (1971/1972)	8	318 2584
ALL	(Std.) 327	8	317 2328
ALL	(Std.) 350 (1968/1970)	8	138 1658
ALL	(Std.) 350 (1971)	8	123 7653
ALL	(Std.) 360 (1971/1972)	8	321 1218
ALL	(Std.) 360 (1973)	8	321 8731
ALL	(.003) 232-258 (1965/1971)	AR	317 5123
ALL	(.003) 258 (1972: * 1-1)	AR	317 5123
ALL	(.003) 258 (1972: * 1-2)	AR	320 7388
ALL	(.003) 258 (1973)	6	321 8813
ALL	(.010) 350 (1968/1970)	8	138 4615
ALL	(.010) 350 (1971)	8	123 7655
ALL	(.015) 232-258 (1965/1971)	AR	320 5166
ALL	(.015) 258 (1972: * 1-1)	AR	320 5166
ALL	(.015) 258 (1972: * 1-2)	AR	320 7389
ALL	(.015) 258 (1973)	6	321 8814
ALL	(.030) 232-258 (1965/1971)	AR	320 5167
ALL	(.030) 258 (1972: * 1-1)	AR	320 5167
ALL	(.030) 258 (1972: * 1-2)	AR	320 7390
ALL	(.030) 258 (1973)	6	812 1795

1.078-2 VALVE KIT, Exhaust (Incl. Valve And Valve Spring Retainer)

ALL	(.003) 304 (1971/1972)	44	8	320 8137
ALL	(.003) 360 (1971/1972)	44	8	448 9176
ALL	(.003) 360 (1973)	44	8	812 2998
ALL	(.015) 304 (1971/1972)	44	8	320 8138
ALL	(.015) 360 (1971/1972)	44	8	448 9177
ALL	(.015) 360 (1973)	44	8	812 2999
ALL	(.030) 304 (1971/1972)	44	8	320 8139
ALL	(.030) 360 (1971/1972)	44	8	448 9178
ALL	(.030) 360 (1973)	44	8	812 3006

1.078-3 SEAL, Exhaust Valve

ALL	232-258 (Perfect Circle)	6	320 5878
ALL	327	8	320 5879
ALL	350 (1968/1970)	8	138 2076

1.078-4 SEAL SET, Exhaust Or Intake Valve

ALL	232-258 (Skinner)	35	1	320 7534
ALL	327	35	1	320 7533

1.078-5 SEAL KIT, Exhaust Or Intake Valve

ALL	232-258 (Skinner)...(Incl. 320 7534, Spring And Gasket)	6	6	320 7537
-----	---	---	---	----------

ENGINE

1.134-2 ATTACHING PARTS, Sprocket To Camshaft

BOLT, Hexagon	ALL	230...(1-7/8" Long)	17.	1	G123899
BOLT, Hexagon	ALL	230...(2" Long)	17.	1	G124169
BOLT, Hexagon	ALL	232-258		1	317 2308
BOLT, Hexagon	ALL	350		1	128 5606
WASHER, Plain	ALL	230		1	808 961
WASHER, Plain	ALL	232-258		1	317 3284
WASHER, Plain	ALL	350		1	128 5607
WASHER, Lock	ALL	230	17.	1	G120384

1.134-3 KEY, Camshaft Sprocket

ALL	230 (Dowel Pin)	17.	1	G141246
ALL	304-360	17.	1	G124546
ALL	327		1	310 7002
ALL	350		1	135 2537

1.134-4 ECCENTRIC, Fuel Pump

ALL	230		1	929 041
ALL	304-360 (1971/1972)		1	318 2492
ALL	327		1	314 4449
ALL	360 (1973)		1	321 8314

1.134-5 ATTACHING PARTS, Eccentric To Camshaft

BOLT, Hexagon	ALL	304-360	17.	1	G192353
BOLT, Hexagon	ALL	327		1	314 4704
SPACER	ALL	304-360 (1971/1972)		1	318 2491
WASHER, Plain	ALL	304-360		1	318 9338
WASHER, Plain	ALL	327		1	314 4702
WASHER, Lock	ALL	327	17.	1	G120384

1.136-1 ROD ASSEMBLY, Connecting

ALL	230 (No. 1, No. 3, No. 5 Cylinders)	19		3	928 973
ALL	230 (No. 2, No. 4, No. 6 Cylinders)	19		3	928 974
ALL	232 (* 1-17)	19		6	317 2341
ALL	232 (* 1-18)	19		6	318 0444
ALL	232 (* 1-19)	19		6	317 3210
ALL	258	19		6	318 0444
ALL	304-360	19		8	319 6750
ALL	327	19		8	314 5296
ALL	350	19		8	138 5362

1.136-2 ATTACHING PARTS, Connecting Rod Bearing Cap To Block

BOLT	ALL	230		12	K 711 058
BOLT KIT	ALL	232-258	36	12	448 6626
BOLT KIT	ALL	304-360	36	16	448 6626
BOLT KIT	ALL	327	36	16	320 6252
BOLT KIT	ALL	350	36	16	139 4226
NUT	ALL	230		12	K 711 057
NUT	ALL	304-360		16	314 9556

ENGINE

COOLING - GRILLE

2.102-1 HOUSING, Thermostat

ALL	230.....		1	800 293
ALL	232 (1965/1967).....		1	317 2305
ALL	232-258 (1968/).....		1	318 9718
ALL	304 (1971).....		1	317 9073
ALL	360 (1971).....		1	321 0852
ALL	304-360 (1972/).....		1	321 0852
ALL	327.....		1	314 4687
ALL	350.....		1	138 0207

2.102-2 ATTACHING PARTS, Thermostat Housing To Cylinder Head

STUD.....	ALL	232-258...(1-7/16" Long).....		1	317 2316
STUD.....	ALL	232-258...(2-5/8" Long).....		1	317 2315
BOLT, Hexagon.....	ALL	232-258 (1968/).....	17.	1	G180083
NUT, Hexagon.....	ALL	232-258.....	17.	1	G120368
WASHER, Lock.....	ALL	232-258.....	17.	2	G120214
WASHER, Plain.....	ALL	232-258.....	17.	2	G120393

2.102-3 ATTACHING PARTS, Thermostat Housing To Manifold

STUD.....	ALL	230.....		3	924 331
STUD.....	ALL	304-360.....		1	318 4637
NUT, Hexagon;.....	ALL	230.....	17.	3	G120368
WASHER, Lock.....	ALL	230.....	17.	3	G120214
WASHER, Lock.....	ALL	304-360.....	17.	2	G120214
WASHER, Plain.....	ALL	304-360.....	17.	2	G120393
BOLT, Hexagon.....	ALL	304-360.....	17.	1	G180079
BOLT, Hexagon.....	ALL	327.....		2	400 0987
BOLT, Hexagon.....	ALL	350.....		2	941 9694

2.102-4 SPACER, Water Outlet Elbow

ALL	230.....		1	929 019
-----	----------	-------	---	---------

2.102-5 HOSE, Thermostat Housing Spacer Nipple To Cylinder Head

ALL	230.....		1	930 261
-----	----------	-------	---	---------

2.102-6 CLAMP, Thermostat Housing Spacer Nipple To Cylinder Head Hose

ALL	230.....	17.	2	G443632
-----	----------	-----	---	---------

2.102-7 GASKET, Thermostat Housing

ALL	230.....		1	648 852
ALL	232 (1965/1967).....		1	317 2314
ALL	232-258 (1968/).....		1	318 9874
ALL	304-360.....		1	318 7543
ALL	327.....		1	317 1856
ALL	350.....		1	119 4629

ELECTRICAL - INSTRUMENTS

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.	PART NO.
					MOTO- ROLA	MOTO- ROLA
					A12 NAM451	A12 NAM551
1	ALTERNATOR (Less Pulley)		3.016	1	938 906	938 907
2	BEARING (Front)		3.016	1	927 097	927 097
3	BEARING (Rear)		3.016	1	938 535	938 535
4	BOLT (Thru)		3.016	1	933 686	933 687
5	BRUSHES	50	3.016	1	938 040	938 040
6	DIODE (Isolation)		3.016	1	933 682	933 683
7	DIODE (Negative)		3.016	1	933 684	933 684
8	DIODE (Positive)		3.016	1	933 685	933 685
9	FAN		3.017	1	933 665	933 665
10	HOUSING (Front)		3.016	1	938 909	938 909
11	HOUSING (Rear)		3.016	1	933 671	933 671
12	KEY		3.016	1	933 666	933 666
13	WASHER		3.016	1	933 668	933 668
14	NUT		3.016	2	933 693	933 693
15	NUT		3.016	7	933 694	933 694
16	NUT		3.017	1	933 669	933 669
17	NUT		3.016	4	933 688	933 688
18	PULLEY		3.017	1	938 908	938 908
19	RETAINER (Front)		3.016	1	933 677	933 677
20	RETAINER (Rear)		3.016	1	933 676	933 676
21	ROTOR		3.016	1	933 678	933 679
22	SCREW		3.016	2	933 674	933 674
23	SLEEVE		3.016	2	933 689	933 690
24	SPACER		3.017	1	933 667	933 667
25	STATOR		3.016	1	933 680	933 681
26	WASHER		3.016	5	933 691	933 691
27	WASHER		3.016	1		933 692

ELECTRICAL - INSTRUMENTS

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.	PART NO.	PART NO.
					MOTO- ROLA	MOTO- ROLA	MOTO- ROLA
					8AL 2025F	8AL 2026F	8AL 2031K
1	ALTERNATOR (Less Pulley)	3.016	1	448 9410	448 9410	812 2449	
2	NUT	17.412	2	G120361	G120361	G120361	
3	NUT	17.412	6	G271166	G271166	G271166	
4	TRIO ASSY. (Diode)	3.016	1	448 9406	448 9406	812 0830	
5	WASHER	3.016	3	320 4158	320 4158	320 4158	
6	SCREW	17.671	2	G456794	G456794	G456794	
7	INSULATOR	3.016	1	448 9449	448 9449	448 9449	
8	WASHER	3.016	1	448 9450	448 9450	448 9450	
9	BRUSHES	3.016	1	320 4152	320 4152	320 4152	
10	BOLT	3.016	4	320 5053	320 5053	320 5053	
11	HOUSING	3.016	1	448 9403	448 9403	448 9403	
12	INSULATOR	3.016	2	448 9448	448 9448	448 9448	
13	WASHER	3.016	2	320 4158	320 4158	320 4158	
14	DIODE (Positive)	3.016	1	448 9405	448 9405	448 9405	
15	DIODE (Negative)	3.016	1	448 9404	448 9404	448 9404	
16	STATOR	3.016	1	812 1301	812 1301	320 5227	
17	RETAINER	3.016	1	320 4150	320 4150	320 4150	
18	BEARING	3.016	1	320 4146	320 4146	320 4146	
19	ROTOR	3.016	1	320 4145	320 4145	320 5054	
20	KEY	17.344	1	G103905	G103905	G103905	
21	WASHER	3.016	1	320 4144	320 4144	320 4144	
22	BEARING	3.016	1	313 9988	313 9988	313 9988	
23	HOUSING	3.016	1	320 4142	320 4142	320 4142	
24	NUT	17.414	4	G120611	G120611	G120611	
25	SPACER	3.017	1	320 4141	320 4141	320 4141	
26	FAN	3.017	1	320 4140	320 4140	320 4140	
27	PULLEY	3.017	1	320 4139	320 4139	320 4139	
28	WASHER	17.820	1	G103325	G103325	G103325	
29	NUT	3.017	1	320 4160	320 4160	320 4160	
30	SHIELD	3.016	1	320 7918	320 7918	320 7918	
31	PLATE (Ground)	3.016	1	448 8549	448 8549	448 8549	
32	TERMINAL, Spade (Aux.)	3.016	1	448 8550	448 8550	448 8550	
33	WASHER	3.016	1	448 9451	448 9451	448 9451	
34	INSULATOR	3.016	1	448 9452	448 9452	448 9452	
35	SCREW	3.016	1	448 9453	448 9453	448 9453	
36	WASHER	17.820	2	G121744	G121744	G121744	
37	WASHER	17.820	1	G120380	G120380	G120380	
38	NUT	17.412	1	G271172	G271172	G271172	
39	INSULATOR	3.016	1	448 9454	448 9454	448 9454	
40	CAPACITOR	3.016	1	318 1090	318 1090	318 1090	
41	TERMINAL, Spade (Aux.)	3.016	1	448 8550	448 8550	448 8550	

ELECTRICAL - INSTRUMENTS

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.	PART NO.	PART NO.	PART NO.	PART NO.
					DELCO REMY	DELCO REMY	DELCO REMY	DELCO REMY	DELCO REMY
					1111948	1112028	1112111	1112112	1112215
1	DISTRIBUTOR.....	3.030	1	319 4669	321 1821	321 5825	321 5826	321 9196	
2	HOUSING ASSY..... 137	3.030	1	320 7406	320 7406	320 7406	320 7406	320 7406	
3	CAP ASSY..... 68	3.032	1	320 0192	320 0192	320 0192	320 0192	320 0192	
4	SHAFT ASSY..... 135	3.030	1	448 5630	448 8085	812 0590	320 8004	812 2346	
5	PLATE ASSY..... 155	3.030	1	320 7410	320 7410	320 7410	320 7410	320 7410	
6	CONTACT SET..... 119	3.031	1	448 6721	448 6721	448 6721	448 6721	448 6721	
7	SCREW ASSY.....	3.030	1	320 7200	320 7200	320 7200	320 7200	320 7200	
8	LEAD ASSY.....	3.030	1	320 4220	320 4220	320 4220	320 4220	320 4220	
9	ROTOR.....	3.035	1	320 4216	320 4216	320 4216	320 4216	812 2343	
10	SCREW.....	17.598	2	G160035	G160035	G160035	G160035	812 2344	
11	WASHER.....	17.820	2	G118873	G118873	G118873	G118873		
12	WEIGHT.....	3.030	2	320 6644	320 6644	320 6644	320 6644	320 6644	
13	SPRING.....	3.030	2	448 5632	448 9156	320 7443	320 7998	812 2345	
14	CAM.....	3.030	1	448 5631	320 7995	320 7995	812 0593	320 7995	
15	SLEEVE.....	3.030	1	320 7409	320 7409	320 7409	320 7409	320 7409	
16	LEAD.....	3.030	1	320 6674	320 6674	320 6674	320 6674	320 6674	
17	SPRING.....	3.030	1	320 6677	320 6677	320 6677	320 6677	320 6677	
18	WASHER.....	3.030	1	320 6666	320 6666	320 6666	320 6666	320 6666	
19	SEAL.....	3.030	1	320 6650	320 6650	320 6650	320 6650	320 6650	
20	GROMMET.....	3.030	1	320 6672	320 6672	320 6672	320 6672	320 6672	
21	CONDENSER.....	3.033	1	320 4584	320 4584	320 4584	320 4584	320 4584	
22	BRACKET.....	3.030	1	320 6669	320 6669	320 6669	320 6669	320 6669	
23	SCREW.....	3.030	1	320 6655	320 6655	320 6655	320 6655	320 6655	
24	CONTROL.....	3.046	1	329 7411	320 7411	812 0586	812 0586	812 2347	
25	SCREW.....	17.596	2	G454342	G454342	G454342	G454342	G454342	
26	GEAR.....	3.042	1	318 2700	319 8787	319 8787	319 8787	319 8787	
27	PIN.....	3.030	1	320 4213	320 4213	320 4213	320 4213	320 4213	
28	WASHER.....	3.030	1	320 6659	320 6659	320 6659	320 6659	320 6659	
30	PAD.....	3.030	1	320 7267	320 7367	320 7366	812 1648	812 1648	
31	RETAINER.....	3.030	1	320 0433	320 0433	812 0591	812 0591		

ELECTRICAL - INSTRUMENTS

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.	PART NO.
1	STARTING MOTOR		3.020	1	319 3382	321 2235
2	DRIVE ASSY. 64		3.020	1	448 6601	812 0193
3	TERMINAL KIT 72		3.020	1	320 7522	320 7522
4	END, Drive (See Type 1 Below) . 125		3.020	1	448 6602	
	END, Drive (See Type 2 Below) . 125		3.020	1	812 0348	
	END, Drive 125		3.020	1		448 9353
5	END, Commutator, ... 121		3.020	1	320 7423	320 7423
6	POINT KIT 66		3.020	1	320 7523	320 7523
7	BRUSH KIT 112		3.020	1	320 7524	320 7524
8	ARMATURE (See Type 1 Below)		3.020	1	320 7416	
	ARMATURE (See Type 2 Below)		3.020	1	812 0028	
	ARMATURE		3.020	1		812 0028
9	RING		3.020	1	320 7418	320 7418
10	RETAINER		3.020	1	320 7419	320 7419
11	BUSHING		3.020	1	320 7421	812 0030
12	SPACER		3.020	1	812 1196	812 1196
13	SPRING		3.020	4	320 7424	320 7424
14	YOKE		3.020	1	320 7425	320 7425
15	SPRING		3.020	1	320 7426	320 7426
16	SLEEVE		3.020	1	320 7428	320 7428
17	SCREW		3.020	3	320 7429	320 7429
18	COIL SET		3.020	1	448 6600	320 7415
19	BUSHING		3.020	1	320 7430	320 7430
20	BOLT		3.020	2	320 7431	320 7431
21	WASHER		17.820	2	G103319	G103319
22	WASHER		17.814	1	448 7328	448 7328
23	COVER		3.020	1	320 7432	320 7432
24	GASKET		3.020	1	320 7433	320 7433
25	BAND		3.020	1	320 7434	320 7434
26	SCREW		17.614	1	G132934	G132934
27	NUT		17.414	1	G120611	G120611
28	PIN		3.020	1	320 7435	320 7435
29	SCREW		3.020	1	320 7436	320 7436
30	FLANGE		3.020	1	320 7427	320 7427
31	SEAL (Cup)		3.020	1		812 0029

NOTE: Two types of Armatures and End Drives were used in the 319 3382 Starter.

They can be identified as follows:

TYPE 1: The Thrust Washer on the Commutator End is a separate part from the Armature.

TYPE 2: The Thrust Washer on the Commutator End is moulded to the Commutator.

ELECTRICAL - INSTRUMENTS

3.039-5 GASKET, Distributor

ALL	258-304-360.....		1	318 1288
-----	------------------	-------	---	----------

3.039-6 WASHER, Thrust (Distributor Oil Seal)

ALL	350.....		1	185 2793
-----	----------	-------	---	----------

3.042-1 GEAR, Distributor (On Distributor - Refer To Chart Index Page Cr 3 - 1)**3.042-2 GEAR, Distributor (On Camshaft)**

ALL	304-360.....		1	448 6635
ALL	350.....		1	136 1749

3.042-3 ATTACHING PARTS, Gear To Camshaft

KEY, Woodruff.....	ALL	304-360.....	17.	1	G124546
--------------------	-----	--------------	-----	---	---------

3.042-4 GEAR, Distributor (On Crankshaft)

ALL	230.....		1	926 051
-----	----------	-------	---	---------

3.046-1 CONTROL, Distributor Vacuum

ALL	230.....		1	931 675
ALL	232.....		1	320 4211
ALL	258 (1971).....		1	812 0461
ALL	258 (1972/).....		1	812 0585
ALL	304-360 (1971).....		1	320 7411
ALL	304-360 (1972).....		1	812 0586
ALL	327.....		1	320 4221
ALL	350.....		1	111 6163
ALL	360 (WST)(W4ST) Except 4700-4800 (1973).....		1	812 0586
ALL	360 (WHT) 1973.....		1	812 2347
TRK	360 (WST-4700-4800)(W4ST-4700-4800).....		1	812 2347

3.048-1 TUBE, Distributor Vacuum Control To Carburetor

ALL	230.....		1	931 545
ALL	232.....		1	317 4331
ALL	327.....		1	317 0321

3.048-2 TUBE, Carburetor Hose To Distributor Vacuum Control Hose

ALL	258 (WTCS).....		1	321 1615
-----	-----------------	-------	---	----------

3.048-2 HOSE, Distributor Vacuum Control To Carburetor

ALL	232-258 (LTCS).....		AR	320 3440
ALL	350.....		1	135 2845

3.048-3 HOSE, Distributor Vacuum Control To Tube (Bulk - Order Per Foot)

ALL	258 (WTCS).....		AR	320 3440
-----	-----------------	-------	----	----------

3.048-4 HOSE, Tube To Carburetor (Bulk - Order Per Foot)

ALL	258 (WTCS).....		AR	320 3440
-----	-----------------	-------	----	----------

3.048-5 ELBOW, Distributor Vacuum Control Tube Connector (90 Degree)

ALL	230.....	17.	1	G137420
-----	----------	-----	---	---------

3.048-6 ELBOW, Distributor Vacuum Tube To Cylinder Head Connector

ALL	230.....	17.	1	G137420
-----	----------	-----	---	---------

ELECTRICAL - INSTRUMENTS

3.165-7 TERMINAL, Wire (Female)

ALL	(1 Wire-Tinned)		AR	932 317
ALL	(1 Wire-Brass) ... (25/32" Long)		AR	998 697
ALL	(1 Wire-Brass) ... (27/32" Long)		AR	994 560
ALL	(1 Wire-Headlamp)		AR	998 476
ALL	(2 Wire-Brass)		AR	932 320
ALL	(2 Wire-Tinned)		AR	932 318
ALL	(2 Wire-Headlamp)		AR	998 477
ALL	(2 Wire-Headlamp Switch)		AR	998 698

3.165-8 TERMINAL, Wire (Insulated)

ALL	(Blue)		AR	991 641
ALL	(Red)		AR	991 640
ALL	(Yellow)		AR	991 646

3.165-9 TERMINAL, Wire (Eye)

ALL	258		AR	393 196
-----	-----------	-------	----	---------

3.165-10 TERMINAL, Wire (Spade)

ALL	(Closed)		AR	925 062
ALL	(Open)		AR	535 0131

3.165-11 TERMINAL, Wire (Slip)

ALL			AR	642 377
-----	-------	-------	----	---------

3.165-12 TERMINAL, Connector (Male)

ALL	(1 Wire-Tinned)		AR	998 696
ALL	(1 Wire-Brass)		AR	998 693

3.165-12a TERMINAL, Jumper (Male)

ALL	WST-W4ST		1	318 6890
-----	----------------	-------	---	----------

3.165-13 TERMINAL, Connector (Female)

ALL	(1 Wire)		AR	998 692
ALL	(3 Wire-Tinned)		AR	998 690
ALL	(3 Wire-Brass)		AR	994 561

3.165-14 ATTACHING PARTS, Harness To Dash Panel

CLIP, Metal	ALL	(Push In Type)		AR	946 610
STRAP, Nylon	ALL	1972 And Prior		AR	927 663
STRAP, Nylon	ALL	1973		AR	535 0352

3.165-15 ATTACHING PARTS, Harness To Instrument Panel

CLIP, Nylon	ALL			1	926 878
-------------------	-----	-------	-------	---	---------

3.165-16 ATTACHING PARTS, Harness To Splash Apron

STRAP, Nylon	ALL			AR	927 663
CLIP, Metal	ALL	(Flange Type)		AR	945 201

3.165-17 ATTACHING PARTS, Harness To Radiator Baffle

STRAP, Nylon	ALL			AR	927 663
--------------------	-----	-------	-------	----	---------

3.317

ELECTRICAL - INSTRUMENTS

3.317-3 GASKET, Back-Up Lamp Lens

TRK			2	931 593
WAG	(* 3-17).....		2	931 593
WAG	(* 3-18).....		2	979 937

3.318-1 WIRE, Back-Up Lamp (Left To Right Lamp)

ALL	258-360 (1973).....		1	535 0252
TRK	230-232-327-350.....		1	933 114
WAG	(* 3-17).....		1	933 114

3.318-1a JUMPER, Back-Up Light Switch

ALL	258-360 (WST)(W4ST) 1973		1	545 0049
-----	--------------------------------	-------	---	----------

3.318-2 WIRE, Back-Up Lamp (Back-Up Lamp Switch To Ignition Switch)

TRK	230-232-327-360.....		1	938 803
WAG			1	938 803

3.318-3 WIRE, Back-Up Lamp Switch To Left Back-Up Lamp

TRK	230-232-327-350.....		1	933 113
WAG	(* 3-17).....		1	933 113

3.318-4 WIRE, Back-Up Lamp Switch To Connector

WAG			1	936 436
TRK	230-232-327-350.....		1	936 436

3.318-5 WIRE, Back-Up Lamp Extension

TRK	(1 Male And 1 Female Terminal)...(16" Long)		1	535 0203
TRK	(2 Bullet Terminals)...(16" Long)		2	948 299

3.318-6 BULB, Back-Up Lamp

ALL			2	942 498
-----	-------	-------	---	---------

3.318-7 FUSE, Back-Up Lamp Wire

ALL	(9 Amp.)	17.	1	G147684
-----	----------------	-----	---	---------

3.319-1 SWITCH, Back-Up Lamp (On Toe Panel)

ALL	230.....		1	930 946
ALL	Except 230		1	938 848

3.319-2 SWITCH, Back-Up Lamp (On Transmission Shift Rail)

ALL	(Screw Terminal)		1	947 917
ALL	(Blade Terminal)		1	948 345

3.319-3 ATTACHING PARTS, Switch To Panel

SCREW, Tapping.....	ALL	17.	2	G453113
---------------------	-----------	-----	---	---------

3.319-4 ADAPTER, Back-Up Lamp Switch

WAG	(W4ST-2-1/16" Long)		1	946 456
WAG	(W4ST-1-31/32" Long)		1	998 091

ELECTRICAL - INSTRUMENTS

3.500-2 CLUSTER ASSEMBLY, Instruments (Kilos)

1972 AND PRIOR

ALL	230.....		1	938 752
ALL	Except 230 (* 3-3)		1	938 942
ALL	Except 230 (* 3-4)		1	535 0107

3.500-3 ATTACHING PARTS, Cluster Assembly To Panel

1972 AND PRIOR

CLIP	ALL	Except 230	4	938 656	
CLIP	ALL	230	4	933 933	
SCREW, Machine	ALL		17.	4	G160046

3.505-1 CASE, Instrument Cluster

ALL	1973.....		1	812 2476
ALL	1972 And Prior...(Less Printed Circuit-* 3-3).....		1	938 651
ALL	1972 And Prior...(Less Printed Circuit-* 3-4).....		1	812 1436
ALL	1972 And Prior...(Incl. Printed Circuit-* 3-3).....		1	938 740

3.505-1a ATTACHING PARTS, Case To Bezel

SCREW, Tapping.....	ALL	1973.....	6	448 7972
---------------------	-----	-----------	---	----------

3.505-2 HOUSING, Warning Lamp

ALL	1973.....		3	448 7986
-----	-----------	-------	---	----------

3.506-1 PLATE, Instrument Cluster Gauge

ALL	1973.....		1	812 2478
-----	-----------	-------	---	----------

3.510-1 BEZEL, Instrument Cluster

ALL	230.....		1	930 827
ALL	232-327 (* 3-5)		1	930 827
ALL	232-327 (* 3-6)		1	941 804
ALL	1973.....		1	989 426
ALL	258-304-350-360 (1972 And Prior).....		1	941 804

3.510-1a ATTACHING PARTS, Bezel To Instrument Panel

SCREW, Trim.....	ALL	1973.....	6	400 2657
NUT, Speed.....	ALL	1973.....	6	545 0153

3.510-2 OVERLAY, Instrument Cluster Bezel (Woodgrain)

ALL	1973.....		1	988 115
-----	-----------	-------	---	---------

3.515-1 LENS, Instrument Cluster (Glass)(Miles)

ALL	230.....		1	930 824
ALL	232-327 (* 3-5)		1	938 804
ALL	232-327 (* 3-6)		1	941 803
ALL	258-304-360 (1972 And Prior-* 3-3)		1	941 803
ALL	258-304-360 (1972 And Prior-* 3-4)		1	535 0108

3.515-2 LENS, Instrument Cluster (Glass)(Kilos)

ALL	Except 230 (1972 And Prior)		1	938 805
ALL	230.....		1	930 825

ELECTRICAL - INSTRUMENTS

3.690-7 ATTACHING PARTS, Flasher Mounting Bracket To Instrument Panel

SCREW, Machine.....	ALL	230-232-327-350.....	17.	1	G159920
NUT, Hexagon.....	ALL	230-232-327-350.....	17.	1	G271166

3.690-8 ATTACHING PARTS, Switch To Bracket (Hazard Warning)

NUT, Knurled.....	ALL	230.....		1	934 762
NUT, Hexagon.....	ALL	232-327-350.....		1	942 488
NUT, Spanner.....	WAG	327-350.....		1	931 688

3.690-9 FLASHER, Hazard Warning

ALL.....		1	934 764
----------	-------	---	---------

3.690-10 HARNESS, Hazard Warning Switch To Parking And Tail Light Connections

WAG 327-350 (1414X).....		1	945 482
--------------------------	-------	---	---------

3.690-11 WIRE, Hazard Warning Flasher Terminal To Ignition Switch Terminal

ALL 230-232-327-350.....		1	934 593
--------------------------	-------	---	---------

3.690-12 KNOB, Hazard Warning

ALL 232-327-350 (Except 1414X).....		1	934 763
ALL 258-360 (1973).....		1	321 7216
WAG 327-350 (1414X).....		1	945 491

3.690-13 BEZEL, Switch (Hazard Warning)

WAG 327-350 (1414X).....		1	945 490
--------------------------	-------	---	---------

3.690-14 FUSE, Hazard Warning And Directional Signal

ALL (9 Amp.).....	17.	1	G147684
ALL (14 Amp.).....	17.	1	G147685

3.720-1 HOUSING, Front Fender Side Lamp

WAG (Left).....		1	981 735
WAG (Right).....		1	981 736

3.720-2 ATTACHING PARTS, Housing To Front Fender

NUT, Hexagon.....	WAG		17.	6	G271172
WASHER, Plain.....	WAG		17.	6	G446354

3.720-3 BASE, Front Fender Side Lamp

TRK.....		2	981 720
----------	-------	---	---------

3.720-4 BULB, Front Fender Side Lamp

ALL.....		2	994 037
----------	-------	---	---------

3.720-5 WIRE, Front Fender Side Lamp

WAG.....		2	994 034
----------	-------	---	---------

3.725-1 GASKET, Front Fender Side Lamp Housing To Fender

WAG.....		2	984 946
----------	-------	---	---------

FUEL - EXHAUST

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.	PART NO.
					R-2651	R-2651-1
1	CARBURETOR		4.001	1	936 925	939 259
2	REPAIR KIT (Major) 76	4.001	1	1	939 006	939 006
3	PEP KIT (Minor) 78	4.001	1	1	939 008	939 008
4	GASKET KIT..... 79	4.001	1	1	939 007	939 007
5	CHOKE KIT..... 86	4.001	1	1	939 009	939 009
6	ECONOMIZER KIT..... 87	4.001	1	1	939 011	939 011
7	LEVER	4.001	1	448	5944	448 5944
8	SCREW	4.001	2	320	3106	320 3106
9	SCREW	4.001	3	320	3107	320 3107
10	SCREW	4.001	4	320	3108	320 3108
11	SCREW	4.001	2	320	5907	320 5907
12	SCREW	4.001	2	320	5907	320 5907
13	SCREW	4.001	3	320	3120	320 3120
14	SCREW	4.001	3	320	6312	320 6312
15	SCREW	4.001	1	320	5909	320 5909
16	SCREW	4.001	1	320	4404	320 4404
17	PLUG	4.001	1	320	5920	320 5920
18	GASKET	4.001	1	320	2203	320 2203
19	GASKET	4.001	1	448	5886	448 5886
20	NEEDLE.....	4.001	1	939	018	939 018
21	NEEDLE AND SEAT ASSY.	4.001	1	939	017	939 017
22	FITTING.....	4.001	1	320	6362	320 6362
23	JET (Standard)	4.001	1	939	012	939 012
	JET (5,000 To 10,000 Ft.)	4.001	1	939	013	939 013
	JET (10,000 Ft. And Over)	4.001	1	939	015	939 015
24	COVER	4.001	1	320	6407	320 6407
25	"O" RING	4.001	1	320	6317	320 6317
26	BALL	4.001	1	320	3181	320 3181
27	BODY AND PLUG ASSY.	4.001	1	939	019	939 019
28	RETAINER.....	4.001	1	320	3189	320 3189
29	SPRING.....	4.001	1	320	3191	320 3191
30	SPRING.....	4.001	1	320	7216	320 7216
31	SPRING.....	4.001	1	...		320 7217
32	THERMOSTAT	4.001	1	320	7276	320 7276
33	CLAMP	4.001	3	320	3229	320 3229
34	RETAINER.....	4.001	1	320	3240	320 3240
35	PUMP	4.001	1	939	010	939 010
36	WASHER	4.001	1	320	7223	320 7223
37	DASHPOT	4.001	1	934	560	934 560
38	BRACKET	4.001	1	937	405	937 405
39	CLIP	4.001	1	936	681	936 681
40	NUT.....	4.001	1	933	546	933 546
41	SCREW	4.001	1	G449845		G449845
42	LOCKWASHER.....	4.001	1	G120380		G120380

FUEL - EXHAUST

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.	PART NO.
					YF-6158	YF-6172
1	CARBURETOR		4.001	1	999 878	998 879
2	VALVE		4.001	1	448 8314	448 8314
3	VALVE		4.001	1	320 6425	320 6425
4	PLUG		4.001	1	320 3802	320 3802
5	LEVER AND SHAFT		4.001	1	448 8315	448 8315
6	LEVER AND PIN		4.001	1	448 8316	448 8316
7	WEIGHT		4.001	1	812 0149	812 0149
8	FLOAT		4.001	1	448 8047	448 8047
9	PIN		4.001	1	320 6428	320 6428
10	NEEDLE ASSY. 110		4.001	1	448 8048	448 8048
11	SCREW		4.001	1	448 8036	448 8036
12	PLUG		4.001	1	320 3814	320 3814
13	SPRING		4.001	1	320 5125	320 5125
14	SPRING		4.001	1	320 3842	320 3842
15	SPRING		4.001	1	320 3844	320 3844
17	RETAINER		4.001	1	320 3820	320 3820
18	RETAINER		4.001	3	320 4326	320 4326
19	ROD		4.001	1	812 0194	448 8051
20	CAP		4.001	1	448 8054	448 8054
21	SCREW		4.001	3	320 6431	320 6431
22	SCREW		4.001	3	812 0222	812 0222
23	SCREW		4.001	4	320 6432	320 6432
24	SCREW		4.001	4	320 6433	320 6433
25	SCREW		4.001	3	320 7738	320 7738
26	SCREW		4.001	1	812 0959	812 0959
27	SCREW		4.001	4	320 7745	320 7745
28	NUT		4.001	1	320 6802	320 6802
29	ARM		4.001	1	320 6434	320 6434
30	LINK		4.001	1	320 6437	320 6437
31	LINK		4.001	1	448 8061	448 8061
32	JET		4.001	1	812 0195	448 8445
33	GASKET		4.001	1	448 5888	448 5888
34	WASHER		4.001	1	320 7760	320 7760
35	PIN		4.001	1	320 7761	320 7761
36	SPRING		4.001	1	320 3830	320 3830
37	COIL AND HOUSING		4.001	1	448 9439	448 9439
38	PLATE		4.001	1	320 6442	320 6442
39	DASHPOT		4.001	1	812 0963	812 0963
40	DIAPHRAGM		4.001	1	448 9440	448 9440
41	GASKET		4.001	1	317 3228	317 3228
42	GASKET SET 103		4.001	1	812 0102	812 0102
43	MAJOR REPAIR KIT 99		4.001	1	448 9461	448 9461
44	BRACKET		4.001	1	812 0103	812 0103
45	BALL		4.001	1	812 0145	812 0145
46	PLATE		4.001	1	320 6443	320 6443

FUEL - EXHAUST

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.
7028088					
1	CARBURETOR		4.001	1	992 506
2	OVERHAUL KIT.....		4.001	1	703 6478
3	POWER KIT.....		4.001	1	703 9141
4	GASKET SET		4.001	1	703 6479
5	NUT		4.001	1	703 7048
6	VALVE KIT.....		4.001	1	701 2252
7	FLOAT ASSY.		4.001	1	703 2690
8	NEEDLE AND SEAT ASSY. 114		4.001	1	702 3895
9	CONTROL ASSY.		4.001	1	703 6766
10	CLIP		4.001	1	700 5109
11	LEVER		4.001	1	702 6238
12	JET		4.001	2	700 2650
13	SPRING.....		4.001	1	701 1479
14	GASKET		4.001	1	138 3855
15	PIN		4.001	1	700 2081

KEY NO.	DESCRIPTION	PAKS CODE	GROUP NO.	PER CAR	PART NO.	PART NO.
					3TM4	3TA4
1	CARBURETOR		4.001	1	321 8801	321 8802
2	LIMITER		4.001	2	320 9879	320 9879
3	ROD		4.001	1	448 8185	448 8185
4	RING		4.001	2	448 8186	448 8186
5	VALVE		4.001	1	448 8187	448 8187
6	CUP		4.001	1	448 8388	448 8388
7	LINK		4.001	1	448 8188	448 8188
8	SHAFT		4.001	1	812 1422	812 1422
9	LEVER		4.001	1	448 8190	448 8190
10	NUT		4.001	1	448 8191	448 8191
11	SPRING		4.001	1	448 8192	448 8192
12	LEVER AND SCREW		4.001	1	812 0013	812 0013
13	NEEDLE		4.001	2	448 8193	448 8193
14	ROD		4.001	1	448 8194	448 8194
15	WASHER		4.001	1	448 8195	448 8195
16	BALL		17.018	1	G145637	G145637
17	PLATE		4.001	1	448 8196	448 8196
18	SCREW		4.001	2	320 9901	320 9901
19	SHAFT		4.001	1	448 8197	448 8197
20	DASHPOT		4.001	1	448 8199	
21	SCREW		4.001	1	448 8222	448 8222
22	NUT		4.001	1	320 9906	
24	FLOAT		4.001	1	448 8099	448 8099
25	BRACKET		4.001	1	448 8322	
26	SCREW		4.001	1	812 2489	812 2489
27	NUT		4.001	1	448 8191	448 8191
28	VALVE		4.001	1	812 2960	812 2960
29	LEVER		4.001	1	448 8218	448 8218
30	VALVE		4.001	1	448 8219	448 8219
31	VALVE		4.001	1	448 8220	448 8220
32	SCREW		4.001	4	448 8221	448 8221
33	SHAFT		4.001	1	448 8223	448 8223
34	VALVE		4.001	1	812 2961	812 2961
35	VALVE		4.001	1	812 0010	812 0010
36	RETAINER		4.001	1	448 8226	448 8226
37	SPRING		4.001	2	320 9917	320 9917
38	SCREW		4.001	1	448 8229	448 8229
39	LEVER		4.001	1	448 8230	448 8230
40	LINK		4.001	1	448 8231	448 8231
41	PIN		4.001	2	448 8232	448 8232
42	SCREW		4.001	8	448 8233	448 8233
43	CAM		4.001	1	812 3041	812 3041
44	ROD		4.001	1	448 8238	448 8238
45	RING		4.001	1	448 8186	448 8186
46	SCREW		4.001	1	448 8239	448 8239
47	SHAFT		4.001	1	812 2491	812 2491
48	NUT		17.412	1	G271169	G271169
49	RETAINER		4.001	1	448 8242	448 8242
50	SPRING		4.001	1	448 8243	448 8243
51	CLAMP		4.001	1	448 6603	448 6603
52	SCREW		4.001	3	448 5447	448 5447
53	HOUSING		4.001	1	812 2962	812 2962
54	SPRING		4.001	1	448 8244	448 8244
55	GASKET		4.001	1	812 1333	812 1333
56	CONNECTOR		4.001	1	448 8245	448 8245
57	SOLENOID		4.001	1		812 0480
58	BRACKET		4.001	1		812 1167
59	GASKET SET		4.001	1		
60	REPAIR KIT		4.001	1		
61	SCREW		4.001	1		
62	NUT		4.001	1		

FUEL - EXHAUST

4.057-1 CABLE, Accelerator

ALL	230 (LHD).....		1	933 119
ALL	232 (LHD).....		1	940 896
ALL	258 (LHD-1972 And Prior).....		1	999 078
ALL	258 (LHD-1973).....		1	535 1420
ALL	304-360 (1972 And Prior).....		1	535 0613
ALL	327.....		1	940 063
ALL	350.....		1	947 778
ALL	360 (LHD-1973).....		1	535 1419
ALL	230 (RHD).....		1	931 978
ALL	232 (RHD).....		1	940 897
ALL	258 (RHD-1972 And Prior).....		1	999 097
ALL	258 (RHD-1973).....		1	535 1287

4.057-2 ATTACHING PARTS, Cable To Dash Panel

CLIP.....	ALL		1	932 000
WASHER, Plain.....	ALL	230.....	17.	2 G120394
WASHER, Plain.....	ALL	232-327 (RHD).....	17.	1 G120395

4.057-3 ATTACHING PARTS, Cable To Bellcrank

PIN, Clevis.....	ALL		1	940 175
PIN, Cotter.....	ALL		17.	1 G137141
WASHER, Spring.....	ALL	1973.....		1 911 197

4.057-4 ATTACHING PARTS, Cable To Rocker Stud

CLIP, Closed.....	ALL	230 (RHD).....	17.	1 G126166
-------------------	-----	----------------	-----	-----------

4.057-5 ATTACHING PARTS, Cable To Upper Support Bracket

BOLT, Hexagon.....	ALL	232-258 (RHD).....	17.	1 G123520
CLIP, Closed.....	ALL	232-258 (RHD).....	17.	1 G126166
NUT, Hexagon.....	ALL	232-258 (RHD).....	17.	1 G271193

4.057-6 BRACKET, Accelerator Control Cable

ALL	230 (LDT).....		1	932 675
ALL	230 (WDT).....		1	931 901
ALL	232 (LHD).....		1	940 882
ALL	258.....		1	321 1117
ALL	304-360 (1972 And Prior).....		1	998 645
ALL	327 (Except 1414D).....		1	940 039
WAG	327-350 (1414D).....		1	941 545
ALL	350 (Except 1414D).....		1	138 3370
ALL	360 (WDT).....		1	321 8822
ALL	360 (W4B).....		1	321 8821
ALL	232 (RHD).....		1	942 059

4.057-7 ATTACHING PARTS, Bracket To Manifold

BOLT, Hexagon.....	ALL	230.....	17.	1 G9409098
BOLT, Hexagon.....	ALL	232-327 (LHD)...(9/16" Long).....	17.	1 G456938
BOLT, Hexagon.....	ALL	232-327 (LHD)...(3/4" Long).....	17.	2 G451975
BOLT, Hexagon.....	ALL	327...(5/8" Long).....	17.	1 G180118
BOLT, Hexagon.....	ALL	327...(5/8" Long).....		1 800 230
BOLT, Hexagon.....	ALL	258.....	17.	1 G456938
BOLT, Hexagon.....	ALL	232 (RHD).....	17.	2 G9409098
WASHER, Copper.....	ALL	327.....		1 310 7440

4.057-8 ATTACHING PARTS, Bracket To Cylinder Head

BOLT, Hexagon.....	ALL	304-360.....		2 400 0987
BOLT, Hexagon.....	ALL	350.....	17.	1 G120834

FUEL - EXHAUST

4.132-14 ATTACHING PARTS, Valve To Inner Window Frame Bracket Support

BOLT, Hexagon	WAG	232-258-304-350-360.....	17.	2	G123453
NUT, Hexagon.....	WAG	232-258-304-350-360.....	17.	2	G271176
WASHER.....	WAG	232-258-304-350-360.....		2	961 078

4.134-1 FILTER, Gasoline Tank

ALL	230-232-327...(For 5/16" O.D. Pick-Up Tube).....		1	914 933
ALL	232-258-304-350-360...(For 3/8" O.D. Pick-Up Tube).....		1	948 523

4.138-1 CAP, Non-Locking Gasoline Tank Filler

WAG	230-232-327-350 (LCFE)		1	932 170
TRK	230 (Except Townside).....		1	905 805
TRK	230 (Townside)		1	932 170
WAG	232-350 (WCFE-1970 And Prior)		1	994 681
WAG	232-258-304-350-360 (WCFE-1971/)		1	998 957
TRK	232-327-350 (LCFE-Except Thriftside)		1	932 170
TRK	232-327-350 (LCFE-Thriftside).....		1	991 661
TRK	232-258-304-360 (WCFE-Townside-With GVW "W", "X")		1	998 957
TRK	232-258-304-360 (WCFE-Townside-3408-With GVW "Y")		1	999 933
TRK	232-258-304-360 (WCFE-Townside-3407-With GVW "Z")		1	999 933
TRK	232-258-304-360 (WCFE-Except Townside-132WB-GVW "Y", "Z")		1	991 661
TRK	232-258-304-360 (WCFE-Except Townside-With GVW "W", "X").....		1	994 739

4.141-1 NECK, Gasoline Tank Filler Upper

WAG	230...(Incl. Vent Hose)		1	928 996
TRK	230 (Townside)...(Incl. Vent Hose)		1	937 428
WAG	232-327-350 (LCFE)		1	937 165
WAG	232-258-304-350-360 (WCFE-1971 And Prior)		1	992 615
WAG	258-304-360 (1972).....		1	535 0692
TRK	232-258-304-350-360 (Townside-LCFE-1971 And Prior)		1	937 326
TRK	258-304-360 (LCFE-1972)		1	535 0696
TRK	232-258-304-350-360 (4WD-WCFE).....		1	937 157
TRK	230-232-327-350 (Stake Body-Single Wheels)		1	934 458
TRK	230-232-327-350 (Stake Body-Dual Wheels)		1	934 459
TRK	(Inner-Rubber) Thriftside.....		1	937 157
TRK	(Outer-Metal) Thriftside (GVW "Y", "Z")		1	930 476
TRK	(Outer-Metal) Thriftside (GVW "W", "X")		1	994 544

4.141-1a FILLER KIT, Gasoline Tank Filler Upper (Incl. Vent)

WAG	230.....		1	938 034
TRK	Thriftside		1	938 035
TRK	Townside		1	938 036

4.141-2 ATTACHING PARTS, Neck To Platform

BOLT, Hexagon	TRK	230-232-327-350 (Stake Body).....	17.	2	G273730
WASHER, Plain.....	TRK	230-232-327-350 (Stake Body)	17.	2	G120393
NUT, Hexagon.....	TRK	230-232-327-350 (Stake Body).....		2	961 069

4.141-3 ATTACHING PARTS, Inner Neck To Outer Neck

SCREW, Machine.....	TRK	Thriftside		5	961 080
---------------------	-----	------------------	-------	---	---------

4.141-4 CLAMP, Gasoline Tank Filler Neck To Tube

WAG	...(2-1/8")	17.	1	G272863
TRK	Stake Body...(2-13/16")	17.	1	G111628
TRK	Townside...(2-5/8").....	17.	1	G272868

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

FUEL - EXHAUST

4.178-5 ATTACHING PARTS, Clamp To Pipe

NUT, Hexagon.....	ALL	304-327-350-360.....	17.	2	G120376
WASHER, Lock.....	ALL	304-327-350-360.....	17.	2	G120214
SADDLE	ALL	304-360.....		1	994 286
SADDLE	ALL	327-350.....		1	994 285
U-BOLT	ALL	304-360.....		1	991 699
U-BOLT	ALL	327-350.....		1	941 013
PLATE, Support	ALL	304-360.....		1	535 1266

4.178-6 EXHAUST PIPE AND EXTENSION, KIT

ALL	230 (* 4-2).....		1	937 931
WAG	230 (* 4-4).....		1	939 158

4.178-7 ELBOW, Exhaust Pipe

ALL	230 (RHD).....		1	929 717
-----	----------------	-------	---	---------

4.178-8 ATTACHING PARTS, Exhaust Pipe Elbow

NUT, Lock.....	WAG	230.....		1	K 732 878
NUT, Lock.....	TRK	230.....		2	K 732 878
BOLT, Hexagon	WAG	230.....	17.	1	G122279
BOLT, Hexagon	TRK	230.....	17.	2	G122279

4.186-1 SEAL, Exhaust Pipe To Manifold

ALL	230.....		1	K 745 608
ALL	232-258.....		1	317 5842
ALL	304-360 (1972 And Prior).....		2	321 1094
ALL	(Left) 327.....		1	745 608
ALL	(Right) 327.....		1	314 6322
ALL	360 (1973).....		2	321 6644

4.186-2 FLANGE, Exhaust Pipe Manifold

ALL	304-360 (1972 And Prior).....		1	321 1248
-----	-------------------------------	-------	---	----------

4.186-3 ATTACHING PARTS, Flange To Manifold Studs

NUT, Hexagon.....	ALL	232.....		2	53 287
NUT, Hexagon.....	ALL	258.....		2	535 1688
NUT, Hexagon.....	ALL	304-360.....		4	535 1688
NUT, Hexagon.....	ALL	350.....		4	382 9086
WASHER, Lock	ALL	304-360 (1972 And Prior).....	17.	4	G103321
WASHER, Plain.....	ALL	258 (1973).....	17.	2	G120394
WASHER, Plain.....	ALL	360 (1973).....	17.	4	G120394

4.195-1 BRACE, Exhaust Pipe

ALL	230 (2WD).....		1	929 706
ALL	230 (4WD-* 4-1)		1	931 605
ALL	230 (4WD-* 4-2)		1	933 990
WAG	(Rear) 230 (* 4-1).....		1	917 583
TRK	(Rear) 230 (4WD-* 4-1)		1	928 703
ALL	232 (2WD).....		1	941 528
ALL	232-327 (4WD).....		1	933 990
ALL	232-258-350 (4WD) 1972 And Prior		1	948 129
ALL	258 (1973).....		1	931 605
ALL	304-360 (LQT).....		1	998 630
ALL	360 (WQT-1973).....		1	535 0844

FUEL - EXHAUST

4.592-2 ATTACHING PARTS, Bracket To Intake Manifold

NUT, Hexagon.....	ALL	232.....	17.	1	G120367
WASHER, Lock.....	ALL	232.....	17.	1	G120380
STUD.....	ALL	232.....	17.	1	G144532

4.600-1 HOSE, Exhaust Emission Backfire Valve To Injection Manifold

ALL	(Left Bank) 304-360.....		1	319	3194
ALL	(Right Bank) 304-360 (1972 And Prior)		1	319	3195
ALL	(Right Bank) 360 (1973)		1	535	0868

4.600-2 CLAMP, Exhaust Emission Backfire Valve To Injection Manifold Hose

ALL	304-360 (1972 And Prior).....	17.	4	G272850
ALL	(Left Bank At Valve) 360 (1973).....	17.	2	G272850
ALL	(Right Bank) 360 (1973)		4	320 3077

4.610-1 PULLEY, Exhaust Emission Air Pump

ALL	232 (LPS-1965/1969)		1	318	2263
ALL	232 (LPS-1970/1971)		1	992	287
ALL	232 (WPS)		1	318	1602
ALL	258 (LAC).....		1	321	8657
ALL	258 (WAC).....		1	321	8654
ALL	304-360 (LPS).....		1	318	9870
ALL	304-360 (WPS).....		1	318	9717
ALL	327 (WDT).....		1	318	1137
ALL	327 (W4B).....		1	318	1134

4.610-2 ATTACHING PARTS, Pulley To Pump

BOLT, Hexagon	ALL	232 (1965/1969).....	17.	4	G181591
SCREW, Machine.....	ALL	232 (1970/1971).....	17.	3	G9421781
BOLT, Hexagon	ALL	304-360 (1972 And Prior).....	17.	3	G180019
BOLT, Hexagon	ALL	360 (1973)		3	400 1730
BOLT, Hexagon	ALL	327.....	17.	4	G181591
WASHER, Lock	ALL	232 (1965/1969).....	17.	4	G120214
WASHER, Lock	ALL	304-360 (1972 And Prior).....	17.	3	G120380
WASHER, Lock.....	ALL	327.....	17.	4	G120214

4.612-1 BELT, Crankshaft To Exhaust Emission Air Pump

ALL	232 (1971 And Prior).....		1	318	2261
ALL	258 (1973).....		1	321	8648
ALL	304-360.....		1	318	1133

4.615-1 BELT, Power Steering Pump To Exhaust Emission Air Pump

ALL	232 (WEEP-WAC-WPS).....		1	316	9177
ALL	232 (WEEP-LAC-WPS-1965/1970).....		1	318	2264
ALL	232 (WEEP-LAC-WPS-1971).....		1	999	015
ALL	258 (WAC-WPS-1973)		1	321	8647
ALL	304-360 (WPS-1971).....		1	999	031
ALL	304-360 (WPS-1972).....		1	321	5366

4.617-1 BELT, Idler To Air Pump To Compressor

ALL	232 (WAC-LPS).....		1	317	2681
-----	--------------------	-------	---	-----	------

4.620-1 BELT, Crankshaft To Air Pump To Compressor

ALL	304-360 (LPS).....		1	999	597
-----	--------------------	-------	---	-----	-----

CLUTCH

5.125-4 ATTACHING PARTS, Shield To Clutch Housing

SCREW, Tapping.....	ALL	327.....	17.	2	G448423
---------------------	-----	----------	-----	---	---------

5.130-1 PIVOT ASSEMBLY, Clutch Throwout

ALL	232-327.....		1	317 3474
ALL	258-304-360 (LHD-1971).....		1	318 4913
ALL	258-304-360 (1972).....		1	318 4913
ALL	350.....		1	948 092
ALL	258 (RHD-1971).....		1	317 3474

5.130-2 ATTACHING PARTS, Pivot To Housing

WASHER, Lock.....	ALL	304-350-360.....	17.	1	G120383
-------------------	-----	------------------	-----	---	---------

5.130-3 BALL, Throwout Lever (In Clutch Housing)

ALL	232-258-304-327-360.....	17.	1	G169162
-----	--------------------------	-----	---	---------

5.132-1 SPRING, Clutch Throwout Lever (In Clutch Housing)

ALL	232-327 (LHD).....		1	310 6505
ALL	258-304-360 (LHD).....		1	319 9503
ALL	350.....		1	991 155
ALL	258 (RHD-1971).....		1	310 6505
ALL	258 (RHD-1972).....		1	319 9503

5.132-2 ANCHOR, Clutch Throwout Lever Spring

ALL	232-327.....		1	317 2037
ALL	258 (LHD-1971).....		1	321 0423
ALL	258 (1972).....		1	321 0423
ALL	304-360.....		1	321 0423
ALL	350.....		1	314 5919
ALL	258 (RHD-1971).....		1	317 2037

5.132-3 ATTACHING PARTS, Anchor To Floor Pan

NUT, Hexagon.....	ALL	350.....		1	816 055
WASHER, Plain.....	ALL	350.....	17.	1	G120393

5.132-4 ATTACHING PARTS, Anchor Clutch Housing

BOLT, Hexagon.....	ALL	327.....	17.	1	G179868
WASHER, Lock.....	ALL	327.....		1	400 1156
WASHER, Lock.....	ALL	327.....	17.	1	G131100

5.135-1 PEDAL, Clutch

ALL	230 (LHD).....		1	932 902
ALL	230 (RHD).....		1	937 656
ALL	232-327-350 (LHD).....		1	949 173
ALL	232 (RHD).....		1	941 337
ALL	258-304-360 (LHD-1972 And Prior).....		1	998 732
ALL	258 (RHD-1971).....		1	941 337
ALL	258 (RHD-1972).....		1	535 0619
ALL	258-360 (LHD-1973).....		1	535 1494

5.135-1a BRACKET, Clutch Release Rod To Pedal

ALL	258-304-360 (LHD-* 5-4).....		1	535 1687
-----	------------------------------	-------	---	----------

CLUTCH

6.018

STANDARD - OVERDRIVE - FOURSPEED - HYDRAMATIC TRANSMISSION

6.018-6 PLUNGER, Transmission Gear Shift Interlock

ALL	W4ST	2	912 389
ALL	(T14A)(T15A) WFGS	1	912 389

6.018-7 PIN, Fourspeed Transmission Gear Shift Interlock

ALL		1	912 388
-----	-------	---	---------

6.018-8 PLUG, Fourspeed Transmission Expansion

ALL		17.	6	G103892
-----	-------	-----	---	---------

6.020-1 END, Fourspeed Transmission Shift Rail First And Second

TRK	(* 6-20)	1	912 390
ALL	(* 6-21)	1	948 704

6.020-2 END, Fourspeed Transmission Shift Rail Reverse

TRK	(* 6-20)	1	912 391
ALL	(* 6-21)	1	948 705

6.020-3 PLUNGER, Fourspeed Transmission Shift Rail End Reverse

TRK	(* 6-20)	1	912 392
ALL	(* 6-21)	1	946 309

6.020-4 SPRING, Fourspeed Transmission Shift Rail End Reverse Plunger

ALL		1	912 393
-----	-------	---	---------

6.020-5 WASHER, Fourspeed Transmission Shift Rail End Reverse Plunger "C"

ALL		1	912 394
-----	-------	---	---------

6.020-6 BALL, Fourspeed Transmission Shift Rail End Plunger Poppet

ALL	1972 And Prior	17.	1	G147485
ALL	1973	1	321	3666

6.020-7 SPRING, Fourspeed Transmission Shift Rail End Plunger Poppet

ALL		1	912 395
-----	-------	---	---------

6.020-8 PIN, Fourspeed Transmission Reverse Plunger Poppet Retainer

ALL		17.	1	G137185
-----	-------	-----	---	---------

6.021-1 SEAL, Standard Transmission Front Bearing Oil

ALL	(T15A) 232-258-360	1	941 664
ALL	(T15A) 232-258-304-350-360	1	941 664
ALL	(T86AA) 232	1	941 664
TRK	(T89) 232	1	941 664

6.028-1 CAP, Standard Transmission Rear Bearing (Incl. Bushing)

ALL	(T85) 327 (4WD)	1	941 249
ALL	(T86AA) 232 (2WD)	1	941 669
ALL	(T86E) 230 (2WD)	1	906 315
TRK	(T89) 232 (2WD-* 6-12)	1	932 441
TRK	(T89) 232 (2WD-* 6-13)	1	932 405
TRK	(T89E) 230 (2WD-* 6-12)	1	932 441
TRK	(T89E) 230 (2WD-* 6-13)	1	932 405

STANDARD - OVERDRIVE - FOURSPEED - HYDRAMATIC TRANSMISSION

6.164-1 GEAR, Transmission Countershaft

ALL	(T14A) 232-258-360	1	991 043
ALL	(T15A) 232-258-304-350-360	1	991 044
ALL	(T18) 304-360 (W4ST-* 6-18)	1	940 502
ALL	(T18) 232-258-304-360 (W4ST-* 6-19)	1	998 442
TRK	(T85: 31-26-19-15 Teeth) 327	1	947 029
ALL	(T85: 30-25-19-15 Teeth) 327 (2WD)	1	941 247
ALL	(T85: 29-25-19-15 Teeth) 327 (4WD)	1	940 578
ALL	(T86: 33-25-19-14 Teeth) 230 (4WD)	1	936 357
ALL	(T86AA) 232	1	944 769
WAG	(T86E: 32-25-19-14 Teeth) 230 (2WD)	1	K 707 724
TRK	(T89) 232 (2WD)	1	932 411
TRK	(T89) 232 (4WD)	1	932 448
TRK	(T89D: 31-26-19-16 Teeth) 230 (4WD)	1	932 448
TRK	(T89E: 32-26-19-16 Teeth) 230 (2WD)	1	932 411
ALL	(T90A: 33-26-19-14 Teeth) 230	1	906 200
ALL	(T90B: 33-26-19-14 Teeth) 230	1	906 200
TRK	(T98) 230 (W4ST)	1	912 344

6.166-1 WASHER, Transmission Countershaft Gear Thrust (Front)

ALL	W4ST	1	912 348
ALL	(T14A) 232-258-360	1	641 451
ALL	(T15A) 232-258-304-350-360	1	941 662
ALL	(T85) 327	1	932 415
ALL	(T86AA) 232	1	941 662
WAG	(T86E) 230 (2WD)	1	906 317
TRK	(T89) 232	1	932 415
TRK	(T89D)(T89E) 230	1	932 415
ALL	(T90A)(T90B) 230	1	640 409

6.166-2 WASHER, Transmission Countershaft Gear Thrust (Rear)

ALL	(W4ST-Steel)	1	912 350
ALL	(W4ST-Steel Backed Bronze)	1	939 357
ALL	(T14A) 232-258-360	1	991 047
ALL	(T15A) 232-258-304-350-360	1	941 662
ALL	(T85-Steel) 327	1	932 417
ALL	(T85-Bronze) 327	1	940 579
ALL	(T86AA-Steel) 232	1	640 411
ALL	(T86AA-Steel Backed Bronze) 232	1	941 061
WAG	(T86E) 230 (2WD)	1	941 061
TRK	(T89-Steel) 232	1	932 417
TRK	(T89-Steel Backed Bronze) 232	1	940 579
TRK	(T89D-Steel Backed Bronze) 230	1	932 416
TRK	(T89E-Steel) 230	AR	932 417
TRK	(T89E-Steel Backed Bronze) 230	1	932 416
ALL	(T90A)(T90B) 230	1	941 061

6.167-1 ROLLER, Transmission Countershaft Rear Bearing

ALL	W4ST	88	912 345
ALL	(T14A) 232-258-360	40	640 777
ALL	(T15A) 232-258-304-350-360	44	991 042
ALL	(T85) 327 (4WD)	80	932 412
ALL	(T86AA) 232	88	640 777
TRK	(T89) 232	80	932 412
TRK	(T89D)(T89E) 230	80	932 412
WAG	(T86E) 230 (2WD)	88	640 777
ALL	(T90A)(T90B) 230	88	640 777

STANDARD - OVERDRIVE - FOURSPEED - HYDRAMATIC TRANSMISSION

6. 337-1 RING, Overdrive Main Shaft Bearing Retainer Snap

WAG	(.086" Thick) 230		AR	639 441
WAG	(.089" Thick) 230		AR	639 442
WAG	(.092" Thick) 230		AR	639 443
WAG	(.095" Thick) 230		AR	639 444
WAG	(.086" Thick) 232-327		AR	932 107
WAG	(.089" Thick) 232-327		AR	932 108
WAG	(.092" Thick) 232-327		AR	932 109
WAG	(.095" Thick) 232-327		AR	932 110

6. 338-1 SHAFT ASSEMBLY, Overdrive Control

WAG	(T86E) 230		1	941 221
WAG	(T86AA) 232		1	909 319
WAG	(T85) 327		1	941 221

6. 338-2 ATTACHING PARTS, Shaft To Case

PIN, Tapper	 WAG		17.	1	G103565
-------------	-----------	-------	-----	---	---------

6. 338-3 SEAL, Shaft Assembly Oil

WAG			1	640 383
-----	-------	-------	---	---------

6. 350-1 CONTROL ASSEMBLY, Overdrive Cable (Incl. Conduit)

WAG	(T85) 327-LHD		1	930 465
WAG	(T85) 327-LHD		1	930 600
WAG	(T86AA) 232-LHD (60" Long)		1	930 465
WAG	(T86AA) 232-LHD (67" Long)		1	941 837
WAG	(T86E) 230-LHD		1	930 465
WAG	(T86AA) 232-RHD		1	930 600
WAG	(T86E) 230-RHD		1	930 600

6. 350-2 ATTACHING PARTS, Overdrive Control Assembly To Instrument Panel

BOLT, Hexagon	 WAG		17.	2	G120854
NUT, Hexagon	 WAG		17.	2	G271172

6. 350-3 SLEEVE, Overdrive Control

WAG	(T86E) 230		1	908 885
WAG	(T86AA) 230		1	908 835
WAG	(T85) 230		1	908 835

6. 350-4 ATTACHING PARTS, Overdrive Control Cable To Transmission Lever

BOLT, Hexagon	 WAG		17.	1	K 732 749
WASHER, Plain	 WAG		17.	2	G120386
WASHER, Lock	 WAG		17.	1	G120380
NUT, Hexagon	 WAG		17.	1	G120367

6. 350-5 BRACKET, Overdrive Control Cable Clip

WAG	(T86E) 230		1	932 147
WAG	(T85) 327		1	940 601

6. 350-6 BUSHING, Overdrive Control Cable

WAG			1	303 466
-----	-------	-------	---	---------

6. 350-7 BRACKET, Overdrive Control

WAG	(T86E) 230-RHD (Short)		1	930 707
WAG	(T86E) 230-RHD (Long)		1	930 708

STANDARD - OVERDRIVE - FOURSPEED - HYDRAMATIC TRANSMISSION

6.546-1 PIN, Hydramatic Transmission Rear Band

ALL	(Identified By 1 Ring).....	AR	862 4139
ALL	(Identified By 2 Rings).....	AR	862 4140
ALL	(Identified By 3 Rings).....	AR	862 4141

6.548-1 PISTON, Hydramatic Transmission Rear Servo Accumulator

ALL	(* 6-33).....	1	862 3669
ALL	(* 6-34)...(Incl. Seal Rings).....	1	862 6902
ALL	1973.....	1	862 6902

6.548-2 RING, Hydramatic Transmission Rear Servo Accumulator Piston Oil Seal

ALL	...(1.65" O.D. -Aluminum).....	1	862 3671
ALL	(* 6-33)...(2.80" O.D. -Aluminum).....	1	862 3672
ALL	(* 6-34)...(2.80" O.D. -Teflon).....	1	862 7153
ALL	1973...(2.80" O.D. -Teflon).....	1	862 7153

6.548-3 SPRING, Hydramatic Transmission Rear Servo

ALL	...(3/4" Diameter).....	1	862 3666
ALL	(* 6-35)...(1-1/8" Diameter).....	1	862 3667
ALL	(* 6-36)...(1-1/8" Diameter).....	1	862 4256
ALL	1973...(1-1/8" Diameter).....	1	862 4256

6.551-1 ACTUATOR, Hydramatic Transmission Parking Brake (Rod)

ALL	1972 And Prior.....	1	862 3623
ALL	1973.....	1	862 4091

6.551-2 SHAFT, Hydramatic Transmission Manual

ALL	1965/1966...(Incl. "O" Ring Seal).....	1	862 4972
ALL	1967/1972.....	1	863 3714
ALL	1973.....	1	862 7206

6.551-3 "O" RING, Hydramatic Transmission Manual Shaft

ALL	1965/1966.....	1	862 1767
ALL	1967/1972.....	1	862 3056
ALL	1973.....	1	862 1767

6.551-4 PIN, Hydramatic Transmission Manual Shaft Anchor

ALL		1	862 3232
-----	-------	---	----------

6.551-5 DETENT, Hydramatic Transmission Roller And Spring

ALL	1965/1966.....	1	862 3617
ALL	1967/.....	1	862 5773

6.551-6 RING, Hydramatic Transmission Parking Snap (Actuator To Lever)

ALL		1	941 2978
-----	-------	---	----------

6.551-7 LEVER, Hydramatic Transmission Dedent

ALL	1965/1966...(Incl. Pin).....	1	862 3558
ALL	1967/...(Incl. Pin).....	1	862 4336

6.551-8 ATTACHING PARTS, Hydramatic Transmission Manual Shaft

NUT, Hexagon.....	ALL	17.	1	G145005
-------------------	-----	-----	---	---------

6.660

STANDARD - OVERDRIVE - FOURSPEED - HYDRAMATIC TRANSMISSION

6.660-12 PLUG, Valve Body (Pressure Regulator)

ALL		1	862 3292
-----------	-------	---	----------

6.660-13 PLUG, Valve Body (Valve Bore)

ALL (.437" O.D.).....		1	862 3298
ALL (.500" O.D.).....		1	862 3295

6.660-14 SOLENOID ASSEMBLY, Hydramatic Transmission

ALL 1972 And Prior.....		1	862 3788
ALL 1973.....		1	199 3620

6.660-15 ATTACHING PARTS, Solenoid To Valve Body

BOLT, Hexagon	ALL	17.	2	G179795
---------------------	-----------	-----	---	---------

6.665-1 SWITCH, Hydramatic Transmission Kickdown

ALL (Switch Has Screw Terminals).....		1	721 028
ALL (Switch Has Blade Terminals).....		1	992 909

6.665-2 ATTACHING PARTS, Hydramatic Transmission Kickdown Switch To Bracket (WHT)

NUT, Hexagon.....	ALL	17.	1	G107824
-------------------	-----------	-----	---	---------

SHIFTING

7.125-5a ATTACHING PARTS, Shift Rods To Steering Column Lever

NUT, Hexagon.....	ALL	WHT (WCGS).....	17.	1	G271193
WASHER.....	ALL	(Used With T86AA Transmission).....		2	805 942
WASHER, Spring.....	ALL	(Used With T86AA Transmission).....		2	815 535

7.125-5b ATTACHING PARTS, Shift Rod To Bellcrank Lever

WASHER, Plain.....	ALL		17.	1	G120394
PIN, Cotter.....	ALL		17.	1	G137159

7.125-6 TRUNNION, Gear Shift Rod

ALL	230 (WST-WCGS).....		2	930 329
ALL	232-258-304-350-360 (WHT-WCGS-1972 And Prior)....(1-5/8" Long).....		1	930 329
ALL	232-258-304-350-360 (WHT-WCGS-1972 And Prior)....(2" Long).....		1	947 629
ALL	232-258-304-350-360 (WST-WCGS-1972 And Prior).....		2	947 629
WAG	WHT (WFGS-WFC-1972 And Prior).....		1	937 017
WAG	1973.....		1	947 629

7.125-7 ATTACHING PARTS, Trunnion To Shift Rod

NUT, Jam.....	ALL	230.....	17.	2	G272123
NUT, Hexagon.....	ALL	WHT (WCGS)....(7/16" x 20").....	17.	2	G272123
NUT, Hexagon.....	ALL	WHT (WCGS)....(5/16" x 24").....	17.	1	G442826
NUT, Hexagon.....	WAG	WHT (WFGS-WFC).....	17.	1	G121927
NUT, Hexagon.....	ALL	232-258-304-350-360 (WST-WCGS).....	17.	1	G442826

7.125-9 CLIP, Gear Shift Rod Trunnion Retaining

ALL	WCGS.....		1	948 180
-----	-----------	-------	---	---------

7.126-1 PIN, Standard Transmission Shift Rod Clevis

ALL	232-327 (WCGS).....		1	940 049
-----	---------------------	-------	---	---------

7.128-1 SPACER, Gear Shift Bracket To Oil Pan

ALL	230-258 (WHT-WCGS).....		1	940 402
-----	-------------------------	-------	---	---------

7.128-2 SPACER, Gear Shift Bracket To Converter Lower Cover

ALL	230-258 (WHT-WCGS).....		1	940 401
-----	-------------------------	-------	---	---------

7.128-3 ATTACHING PARTS, Spacer To Cover

BOLT, Hexagon.....	ALL	230-258 (WHT-WCGS).....	17.	1	G9411616
BOLT, Hexagon.....	ALL	258.....		1	807 038
WASHER, Lock.....	ALL	230-258 (WHT-WCGS).....	17.	1	G120380
WASHER, Plain.....	ALL	258.....	17.	1	G120393

7.130-2 LEVER, Gear Shift (On Transmission)(Second And High - Outer)

ALL	(T90A)(T90B) 230 (LHD).....		1	930 263
TRK	(T89D)(T89E) 230 (LHD).....		1	930 385
TRK	(T14A)(T15A) 232-304-350-360 (* 7-28).....		2	948 142
TRK	(T14A) 258 (* 7-27).....		1	999 055
ALL	(T85)(T86AA) 327 (LHD).....		1	942 026
TRK	(T89) 232 (LHD).....		1	942 026
WAG	230 (RHD-WCGS).....		1	931 694
TRK	230 (RHD-WCGS-Except GVW "B").....		1	931 509
TRK	230 (RHD-WCGS-GVW "B").....		1	931 650
ALL	(T86AA) 232 (RHD).....		1	942 655
TRK	(T89) 232 (RHD).....		1	941 306

BRAKES - WHEELS

11" x 2" BRAKES - SELF-ADJUSTING

ALL	(Left) 232-327 (2WD)	1	943 152
ALL	(Left) 4WD (1971 And Prior)	1	943 143
ALL	(Left) 258-304-360 (1972)	1	812 1379
WAG	(Left) 258-360 (1973)	1	812 1379
TRK	(Left) 258-360 (GVW "W"-1973)	1	812 1379
ALL	(Right) 232-327 (2WD)	1	939 164
ALL	(Right) 4WD (1971 And Prior)	1	937 949
ALL	(Right) 258-304-360 (1972)	1	812 1380
WAG	(Right) 258-360 (1973)	1	812 1380
TRK	(Right) 258-360 (GVW "W"-1973)	1	812 1380

12" x 2" BRAKES - MANUAL ADJUSTING

TRK	230-232-327	2	920 300
-----	-------------------	---	---------

12" x 2" BRAKES - SELF-ADJUSTING

TRK	(Left) 232-327-350 (Except Model 60-2 Flanged Rear Axle)	1	943 151
TRK	(Left) 232-258-304-350-360 (Model 60-2 Flanged Rear Axle-132WB) 1972 And Prior	1	998 346
TRK	(Left) 258-360 (GVW "X", "Y"-1973)	1	998 346
TRK	(Right) 232-327-350 (Except Model 60-2 Flanged Rear Axle)	1	920 300
TRK	(Right) 232-258-304-350-360 (Model 60-2 Flanged Rear Axle-132WB) 1972 And Prior	1	998 347
TRK	(Right) 258-360 (GVW "X", "Y"-1973)	1	998 347

12-1/8" x 2" BRAKES - SELF-ADJUSTING

TRK	232-258-304-350-360 (3407 Camper)	2	992 541
-----	---	---	---------

8.001-2 ATTACHING PARTS, Plate To Steering Knuckle

BOLT, Hexagon	ALL	230 (2WD-WSFS-* 8-1)...(1" Long)	12	930 682
BOLT, Hexagon	ALL	230 (2WD-WSFS-* 8-2)...(3/4" Long)	17.	10 G180120
BOLT, Hexagon	ALL	4WD (Except 230)	12	942 009
BOLT, Hexagon	ALL	Except 230...(7/8" Long)	8	942 010
BOLT, Hexagon	ALL	232-327 (2WD) ...(1-1/2" Long)	12	930 682
BOLT, Hexagon	ALL	232-327 (2WD) ...(3/4" Long)	17.	10 G180120
BOLT, Hexagon (Nylock)	ALL	232-258-304-350-360	12	992 962
BOLT, Hexagon	WAG	230 (4WD) ...(7/8" Long)	12	942 010
BOLT, Hexagon	TRK	230...(7/8" Long)	12	942 010
BOLT, Hexagon	ALL	258-360 (1973) ...(3/8"-24 x 7/8")	12	535 1497
NUT, Lock	ALL	232-327 (2WD)	12	918 287
LOCKSTRAP	ALL	4WD (Except 230)	6	942 011
SCREW, Cap	ALL	(12 Point Head) 230-232-327 (2WD)	2	938 138
WASHER	ALL	232-327 (2WD)	12	928 990
WASHER, Lock	ALL	230	17.	12 G120382
WASHER, Lock	ALL	232-327 (2WD)	17.	12 G120382

8.002-1 PLATE, Rear Brake Backing

11" x 2" BRAKES - MANUAL ADJUSTING

ALL	230 (WTB-* 8-2)	2	937 949
ALL	232-327 (WTB)	2	937 949
ALL	(Left) 230 (WTB-* 8-1)	1	808 493
ALL	(Left) 230 (LTB-* 8-2)	1	937 956
ALL	(Left) 232-327 (LTB)	1	937 956
ALL	(Right) 230 (WTB-* 8-1)	1	808 494
ALL	(Right) 230 (LTB-* 8-2)	1	937 957
ALL	(Right) 232-327 (LTB)	1	937 957

BRAKES - WHEELS

8.100-14 TUBE, Brake Assembly Union To Union

WAG	232-327		1	940 944
TRK	232-327		1	940 945

8.101-1 CLIP, Brake Tube

AXLE TEE TO AXLE BRACKET

TRK	230-232-327 (Dual Wheels)		2	804 616
-----	---------------------------------	-------	---	---------

AROUND BRAKE HOSE

WAG	230 (* 8-1)	17.	1	G125983
WAG	230 (* 8-2)		1	934 495

BRAKE TUBE TO FRAME

WAG	230 (2WD)		3	929 491
WAG	230 (4WD)		4	929 491
WAG	Except 230		3	929 491
ALL	232 (RHD)		2	800 743

BRAKE TUBE TO REAR AXLE

ALL	...(1/4")	17.	1	G120520
WAG	258-304-360 (1972)		1	929 491
TRK	232-327-350 (132WB)	17.	1	G126166

BRAKE TUBE TO DASH

ALL	230 (RHD)	17.	2	G120521
ALL	RHD (Except 230)	17.	2	G120520

BRAKE TUBE TO GEAR CARRIER HOUSING COVER BOLT

WAG	230 (* 8-1)		1	641 921
ALL	...(1/4")	17.	1	G126166

BRAKE TUBE TO SIDE RAIL

WAG	230	17.	3	G432666
TRK	230	17.	1	G432666
ALL	Except 230	17.	1	G432666

BRAKE TUBE TO SUBRAIL

WAG	230	17.	2	G432666
WAG	258-304-360 (Tee To Hose)	17.	3	G127753
TRK	230	17.	3	G432666
TRK	232-327-350	17.	2	G432666
ALL	WSBS (Except 230)	17.	3	G432666

BRAKE TUBE TO CROSSMEMBER

ALL	230	17.	2	G432666
ALL	(Front) 232-327-350	17.	4	G432666
WAG	(Intermediate) 232-258-304-350-360	17.	2	G432666
WAG	232-258-304-360	17.	2	G127753
TRK	232-258-304-350-360 (132WB)	17.	4	G432666
TRK	(Front) 232-258-304-350-360 (132WB)	17.	4	G127753
TRK	(Intermediate) 232-258-304-350-360 (132WB)	17.	2	G432666

BRAKES - WHEELS

8.214-8 COUPLING, Extension Rod Parking Brake

TRK	230...(2-1/2" Long)		1	922 419
TRK	232-327-350 (Dual Wheels)...(2-1/2" Long)		1	922 419
TRK	232-258-304-350-360 (132WB)...(2-1/2" Long)		1	922 419

8.214-9 ATTACHING PARTS, Coupling To Rod

NUT, Hexagon	TRK	230	17.	1	G120368
NUT, Hexagon	TRK	Except 230	17.	3	G120368
NUT, Stamped	TRK	Except 230	17.	1	G107822

8.215-1 CABLE, Equalizer To Rear Cable

ALL	LHD (1973)		1	535 1673
ALL	RHD (1973)		1	535 1674

8.215-2 CLEVIS, Parking Brake Cable Pivot

ALL			2	535 1659
-----	-------	-------	---	----------

8.215-3 ATTACHING PARTS, Parking Brake Cable Bracket Clevis Pivot

PIN, Clevis	ALL		17.	2	G120690 NA
WASHER, Plain	ALL		17.	6	G120393
*PIN, Cotter	ALL		17.	2	G121224

8.220-1 CABLE, Parking Brake To Rear Wheels

WAG	230 (WST)...(145-3/4" Long)	1	938 181
WAG	LTB (Except 230)...(144-3/4" Long)	1	938 147
TRK	230 (WST-120WB)...(170-1/4" Long)	1	927 625
TRK	230 (WST-126WB)...(181-1/4" Long)	1	929 846
TRK	230 (WAT-120WB)(W4ST-120WB)...(167-1/4" Long)	1	938 182
TRK	230 (WAT-126WB)(W4ST-126WB)...(178-1/4" Long)	1	938 183
TRK	232-258-304-327-350-360 (120WB)(126WB)...(165-3/4" Long)	1	938 148
TRK	232-258-304-327-350-360 (132WB)...(176-3/4" Long)	1	938 149
ALL	258-360 (Except 4700-4800) 1973	2	535 1672
TRK	258-360 (4700-4800) 1973	2	535 1759

8.220-2 ATTACHING PARTS, Cable To Bracket

CLIP	ALL	258-304-360		2	K 733 604
------	-----	-------------	-------	---	-----------

8.220-3 ATTACHING PARTS, Cable To Frame

BOLT, Hexagon	ALL	230	17.	2	G120213
CLAMP	ALL	230		2	911 635
NUT, Hexagon	ALL	230	17.	2	G442826

8.220-4 SPRING, Rear Brake Cable

ALL	1973		2	932 806
ALL	230		2	641 727

8.220-5 CLIP, Spring Retainer

ALL	1973		2	644 106
-----	------	-------	---	---------

8.224-1 BRACKET, Parking Brake Cable Guide

ALL	230		1	931 845
ALL	(Left) 232-258-304-327-350-360		1	938 144
ALL	(Right) 232-258-304-327-350-360		1	938 145

BRAKES - WHEELS

8.400-2 SPACER, Power Brake Unit To Dash

ALL	230 (* 8-15)		4	934 756
ALL	Except 230 (1972 And Prior)		1	939 936
ALL	258-360		1	535 1250
WAG	230		1	932 956
TRK	230		1	932 988

8.400-3 ATTACHING PARTS, Spacer To Dash

BOLT, Hexagon	ALL	1972 And Prior, (3/4" Long)	17.	7	G123520
BOLT, Hexagon	ALL	1972 And Prior, (7/8" Long)	17.	2	G120758
BOLT, Hexagon	ALL	1973	17.	9	G122119
STUD	ALL	Except 230		4	999 346
SHIM	ALL	230... (.030 Thick)		4	959 742
NUT, Hexagon	ALL	Except 230	17.	4	G120377
WASHER, Lock	ALL		17.	9	G120382

8.405-1 REPAIR KIT, Power Brake Power Unit

ALL	230 (* 8-15)		1	934 758
ALL	230 (* 8-16)		1	939 055
ALL	230-232-327-350 (* 8-19)		1	991 218
ALL	232-327 (LSBS)		1	939 055
ALL	232-327 (WSBS-Used Less Tee Or Valve)		1	943 451
ALL	232-327-350 (WSBS-Used With Tee Or Valve)		1	948 040
TRK	232-327-350 (Dual Wheels-WSBS)		1	948 152
ALL	258-304-360		1	992 456

8.405-2 DIAPHRAGM AND PRESSURE PLATE KIT

ALL	230-232-327-350		1	991 219
-----	-----------------	-------	---	---------

8.410-1 BRACKET, Power Brake Power Unit

ALL	(To Fender Skirt) 230		1	932 550
ALL	(Left)		1	934 755
ALL	(Right)		1	934 754

8.410-2 ATTACHING PARTS, Bracket To Dash

BOLT, Hexagon	ALL		17.	4	G123520
NUT, Hexagon	ALL	230-232-327	17.	4	G120369
NUT, Hexagon	ALL	258-304-360	17.	4	G120377
WASHER, Lock	ALL		17.	4	G120382

8.410-3 ATTACHING PARTS, Bracket To Dash

BOLT, Hexagon	ALL	230	17.	2	G123520
---------------	-----	-----	-----	---	---------

8.415-1 POWER SECTION, Power Brake Unit

ALL	(Midland Ross Unit) 230		1	932 894
ALL	230 (* 8-15)		1	934 751
ALL	230 (* 8-16)		1	939 052
ALL	232-327 (LSBS)		1	939 052
ALL	WSBS (Except 230)		1	948 039
ALL	1973		1	812 3034
TRK	232-327-350 (Dual Wheels)		1	948 151

8.420-1 LINK, Power Brake Unit To Brake Pedal

ALL	230 (* 8-15)		1	934 757
ALL	230 (* 8-16)		1	939 054
ALL	232-327 (LSBS)		1	939 054
ALL	232-327-350 (WSBS)		1	943 068
ALL	1973		1	812 3035

NOTES

9-36 Used beginning with the following Serial Numbers:

MODEL	SERIAL NO.	MODEL	SERIAL NO.	MODEL	SERIAL NO.
2406A	10385	2406F	10671	3406E	10385

9-37 Used on Vehicles 1971 and prior with Serial Numbers, Model and Axle Ratio:

MODEL CODE	DRIVE	ENGINE	SERIAL NO.	AXLE RATIO
1414C19	LHD	V8-350	307811	3.31D Std.
1414C19	LHD	V8-350	308034	3.31N Trac-Lok
1414O19	LHD	V8-350	307596	3.73N Trac-Lok
1414O16	LHD	Six-232	211037	4.88X Std.
1414O17	LHD	Six-232	211063	4.09E Std.
1414O17	LHD	Six-232	211110	3.73E Std.
1414C16	LHD	Six-232	201022	4.27Y Std.
2406W19	LHD	V8-350	301578	3.92P Trac-Lok
2406W17	LHD	Six-232	204178	4.27E Std.
2406W17	LHD-RHD	Six-232	204178	4.27Y Std.
3406W19	LHD	V8-350	301870	3.92E Trac-Lok
3406Y19	LHD	V8-350	300342	4.27N Trac-Lok

9-38 Used beginning with 1972 and 1973 Vehicles.

9-39 Used on Axle Assemblies:

930 435	932 340	939 966	940 011
930 436	932 984	939 967	992 061
932 739	932 985	535 0810	535 0811

9-40 Used on Axle Assemblies:

935 831	936 278	937 083
935 832	936 279	937 084

9-41 Used on Axle Assemblies:

933 900	936 275	940 431	940 433
934 624	937 081	940 432	940 434
936 274	937 082		

9-42 Used on Axle Assemblies:

941 284	941 286	941 291	941 293
941 285	941 289	941 292	941 296

9-43 Used on Axle Assemblies:

941 593	941 595	941 597	941 599
941 594	941 596	941 598	941 600

9-44 Used on Axle Assemblies: 912 916, 914 537 and 931 566.

9-45 Used on Axle Assemblies: 941 287, 941 288 and 941 290.

9-46 Used on Axle Assemblies: 941 604, 941 607 and 939 620.

9-47 Used on Axle Assemblies: 915 937, 915 938 and 931 567.

9-48 Used on Axle Assemblies: 941 294 and 941 295.

9-49 Used on Axle Assemblies: 941 605, 941 606 and 941 608.

9-50 Used on Axle Assemblies: 917 955 and 919 494.

9-51 Used on Axle Assemblies: 941 565, 941 566, 941 567 and 941 568.

9-52 Used on Axle Assemblies:

992 655	994 186	994 190	994 499
992 656	994 187	994 487	994 682
992 657	994 188	994 488	994 684
992 658	994 189	994 489	994 685
992 659			

AXLE - PROPELLER SHAFTS

9.036-3 PIN, Rear Axle Differential Shaft (Standard)

ALL	(Model 44).....		1	636 360
-----	-----------------	-------	---	---------

9.036-4 PIN, Rear Axle Differential Shaft (Power-Lok)

ALL	(Model 44-With Tapered Axle Shaft).....	17.	1	G273703
TRK	(Model 53-With Tapered Axle Shaft).....	17.	1	G273703

9.039-1 BLOCK, Rear Axle Differential Pinion Shaft Thrust (Standard)

ALL	(Model 44-With Tapered Axle Shaft).....		1	649 356
TRK	(Model 53-With Tapered Axle Shaft).....		1	908 329

9.039-2 SPACER, Rear Axle Differential Pinion Center Block (Power-Lok)

ALL	(Model 44-With Tapered Axle Shaft).....		2	912 637
TRK	(Model 53-With Tapered Axle Shaft).....		2	912 637

9.041-1 BEARING, Rear Axle Differential Side

ALL	(Model 44-With Tapered Axle Shaft).....		2	52 979
ALL	(Model 44-With Flanged Axle Shaft).....		2	805 311
TRK	(Model 53-With Tapered Axle Shaft).....		2	805 311
TRK	(Model 60-2: With Flanged Axle Shaft).....		2	918 400
TRK	(Model 60-3: With Full Floating Axle Shaft).....		2	918 400
TRK	(Model 70-With Full Floating Axle Shaft).....		2	918 400

9.043-1 CUP, Rear Axle Differential Side Bearing

ALL	(Model 44).....		2	52 980
TRK	(Model 53-With Tapered Axle Shaft).....		2	805 312
TRK	(Model 60-2: With Flanged Axle Shaft).....		2	919 576
TRK	(Model 60-3: With Full Floating Axle Shaft).....		2	919 576
TRK	(Model 70-With Full Floating Axle Shaft).....		2	919 576

9.045-1 SHIM SET, Rear Axle Differential Side Gear Bearing

ALL	(Model 44).....		1	806 483
TRK	(Model 53-With Tapered Axle Shaft).....		1	806 483
TRK	(Model 60-2: With Flanged Axle Shaft).....		1	919 619
TRK	(Model 60-3: With Full Floating Axle Shaft).....		1	919 619
TRK	(Model 70-With Full Floating Axle Shaft).....		1	919 619

9.050-1 GEAR SET, Rear Axle (Incl. Pinion, Pinion Nut And Drive Screws)**MODEL 44**

WAG	(3.31 To 1).....	167		1	940 827
WAG	(3.54 To 1: * 9-60).....	167		1	934 154
WAG	(3.73 To 1).....	167		1	935 650
WAG	(4.09 To 1: * 9-62).....	167		1	935 651
WAG	(4.27 To 1: * 9-64).....	167		1	935 652
WAG	(4.89 To 1: * 9-68).....	167		1	936 137
TRK	(3.54 To 1: * 9-60).....	167		1	934 154
TRK	(3.54 To 1: * 9-61).....	167		1	937 822
TRK	(3.73 To 1: * 9-62).....	167		1	935 650
TRK	(3.92 To 1: * 9-66).....	167		1	943 188
TRK	(3.92 To 1: * 9-67).....	167		1	941 853
TRK	(4.09 To 1: * 9-62).....	167		1	935 651
TRK	(4.09 To 1: * 9-63).....	167		1	931 577
TRK	(4.27 To 1: * 9-64).....	167		1	935 652
TRK	(4.27 To 1: * 9-65).....	167		1	910 073
TRK	(4.89 To 1: * 9-68).....	167		1	936 137
TRK	(4.89 To 1: * 9-69).....	167		1	907 062

AXLE - PROPELLER SHAFTS

REAR (Continued)

4WD - 132WB - 360 (* 9-2)

TRK	WST (69.00" Long-Type 7).....	1	994 717
TRK	WST (71.50" Long-Type 7).....	1	994 716
TRK	W4ST (64.38" Long-Type 7).....	1	930 745
TRK	W4ST (66.06" Long-Type 7).....	1	992 291
TRK	WHT (63.90" Long-Type 7).....	1	999 059
TRK	WHT (65.06" Long-Type 7).....	1	999 058
TRK	WST (4500-71.50" Long-Type 7) 1973.....	1	535 1039
TRK	WST (4600-4700-4800-69.00" Long-Type 7) 1973.....	1	535 1035
TRK	W4ST (4500-66.06" Long-Type 7) 1973.....	1	535 1040
TRK	W4ST (4600-4700-4800-65.06" Long-Type 7) 1973.....	1	535 1036
TRK	WHT (LQT-65.06" Long-Type 7) 1973.....	1	535 1036
TRK	WHT (WQT-63.12" Long-Type 7) 1973.....	1	535 1054

9.100-2 ATTACHING PARTS, Propeller Shaft To Rear Axle (* 9-2)

CLAMP.....	WAG	(Used With Type 9 Shaft) 1972 And Prior.....	2	940 034
BOLT, Hexagon.....	WAG	(Used With Type 9 Shaft) 1972 And Prior.....	17.	4 G454847
"U" BOLT.....	WAG	(Used With Type 7 Shaft) 1973.....	17.	2 A 490
WASHER, Lock.....	WAG	(Used With Type 9 Shaft) 1972 And Prior.....	17.	4 G120380
WASHER, Lock.....	WAG	(Used With Type 7 Shaft) 1973.....	17.	4 G120214
NUT, Hexagon.....	WAG	(Used With Type 7 Shaft) 1973.....	17.	4 G120368

9.100-3 ATTACHING PARTS, Propeller Shaft To Transfer Case (* 9-2)

BOLT, Hexagon.....	WAG	(Used With Type 9 Shaft) 1972 And Prior.....	4	630 595
"U" BOLT.....	WAG	(Used With Type 7 Shaft) 1973.....	17.	2 A 490
WASHER, Lock.....	WAG	(Used With Type 9 Shaft) 1972 And Prior.....	17.	4 G120382
WASHER, Lock.....	WAG	(Used With Type 7 Shaft) 1973.....	17.	4 G120214
NUT, Hexagon.....	WAG	(Used With Type 9 Shaft) 1972 And Prior.....	17.	4 G120369
NUT, Hexagon.....	WAG	(Used With Type 7 Shaft) 1973.....	17.	4 G120368

9.100-4 ATTACHING PARTS, Propeller Shaft To Yoke (Front And Rear)

"U" BOLT.....	ALL		AR	A 490
NUT, Hexagon.....	ALL		17.	AR G120368
WASHER, Lock.....	ALL		17.	AR G120214

9.100-5 ATTACHING PARTS, Rear Propeller Shaft To Transfer Case

BOLT, Hexagon.....	ALL		4	630 595
NUT, Hexagon.....	ALL		17.	4 G120369
WASHER, Lock.....	ALL		17.	4 G120382

9.100-6 ATTACHING PARTS, Propeller Shaft To Front Axle

"U" BOLT.....	ALL	(Used With Type 7 Shaft) 1973.....	17.	2 A 490
WASHER, Lock.....	ALL	(Used With Type 7 Shaft) 1973.....	17.	4 G120214
NUT, Hexagon.....	ALL	(Used With Type 7 Shaft) 1973.....	17.	4 G120368

9.104-1 YOKE, Front Propeller Shaft "U" Joint Sleeve (* 9-1)

ALL	(6" Long-Used With Type 2 Shafts).....	1	937 332
ALL	(7-1/4" Long-Used With Type 1 Shafts).....	1	932 209
WAG	230 (Used With Type 10 Or Type 11 Shafts).....	1	936 493
ALL	258-350-360 (Used With Type 4 Shaft).....	1	932 209
ALL	350 (Used With Type 3 Shaft).....	1	948 980

AXLE - PROPELLER SHAFTS

9.375-4 CAGE, Front Axle Shaft Universal Joint (Rzeppa)

ALL			1	A 1719
-----	-------	-------	---	--------

9.375-5 RACE, Front Axle Shaft Universal Joint (Rzeppa)

ALL			1	810 086
-----	-------	-------	---	---------

9.375-8 RING, Front Axle Shaft Universal Shaft Snap (Rzeppa)

ALL			1	810 095
-----	-------	-------	---	---------

9.380-1 SHAFT, Front Axle Center (Incl. Universal Joint)

WAG	(27) WIFS		1	934 946
TRK	(44) WIFS		1	935 732

9.380-2 SLEEVE, Front Axle Center Bearing Mounting

ALL	(27)(44) WIFS (2WD)		2	936 470
-----	---------------------	-------	---	---------

9.380-3 RING, Front Axle Shaft Snap (Outer)

ALL	(27)(44) WIFS (4WD)		2	649 778
-----	---------------------	-------	---	---------

9.380-4 RING, Front Axle Center Shaft Journal Snap

ALL	(27)(44) WIFS		4	909 453
-----	---------------	-------	---	---------

9.380-5 RING, Front Axle Center Shaft Bearing Snap

ALL	(27)(44) WIFS		1	934 949
-----	---------------	-------	---	---------

9.380-6 WASHER, Front Axle Mounting Sleeve Center Bearing

ALL	(27)(44) WIFS		2	636 570
-----	---------------	-------	---	---------

9.380-7 NUT, Front Axle Center Bearing Mounting Sleeve

ALL	(27)(44)		2	801 367
-----	----------	-------	---	---------

9.385-1 SEAL, Front Axle Carrier End Tube

WAG	(27) WIFS		1	A 779
TRK	(44) WIFS		1	919 327

9.387-1 SCREW, Front Axle Bushing Cross Shaft Center Bearing

ALL	(27)(44) WIFS		2	934 955
-----	---------------	-------	---	---------

9.387-2 WASHER, Front Axle Bushing Cross Shaft Center Bearing

ALL	(27)(44) WIFS		2	934 953
-----	---------------	-------	---	---------

9.387-3 ATTACHING PARTS, Cross Shaft To Center Bearing

NUT, Hexagon	ALL	(27)(44) 230 (Cross Shaft Center Bearing)	17.	4	G272712
NUT, Hexagon	ALL	(27)(44) 230 (Cross Shaft Mounting Stud)		2	801 367
WASHER, Lock	ALL	(27)(44) 230	17.	2	G131101

9.404-1 YOKE, Front Axle To Propeller Shaft

ALL	(27)		1	926 816
ALL	(30)(44)		1	935 685

10.115

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.115-1 BELLCRANK, Steering

ALL	230 (LHD-WSFS)		1	928 753
ALL	(Lower) 230 (LHD-WIFS) ... (Incl. Shaft)		1	930 140
ALL	(Upper) 230 (LHD-WIFS)		1	929 686
ALL	230 (RHD-WSFS)		1	929 541
WAG	230 (RHD-WIFS)		1	929 541
TRK	230 (RHD-4WD-WIFS)		1	929 541

10.115-2 ATTACHING PARTS, Bellcrank To Frame Bracket

BOLT, Kit	ALL	230 (WIFS) ... (Incl. Seal And Spacer)		1	935 789
BOLT, Hexagon	ALL	230 (WIFS)		1	940 291
WASHER, Plain	ALL	230 (WIFS)		2	926 977
NUT, Slotted	ALL	230 (WIFS)	17.	1	G125267
PIN, Cotter	ALL	230 (WIFS)	17.	1	G137204

10.115-3 BEARING, Steering Bellcrank

ALL	230 (WSFS)		2	928 099
ALL	230 (RHD-WIFS)		2	931 710

10.115-4 SPACER, Steering Bellcrank Bearing

ALL	230 (WSFS)		1	645 662
ALL	230 (WIFS)		1	929 990

10.115-5 SEAL, Steering Bellcrank Bearing

ALL	230		2	645 663
-----	-----	-------	---	---------

10.116-1 BRACKET, Steering Bellcrank Support

ALL	230 (WSFS)		1	931 684
ALL	230 (RHD-WIFS)		1	930 153

10.116-2 ATTACHING PARTS, Bellcrank Bracket To Crossmember

BOLT, Hexagon	ALL	230 (RHD-WIFS)	17.	3	G123841
WASHER, Lock	ALL	230 (RHD-WIFS)	17.	3	G120383
NUT, Hexagon	ALL	230 (RHD-WIFS)	17.	3	G271506

10.116-3 ROD, Steering Bellcrank Bracket Support

ALL	230 (RHD-WIFS)		1	937 090
-----	----------------	-------	---	---------

10.116-4 ATTACHING PARTS, Support Rod To Bellcrank Bracket And Front Crossmember

NUT, Hexagon	ALL	230 (RHD-WIFS)	17.	2	G120371
--------------	-----	----------------	-----	---	---------

10.116-5 ATTACHING PARTS, Support Rod To Frame Crossmember

BOLT, Hexagon	ALL	230 (RHD-WIFS)	17.	2	G120647
WASHER, Lock	ALL	230 (RHD-WIFS)	17.	2	G120382
NUT, Hexagon	ALL	230 (RHD-WIFS)	17.	2	G120369

10.117-1 SHAFT, Steering Bellcrank

ALL	230 (WSFS)		1	914 223
-----	------------	-------	---	---------

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.311-1 STUD KIT, Steering Gear Cross Shaft Roller Bearing Adjusting (Incl. Bearings)

ALL	230 (LHD).....	1	932 635
-----	----------------	---	---------

10.314-1 SHAFT, Steering Gear (Incl. Worm)

ALL	230 (LHD-LPS-WSFS)	1	932 640
ALL	230 (LHD-LPS-WIFS).....	1	932 654
ALL	230 (LHD-WPS-WSFS-20 To 1 Ratio-* 10-9).....	1	932 744
ALL	230 (LHD-WPS-WSFS-24 To 1 Ratio-* 10-10).....	1	932 640
ALL	230 (LHD-WPS-WIFS-20 To 1 Ratio-* 10-11).....	1	932 743
ALL	230 (LHD-WPS-WIFS-24 To 1 Ratio-* 10-12).....	1	932 654
ALL	232-327-350 (LHD-WHT-LPS-WCGS-With Cast Iron Side Cover-* 10-1) 163	1	940 528
ALL	232-327-350 (LHD-LPS-With Cast Aluminum Side Cover-1970 And Prior-* 10-1 And * 10-3)	1	940 528
ALL	232-327-350 (LHD-LPS-With Cast Aluminum Side Cover-1970: * 10-1 And * 10-4)	1	998 743
ALL	232-258-304-350-360 (LHD-LPS-1971/1972: * 10-1)	1	998 743
TRK	232-327-350 (LHD-LPS-* 10-2)	1	940 547
ALL	230 (RHD).....	1	932 747
ALL	232 (RHD-LPS-* 10-2)	1	941 406
ALL	258-360 (LHD-LPS-1973)	1	998 504

10.315-1 RING, Steering Gear Shaft Retainer

ALL	230.....	2	932 644
-----	----------	---	---------

10.316-1 GUIDE AND CLAMP KIT, Steering Gear Worm Ball Bearing Return (Incl. Guide, Clamp And Bolts)

ALL	232-258-304-327-350-360 (LHD-LPS-* 10-1)	166	1	940 534
-----	--	-----	---	---------

10.320-1 SEAL, Steering Gear Shaft Oil

ALL	230.....	1	932 637
ALL	LHD (LPS-Except 230: * 10-1)	1	992 292
ALL	232-327-350 (LPS-* 10-2)	1	940 556

10.322-1 BEARING KIT, Steering Gear Worm (Incl. Cups)

ALL	230.....	1	942 063
ALL	232-327-350 (LPS-* 10-2)	1	942 063

10.322-2 BEARING, Steering Gear Worm

ALL	230.....	2	932 643
ALL	LPS (Except 230: * 10-1)	2	940 529
ALL	232-327-350 (LPS-* 10-2)	2	932 643

10.324-1 CUP, Steering Gear Worm Bearing

ALL	230.....	2	932 642
ALL	LHD (LPS-Except 230: * 10-1)	2	940 515
ALL	(Lower) 232-327-350 (LPS-* 10-2).....	1	940 551
ALL	(Upper) 232-327-350 (LPS-* 10-2)	1	940 552

10.324-2 RETAINER, Steering Gear Worm Bearing

ALL	232-258-304-327-350-360 (LHD-LPS-* 10-1)	1	940 532
-----	--	---	---------

10.326-1 ADJUSTER, Steering Gear Worm Ball Bearing

ALL	232-258-304-327-350-360 (LHD-LPS-* 10-1)...(Incl. Cup And Bearing) .. 161	1	940 530
ALL	232-258-304-327-350-360 (LHD-LPS-* 10-1)...(Less Cup And Bearing)	1	996 439

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.440-4 RING, Power Steering Pump Drive Shaft Retainer Snap

ALL	258 (LHD).....		1	448 6725
ALL	350 (LHD-1968/1969).....		1	991 604
ALL	304-360 (LHD-1971).....		1	320 0868
ALL	304-360 (LHD-1972).....		1	448 6725
ALL	327 (LHD).....		1	320 0868

10.440-5 KEY, Power Steering Pump Drive Shaft

ALL	258 (LHD).....		1	320 9659
ALL	350 (LHD).....		1	991 597
ALL	304-360 (LHD-1972/).....		1	320 9659

10.445-1 COVER, Power Steering Pump Body

ALL	304-360 (LHD-1971).....		1	448 8079
ALL	327 (LHD-LEEP)(LHD-LAC-WEED)..... 156		1	320 1903
ALL	327 (LHD-WPS-WEED).....		1	320 0861

10.445-2 ATTACHING PARTS, Power Steering Pump Body Cover To Pump Body

BOLT, Hexagon	ALL	304-360 (LHD-1971).....	17.	2	G179847
BOLT, Hexagon	ALL	327 (LHD).....	17.	2	G179847
PIN, Dowel	ALL	304-360 (LHD-1971).....		2	311 8832
PIN, Dowel	ALL	327 (LHD).....		2	311 8832

10.445-3 VALVE, Power Steering Pump Control

ALL	258 (LHD).....		1	448 8026
ALL	304-360 (LHD-1971).....		1	448 8078
ALL	304-360 (LHD-1972/).....		1	812 0531
ALL	327 (LHD).....		1	320 5296
ALL	350 (LHD-1968/1969).....		1	991 618
ALL	350 (LHD-1970/).....		1	812 0470

10.445-4 SPRING, Power Steering Pump Flow Control Valve

ALL	258-350 (LHD).....		1	991 612
-----	--------------------	-------	---	---------

10.445-5 PLUG, Power Steering Pump Control Valve Retaining

ALL	304-360 (LHD-1971).....		1	320 0865
ALL	327 (LHD).....		1	320 0865

10.445-6 SEAL, Power Steering Pump Control Valve Retaining Plug

ALL	304-360 (LHD-1971).....		1	311 6438
ALL	327 (LHD).....		1	311 6438

10.445-7 SPRING, Power Steering Pump Control Valve Relief Valve

ALL	304-360 (LHD-1971).....		1	320 5297
ALL	327 (LHD).....		1	320 5297

10.445-8 SPRING, Power Steering Pump Flow Control Valve

ALL	258 (LHD).....		1	320 9673
ALL	304-360 (LHD-1972/).....		1	320 9673

10.445-9 SEAT, Power Steering Pump Discharge (In Cover)(For Pressure Hose)

ALL	304-360 (LHD-1971).....		1	448 8080
ALL	327 (LHD).....		1	320 4044

FRONT SUSPENSION - POWER STEERING - STEERING GEAR

10.545-1 SEAL AND RING KIT, Power Steering Gear

ALL	232-327-350 (LHD-1965/1969).....	1	940 704
ALL	232-327-350 (LHD-1970/).....	1	998 677
ALL	258-304-360 (LHD).....	1	998 677

10.550-1 RING KIT, Power Steering Gear "O"

ALL	232-327-350 (LHD-1965/1969).....	1	940 705
ALL	232-327-350 (LHD-1970/).....	1	998 676
ALL	258-304-360 (LHD).....	1	998 676

10.555-1 RACK - PISTON - NUT ASSEMBLY, Power Steering Gear (Incl. Worm, Balls, Guide, Clamp, Piston Ring And "O" Ring)

ALL	232-258-304-327-350-360 (LHD).....	1	940 706
-----	------------------------------------	---	---------

10.565-1 BEARING KIT, Power Steering Gear Lower Thrust (Incl. Races)

ALL	232-258-304-327-350-360 (LHD)..... 141	1	940 719
-----	--	---	---------

10.572-1 BALL KIT, Power Steering Gear Rack-Piston (Incl. Black And Silver Balls)

ALL	(.2817" Dia.-Code #6)...232-258-304-327-350-360 (LHD)..... 144	1	941 676
ALL	(.28125" Dia.-Code #7)...232-258-304-327-350-360 (LHD)..... 144	1	941 677
ALL	(.28133" Dia.-Code #8)...232-258-304-327-350-360 (LHD)..... 144	1	941 678
ALL	(.28141" Dia.-Code #9)...232-258-304-327-350-360 (LHD)..... 144	1	941 679
ALL	(.28149" Dia.-Code #10)...232-258-304-327-350-360 (LHD)..... 144	1	941 689
ALL	(.28157" Dia.-Code #11)...232-258-304-327-350-360 (LHD)..... 144	1	941 690

10.575-1 GUIDE, Power Steering Gear Worm Ball Bearing Return

ALL	232-258-304-327-350-360 (LHD).....	2	940 707
-----	------------------------------------	---	---------

10.577-1 CLAMP, Power Steering Gear Worm Ball Bearing Return Guide

ALL	232-258-304-327-350-360 (LHD).....	1	940 708
-----	------------------------------------	---	---------

10.577-2 ATTACHING PARTS, Power Steering Return Guide Clamp To Rack-Piston

SCREW, Machine..... ALL	237-258-304-327-350-360 (LHD).....	2	998 032
-------------------------	------------------------------------	---	---------

10.580-1 RING, Power Steering Gear Rack-Piston (Teflon)

ALL	232-258-304-327-350-360 (LHD).....	1	940 709
-----	------------------------------------	---	---------

10.582-1 RING, Power Steering Gear Rack-Piston Back-up Seal "O"

ALL	232-258-304-327-350-360 (LHD).....	1	940 710
-----	------------------------------------	---	---------

10.585-1 PLUG, Power Steering Gear Rack-Piston End

ALL	232-258-304-327-350-360 (LHD).....	1	940 711
-----	------------------------------------	---	---------

10.590-1 SHAFT ASSEMBLY, Power Steering Gear Pitman

ALL	232-258-304-327-350-360 (LHD).....	1	940 712
-----	------------------------------------	---	---------

10.595-1 BEARING, Power Steering Gear Pitman Shaft Needle

ALL	232-327-350 (LHD-1965/1967).....	1	940 700
ALL	232-327-350 (LHD-1970/).....	1	998 493
ALL	258-304-360 (LHD).....	1	998 493

NOTES

11-12 ...
11-13 ...
11-14 ...
11-15 ...
11-16 ...

FRAMES - ROAD SPRINGS - SHOCKS - REAR SUSPENSION

TRK	(7 Leaf) 230 (3306-GVW "C")(3406-GVW "C")	2	921 326
TRK	(7 Leaf-Heavy) 230 (GVW "C")	2	927 449
TRK	(7 Leaf-Light) 232 (3408-GVW "Y")	2	994 713
TRK	(7 Leaf-Heavy) 232 (3408-GVW "Y")	2	992 263
TRK	(7 Leaf-Light) 258-304-350-360 (3408-GVW "Y")	2	994 713
TRK	(7 Leaf-Heavy) 258-304-350-360 (3408-GVW "Y")	2	992 263
TRK	(7 Leaf) 258 (3407-GVW "Z")	2	994 713
TRK	(7 Leaf) 304-350-360 (3407-GVW "Z")	2	992 263
TRK	(7 Leaf) 327 (3400-1965/1969)	2	927 449
TRK	(8 Leaf) 230 (GVW "X")	2	934 912
TRK	(8 Leaf) 232-350 (GVW "X"-1965/1969)	2	947 143
TRK	(8 Leaf-Light) 232-350 (GVW "E"-1965/1969-* 11-9)	2	947 142
TRK	(8 Leaf-Light) 232-327 (GVW "E"-1965/1969-* 11-10)	2	941 585
TRK	(8 Leaf) 232 (2300-GVW "W"-1970/1971)(2400-GVW "W"-1970/1971)	2	992 022
TRK	(8 Leaf) 258-304-360 (2300-GVW "X")(2400-GVW "X")	2	535 0605
TRK	(8 Leaf) 258-304-350-360 (2300-GVW "W")(2400-GVW "W")	2	992 022
TRK	(8 Leaf-Heavy) 327 (GVW "X"-1965/1969)	2	941 586
TRK	(9 Leaf) 230 (Dual Wheels-GVW "D")	2	936 569
TRK	(9 Leaf) 232-327 (Dual Wheels-GVW "Z"-1965/1969)	2	936 569
TRK	(9 Leaf) 232-350 (Dual Wheels-GVW "Z"-1965/1969)	2	947 088
TRK	(9 Leaf-Heavy) 232-350 (GVW "Y"-1965/1969)	2	947 138
TRK	(9 Leaf-Heavy) 327 (GVW "Y"-1965/1969)	2	941 476
TRK	(10 Leaf) 230 (GVW "C")	2	932 073
TRK	(10 Leaf-Heavy) 232 (2300-1970/1971)(2400-1970/1971)	2	947 122
TRK	(10 Leaf-Heavy) 258-304-350-360 (2300)(2400)	2	947 122
TRK	(10 Leaf-Heavy) 327 (Camper-GVW "Y"-1965/1969)	2	932 073

1973

WAG	(5 Leaf-Light) 258-360	2	947 157
TRK	(6 Leaf) 258-360 (4500)	2	994 709
TRK	(6 Leaf-Light) 258-360 (4600)	2	994 709
TRK	(6 Leaf-Light) 258-360 (4700)	2	994 713
TRK	(6 Leaf) 258 (4800)	2	994 713
WAG	(6 Leaf-Heavy) 258-360	2	947 159
TRK	(7 Leaf-Heavy) 258-360 (4600-4700)	2	992 263
TRK	(7 Leaf) 360 (4800)	2	992 263
TRK	(8 Leaf-Light) 258-360 (2500)	2	992 022
TRK	(8 Leaf-Light) 258-360 (2600)	2	535 0605
TRK	(10 Leaf-Heavy) 258-360 (2500-2600)	2	947 122

11.100-2 ATTACHING PARTS, Rear Spring To Bracket Or Shackle

BOLT, Hexagon	ALL	(9/16"-18 x 3-3/4")	17.	2	G124404
BOLT, Hexagon	ALL	(9/16"-18 x 4")		2	G124412
BOLT, Hexagon	TRK	(For Lubrication Fitting)...(5/8"-18 x 3-15/16")		2	912 677
WASHER, Plain	ALL	(1-3/4" O.D.)		2	G130999
WASHER, Plain	TRK	(1-5/16" O.D.)		2	G131016
NUT, Hexagon	ALL	(9/16"-18)		2	G9418472
NUT, Hexagon	ALL	(5/8"-18)		2	G9416310

11.100-3 SHIM, Rear Leaf Spring To Axle

WAG	(3 Degrees) 230 (2WD)	2	932 125
TRK	230-232-327 (Dual Wheels)	2	930 762
TRK	304-360 (2400)	2	932 125
TRK	360 (2500)	2	932 125

11.104-1 NO. 1 LEAF, Rear Leaf Spring (Main)

1972 AND PRIOR

WAG	(5 Leaf) 232-327-350 (Station Wagon-1965/1969)	2	945 506 001
WAG	(5 Leaf) 232 (GVW "X"-1970/1971)	2	945 506 001
WAG	(5 Leaf) 258-304-350-360 (GVW "X")	2	945 506 001
TRK	(6 Leaf) 230 (GVW "E", "F")	2	934 012 001
TRK	(6 Leaf) 232 (3408-GVW "W", "X"-1970/1971)	2	A 994 617
TRK	(6 Leaf-Light) 232 (3408-GVW "Y"-1970/1971)	2	A 994 713

NOTES

HOOD - FENDERS - BUMPERS

12-178-1	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-1	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-2	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-2	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-3	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-3	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-4	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-4	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-5	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-5	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-6	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-6	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-7	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-7	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-8	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-8	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-178-9	ATTACHING PARTS	Back Bar Inner To Front Crossmember	12-178-9	ATTACHING PARTS	Back Bar Inner To Front Crossmember
12-184-1	OVERLAY, Vertical Bar		12-184-1	OVERLAY, Vertical Bar	
12-184-2	BAR, Vertical (Front)		12-184-2	BAR, Vertical (Front)	
12-184-3	ATTACHING PARTS	Vertical Bar To Front Bumper Rail	12-184-3	ATTACHING PARTS	Vertical Bar To Front Bumper Rail
12-242-1	SEAL, Front Bumper		12-242-1	SEAL, Front Bumper	

HEATER - AIR CONDITIONING

13.400-2 ATTACHING PARTS, Compressor To Mounting Bracket

BOLT, Hexagon	ALL	232 (1970 And Prior)	17.	4	G180122
BOLT, Hexagon	ALL	232-258 (1971/)... (1-3/8" Long)	17.	1	G180125
BOLT, Hexagon	ALL	232-258 (1971/)... (11/16" Long)		1	400 4072
BOLT, Hexagon	ALL	327	17.	4	G180122
STUD	ALL	232-258 (1971) ... (1-5/16" Long)	17.	2	G113237
STUD	ALL	232-258 (1971/) ... (1-9/16" Long)		1	400 1104
STUD	ALL	304-360	17.	4	G111318
WASHER, Lock	ALL	304-360	17.	4	G120390
WASHER, Lock	ALL	232 (1970 And Prior)	17.	4	G120382
WASHER, Lock	ALL	232-258 (1971/)	17.	3	G120382
WASHER, Lock	ALL	327	17.	4	G120382
WASHER, Plain	ALL	304-360		3	400 1102
WASHER, Plain	ALL	232-258 (1971/)		1	400 3917
NUT, Hexagon	ALL	304-360	17.	4	G120369
NUT, Hexagon	ALL	232-258 (1971/)	17.	2	G120369

13.400-3 SEAL KIT, Air Conditioning Compressor

ALL	232-258-304-360 (1971/)		1	812 0180
-----	-------------------------	-------	---	----------

13.400-4 VALVE PLATE KIT, Air Conditioning Compressor

ALL	232-258-304-360 (1971/)		1	448 5641
-----	-------------------------	-------	---	----------

13.400-5 GASKET KIT, Air Conditioning Compressor

ALL	232-258-304-360 (1971)		1	448 5642
ALL	258-304-360 (1972)		1	812 2073

13.405-1 VALVE, Air Conditioning Compressor Suction And Discharge

ALL	232-258-304-360 (1971/)		2	317 2734
-----	-------------------------	-------	---	----------

13.405-2 GASKET SET, Air Conditioning Compressor Suction And Discharge Valve

ALL	232-258-304-360		1	320 5084
-----	-----------------	-------	---	----------

13.405-3 CAP, Air Conditioning Compressor Suction And Discharge Valve Stem (Incl. Gaskets)

ALL	232-258-304-360 (1971/)... (Incl. 2 Caps)		1	448 8331
-----	---	-------	---	----------

13.410-1 BRACKET, Air Conditioning Compressor Mounting

ALL	232-258 (1971)		1	319 9820
ALL	232-258 (3/8"-24 Weldnut-1972)		1	319 9820
ALL	232-258 (3/8"-16 Weldnut-1972)		1	812 2611
ALL	258 (1973)		1	812 2611
ALL	304-360		1	319 7134
ALL	327-350		1	316 3531

13.410-2 ATTACHING PARTS, Bracket To Cylinder Head

STUD	ALL	304-360	17.	1	G103199
BOLT, Hexagon	ALL	327 (1" Long)	17.	1	G180122
BOLT, Hexagon	ALL	327 (1-1/8" Long)	17.	1	G180123
BOLT, Stud Head	ALL	232-258 (1971/)		2	318 4092
WASHER, Plain	ALL	304-360... (7/16")		1	400 3807
WASHER, Lock	ALL	232-258 (1971/)	17.	2	G131100
WASHER, Lock	ALL	304-360	17.	1	G120382
WASHER, Lock	ALL	327	17.	2	G120382
WASHER, Plain	ALL	304-360		1	400 1102
WASHER, Plain	ALL	327		2	400 1102
NUT, Hexagon	ALL	304-360	17.	1	G120369
NUT, Hexagon	ALL	232-258 (1971/)	17.	2	G120370

NOTES

NOTES

NOTES

The Engine Serial Number, the Vehicle Identification Number and the information provided on the Title Plate are after necessary when determining the proper replacement parts for your vehicle. For more detailed information refer to the General Information Section found at the back of this booklet.

NOTES

16-1 ... Used engines with the following Serial Numbers:

MODEL	SERIAL NO.	MODEL	SERIAL NO.	MODEL	SERIAL NO.
1413	1413	1413	1413	1413	1413
1413C	1413C	1413C	1413C	1413C	1413C
1413	1413	1413	1413	1413	1413
1413	1413	1413	1413	1413	1413
1413	1413	1413	1413	1413	1413

16-2 ... Used engines with the following Serial Numbers:

MODEL	SERIAL NO.	MODEL	SERIAL NO.	MODEL	SERIAL NO.
1413	1413	1413	1413	1413	1413
1413C	1413C	1413C	1413C	1413C	1413C
1413	1413	1413	1413	1413	1413
1413	1413	1413	1413	1413	1413
1413	1413	1413	1413	1413	1413

16-3 ... On 230 Engine use after Engine Serial No. AD-50-C-1413.

AUTOMATIC TRANSMISSION

16.130-1 BAND, Automatic Transmission Front Brake

ALL	230.....		1	917 009
-----	----------	-------	---	---------

16.130-2 STRUT, Automatic Transmission Front Brake Band

ALL	230.....		1	917 013
-----	----------	-------	---	---------

16.135-1 SUPPORT, Automatic Transmission Center (Incl. Bushing)

ALL	230.....		1	933 756
-----	----------	-------	---	---------

16.135-2 ATTACHING PARTS, Support To Case

SCREW, Machine.....	ALL	230.....		2	917 067
WASHER, Lock.....	ALL	230.....		2	649 704

16.140-1 GEAR, Automatic Transmission Sun

ALL	230.....		1	916 931
-----	----------	-------	---	---------

16.140-2 RING, Automatic Transmission Sun Gear Oil Sealing (Front)

ALL	230.....		2	916 932
-----	----------	-------	---	---------

16.140-3 RING, Automatic Transmission Sun Gear Oil Sealing (Center)

ALL	230.....		2	916 933
-----	----------	-------	---	---------

16.140-4 RING, Automatic Transmission Sun Gear Oil Sealing (Rear)

ALL	230.....		2	916 935
-----	----------	-------	---	---------

16.145-7 WASHER, Automatic Transmission Sun Gear Thrust (Front)

ALL	230.....		1	933 763
-----	----------	-------	---	---------

16.145-8 WASHER, Automatic Transmission Sun Gear Thrust (Rear)

ALL	230.....		1	916 936
-----	----------	-------	---	---------

16.150-1 CARRIER, Automatic Transmission Planetary

ALL	230.....		1	933 762
-----	----------	-------	---	---------

16.150-2 WASHER, Automatic Transmission Planetary Carrier Thrust

ALL	230...(.062").....		1	916 939
ALL	230...(.068").....		1	916 940
ALL	230...(.075").....		1	916 941
ALL	230...(.082").....		1	916 942
ALL	230...(.093").....		1	916 943
ALL	230...(.106").....		1	916 944

16.150-3 CLUTCH, Automatic Transmission Planetary Carrier One Way (Sprag)

ALL	230.....		1	933 783
-----	----------	-------	---	---------

16.150-4 RACE, Automatic Transmission Planetary Carrier One Way Clutch

ALL	230.....		1	933 784
-----	----------	-------	---	---------

TRANSFER CASE

18.010-3 PLUG Transfer Case Filler

ALL	17.	1	G444831
-----------	-----	---	---------

18.010-4 PLUG, Transfer Case Drain

ALL	17.	1	G444831
-----------	-----	---	---------

18.010-5 COVER, Transfer Case Bottom

ALL		1	A 953
-----------	--	---	-------

18.010-6 ATTACHING PARTS, Cover To Case

BOLT, Hexagon	ALL	10	937 298
---------------------	-----	----	---------

18.010-7 GASKET, Transfer Case Bottom Cover

ALL		1	A 954
-----------	--	---	-------

18.015-1 CAP, Transfer Case Output Shaft Bearing (Front)

ALL	230 (* 18-6)	1	934 397
ALL	230 (* 18-7)	1	933 722
ALL	Except 230	1	942 784

18.015-2 ATTACHING PARTS, Front Bearing Cap To Case

BOLT, Hexagon	ALL	5	937 304
---------------------	-----	---	---------

18.015-3 GASKET, Transfer Case Front Bearing Cap

ALL		1	A 957
-----------	--	---	-------

18.015-4 OIL SEAL, Transfer Case Front Bearing Cap

ALL		1	923 896
-----------	--	---	---------

18.015-5 GASKET, Transfer Case Front Bearing Cap Oil Seal

ALL		1	A 1134
-----------	--	---	--------

18.025-1 SHAFT, Transfer Case Output Front

ALL	(Stamped 18-362-10) 230-232-327...(Incl. Keyway Slot)	1	933 732
ALL	(Stamped 18-362-24) Except 230...(Less Keyway Slot)	1	942 098

18.025-2 SEAL, Transfer Case Front Output Shaft (Felt)

ALL		1	932 295
-----------	--	---	---------

18.025-3 SEAL, Transfer Case Front Output Shaft Oil

ALL		1	933 726
-----------	--	---	---------

18.025-4 CONE AND ROLLER, Transfer Case Front Output Shaft

ALL	230-232-327 (Timken No. 14131)	2	51 575
ALL	Except 230 (Timken No. 14116)	2	942 113

18.025-5 CUP, Transfer Case Front Output Shaft Cone And Roller

ALL		2	52 883
-----------	--	---	--------

TRANSFER CASE

18.152-8 FITTING, Transfer Case Shift Lever Control Case Bottom Cover Grease

ALL	232-258-304-327-350-360.....	17.	1	G271287
-----	------------------------------	-----	---	---------

18.160-1 ROD, Transfer Case Shift Control (4WD And Neutral)

ALL	232-258-327 (Used With Rod Type Link)	1	940	209
ALL	232-258-304-350-360 (Used With Flat Type Link)	1	947	654

18.160-2 PAWL, Transfer Case Shift Control Rod (4WD And Neutral)

ALL	232-258-304-327-350-360.....	1	940	903
-----	------------------------------	---	-----	-----

18.160-3 SCREW, Transfer Case Shift Control Rod Pawl Set

ALL	232-258-304-327-350-360.....	1	940	239
-----	------------------------------	---	-----	-----

18.165-1 ROD, Transfer Case Shift Control (Direct And Low Range)

ALL	232-258-327-360 (Used With Rod Type Link)	1	944	945
ALL	232-258-304-350 (Used With Flat Type Link)	1	947	655

18.165-2 SPRING, Transfer Case Shift Control Rod Torsion (Direct And Low Range)

ALL	232-258-304-327-350-360 (1972 And Prior).....	1	944	938
ALL	1973.....	1	535	1635

18.165-3 ROD, Transfer Case Shift Control Rod Torsion Spring Retaining

ALL	232-258-304-327-350-360.....	1	943	513
-----	------------------------------	---	-----	-----

18.165-4 ATTACHING PARTS, Rod To Control Case

CLIP, Push-On	ALL	232-258-304-327-350-360.....	2	940	565
---------------------	-----	------------------------------	---	-----	-----

18.165-5 ROD KIT, Transfer Case Shift Control (Direct And Low Range)

ALL	232-258-304-327-350-360.....	1	945	447
-----	------------------------------	---	-----	-----

18.167-1 SPRING, Transfer Case Shift Control Case Anti-Rattle

ALL	232-258-304-327-350-360.....	1	947	097
-----	------------------------------	---	-----	-----

18.170-1 LINK, Transfer Case Shift Control Rod

TRK	(Length Between Center Of Holes Is 1-1/2")... 232 (WST)	2	940	309
TRK	(Length Between Center Of Holes Is 2")... 232 (WST)	2	948	203
ALL	(Length Between Center Of Holes Is 23/32")... 232-258-304-350-360 (WST) ...	2	948	159
TRK	(Length Between Center Of Holes Is 5-3/4")... 232-304-360 (W4ST)	2	940	310
ALL	(Length Between Center Of Holes Is 11-5/64")... 232-258 (WAT)	2	940	311
ALL	(Length Between Center Of Holes Is 5")... 232-258-304-350-360 (WAT).....	2	948	156
ALL	(Length Between Center Of Holes Is 11-9/16")... 258 (WAT).....	2	535	0603
TRK	(Length Between Center Of Holes Is 3-11/16")... 304-350-360 (W4ST)	2	947	701
ALL	(Length Between Center Of Holes Is 6-7/8")... 304-360 (WAT)	2	999	079
WAG	(Length Between Center Of Holes Is 4-1/4")... 327 (W4ST)	2	940	312
ALL	(Length Between Center Of Holes Is 8-3/32")... 327 (WAT).....	2	940	313

18.170-2 ATTACHING PARTS, Link To Shift Rod

PIN, Clevis	ALL	232-258-304-327-350-360.....	17.	4	G138083
PIN, Cotter	ALL	232-258-304-327-350-360.....	17.	4	G112726

TRANSFER CASE

18.570-6 "O" RING, Output Shaft Front And Rear (Quadra Trac)

ALL	18.025	2	933 726
-----------	--------	---	---------

18.575-1 YOKE ASSEMBLY, Transfer Case To Universal Joint Rear (Quadra Trac)

ALL	18.115	1	933 734
-----------	--------	---	---------

18.580-1 GEAR, Speedometer Drive (Quadra Trac)

ALL		1	535 1123
-----------	--	---	----------

18.580-5 BUSHING, Speedometer Driven Gear (Quadra Trac)

ALL		1	A 985
-----------	--	---	-------

18.585-1 VALVE ASSEMBLY, Remote Control At Glove Box (Quadra Trac)

ALL		1	535 1838
-----------	--	---	----------

18.585-2 WASHER, Valve Assembly To Glove Box (Quadra Trac)

ALL	27.290	1	971 043
-----------	--------	---	---------

18.585-3 KNOB, Remote Control Valve Assembly (Quadra Trac)

ALL		1	535 1837
-----------	--	---	----------

18.585-5 TUBE, Valve To Diaphragm Control (Quadra Trac)(Bulk-Order In Feet)

ALL		AR	956 295
-----------	--	----	---------

18.585-6 TUBE, Valve Assembly To Tee (Quadra Trac)(Bulk-Order In Feet)

ALL		AR	956 295
-----------	--	----	---------

18.585-7 TEE, Vacuum Connection At Engine (Quadra Trac)

ALL		1	535 1463
-----------	--	---	----------

18.585-8 HOSE, Vacuum Tee To Diaphragm On Engine (Bulk-Order In Feet)

ALL		AR	320 6752
-----------	--	----	----------

18.585-9 GROMMET, Vacuum Tubes And Reduction Unit Cable (At Firewall)(Quadra Trac)

ALL		1	535 1743
-----------	--	---	----------

18.585-10 STRAP, Vacuum Tube To Speedometer Cable (Quadra Trac)

ALL		2	318 1008
-----------	--	---	----------

18.600-1 REDUCTION UNIT ASSEMBLY (Complete)(Quadra Trac)

ALL 360 (WHT-WQT)		1	535 0733
-------------------------	--	---	----------

18.600-2 ATTACHING PARTS, Reduction Unit To Quadra Trac Assembly

BOLT, Hexagon	ALL		2	535 1708
BOLT, Hexagon	ALL		17.	2 G9419687
BOLT, Hexagon	ALL		17.	1 G9419686

18.600-5 BAFFLE ASSEMBLY, Reduction Unit (Incl. Oil Tube)

ALL 360 (WHT-WQT)		1	812 2979
-------------------------	--	---	----------

BODY SHEET METAL

20.035-3 SEAL, Rear Floor Pan Extension Dust

WAG	2	979 385
-----------	---	---------

20.035-4 ATTACHING PARTS, Seal To Extension

RIVET..... WAG	4	979 226
----------------------	---	---------

20.035-5 PANEL, Rear Floor Pan To Side Sill Extension

WAG (Left).....	1	952 805
WAG (Right).....	1	952 806

20.035-6 COVER, Rear Floor Pan Gas Gauge Access

WAG	1	957 480
-----------	---	---------

20.035-7 ATTACHING PARTS, Cover To Rear Floor Pan

SCREW, Tapping..... WAG	17.	4	G161895
-------------------------------	-----	---	---------

20.040-1 SILL, Rear Cross

WAG Except Panel Delivery.....	1	956 754
WAG Panel Delivery.....	1	959 764

20.040-2 REINFORCEMENT, Rear Cross Sill

WAG	1	957 784
-----------	---	---------

20.040-3 SEAL, Rear Cross Sill Bumper

WAG 230.....	1	960 083
--------------	---	---------

20.070-1 SILL, Front Side

WAG (Left).....	1	952 595
TRK (Left).....	1	952 783
WAG (Right).....	1	952 596
TRK (Right).....	1	952 784

20.115-1 SUPPORT AND BAFFLE, Radiator Grille

ALL 230.....	1	959 757
WAG 232.....	1	969 940
TRK 232-327.....	1	969 940
ALL 258 (1972 And Prior).....	1	984 060
ALL 258 (1973).....	1	545 0282
ALL 304-360 (1972 And Prior).....	1	985 009
ALL 360 (1973).....	1	545 0281
WAG 327 (Except Super Wagoneer).....	1	969 940
WAG 327 (Super Wagoneer).....	1	974 125
WAG 350 (Except Panel Delivery And Super Wagoneer).....	1	977 583
WAG 350 (Panel Delivery).....	1	977 585
WAG 350 (Super Wagoneer).....	1	977 593
TRK 350.....	1	977 585

20.115-2 DEFLECTOR, Radiator Grille Support And Baffle Air

ALL (Left) 230.....	1	959 713
ALL (Right) 230.....	1	959 714

20.115-3 ATTACHING PARTS, Deflector To Support And Baffle

SCREW, Hexagon..... ALL 230.....	6	962 398
WASHER, Plain..... ALL 230.....	6	961 070

BODY SHEET METAL

WINDSHIELD WIPER - COWL VENTILATOR - INSTRUMENT PANEL

22.096-2 ATTACHING PARTS, Retainer To Instrument Panel

SCREW, Tapping.....	ALL	LHD (1973).....	17.	2	G163098
NUT, Hexagon.....	ALL	LHD (1973).....	17.	1	G271166

22.100-1 PAD, Instrument Panel Crash (Side Mounted Radio Speaker)

ALL	(Black) 230-232-327 (* 22-1)	1	965 794
ALL	(Blue) 230-327 (* 22-1)	1	960 771
ALL	(Blue) 232-327 (* 22-2): 350	1	969 900
ALL	(Green) 230-327 (* 22-1)	1	960 770
ALL	(Gold) 230-327 (* 22-1)	1	960 772
ALL	(Red) 230-327 (* 22-1)	1	964 333
ALL	(Red) 232-327 (* 22-2): 350	1	968 122
ALL	(Rawhide) 232-327 (* 22-2): 350	1	976 842

22.100-2 PAD, Instrument Panel Crash (Center Mounted Radio Speaker)

ALL	(Black) LHD (1973)	1	987 946
ALL	(Blue) 1971 And Prior	1	984 332
ALL	(Blue) 1972	1	986 548
ALL	(Charcoal) 1972 And Prior	1	984 331
ALL	(Green) LHD (1973)	1	987 947
ALL	(Rawhide) 1971 And Prior	1	984 333
ALL	(Tan) 1972	1	986 547
ALL	(Tan) LHD (1973)	1	987 948

22.100-3 ATTACHING PARTS, Pad To Panel

CLIP	ALL	1972 And Prior	9	964 949
RETAINER	ALL	1972 And Prior	7	960 601
WASHER, Square	ALL	LHD (1973)	10	545 0210

22.100-4 COVER, Instrument Panel Heater (Less Heater)

ALL		1	957 271
-----------	-------	---	---------

22.100-5 ATTACHING PARTS, Cover To Panel

CLIP	ALL	2	964 956
------------	-----------	---	---------

22.100-6 COVER, Instrument Panel Clock Opening (Less Clock)

ALL	LHD (1973)	1	987 852
-----	------------------	---	---------

22.100-7 ATTACHING PARTS, Cover To Panel

NUT, Stamped	ALL	LHD (1973)	2	G9420863
--------------------	-----	------------------	---	----------

22.100-8 COVER, Instrument Panel Radio Opening (Less Radio)

ALL	LHD (1973)	1	989 012
ALL	RHD (1973)	1	978 213

22.100-9 ATTACHING PARTS, Cover To Panel

WASHER, Plain	ALL	1973	1	972 930
NUT, Hexagon	ALL	1973	1	G271169

22.100-10 NAMEPLATE, Instrument Panel

ALL	1973	1	545 0138
-----	------------	---	----------

22.100-11 ATTACHING PARTS, Nameplate To Pad

NUT, Push On	ALL	1973	2	400 1336
--------------------	-----	------------	---	----------

DOORS - HARDWARE

23.018-5 BRACKET, Rear Door Check Arm

WAG (Holds Door Open) Panel Delivery 2 961 114

23.018-6 BRACKET, Rear Door Check Arm Retainer

WAG (2 Holes In Bracket) Panel Delivery 2 91 167

23.018-7 RETAINER, Rear Door Check Arm Shaft

WAG Panel Delivery 32 961 397

23.018-8 SHIM STRIP, Rear Door Lock Pillar

WAG (24" Long) 2 988 324

23.023-1 PIN, Rear Door Hinge

WAG (Upper) Except Panel Delivery 2 959 792
 WAG (Upper) Panel Delivery 2 959 487
 WAG (Lower) Except Panel Delivery 2 960 002
 WAG (Lower) Panel Delivery 2 959 482

23.023-2 PIN KIT, Rear Door Hinge (With Oiling Provisions)

WAG ... (Incl. 2 Upper And 2 Lower Pins) 1 978 902

23.023-3 SHIM, Rear Door Hinge Plate To Door

WAG (Upper) 2 958 699
 WAG (Lower) 2 958 682

23.039-1 LATCH, Tailgate

WAG (Left) 1 977 731
 WAG (Right) 1 977 732

23.039-2 ATTACHING PARTS, Latch To Tailgate

SCREW, Machine WAG 17. 6 G445638

23.039-3 CONTROL, Tailgate Remote

WAG (Center Of Inner Panel) ... (Incl. Links) 1 961 995

23.039-4 ATTACHING PARTS, Remote Control To Tailgate

SCREW, Machine WAG ... (1/4" Long) 17. 6 G273333
 SCREW, Machine WAG ... (3/8" Long) 17. 2 G188749

23.039-5 HANDLE, Tailgate Latch Release

WAG (Inner) 1 956 374

23.039-6 ATTACHING PARTS, Handle To Latch

SCREW, Oval Head WAG 1 960 212

23.039-7 STRIKER, Tailgate (On Body)

WAG (Left) 23.087 1 976 487
 WAG (Right) 23.087 1 976 488

23.039-8 ATTACHING PARTS, Tailgate Striker To Body

SCREW, Machine WAG ... (3/4" Long) 17. 6 G190959
 SCREW, Machine WAG ... (7/8" Long) 6 973 269
 WASHER, Lock WAG 17. 6 G120423

23.325

DOORS - HARDWARE

23.325-6 ATTACHING PARTS, Junction Block To Tailgate

SCREW, Tapping.....	WAG		17.	2	G162077
---------------------	-----	-------	-----	---	---------

23.325-7 ATTACHING PARTS, Wire Terminals

NUT, Hexagon.....	WAG		17.	5	G271169
-------------------	-----	-------	-----	---	---------

23.330-1 SWITCH, Tailgate Electric Operated Window Regulator (On Instrument Panel)

WAG		165		1	933 926
-----	-------	-----	-------	---	---------

23.330-2 ATTACHING PARTS, Switch To Instrument Panel

SCREW, Tapping.....	WAG		17.	2	G159908
NUT, Hexagon.....	WAG		17.	2	G271166

23.330-3 SWITCH, Tailgate Electric Operated Window Regulator (On Tailgate - Key Operated)

WAG (* 23-7).....	154		1	933 912
WAG (* 23-8).....	154		1	999 616

23.330-4 ATTACHING PARTS, Switch To Mounting Plate


SCREW, Tapping.....	WAG		17.	2	G9417333
---------------------	-----	-------	-----	---	----------

23.330-5 SWITCH, Tailgate Electric Operated Window Regulator Safety (Jam)

WAG				1	934 097
-----	-------	-------	-------	---	---------


23.330-6 ATTACHING PARTS, Switch To Tailgate Inner Panel

SCREW, Machine.....	WAG		17.	2	G159908
NUT, Hexagon.....	WAG		17.	2	G271166

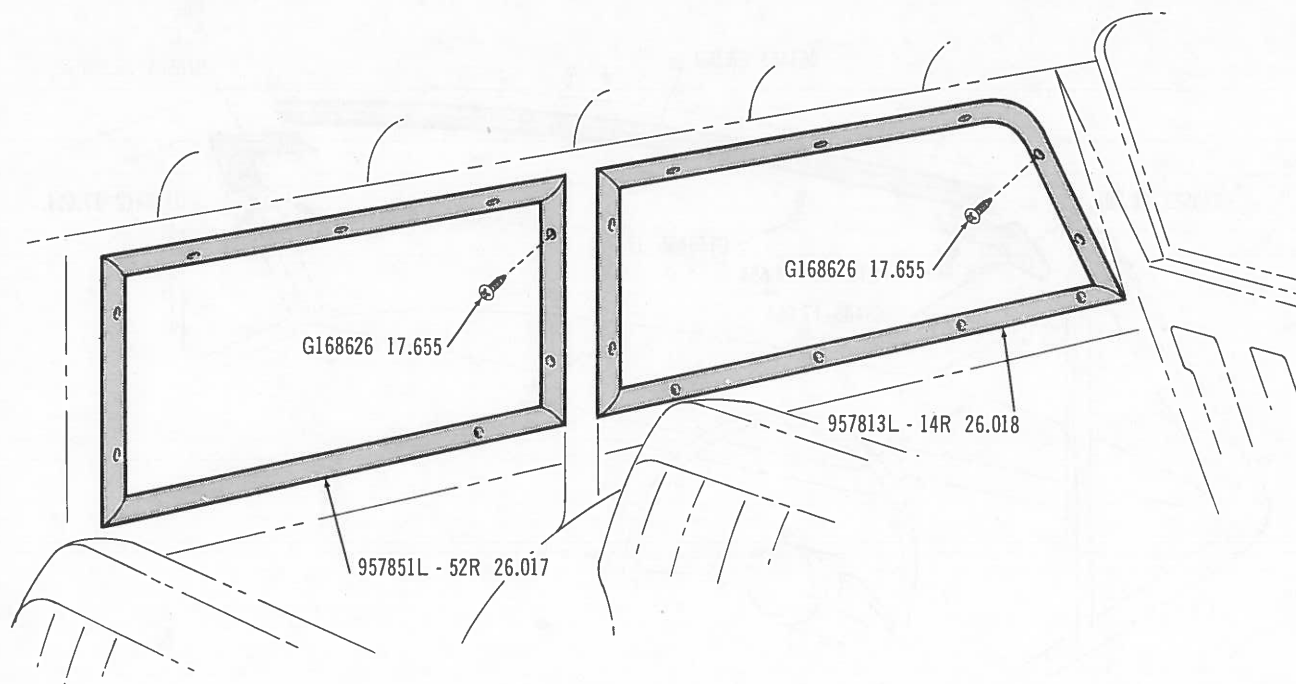 


REAR QUARTER FINISH MOULDINGS . . . WAGONEER (2 DOOR)

 5665

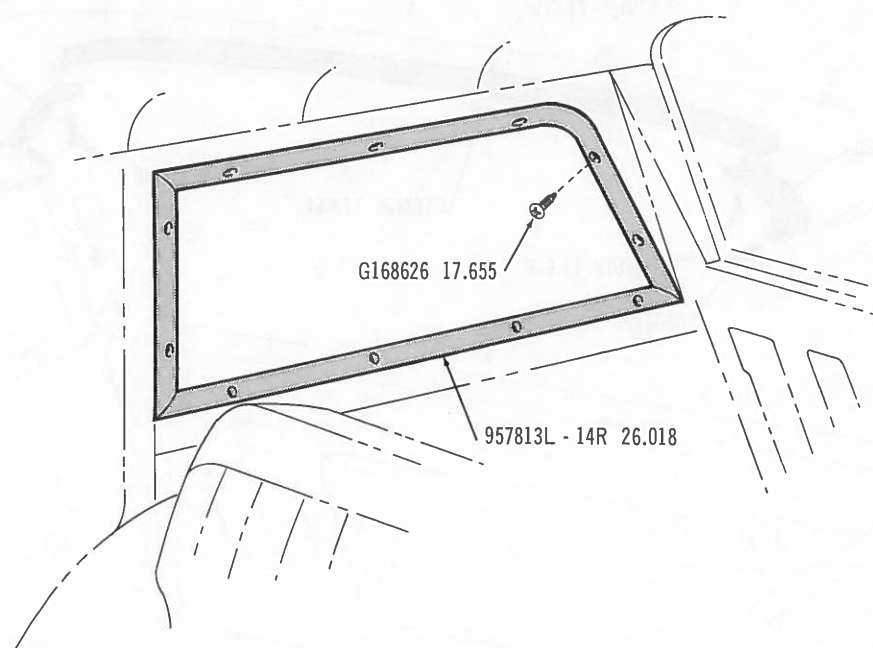

REAR QUARTER FINISH MOULDINGS . . . WAGONEER (4 DOOR-1972 AND PRIOR)

 5666

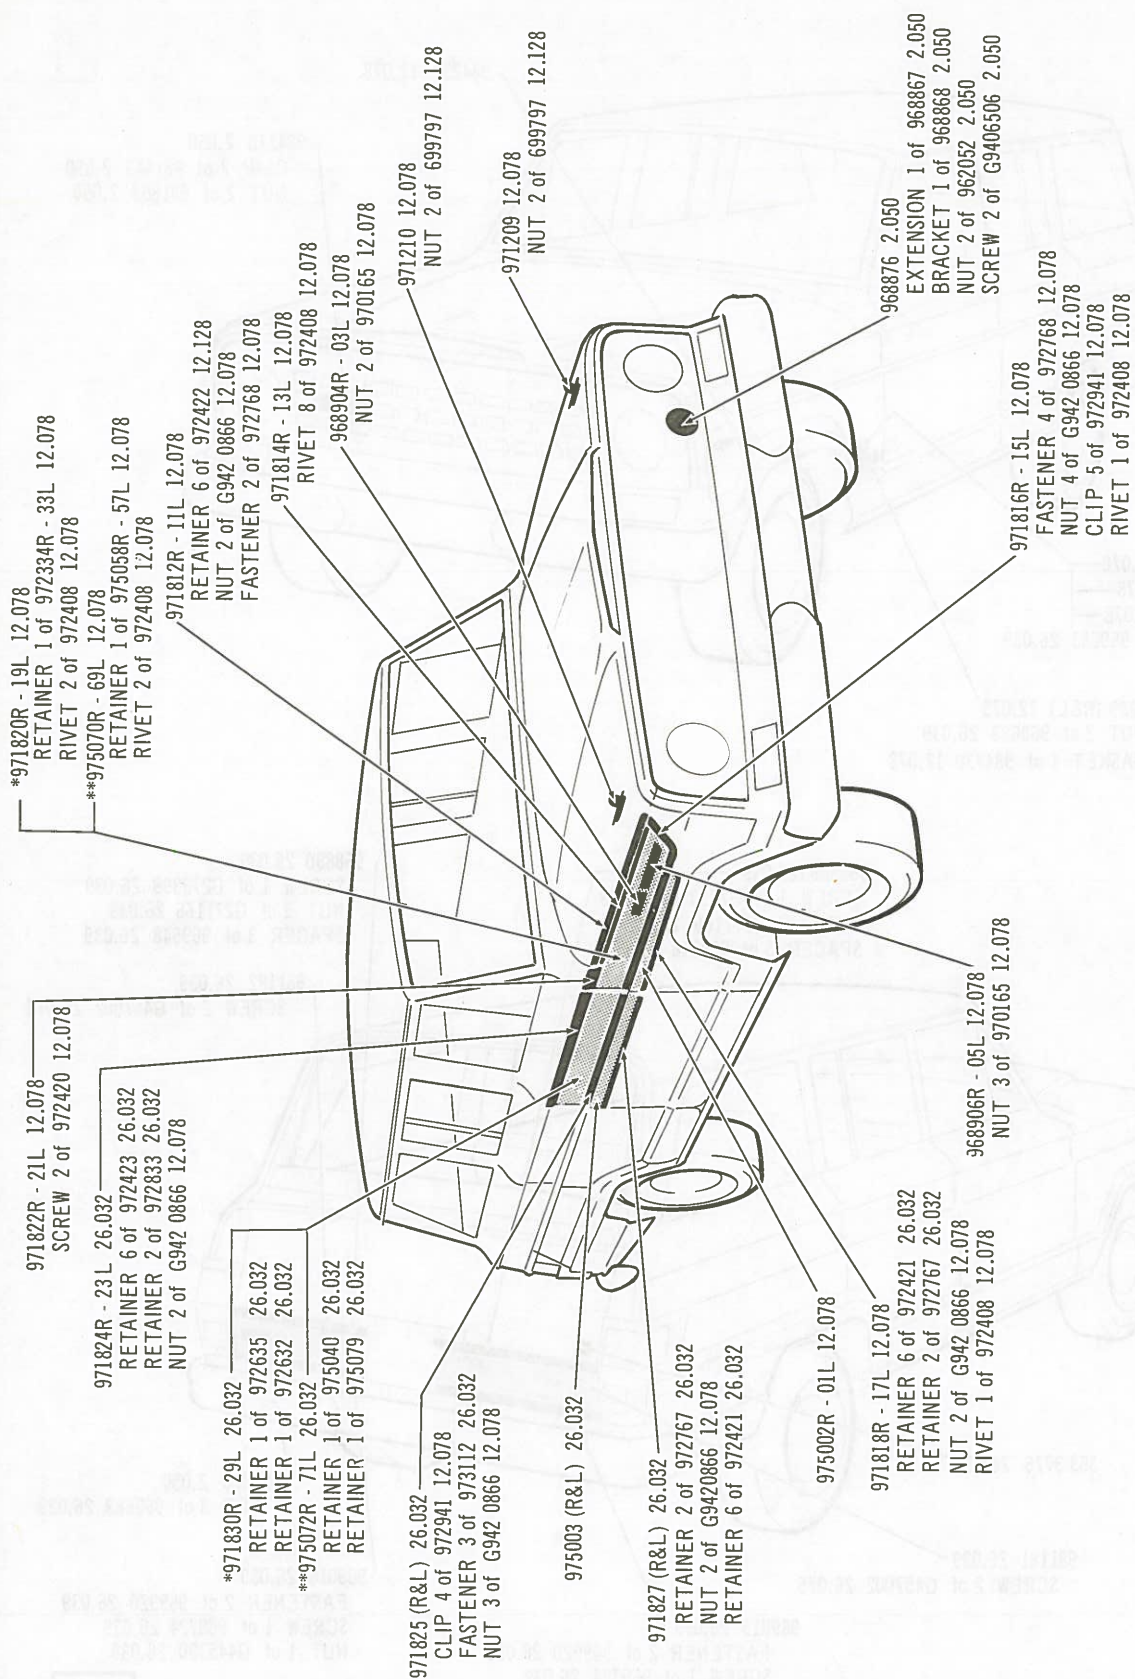


*NOTE: PRIOR TO SERIAL NO. 100649
 **NOTE: AFTER SERIAL NO. 100649

4436

LOWER ORNAMENTATION (FRONT VIEW) ... WAGONEER (1414 D)

 5707

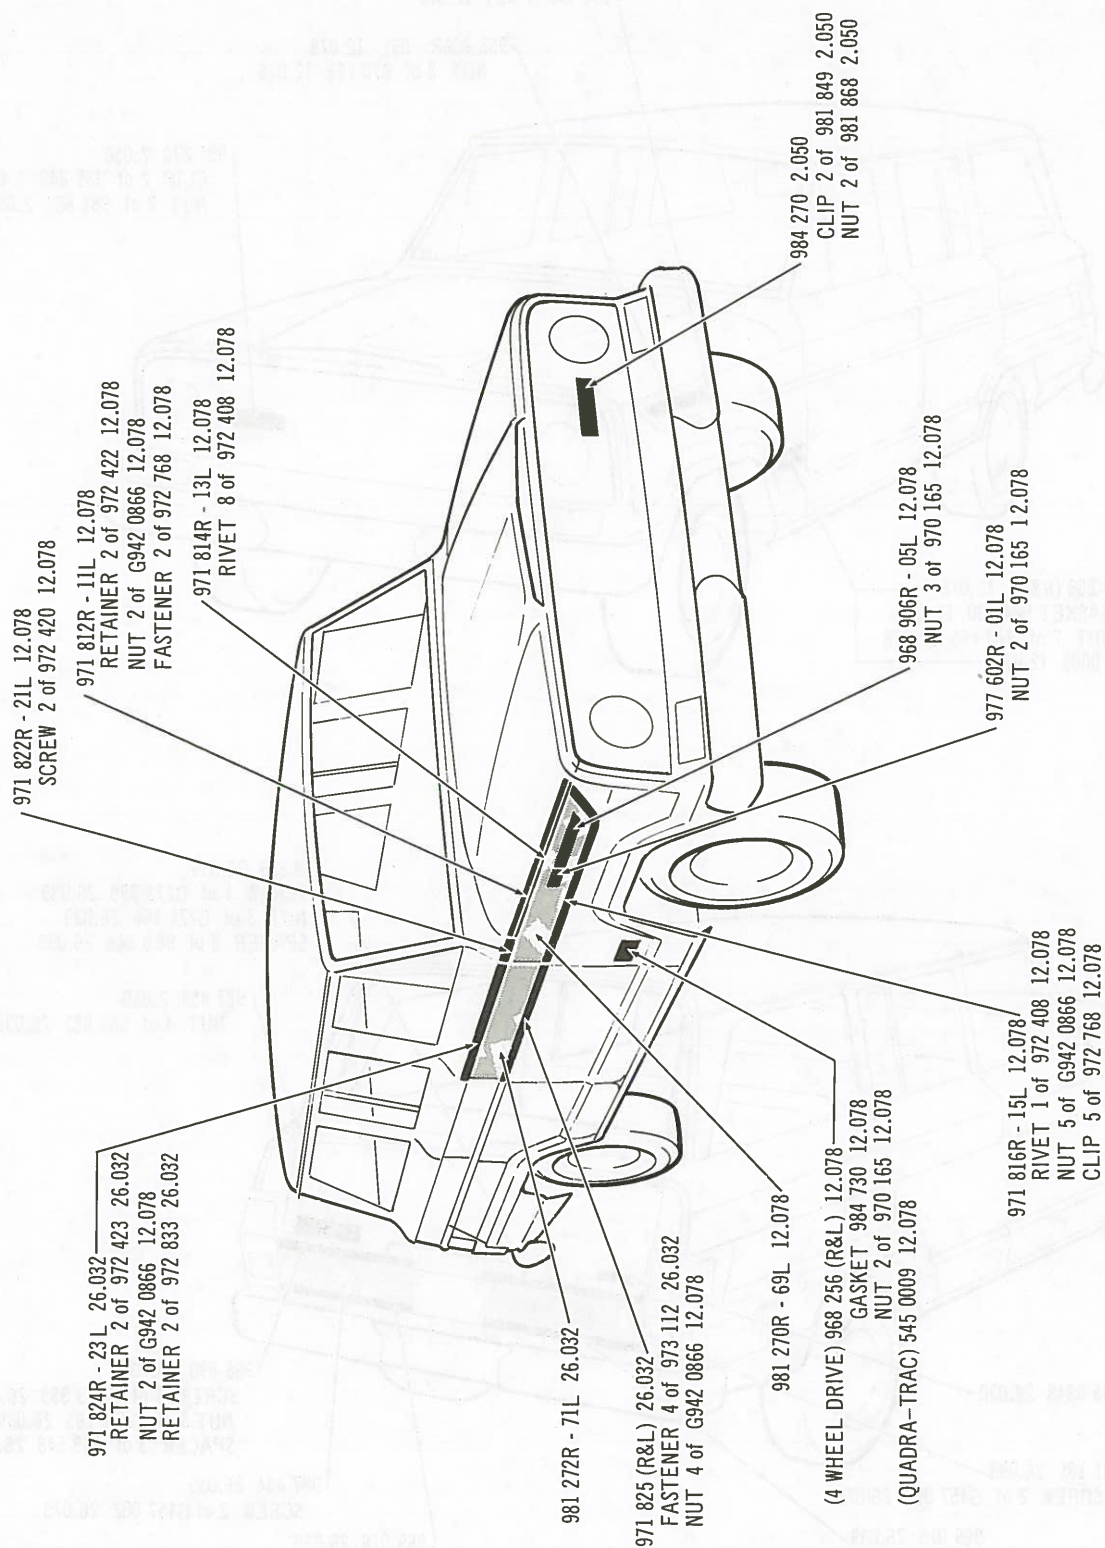

LOWER ORNAMENTATION (FRONT VIEW) . . . 1973 (WAGONEER 1500)

BODY HARDWARE

27.292-2 ATTACHING PARTS, Belt To Roof Rail

BOLT, Shoulder	WAG		4	976 597
BOLT, Shoulder	TRK		2	971 046
WASHER, Plain	WAG		4	G131007
WASHER, Lock	TRK		2	971 043
SPACER	WAG		4	976 930

27.292-3 CLIP, Shoulder Belt Retaining

ALL		4	977 709
-----------	-------	---	---------

27.292-4 ATTACHING PARTS, Clip To Body

SCREW, Tapping.....	ALL		17.	8	G163162
---------------------	-----	-------	-----	---	---------

27.292-5 BOOT, Shoulder Belt

ALL		2	979 970
-----------	-------	---	---------

SEATS - SOFT TRIM

RIGHT

WAG	(Amber-* 29-3)	1	961 432
WAG	(Black-* 29-3)	1	965 774
WAG	(Blue) 1972 (* 29-6)	1	986 528
WAG	(Marlin Blue-* 29-4 And * 29-6)	1	975 866
WAG	(Marlin Blue) 1971 And Prior (* 29-4 And * 29-6)	1	981 556
WAG	(Nordic Blue-* 29-3)	1	961 430
WAG	(Buff) 1972 (* 29-6)	1	986 526
WAG	(Charcoal) 1971 And Prior (* 29-4 And * 29-6)	1	981 558
WAG	(Charcoal-* 29-4 And * 29-6)	1	975 868
WAG	(Sylvan Green-* 29-3)	1	961 428
WAG	(President Red-* 29-3)	1	964 264
WAG	(President Red-* 29-4)	1	975 862
WAG	(Rawhide) 1971 And Prior (* 29-4 And * 29-6)	1	981 554
WAG	(Rawhide-* 29-4)	1	969 332

1973

LEFT

WAG	(Buff)	1	986 525
WAG	(Green)	1	988 451
WAG	(Charcoal)	1	981 557

RIGHT

WAG	(Buff)	1	986 526
WAG	(Green)	1	988 452
WAG	(Charcoal)	1	981 558

29.026-1 PANEL, Rear Quarter Trim Upper

1972 AND PRIOR

LEFT

WAG	Except Super Wagoneer	1	974 997
WAG	Super Wagoneer	1	975 041

RIGHT

WAG	Except Super Wagoneer	1	974 998
WAG	Super Wagoneer	1	975 042

1973

LEFT

WAG	(Buff)	1	988 433
WAG	(Charcoal)	1	988 437
WAG	(Green)	1	988 435

RIGHT

WAG	(Buff)	1	988 434
WAG	(Charcoal)	1	988 438
WAG	(Green)	1	988 436

SEATS - SOFT TRIM

UPHOLSTERY, Front Seat Back (Continued)

T-240	Left	(LHD-2/3 Seat)	1	L00 969 634 063
		(RHD-1/3 Seat)	1	L00 969 661 063
	Right	(LHD-1/3 Seat)	1	L00 969 646 063
		(RHD-2/3 Seat)	1	L00 969 679 063
T-241	Full	(TRK-Without White Accent Stripe)	1	L00 970 587 076
		(TRK-With White Accent Stripe)	1	M00 970 587 017
	Left	(WAG-1/3 Seat-Without White Accent Stripe)	1	L00 971 245 076
		(WAG-1/3 Seat-With White Accent Stripe)	1	M00 971 245 017
		(WAG-LHD-2/3 Seat-Without White Accent Stripe)	1	L00 971 243 076
		(WAG-LHD-2/3 Seat-With White Accent Stripe)	1	M00 971 243 017
	Right	(WAG-RHD-2/3 Seat-Without White Accent Stripe)	1	L00 971 260 076
		(WAG-RHD-2/3 Seat-With White Accent Stripe)	1	M00 971 260 017
		(WAG-LHD-1/3 Seat-Without White Accent Stripe)	1	L00 971 233 076
		(WAG-LHD-1/3 Seat-With White Accent Stripe)	1	M00 971 233 017
T-242	Full	(Without Shadow Stripe)	1	L00 970 587 079
		(With Shadow Stripe)	1	M00 981 134 023
T-243	Full	(Without Shadow Stripe)	1	L00 970 587 080
		(With Shadow Stripe)	1	M00 981 134 024
T-244	Full	(Without Shadow Stripe)	1	L00 970 587 081
		(With Shadow Stripe)	1	M00 981 134 025
T-256		(WBS)	2	L00 970 560 098
T-257		(WBS)	2	L00 970 560 097
T-261	Full		1	L00 971 715 088
T-262	Full		1	L00 971 715 089
T-271			2	M00 972 825 001
T-301	Left	(LHD)	1	M00 971 228 017
		(RHD)	1	M00 971 245 017
	Right	(LHD)	1	M00 971 233 017
T-302	Left		1	M00 971 228 018
	Right		1	M00 971 233 018
T-303	Left		1	M00 971 228 019
	Right		1	M00 971 233 019
T-304	Full		1	M00 970 600 017
T-305	Full		1	M00 970 600 018
T-306	Full		1	M00 970 600 019
T-307	Full	(TRK)	1	M00 970 587 017
	Left	(WAG-LHD-2/3 Seat)	1	M00 971 243 017
		(WAG-1/3 Seat)	1	M00 971 245 017
	Right	(WAG-LHD-1/3 Seat)	1	M00 971 233 017
T-312			1	M00 981 659 039
T-313			1	M00 981 659 040
T-314			1	M00 981 659 041
T-315		(Except Cactus Flower Design)	1	M00 981 882 044
		(Cactus Flower Design)	1	M00 984 541 044
T-316			1	M00 981 882 045
T-317			1	M00 981 882 046
T-319		(With Forward Tilt Back)	1	M00 981 987 047
		(With Fixed Back)	1	M00 985 656 047
T-320		(With Forward Tilt Back)	1	M00 981 987 048
		(With Fixed Back)	1	M00 985 656 048
T-321		(With Forward Tilt Back)	1	M00 981 987 049
		(With Fixed Back)	1	M00 985 656 049
T-323			2	M00 984 153 050
T-324			2	M00 984 153 051
T-325			2	M00 984 153 052
T-326			1	M00 971 150 042
T-327			1	M00 971 715 043
T-328			1	M00 971 715 088
T-344			2	L00 970 560 098
T-345			2	L00 970 560 097
T-346			2	L00 970 560 096
T-347		(With Forward Tilt Back)	1	M00 981 643 039
		(With Fixed Back)	1	M00 985 651 039
T-348		(With Forward Tilt Back)	1	M00 981 643 040
		(With Fixed Back)	1	M00 985 651 040

SEATS - SOFT TRIM

29.151-1 CUSHION ASSEMBLY, Trimmed Front Seat Center (Order Component Parts)

29.152-1 UPHOLSTERY, Front Seat Cushion (Cover)

T-181		1	N00 960 722 077
T-182		1	N00 960 722 078
T-183		1	N00 960 722 079
T-184		1	N00 961 551 083
T-185		1	N00 961 551 084
T-186		1	N00 961 551 085
T-208	Full	1	N00 960 722 079
	Left		
	(LHD-1/3 Seat)	1	N00 963 685 079
	(LHD-2/3 Seat)	1	N00 960 725 079
	(RHD-1/3 Seat)	1	N00 963 685 079
	Right		
	(LHD-1/3 Seat)	1	N00 960 727 079
	(RHD-2/3 Seat)	1	N00 963 676 079
T-209		1	N00 960 722 080
T-210		1	N00 960 722 081
T-211		1	N00 960 722 082
T-212	Left	1	N00 960 725 077
	Right	1	N00 960 727 077
T-213	Left	1	N00 960 725 078
	Right	1	N00 960 727 078
T-214	Left		
	(LHD-2/3 Seat)	1	N00 960 725 079
	(RHD-1/3 Seat)	1	N00 963 685 079
	Right		
	(LHD-1/3 Seat)	1	N00 960 727 079
	(RHD-2/3 Seat)	1	N00 963 676 079
T-215	Left	1	N00 961 561 083
	Right	1	N00 961 571 083
T-216	Left	1	N00 961 561 084
	Right	1	N00 961 571 084
T-217	Left		
	(LHD-2/3 Seat)	1	N00 961 561 085
	(RHD-1/3 Seat)	1	N00 963 693 085
	Right		
	(LHD-1/3 Seat)	1	N00 961 571 085
	(RHD-2/3 Seat)	1	N00 963 688 085
T-222		1	L00 964 290 037
T-223		1	L00 964 290 046
T-228		2	L00 970 570 096
T-229	(Without White Accent Stripe)	1	L00 970 611 076
	(With White Accent Stripe)	1	M00 970 611 017
T-230	(Without White Accent Stripe)	1	L00 970 611 077
	(With White Accent Stripe)	1	M00 976 611 018
T-231	(Without White Accent Stripe)	1	L00 970 611 078
	(With White Accent Stripe)	1	M00 970 611 019
T-232		1	L00 969 611 061
T-233		1	L00 969 611 062
T-234		1	L00 969 611 063
T-235	Left		
	(LHD-Without White Accent Stripe)	1	L00 971 231 076
	(LHD-With White Accent Stripe)	1	M00 971 231 017
	(RHD-Without White Accent Stripe)	1	L00 972 648 076
	(RHD-With White Accent Stripe)	1	M00 972 648 017
	Right		
	(LHD-Without White Accent Stripe)	1	L00 971 240 076
	(LHD-With White Accent Stripe)	1	M00 971 240 017
	(RHD-Without White Accent Stripe)	1	L00 971 253 076
	(RHD-With White Accent Stripe)	1	M00 971 253 017
T-236	Left		
	(Without White Accent Stripe)	1	L00 971 231 077
	(With White Accent Stripe)	1	M00 971 231 018
	Right		
	(Without White Accent Stripe)	1	L00 971 240 077
	(With White Accent Stripe)	1	M00 971 240 018
T-237	Left		
	(Without White Accent Stripe)	1	L00 971 231 078
	(With White Accent Stripe)	1	M00 971 231 019
	Right		
	(Without White Accent Stripe)	1	L00 971 231 078
	(With White Accent Stripe)	1	M00 971 231 019

SEATS - SOFT TRIM

UPHOLSTERY, Rear Seat Back (Continued)

T-379	1	985 899 574
T-380	1	986 669 575
T-381	1	986 669 576
T-382	1	986 669 577
T-427	1	988 245
T-428	1	988 246
T-429	1	988 247
T-430	1	988 304
T-431	1	988 305
T-432	1	988 306
T-433	1	988 307
T-434	1	988 308
T-435	1	988 309
T-436	1	988 304
T-437	1	988 305
T-438	1	988 306

29.212-2 ATTACHING PARTS, Upholstery Cover To Back Frame Assembly

SCREW, Tapping.....	WAG	1969 And Prior (* 29-18 And * 29-19).....	17.	2	G163622
SCREW, Tapping.....	WAG	1970 (* 29-20)		4	977 890
SCREW, Tapping.....	WAG	1971/.....		4	977 890
WASHER, Finish.....	WAG	1969 And Prior (* 29-18 And * 29-19).....	17.	2	G140270
HOG RING	WAG			AR	605 688
RETAINER, Metal	WAG	(* 29-20).....		1	960 376

29.217-1 LOCK ASSEMBLY, Rear Seat Back (Incl. Plunger And Bracket)(On Wheelhouse Panel)

WAG (* 29-19).....		2	976 196
--------------------	-------	---	---------

29.217-2 ATTACHING PARTS, Lock To Mounting Bracket

BOLT, Machine.....	WAG	(* 29-19).....	17.	4	G425592
WASHER, Plain.....	WAG	(* 29-19).....	17.	4	G446363
SHIM	WAG	(* 29-19).....		AR	976 224

29.217-3 BRACKET, Rear Seat Back Lock Hold Down (On Wheelhouse Panel)

WAG (* 29-19).....		2	976 023
--------------------	-------	---	---------

29.217-4 KNOB, Rear Seat Back Lock Plunger

WAG (* 29-19).....		2	976 195
--------------------	-------	---	---------

29.217-5 SPOOL, Rear Seat Hold Down Latch

WAG 1970/1972 (* 29-20)		2	981 524
WAG 1973.....		2	981 524

29.217-6 ATTACHING PARTS, Spool To Inner Wheelhouse Panel

SCREW, Machine.....	WAG	1970/1972 (* 29-20)		2	981 561
SCREW, Machine.....	WAG	1973.....		2	981 561

29.219-1 BRACKET, Rear Seat Back Lock Retaining

WAG (Left-* 29-19).....		1	976 161
WAG (Right-* 29-19)		1	976 162

29.219-2 ATTACHING PARTS, Back Retaining Bracket

SCREW, Machine.....	WAG	(* 29-19).....	17.	4	G9416872
---------------------	-----	----------------	-----	---	----------

SEATS - SOFT TRIM

29.309-1 INSULATION, Dash

ALL	(Left).....	1	545 0005
ALL	(Right) LHD.....	1	545 0216
ALL	(Right) RHD.....	1	965 556

29.309-2 ATTACHING PARTS, Insulation To Dash

FASTENER.....	ALL LHD.....	7	959 320
FASTENER.....	ALL RHD.....	11	959 320

29.309-3 INSULATION, Front Floor Pan

WAG	(Left) Except Panel Delivery.....	1	970 189
WAG	(Left) Panel Delivery.....	1	963 229
TRK	(Left).....	1	963 229
WAG	(Right) Except Panel Delivery.....	1	965 722
WAG	(Right) Panel Delivery.....	1	965 724
TRK	(Right).....	1	965 724

29.309-4 INSULATION, Front Floor Pan (Front)

WAG	(Left).....	1	979 317
WAG	(Right).....	1	979 318

29.309-5 INSULATION, Front Floor Pan (Rear)

WAG	(Left).....	1	979 291
WAG	(Right).....	1	979 292

29.309-6 INSULATION, Rear Seat Well

WAG		1	970 630
-----	-------	---	---------

29.358-1 STORMSTRIP, Door

FRONT DOOR - EXCEPT 1972

ALL	(Amber) 1971 And Prior (* 29-3)...(120'')	2	969 501
WAG	(Black) 1971 And Prior (* 29-3)...(120'')	2	965 779
ALL	(Marlin Blue-Top Left) 1970 And Prior...(22'')	1	981 505
ALL	(Marlin Blue-Top Right) 1970 And Prior...(22'')	1	981 506
ALL	(Marlin Blue-Front) 1970 And Prior...(73-3/4'')	2	981 455
ALL	(Marlin Blue-Left) 1971...(Incl. Weatherseal).....	1	986 097
ALL	(Marlin Blue-Right) 1971...(Incl. Weatherseal).....	1	986 098
ALL	(Marlin Blue-Rear) 1970 And Prior...(51-1/4'')	2	981 459
ALL	(Marlin Blue) 1971 And Prior (* 29-4 And * 29-5)...(120'')	2	969 502
ALL	(Nordic Blue) 1971 And Prior (* 29-3)...(120'')	2	959 802
ALL	(Sylvan Green) 1971 And Prior (* 29-3)...(120'')	2	959 801
ALL	(Charcoal-Top Left) 1970 And Prior...(22'')	1	981 507
ALL	(Charcoal-Top Right) 1970 And Prior...(22'')	1	981 508
ALL	(Charcoal-Front) 1970 And Prior...(73-3/4'')	2	981 456
ALL	(Charcoal-Rear) 1970 And Prior...(51-1/4'')	2	981 500
ALL	(Charcoal) 1971 And Prior (* 29-4 And * 29-5)...(120'')	2	969 503
ALL	(Charcoal-Left) 1971 And Prior...(Incl. Weatherseal).....	1	986 099
ALL	(Charcoal-Right) 1971 And Prior...(Incl. Weatherseal).....	1	986 100
ALL	(Rawhide-Top Left) 1970 And Prior...(22'')	1	981 501
ALL	(Rawhide-Top Right) 1970 And Prior...(22'')	1	981 502
ALL	(Rawhide-Front) 1970 And Prior...(73-3/4'')	2	981 453
ALL	(Rawhide-Rear) 1970 And Prior...(51-1/4'')	2	981 457
ALL	(Rawhide-Left) 1971...(Incl. Weatherseal).....	1	986 095
ALL	(Rawhide-Right) 1971...(Incl. Weatherseal).....	1	986 096
ALL	(Rawhide) 1971 And Prior (* 29-4 And * 29-5)...(120'')	2	969 501
WAG	(President Red) 1971 And Prior (* 29-3)...(120'')	2	964 253
WAG	(President Red) 1971 And Prior (* 29-4 And * 29-5)...(120'')	2	964 253

PICK-UP BOX AND STAKE BODY

TOWNSIDE

BOLT, Hexagon	TRK		17.	2	G123899
WASHER, Plain.....	TRK			4	984 504
LINER, Sill	TRK			4	670 540
NUT, Lock.....	TRK			2	918 290
NUT, Stamped.....	TRK		17.	2	G107825
PLUG, Button	TRK		17.	2	G432449

31.005-1 SPACER, Floor Strainer To Frame Crossmember

TRK			2	958 404
-----	-------	-------	---	---------

31.005-2 ATTACHING PARTS, Spacer To Floor Strainer

BOLT, Hexagon	TRK		17.	2	G121966
WASHER, Plain.....	TRK		17.	4	G446188
NUT, Lock.....	TRK			2	918 286

31.005-3 BRACKET, Body Hold Down

TRK	(Crossmember No. 1) Thriftside-Townside.....		2	957 538
TRK	(Crossmember No. 2) Thriftside-Townside.....		2	959 359
TRK	(Crossmember No. 3) Thriftside		2	959 359

31.005-4 PLATE, Crossmember

TRK	Thriftside		4	959 273
-----	------------------	-------	---	---------

31.005-5 BRACKET, Angle Stabilizer (Rear Crossmember)

TRK	Thriftside		2	957 927
-----	------------------	-------	---	---------

31.005-6 SPACER, Body Hold Down To Crossmember

TRK	Thriftside		4	957 921
-----	------------------	-------	---	---------

31.006-1 BRACKET, Tail And Back-Up Lamp (Thriftside)

TRK	(Left).....		1	978 989
TRK	(Right).....		1	978 990

31.006-2 ATTACHING PARTS, Tail Lamp Bracket To Rear Side Post (Thriftside)

SCREW, Machine.....	TRK		4	961 089
---------------------	-----	-------	---	---------

31.020-1 PANEL ASSEMBLY, Front

TRK	Thriftside		1	959 055
TRK	Townside		1	957 697

31.030-1 PANEL ASSEMBLY, Body Side

THRIFTSIDE (Incl. Lock Half)

TRK	(Left) 120WB		1	958 189
TRK	(Left) 126WB		1	958 193
TRK	(Right) 120WB		1	958 190
TRK	(Right) 126WB		1	958 194

TOWNSIDE (Incl. Fenders And Side Shields)(Used With Back-Up Light Holes)

TRK	(Left) 120WB (1972 And Prior)		1	977 605
TRK	(Left) 120WB (1973)		1	987 787
TRK	(Left) 126WB		1	977 607
TRK	(Left) 132WB (1972 And Prior)		1	979 889
TRK	(Left) 132WB (Used Less Auxiliary Gas Tank-1973)		1	987 789
TRK	(Left) 132WB (Used With Auxiliary Gas Tank-1973)		1	989 941

PICK-UP BOX AND STAKE BODY

21-360-1 BRACKET, Splice To 211 (2-1/2")

21-360-2 ATTACHING PARTS Splice Bracket To 211

21-360-3 ATTACHING PARTS Splice Bracket To Splice

21-370-1 FILTER PANEL ASSEMBLY, Rear

21-370-2 ATTACHING PARTS Filter Panel To Platform

21-370-3 ATTACHING PARTS Filter Panel To Splice

21-380-1 BRACKET ASSEMBLY Tail Light

21-380-2 ATTACHING PARTS Tail Light Bracket To Filter Panel

21-390-1 STEER ASSEMBLY, Rear Top

21-400-2 ATTACHING PARTS Top Steer To Platform

21-400-3 ATTACHING PARTS Top Steer To Frame

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL