

All rights reserved by **CNHi**.

The information contained in this catalogue is intended to be of a general nature only. **CNHi** may at any time and from time to time, for technical or other necessary reasons, modify any of the details or specifications of the product described in this catalogue.

To be sure of getting accurate, detailed and up-to-date information, an intending buyer should consult his nearest **CNHi** dealer or distributor.

Single item numeration method used in this catalogue may not be used without written consent from **CNHi**.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

---

## TABLE OF CONTENTS

---

01-038	03	CONTROLS, OPERATORS, ANGLE DOZER
01-039		COVER ASSY
01-040		SUPPORT ASSY (ADJUSTABLE)
01-041		GRIP ASSY
01-042		LEVER ASSY, CONTROL
01-055		PLATE GROUP, FLOOR, CAB
01-055		PLATE GROUP, FLOOR, CANOPY
01-056	01	CAB INSTAL
01-056	02	CAB INSTAL
01-056	03	CAB INSTAL
01-056	04	CAB INSTAL
01-056	05	CAB INSTAL
01-056	06	CAB INSTAL
01-056	07	CAB INSTAL
01-056	08	CAB INSTAL
01-056	09	CAB INSTAL
01-057	01	CAB INSTAL, HEAD GUARD, COOLER
01-057	02	CAB INSTAL, HEAD GUARD, COOLER
01-057	03	CAB INSTAL, HEAD GUARD, COOLER
01-057	04	CAB INSTAL, HEAD GUARD, COOLER
01-057	05	CAB INSTAL, HEAD GUARD, COOLER
01-057	06	CAB INSTAL, HEAD GUARD, COOLER
01-057	07	CAB INSTAL, HEAD GUARD, COOLER
01-057	08	CAB INSTAL, HEAD GUARD, COOLER
01-057	09	CAB INSTAL, HEAD GUARD, COOLER
01-058	01	CAB INSTAL
01-058	02	CAB INSTAL
01-058	03	CAB INSTAL
01-058	04	CAB INSTAL
01-058	05	CAB INSTAL
01-058	06	CAB INSTAL
01-058	07	CAB INSTAL
01-058	08	CAB INSTAL
01-059	01	CAB INSTAL, WITH HEAD GUARD

 
 
 
03-004

04


p2

10/201  
8


CYLINDER INSTALL, CANOPY

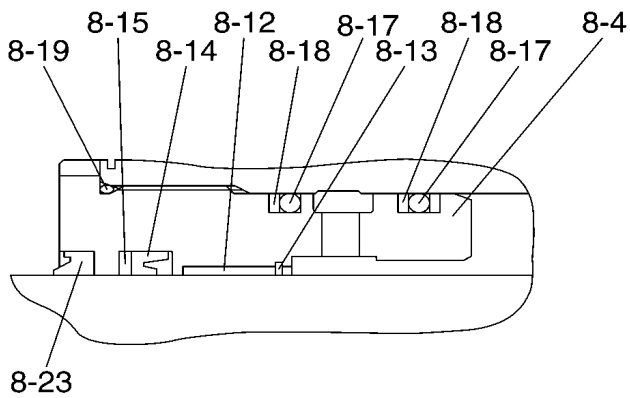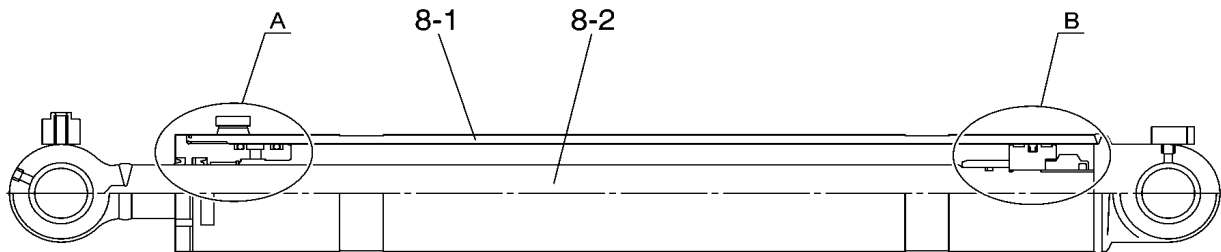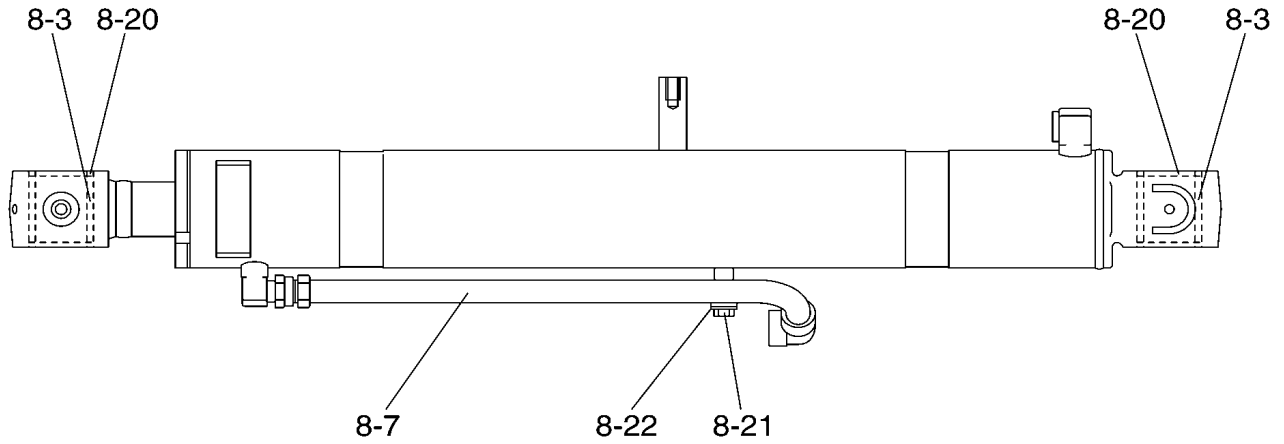

DETAIL A

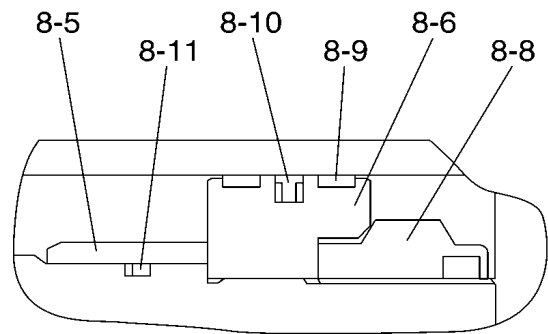 

DETAIL B

 

01-041

01

 
p1

10/201  
8


GRIP, ASSY



1

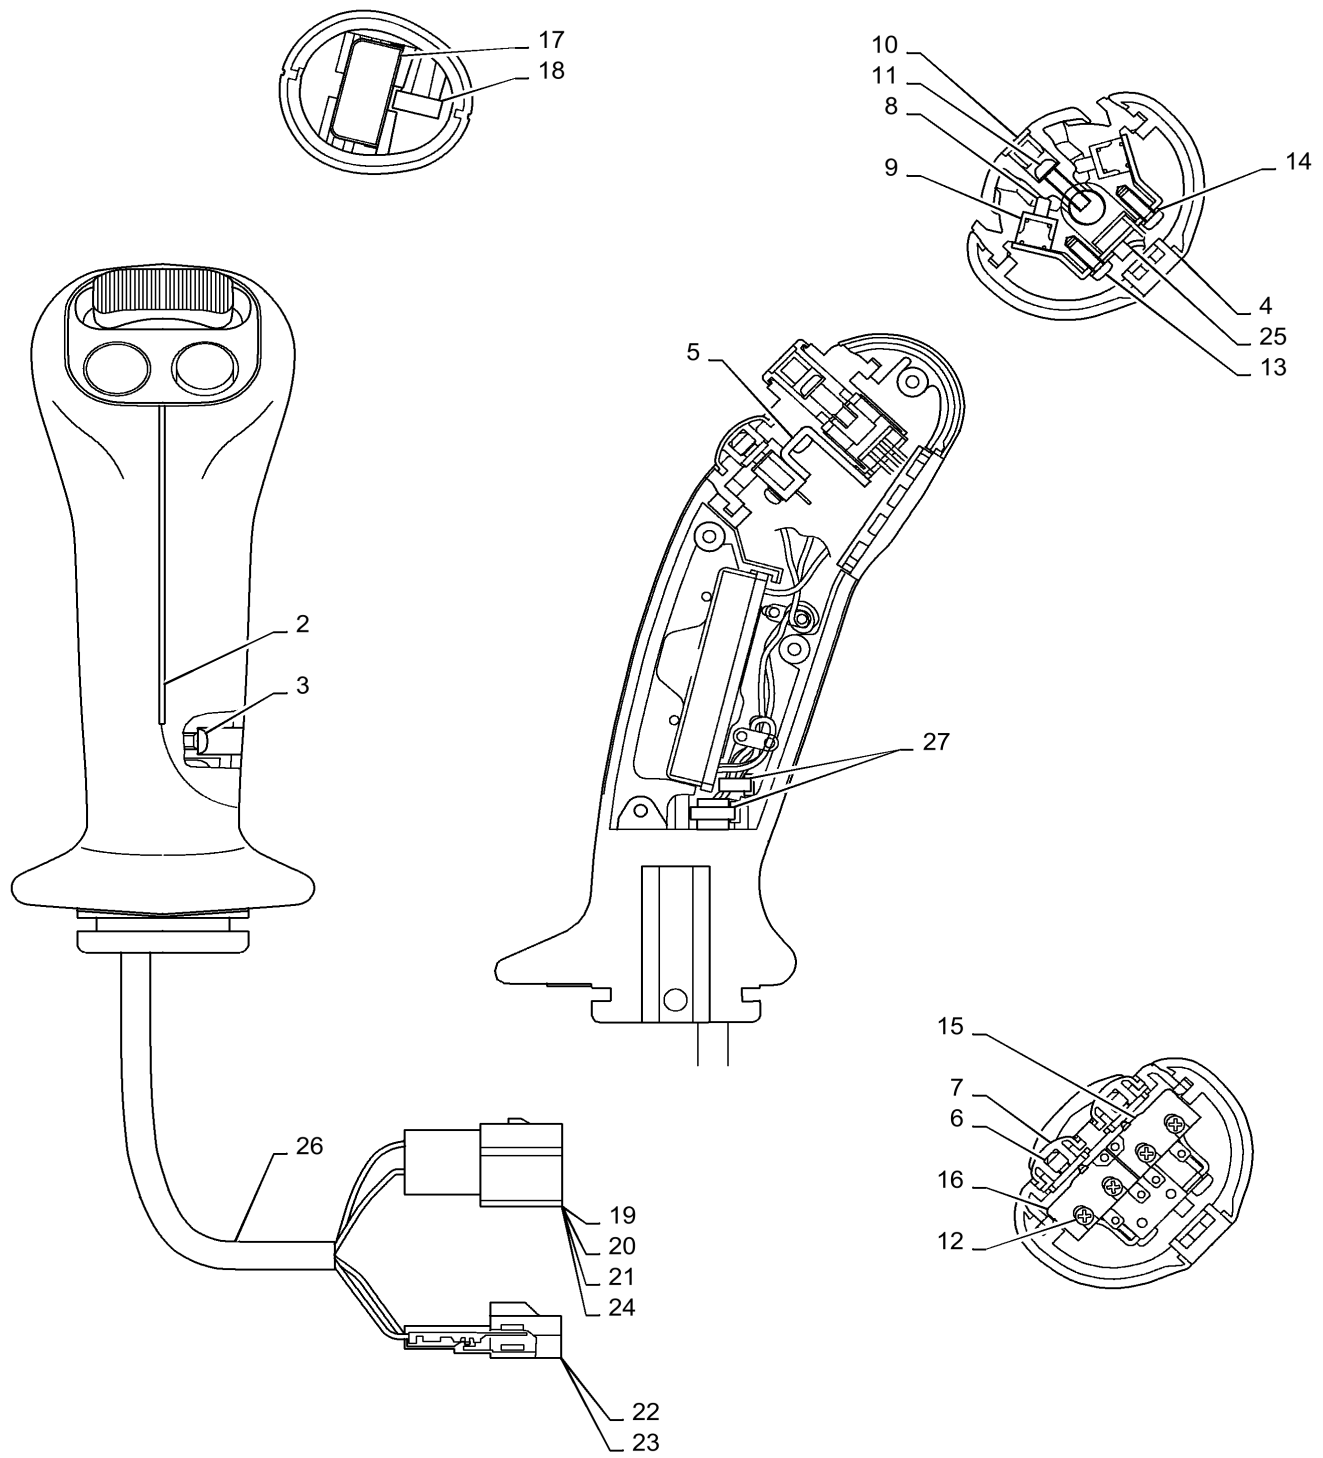

RADIATOR INSTAL

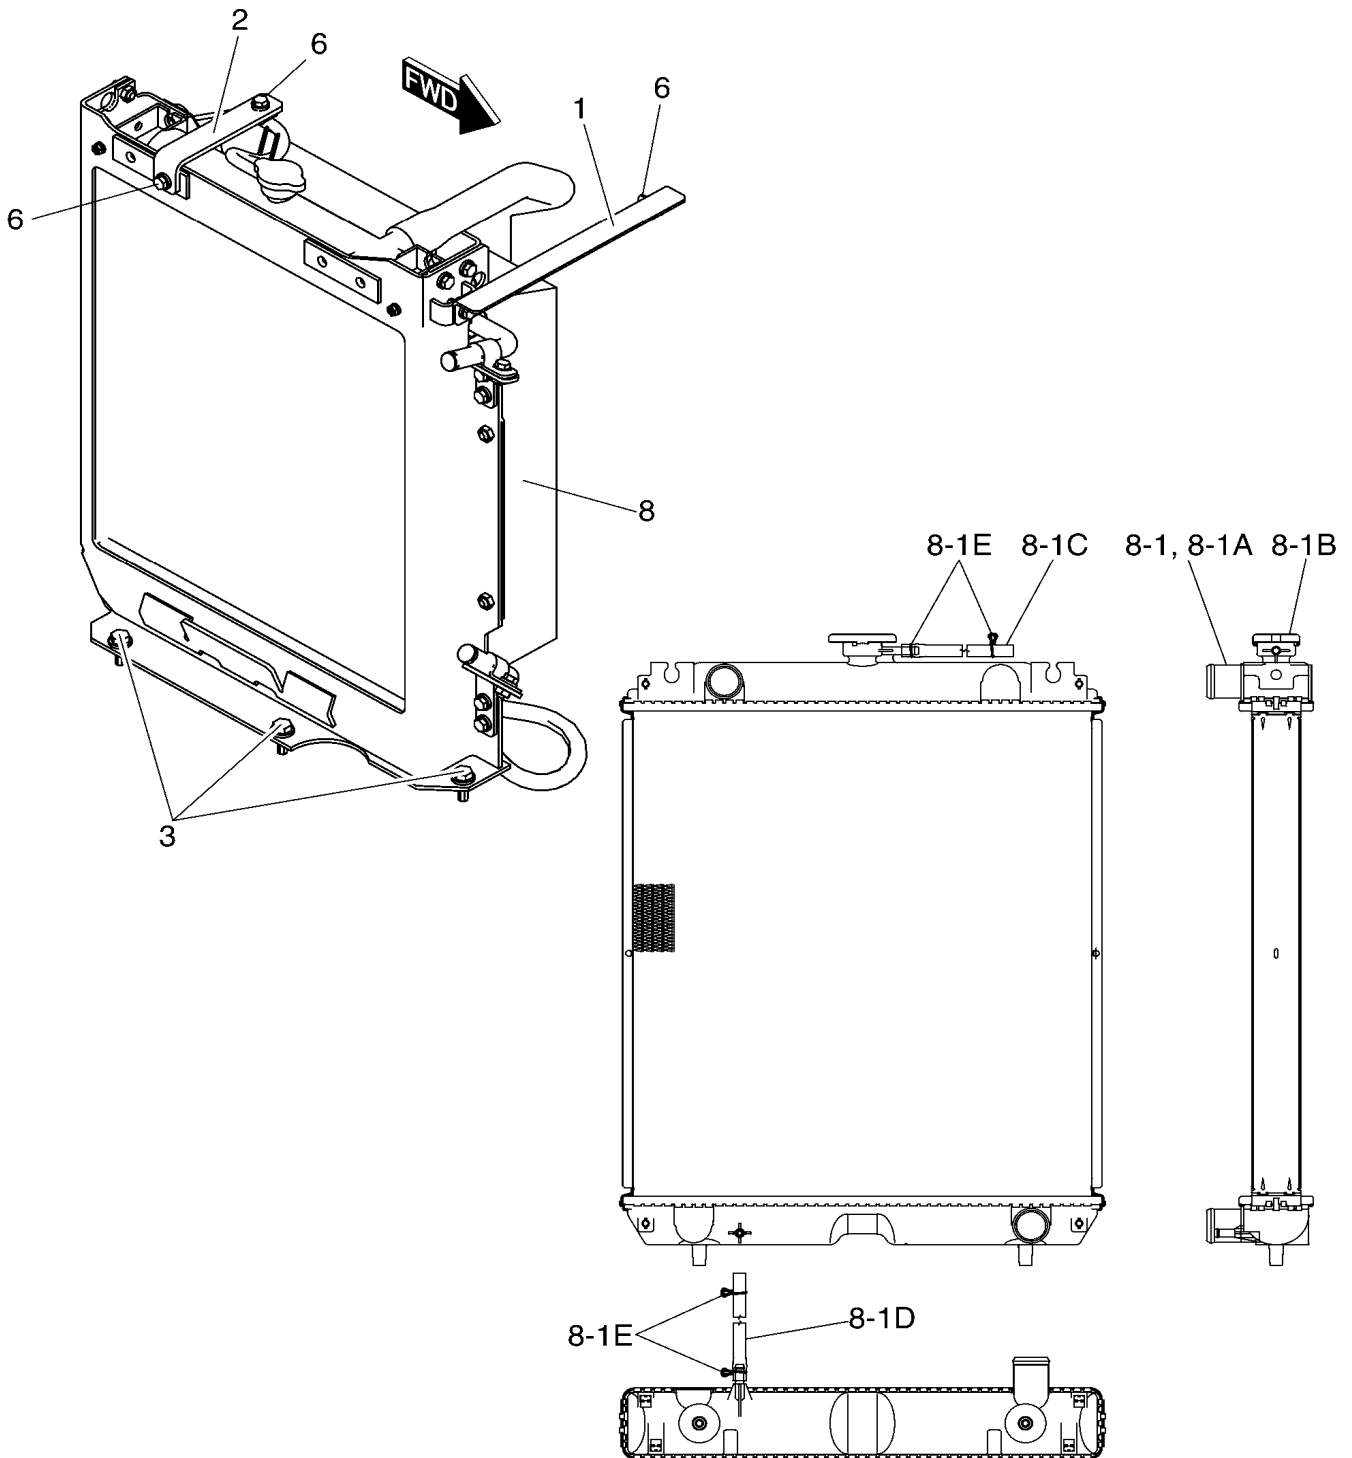 


01-013

01



p1

10/201  
8

 AIR CLEANER ASSY

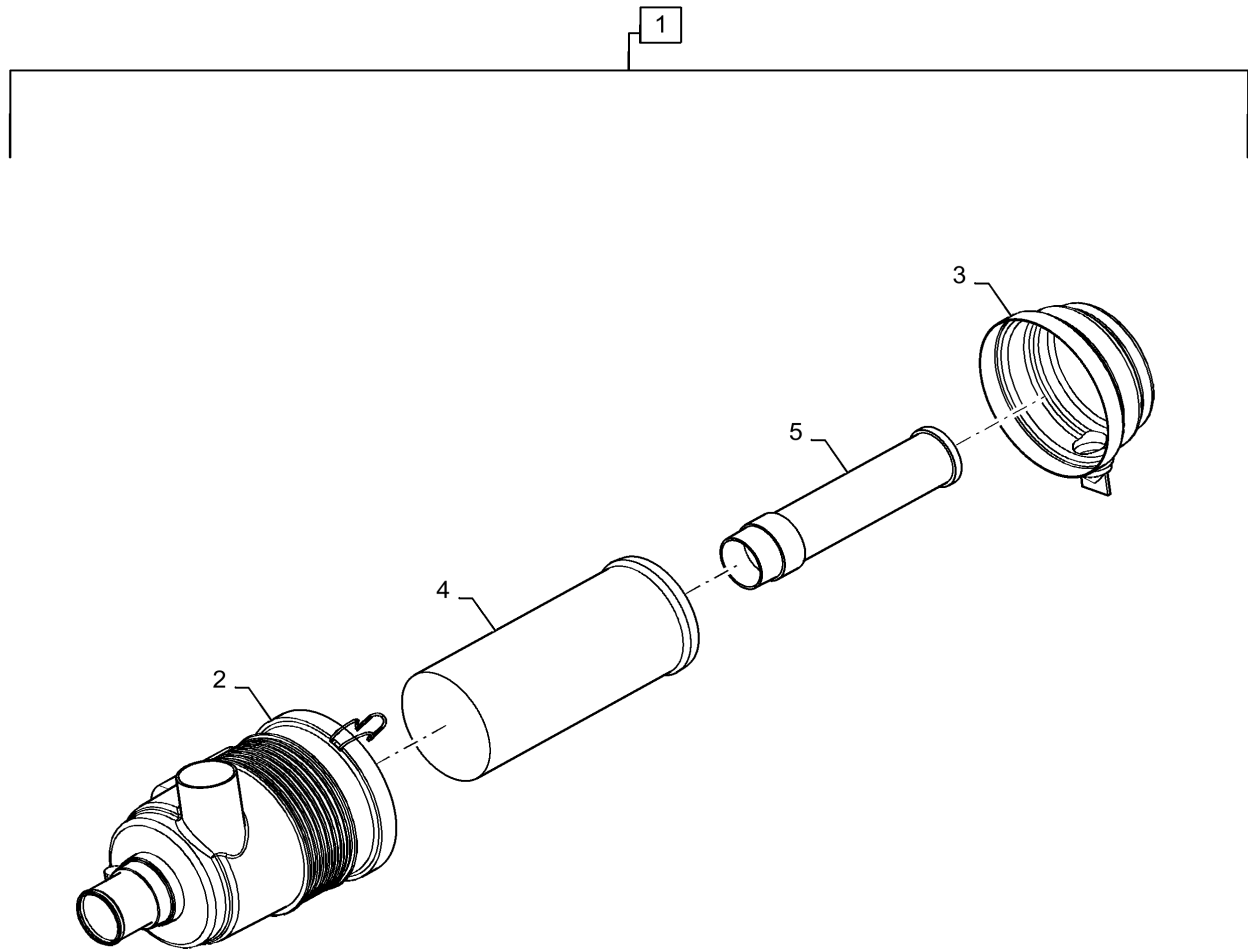

TANK INSTAL, FUEL, CAB

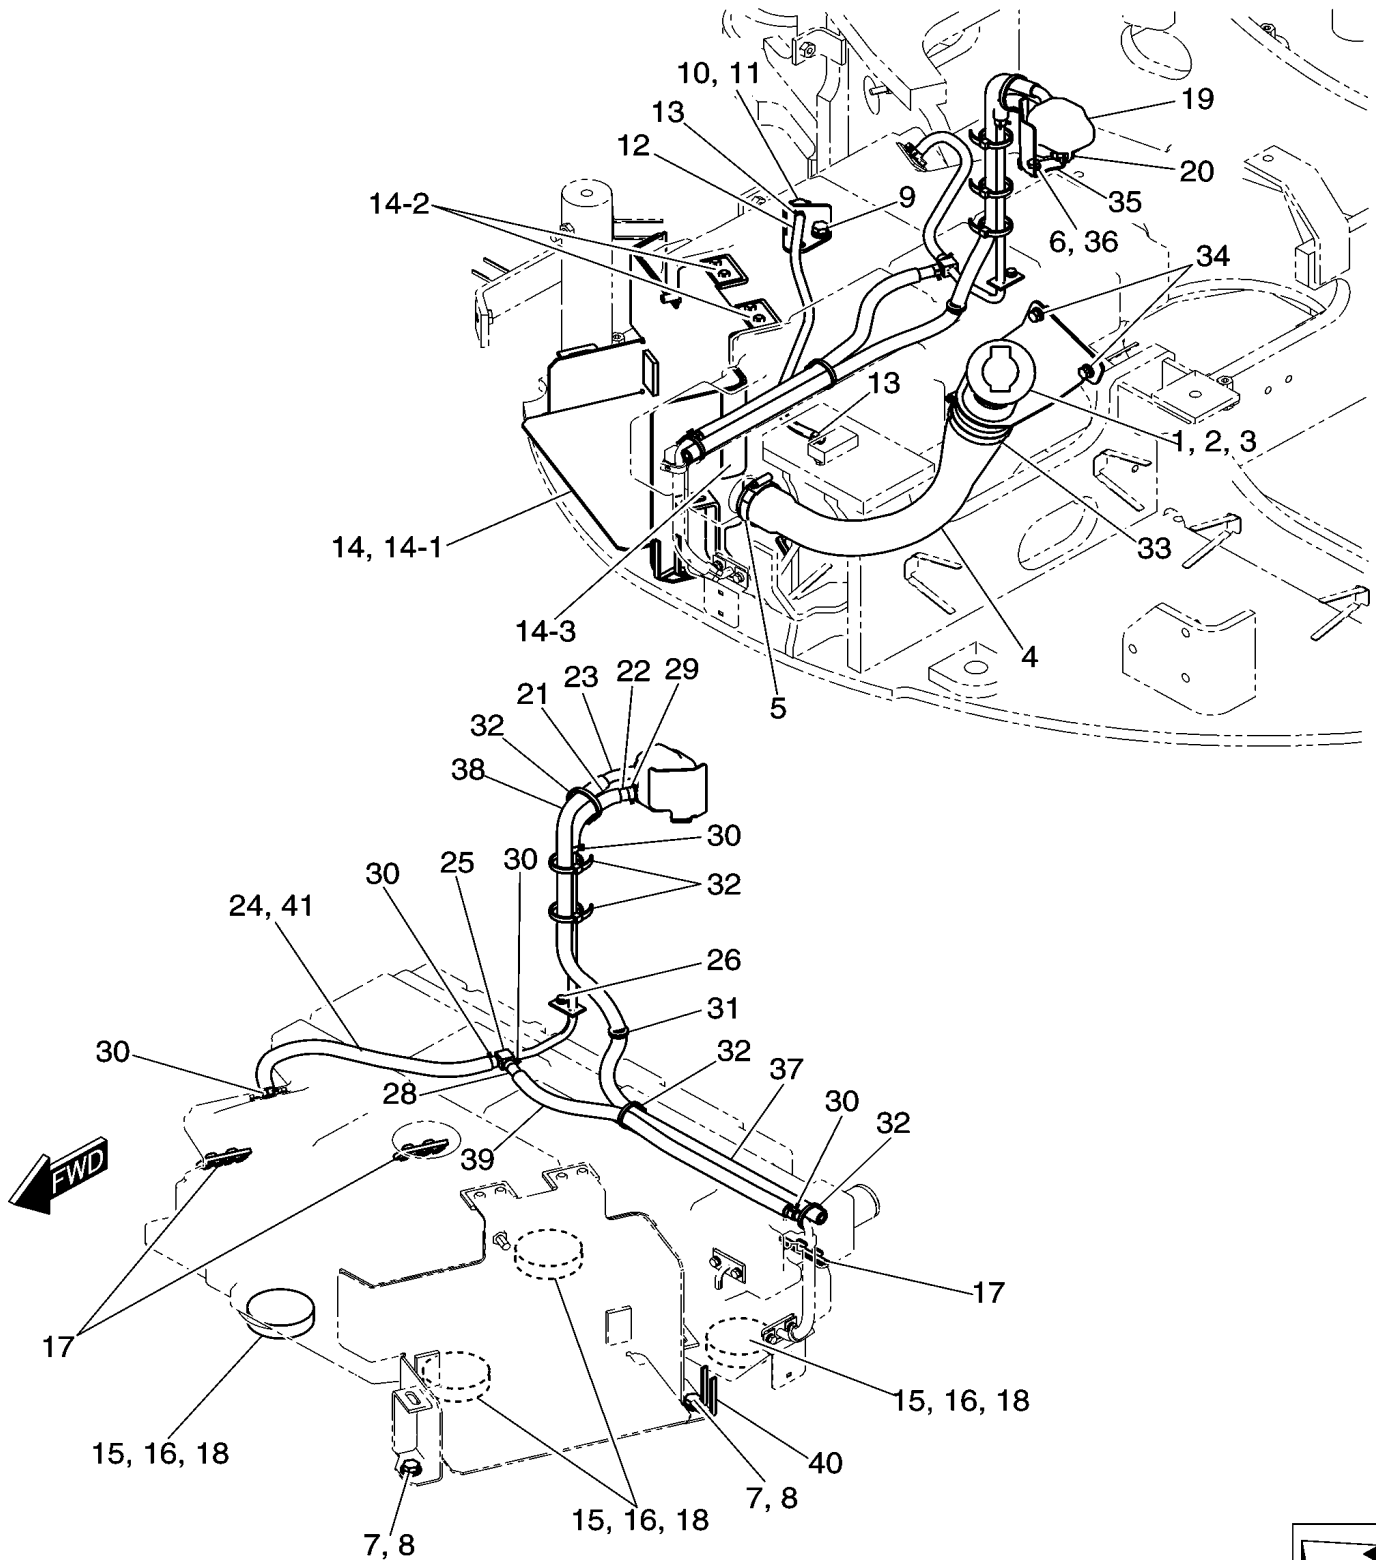  


08-001

p1

10/201  
8

 CYLINDER BLOCK


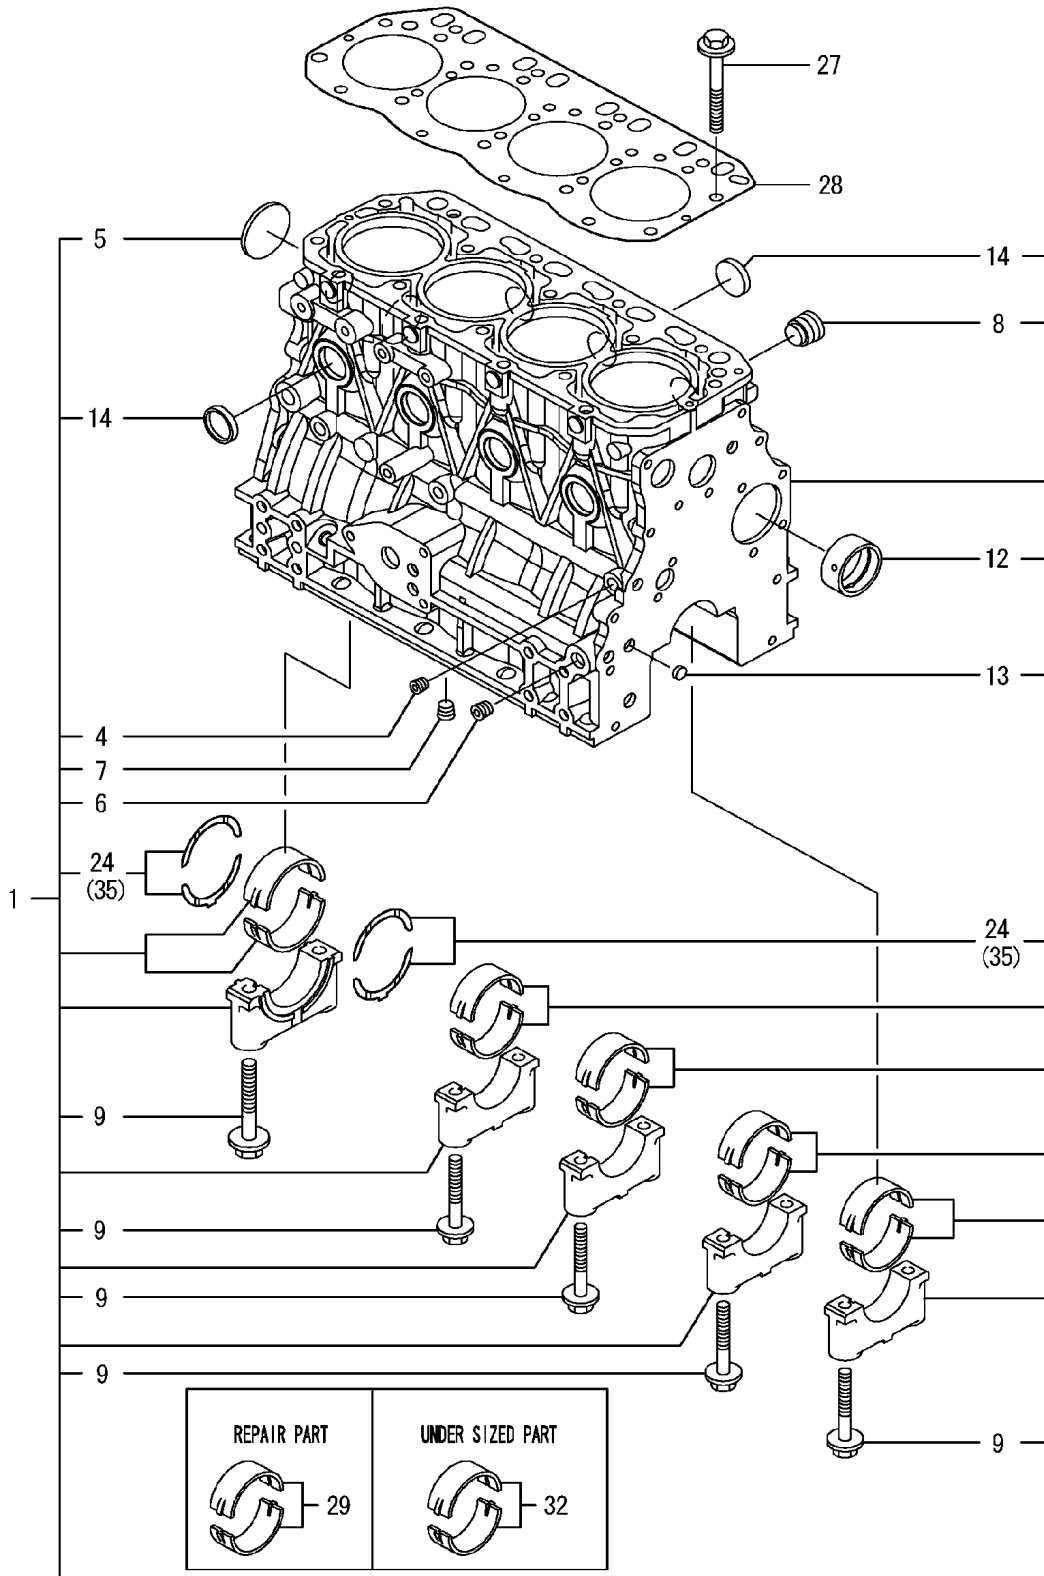


08-005




p1

10/201  
8

  SUCTION MANIFOLD

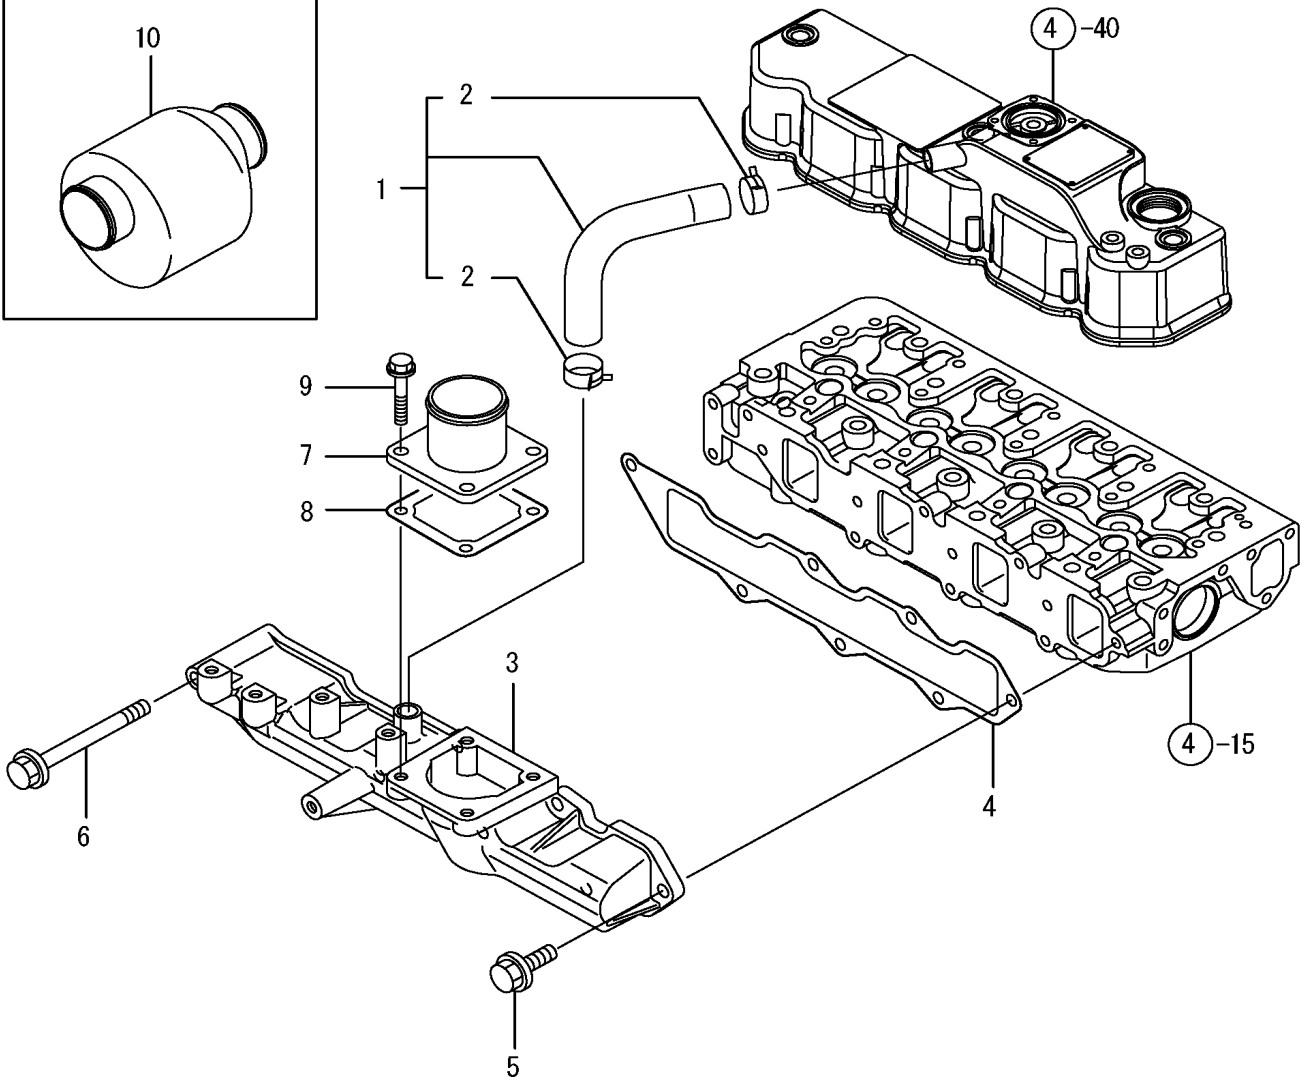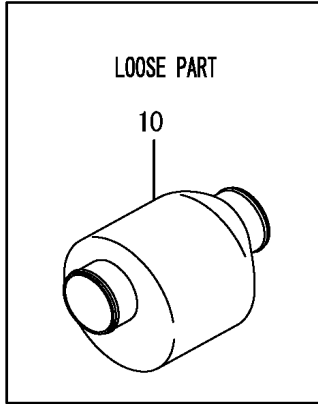

COOLING WATER SYSTEM

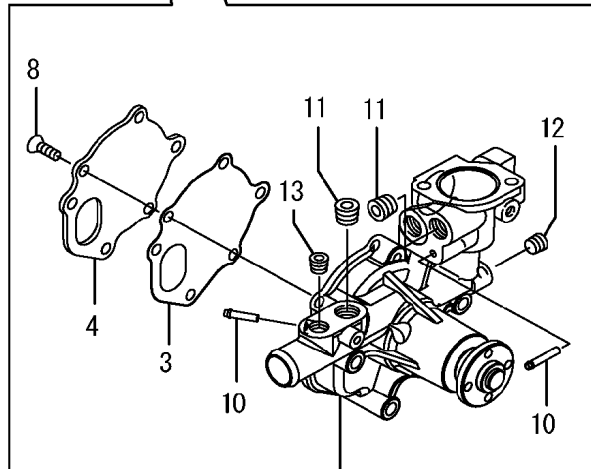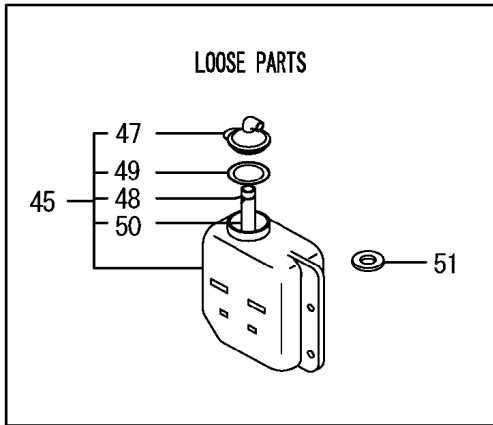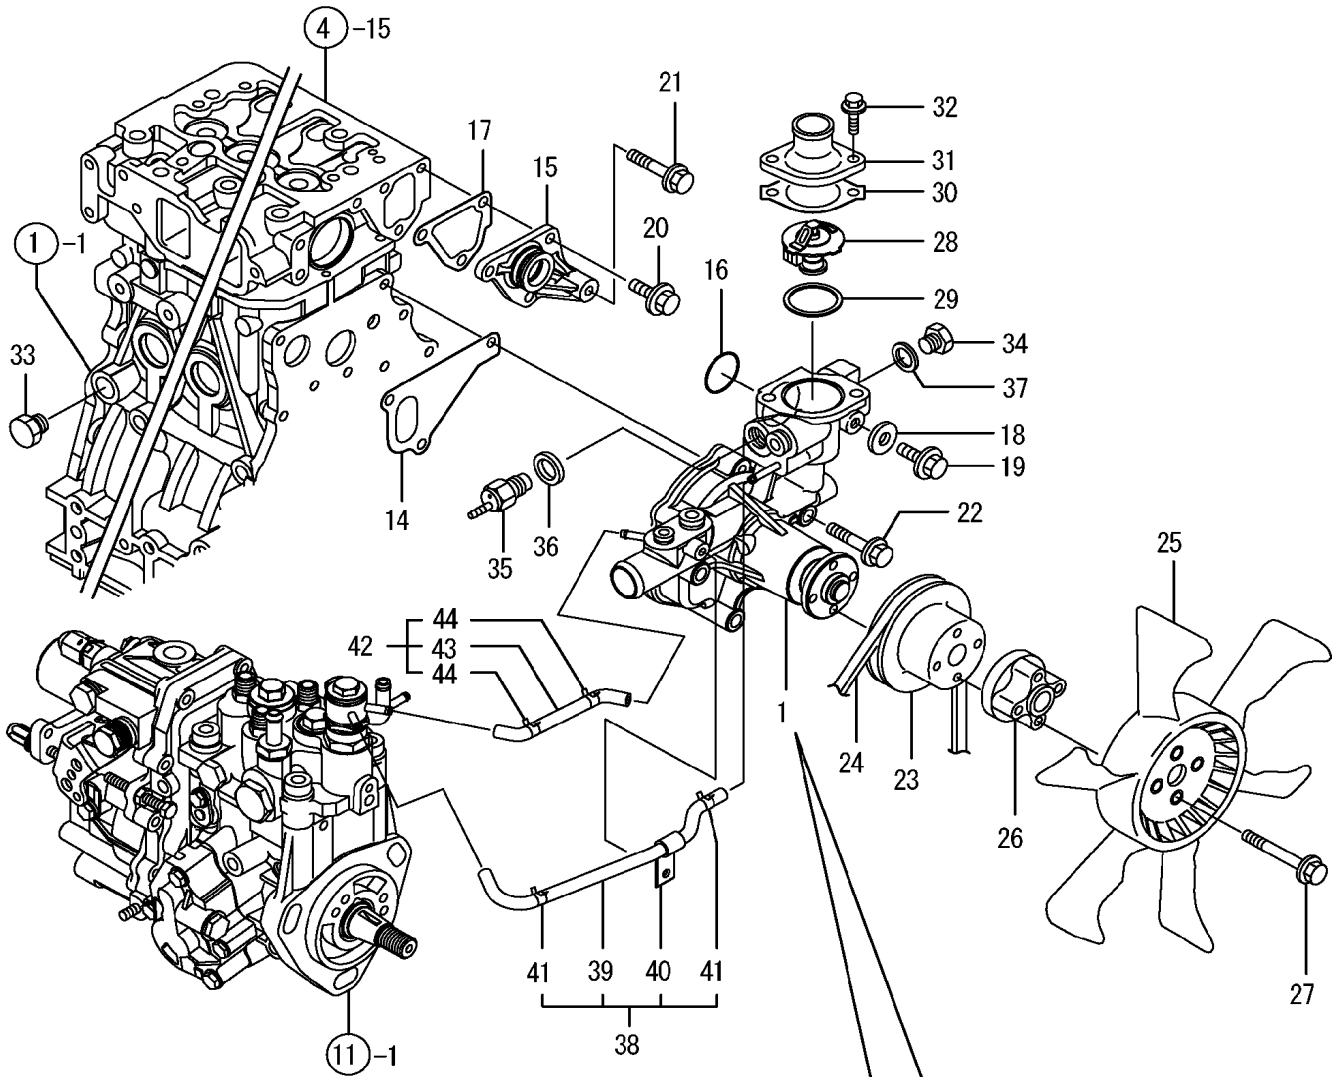   


08-012


p1

10/201  
8

 GOVERNOR

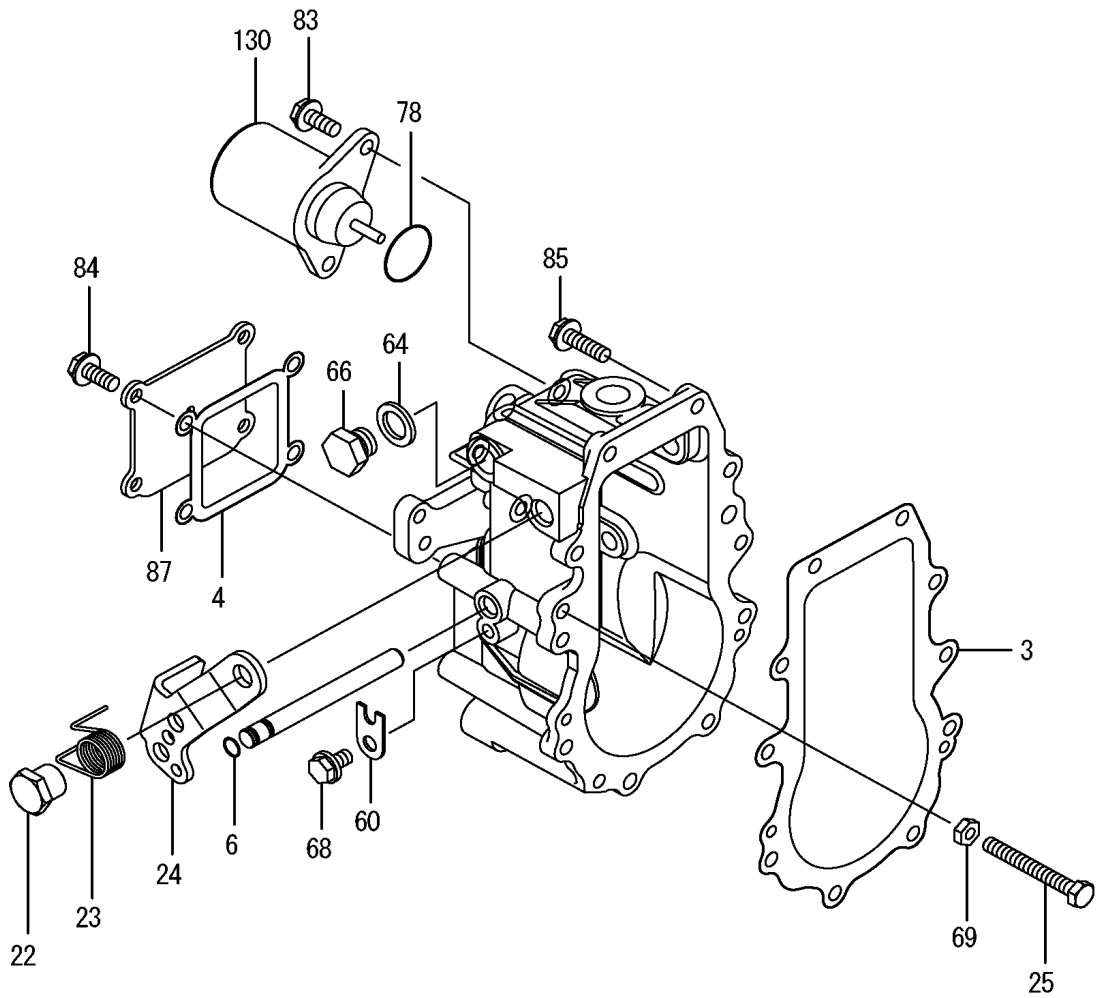

ENGINE INSTAL


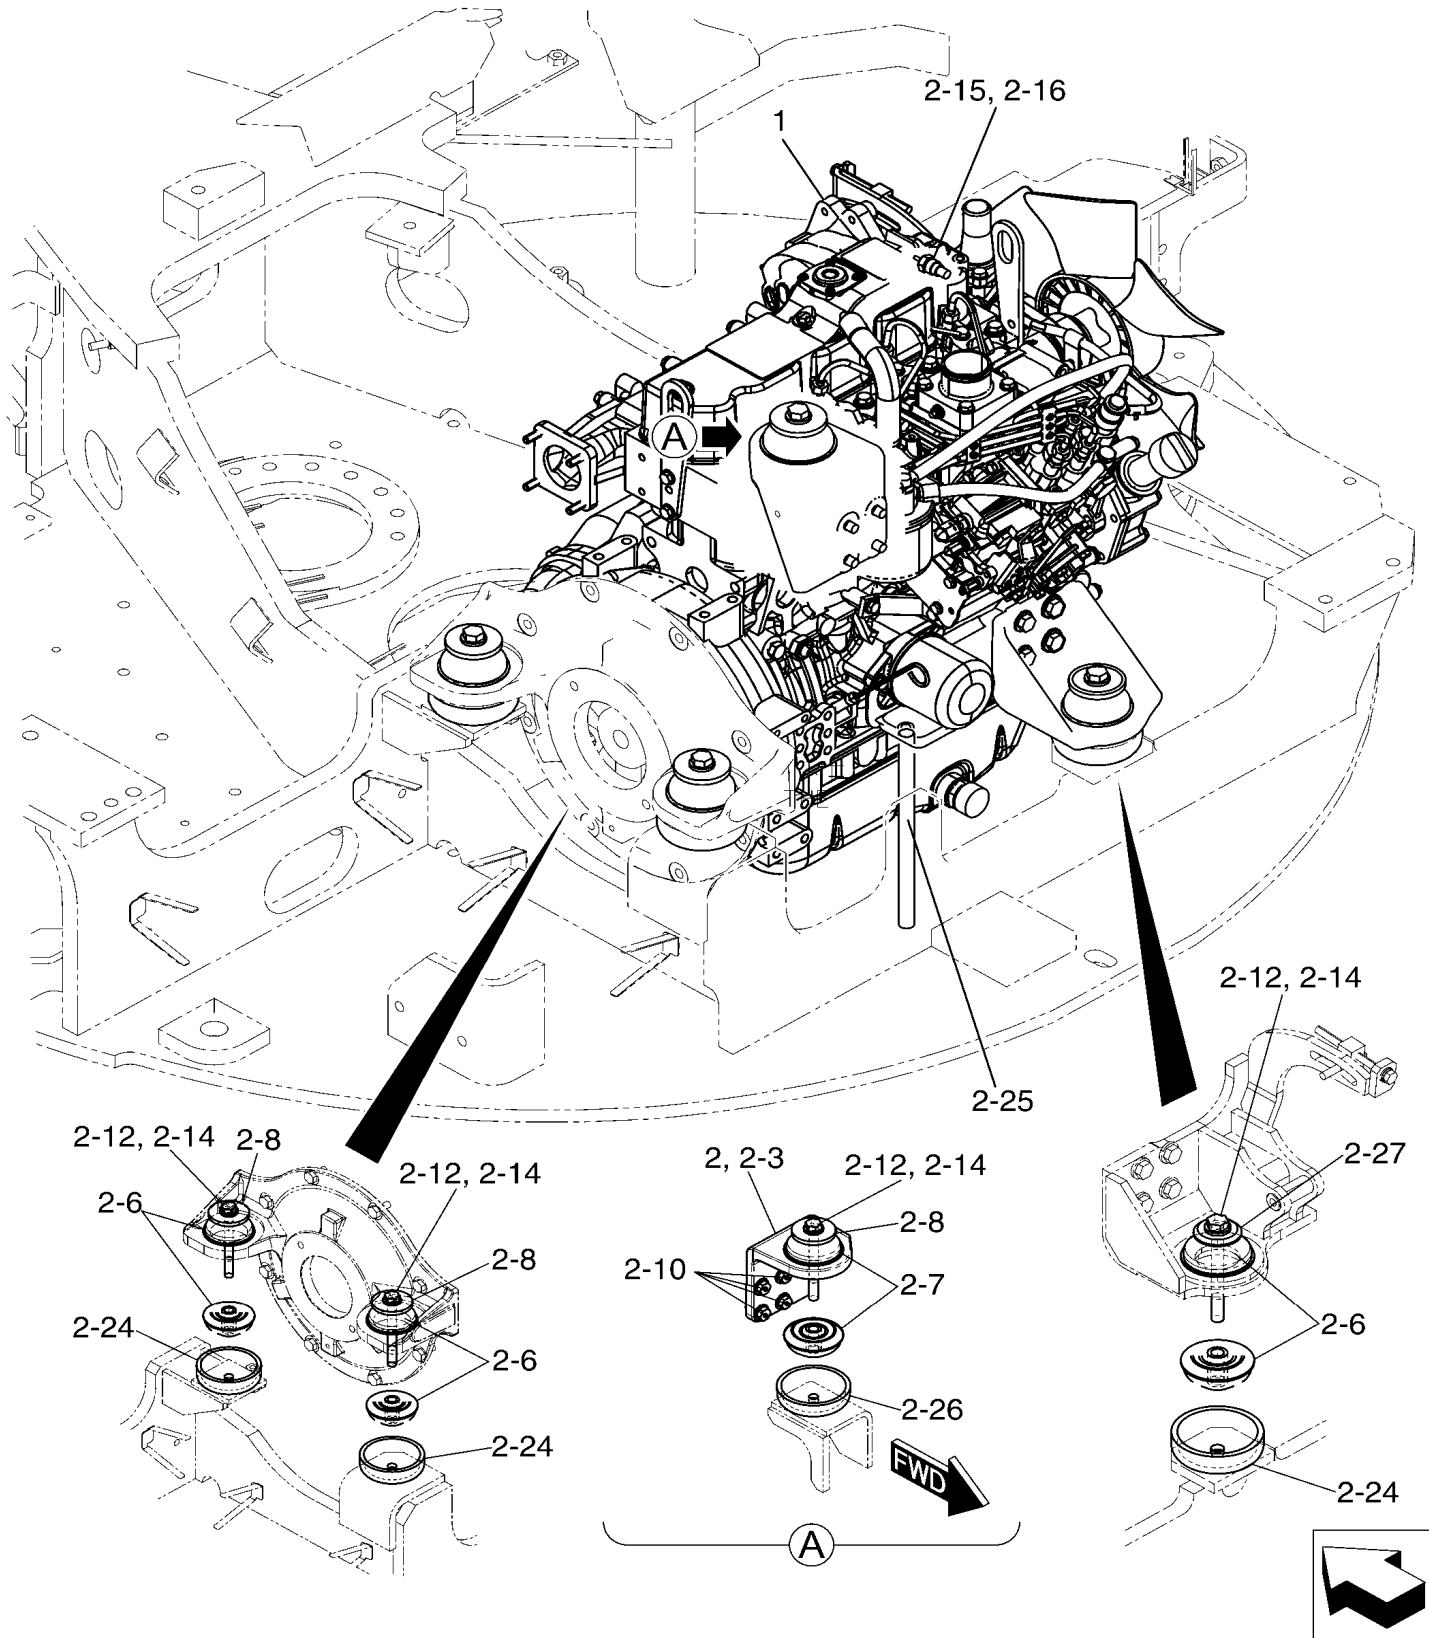 


01-006

p1

10/201  
8

  HYD LINES, CYLINDER, SWING

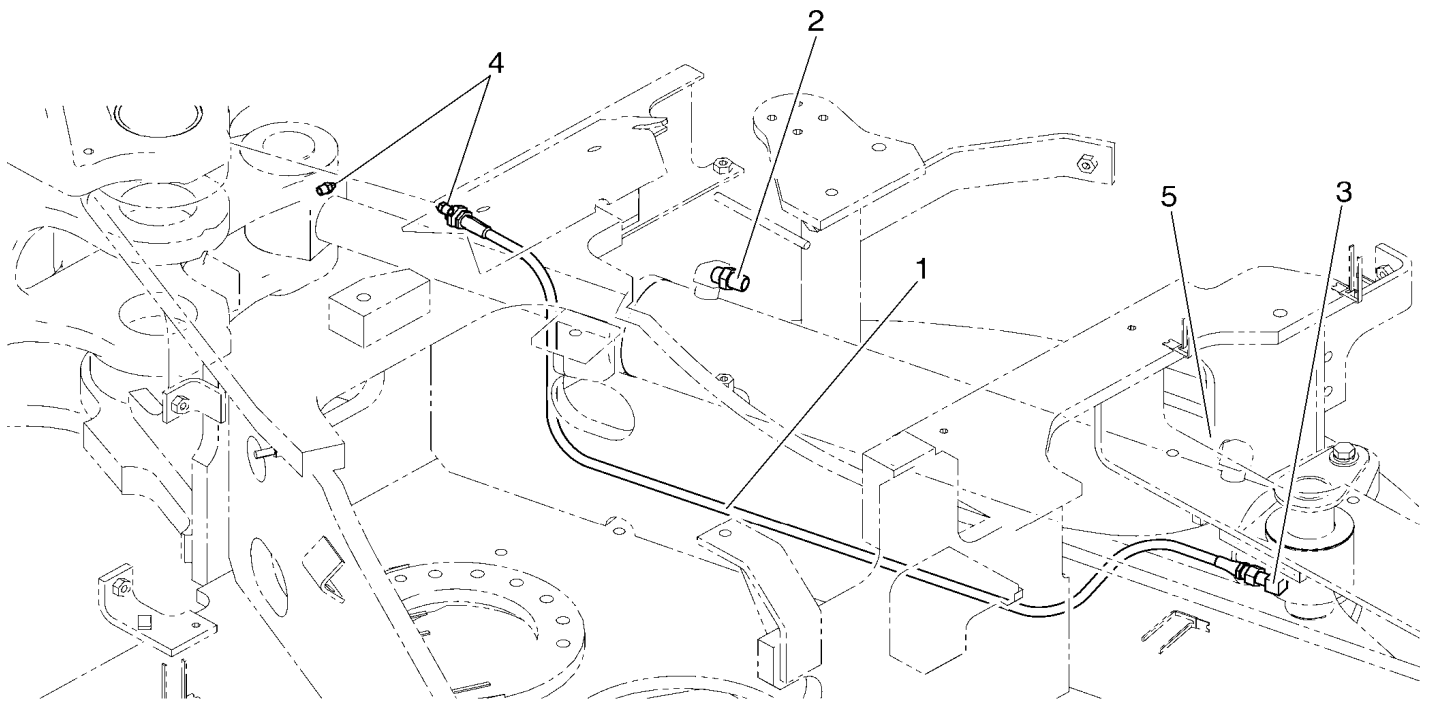




01-021

02


p1

10/201  
8

   
POWER TAKE-OFF ASSY, COOLER

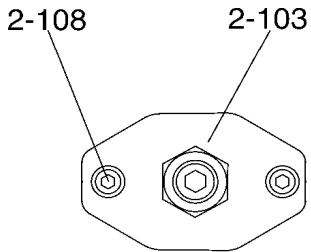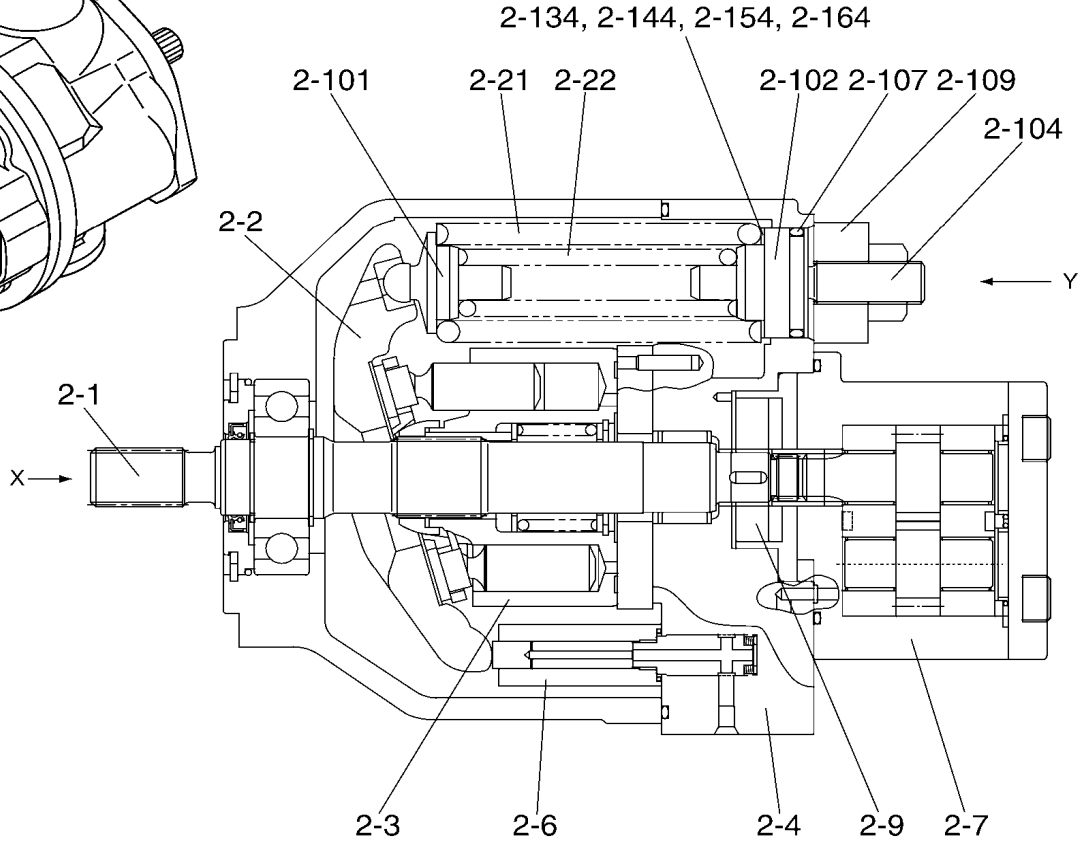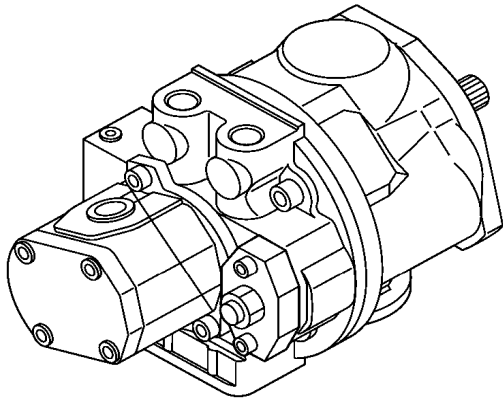



VIEW Y

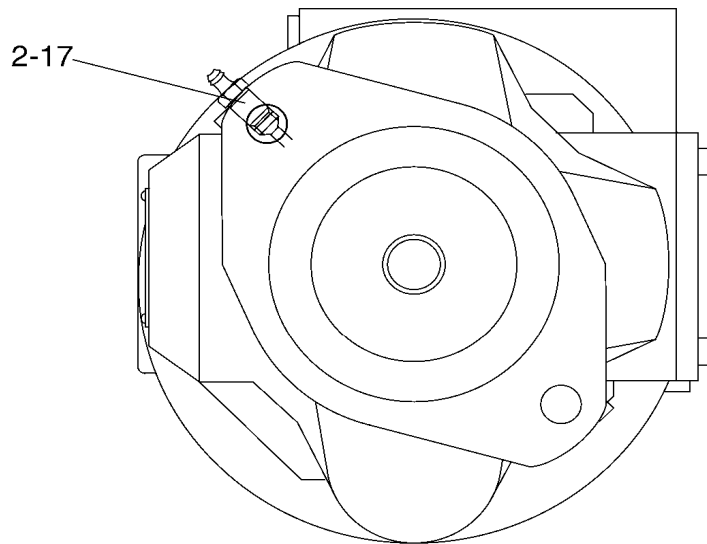 

VIEW X

 

MOTOR INSTAL, SWING

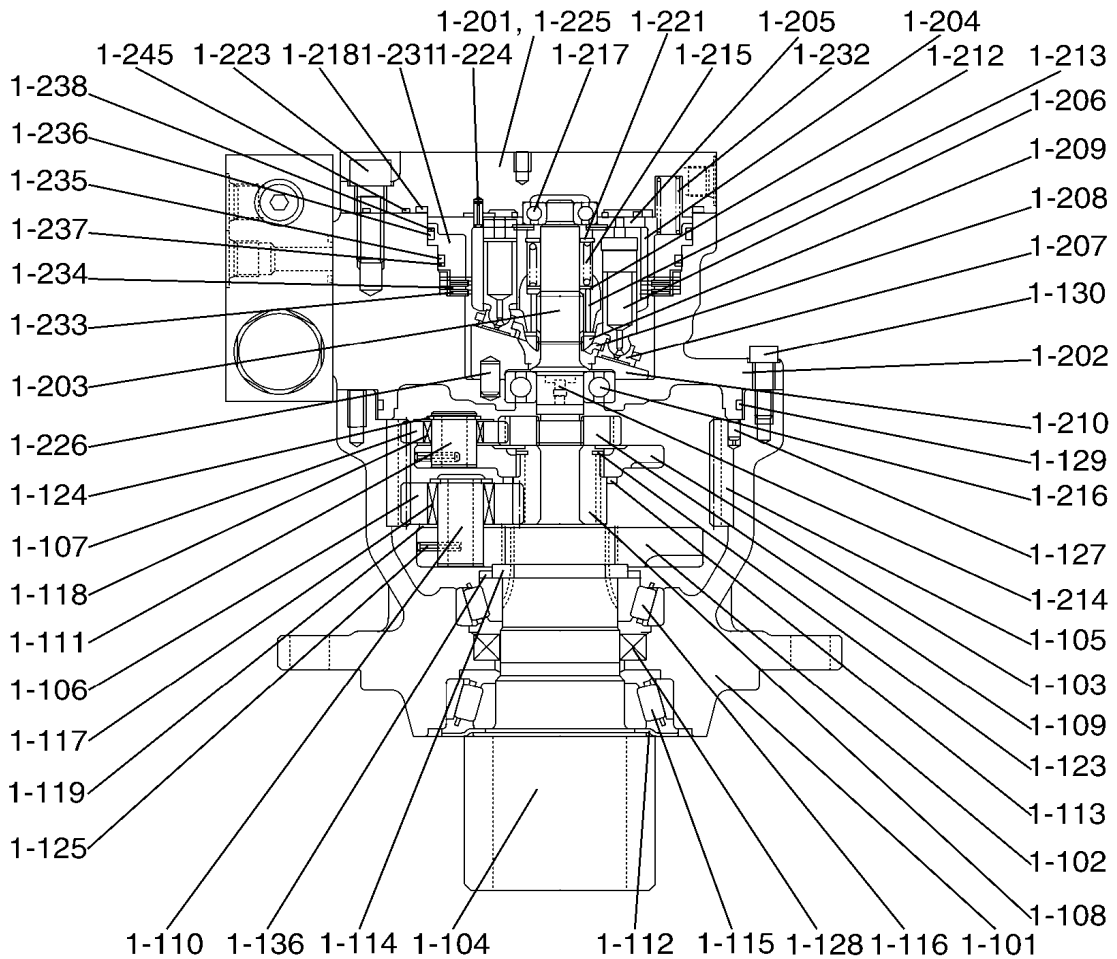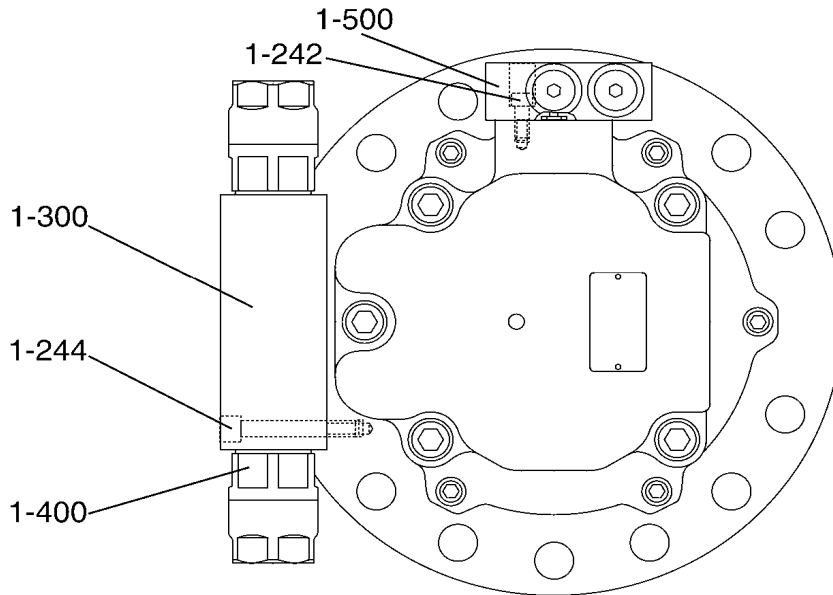  

VALVE INSTAL

SUPPLY, CONNECTING 1-14

DOZER 1-13

SLEWING 1-12

ARM CONFLUENCE 1-11

ARM1-10

SERVICE 1-9






BOOM SWING 1-8

TRAVEL RIGHT 1-7

TRAVEL LEFT 1-5

BOOM 1-4

     BUCKET 1-3

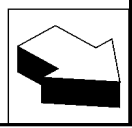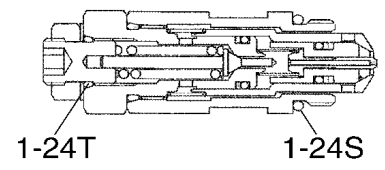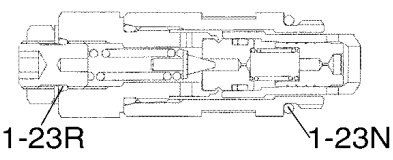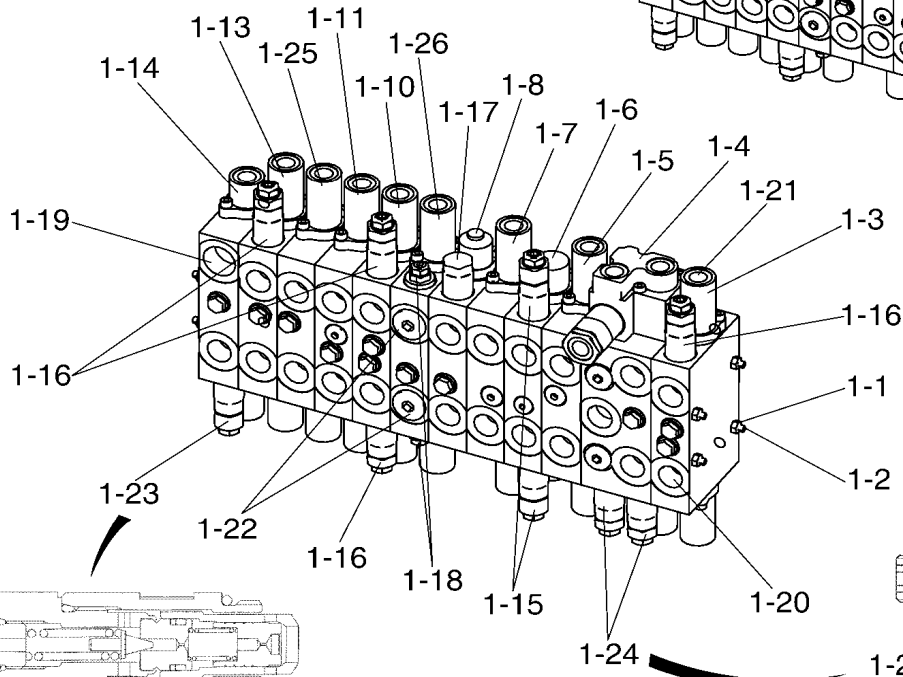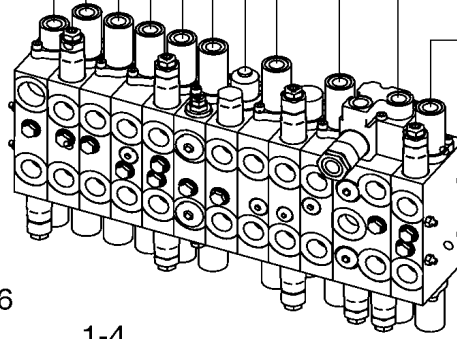


01-023

07

p1

10/201  
8

 VALVE INSTAL

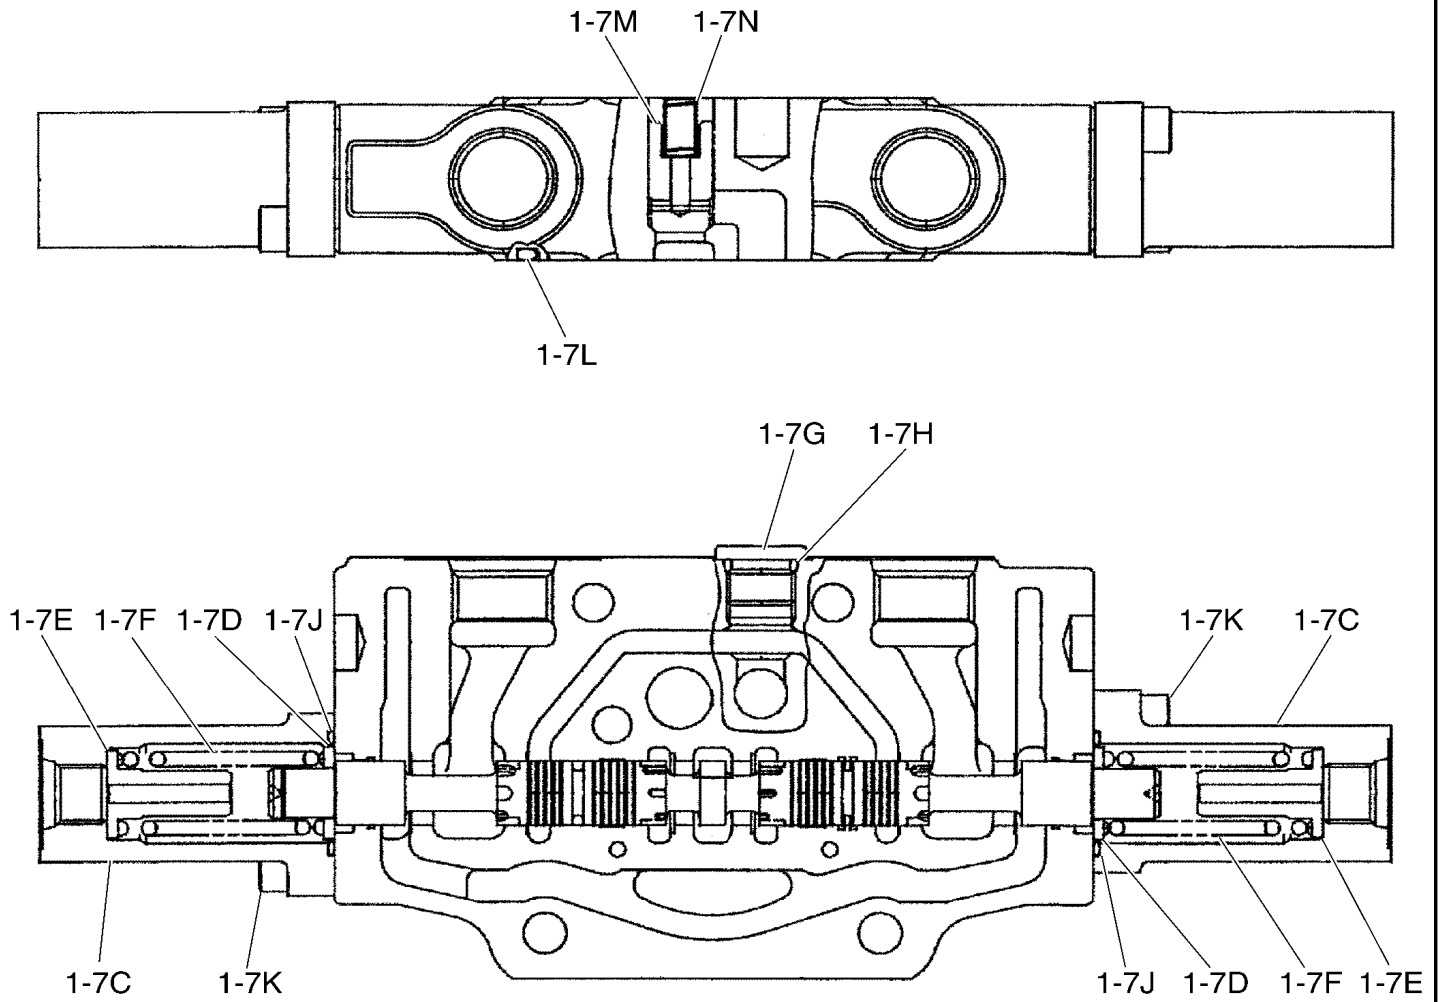


01-023

12


p1

10/201  
8

 VALVE INSTAL

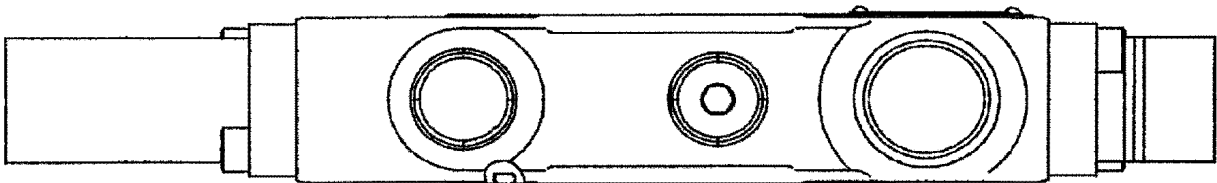

1-14R

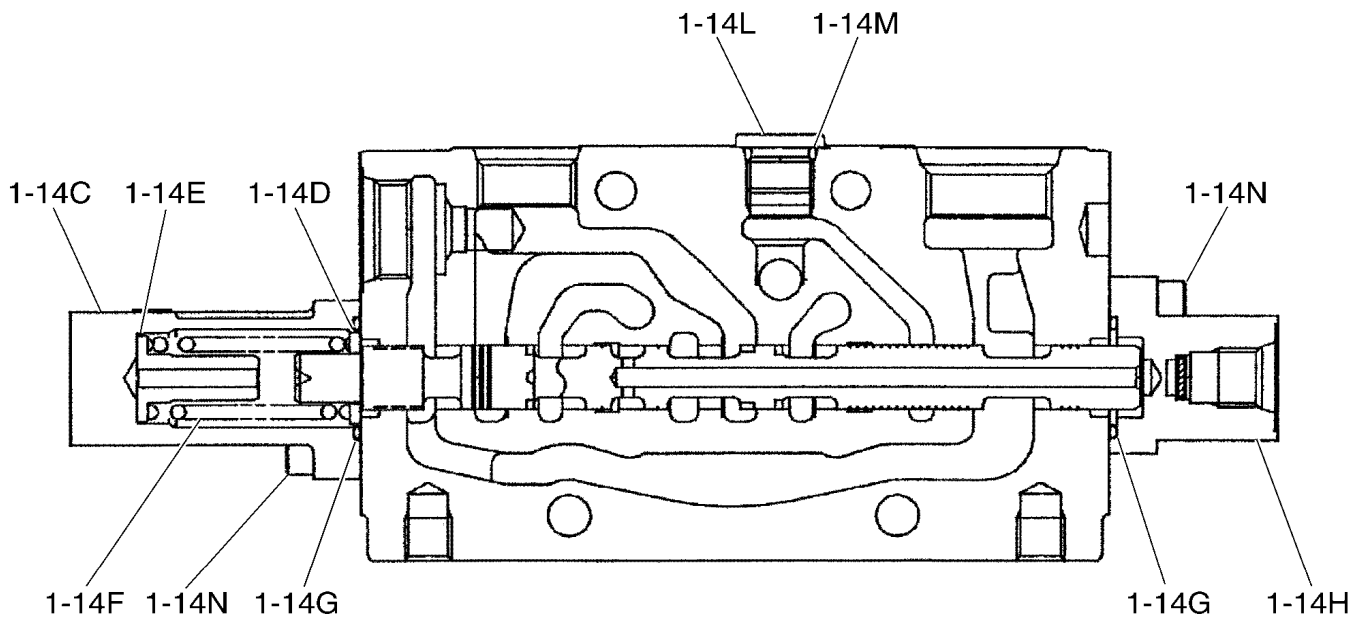 


01-024

01

p1

10/201  
8

 VALVE INSTAL, ANGLE DOZER

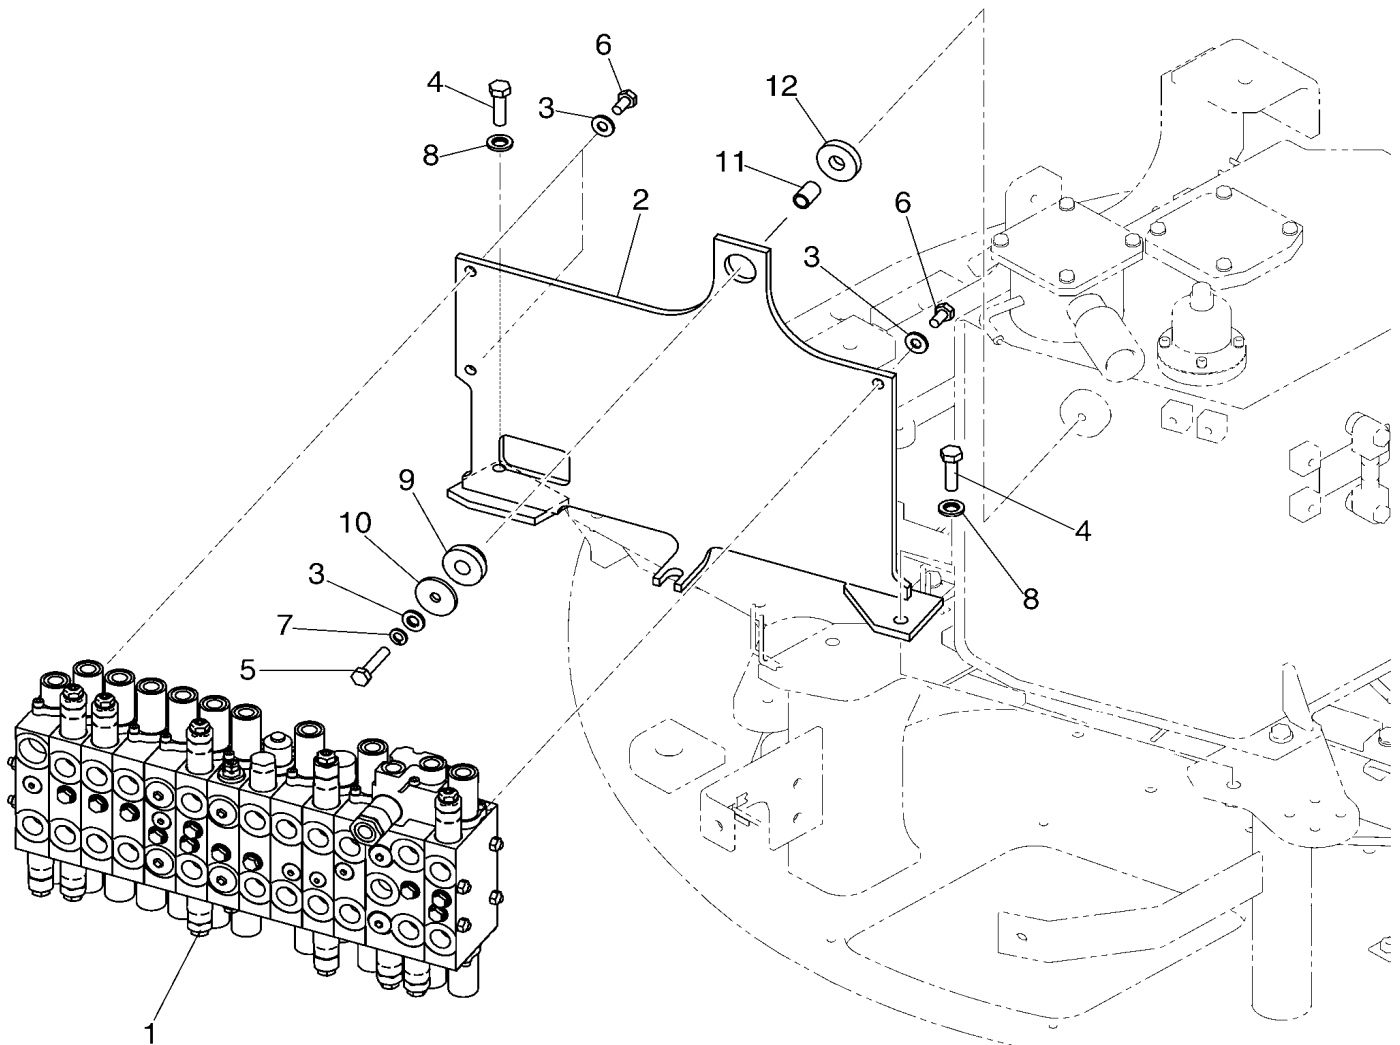



01-024

06

p1

10/201  
8

  VALVE INSTAL, ANGLE DOZER

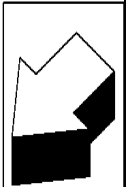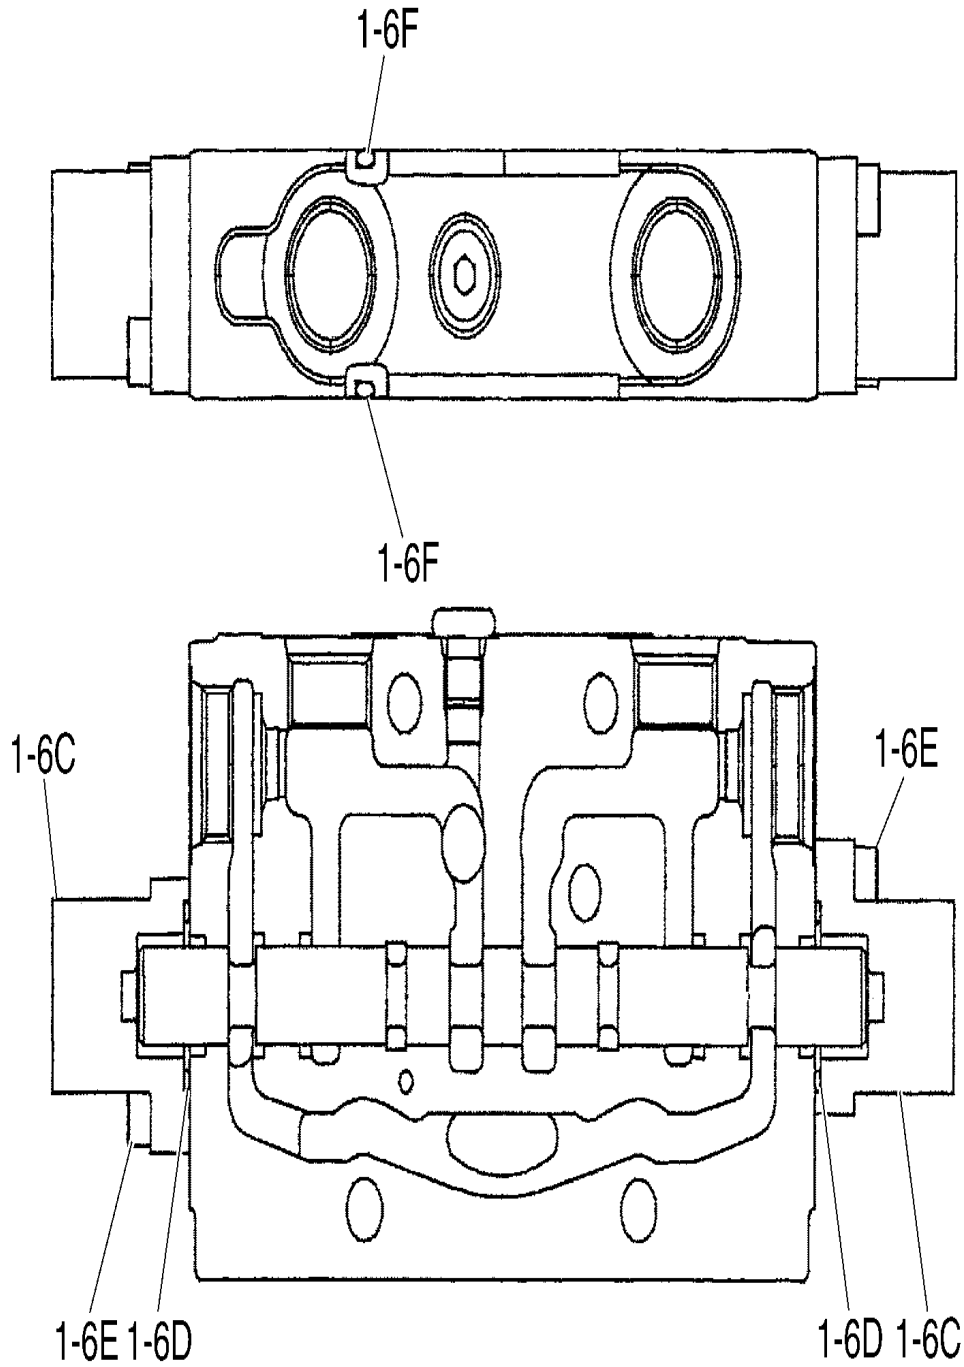



01-024

11


p1

10/201  
8

  VALVE INSTAL, ANGLE DOZER

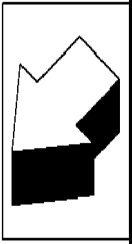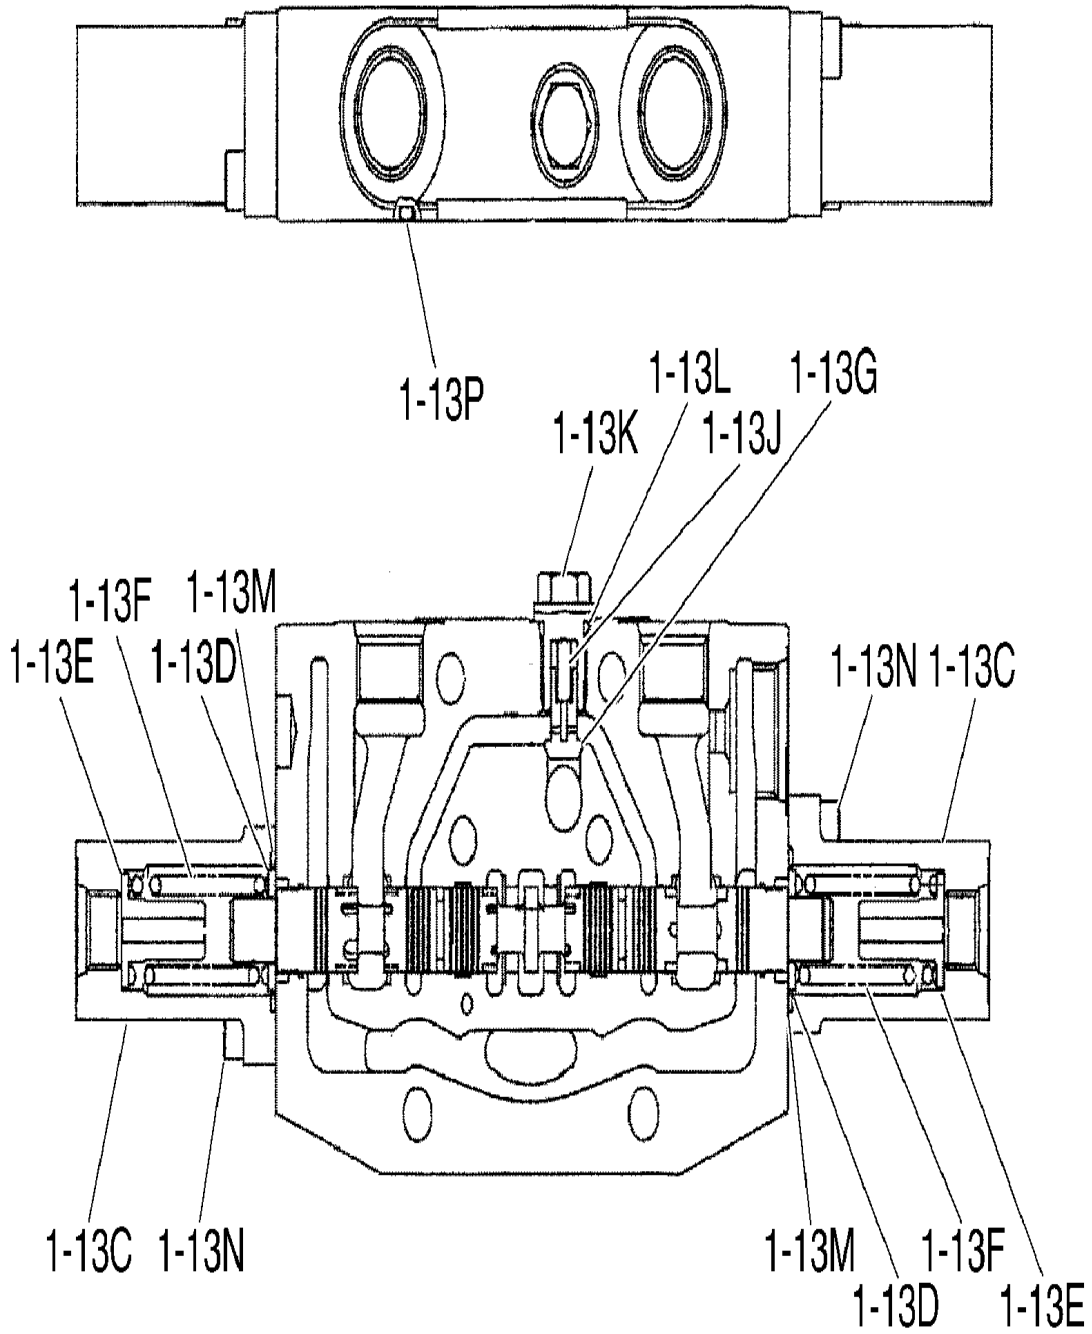


VALVE INSTAL, ANGLE DOZER

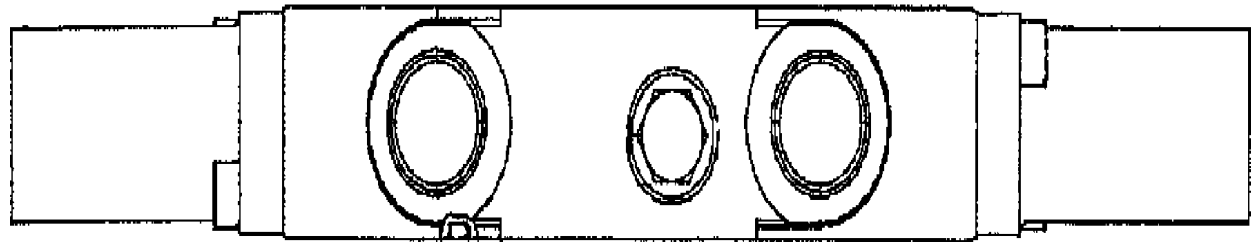 

1-27P

 1-27K 1-27L 1-27J 1-27G

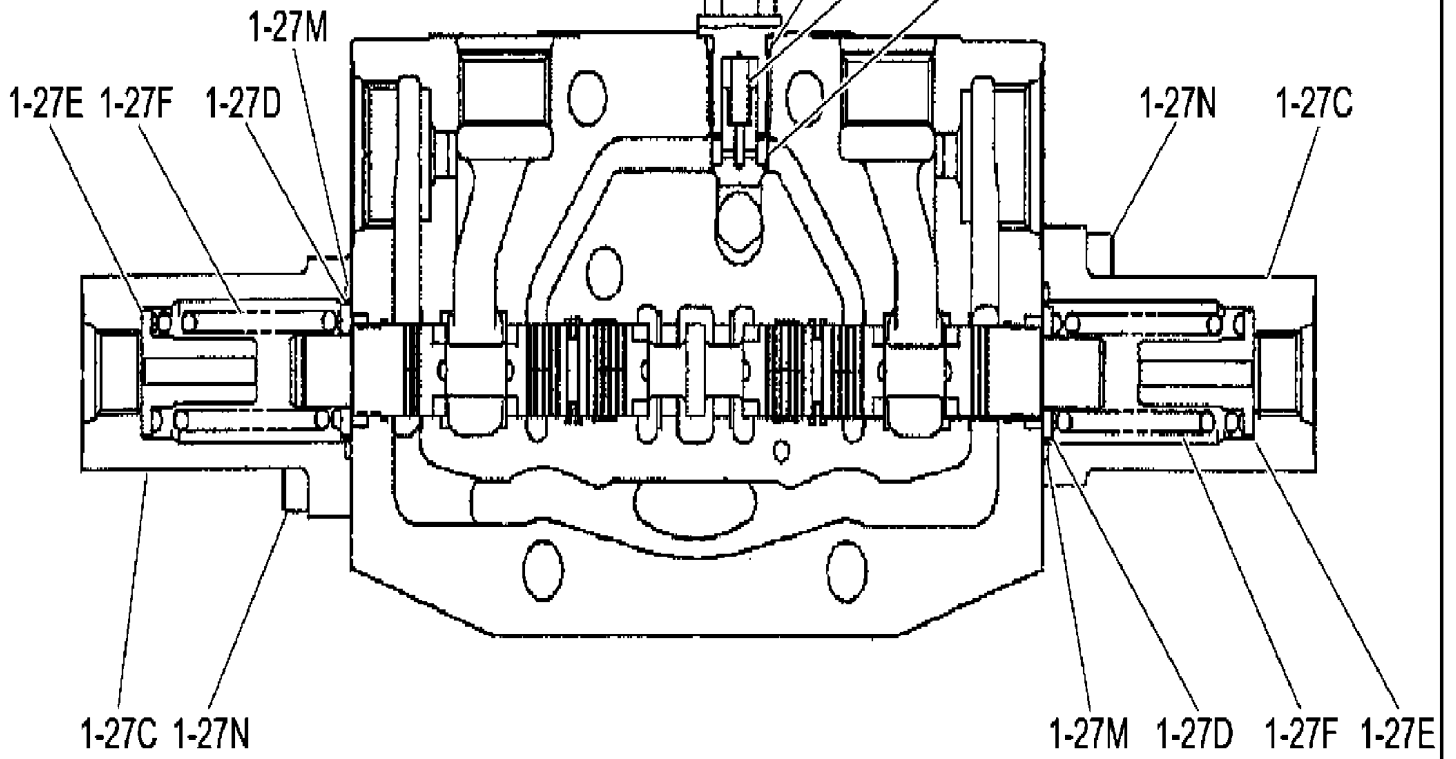

1-27M

1-27E 1-27F 1-27D

1-27N 1-27C

1-27C 1-27N

1-27M 1-27D 1-27F 1-27E

 
01-026

02

p1

10/201  
8

VALVE INSTAL

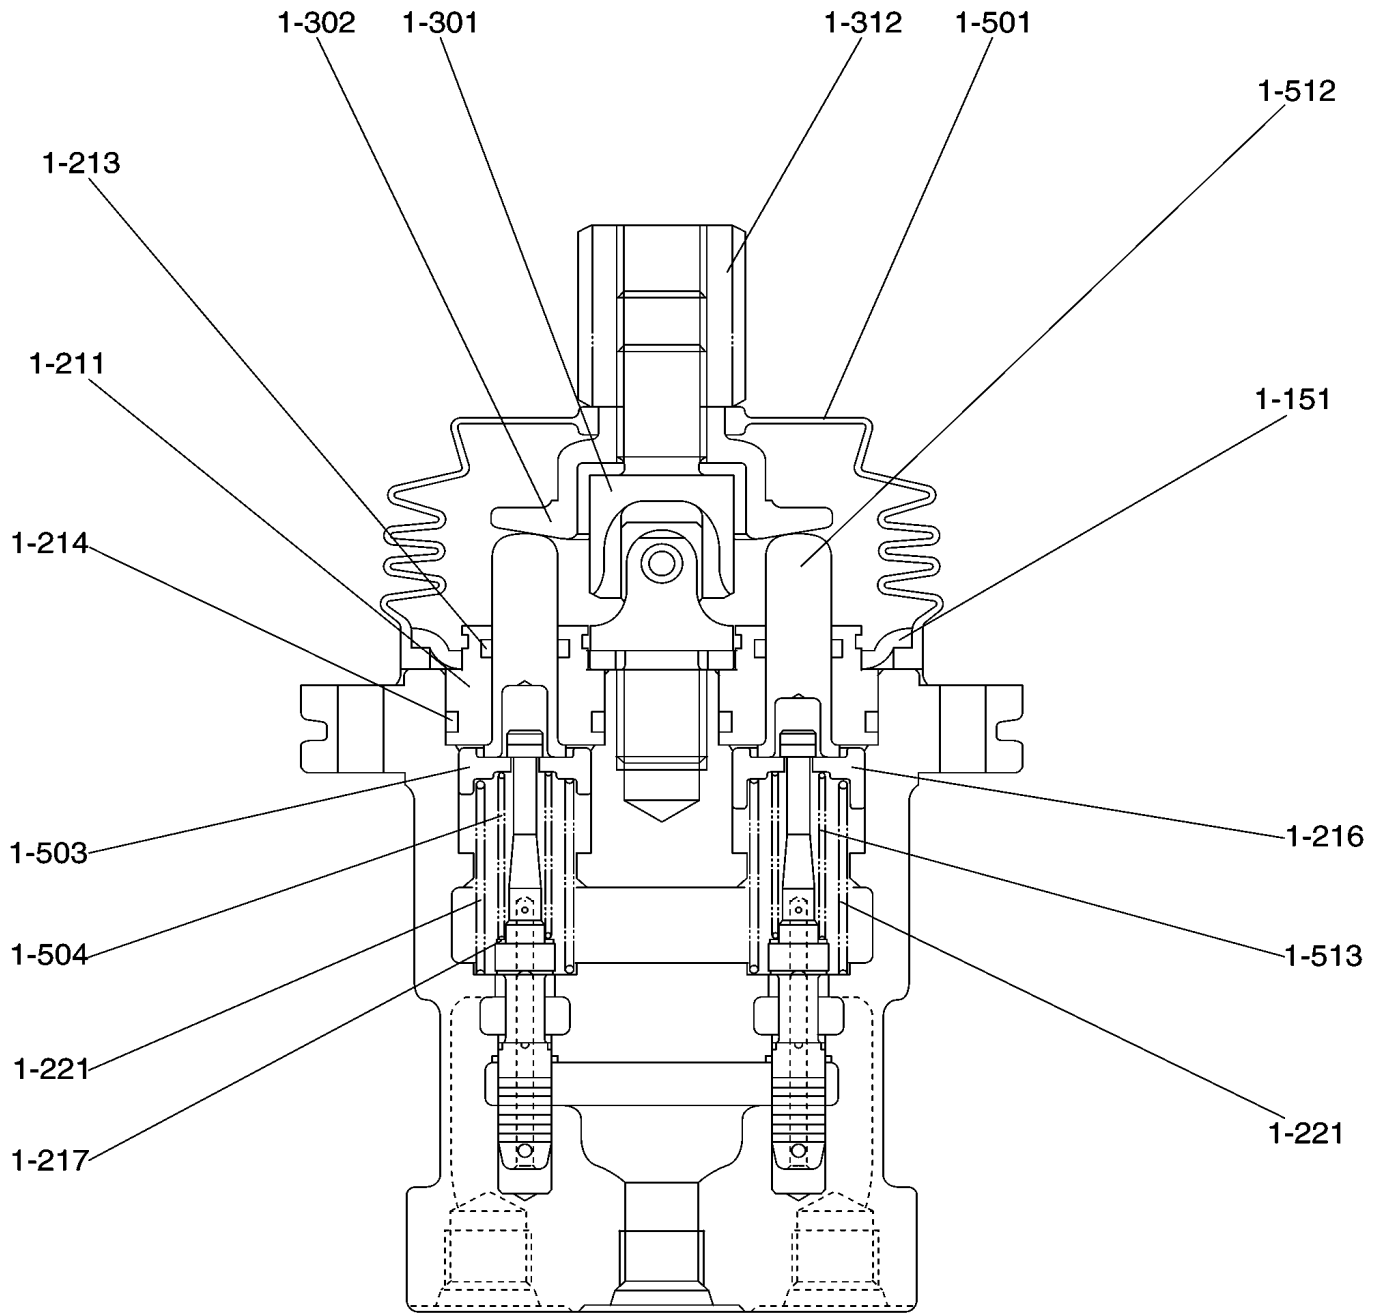


01-029

02

p1


10/201  
8

 HYD LINES, UPP


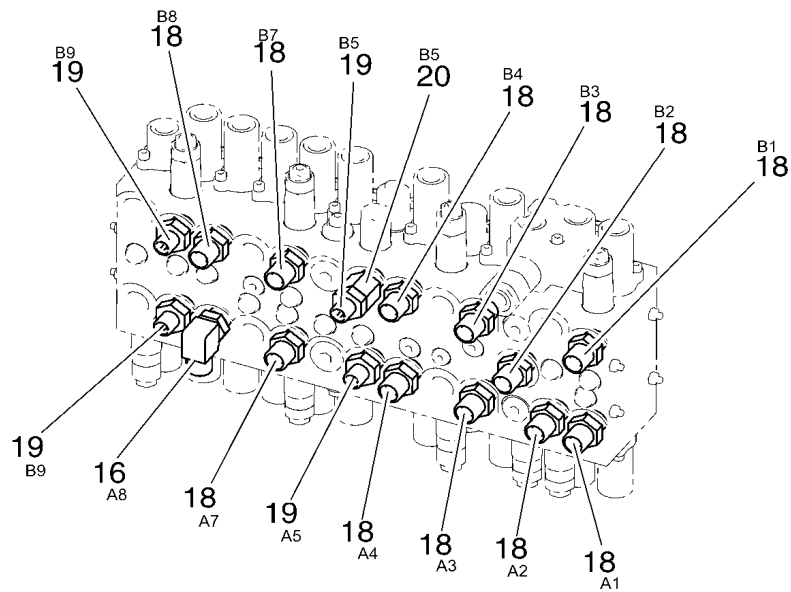


(C)


 
CONNECTOR



HYD LINES, SWIVEL

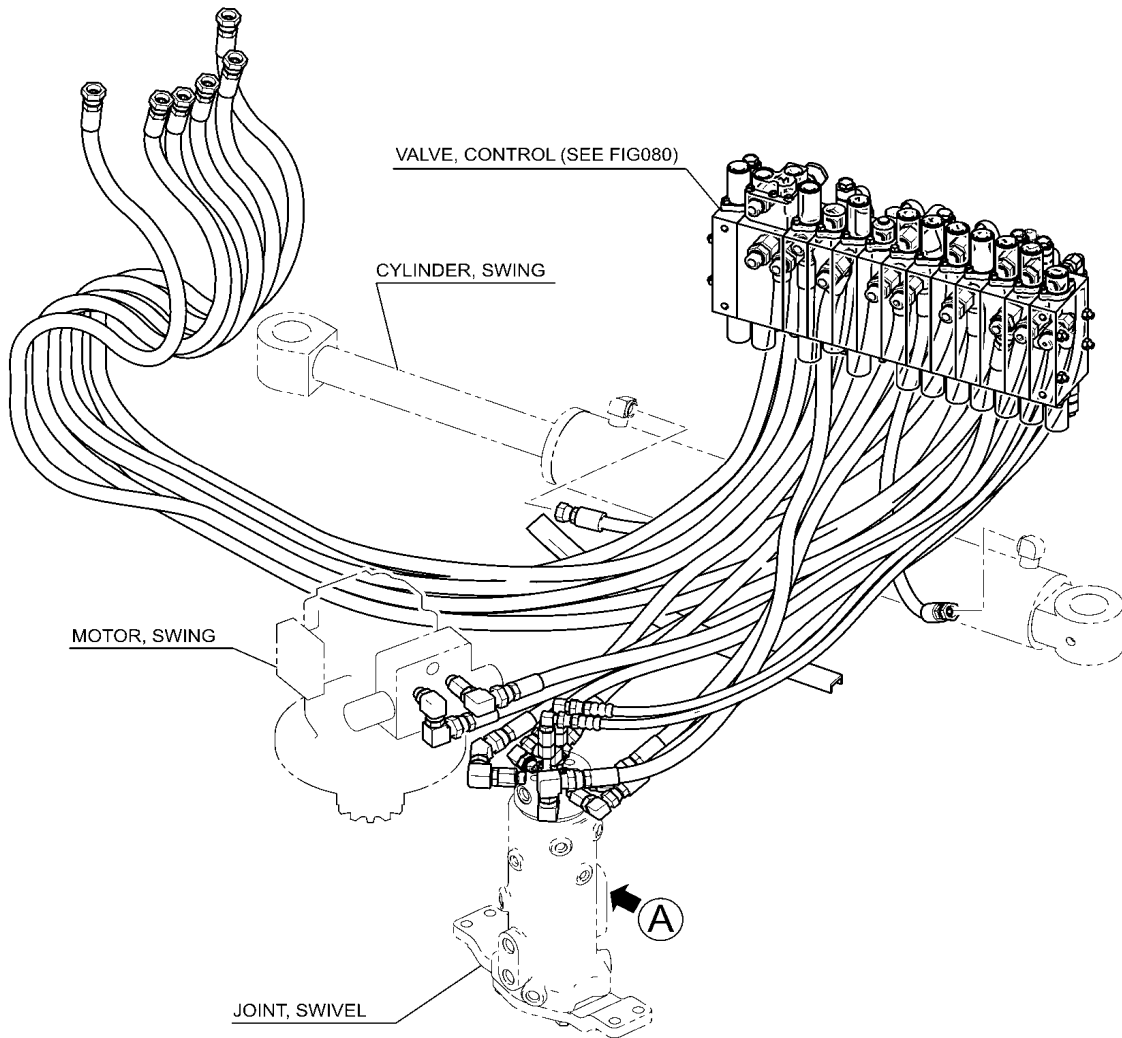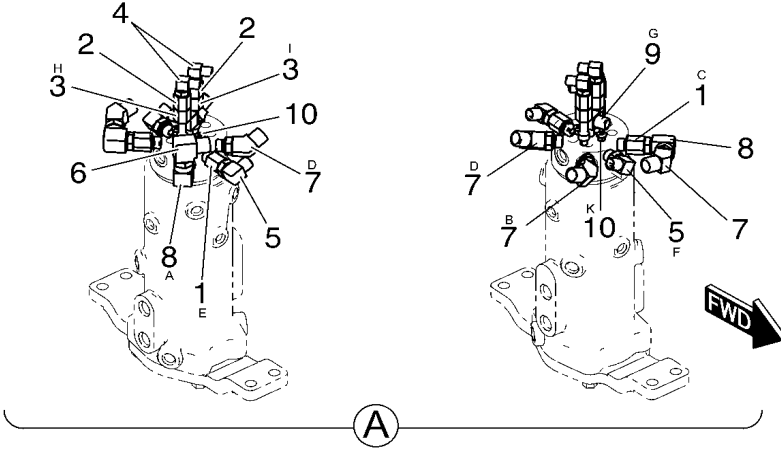  

CONTROL LINES, MULTI

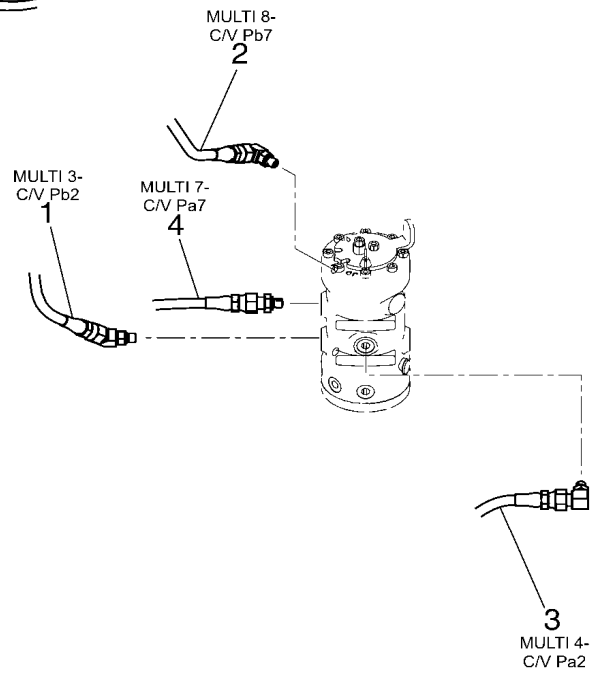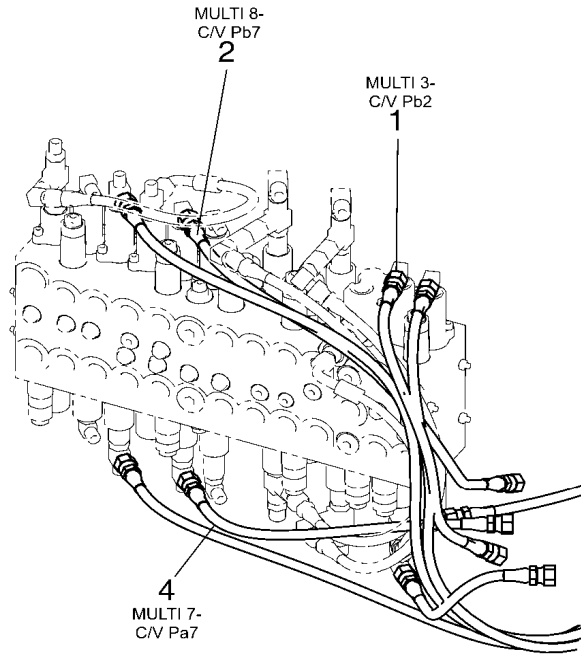  


01-047

02

p1

10/201  
8

 CONTROL LINES, REMOTE, ANGLE DOZER

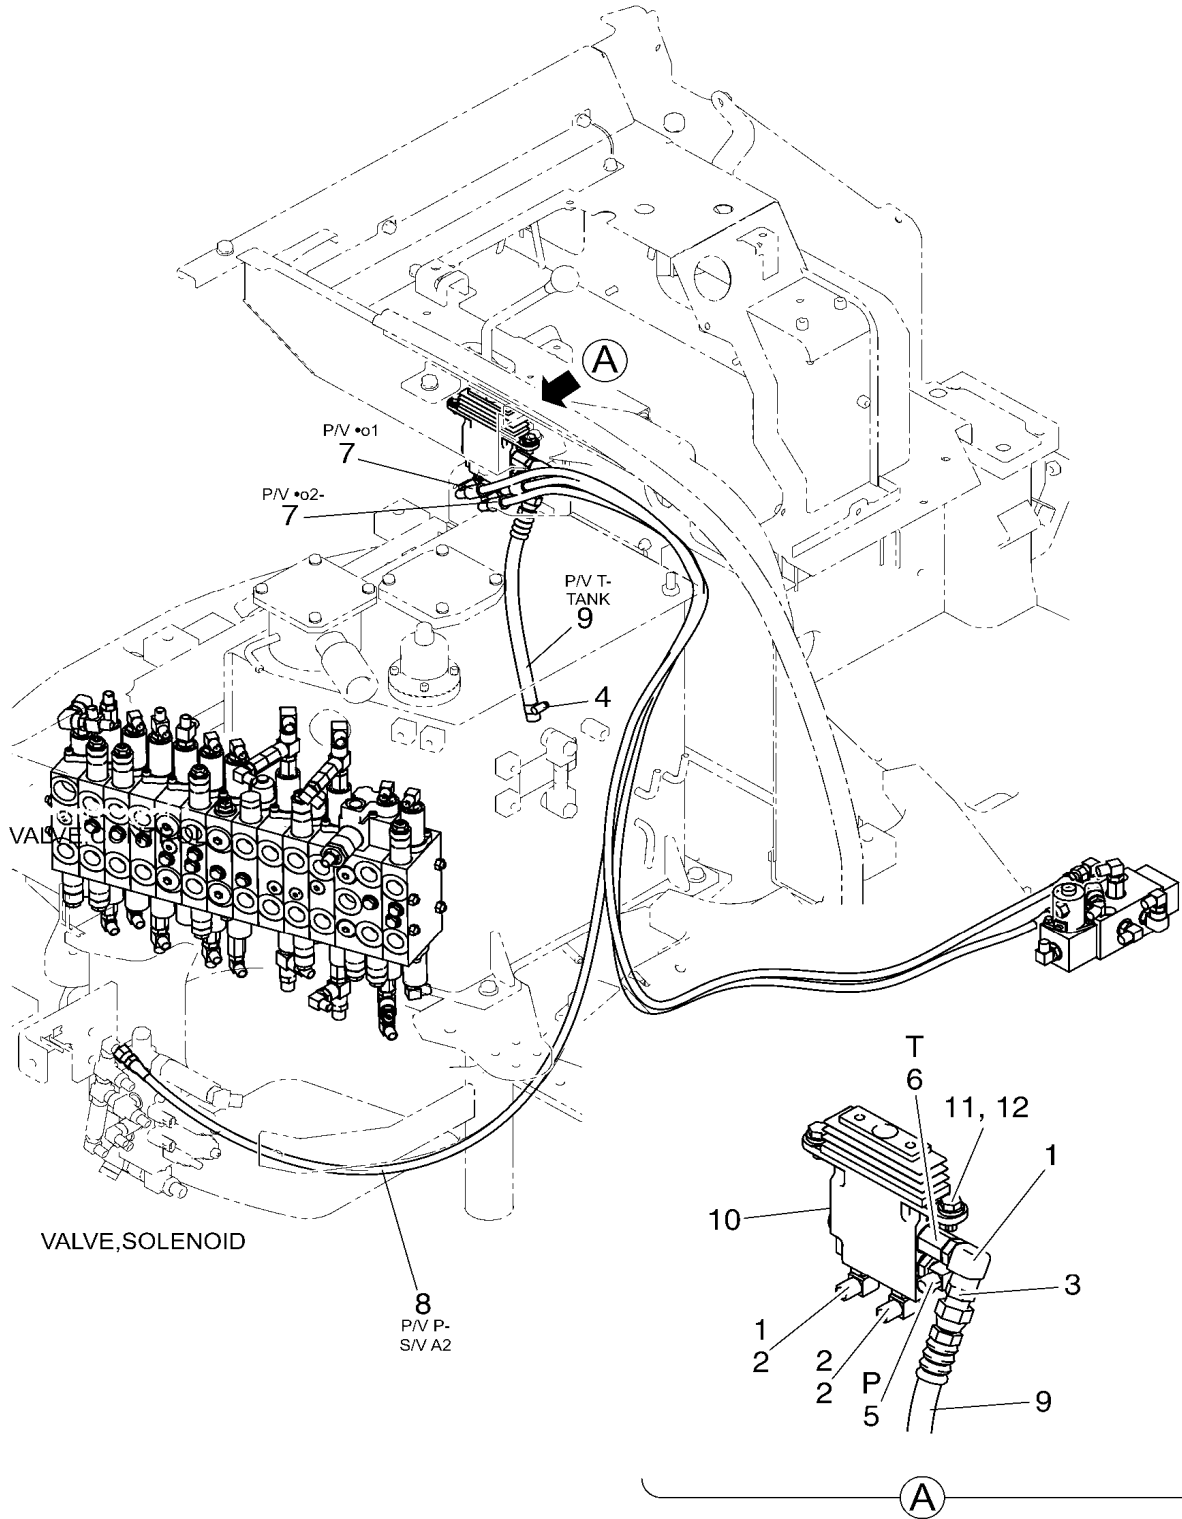



01-049

02

p1

10/201  
8




 
 
CONTROL LINES, VALVE, ANGLE DOZER (Aug 9 2010 3:07PM)

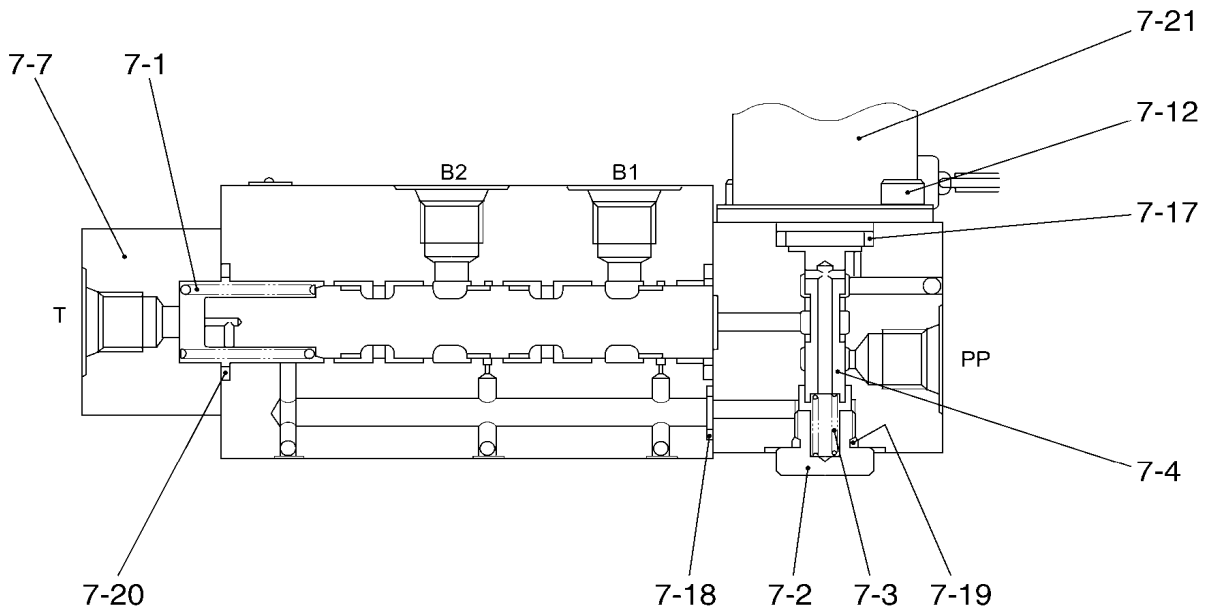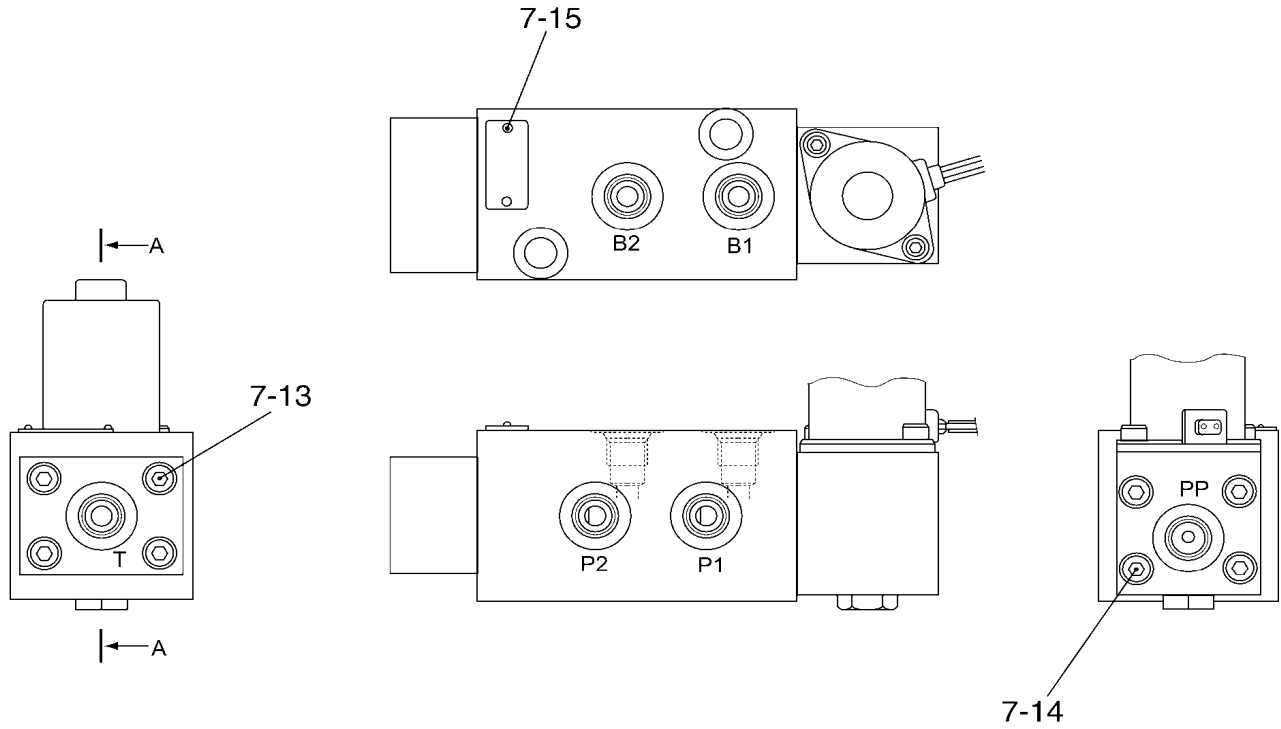

SECTION A-A



     CONTROL LINES, VALVE, COOLER

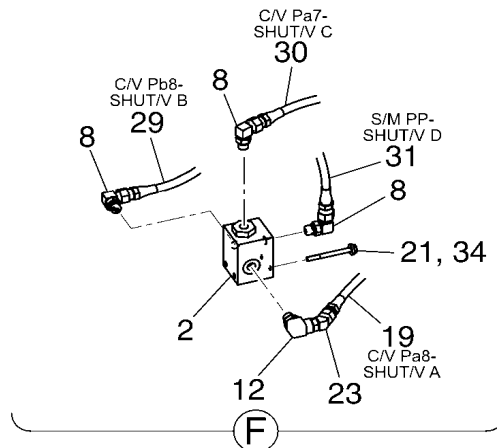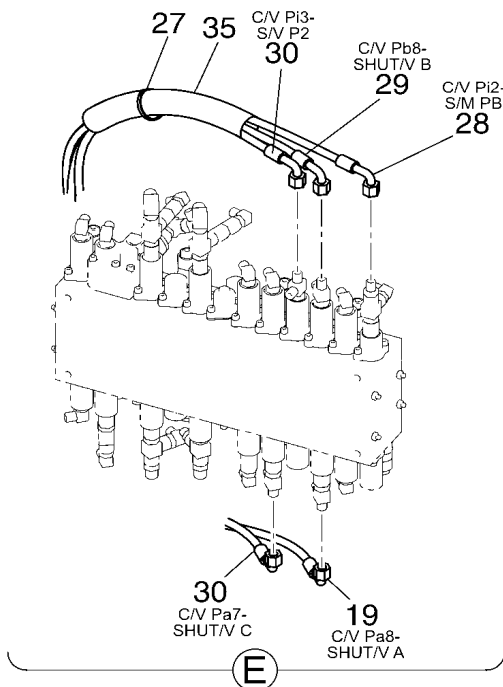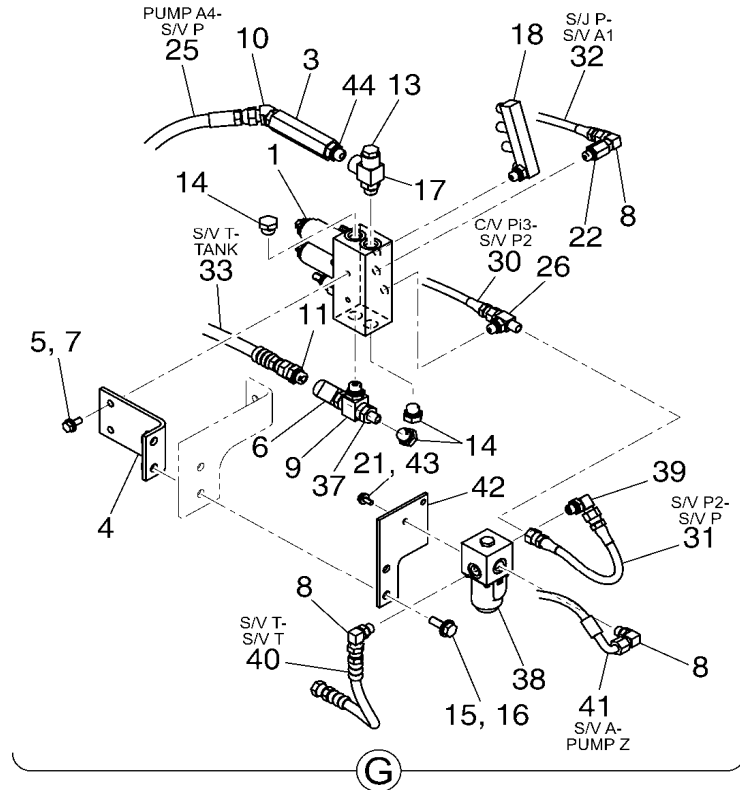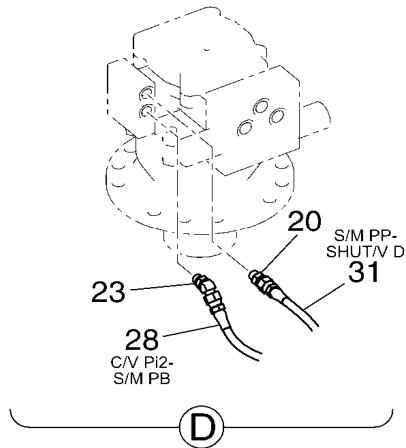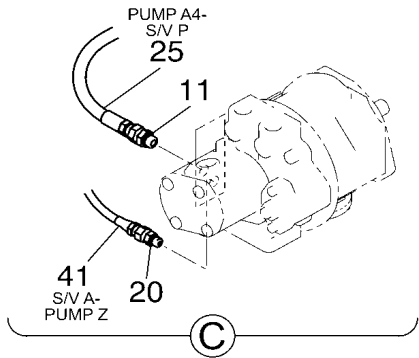


01-052

02


p2

10/201  
8

 
CONTROL LINES, VALVE

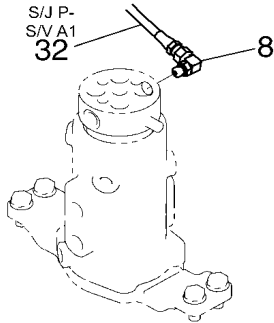


C

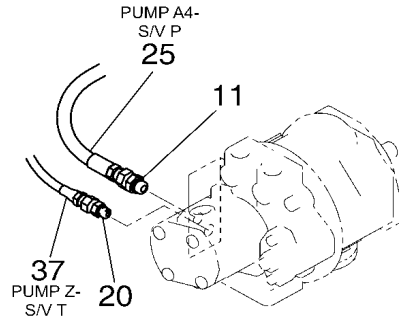 


D

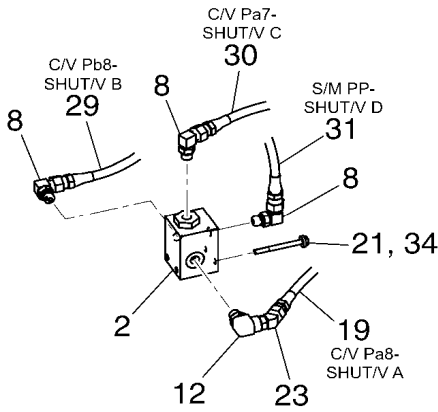 


E

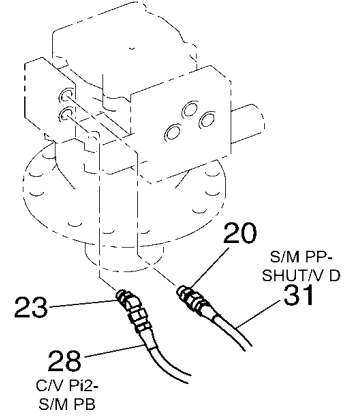 

F

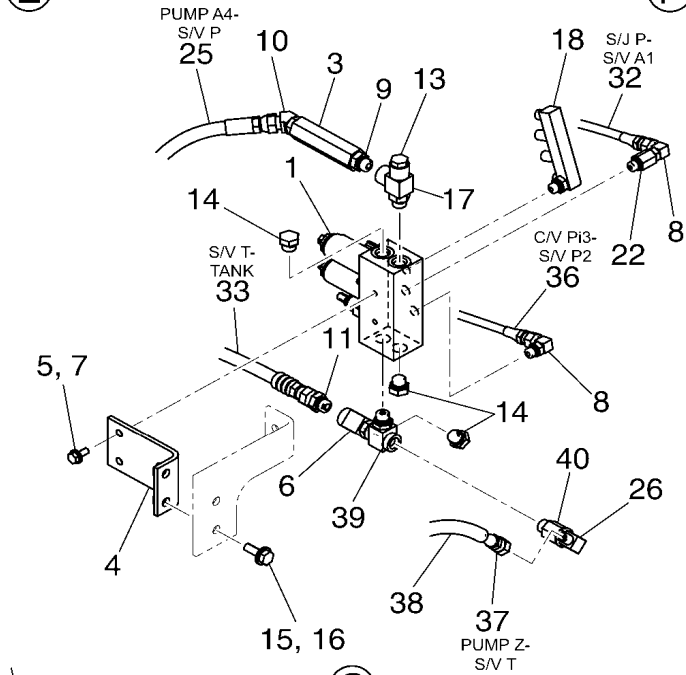 

G

 


01-053

03

p2

10/201  
8

 CONTROL LINES, PROPEL, SWING

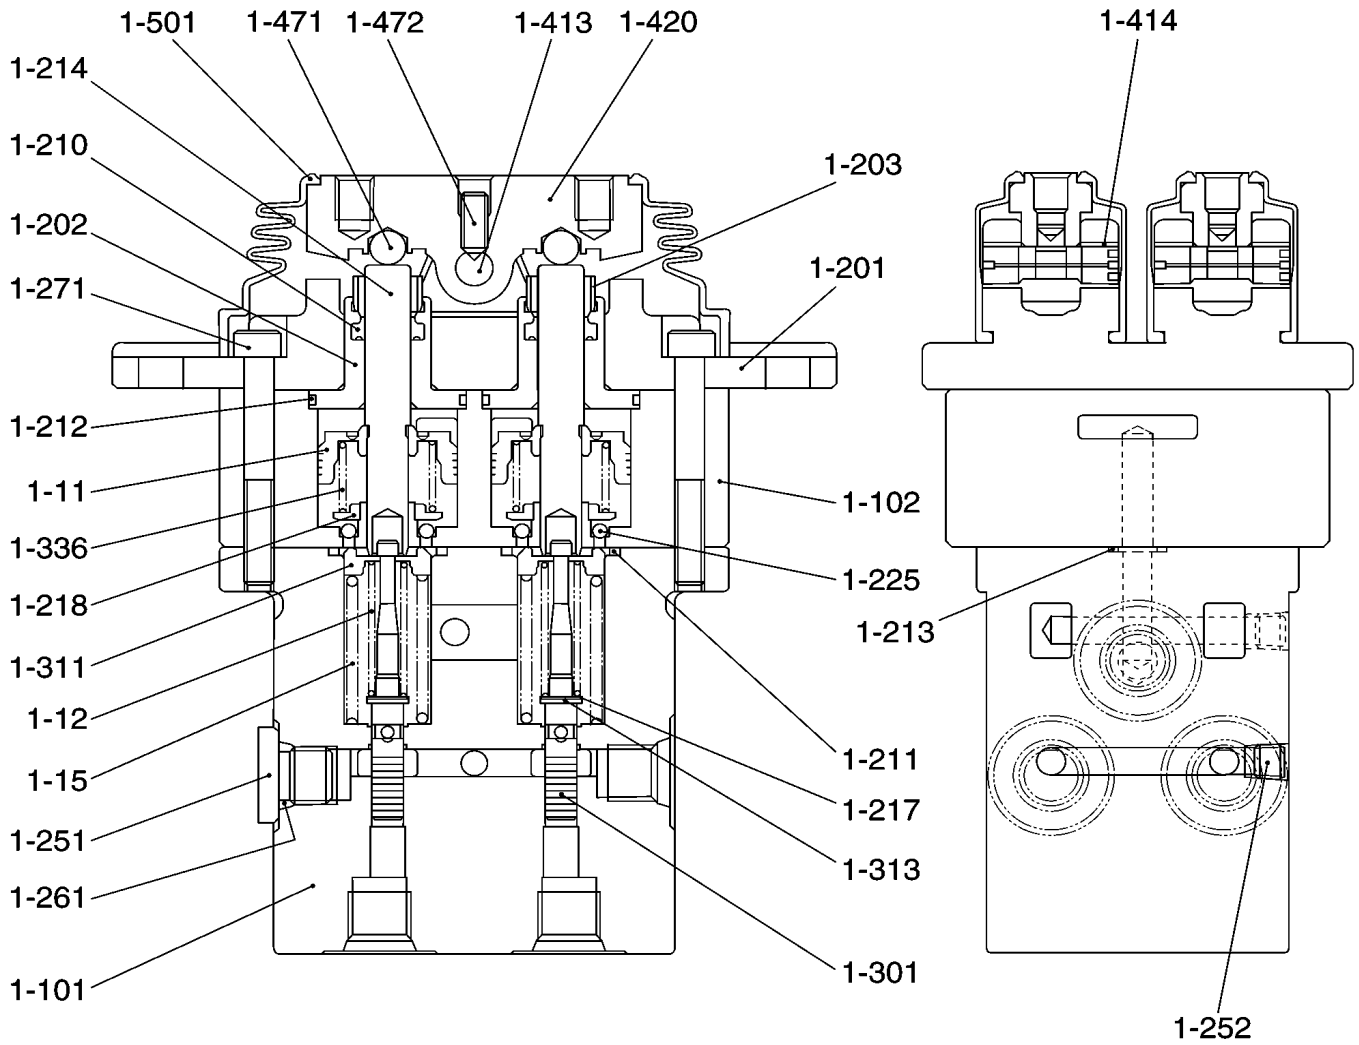



02-003

01


p1

10/201  
8

  
MOTOR INSTAL, PROPEL

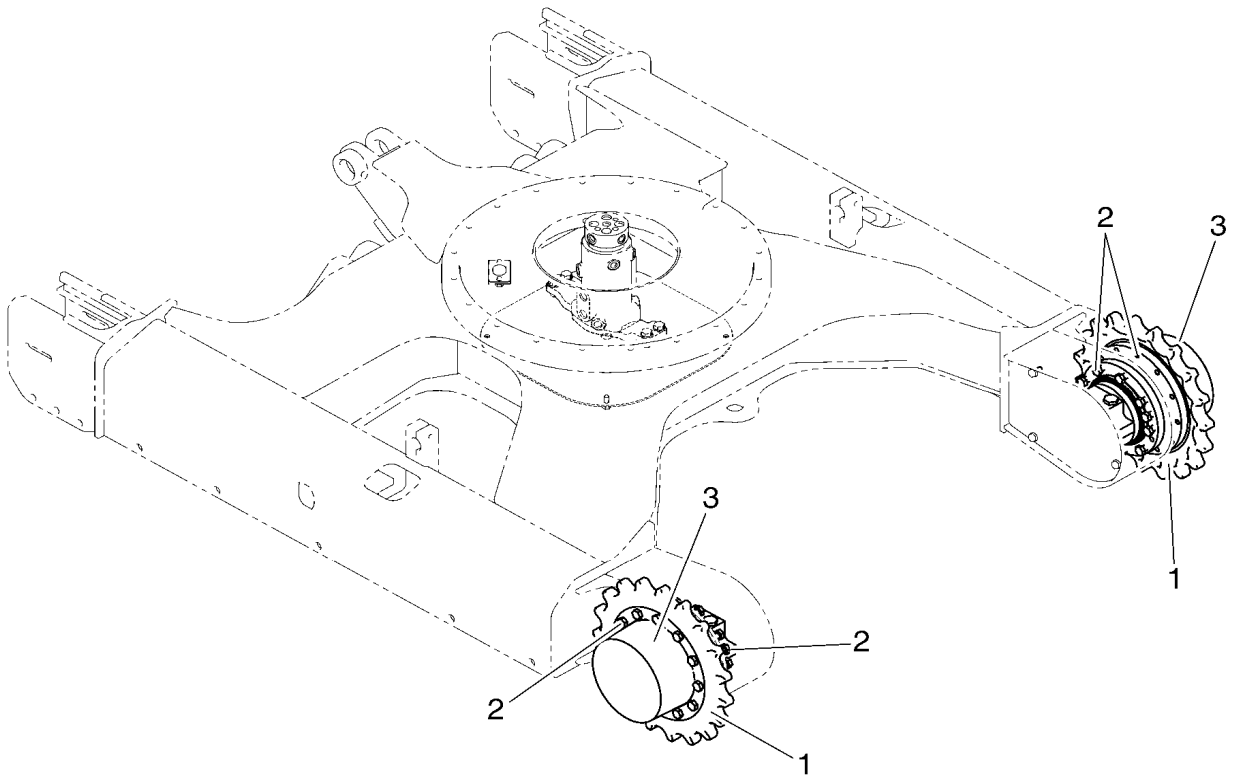

MOTOR INSTAL, PROPEL

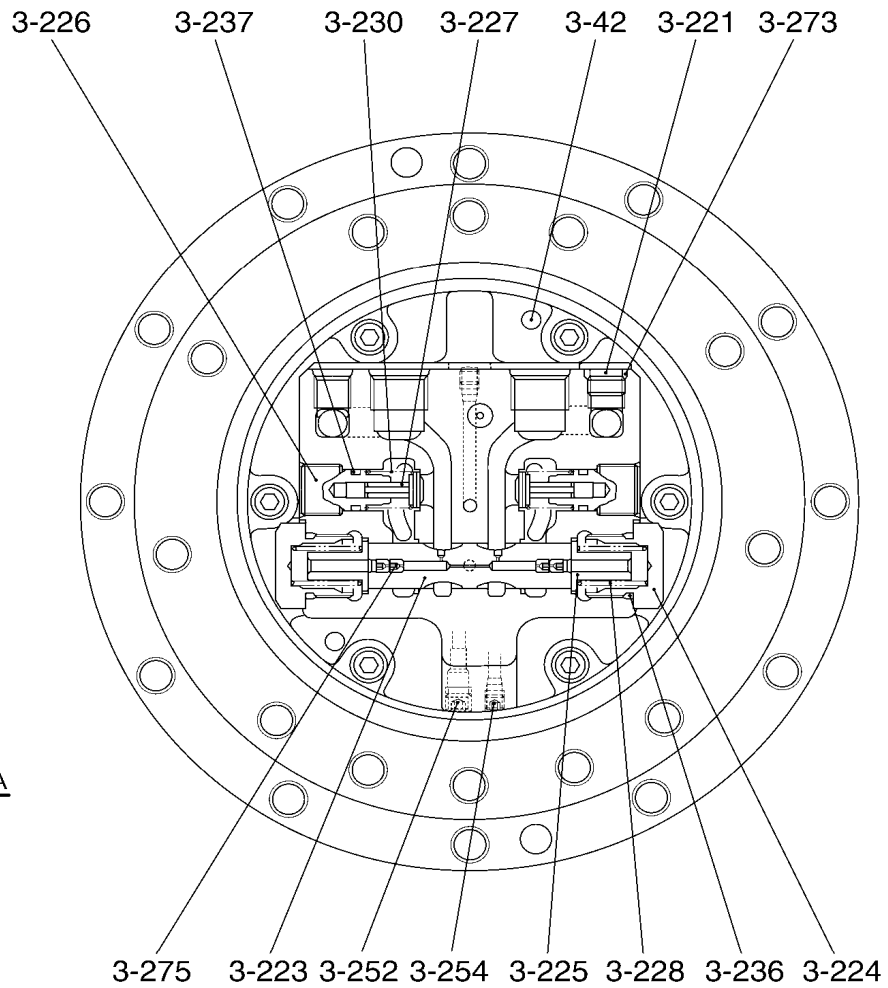 

SECTION A-A

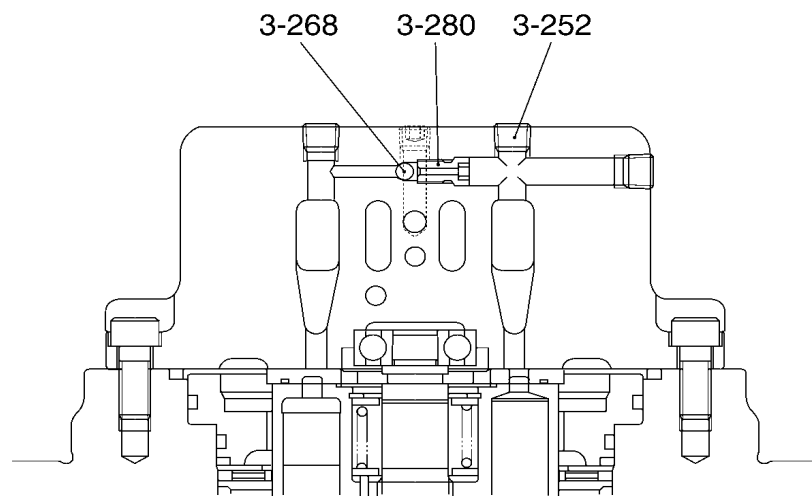 

SECTION B-B



 
 
02-005

01




p1

10/201  
8

JOINT ASSY, SWIVEL, ANGLE DOZER

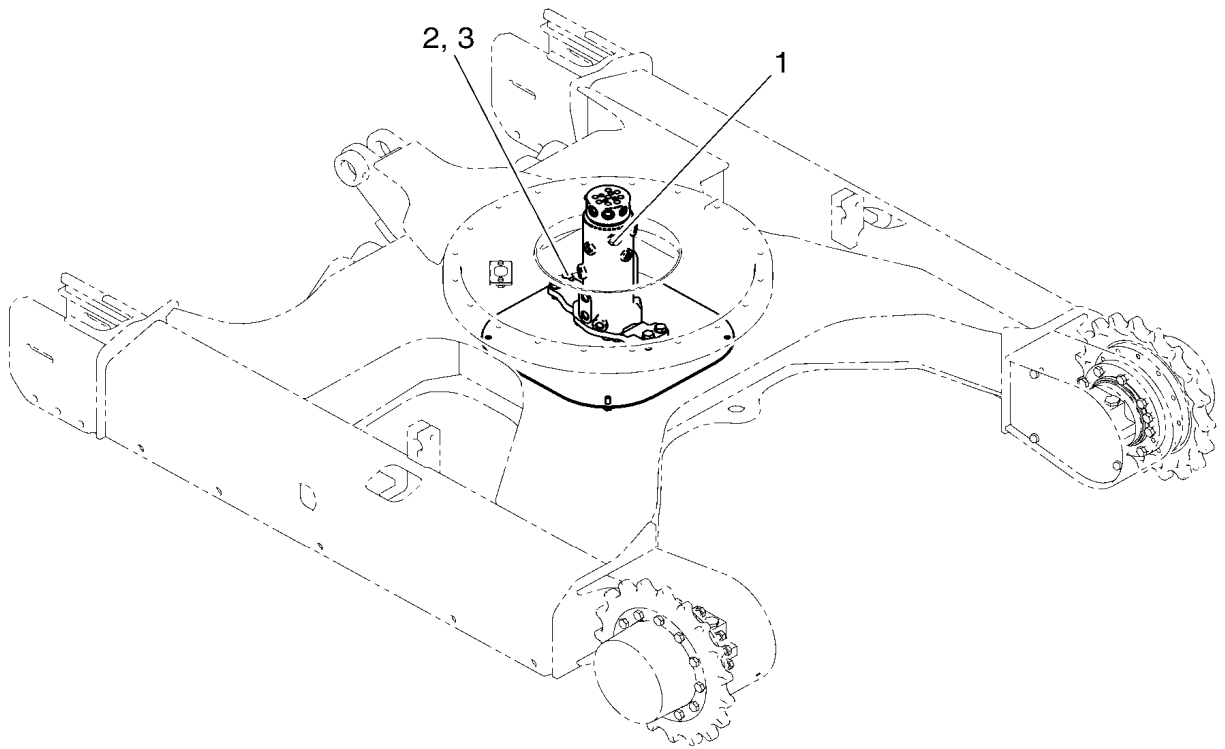

HYD LINES, SWIVEL

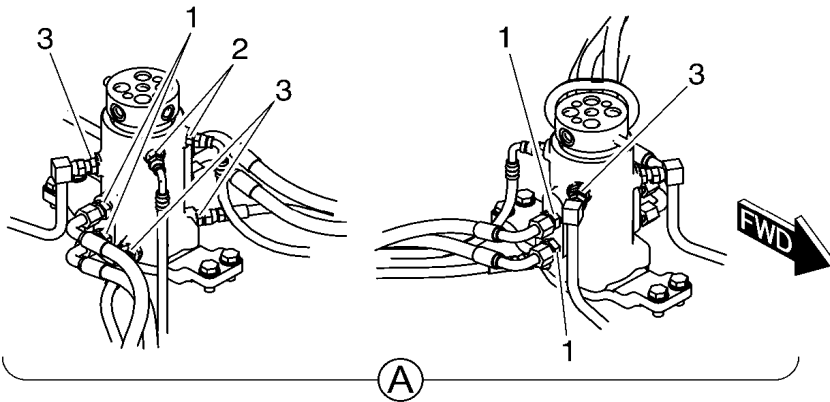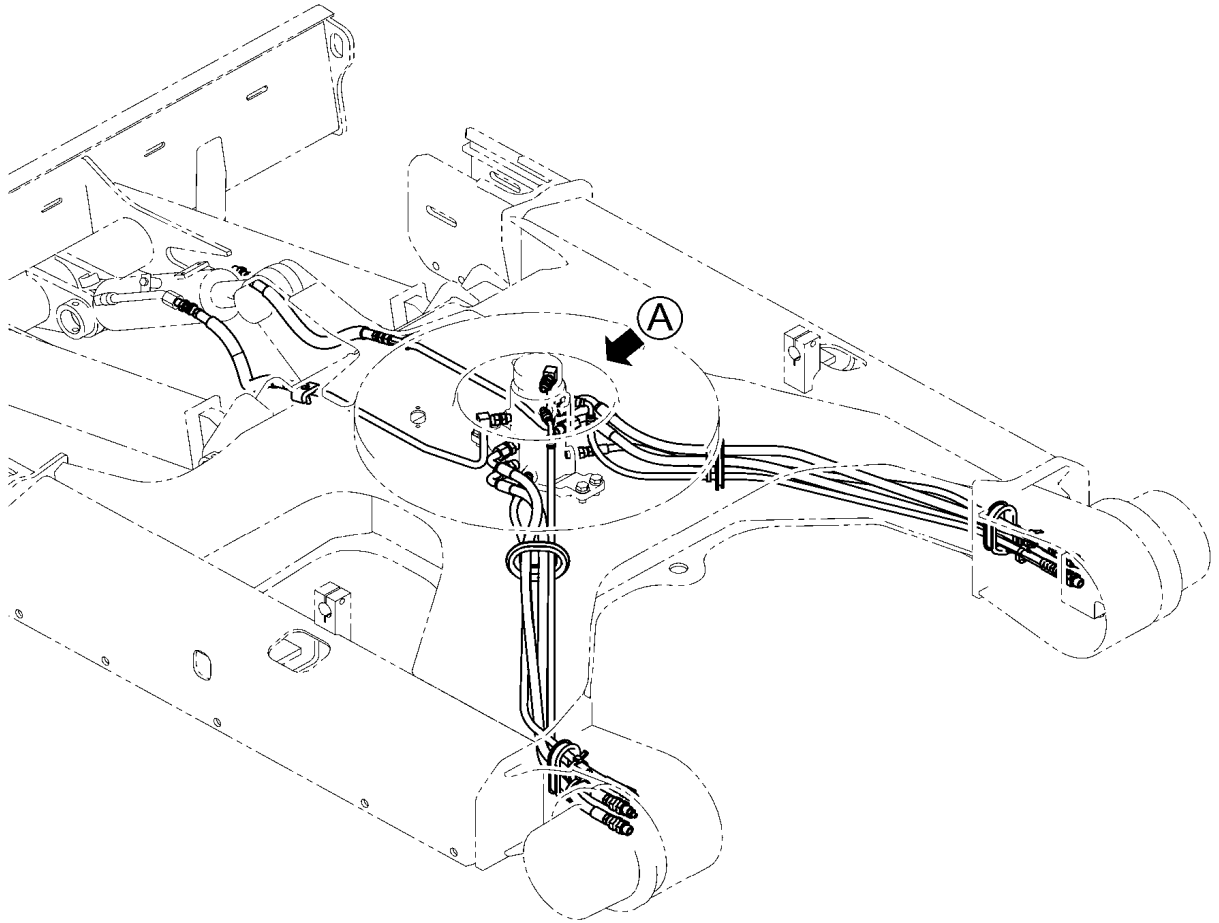   



02-022

02



p1

10/201  
8

  CYLINDER INSTAL, ANGLE DOZER

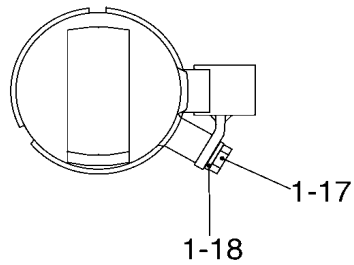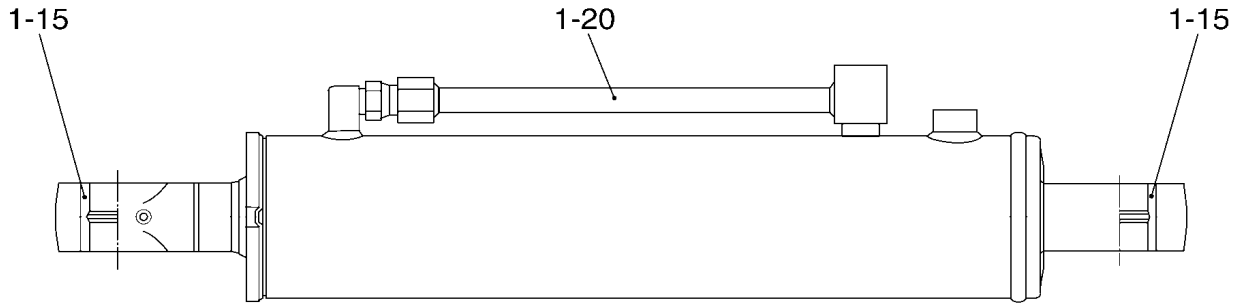

VIEW Y

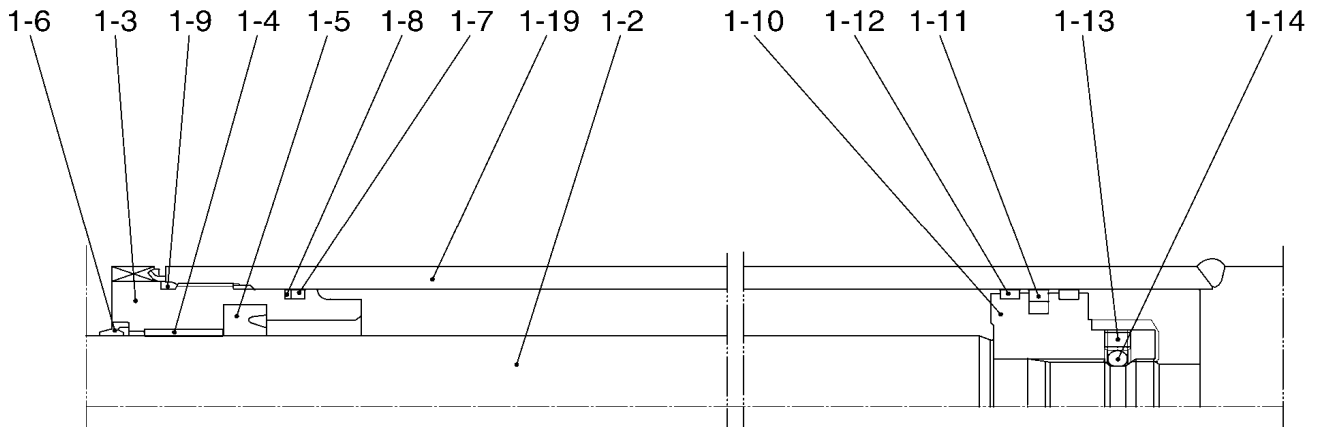  


03-004

01

p1

10/201  
8

 CYLINDER INSTAL, CAB

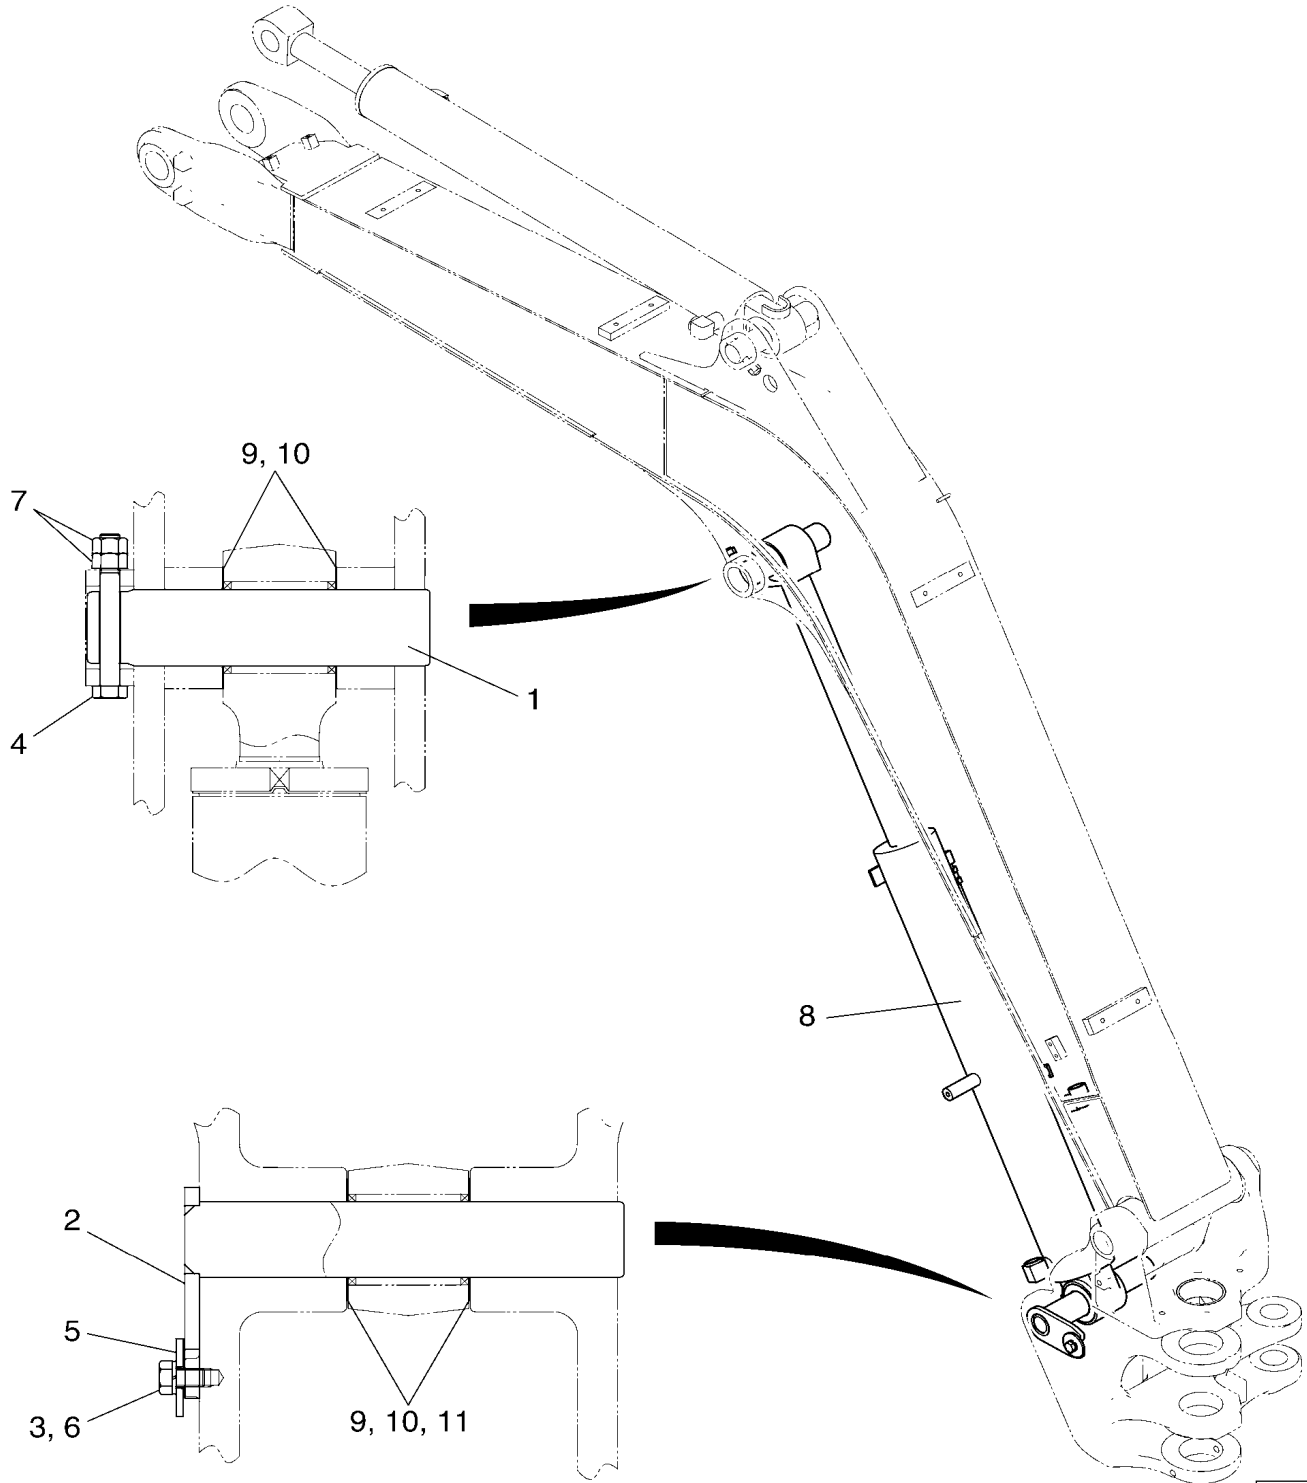



03-006

01

p1

10/201  
8

  CYLINDER INSTAL, BUCKET


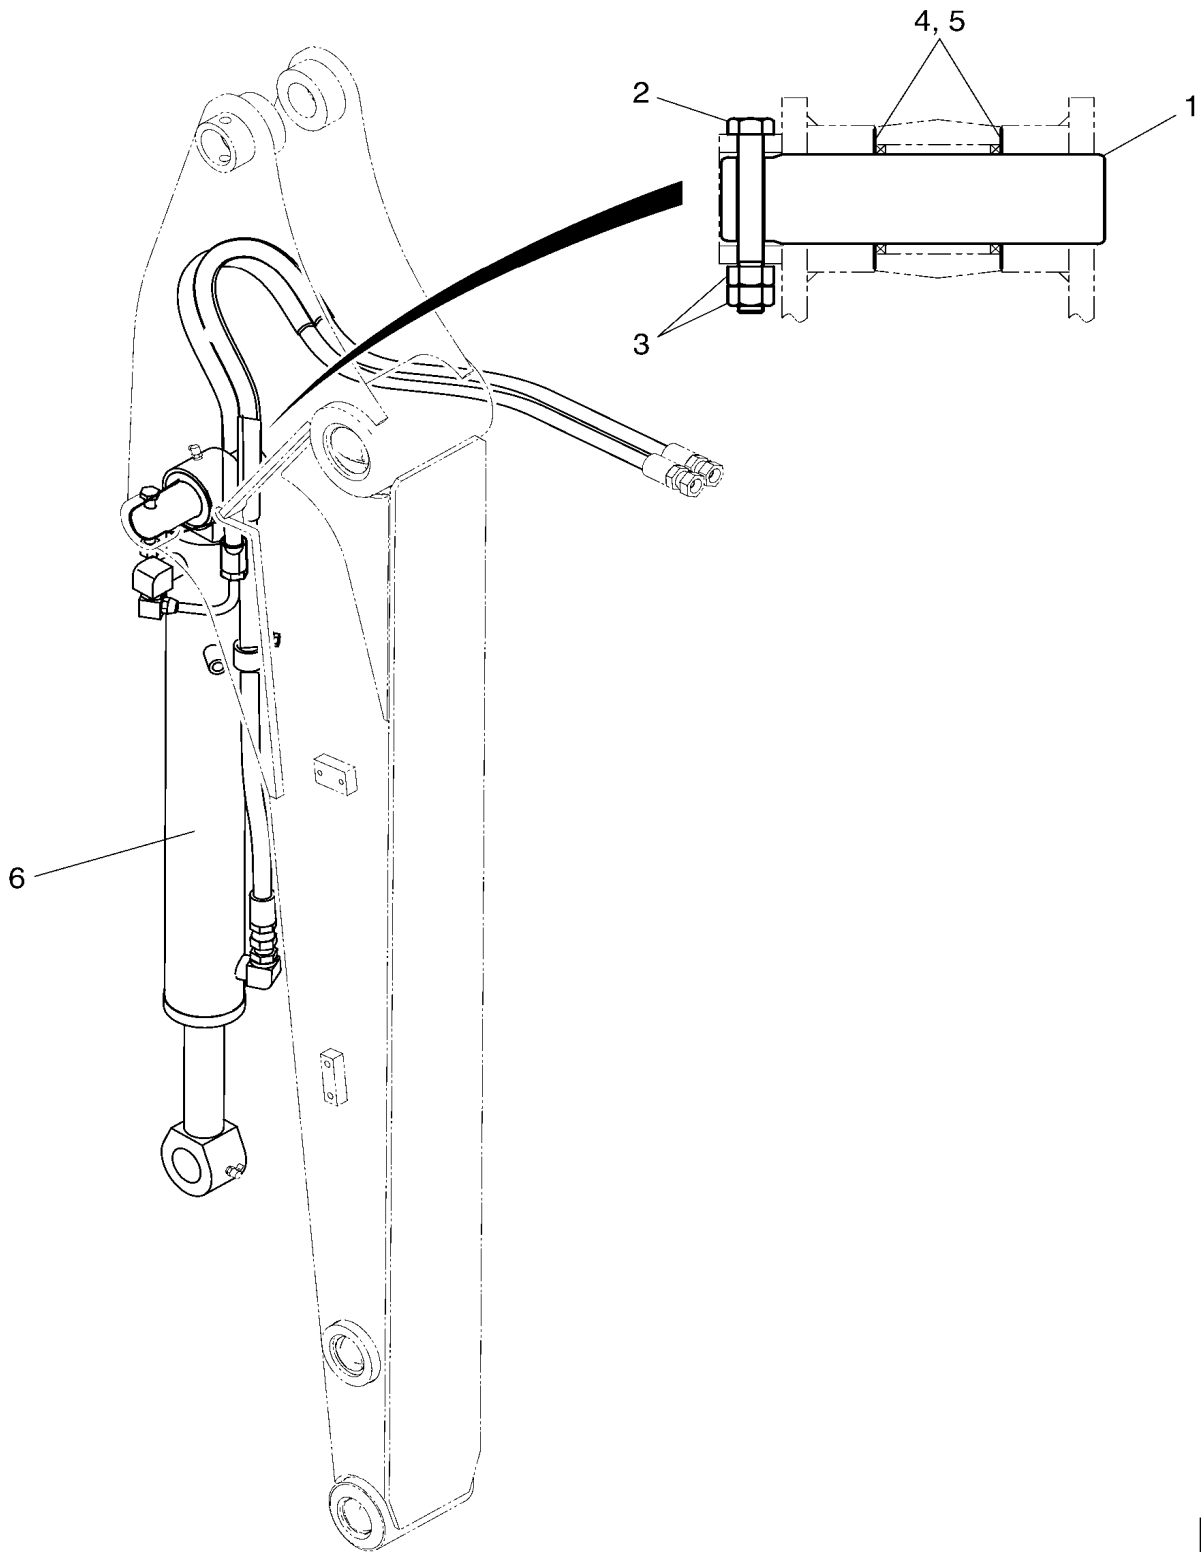


03-010

p1



10/201  
8

  HYD LINES, CYLINDER, BUCKET


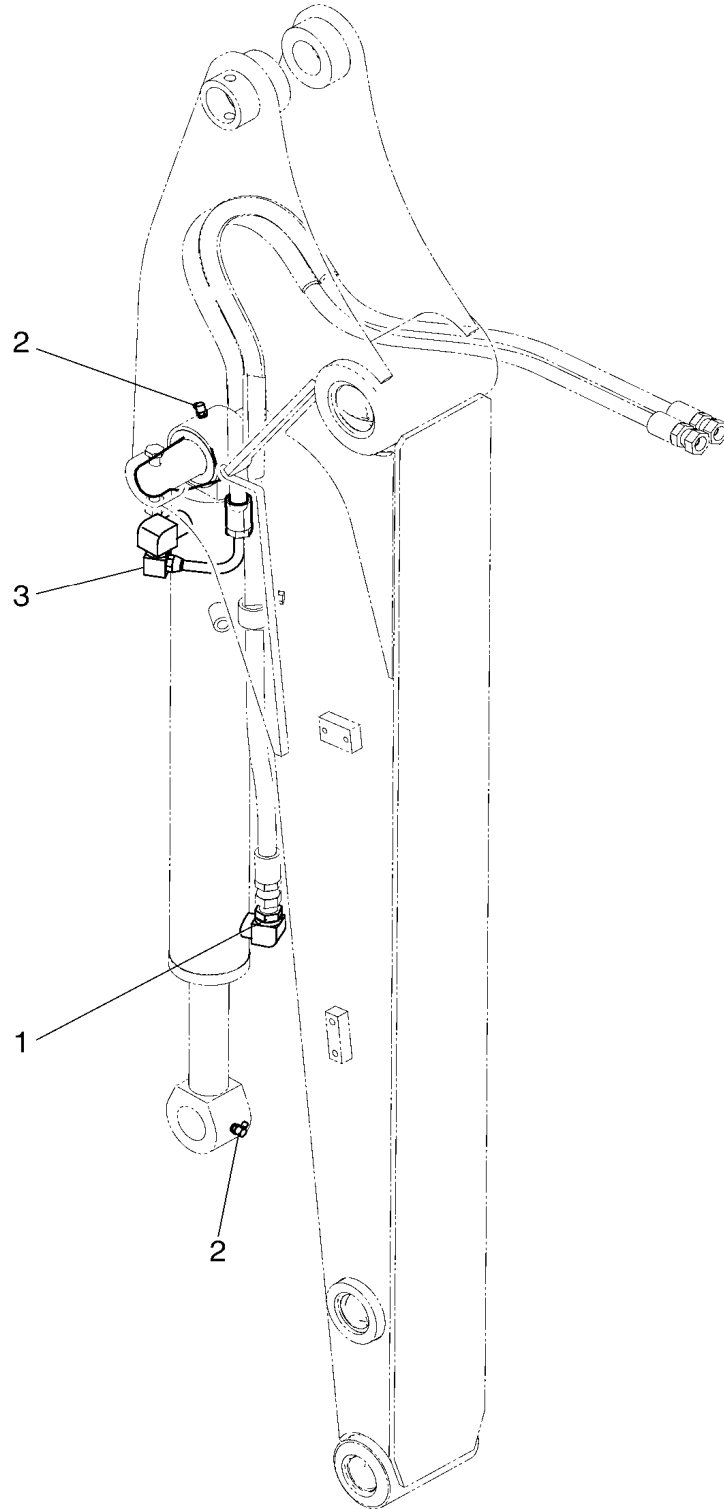




HYDRAULIC LINES, BOOM NIBBLER&BREAKER

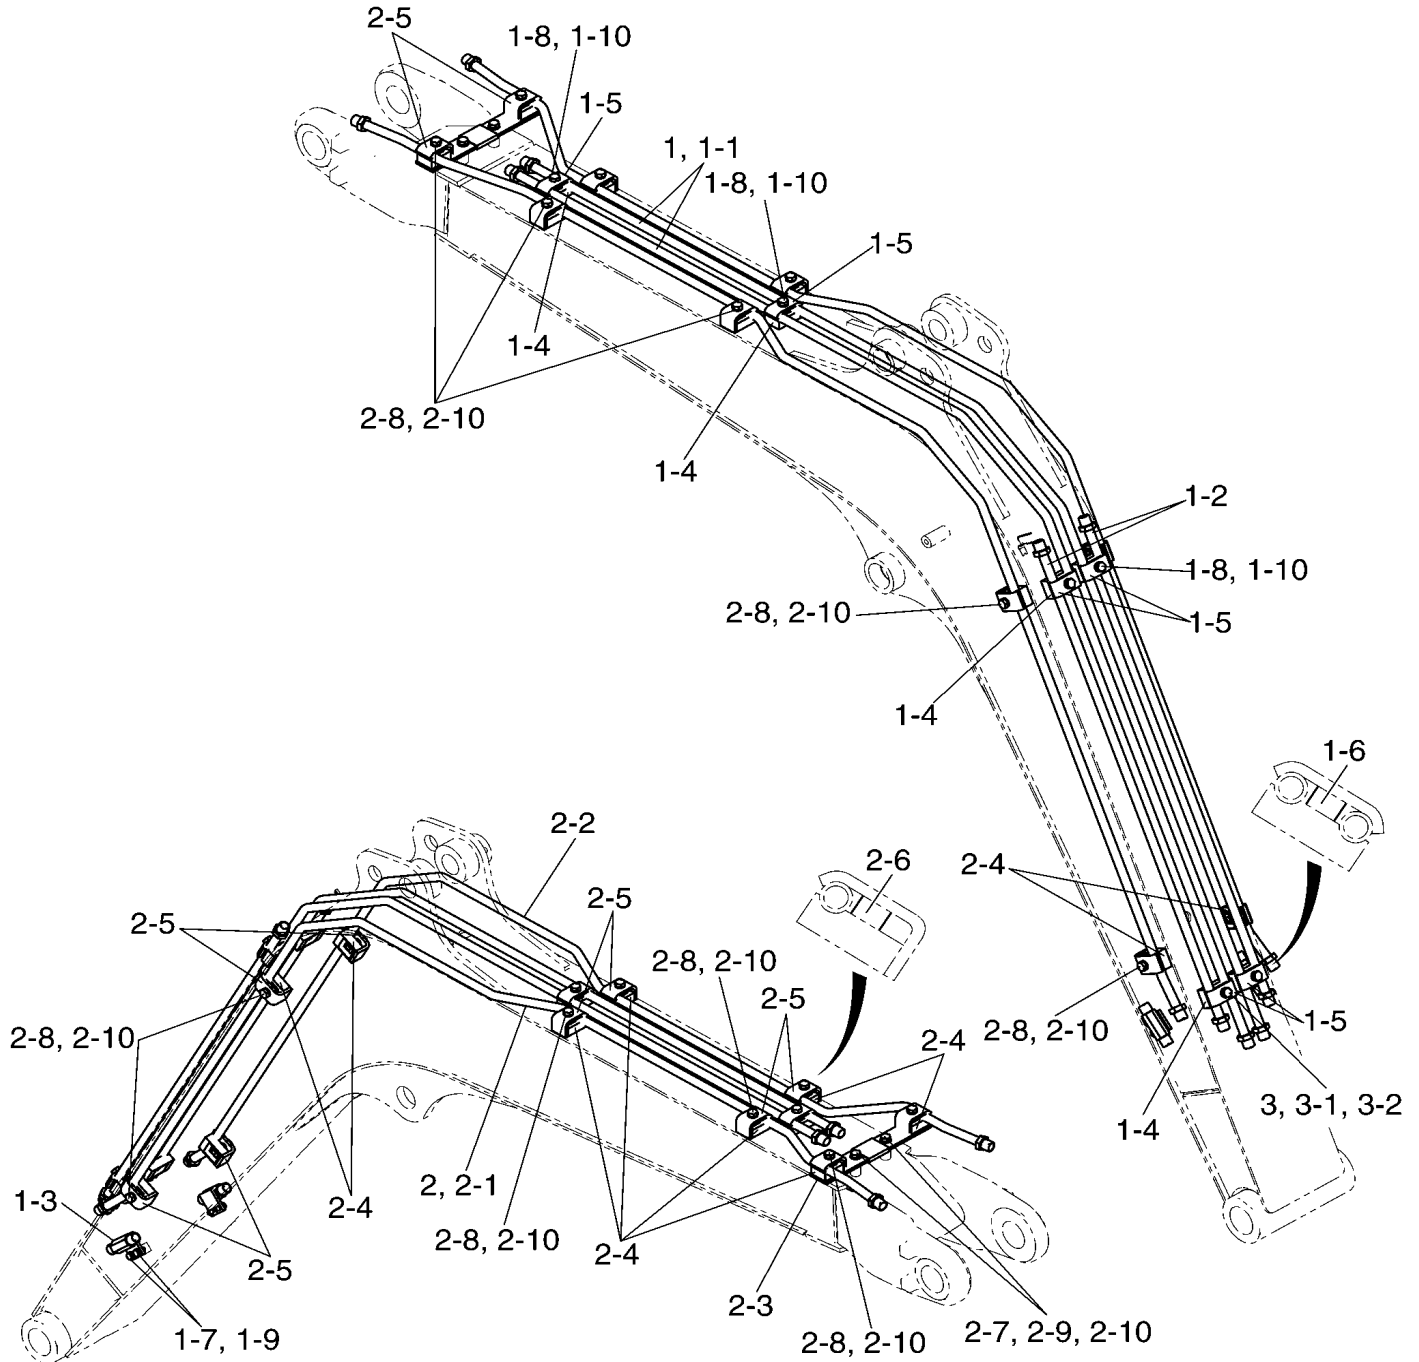  

BRACKET GROUP, SWING

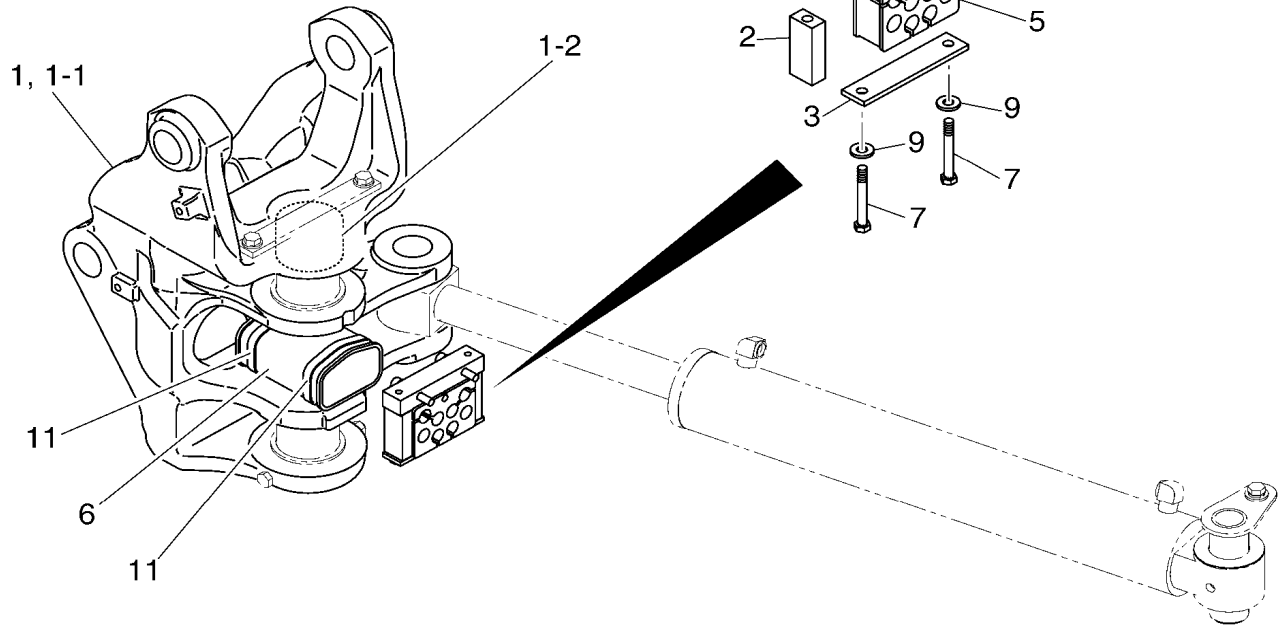 
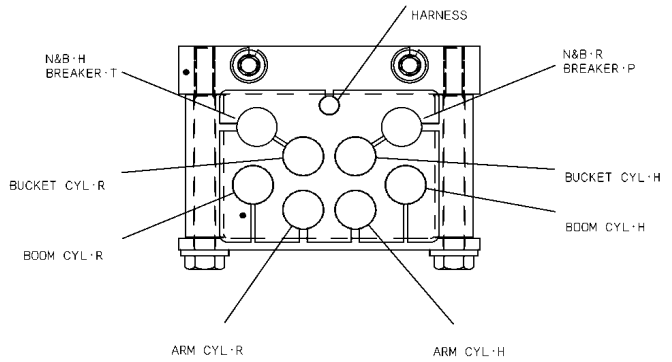 


02-001

p1

10/201  
8

  LOW GROUP, RUBBER

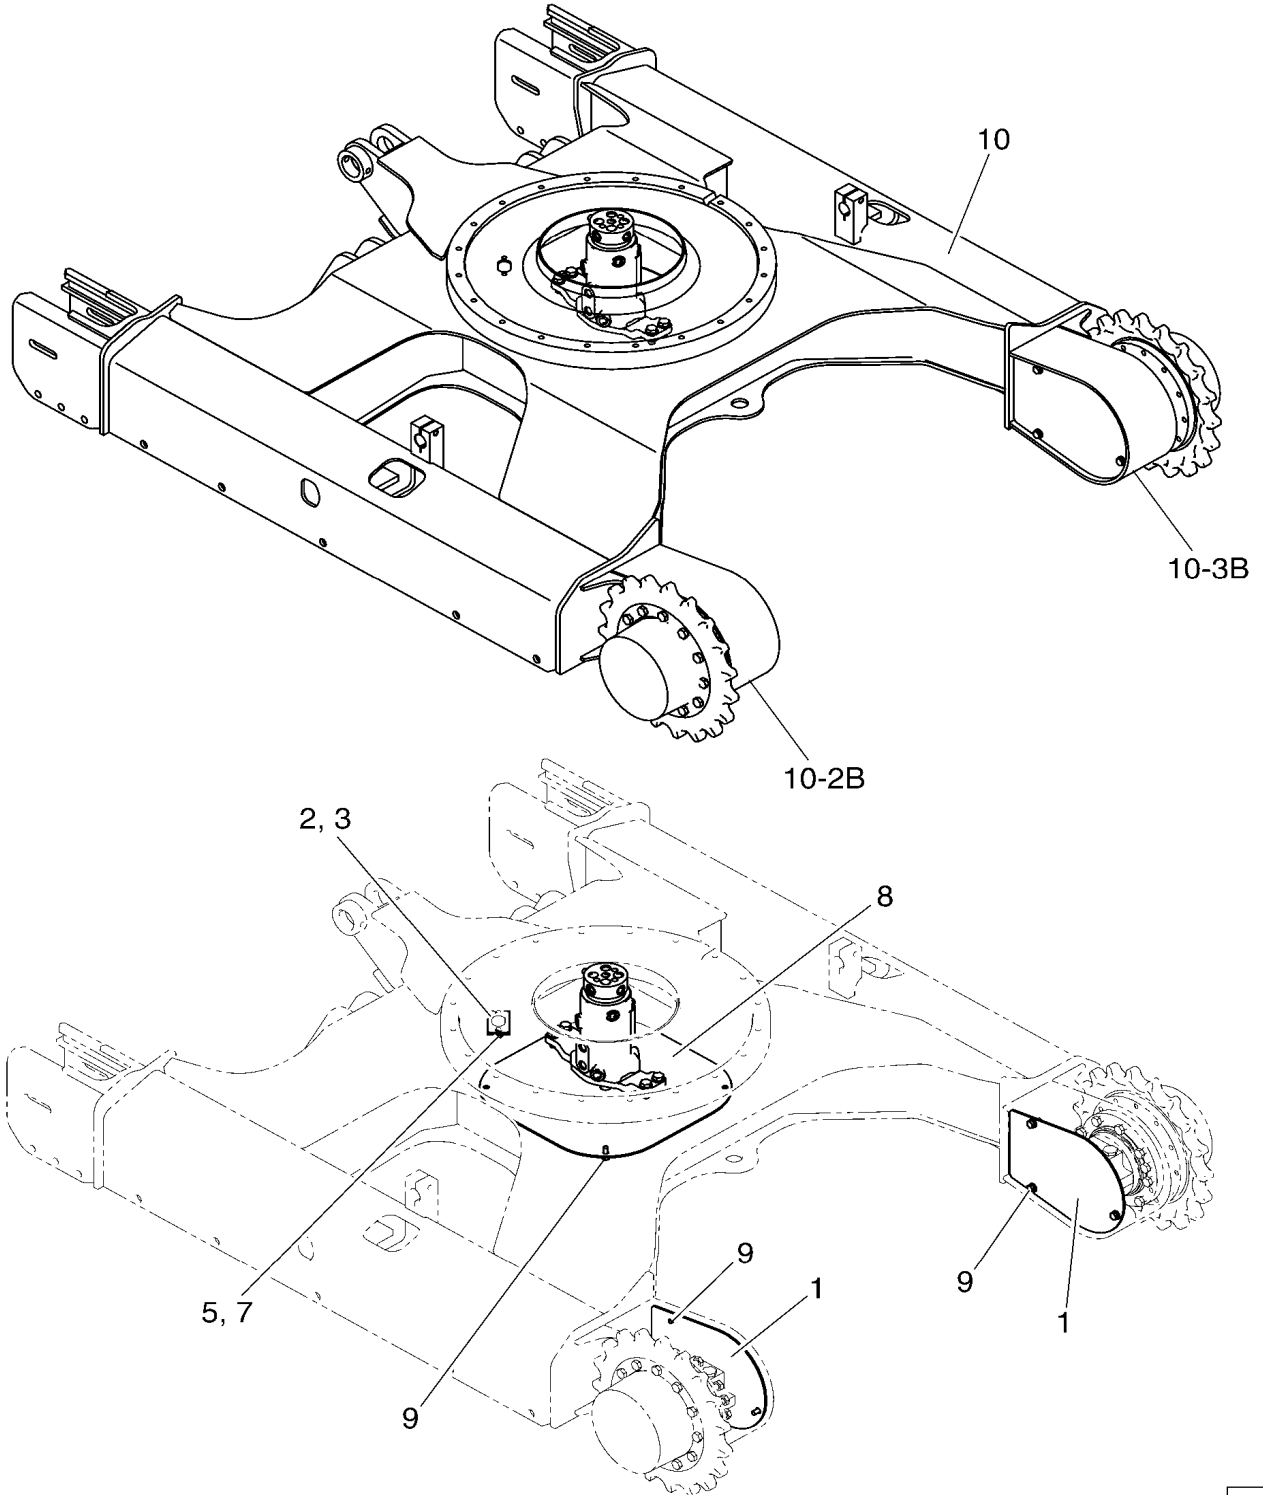



**02-010**

01

p1

10/201  
8

  RUBBER, CRAWLER BELT

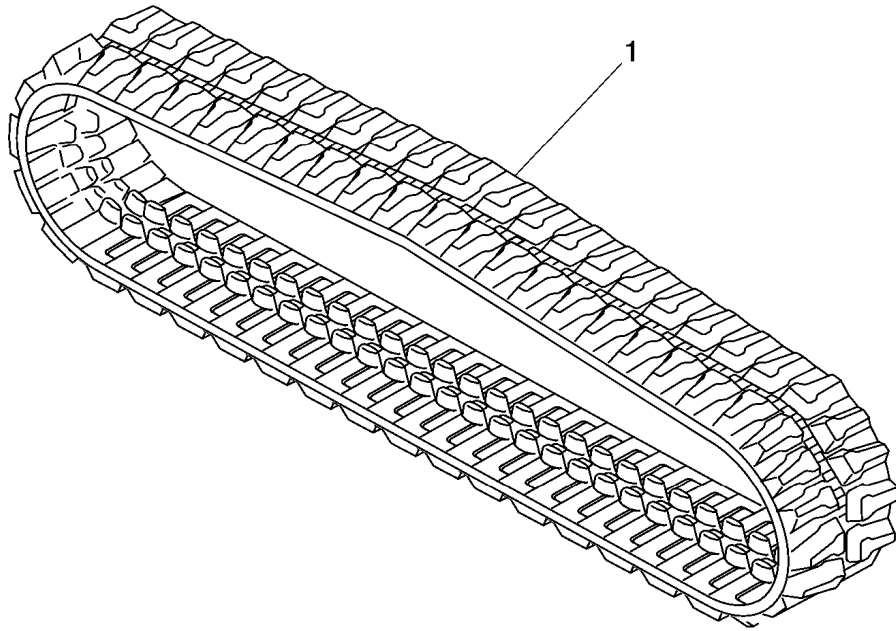

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

 
 
CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

01-072



p1

10/201  
8

CONDITIONER INSTAL

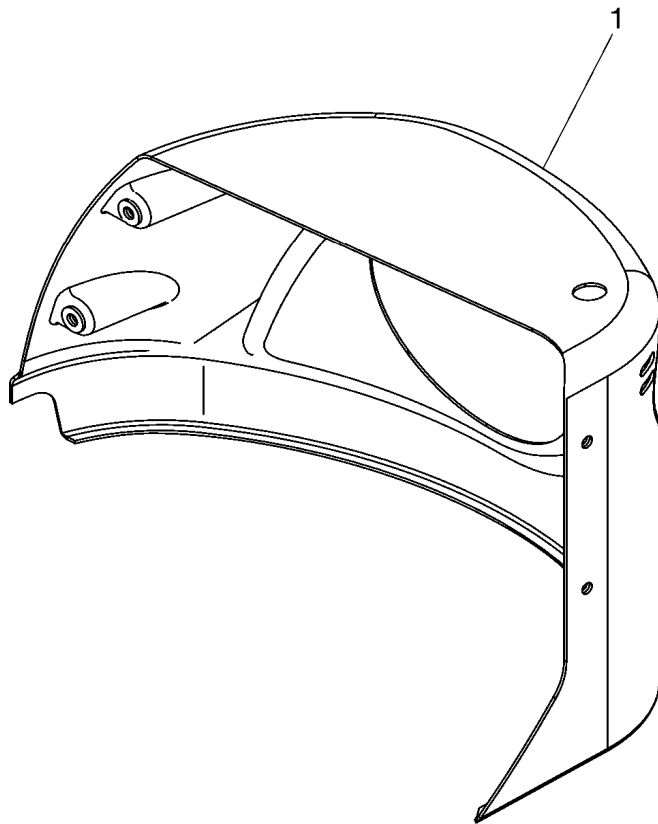

COOLER ASSY

 
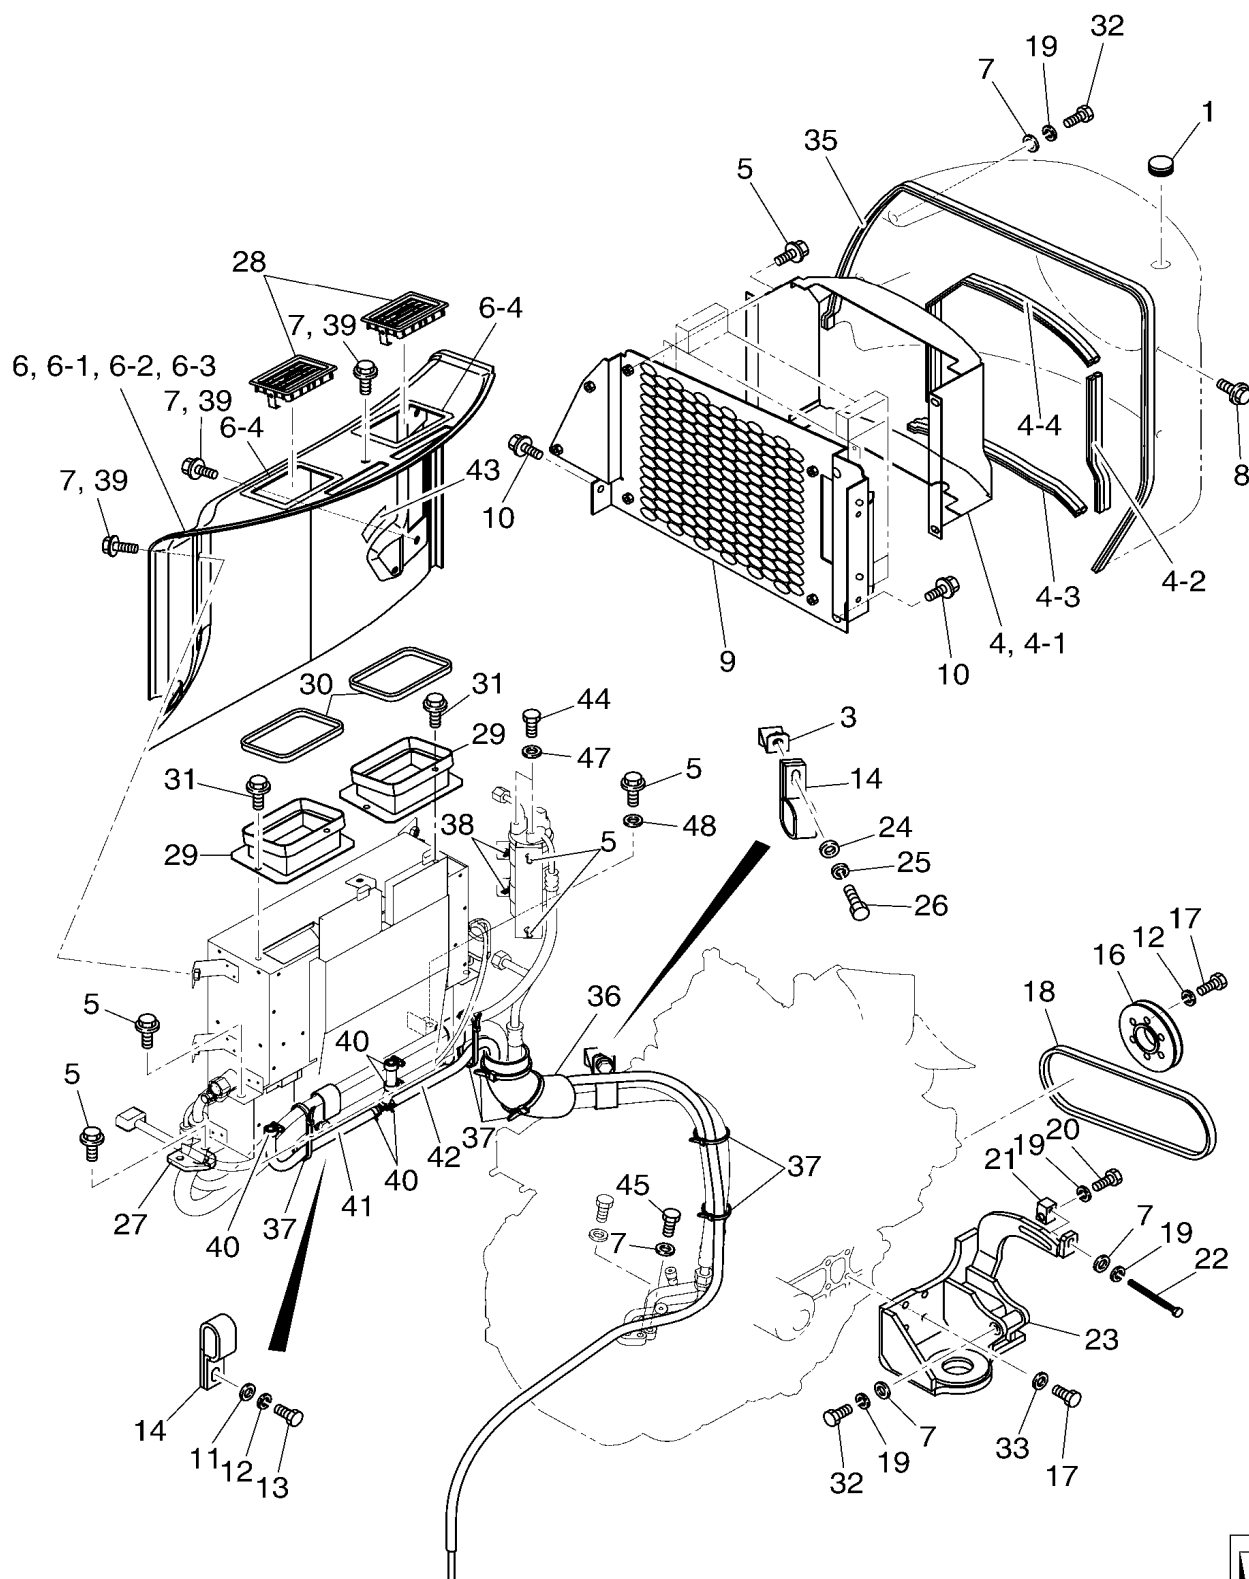 


01-065


p1

10/201  
8

  
LIGHT INSTAL, CANOPY

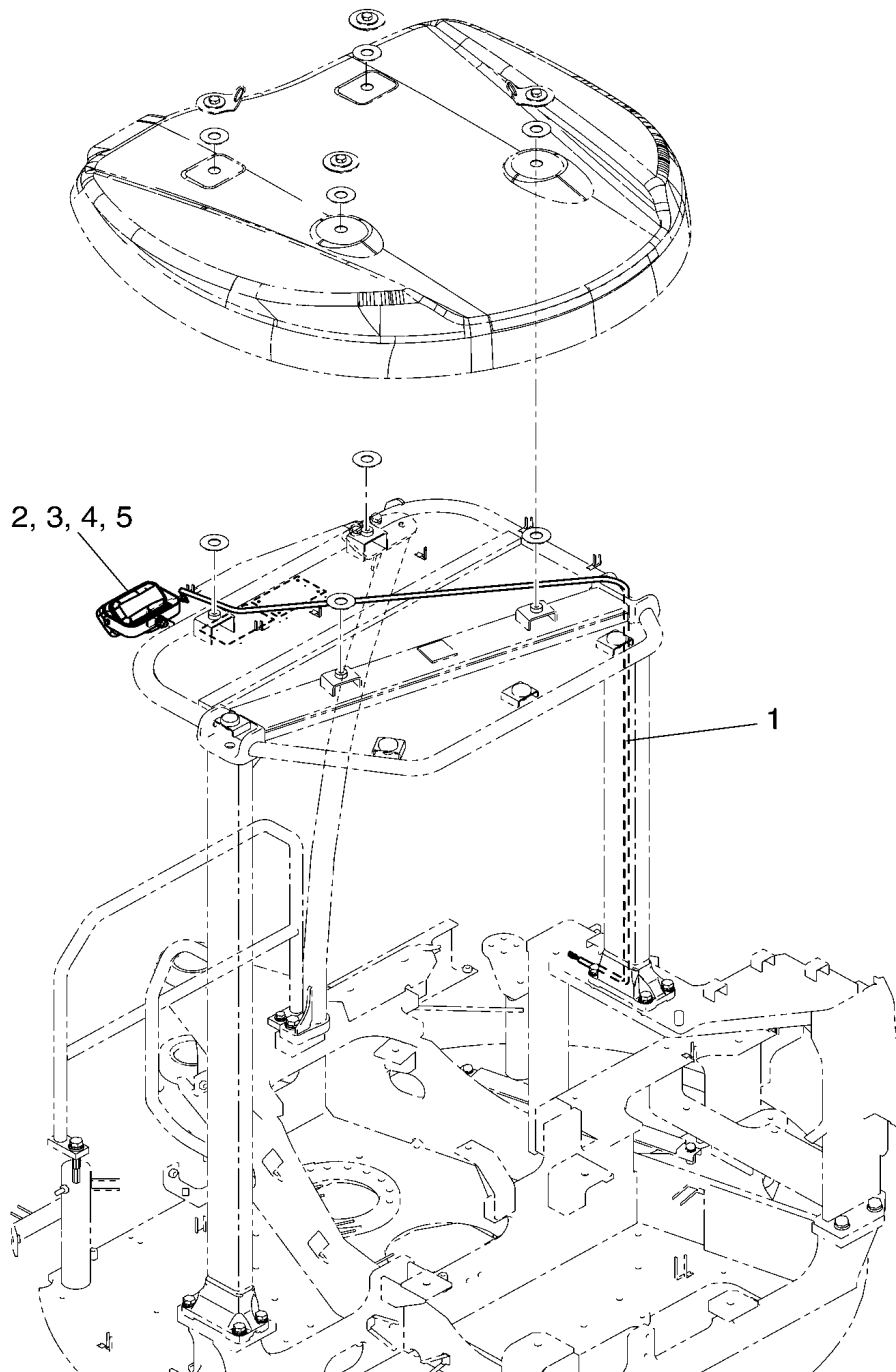


ELEC ASSY, UPP

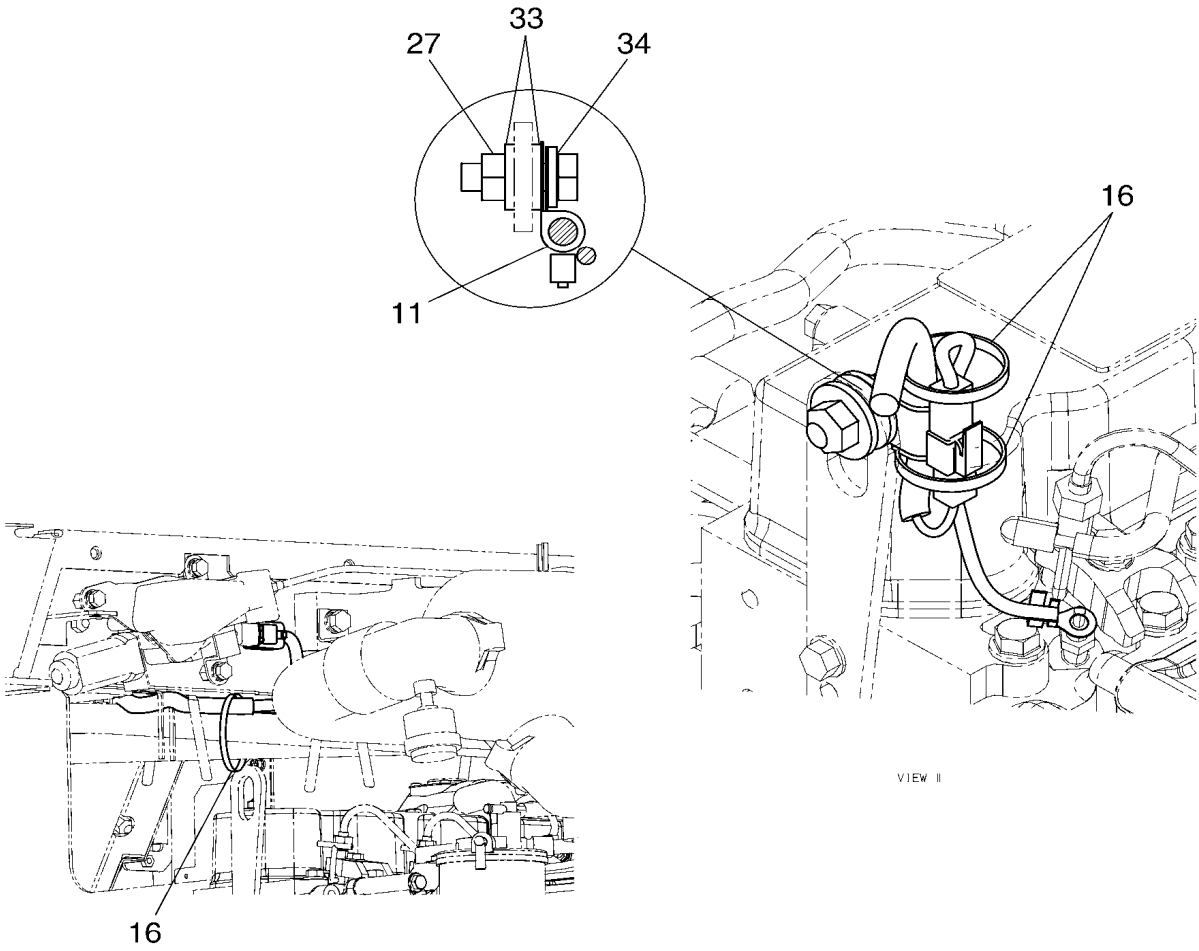 

CASE OF HEATER SPECIFICATION

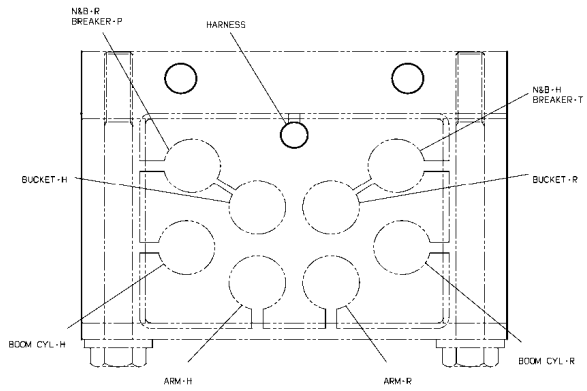 

DETAIL OF HOSE CLAMP

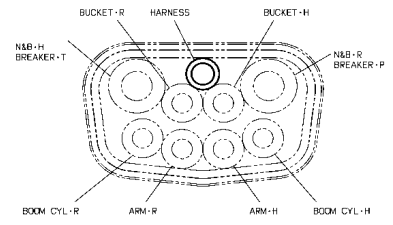 

DETAIL OF HOSE RUBBER

 
 


01-079

p1

10/201  
8

HARNESS ASSY, CLEANER AIR




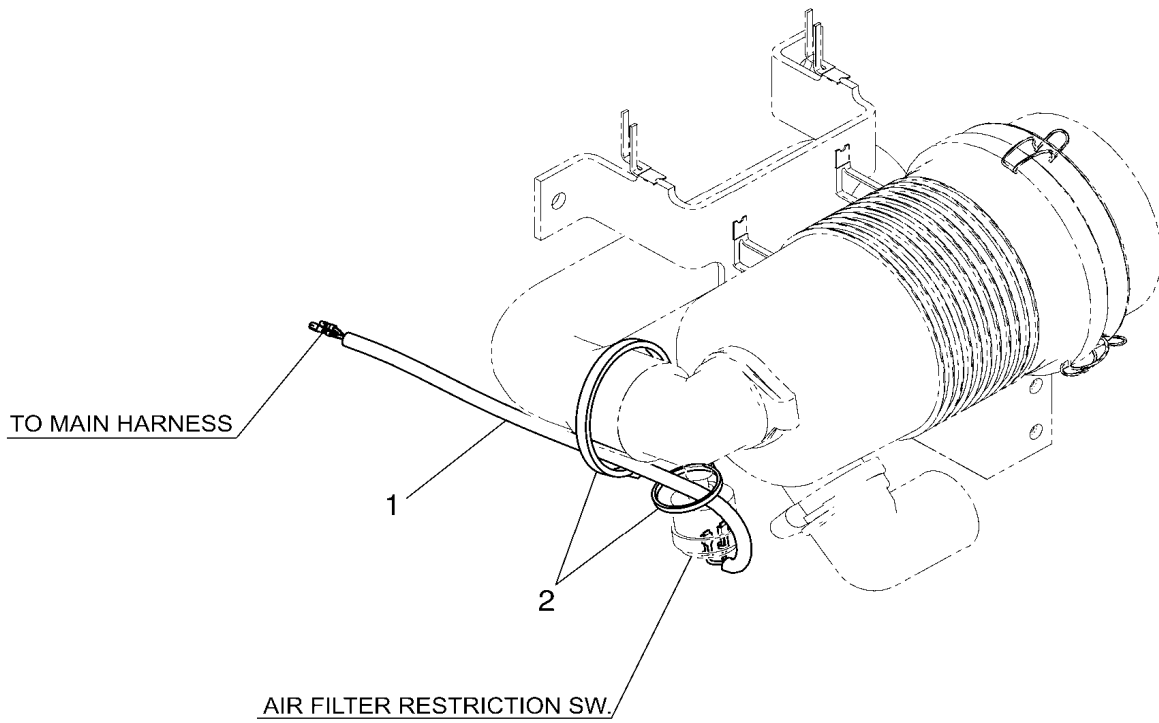


01-083



p1

10/2018

    HARNESS ASSY, ENGINE

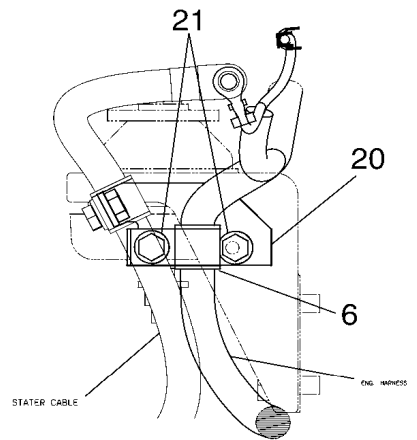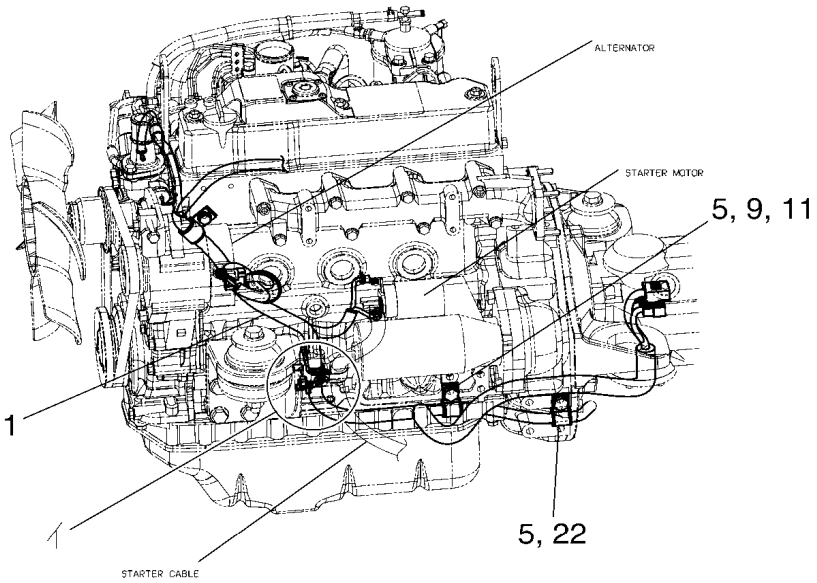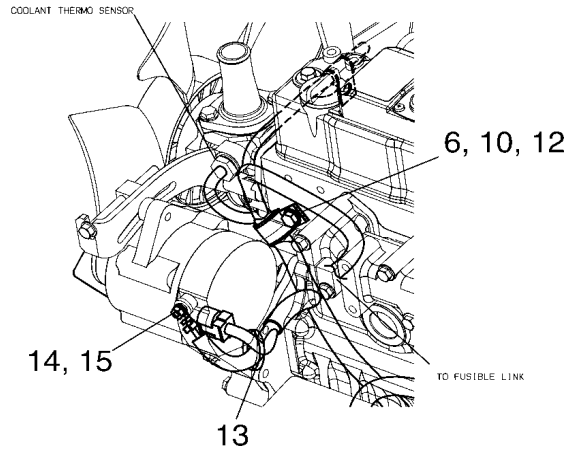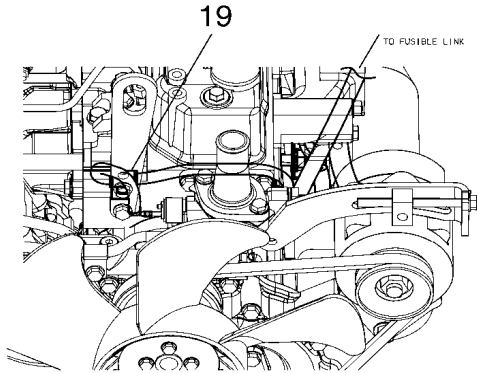

DETAIL OF 1

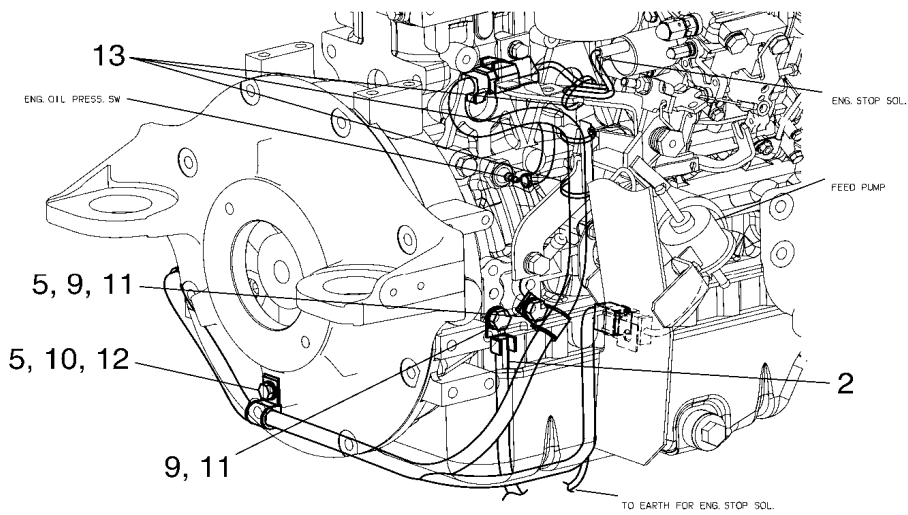  


08-015

p2

10/201  
8

 STARTING MOTOR


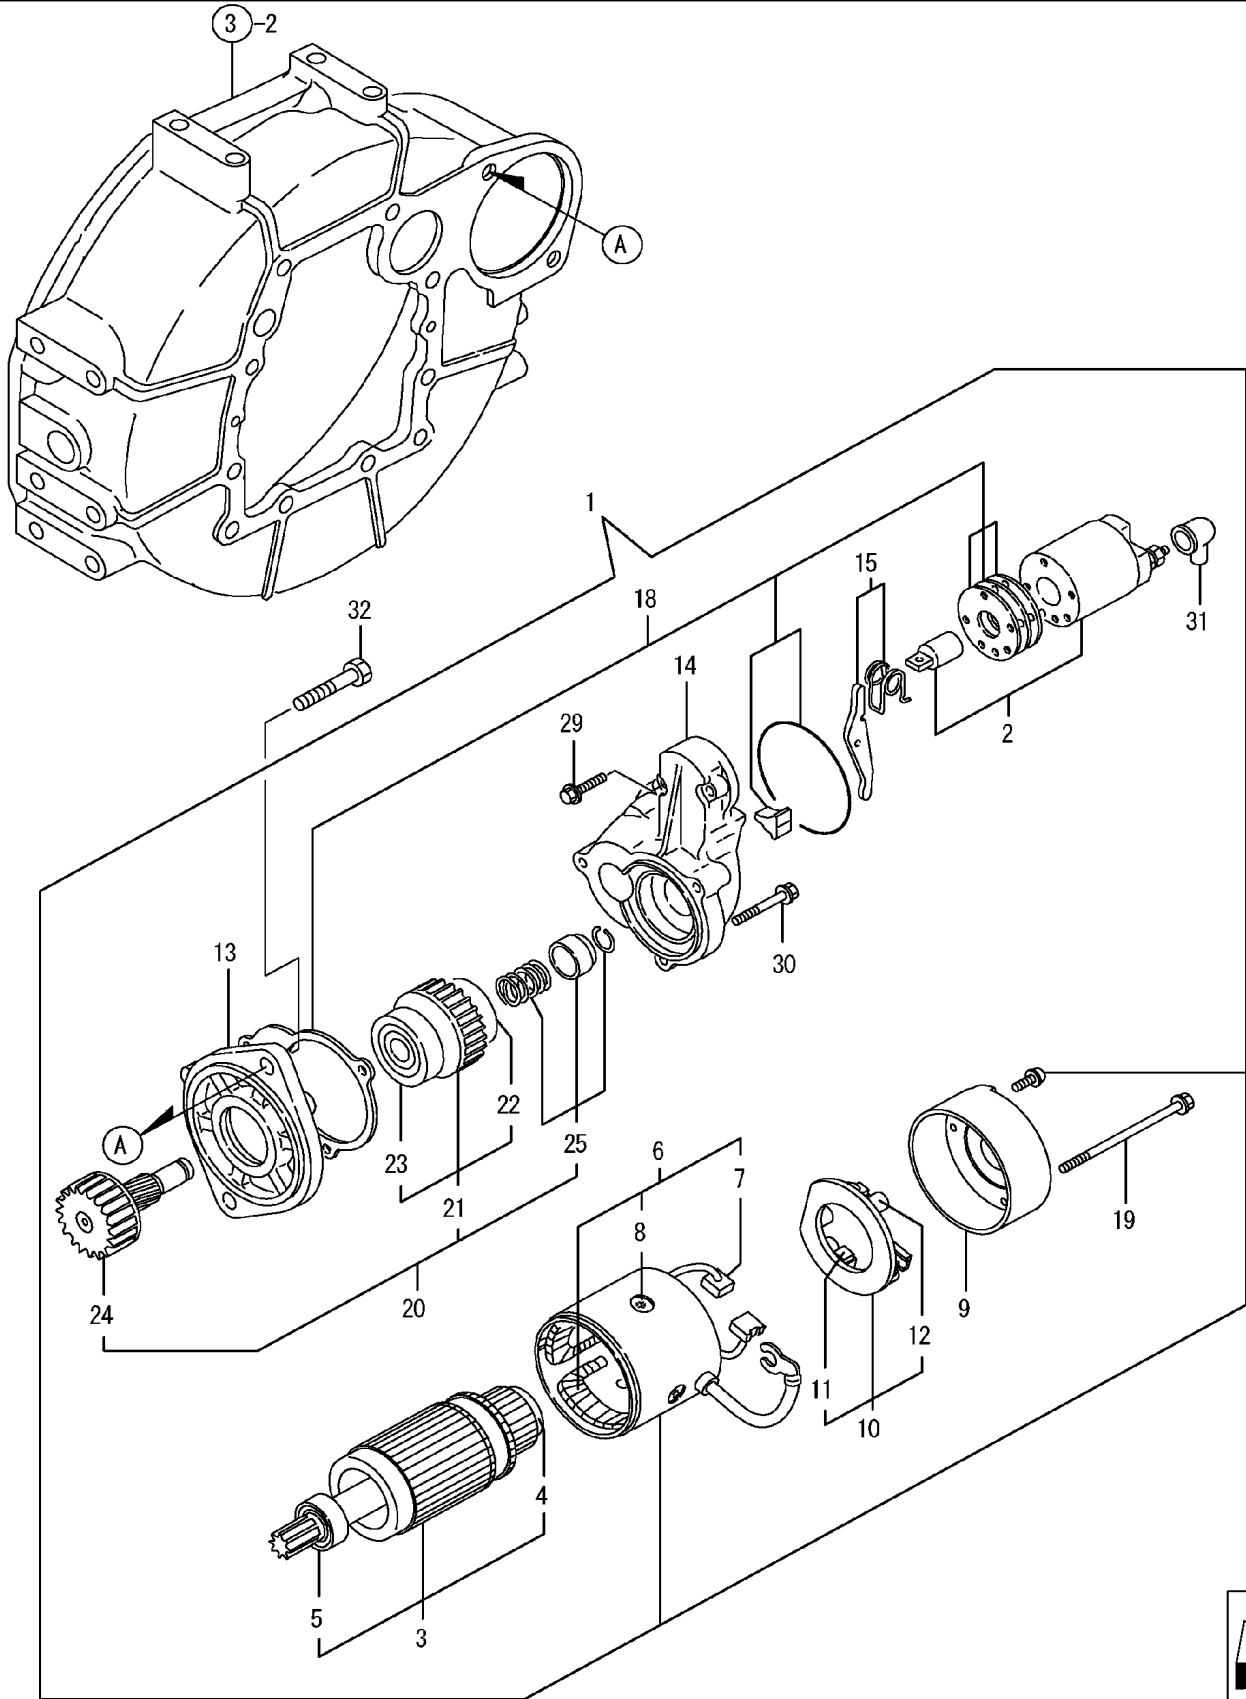


03-002

p1

10/201  
8

  BOOM GROUP


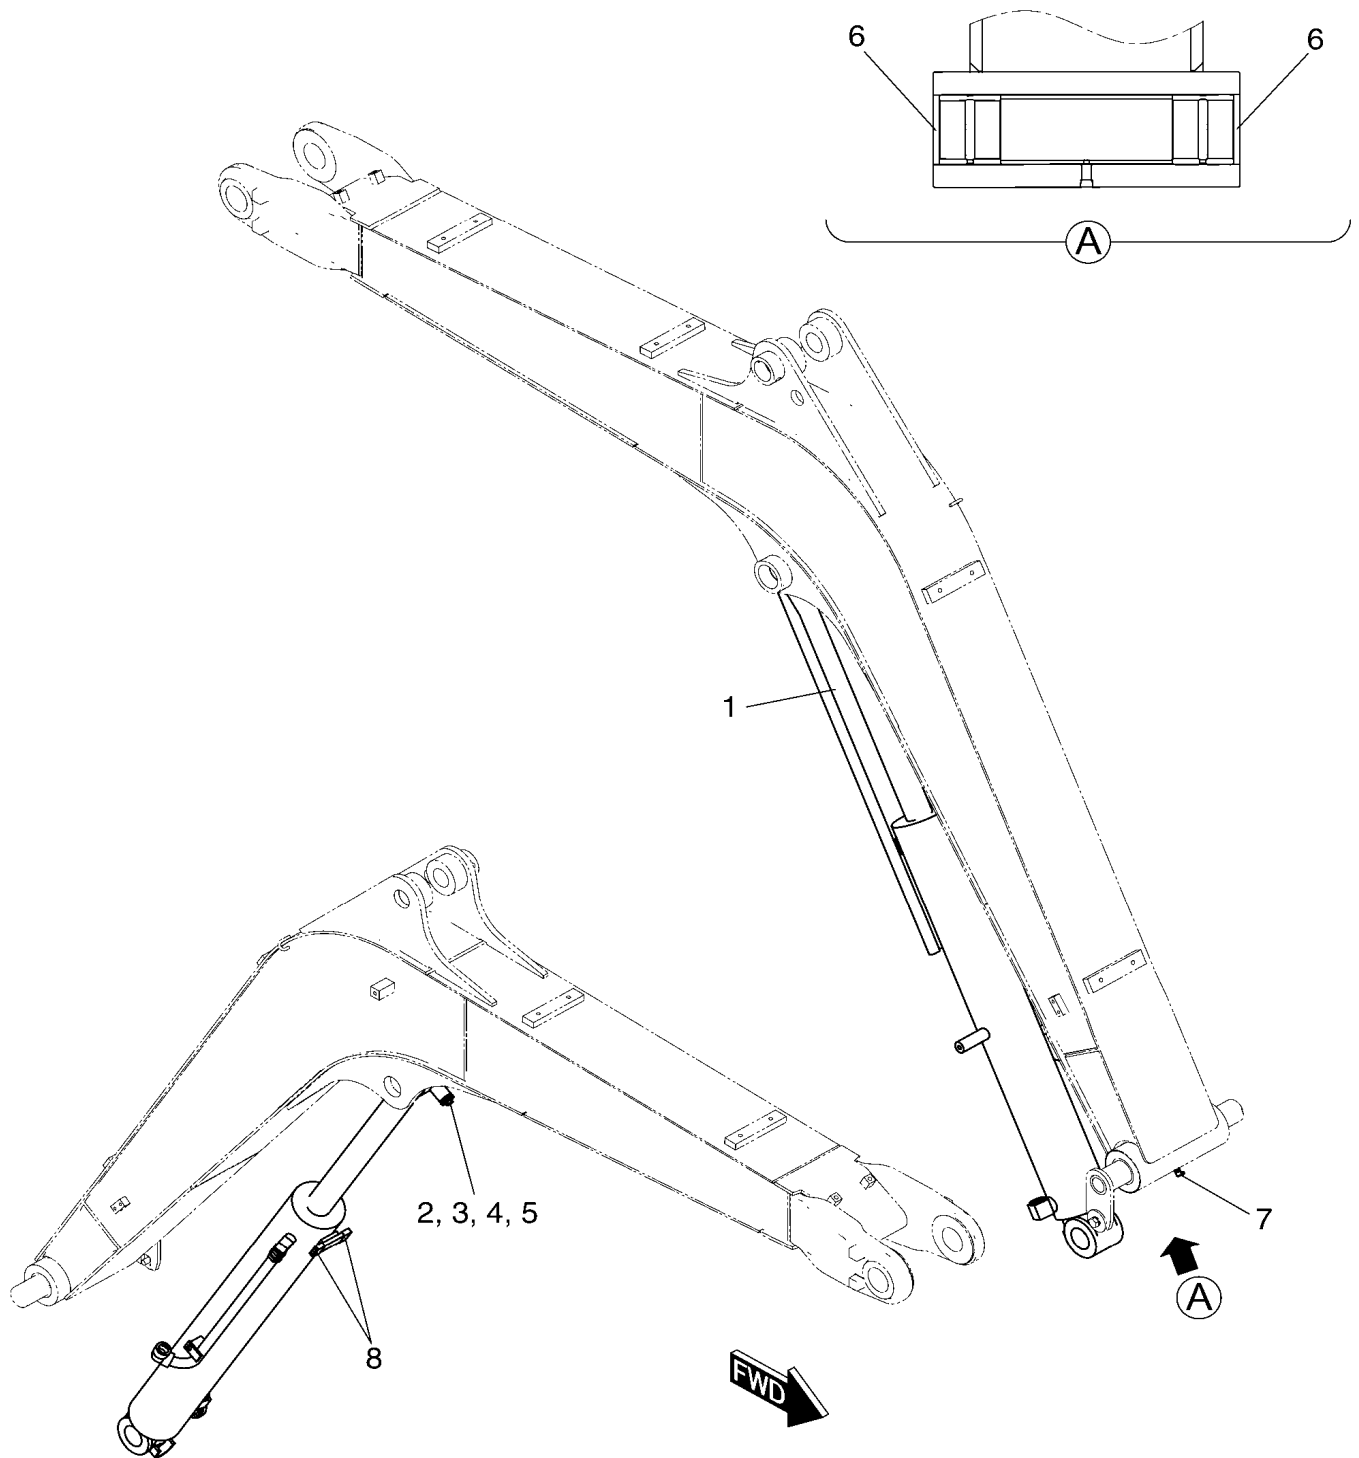


03-016

p1

10/201  
8

  CAP ASSY


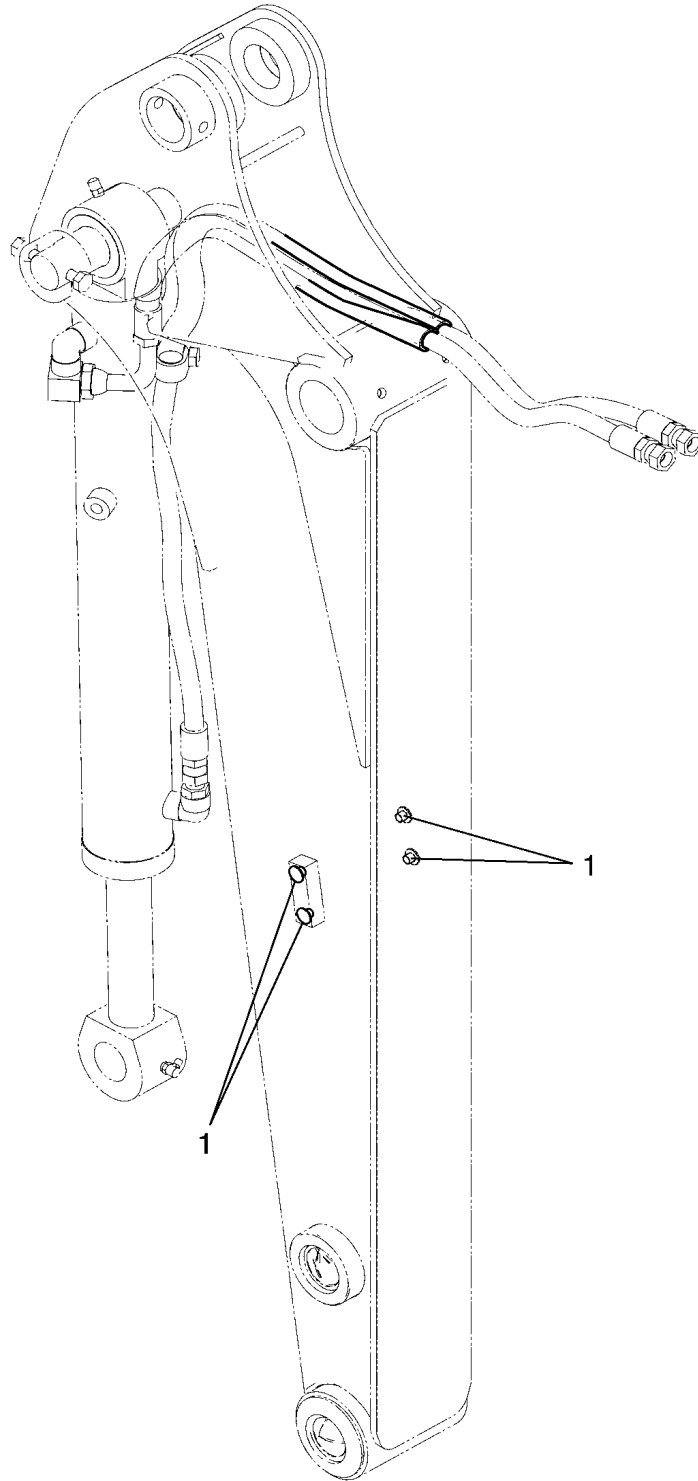


03-023

p1

10/201  
8

  BUCKET ASSY, 550W

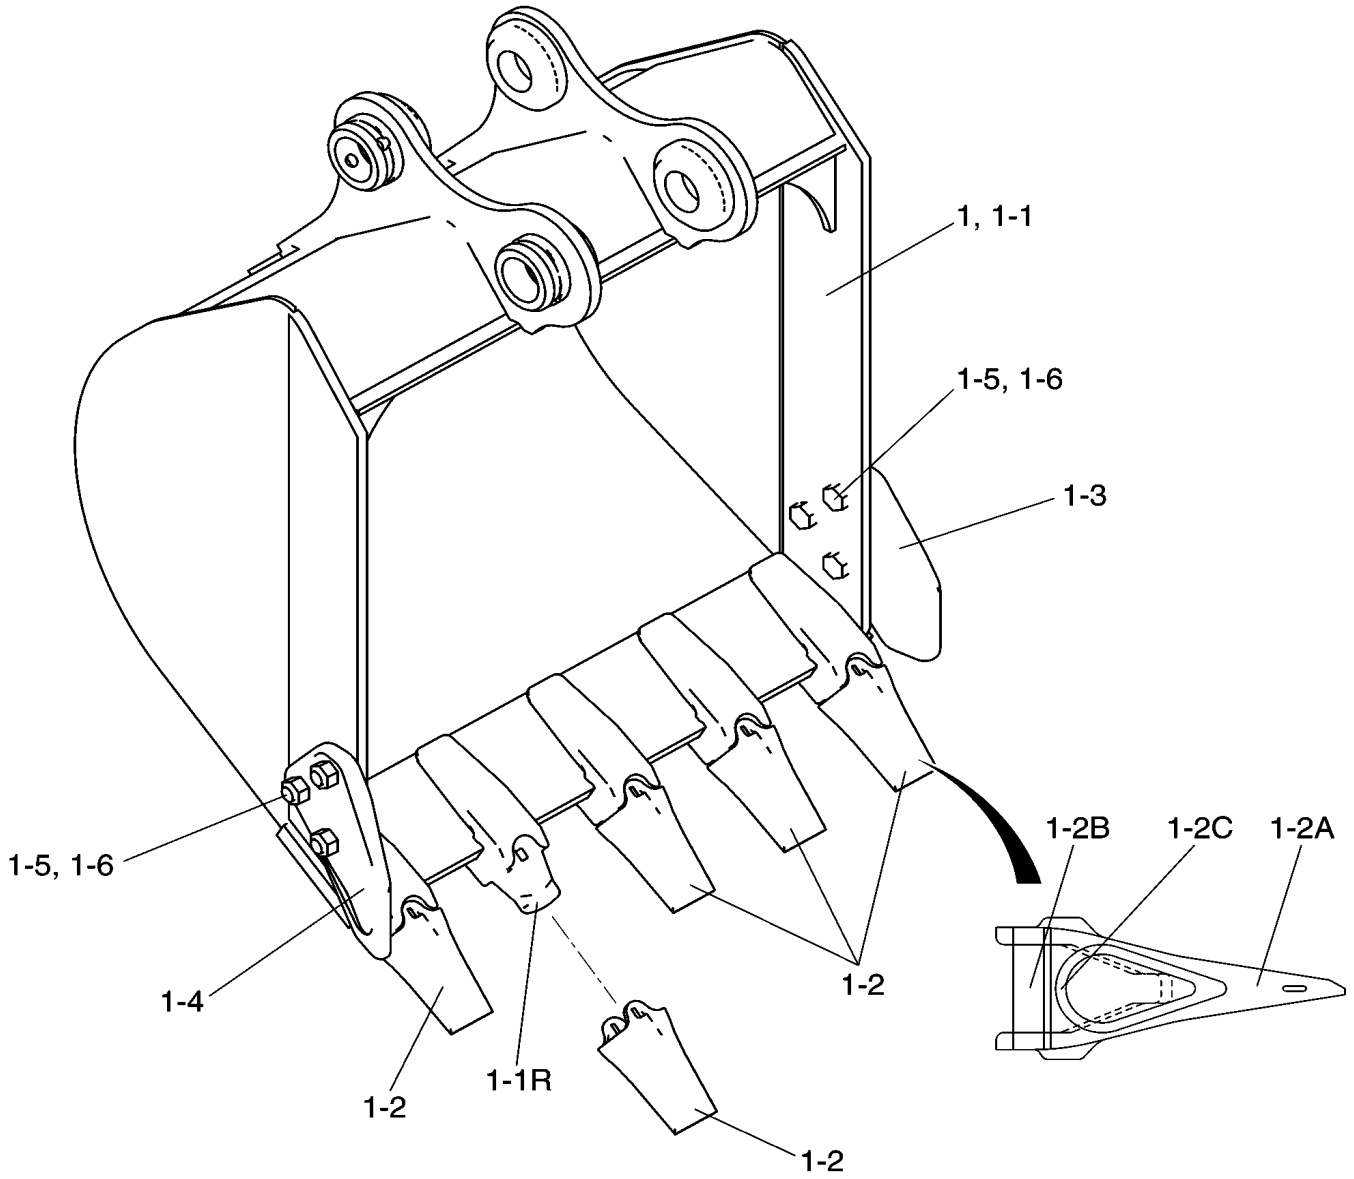


84.100.00

p1

10/201  
8

 BUCKET, ASSY (CNH)

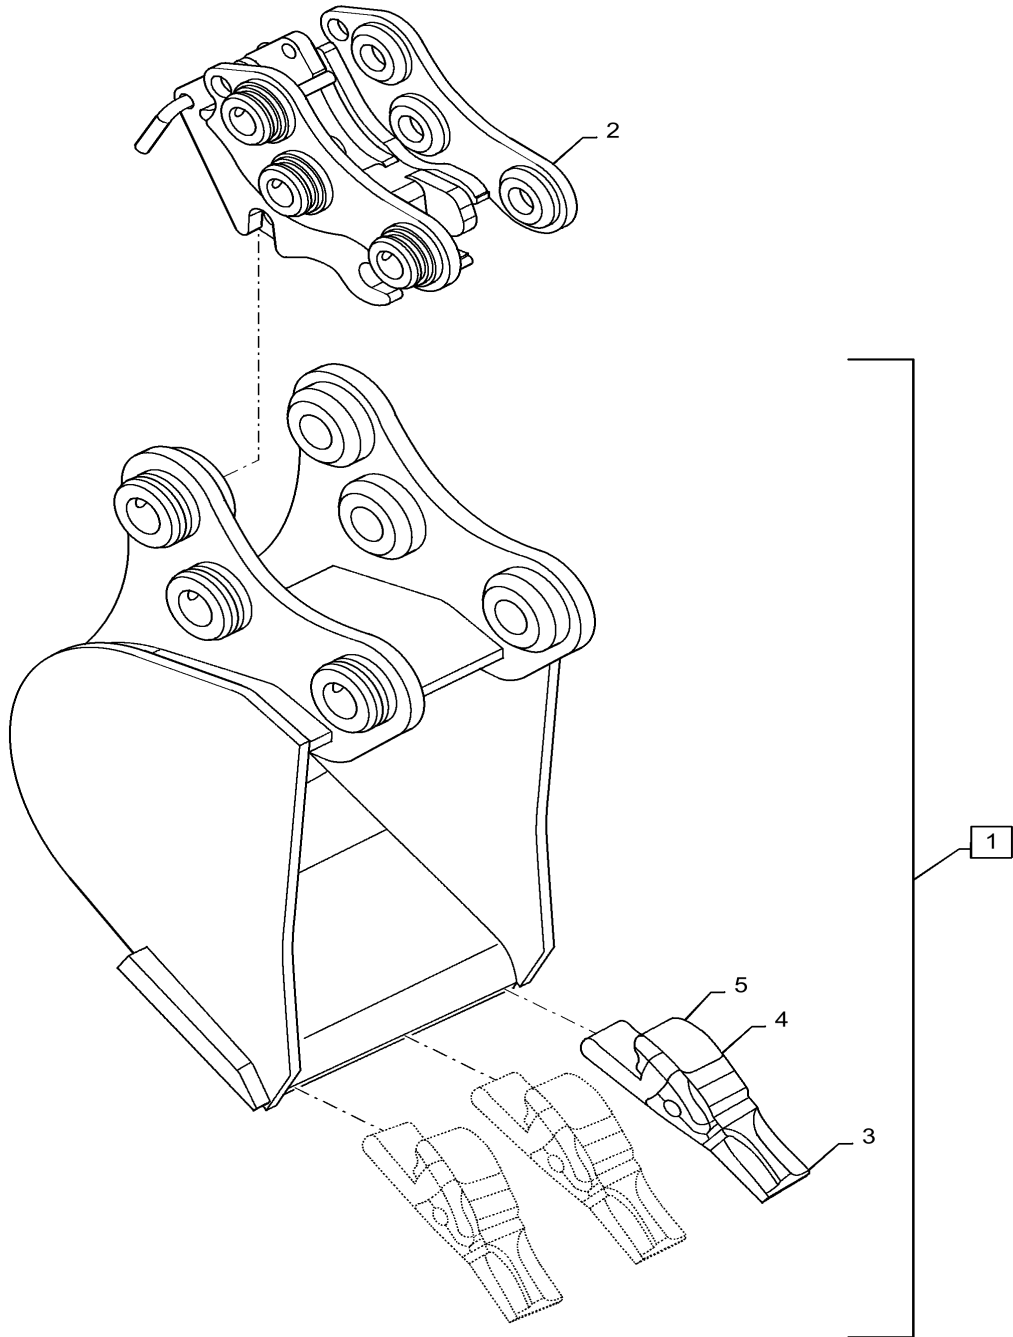




Refer to Dealer Portal, Parts, Production Information, Construction, Case Attachments, Buckets, Direct Ship Tab

02-017



p1

10/201  
8

   
DOZER ASSY, ANGLE DOZER

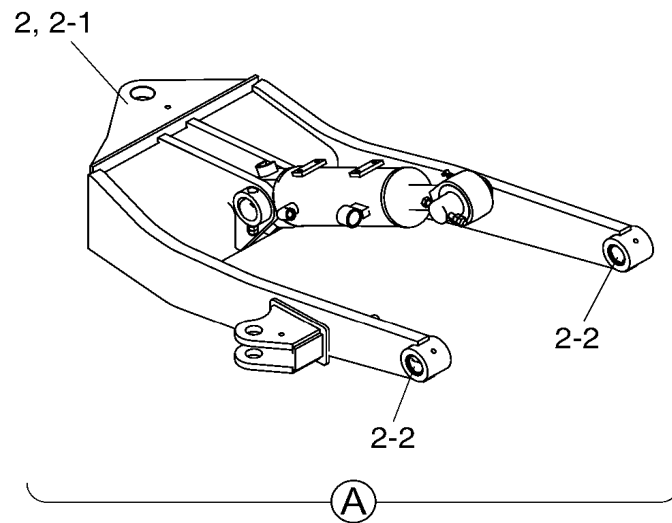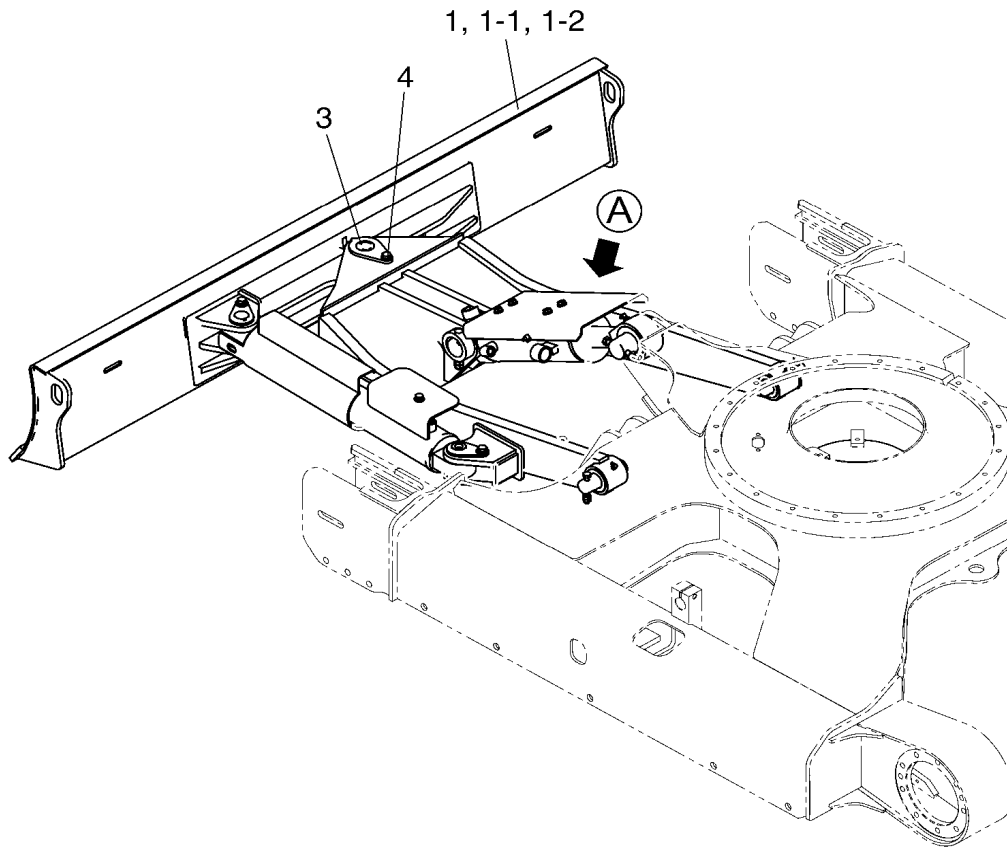

TOOL ASSY

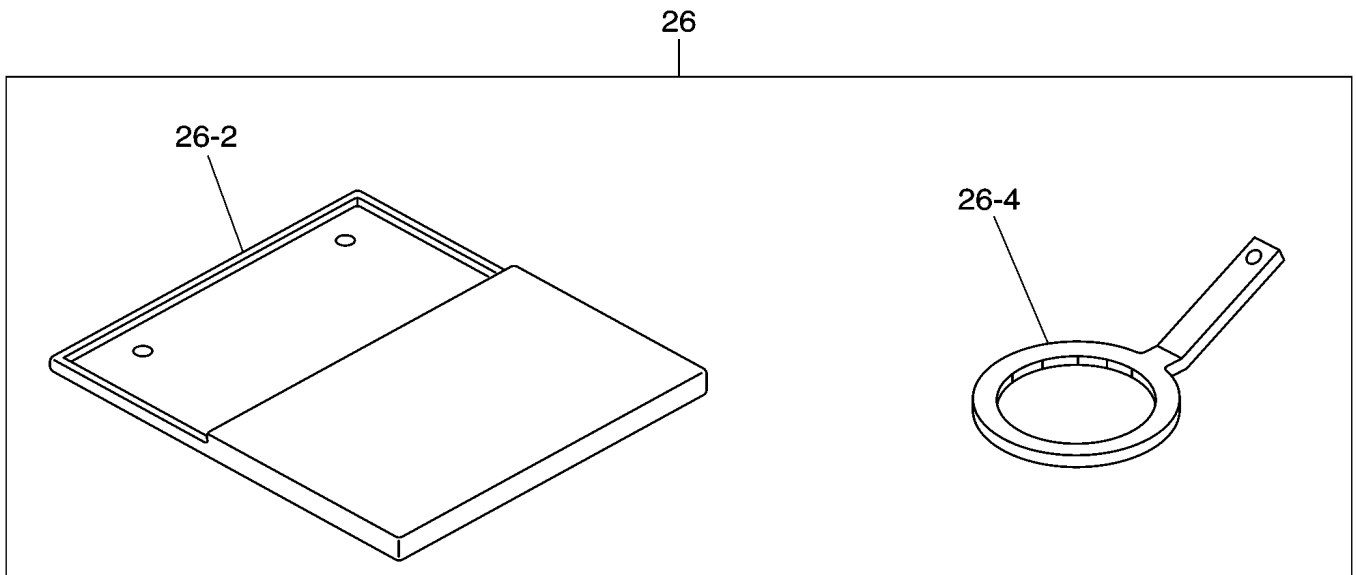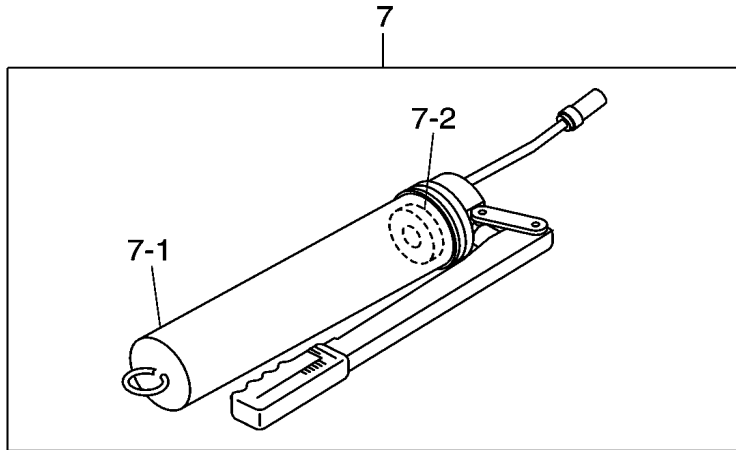  

CONTROLS, OPERATORS

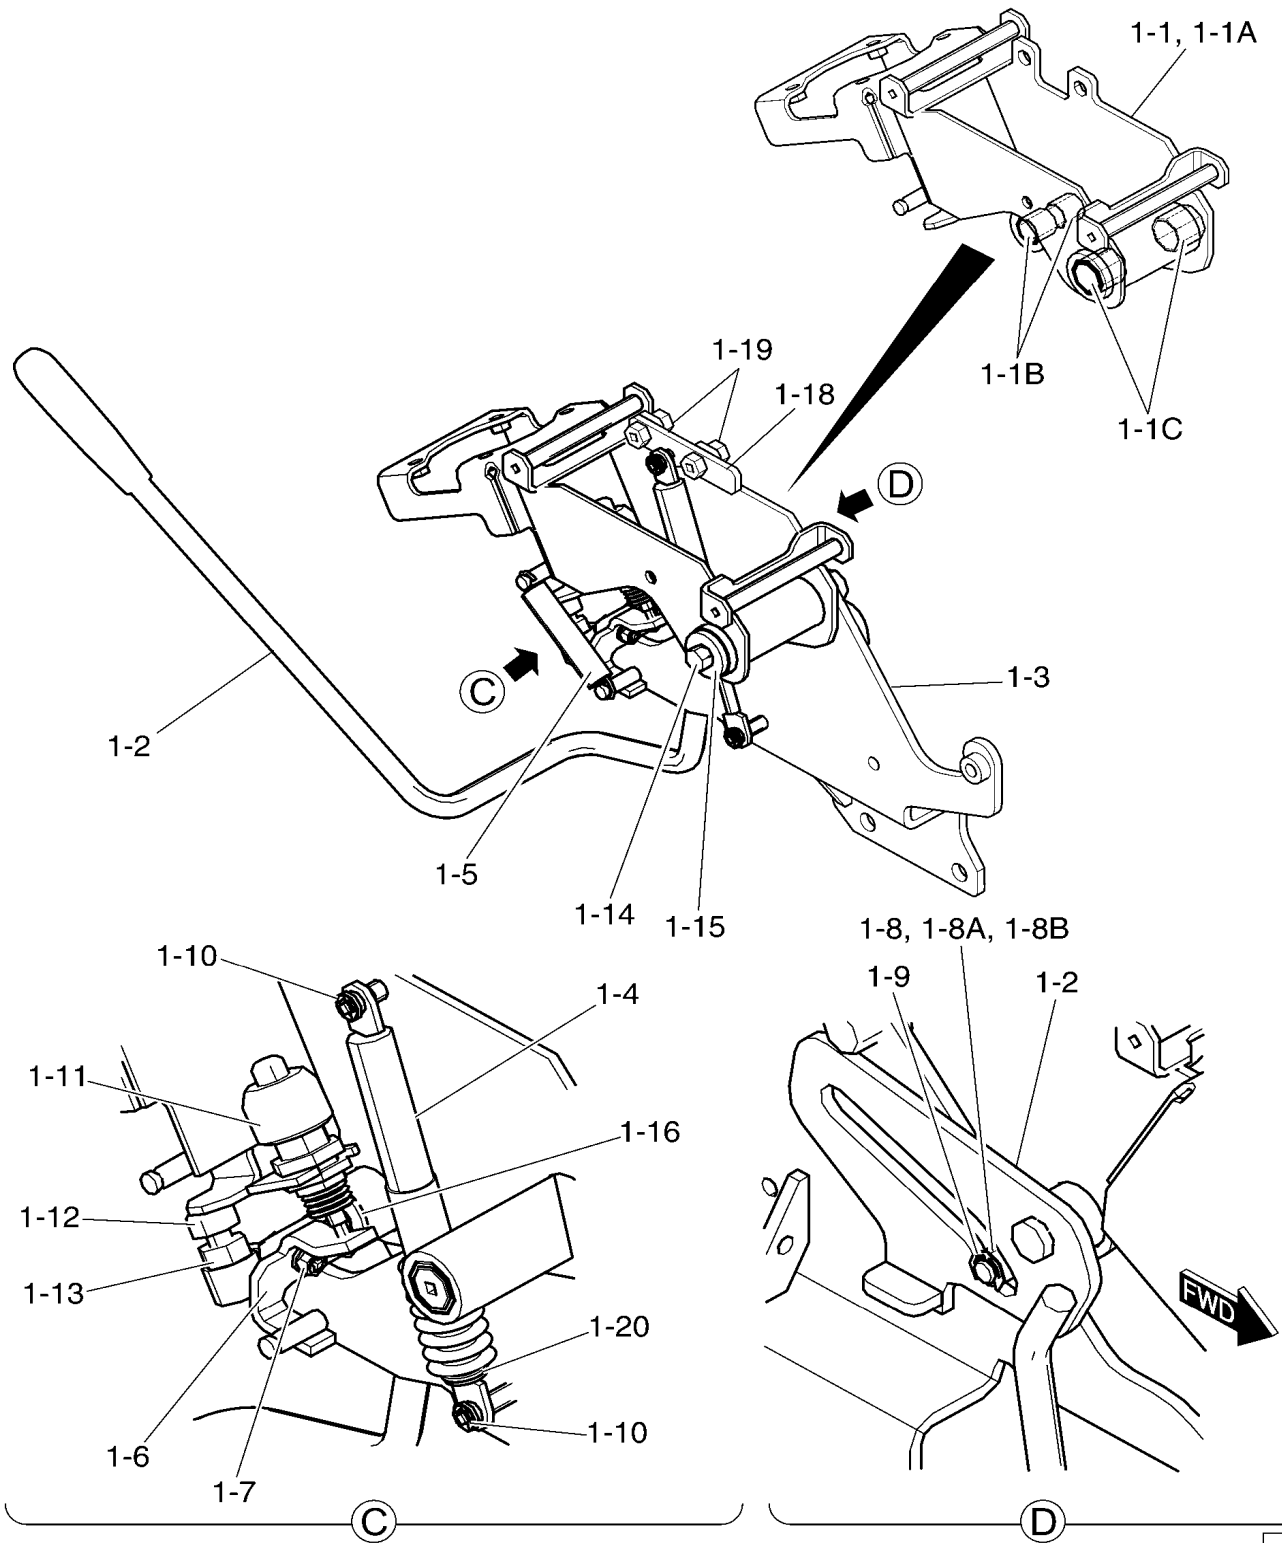 


01-037

01




p2

10/201  
8


 
CONTROLS, OPERATORS, CANOPY

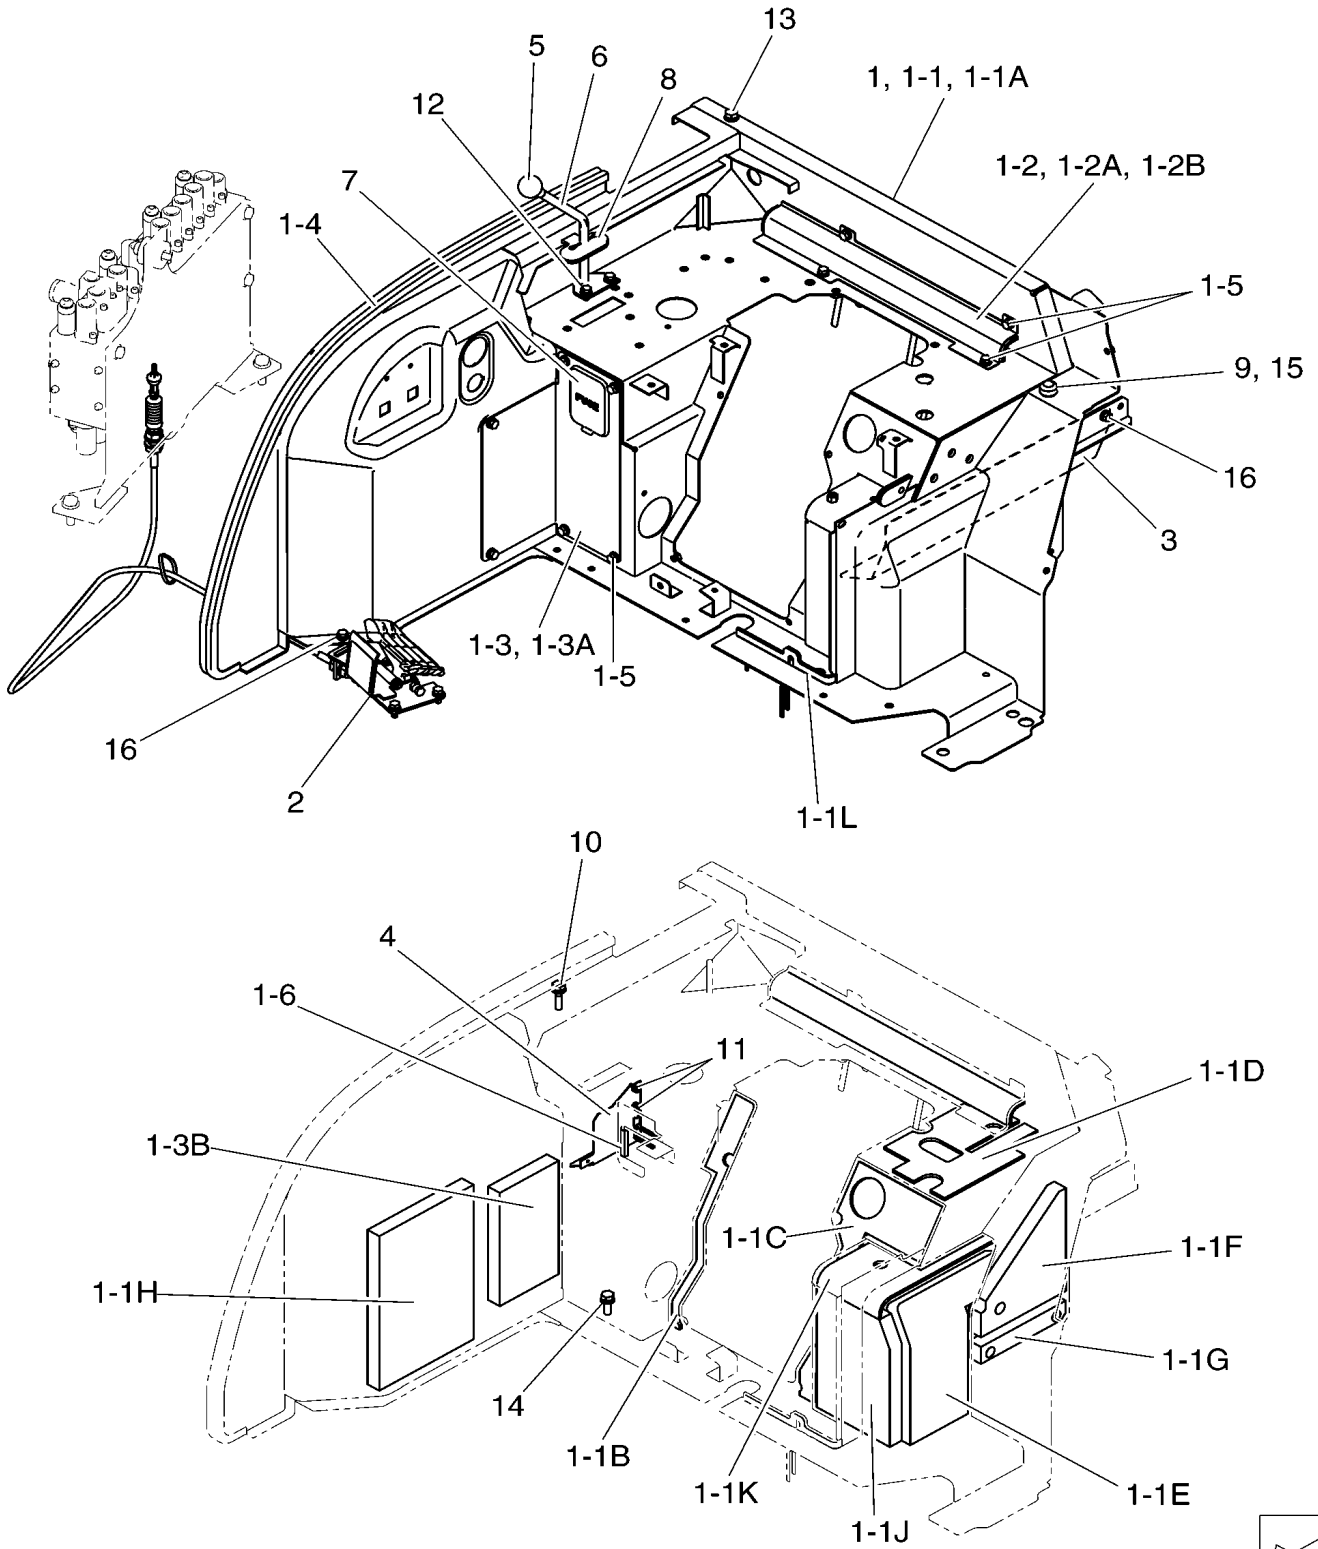


CONTROLS, OPERATORS, ANGLE DOZER

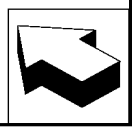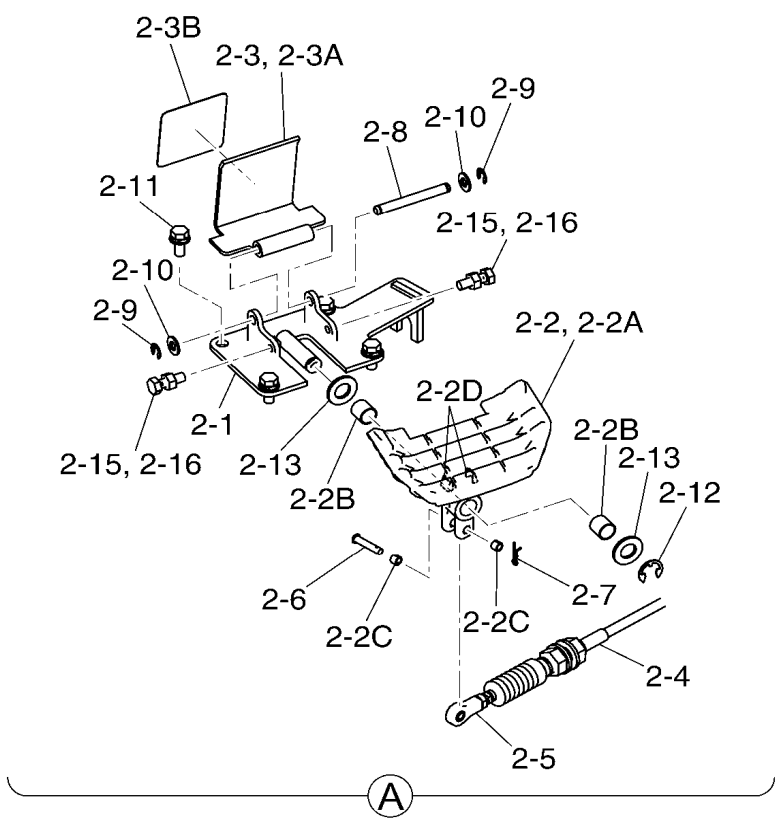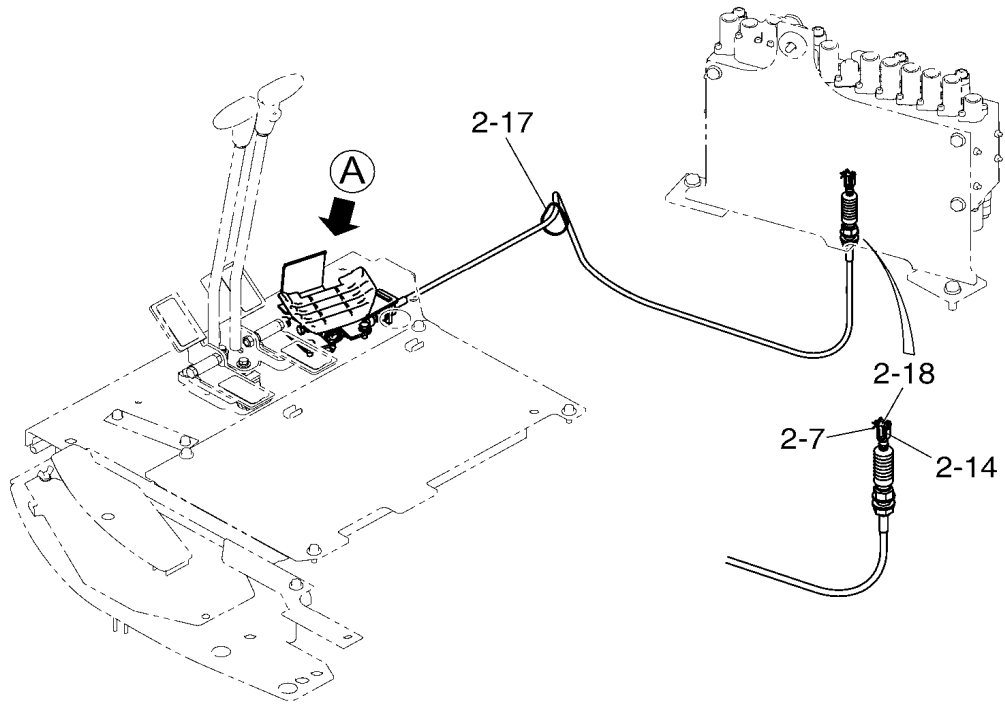   



LEVER ASSY, CONTROL

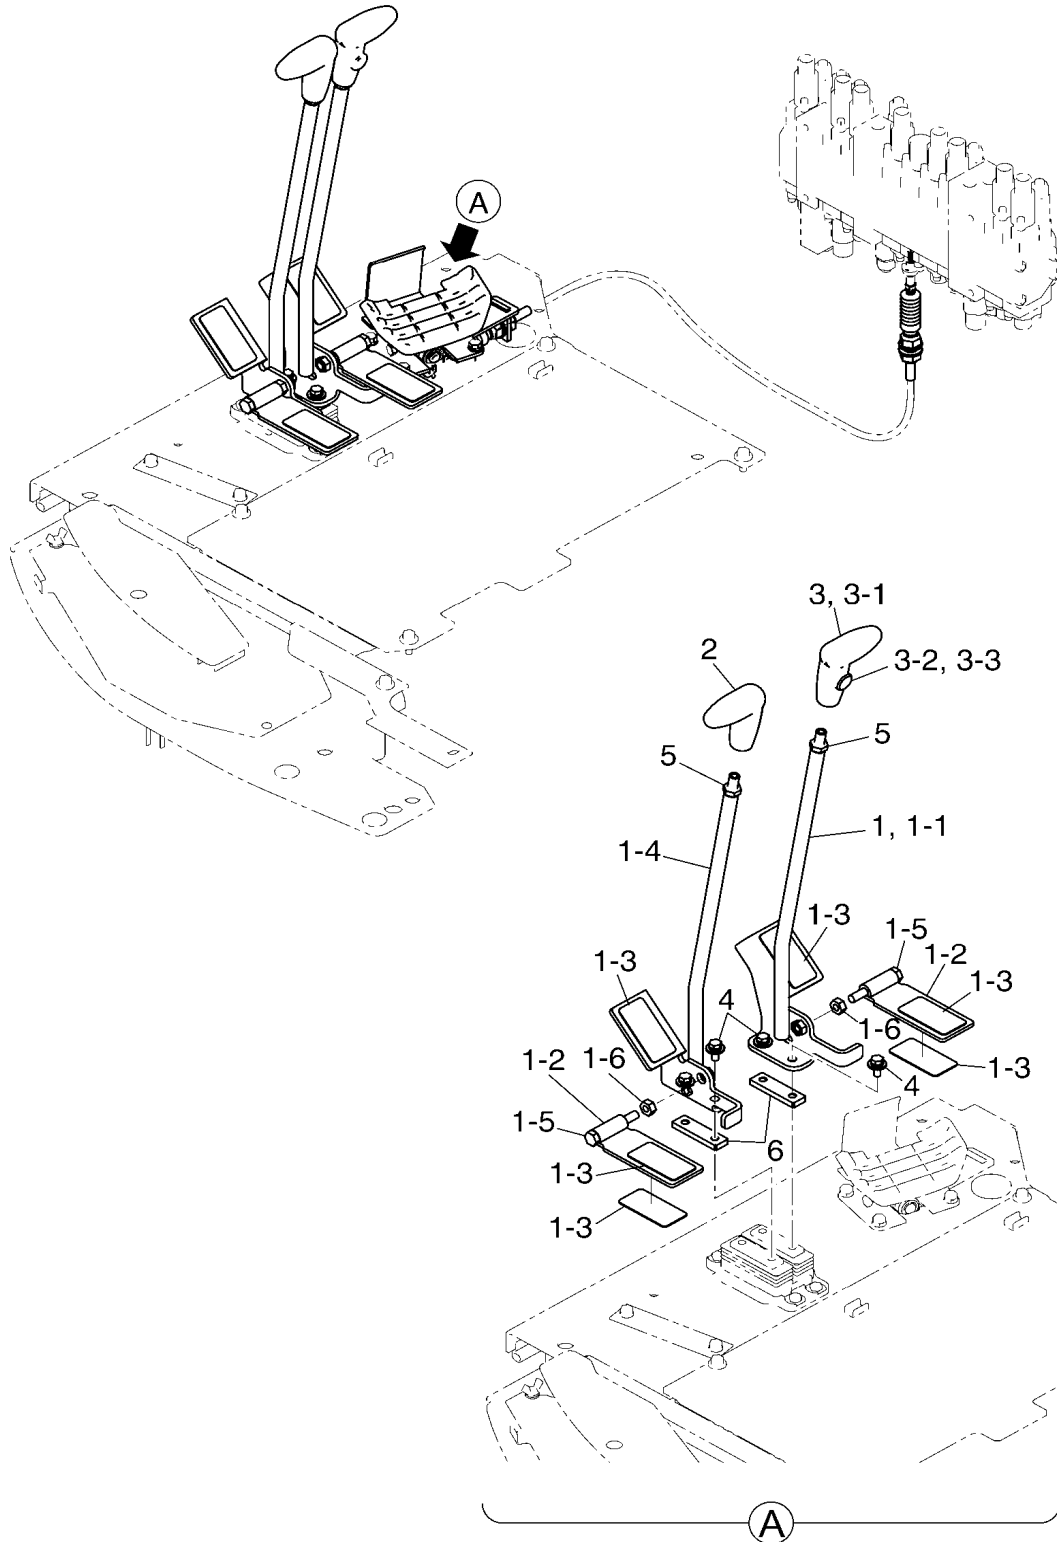  



CAB INSTAL

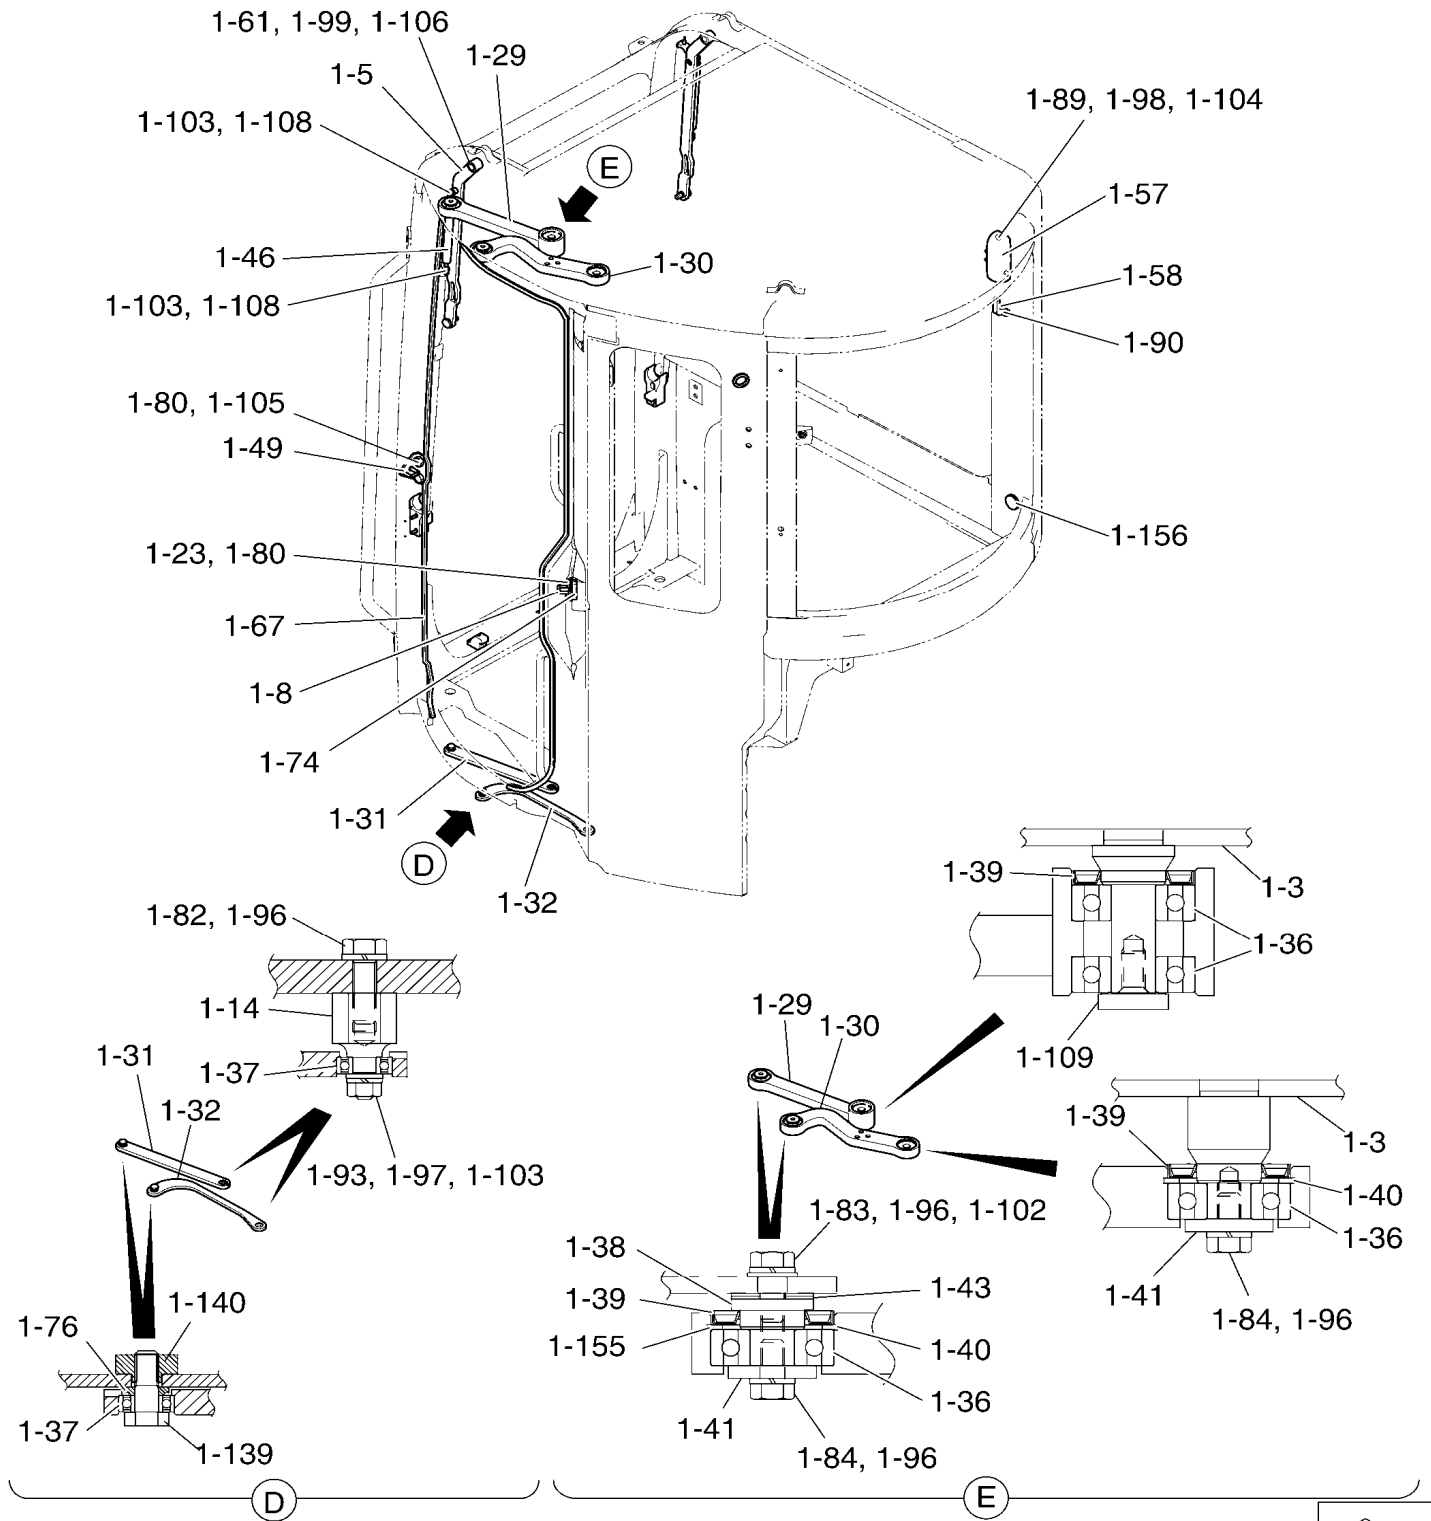 


CAB INSTAL

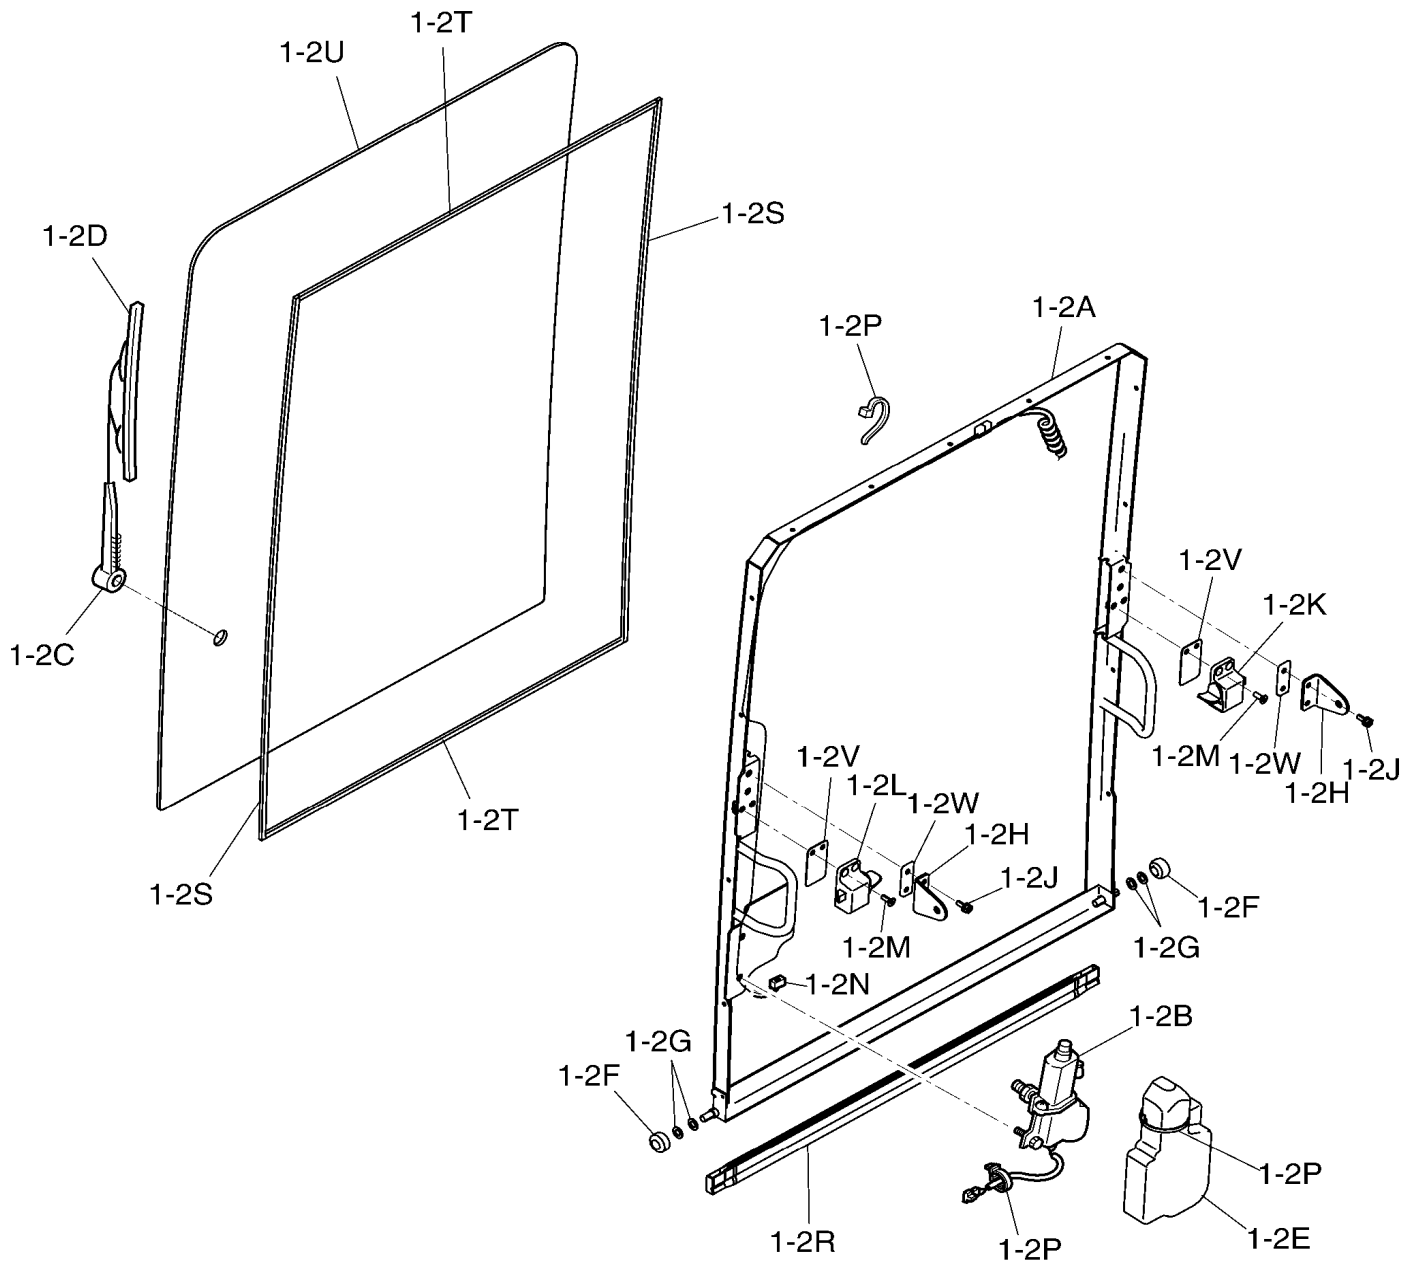  



CAB INSTAL, HEAD GUARD, COOLER

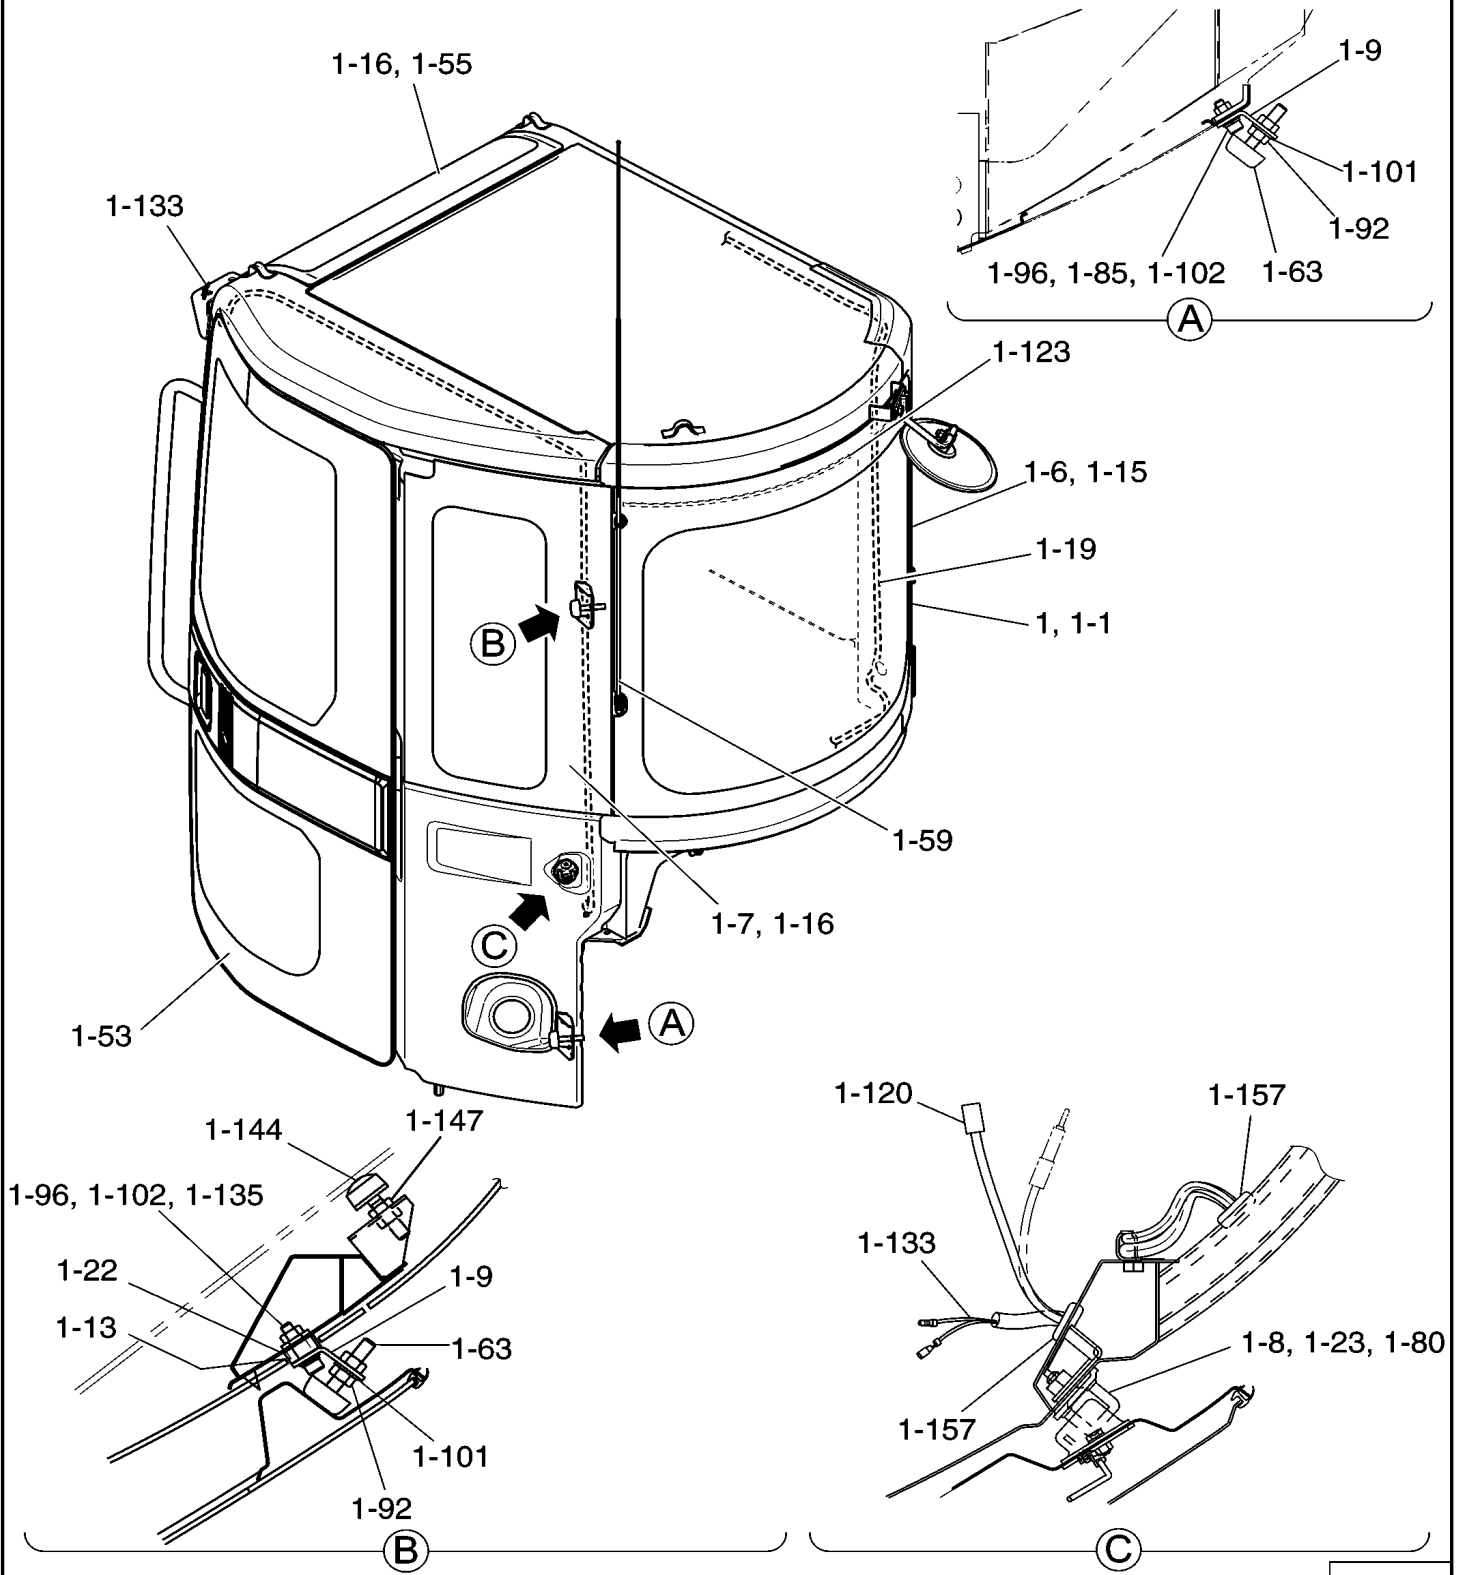  

CAB INSTAL, HEAD GUARD, COOLER

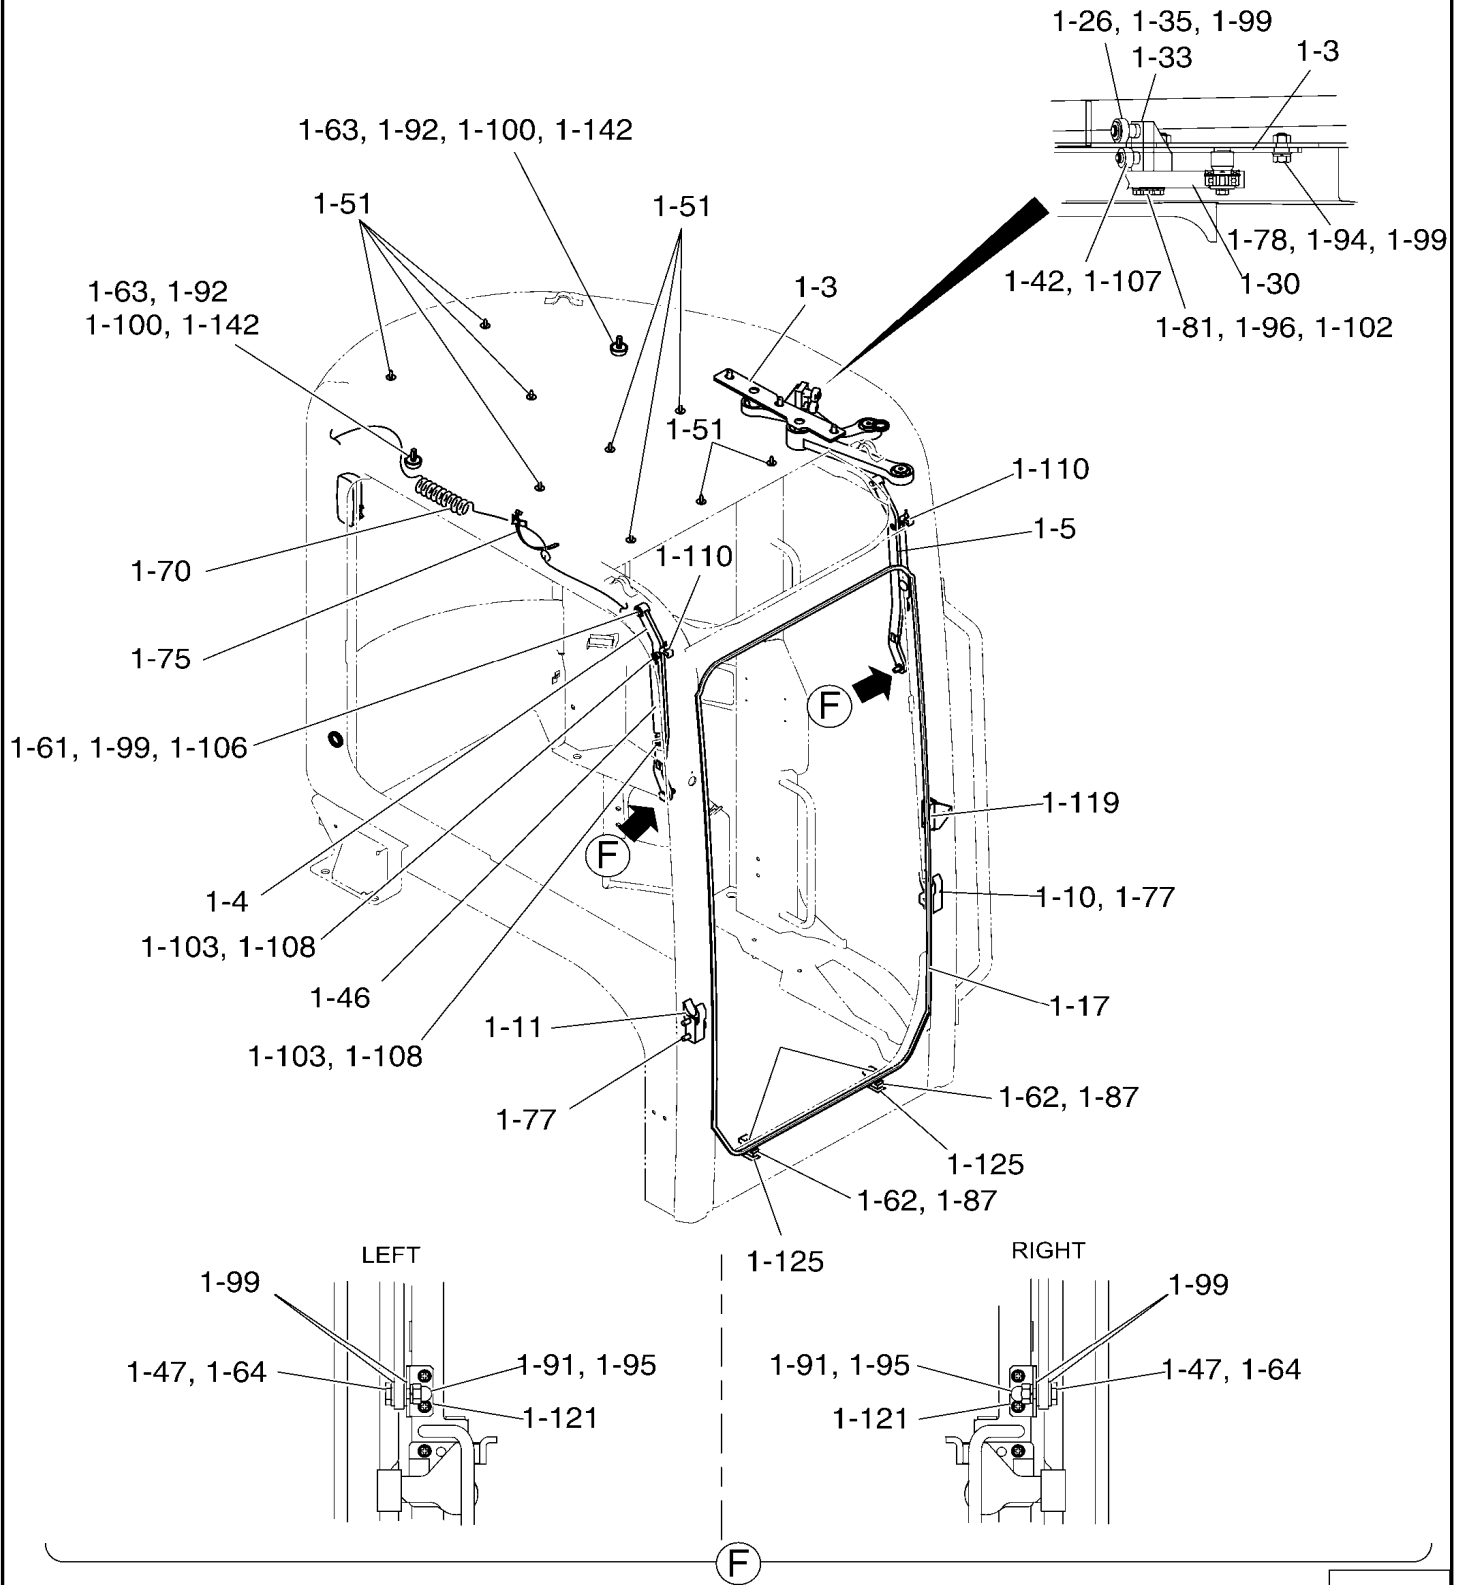 


CAB INSTAL, HEAD GUARD, COOLER

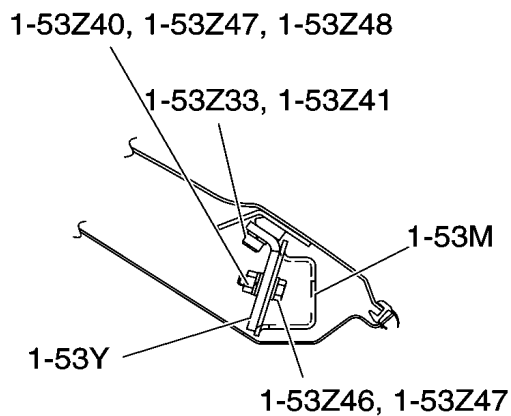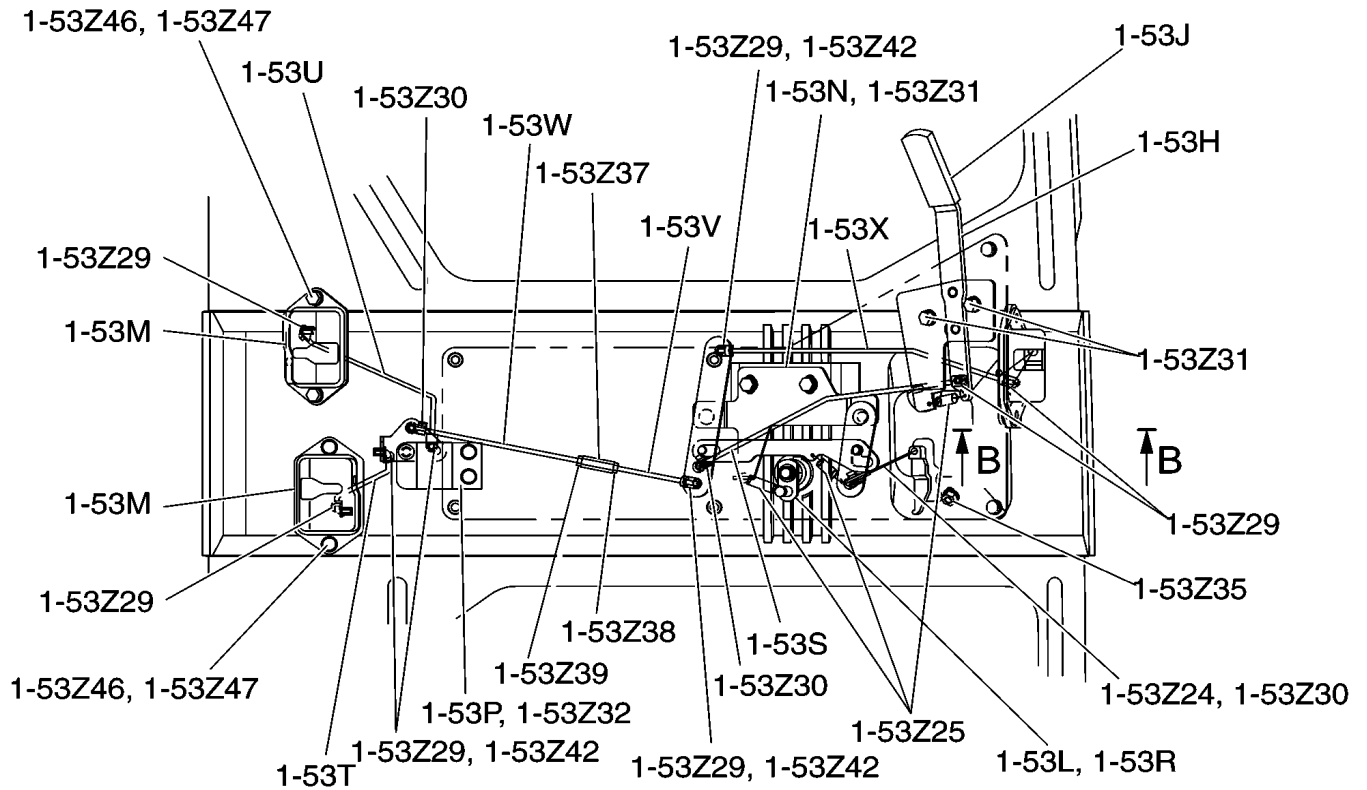  


SECTION B B

 
G



CAB INSTAL

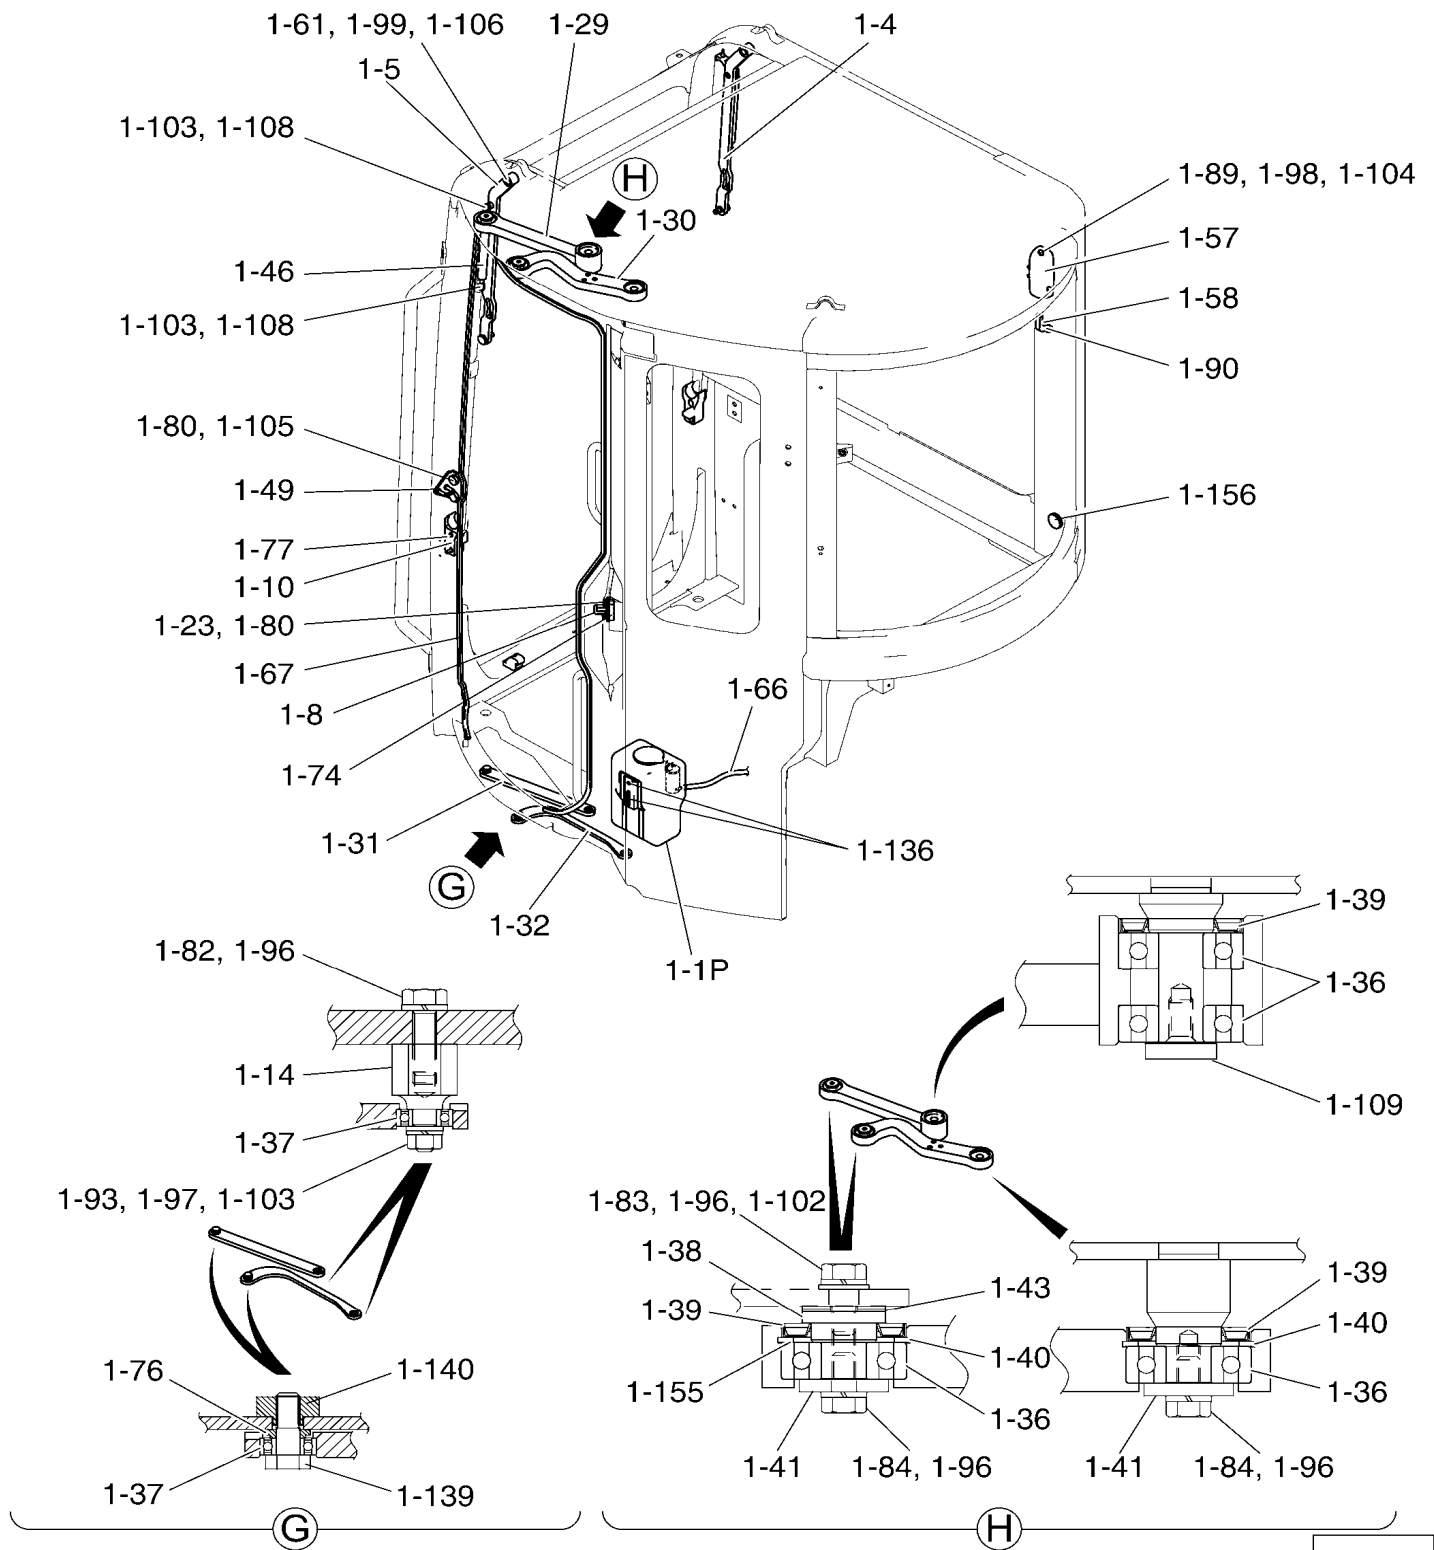 

CAB INSTAL

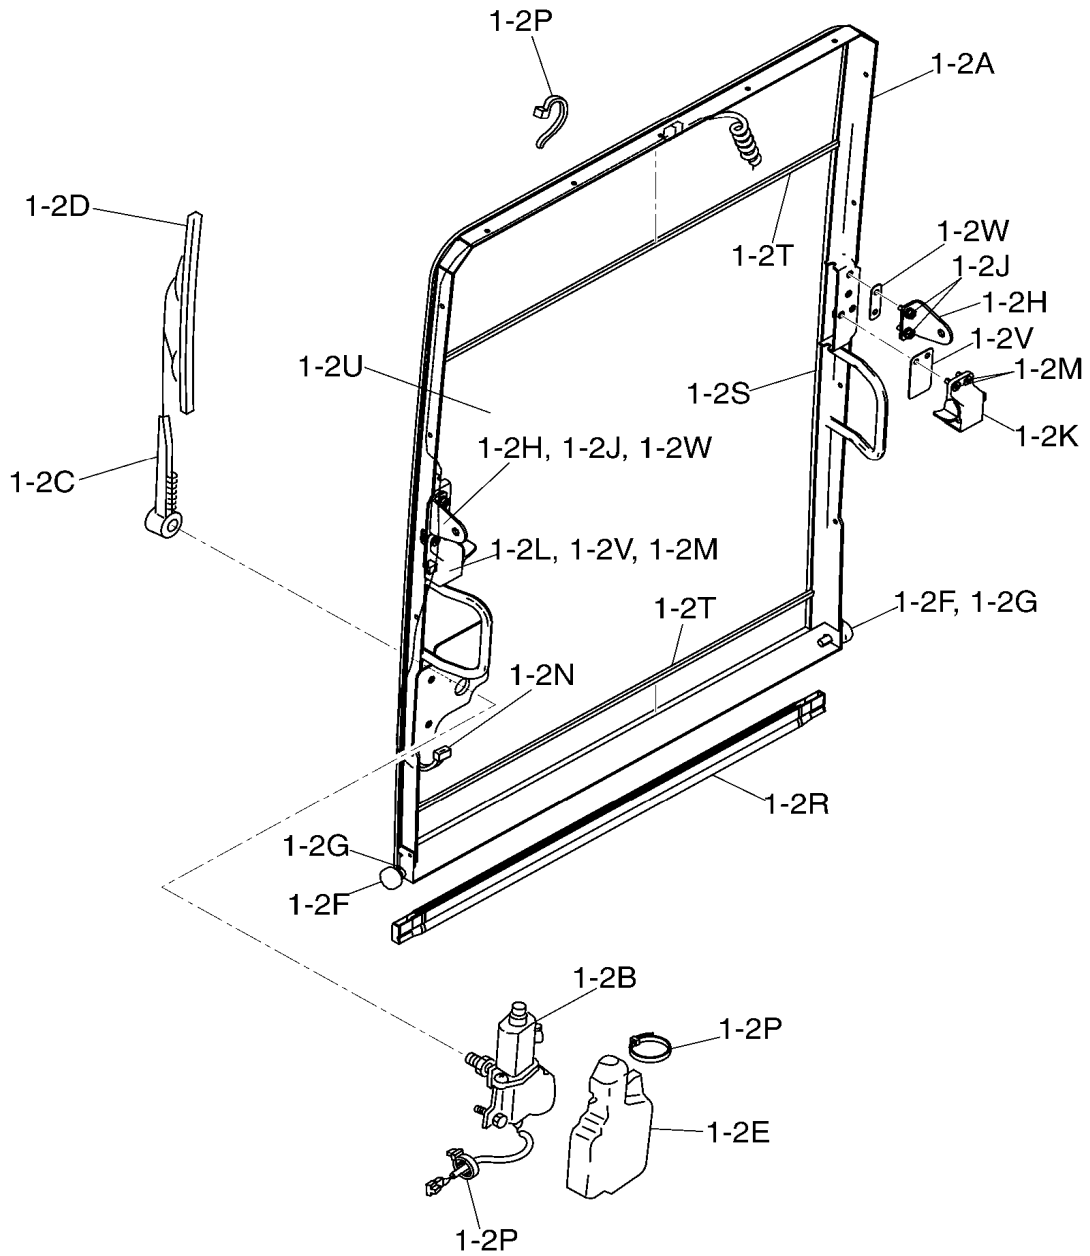 


01-059

03



p1

10/201  
8

 CAB INSTAL, WITH HEAD GUARD

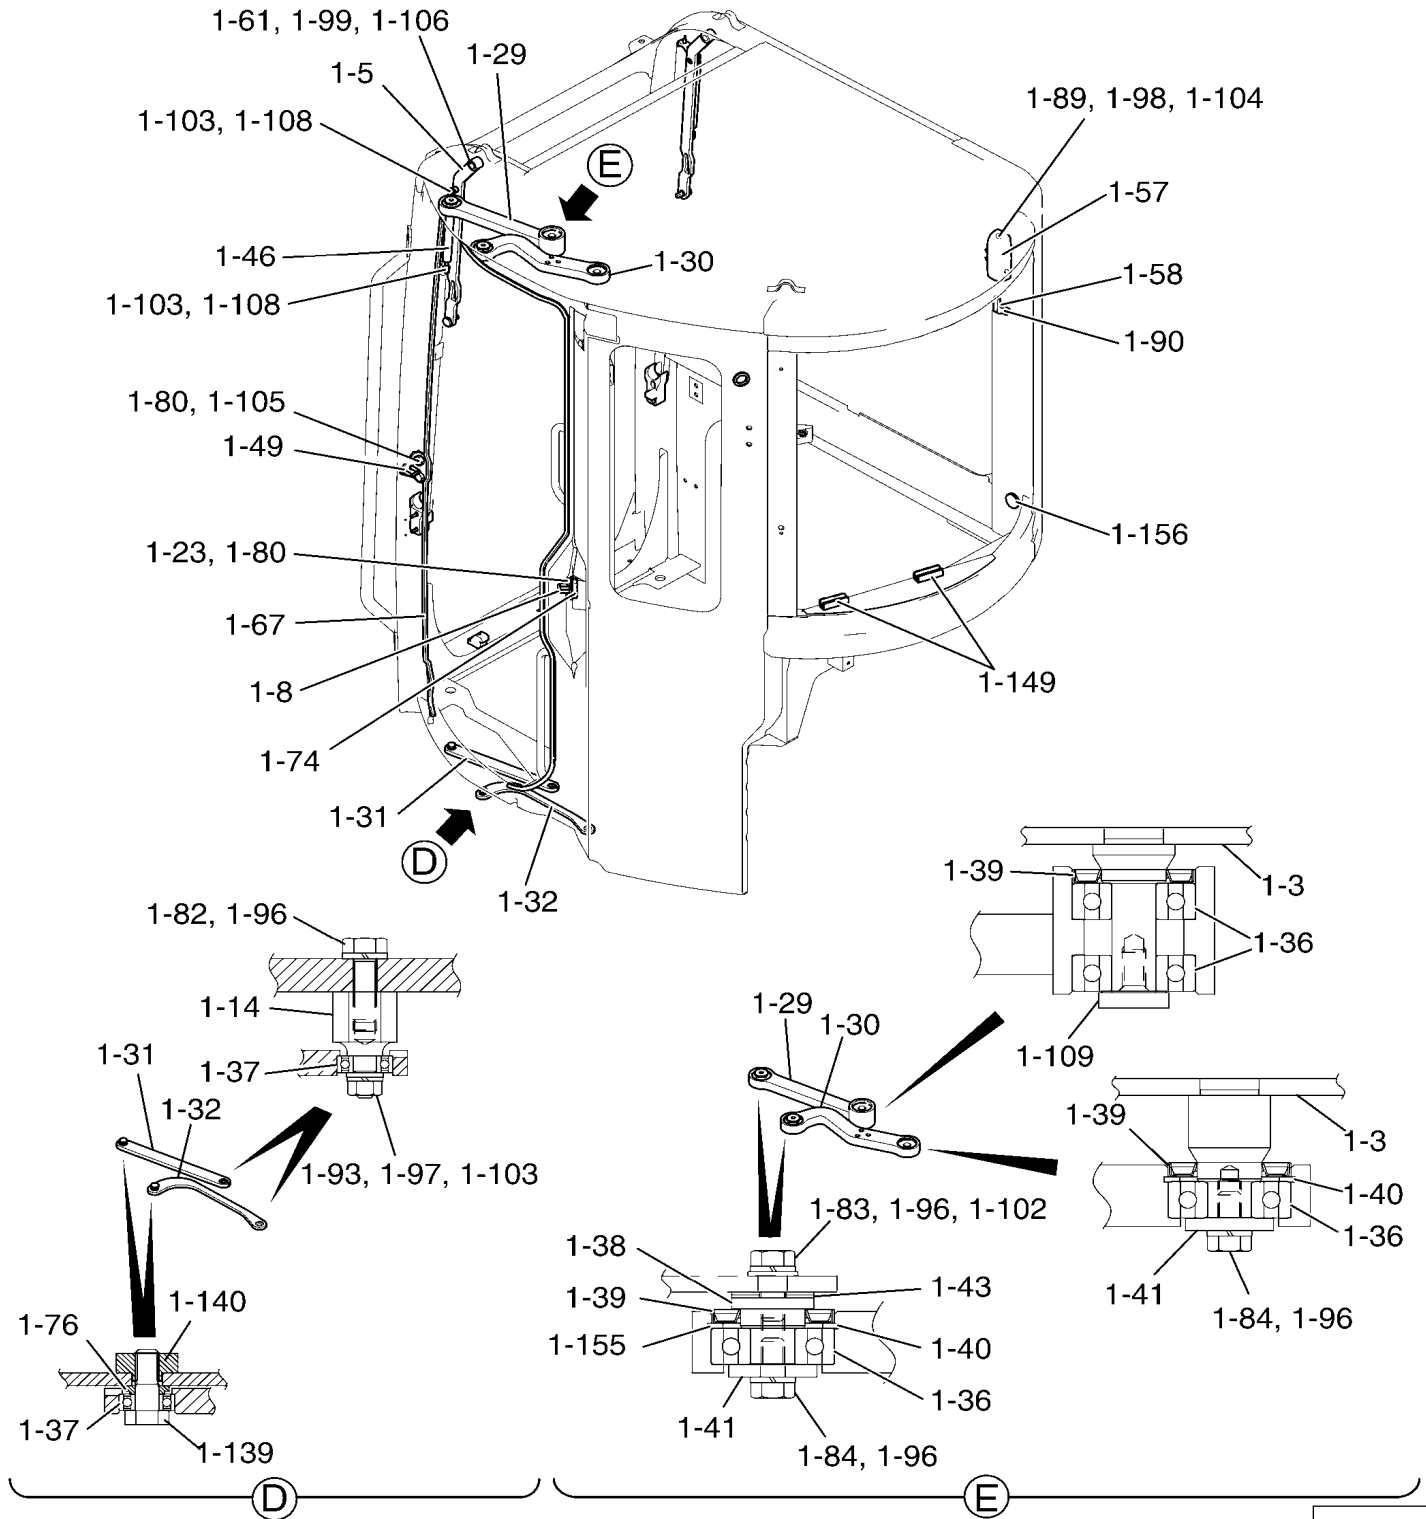

CAB INSTAL, WITH HEAD GUARD

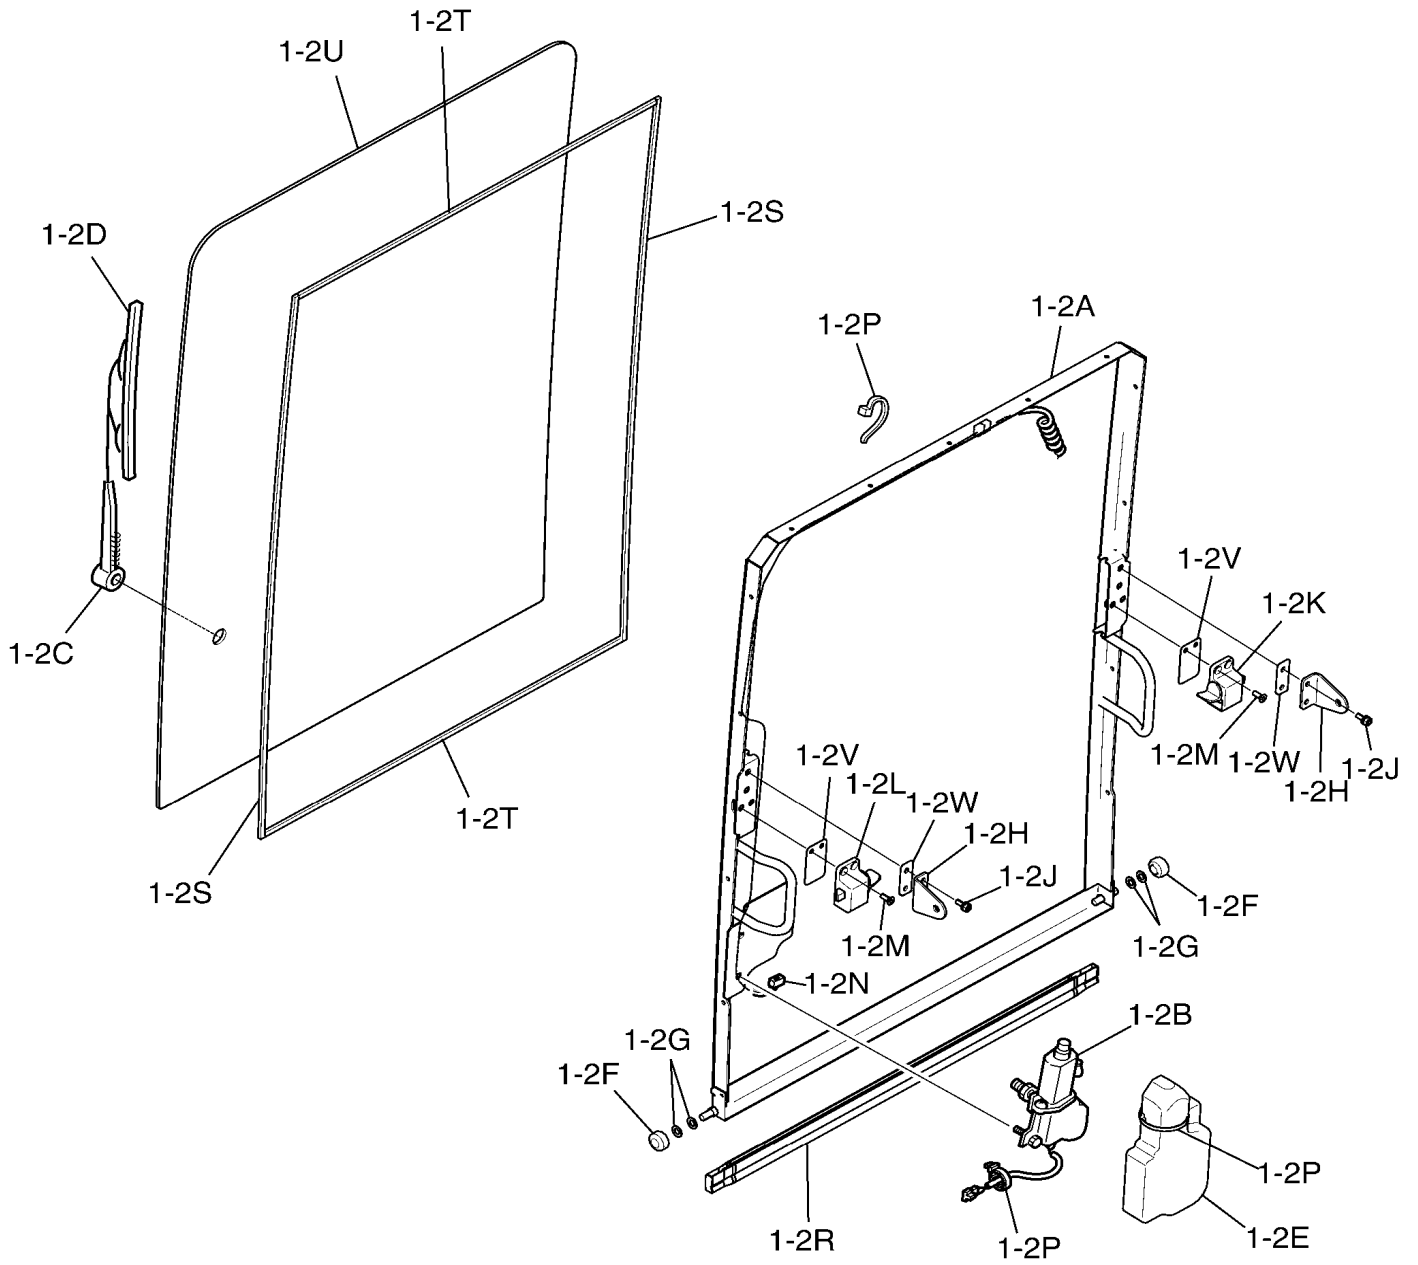  


01-060

p1

10/201  
8

 GUARD ASSY, HEAD



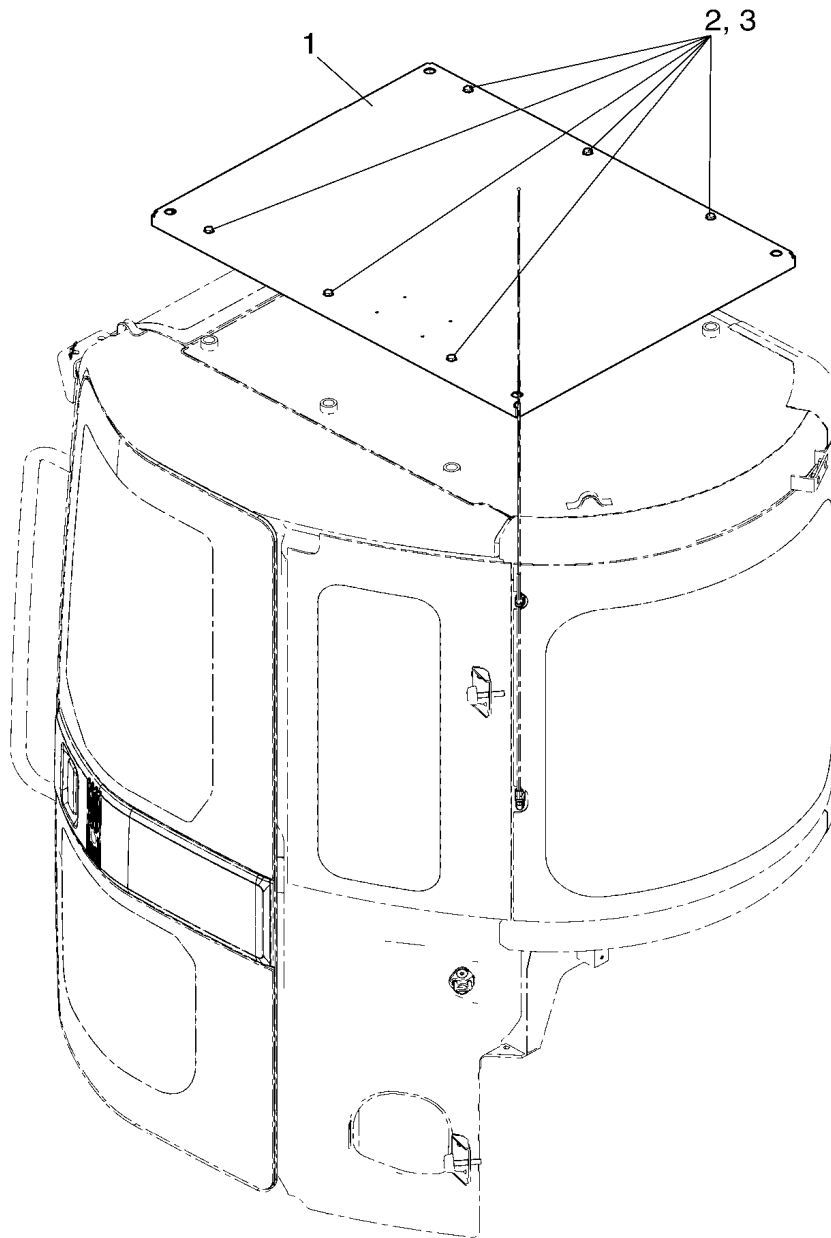


01-066

p1

10/201  
8

   SEAT INSTAL

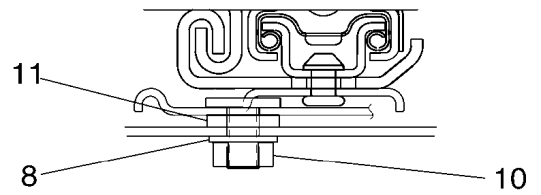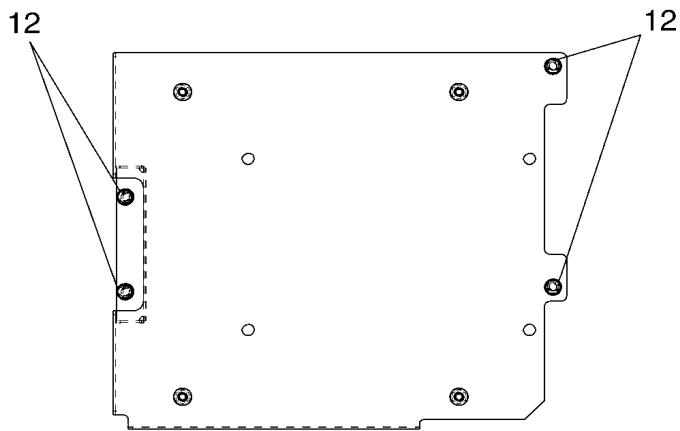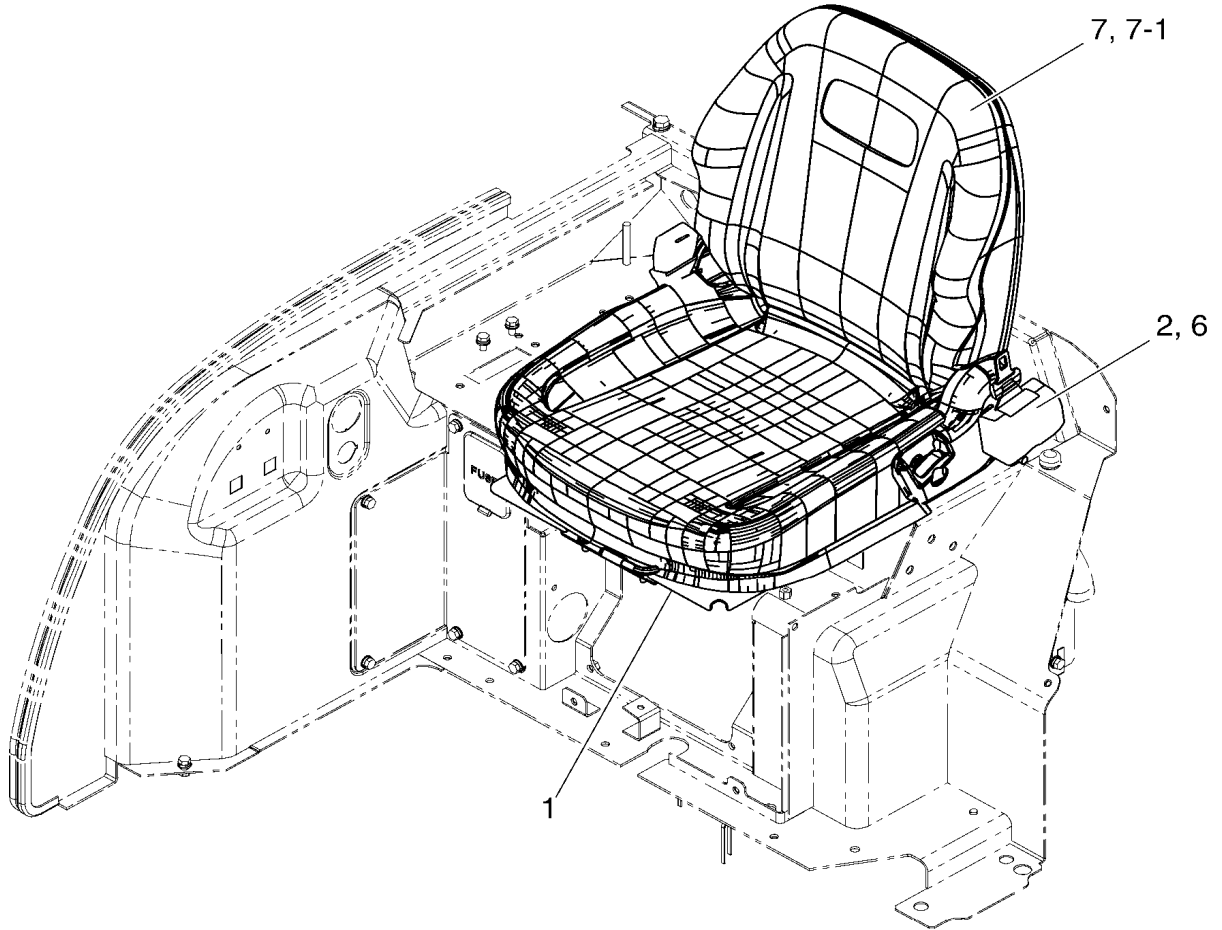


DETAIL OF SEAT INSTALATION

ITEM 1



 GUARD INSTAL, CANOPY

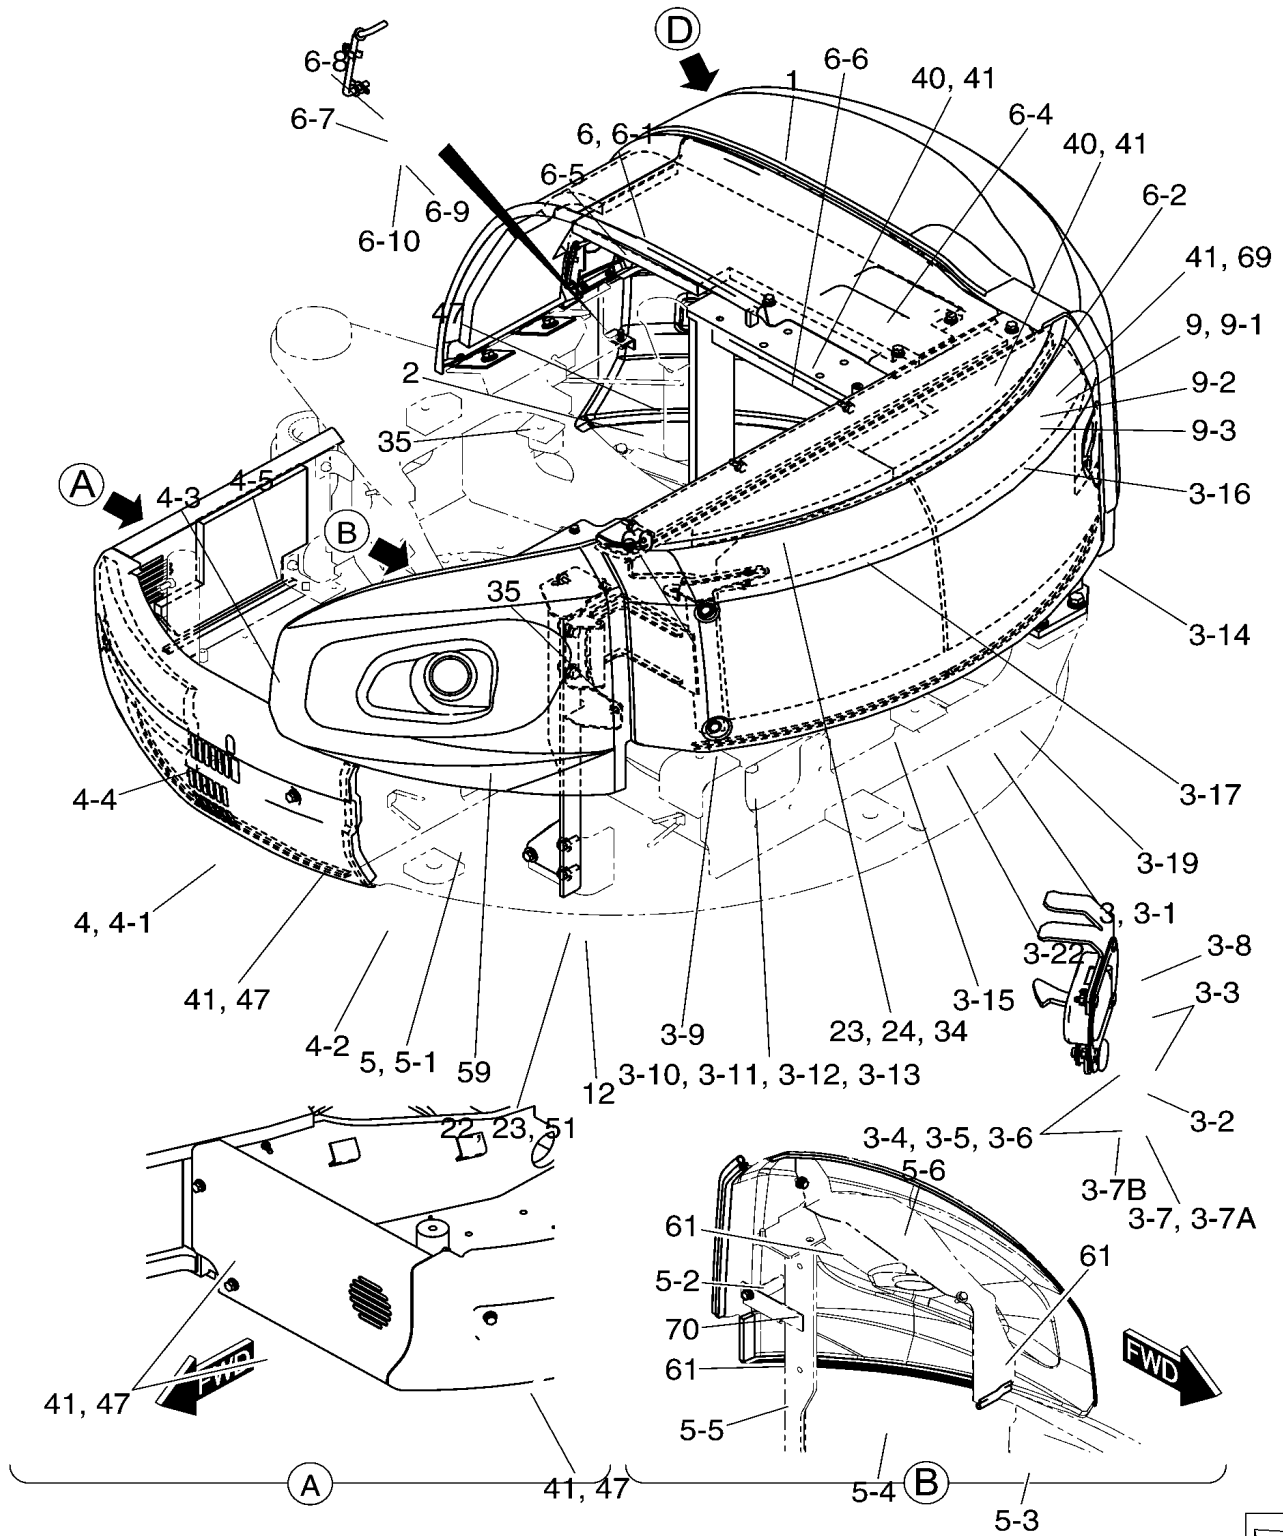



01-067

02


p3

10/2018

  GUARD INSTAL, CANOPY

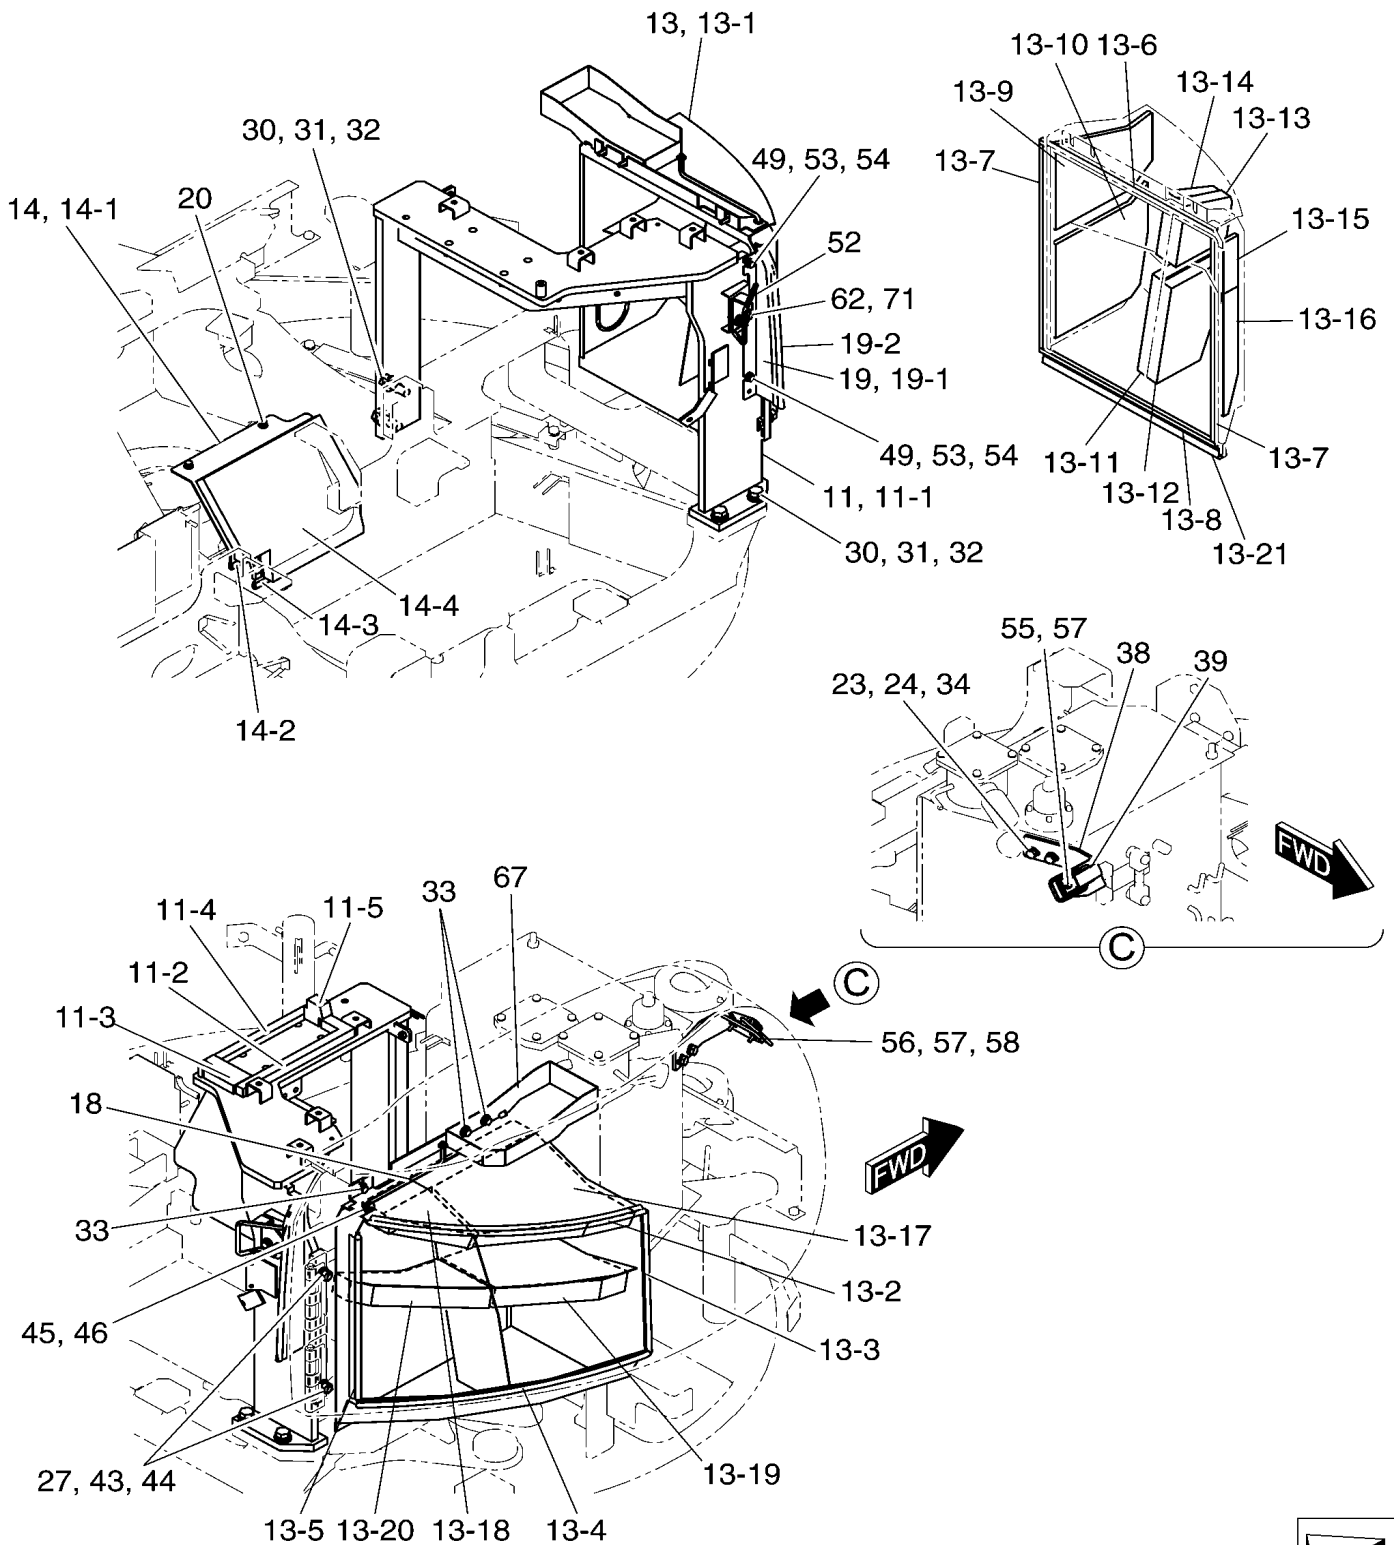


GUARD INSTAL, CANOPY

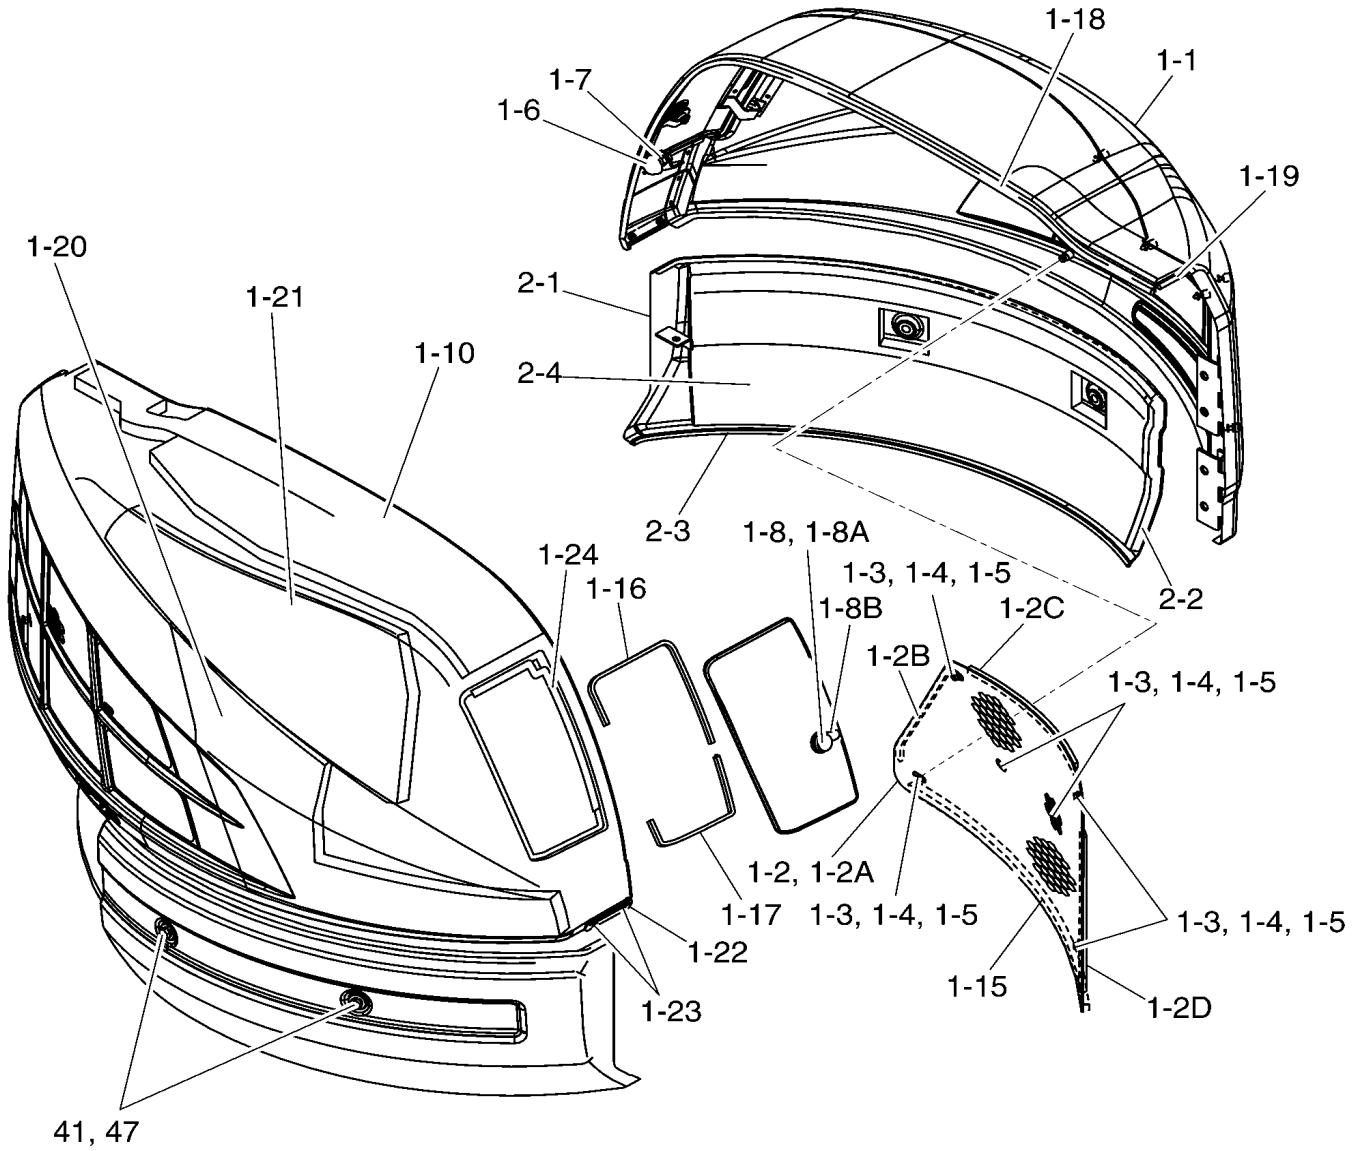 


D



 GUARD INSTAL, CAB/COOLER

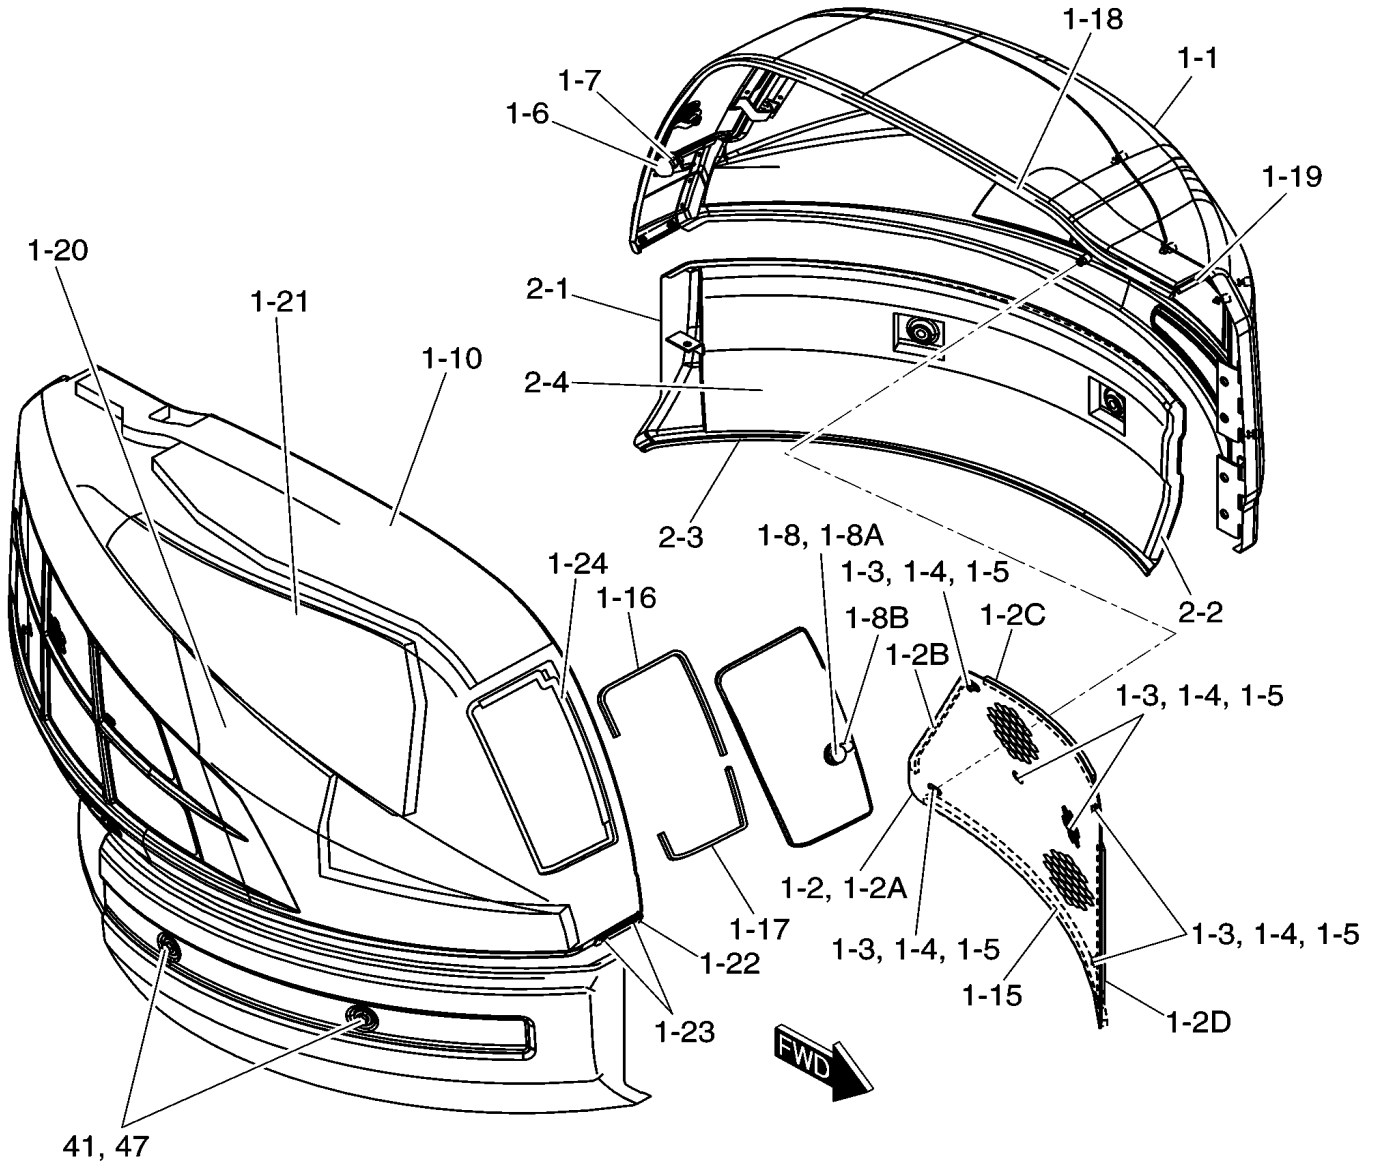

D

 



01-068

03

p5

10/201  
8

  GUARD INSTAL, CAB/COOLER


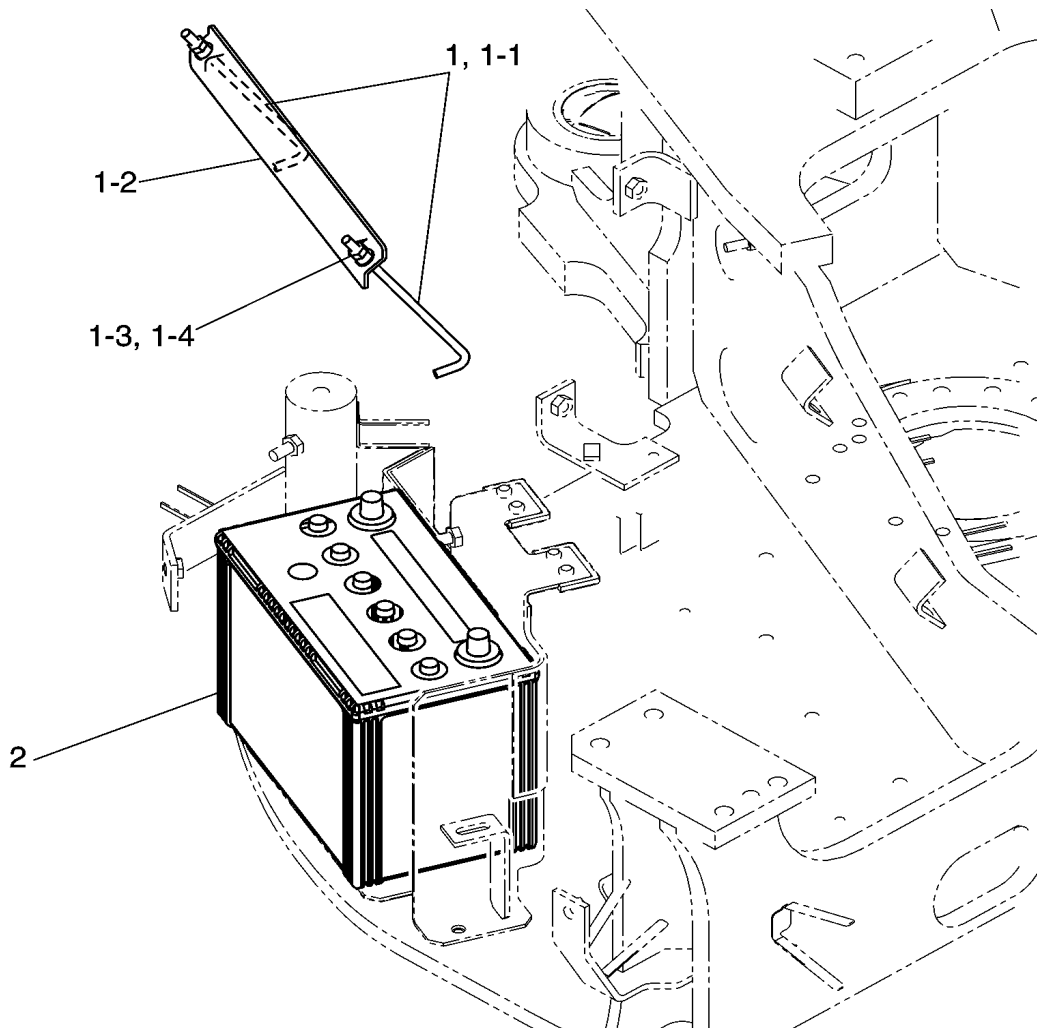


01-071


















p1

10/201  
8

  GROMMET, CANOPY

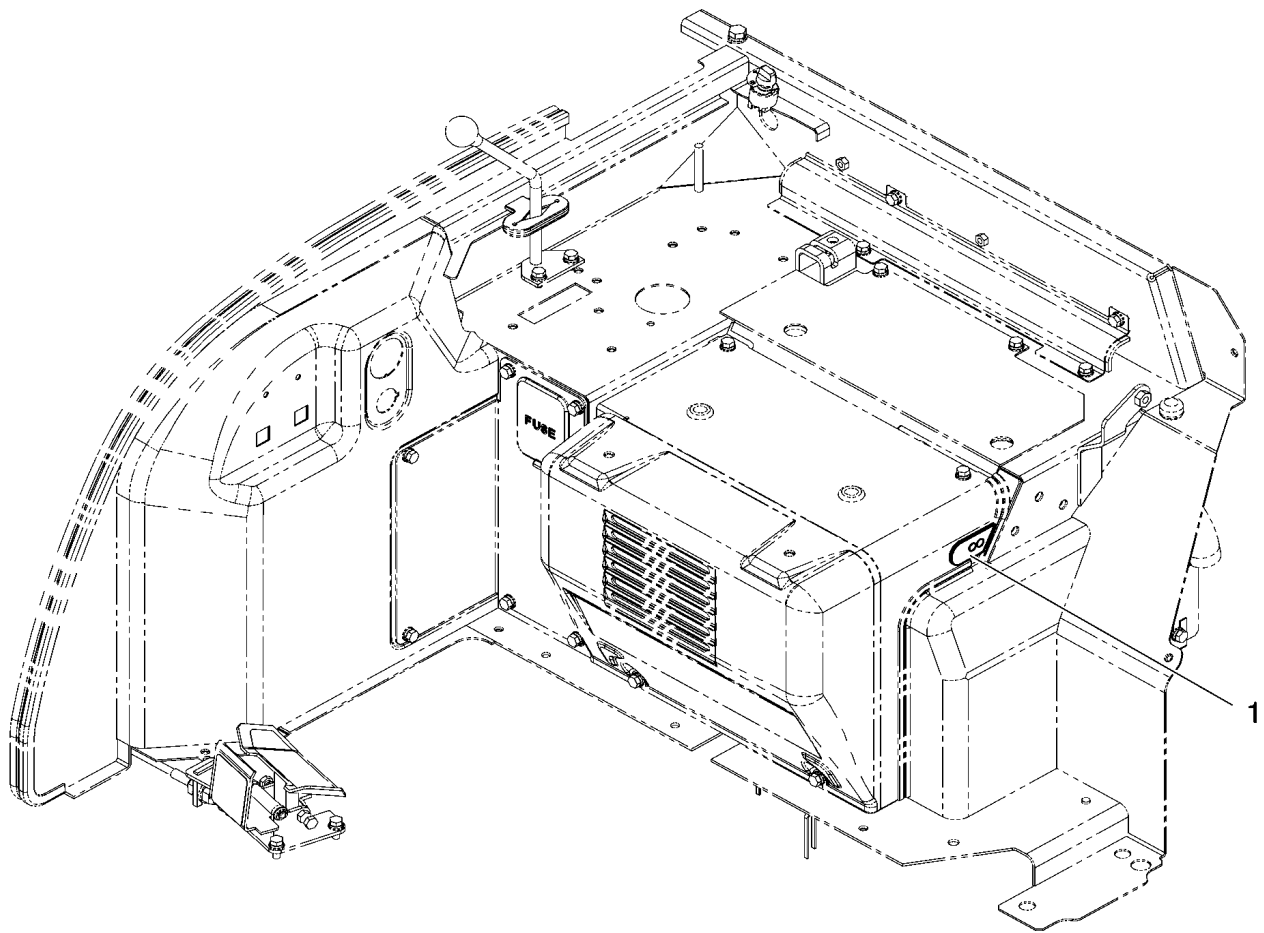

NAME PLATE INSTALL

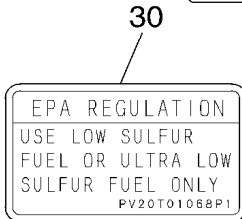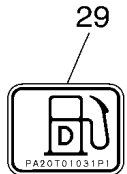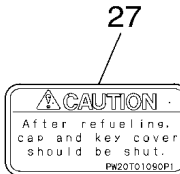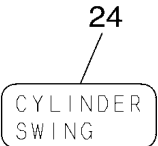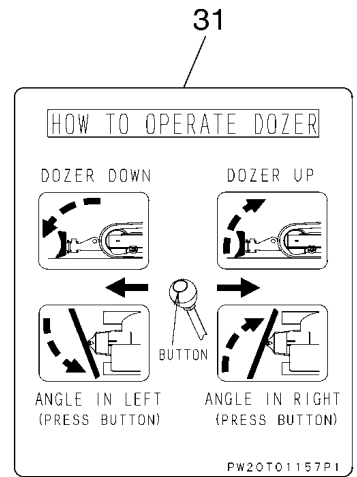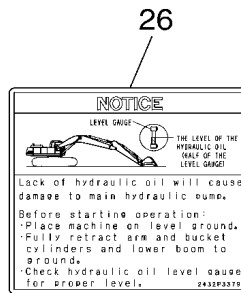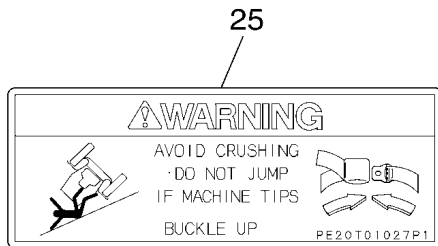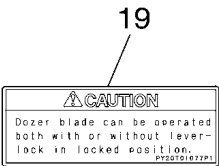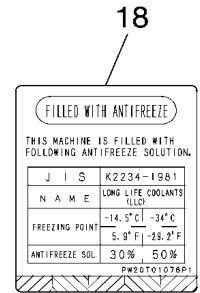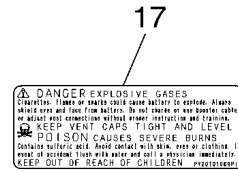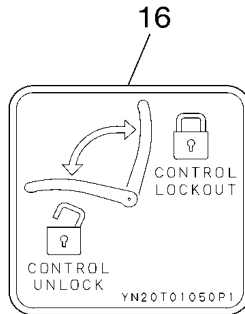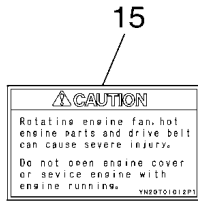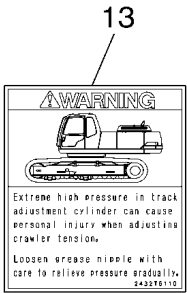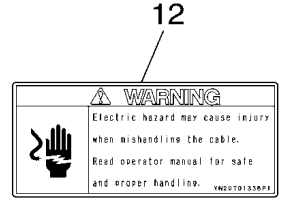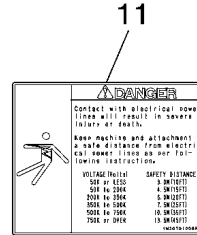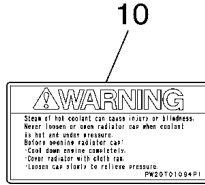                
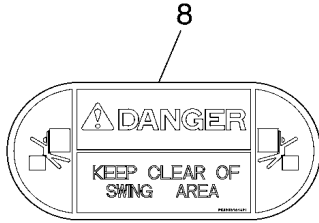 


28



LUBRICATION CHART

ITEM NO.	POSITION	LUBRICANT	DAILY	EVERY	EVERY	EVERY	EVERY	EVERY	EVERY
				50HRS	250HRS	500HRS	1000HRS	1500HRS	2000HRS
1	ATTACHMENT PIN		▲						
2	ATTACHMENT PIN		▲						
3	DOZING BLADE	GREASE	▲						
4	SLEWING RING		▲						
5	TRACK ADJUSTER		○						
6	HYDRAULIC TANK	HYDRAULIC OIL	○						X
7	ENGINE OIL PAN	ENGINE OIL	○	*	X				
8	RADIATOR	WATER	○			X			
9	PROPEL REDUCER	GEAR OIL			*				
10	WATER SEPARATOR	WATER	○			*			X
11	BATTERY FLUID	DISTILLED WATER	○						
12	VALVE CLEARANCE					○			
13	FUEL INJECTION PUMP						○		
14	FUEL INJECTION VALVE							○	
A	RETURN FILTER	ELEMENT		*			X		
B	SUCTION STRAINER	STRAINER						□	
C	AIR CLEANER	ELEMENT			□	X			
D	ENGINE OIL FILTER	ELEMENT		*	X				
E	FUEL FILTER	ELEMENT		*	X	X			

  
○ - INSPECTION AND/OR MAINTENANCE  
 \* - PERIODICAL REPLACEMENT ▲ - SUPPLY  
 □ - WATER DRAIN OR CLEANING \* - INITIAL REPLACEMENT

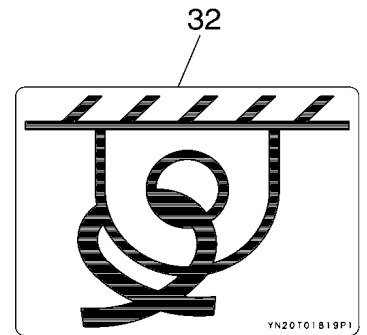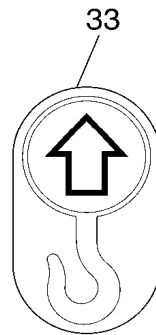


NAME PLATE INSTAL

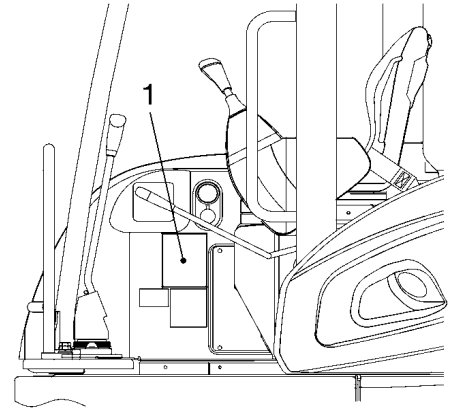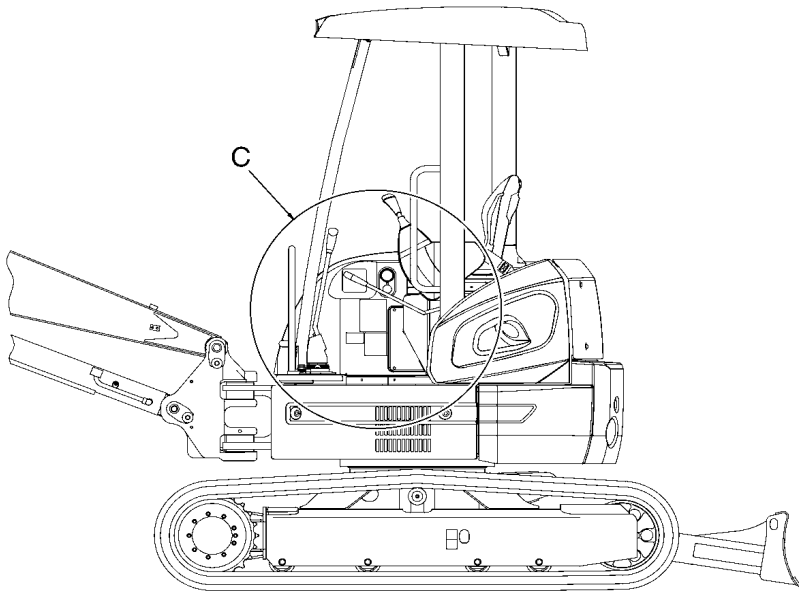  


DETAIL C

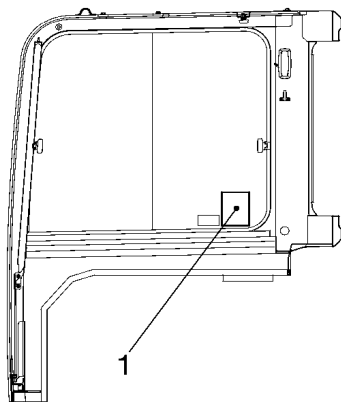 

FOR CAB (INSIDE OF RIGHT WINDOW)

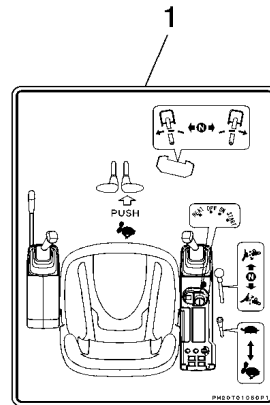 

NAME PLATE INSTAL, NIBBLER & BREAKER

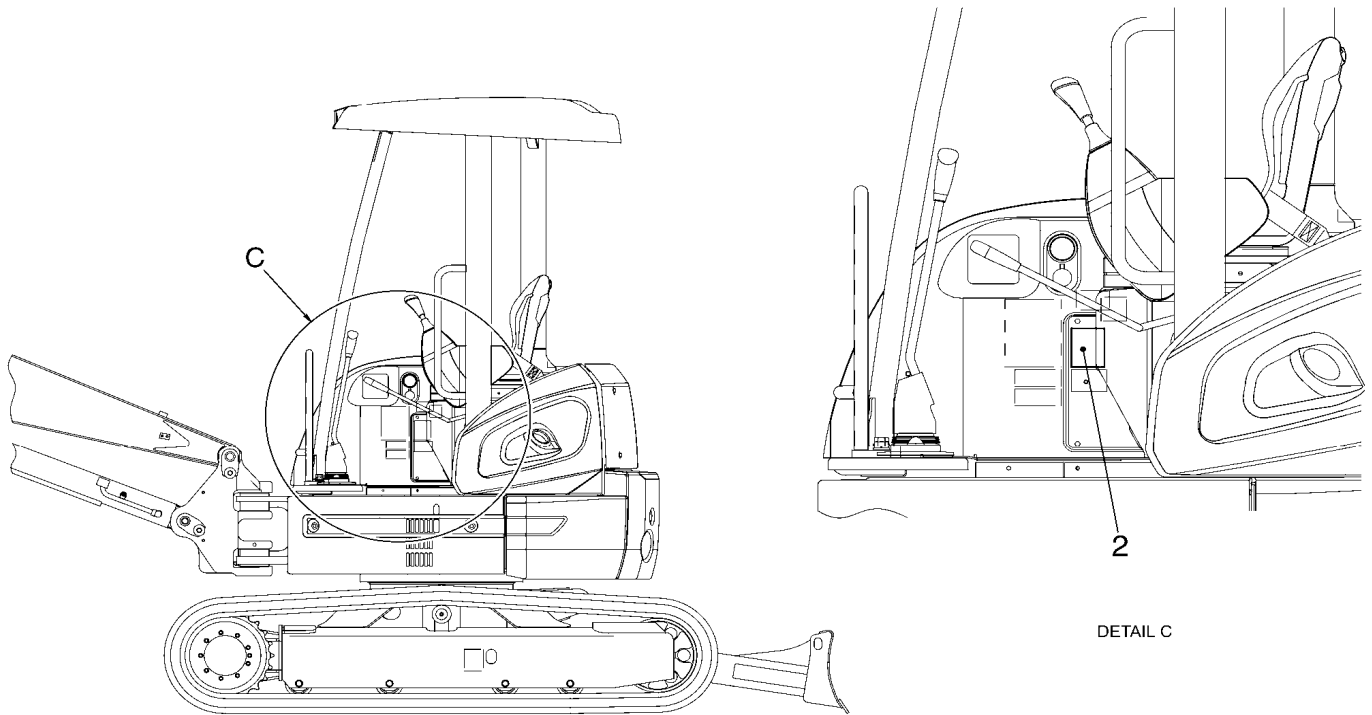 

DETAIL C

2


⚠ CAUTION	
Procedure to change selector valve	
Mark	SELECTION
N	Nibbler
B	Breaker
E	EXTRA

\*Please adjust suitable notch to capscrew.  
(some mark may not be indicated)

notch CAPSCREW


Marks

 PE20T01018P1






NAME PLATE INSTAL

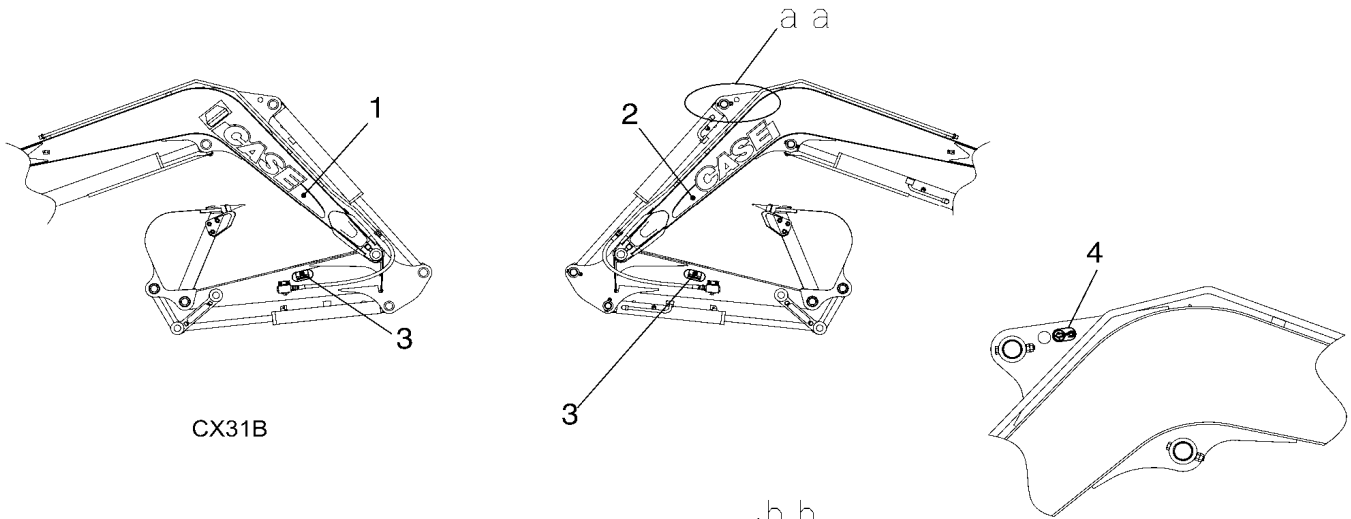 






CX31B

 DETAIL aa

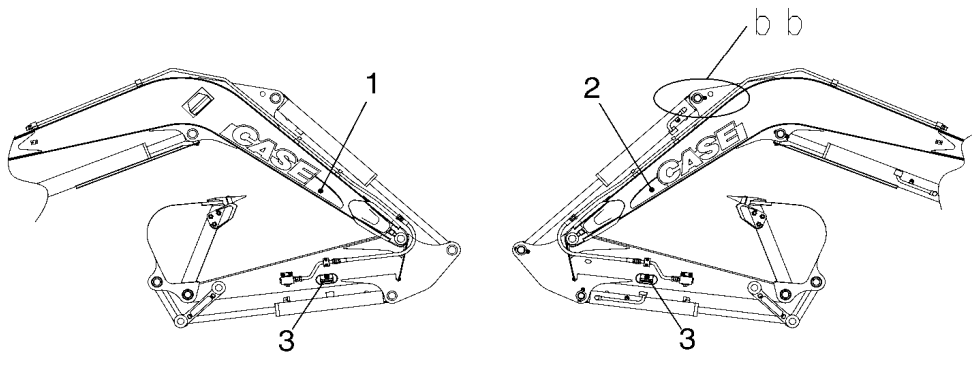

CX36B

     DETAIL bb

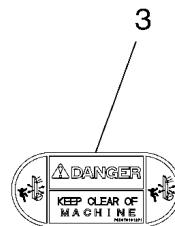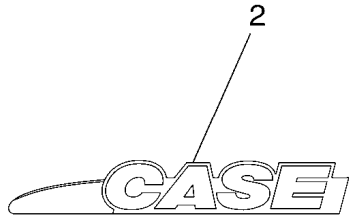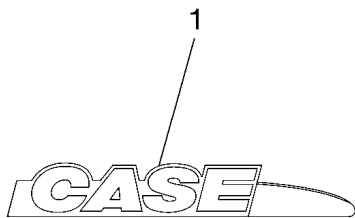

INDEX - INDICE - INDEX - ZAHLENVERZEICHNIS - INDICE - INDICE - INDHOLD - INHOUD

Number	Figure	Sequence	Ref.	Number	Figure	Sequence	Ref.
	01-040		.	24100U1335	01-059	08	1-53M
	01-041	01	.	2412P641E1	03-024		1-2A
	01-070		.	2412P641E2	03-024		1-2B
	02-010	02		2412P641E3	03-024		1-2C
	02-010	03	0	2412P641F1	03-024		1-2
	02-024		.	2412U103	03-024		1-1R
	03-019		.....	2414T4530	01-036	01	12
	03-022		.	2414T4661	02-009	02	1-4
	05-006	00		2414Z199D0	05-004	00	A14
	84.100.00		****	2414Z199D1	03-017		7
11114231	03-019		1	2414Z199D3	01-051	02	35
12577521	03-019		2	2414Z199D3	01-052	01	35
2405R312D0	01-037	02	2-2C	2414Z199D3	01-053	02	22
2405R312D0	01-037	02	2-2C	2414Z199D3	01-054	02	22
2405R312D0	01-038	02	2-2C	2414Z199D3	05-001	01	27
2405R312D1	01-036	02	1-8B	2416R252S2	01-021	03	2-2B
2405R312D1	01-037	02	2-2B	2416R252S6	01-021	03	2-2F
2405R312D1	01-037	02	2-2B	2416T23627	03-001		1-2B
2405R312D1	01-038	02	2-2B	2416T23627	03-013		2-2
2405R312D1	01-020	01	3-2B	2416Z649	01-023	01	12
2405R312D1	01-036	02	1-1B	2416Z649	01-024	01	12
2405R312D2	01-036	02	1-1C	2416Z649	01-024	04	12
2405T1666	02-009	02	1-5	2418P22541	02-009	02	1-11
2405T1680	02-008		1-5	2418P23755	02-004	02	1-3
2405T1689	02-016		1-2	2418P23755	02-005	02	1-3
2405T1689	02-017		2-2	2418T12274	02-001		3
2405U104D0	01-056	04	1-64	2418T12274	02-002		3
2405U104D0	01-057	04	1-64	2418T12345	01-005		5
2405U104D0	01-058	05	1-64	2418T12346	01-067	01	51
2405U104D0	01-059	04	1-64	2418T12346	01-067	03	51
2405U104D0	01-056	03	1-61	2418T12346	01-068	03	51
2405U104D0	01-056	04	1-61	2418T12346	01-077	04	33
2405U104D0	01-057	03	1-61	2418T12346	01-078	01	33
2405U104D0	01-057	04	1-61	2418T17895	03-003		2
2405U104D0	01-058	04	1-61	2418T17895	03-004	01	5
2405U104D0	01-058	05	1-61	2418T17895	03-004	03	5
2405U104D0	01-059	03	1-61	2418T17903	01-023	01	11
2405U104D0	01-059	04	1-61	2418T17903	01-024	01	11
2406Z321	01-020	01	4	2418T20864	01-062		4
24100J12703	02-004	01	1	2418T21137	01-023	01	10
24100R166S	01-021	03	2-3H	2418T21137	01-024	01	10
24100R232S	01-021	03	2-3F	2418T21983	02-004	02	1-4
24100U1188	01-073	02	2-	2418T21983	02-005	02	1-4
24100U1335	01-056	08	1-53M	2418T22593	01-062		19
24100U1335	01-057	08	1-53M	2418T5373C	01-056	04	1-142
24100U1335	01-058	08	1-53M	2418T5373C	01-057	04	1-142

INDEX - INDICE - INDEX - ZAHLENVERZEICHNIS - INDICE - INDICE - INDHOLD - INHOUD

Number	Figure	Sequence	Ref.	Number	Figure	Sequence	Ref.
NSS	01-048	01	10-	NSS	02-023	02	7-1
NSS	01-048	01	10-	NSS	02-023	02	7-2
NSS	01-048	01	10-	NSS	03-004	02	8-1
NSS	01-048	01	10-	NSS	03-004	02	8-2
NSS	01-048	01	10-	NSS	03-004	02	8-28
NSS	01-048	01	10-	NSS	03-004	04	8-1
NSS	01-048	01	10-	NSS	03-004	04	8-2
NSS	01-048	01	10-	NSS	03-004	04	8-24
NSS	01-048	01	10-	NSS	03-005	02	2
NSS	01-053	03	1-101	NSS	03-005	02	23
NSS	01-053	03	1-102	NSS	03-006	02	1
NSS	01-053	03	1-11	NSS	03-006	02	2
NSS	01-053	03	1-301	NSS	05-001	01	10-
NSS	01-053	03	1-413	NSS	05-001	01	10-
NSS	01-053	03	1-420	NSS	05-001	01	10-11
NSS	01-053	03	1-471	NSS	05-001	01	10-
NSS	01-053	03	1-472	NSS	05-001	01	10-
NSS	01-054	03	1-101	NSS	05-001	01	10-
NSS	01-054	03	1-102	NSS	05-001	01	10-
NSS	01-054	03	1-11	NSS	05-001	01	10-
NSS	01-054	03	1-301	NSS	05-001	02	10-
NSS	01-054	03	1-413	NSS	05-001	02	10-
NSS	01-054	03	1-420	NSS	05-001	02	10-11
NSS	01-054	03	1-471	NSS	05-001	02	10-
NSS	01-054	03	1-472	NSS	05-001	02	10-
NSS	02-003	02	3-104	NSS	05-001	02	10-
NSS	02-003	02	3-105	NSS	05-001	02	10-
NSS	02-003	02	3-106	NSS	05-001	02	10-
NSS	02-003	02	3-152	NSS	05-003	00	A1-1
NSS	02-003	02	3-153	NSS	05-003	00	A1-1A
NSS	02-003	02	3-201	NSS	05-003	00	C1-1
NSS	02-003	02	3-263	NSS	05-006	00	1
NSS	02-003	02	3-264	NSS	05-006	00	2
NSS	02-003	02	3-31	NSS	05-006	00	3
NSS	02-006		1-1	PA03M01093	01-056	09	2-21
NSS	02-006		1-11	PA03M01093	01-057	09	2-21
NSS	02-006		1-2	PA03M01093	01-058	01	2-21
NSS	02-006		1-3	PA03M01093	01-059	09	2-21
NSS	02-006		1-4	PA03M01093	01-037	01	1-5
NSS	02-006		1-6	PA03M01093	01-037	01	1-5
NSS	02-006		1-7	PA03M01093	01-038	01	1-5
NSS	02-021	02	9-1	PA03M01093	01-066		12
NSS	02-021	02	9-2	PA03M01093	01-074		8
NSS	02-021	02	9-20	PA03M01093	01-076		15
NSS	02-022	02	1-19	PA03M01461	01-040		3
NSS	02-022	02	1-2	PA06H01002	01-068	03	6-11

INDEX - INDICE - INDEX - ZAHLENVERZEICHNIS - INDICE - INDICE - INDHOLD - INHOUD

Number	Figure	Sequence	Ref.	Number	Figure	Sequence	Ref.
PH24E00037	01-077	01	1	PH30V00053	01-023	03	1-3E
PH24S00001	01-077	05	1-1B	PH30V00053	01-023	04	1-4E
PH24S00001	01-078	02	1-5B	PH30V00053	01-023	05	1-5E
PH25S00002	01-077	05	1-1F	PH30V00053	01-023	07	1-7E
PH25S00002	01-078	02	1-5F	PH30V00053	01-023	09	1-10E
PH26V00001	01-051	02	2	PH30V00053	01-023	10	1-11E
PH26V00001	01-052	02	2	PH30V00053	01-023	11	1-13E
PH26V00001	01-051	03	2-1	PH30V00053	01-023	12	1-14E
PH26V00001	01-052	03	2-1	PH30V00053	01-023	15	1-25E
PH26V00001	01-051	03	2-2	PH30V00053	01-023	16	1-26E
PH26V00001	01-052	03	2-2	PH30V00053	01-024	03	1-3E
PH26V00001	01-051	03	2-3	PH30V00053	01-024	04	1-4E
PH26V00001	01-052	03	2-3	PH30V00053	01-024	05	1-5E
PH30H01037	01-028		11	PH30V00053	01-024	07	1-7E
PH30H01040	01-028		12	PH30V00053	01-024	09	1-10E
PH30H01042	01-028		10	PH30V00053	01-024	10	1-11E
PH30H01045	01-028		22	PH30V00053	01-024	11	1-13E
PH30H01048	01-028		9	PH30V00053	01-024	12	1-14E
PH30H01049	01-028		21	PH30V00053	01-024	15	1-26E
PH30H01052	01-028		7	PH30V00053	01-024	16	1-27E
PH30H01057	01-028		6	PH30V00053	01-024	17	1-28E
PH30H01061	01-028		8	PH30V00053	01-023	03	1-3F
PH30P00009	01-021	01	1	PH30V00053	01-023	04	1-4F
PH30V00051	01-023	01	1	PH30V00053	01-023	05	1-5F
PH30V00051	01-023	02	1-2	PH30V00053	01-023	07	1-7F
PH30V00052	01-024	01	1	PH30V00053	01-023	09	1-10F
PH30V00052	01-024	02	1-2	PH30V00053	01-023	10	1-11F
PH30V00053	01-023	02	1-3	PH30V00053	01-023	11	1-13F
PH30V00053	01-024	02	1-3	PH30V00053	01-023	15	1-25F
PH30V00053	01-023	03	1-3C	PH30V00053	01-023	16	1-26F
PH30V00053	01-023	04	1-4C	PH30V00053	01-024	03	1-3F
PH30V00053	01-023	05	1-5C	PH30V00053	01-024	04	1-4F
PH30V00053	01-023	07	1-7C	PH30V00053	01-024	05	1-5F
PH30V00053	01-023	09	1-10C	PH30V00053	01-024	07	1-7F
PH30V00053	01-023	11	1-13C	PH30V00053	01-024	09	1-10F
PH30V00053	01-023	15	1-25C	PH30V00053	01-024	10	1-11F
PH30V00053	01-023	16	1-26C	PH30V00053	01-024	11	1-13F
PH30V00053	01-024	03	1-3C	PH30V00053	01-024	15	1-26F
PH30V00053	01-024	04	1-4C	PH30V00053	01-024	16	1-27F
PH30V00053	01-024	05	1-5C	PH30V00053	01-024	17	1-28F
PH30V00053	01-024	07	1-7C	PH30V00053	01-023	03	1-3G
PH30V00053	01-024	09	1-10C	PH30V00053	01-023	04	1-4H
PH30V00053	01-024	11	1-13C	PH30V00053	01-023	08	1-8K
PH30V00053	01-024	15	1-26C	PH30V00053	01-023	09	1-10G
PH30V00053	01-024	16	1-27C	PH30V00053	01-023	10	1-11G
PH30V00053	01-024	17	1-28C	PH30V00053	01-023	11	1-13G

INDEX - INDICE - INDEX - ZAHLENVERZEICHNIS - INDICE - INDICE - INDHOLD - INHOUD

Number	Figure	Sequence	Ref.	Number	Figure	Sequence	Ref.
PW02C0111	01-058	03	1-54F	PW02C0118	01-056	09	2-17
PW02C0111	01-059	02	1-54F	PW02C0118	01-057	09	2-17
PW02C0111	01-056	02	1-54G	PW02C0118	01-058	01	2-17
PW02C0111	01-057	02	1-54G	PW02C0118	01-059	09	2-17
PW02C0111	01-058	03	1-54G	PW02C0120	01-056	01	1-7
PW02C0111	01-059	02	1-54G	PW02C0120	01-057	01	1-7
PW02C0111	01-056	02	1-54H	PW02C0120	01-058	02	1-7
PW02C0111	01-057	02	1-54H	PW02C0120	01-059	01	1-7
PW02C0111	01-058	03	1-54H	PW02C0120	01-056	01	1-6
PW02C0111	01-059	02	1-54H	PW02C0120	01-057	01	1-6
PW02C0111	01-056	02	1-54J	PW02C0120	01-058	02	1-6
PW02C0111	01-057	02	1-54J	PW02C0120	01-059	01	1-6
PW02C0111	01-058	03	1-54J	PW02C0122	01-056	01	1-13
PW02C0111	01-059	02	1-54J	PW02C0122	01-057	01	1-13
PW02C0111	01-056	02	1-54K	PW02C0122	01-058	02	1-13
PW02C0111	01-057	02	1-54K	PW02C0122	01-059	01	1-13
PW02C0111	01-058	03	1-54K	PW02C0122	01-056	02	1-54B
PW02C0111	01-059	02	1-54K	PW02C0122	01-057	02	1-54B
PW02C0111	01-056	02	1-54L	PW02C0122	01-058	03	1-54B
PW02C0111	01-057	02	1-54L	PW02C0122	01-059	02	1-54B
PW02C0111	01-058	03	1-54L	PW02C0122	01-056	02	1-54C
PW02C0111	01-059	02	1-54L	PW02C0122	01-057	02	1-54C
PW02C0111	01-056	02	1-54M	PW02C0122	01-058	03	1-54C
PW02C0111	01-057	02	1-54M	PW02C0122	01-059	02	1-54C
PW02C0111	01-058	03	1-54M	PW02C0123	01-056	05	1-160
PW02C0111	01-059	02	1-54M	PW02C0123	01-057	05	1-160
PW02C0111	01-056	04	1-11	PW02C0126	01-056	03	1-139
PW02C0111	01-057	04	1-11	PW02C0126	01-057	03	1-139
PW02C0111	01-058	05	1-11	PW02C0126	01-058	04	1-139
PW02C0111	01-059	04	1-11	PW02C0126	01-059	03	1-139
PW02C0111	01-056	04	1-10	PW02C0126	01-056	03	1-140
PW02C0111	01-057	04	1-10	PW02C0126	01-057	03	1-140
PW02C0111	01-058	04	1-10	PW02C0126	01-058	04	1-140
PW02C0111	01-059	04	1-10	PW02C0126	01-059	03	1-140
PW02C0111	01-056	02	1-20	PW02C0128	01-061		1
PW02C0111	01-057	02	1-20	PW02C0129	01-056	01	1-55
PW02C0111	01-058	03	1-20	PW02C0129	01-057	01	1-55
PW02C0111	01-059	02	1-20	PW02C0129	01-058	02	1-55
PW02C0116	01-056	02	1-134	PW02C0129	01-059	01	1-55
PW02C0116	01-057	02	1-134	PW02C0130	01-056	03	1-14
PW02C0116	01-058	03	1-134	PW02C0130	01-057	03	1-14
PW02C0116	01-059	02	1-134	PW02C0130	01-058	04	1-14
PW02C0118	01-056	04	1-17	PW02C0130	01-059	03	1-14
PW02C0118	01-057	04	1-17	PW02C0133	01-062		1
PW02C0118	01-058	05	1-17	PW02C0133	01-056	09	2-28
PW02C0118	01-059	04	1-17	PW02C0133	01-057	09	2-28

INDEX - INDICE - INDEX - ZAHLENVERZEICHNIS - INDICE - INDICE - INDHOLD - INHOUD

Number	Figure	Sequence	Ref.	Number	Figure	Sequence	Ref.
PY15V00012	01-022	02	1-109	PY42H01168	03-007		1-2
PY15V00012	01-022	02	1-113	PY42H01168	05-006	00	1-2
PY15V00012	01-022	02	1-129	PY42H01187	03-007		1-4
PY15V00012	01-022	02	1-136	PY42H01187	05-006	00	1-4
PY15V00012	01-022	02	1-216	PY42H01191	05-006	00	2-3
PY19H00007	02-015			PY42H01206	03-007		1-1
PY19H00008	01-033			PY42H01206	05-006	00	1-1
PY19H01001	01-033		9	PY42H01207	05-006	00	2-1
PY19H01002	01-033		3	PY42H01208	05-006	00	2-2
PY19H01004	01-033		10	PY43H00023	03-010		
PY20T01069	06-001	02	17	PY43H00031	03-018		
PY20T01069	06-001	03	17	PY43H00035	03-017		
PY20T01073	06-001	02	5	PY43H01018	05-005	00	1
PY20T01077	06-001	02	19	PY43H01021	03-017		2
PY20T01077	06-001	03	19	PY43H01021	05-004	00	A12
PY20T01087	06-007		1	PY43H01037	03-018		1
PY20T01154	06-016		1	PY43H01038	03-018		2
PY20T01175	06-017		1	PY50S00003	01-076		10
PY21C01007	01-067	01	5-4	PY50S00004	01-082		7
PY22T00069	06-021		2	PY51B00045	02-018		
PY22T00082	06-018		1	PY51B00056	02-019		
PY22T00083	06-018			PY51B00060	02-017		
PY22T00108	06-016			PY51B00061	02-017		1
PY22T00151	06-017			PY51B00063	02-016		
PY22V00009	01-022	02	1-400	PY51B00064	02-016		1
PY22V00009	01-022	02		PY51B01034	02-022	01	5
PY22V00009	01-022	03		PY51B01053	02-022	01	11
PY22V00010	01-023	02	1-16	PY51B01054	02-022	01	12
PY22V00010	01-024	02	1-16	PY51B01055	02-022	01	13
PY22V00010	01-030		7	PY51B01105	02-016		1-1
PY22V00010	01-023	02	1-24	PY51B01105	02-017		1-1
PY22V00010	01-024	02	1-25	PY51B01107	02-021	01	1
PY30H00005	01-028			PY51B01107	02-023	01	1
PY30P01003	01-021	01	1-2D	PY51B01129	02-017		2
PY32H00007	01-034			PY51B01130	02-017		2-1
PY32H01005	01-034		29	PY51B01142	02-017		3
PY32H01005	01-035		1	PY51D01002	02-003	01	1
PY35V00005	01-049	02	7-21	PY52D00022	02-007		
PY35V00005	01-051	04	38-12	PY52D00023	02-007		1
PY42H00027	03-009			PY52D00024	02-007		1-1
PY42H00028	01-006			PY52D00025	02-007		1-1A
PY42H00050	03-008			PY52D01008	02-007		1-1D
PY42H00095	03-007		1	PY52D01009	02-007		1-1E
PY42H00103	03-007		2	PY52D01019	02-007		1-1B
PY42H00105	03-007			PY52D01020	02-007		1-1C
PY42H01135	03-008		5	PY52F00041	01-002		1

INDEX - INDICE - INDEX - ZAHLENVERZEICHNIS - INDICE - INDICE - INDHOLD - INHOUD

Number	Figure	Sequence	Ref.	Number	Figure	Sequence	Ref.
YT02C01066	01-056	07	1-	YT09T00001	00-002		4
YT02C01066	01-056	08	1-	YT09T00001	00-002		9
YT02C01066	01-057	01	1-63	YT09T00001	00-002		10
YT02C01066	01-057	04	1-63	YT09T00001	00-002		5
YT02C01066	01-057	07	1-	YT11M01012	01-020	01	5
YT02C01066	01-057	08	1-	YT15V00008	02-003	02	3-33
YT02C01066	01-058	02	1-63	YT17M01034	01-036	01	3
YT02C01066	01-058	05	1-63	YT20M00004	01-073	02	2-
YT02C01066	01-058	08	1-	YT20M00004	01-073	02	2-
YT02C01066	01-059	01	1-63	YT20M00004	01-073	02	2-
YT02C01066	01-059	04	1-63	YT21C01039	01-067	03	5-5
YT02C01066	01-059	07	1-	YT21C01039	01-068	03	5-5
YT02C01066	01-059	08	1-	YT21C01039	01-067	01	4-3
YT02C01081	01-056	05	1-161	YT21C01039	01-067	03	4-3
YT02C01081	01-057	05	1-161	YT21C01039	01-068	03	4-3
YT02C01104	01-056	04	1-70	YT21C01163	01-067	01	13-4
YT02C01104	01-057	04	1-70	YT21C01163	01-067	02	13-4
YT02C01104	01-058	05	1-70	YT21C01163	01-068	01	13-4
YT02C01104	01-059	04	1-70	YT21C01163	01-068	03	13-4
YT02C01106	01-056	06	1-2N	YT21C01187	01-067	01	41
YT02C01106	01-057	06	1-2N	YT21C01187	01-067	03	41
YT02C01106	01-058	07	1-2N	YT21C01187	01-067	03	41
YT02C01106	01-059	06	1-2N	YT21C01187	01-068	02	41
YT02C01125	01-056	06	1-2E	YT21C01187	01-068	03	41
YT02C01125	01-057	06	1-2E	YT21P01001	01-067	02	1-5
YT02C01125	01-058	07	1-2E	YT21P01001	01-067	03	1-5
YT02C01125	01-059	06	1-2E	YT21P01001	01-068	02	1-5
YT02C01126	01-056	05	1-66	YT21P01001	01-068	03	1-5
YT02C01126	01-057	05	1-66	YT30V00008	01-025	02	1-151
YT02C01126	01-058	04	1-66	YT30V00008	01-026	02	1-151
YT02C01126	01-059	05	1-66	YT30V00008	01-025	02	1-302
YT02C01296	01-036	01	4	YT30V00008	01-026	02	1-302
YT02C01324	01-056	04	1-51	YT30V00008	01-025	02	1-501
YT02C01324	01-057	04	1-51	YT30V00008	01-026	02	1-501
YT02C01324	01-058	05	1-51	YT30V00009	01-053	03	1-212
YT02C01324	01-059	04	1-51	YT30V00009	01-054	03	1-212
YT02C01515	01-012		23	YT30V00009	05-001	01	10-
YT02C01567	01-057	05	1-162	YT30V00009	05-001	02	10-
YT02C01567	01-059	05	1-162	YT42H01128	01-033		8
YT02C01567	01-055		22	YT50C01024	01-056	04	1-42
YT02C01567	01-056	03	1-156	YT50C01024	01-056	06	1-2F
YT02C01567	01-057	03	1-156	YT50C01024	01-057	04	1-42
YT02C01567	01-058	04	1-156	YT50C01024	01-057	06	1-2F
YT02C01567	01-059	03	1-156	YT50C01024	01-058	05	1-42
YT02C0567D	01-062		26	YT50C01024	01-058	07	1-2F
YT03M01051	01-041		5	YT50C01024	01-059	04	1-42

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL