

# 1818 Uni-Loader

## Parts Catalog

8-3411

Reprinted

**CASE**

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

## ALPHABETICAL INDEX

**I**

Ignition System - gasoline models . . . . . 4-115  
 Index - numerical . . . . . 10-254  
 Injection System - fuel, diesel  
   models . . . . . 3-81,3-91 - 3-95

**L**

Lamp  
   Road . . . . . 4-139  
   Rotating Beacon . . . . . 4-141  
   Work . . . . . 4-135  
 Latch - parking . . . . . 7-177,7-179  
 Levers - see Controls  
 Lift Eyes . . . . . 9-243  
 Lift Frame . . . . . 9-217

**M**

Manifold - intake and exhaust, diesel  
   engine . . . . . 2-47  
 Manifold - intake, gasoline engine . . . . . 2-67  
 Motor - hydrostatic drive . . . . . 8-169  
 Mounting  
   Air Cleaner . . . . . 2-15  
   Auxiliary Control Valve . . . . . 8-201  
   Engine . . . . . 2-21  
   Equipment Control Valve . . . . . 8-185  
   Equipment Pump . . . . . 6-159  
   Seat . . . . . 9-229  
   Variable Displacement Pump . . . . . 6-159  
 Muffler . . . . . 2-19

**N**

Noise Reduction Kit . . . . . 9-235,9-237  
   Bystander . . . . . 9-241  
   Deluxe - diesel models . . . . . 9-237,9-239  
   Standard . . . . . 9-235  
 Nozzle - fuel injection . . . . . 3-93  
 Numerical Index . . . . . 10-254

**O**

Oil Cooler - hydraulic circuit . . . . . 8-189  
 Operator Restraint . . . . . 7-177

**P**

Pallet Fork . . . . . 9-221  
 Parking Latch . . . . . 7-177,7-179  
 Pedal - attachment control . . . . . 8-201  
 Plate - floor . . . . . 9-215  
 Pump  
   Equipment  
     Diesel, assembly . . . . . 8-205  
     Gasoline, assembly . . . . . 8-207  
     Mounting . . . . . 6-159  
   Fuel - gasoline engine . . . . . 3-99  
   Injection - diesel engine . . . . . 3-95  
   Oil - diesel engine . . . . . 2-25  
   Oil - gasoline engine . . . . . 2-61  
   Variable Displacement  
     Diesel, assembly . . . . . 6-161,6-163  
     Gasoline, assembly . . . . . 6-165,6-167  
     Mounting . . . . . 6-159

**R**

Radiator - diesel models . . . . . 2-13  
 Restraint Bar - operator . . . . . 7-177  
 Roll Over Protective Structure - glazed . . . . . 9-233  
 Roll Over Protective Structure -  
   standard . . . . . 9-231  
 Rotating Beacon . . . . . 4-141

**S**

Seat and Mounting . . . . . 9-229  
 Shaft - see Engine, Pump, or Motor  
 Sheave - engine and pump . . . . . 6-155  
 Shroud - gasoline engine . . . . . 2-23  
 Sprocket - drive chain . . . . . 6-171  
 Starter Assembly  
   Diesel Models . . . . . 4-113  
   Gasoline Models . . . . . 4-119  
 Starter Mounting  
   Diesel Models . . . . . 2-49  
   Gasoline Models . . . . . 4-117  
 Strut - support, lift frame . . . . . 9-217

**T**

Teeth - bucket . . . . . 9-219  
 Tires . . . . . 6-173  
 Tool Tach . . . . . 9-227

**AIR CLEANER**

REF.	PART NO.	DESCRIPTION	REQ'D.
	D82572	CLEANER ASSEMBLY - air, engine .....	1
1	NSS	BODY - air cleaner .....	1
2	D86613	CLAMP ASSEMBLY - cup retaining .....	1
3	D82571	ELEMENT - filter .....	1
4	D86612	NUT ASSEMBLY - wing, includes washer, element retaining .....	1
5	D86615	BAFFLE - air cleaner .....	1
6	73269C1	CUP - air cleaner .....	1

**OIL PAN (DIESEL)**

REF.	PART NO.	DESCRIPTION	REQ'D.
1	1959160C1	PAN - oil .....	1
2	1959145C1	GASKET - oil pan .....	1
3	1959147C1	BOLT - hex, M6 x 19 mm .....	18
4	1959162C1	WASHER - lock, oil pan .....	18
5	1959148C1	FILTER - oil .....	1
6	1959163C1	BOLT - hex head, special .....	1
7	1959165C1	O-RING - oil filter .....	1
8	1959167C1	DIPSTICK - oil .....	1
9	1959149C1	PLUG - drain .....	1
10	1959150C1	WASHER - flat, 12 x 16 x 1.5 mm .....	1
	E20143	PLUG - auto oil drain, (TBG) Germany .....	1
16	NSS	VALVE - drain .....	1
17	NSS	CAP - dust .....	1
18	NSS	TUBE - drain .....	1

## CRANKSHAFT, PISTONS, AND CONNECTING RODS DIESEL MODELS

REF.	PART NO.	DESCRIPTION	REQ'D.
1	1959345C1	PISTON - standard .....	3
2	1959346C1	RING - piston, set .....	3
3	1959347C1	PIN - piston .....	3
4	1959348C1	RING - nsap, piston pin .....	6
	1959349C1	ROD ASSEMBLY - connecting .....	3
6	NSS	ROD - connecting, order connecting rod assembly 1959349C1 .....	3
7	1959351C1	BUSHING - piston pin .....	3
8	1959352C1	BOLT - connecting rod, M7 x 42 mm .....	6
9	1959353C1	BEARING - crank pin .....	6
	1959354C1	CRANKSHAFT ASSEMBLY - engine .....	1
11	NSS	CRANKSHAFT - engine .....	1
12	1959356C1	PLUG - crankshaft .....	3
13	1959357C1	SLEEVE - crankshaft .....	1
14	1959360C1	GEAR - crankshaft .....	1
15	1959306C1	KEY - crankshaft .....	1
16	1959361C1	DISC - crankshaft .....	1
17	1959362C1	COLLAR - crankshaft .....	1
18	1959363C1	O-RING - crankshaft .....	1
19	1959364C1	BEARING - main, crankshaft, No. 1 .....	1
20	1959365C1	BEARING - main, crankshaft, No. 2 .....	6
21	1959366C1	PLATE - bearing, thrust, side, No. 1 .....	2
22	1959367C1	PLATE - bearing, thrust, side, No. 2 .....	2

## INTAKE MANIFOLD & EXHAUST MANIFOLD DIESEL MODELS

REF.	PART NO.	DESCRIPTION	REQ'D.
1	1959254C1	MANIFOLD - intake .....	1
2	1959256C1	GASKET - intake manifold No. 1 cylinder .....	1
3	1959273C1	GASKET - intake manifold No. 2 and No. 3 cylinders .....	2
4	1959215C1	BOLT - manifold .....	4
5	1959257C1	BOLT - manifold .....	1
6	1959258C1	BOLT - manifold, M8 x 80 mm .....	1
7	1959206C1	WASHER - lock .....	2
8	1959260C1	MANIFOLD - exhaust .....	1
9	1959262C1	GASKET - exhaust manifold .....	3
10	1959263C1	STUD - exhaust manifold, M6 x 28 mm .....	6
11	1959205C1	NUT - cover stud, M6 .....	6
12	1959206C1	WASHER - lock, exhaust manifold nut .....	6
13	1959264C1	STUD - M10 .....	2
14	1959266C1	GASKET - muffler .....	1
15	1959268C1	NUT - M10 .....	2
16	1959270C1	WASHER - lock .....	2
17	1959271C1	CAP - intake manifold .....	1

## CAMSHAFT GASOLINE MODELS

REF.	PART NO.	DESCRIPTION	REQ'D.
1	1959023C1	CAMSHAFT ASSEMBLY - engine .....	1
2	N9554	PIN - governor center .....	1
3	126-9	KEY - Woodruff, No. 404 .....	1
4	N7411	WASHER - thrust .....	1
5	N9615	GEAR AND SPACER - camshaft .....	1
6	211-216	BALL - 9/16", grade 25 .....	5
7	N9633	CUP - governor .....	1
8	N9632	HUB - governor cup .....	1
9	N9550	RING - snap, hub retaining .....	1

## AIR INTAKE SYSTEM GASOLINE MODELS

REF.	PART NO.	DESCRIPTION	REQ'D.
1	N7449	PLATE - adapter .....	1
2	N9612	GASKET - adapter plate to intake manifold .....	1
3	1959077C1	MANIFOLD - intake .....	1
4	192-19	WASHER - lock, 1/4", plated .....	2
5	113-65	BOLT - hex head, 1/4" - 20 NC x 1-3/8", plated .....	2
6	113-20	BOLT - hex head, 1/4" - 20 NC x 4-3/4", plated .....	4
7	192-20	WASHER - lock, 5/16", plated .....	6
8	N7453	GASKET - intake manifold .....	2
9	113-103	BOLT - hex head, 5/16" - 18 NC x 1", plated .....	2
10	1959079C1	CLAMP - hose, 1/2" universal .....	4
11	1959080C1	FILTER - fuel .....	1
12	1959081C1	HOSE - fuel supply .....	1
13	N9609	CLIP - retaining, control rod to carburetor .....	1
14	N7414	ROD - to carburetor .....	1
15	1959070C1	CARBURETOR ASSEMBLY - parts list page 3-101 .....	1
16	N7463	GASKET - carburetor mounting to adapter .....	1

**FUEL**

	<b>DESCRIPTION</b>	<b>PAGE</b>
CARBURETOR - GASOLINE .....		3-101
ENGINE CONTROLS		
CHOKE - GASOLINE .....		3-103
GOVERNOR		
DIESEL .....		3-89
GASOLINE .....		3-105
SPEED - DIESEL .....		3-87
STOP LEVER - DIESEL .....		3-85
THROTTLE CABLES .....		3-83
FILTER .....		3-97
INJECTION LINES - DIESEL .....		3-81
INJECTION PUMP DRIVE - DIESEL .....		3-91
LINES TO ENGINE .....		3-79
PUMP - FUEL INJECTION - DIESEL .....		3-95
PUMP - GASOLINE .....		3-99
NOZZLE HOLDER - DIESEL .....		3-93

## ENGINE SPEED CONTROL DIESEL MODELS

REF.	PART NO.	DESCRIPTION	REQ'D.
1	1959401C1	SCREW - adjusting, M6 x 55 mm	1
2	1959402C1	NUT - screw adjusting, M6	1
3	1959403C1	GASKET - adjusting screw, 6 x 10 x 1 mm	2
4	1959404C1	NUT - cap, M6	1
5	1959405C1	CAP - adjusting nut	1
6	1959406C1	LEVER - speed control	1
7	1959407C1	KEY - governor lever, see page 3-89 for governor	1
8	1959408C1	O-RING - control plate	1
9	1959409C1	WASHER - plain	1
10	1959410C1	NUT - governor lever	2
11	1959411C1	PLATE - friction	1
12	1959412C1	PLATE - speed control	1
13	1959413C1	GASKET - control plate	3
14	1959215C1	BOLT - speed control plate	3
15	1959204C1	STUD - cover, M6 x 28 mm	1
16	1959205C1	NUT - cover stud, M6	3
17	1959206C1	WASHER - lock	1
18	1959339C1	BOLT - spring return stop, M6 x 30 mm	2
19	NSS	WIRE - seal	1
20	NSS	CONNECTOR - wire	1

**FUEL FILTER  
DIESEL MODELS**

REF.	PART NO.	DESCRIPTION	REQ'D.
	1959638C1	FILTER ASSEMBLY - fuel .....	1
2	NSS	HEAD - filter .....	1
3	1959517C1	ELEMENT - filter .....	1
4	1959518C1	PLUG - filter breather M8 .....	1
5	1959519C1	O-RING - filter breather plug .....	1
6	1959520C1	DECAL - fuel filter .....	1

**ELECTRICAL**

DESCRIPTION	PAGE
ALTERNATOR AND MOUNTING	
DIESEL .....	4-109,4-111
BACKUP ALARM .....	4-143
BATTERY	
DIESEL .....	4-131
GASOLINE .....	4-133
COLD START AID .....	4-145
FRONT HARNESS	
DIESEL .....	4-121
GASOLAINE .....	4-123
GAUGES	
DIESEL .....	4-121
GASOLINE .....	4-123
HORN .....	4-137
IGNITION SYSTEM - GASOLINE .....	4-115
LAMPS AND WIRING	
ROAD - NOT AVAILABLE IN NORTH AMERICA .....	4-139
ROTATING BEACON - NOT AVAILABLE IN NORTH AMERICA .....	4-141
WORK .....	4-135
REAR HARNESS	
DIESEL .....	4-125,4-127
GASOLINE .....	4-129
STARTER ASSEMBLY - DIESEL .....	4-113
STARTER KITS - GASOLINE .....	4-119
STARTER MOUNTING - GASOLINE .....	4-119

**STARTER MOTOR  
GASOLINE MODELS**

REF.	PART NO.	DESCRIPTION	REQ'D.
1	1959098C1	STARTER - engine, see page 4-119 for starter component kits . . . . .	1
2	113-138	BOLT - hex head, 5/16" - 18 NC x 3-1/2", plated . . . . .	2
3	N9561	WASHER - flat, special . . . . .	2

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

## REAR HARNESS DIESEL MODELS

REF.	PART NO.	DESCRIPTION	REQ'D.
31	A22877	BREAKER - circuit, 40 amperes . . . . .	1
32	193-90	WASHER - external tooth lock, No. 8, plated . . . . .	2
33	193-1002	NUT AND LOCK WASHER - No. 8 - 32 NC, plated . . . . .	2
34	192-18	WASHER - lock, 3/16", plated . . . . .	2
35	129-37	NUT - hex, No. 10 - 32 NF, plated . . . . .	2
36	D139701	HARNESS - voltage regulator to alternator . . . . .	1
37	D83885	WASHER - special, copper, at starter . . . . .	1
38	A154283	SENDER - water temperature . . . . .	1
39	193-1000	NUT AND LOCK WASHER - No. 10 - 32 NF, plated . . . . .	1
40	D132280	SWITCH - hydraulic oil temperature . . . . .	1
41	D122404	SENDER - fuel . . . . .	1
42	104812C3	GASKET - fuel sender . . . . .	1
43	D75465	SCREW - special sealing . . . . .	4
44	182-553	SCREW - machine, pan Phillips head, No. 10 - 32 NF x 5/8", plated . . . . .	1
45	L18337	STRAP - tie, harness . . . . .	UAR
46	E99994	WIRE - feed, glow plug, 21-5/8" (550 mm) long . . . . .	1
47	182-516	SCREW - pan, Phillips head, No. 10 - 32 NF x 1/2" . . . . .	2
48	129-77	NUT - square, No. 10 - 32 NF . . . . .	2
49	192-18	WASHER - lock, 3/16", plated . . . . .	2
50	1959634C1	REGULATOR - voltage . . . . .	1

**HORN**

REF.	PART NO.	DESCRIPTION	REQ'D.
1	E99697	HORN - 12 volt .....	1
2	NSS	NUT - horn .....	1
3	E99588	BRACKET - horn mounting .....	1
4	113-410	BOLT - hex head, 1/2" - 13 NC x 1-1/2", plated .....	1
5	192-23	WASHER - lock, 1/2", plated .....	1
6	195-533	WASHER - flat, 1/2", plated .....	1
7	D134075	HARNESS - horn .....	1
8	49566	GROMMET - harness .....	1
9	D134076	HARNESS - horn button .....	1
10	E99895	LEVER - control, loader .....	1
11	E99359	GRIP - right-hand control lever .....	1
12	D91440	SWITCH - button, horn .....	1
13	L18337	STRAP - tie, harness .....	UAR
14	D134077	WIRE - ground .....	1
15	E84910	CLIP - harness .....	2

**POWER TRAIN**

DESCRIPTION	PAGE
AXLES .....	6-171
BELT TENSION CONTROLS .....	6-157
DRIVE BELTS .....	6-155
DRIVE CHAINS .....	6-171
FORWARD AND REVERSE PUMP CONTROL LEVERS AND LINKAGE .....	6-149,6-151
HYDRAULIC DRIVE MOTOR .....	6-169
LOADER CONTROLS .....	6-153
SHEAVES .....	6-155
TIRES .....	6-173
VARIABLE DISPLACEMENT PUMP	
DIESEL .....	6-161,6-163
GASOLINE .....	6-165,6-167
VARIABLE DISPLACEMENT PUMP MOUNTING AND ADAPTING PARTS .....	6-159
WHEELS .....	6-173



## BELT TENSION CONTROLS

REF.	PART NO.	DESCRIPTION	REQ'D.
1	D134270	HANDLE - belt clutch . . . . .	1
2	D128417	GRIP - handle . . . . .	1
3	195-545	WASHER - flat, 3/4", plated . . . . .	1
4	131-83	NUT - hex, self-locking, 3/4" - 10 NC . . . . .	1
5	113-233	BOLT - hex head, 3/8" - 16 NC x 1-3/4", plated . . . . .	1
6	D88214	SPACER - handle . . . . .	1
7	131-938	NUT - hex, self-locking, 3/8" - 16 NC . . . . .	1
	D139326	CABLE ASSEMBLY - control . . . . .	1
8	NSS	CABLE - control . . . . .	1
9	D121608	CLAMP - cable . . . . .	2
10	D78423	CLEVIS - cable . . . . .	1
11	129-122	NUT - hex, 5/16" - 24 NF, plated . . . . .	2
12	R46103	SPACER - clutch cable . . . . .	1
13	113-233	BOLT - hex head, 3/8" - 16 NC x 1-3/4", plated . . . . .	2
14	D77920	PLATE - spacer . . . . .	1
15	131-938	NUT - hex, self-locking, 3/8" - 16 NC . . . . .	2
16	E20029	BRACKET - cable mounting . . . . .	1
17	113-208	BOLT - hex head, 3/8" - 16 NC x 1-1/4", plated . . . . .	4
18	95-6	WASHER - flat, 3/8" . . . . .	4
19	492-11038	WASHER - lock, 3/8", zinc plated . . . . .	4
20	129-103	NUT - hex, 3/8" - 16 NC, plated . . . . .	4
	D123215	LINK ASSEMBLY - control . . . . .	2
21	D123214	LINK - control . . . . .	1
22	D78229	BUSHING - small . . . . .	1
23	D78233	BUSHING - large . . . . .	1
24	T28521	SPACER - link assembly (replaces T28521) . . . . .	2
25	D134736	SPRING - tension . . . . .	1
26	141-53	PIN - clevis, 5/16", plated . . . . .	1
27	132-331	PIN - cotter, 3/32" x 5/8", plated . . . . .	1
28	D59922	JOINT - ball, 3/8" - 24 NF . . . . .	1
29	492-11038	WASHER - lock, 3/8", zinc plated . . . . .	1
30	129-103	NUT - hex, 3/8" - 16 NC, plated . . . . .	1
31	129-163	NUT - hex, jam, 3/8" - 24 NF, plated . . . . .	1
32	113-250	BOLT - hex head, 3/8" - 16 NC x 2-1/2", plated . . . . .	2
33	25-146	NUT - hex, self-locking, 3/8" - 16 NC . . . . .	2
34	49838	CLAMP - control cable, uses existing hardware to mount pump mounting shaft on left-hand side of machine . . . . .	1

**VARIABLE DISPLACEMENT PUMP  
GASOLINE MODELS ONLY**

REF.	PART NO.	DESCRIPTION	REQ'D.
	D136764	PUMP ASSEMBLY - variable displacement, continued from page 6-165	1
29	N7061	PLUG - relief valve	2
30		RESERVED	
31	218-5004	O-RING - relief valve	2
32	D63406	SHIM - relief valve	1
33	D63407	SPRING - relief valve	1
34	D63410	POPPET - relief valve	1
	H619858	KIT - charge pump	1
35	W15848	O-RING - charge pump	1
36	N72062	GEROTOR - charge pump	1
37	N7060	PIN - charge pump	1
38	N7059	HOUSING - charge pump	1
39	D65128	BEARING - needle, charge pump	1
40	A50421	SEAL - oil	1
41	113-113	BOLT - hex head, 5/16" - 18 NC x 7/8", plated	4
42	D65127	KEY - axial	1
43	218-5155	PLUG - hex head	2
44	237-6006	O-RING - plug	1
45	D63408	SHAFT - trunnion	1

**NOTE:** For pump mounting see page 6-159,

## PARKING LATCH AND OPERATORS RESTRAINTS

REF.	PART NO.	DESCRIPTION	REQ'D.
1	E99886	COVER - operator restraint bars . . . . .	2
2	E20179	BAR - right-hand operator restraint (replaces E99884) . . . . .	1
3	E20180	BAR - left-hand operator restraint (replaces E99885) . . . . .	1
4	121-125	BOLT - shoulder, hex head, 5/16" - 18 NC . . . . .	2
5	D134922	WASHER - special, at restraint bar . . . . .	2
5A	H426775	WASHER - special, at restraint bar . . . . .	2
6	131-1215	NUT - hex, self-locking, 5/16" - 18 NC, plated . . . . .	2
7	E20178	PLATE - locking, operator restraint bar . . . . .	2
8	113-102	BOLT - 5/16" - 18 NC x 3/4", plated . . . . .	2
9	195-521	WASHER - plain, 5/16", plated . . . . .	2
10	131-4	NUT - self-locking, 5/16" . . . . .	2
11	D134923	CAP - bolt . . . . .	2
12	D131228	LATCH - right-hand . . . . .	1
13	D131229	LATCH - left-hand . . . . .	1
14	D134924	GRIP - vinly, latch . . . . .	2
15	D131233	BRACKET - right-hand mounting . . . . .	1
16	D131234	BRACKET - left-hand mounting . . . . .	1
17	113-102	BOLT - hex head, 5/16" - 18 NC x 3/4", plated . . . . .	4
18	195-521	WASHER - flat, 5/16", plated . . . . .	2
19	131-931	NUT - hex, flange type, special locking, 5/16" - 18 NC . . . . .	4
20	113-209	BOLT - hex head, 3/8" - 16 NC x 1-1/2", plated . . . . .	2
21	195-525	WASHER - flat, 3/8", plated . . . . .	2
22	H270777	SPACER - at latch . . . . .	2
23	D44352	BUSHING - at latch . . . . .	2
24	D134464	SPRING - latch . . . . .	2
25	131-217	NUT - hex, self-locking, 3/8" - 16 NC, plated, grade 8 . . . . .	2
26	H169920	JOINT - ball, 1/4" - 28 NF . . . . .	2
27	129-121	NUT - hex, 1/4" - 28 NF, plated . . . . .	2
28	D128666	CABLE - right-hand, lock . . . . .	1
29	E99995	CABLE - left-hand, park . . . . .	1
30	192-19	WASHER - lock, 1/4", plated . . . . .	2
31	129-121	NUT - hex, 1/4" - 28 NF, plated . . . . .	2
32	D124466	RETAINER - cable . . . . .	3
33	D95743	SPACER - cable pulley . . . . .	3
34	131-217	NUT - hex, self-locking, 3/8" - 16 NC, plated, grade 8 . . . . .	3
35	D124465	PULLEY - cable . . . . .	3
36	113-209	BOLT - hex head, 3/8" - 16 NC x 1-1/2", plated . . . . .	3
37	141-53	PIN - clevis, 5/16", plated . . . . .	2
38	132-330	PIN - cotter, 3/32" x 1/2", plated . . . . .	2

Continued on next page

## LOADER CONTROL VALVE

REF.	PART NO.	DESCRIPTION	REQ'D.
	D139830	VALVE - control, loader, two spool .....	1
1	NSS	BODY - valve .....	1
2	NSS	SPOOL - A port, loader lift .....	1
3	H138271	RETAINER - spring .....	1
4	F59118	SPRING - spool centering .....	1
5	F59116	RETAINER - spring .....	1
6	H139071	SCREW - special .....	1
7	NSS	SPOOL - B port, loader bucket .....	1
8	H52902	RETAINER - spring .....	1
9	F8235	WASHER - special, .062" (1.575 mm) thick .....	1
10	H746164	WASHER - special, .156" (3.962 mm) thick .....	1
11	F59118	SPRING - spool centering .....	1
12	F59116	RETAINER - spring .....	1
13	A27804	RING - retaining, bucket spool .....	1
14	F37887	O-RING - valve body, spool eye end .....	2
15	A7982	O-RING - valve body, detent and relief end .....	2
16	61-416	BOLT - hex socket head, 1/4" - 20 NC x 1" .....	2
17	192-19	WASHER - lock, 1/4", plated .....	2
18	H125831	BLOCK - detent .....	1
19	H424200	PLUG - detent .....	1
20	H105049	SPRING - detent .....	2
21	H104992	PAWL - detent .....	2
22	D73659	RESTRICTOR - valve port, if used .....	1
23	H47506	PLUG ASSEMBLY - load check valve .....	2
24	N8537	O-RING - plug .....	1
25	FH730374	SPRING - load check valve .....	2
26	FH730366	POPPET - load check valve .....	2
	N14623	VALVE ASSEMBLY - relief, control valve .....	1
27	NSS	VALVE - relief, control valve .....	1
28	L33215	O-RING - large .....	1
29	N9711	RING - backup, small O-ring .....	1
30	F10894	O-RING - small .....	1
31	H94219	PLUG ASSEMBLY - hex head .....	1
32	L33215	O-RING - plug .....	1
	N14624	PLUG ASSEMBLY - control valve .....	2
33	NSS	PLUG - control valve .....	1
34	369908R1	O-RING - large .....	1
35	A64436	O-RING - small .....	1
36	N7319	RING - backup, small o-ring .....	1

**HYDRAULIC OIL FILTER**

REF.	PART NO.	DESCRIPTION	REQ'D.
	D139372	FILTER ASSEMBLY - hydraulic oil .....	1
1	NSS	BODY - filter .....	1
2	D126921	ELEMENT - filter .....	1
3	NSS	VALVE - bypass, not shown .....	1

**EQUIPMENT HYDRAULIC PUMP  
GASOLINE MODELS ONLY**

REF.	PART NO.	DESCRIPTION	REQ'D.
	D136386	PUMP ASSEMBLY - hydraulic, equipment . . . . .	1
1	* H83733	SEAL - shaft . . . . .	1
2	N14628	COVER - port end . . . . .	1
3	N14632	COVER - drive end . . . . .	1
	N14630	HOUSING ASSEMBLY - gear, hydraulic pump . . . . .	1
4	NSS	BODY - hydraulic pump . . . . .	1
5	71120	PIN - dowel, body . . . . .	2
	N14631	GEAR ASSEMBLY - hydraulic pump . . . . .	1
6	NSS	GEAR - driven, hydraulic pump . . . . .	1
7	NSS	GEAR - drive, hydraulic pump . . . . .	1
8	* H758599	O-RING - hydraulic pump . . . . .	2
9	166-31	BOLT - Ferry head, 5/16" - 18 NC x 2-1/4", grade 8 . . . . .	8
10	* N13135	WASHER - special . . . . .	1
11	* NSS	WEAR PLATE - pump . . . . .	1
12	* NSS	RING - backup, seal . . . . .	1
13	* NSS	SEAL - hydraulic pump . . . . .	1
14	* NSS	RETAINER - seal . . . . .	1
	* N13136	KIT - repair, seal, includes all items with an asterisk. . . . .	1

## LOADER LIFT FRAME

REF.	PART NO.	DESCRIPTION	REQ'D.
1	REF	CHASSIS - 1818 Uni-Loader, see page 9-215 for chassis and related parts . . .	1
2	D138889	PIN - lift cylinder to loader lift frame . . . . .	2
3	26-1696	BOLT - hex head, 1" - 8 NC x 6", grade 8 . . . . .	4
4	195-553	WASHER - flat, 1", plated . . . . .	4
5	131-698	NUT - hex, self-locking, 1" - 8 NC, plated . . . . .	4
6	D136838	CYLINDER ASSEMBLY - lift, parts list page 8-189 . . . . .	2
7	D134253	PIN - strut lock . . . . .	1
8	136-159	PIN - hair, internal type, 3/16" x 1-27/64", plated . . . . .	1
9	49566	GROMMET - strut . . . . .	1
10	E20314	PAD - strut, lift arm (replaces D79692) . . . . .	1
11	H672851	STRUT - loader arm support . . . . .	1
12	D138888	PIN - bucket tilt cylinder to loader lift frame . . . . .	2
13	D71829	RING - snap, pin . . . . .	8
14	D49345	WASHER - flat, 7/8" . . . . .	8
15	D138710	FRAME - loader lift . . . . .	1
16	D136128	CYLINDER ASSEMBLY - bucket tilt, parts list page 8-191 . . . . .	2
17	219-20	FITTING - grease, straight, 1/4" - 28 NF . . . . .	2
20	E20140	PIN - strut lock (TBG) Germany . . . . .	1
21	E99860	EYE - wire, cable end 0.BA (TBG) Germany . . . . .	1
22	E99858	EYE - wire, cable end . . . . .	1
23	E98861	WIRE - nylon coated (TBG) Germany . . . . .	1
24	NSS	STUD - M6 x 16 mm long . . . . .	1
25	895-11006	WASHER - flat, 6 mm, plated . . . . .	2
26	825-1106	NUT - hex, 6 mm - 1, plated . . . . .	2
27	E82545	CAP - grease fitting (TBG) Germany . . . . .	10

**NOTE:** For tilt cylinder mounting to bucket used without tool tach see pager 9-219. For tilt cylinder mounting to tool tach see page 9-227.

## TOOL TACH

REF.	PART NO.	DESCRIPTION	REQ'D.
1	D138771	TOOL - tach, equipment . . . . .	1
2	D138890	PIN - tilt cylinder rod . . . . .	2
3	26-532	BOLT - hex head, 5/16" - 18 NC x 2", grade 8 . . . . .	2
4	131-176	NUT - hex, self-locking, 5/16" - 18 NC, plated . . . . .	2
5	D138891	PIN - tach pivot . . . . .	2
6	26-640	BOLT - hex head, 3/8" - 16 NC x 2-1/2", grade 8 . . . . .	2
7	131-217	NUT - hex, self-locking, 3/8" - 16 NC, plated, grade 8 . . . . .	2
8	113-209	BOLT - hex head, 3/8" - 16 NC x 1-1/2", plated . . . . .	2
9	195-525	WASHER - flat, 3/8", plated . . . . .	2
10	492-11038	WASHER - lock, 3/8", zinc plated . . . . .	2
11	129-103	NUT - hex, 3/8" - 16 NC, plated . . . . .	2
12	D138932	BLOCK - bucket aligning . . . . .	2

## DELUXE NOISE KIT DIESEL MODELS ONLY

REF.	PART NO.	DESCRIPTION	REQ'D.
1	E99919	LINER - roof interior . . . . .	1
2	E20236	LINER - roof exterior . . . . .	1
3	E99640	FASTENER - bonded, 50 mm long . . . . .	6
4	E99794	TAPE - self adhesive, 1 inch wide . . . . .	6
5	E99641	CAP - bonded fastener . . . . .	6
6	E99917	PAD - engine, firewall . . . . .	1
7	E20217	PAD - engine, firewall . . . . .	1
8	E99923	PAD - engine, firewall . . . . .	1
9	E20235	FASTENER - bonded . . . . .	6
10	E99794	TAPE - self adhesive, 1 inch wide . . . . .	6
11	E99641	CAP - bonded fastener . . . . .	6
12	E20102	PAD - seat plate . . . . .	1
13	E99918	PAD - seat plate . . . . .	1
14	E20216	PAD - seat plate . . . . .	1
15	E99639	FASTENER - bonded, 20 mm long . . . . .	2
16	E99794	TAPE - self adhesive, 1 inch wide . . . . .	2
17	E99641	CAP - bonded fastener . . . . .	2
18	113-2225	BOLT - hex head, 3/8" - 16 NC x 1-3/8", plated . . . . .	4
19	195-258	WASHER - flat, 3/8", plated . . . . .	4
20	192-21	WASHER - lock, 3/8", plated . . . . .	4
21	E99940	STRIP - retaining, special . . . . .	4
22	E99913	PAD - seat plate . . . . .	1
23	E20100	PAD - heel plate . . . . .	1
24	E99912	PAD - heel plate . . . . .	1
25	E99914	PAD - heel plate . . . . .	1
26	E20208	SCREEN - glazed, rear . . . . .	1
27	E20210	CHANNEL - rear screen . . . . .	1
28	E20233	COVER - equipment pump, upper . . . . .	1
29	113-103	BOLT - hex head, 5/16" - 18 NC x 1", plated . . . . .	2
30	195-521	WASHER - flat, 5/16", plated . . . . .	2
31	131-69	NUT - hex, self-locking, 5/16" - 18 NC, plated . . . . .	2
32	E20234	COVER - equipment pump, lower . . . . .	1
33	195-521	WASHER - flat, 5/16", plated . . . . .	3
34	192-20	WASHER - lock, 5/16", plated . . . . .	3

## DECALS - ENGLISH

REF.	PART NO.	DESCRIPTION	REQ'D.
	REF	KIT - decal, part numbers to be released when available . . . . .	1
1	H434959	DECAL - 1818 . . . . .	2
2	D123964	DECAL - Uni-Loader . . . . .	2
3	D139402	DECAL - Case, left-hand . . . . .	1
4	D139403	DECAL - Case, right-hand . . . . .	1
5	321-2973	DECAL - torque wheel nuts . . . . .	2
6	321-4954	DECAL - warm-up instruction, hydrostatic . . . . .	1
7	321-4414	DECAL - belt/clutch . . . . .	1
8	321-6375	DECAL - gasoline . . . . .	1
9	H434891	DECAL - hydraulic fluid, use SAE 10-W-30 oil . . . . .	1
10	D120889	DECAL - Warning, do not place any part of body . . . . .	1
11	D124209	DECAL - ignition switch . . . . .	1
12	321-1061	DECAL - Do Not Attempt to Polarize Alternator . . . . .	1
13	321-6672	DECAL - Warning, check and service cooling system . . . . .	1
14	321-6686	DECAL - Warning, rotating fan . . . . .	1
15	321-6374	DECAL - diesel fuel . . . . .	1
16	D134678	DECAL - Warning, if you service the machine with loader lift arms raised . . .	1
17	E84716	DECAL - throttle . . . . .	1
18	D134679	DECAL - parking latch and operator restraints . . . . .	1
19	D124236	DECAL - Case, rear door . . . . .	1
20	321-6718	DECAL - Warning, wrong jumper cable connections to starter terminals . . . .	1
21	321-6714	DECAL - Warning, batteries contain acid and explosive gas . . . . .	1
22	321-6460	DECAL - Warning, before starting engine, etc . . . . .	1
23	H435037	DECAL - HTO additive is required for the hydraulic system . . . . .	1
24	321-4739	EMBLEM - Case, on grille . . . . .	1
25	131-431	NUT - push on type, 1/4", plated . . . . .	2

## NUMERICAL INDEX

PART NO.	PAGE	REF	PART NO.	PAGE	REF	PART NO.	PAGE	REF
1959456C1	91	3	1959524C1	245	4	1959579C1	93	10
1959457C1	91	4	1959526C1	245	5	1959580C1	93	10
1959458C1	91		1959527C1	245	6	1959581C1	93	10
1959459C1	91	8	1959529C1	95	3	1959582C1	109	5
1959460C1	91	9	1959530C1	95	4	1959583C1	111	
1959461C1	91	10	1959531C1	95	5	1959584C1	111	
1959462C1	91	11	1959532C1	95	6	1959585C1	111	
1959463C1	91	12	1959533C1	95	7	1959586C1	111	5
1959464C1	91	13	1959534C1	95	8	1959586C1	111	11
1959465C1	91	14	1959535C1	95	9	1959587C1	113	1
1959466C1	91	15	1959536C1	95	10	1959588C1	113	4
1959467C1	91	16	1959537C1	95	11	1959589C1	113	5
1959468C1	91	17	1959538C1	95	12	1959590C1	113	6
1959473C1	91	19	1959539C1	95	13	1959591C1	113	7
1959474C1	91	20	1959540C1	95	14	1959592C1	113	8
1959475C1	91	21	1959541C1	95	15	1959593C1	113	9
1959476C1	45	18	1959542C1	95	16	1959594C1	113	11
1959476C1	91	22	1959543C1	95	17	1959595C1	113	14
1959478C1	91	23	1959544C1	95	18	1959596C1	113	18
1959479C1	91	24	1959545C1	95	19	1959597C1	113	20
1959480C1	91	25	1959546C1	95	20	1959617C1	109	7
1959481C1	91	26	1959547C1	95	21	1959634C1	127	50
1959482C1	91	29	1959548C1	95	22	1959636C1	25	29
1959484C1	91	30	1959549C1	95	23	1959636C1	145	1
1959486C1	91	32	1959553C1	93	2	1959638C1	97	
1959487C1	91	33	1959554C1	93	3	A7982	187	15
1959488C1	91		1959555C1	93	4	A7982	203	11
1959490C1	91	36	1959556C1	93	5	A11538	231	26
1959493C1	109	1	1959557C1	93	6	A17526	199	43
1959494C1	109	2	1959558C1	93	7	A21561	79	
1959498C1	45		1959559C1	93	8	A22877	127	31
1959500C1	45	2	1959560C1	93	9	A26462	151	53
1959501C1	45	3	1959561C1	93	10	A27072	131	7A
1959502C1	45	4	1959562C1	93	10	A27072	133	7A
1959503C1	45	5	1959563C1	93	10	A27365	199	42
1959505C1	45	7	1959564C1	93	10	A27804	187	13
1959506C1	45	8	1959565C1	93	10	A27804	203	6
1959507C1	45	11	1959566C1	93	10	A28319	171	19A
1959509C1	45	13	1959567C1	93	10	A29062	171	6
1959511C1	45	14	1959568C1	93	10	A29062	171	8
1959512C1	45	15	1959569C1	93	10	A29063	171	22
1959513C1	45	17	1959570C1	93	10	A30058	149	21
1959514C1	45	19	1959571C1	93	10	A30058	153	13
1959517C1	97	3	1959572C1	93	10	A30881	149	3
1959518C1	97	4	1959573C1	93	10	A30881	149	31
1959519C1	97	5	1959574C1	93	10	A30881	151	47
1959520C1	97	6	1959575C1	93	10	A30881	153	18
1959521C1	245	1	1959576C1	93	10	A30881	153	26
1959522C1	245	2	1959577C1	93	10	A30881	153	40
1959523C1	245	3	1959578C1	93	10	A33699	153	39

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL