

FRUTTETO II 55

ACCESSORIES

GENERAL

FRONT REMOTE CONTROL VALVE.....	0E.00.1
4-WAY AUXILIARY DISTRIBUTOR - FRONT.....	0E.00.2
2-WAY AUXILIARY DISTRIBUTOR.....	0E.00.3
4-WAY AUXILIARY DISTRIBUTOR.....	0E.00.4
6-WAY AUXILIARY DISTRIBUTOR.....	0E.00.5
6-WAY AUXILIARY DISTRIBUTOR.....	0E.00.6
6-WAY AUXILIARY DISTRIBUTOR - FOR MODELS WITH TWO PUMPS.....	0E.00.7
6-WAY AUXILIARY DISTRIBUTOR - FOR MODELS WITH TWO PUMPS.....	0E.00.8
GUARD.....	0E.00.9
2-WAY AUXILIARY DISTRIBUTOR.....	0E.00.10
4-WAY HYDRAULIC CONTROL VALVE.....	0E.00.11
6-WAY AUXILIARY DISTRIBUTOR.....	0E.00.12
6-WAY AUXILIARY DISTRIBUTOR - FOR MODELS WITH TWO PUMPS.....	0E.00.13
2-WAY REMOTE CONTROL VALVE.....	0E.00.14
4 WAY SPOOL VALVES CONTROL - FRONT.....	0E.00.15
KNOBS FOR 4-WAY AUXILIARY SERVICES CONTROL VALVE.....	0E.00.16
4 WAY SPOOL VALVES CONTROL.....	0E.00.17
6 WAY SPOOL VALVES CONTROL - FOR MODELS WITH TWO PUMPS.....	0E.00.18
6 WAY SPOOL VALVES CONTROL - FOR MODELS WITH ONE PUMP.....	0E.00.19
6 WAY SPOOL VALVES CONTROL - FOR MODELS WITH ONE PUMP.....	0E.00.20
3 POINT HITCH.....	0E.00.21
3-POINT LINKAGE WITH AUTOMATIC COUPLERS.....	0E.00.22
3 POINT HITCH - LIFTING ARMS.....	0E.00.23
3 POINT HITCH - LIFTING ARMS.....	0E.00.24
3-POINT HITCH - ADJUSTABLE RH RODS.....	0E.00.25
3-POINT HITCH WITH HYDRAULIC LIFT ROD.....	0E.00.26
THREE-POINT COUPLING - STABILIZATION.....	0E.00.27
3-POINT HITCH - SIDE STABILIZERS.....	0E.00.28
THREE-POINT HITCH - AUTOMATIC LATERAL STABILIZERS.....	0E.00.29
THREE-POINT HITCH - AUTOMATIC LATERAL STABILIZERS.....	0E.00.30
TOWING BAR 1 cat.....	0E.00.31
TOWING BAR 2 cat.....	0E.00.32
FRONT TOWING HITCH.....	0E.00.33
FRONT TOWING HITCH.....	0E.00.34
REAR TOWING HITCH.....	0E.00.35
REAR TOWING HITCH CAT. " D ".....	0E.00.36
REAR TOWING HITCH CAT: "D2".....	0E.00.37
REAR OSCILLATING HITCH.....	0E.00.38
REAR TOWING HITCH CRAMER.....	0E.00.39
FRONT BALLAST.....	0E.00.40

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


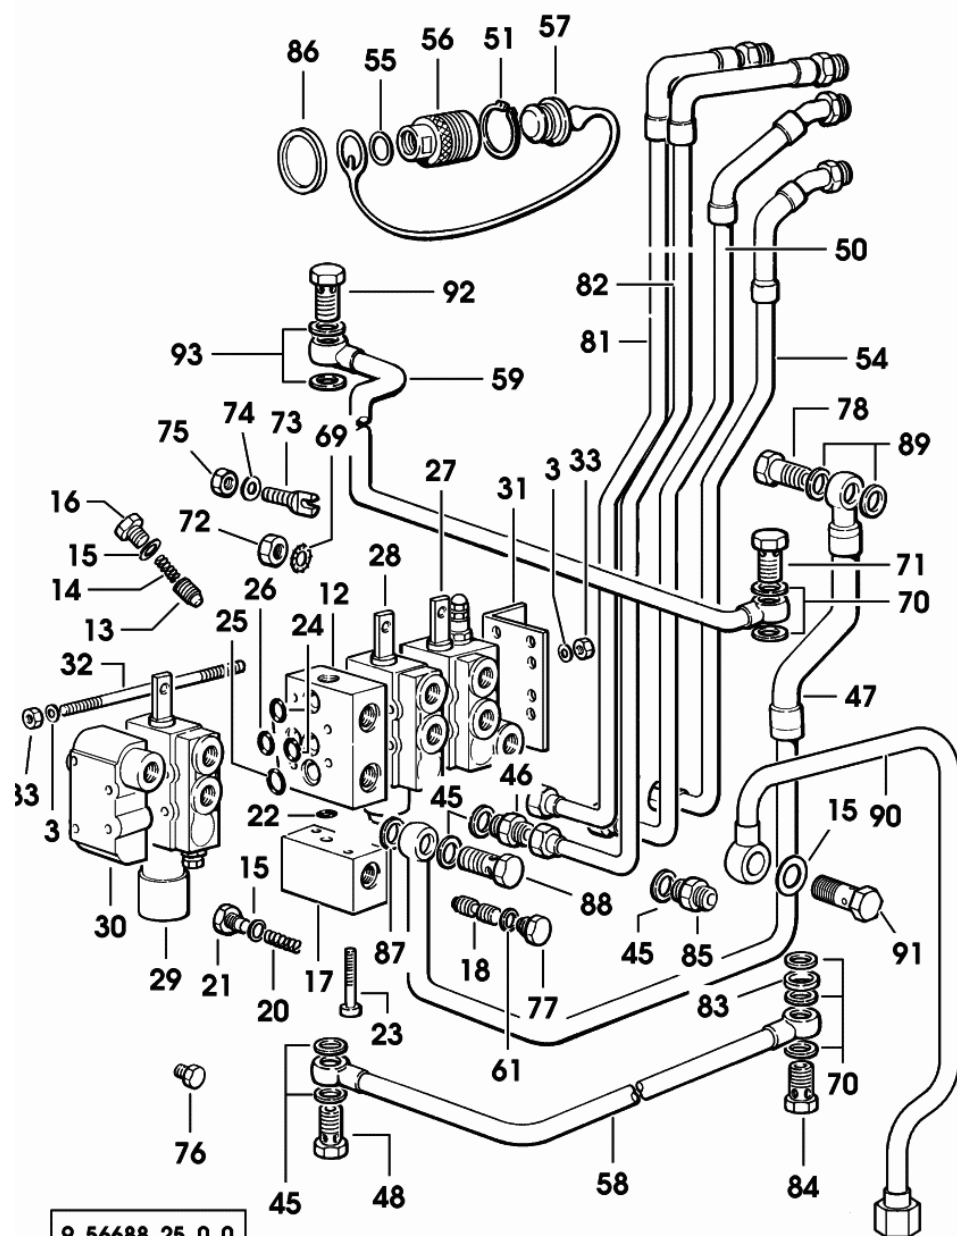
6-WAY AUXILIARY DISTRIBUTOR - FOR MODELS WITH TWO PUMPS

Fig.	Code	QTY	Name
54	0.009.8397.3/30	1	tube
55	2.1560.054.0	4	gasket 21 x 26
56	0.98309.50.3/10	4	coupling
			COMPONENT PARTS SEE COMPONENTS LIST
			☞ 0.98309.50.3/10
			☞ 0E.00.83
57	0.013.7997.0	4	plug
58	0.007.3888.3/20	1	exhaust
59	0.007.3889.3/30	1	tube
61	2.1560.005.0	1	gasket 10.2 x 14
69	2.1470.007.2	2	lock washer 12
70	2.1560.018.0	5	gasket 22.2 x 29
71	2.3335.009.2	1	pipe union m 22 p.1.5 x 39
72	2.1011.422.2	2	nut m 12 p.1.25
73	0.007.3919.0/20	3	pin
74	2.1310.004.2	3	flat washer 8.5
75	2.1120.005.2	3	nut m 8 p.1.25
76	2.3110.401.1	1	plug m 10 p.1x8
77	2.3199.212.2	1	plug m 14x1.5
78	2.3335.008.2	1	pipe union m 18 p.1.5 x 32
81	0.009.8401.3/30	1	tube
82	0.009.8402.3/30	1	tube
83	2.1579.926.2	1	spacer 22.5x26x5
84	2.3335.056.2	1	pipe union m 22 p.1.5 x 50
85	2.3261.010.2	1	pipe fitting m 18 p.1.5 - 7/8" 14
86	2.1599.533.2	4	shim 38.5x52x2
87	2.1569.158.0	1	gasket 18.2 x 24 x 6.5
88	2.3335.055.2	1	pipe union m 18 p.1.5
89	2.1569.185.0	2	gasket
90	0.011.6354.3	1	tube
91	2.3335.006.2	1	pipe union m 14 p.1.5x24
92	0.011.6713.4	1	valve
93	2.1560.020.0	2	gasket 24.3x32

9_56688_25_0_0

4 WAY SPOOL VALVES CONTROL


Fig.	Code	QTY	Name
1	0.007.5562.0	2	coupling
2	0.007.5561.0	2	knob
3	0.007.3943.3/40	1	lever
3.2	2.1559.243.0	1	bushing 12x16x15
5	2.1310.007.2	2	flat washer 13.5
6	2.1410.002.1	2	circlip 12
7	2.1430.007.7	3	circlip 6, d128
8	0.007.3947.0/10	1	rod
9	0.007.3946.0/40	1	rod
13	2.1011.105.2	4	nut m 8 p.1.25
19	0.009.8175.0/10	2	bellows
20	2.1481.060.2	2	washer 12
21	2.1310.004.2	5	flat washer 8.5
22	2.3199.113.0	1	plug 31.5x8.5
26	0.007.3951.3/10	1	lever
27	0.007.3949.3/40	1	lever
27.2	2.1559.243.0	1	bushing 12x16x15
28	2.9929.413.0	1	plate 2
29	2.9929.414.0	1	plate 3

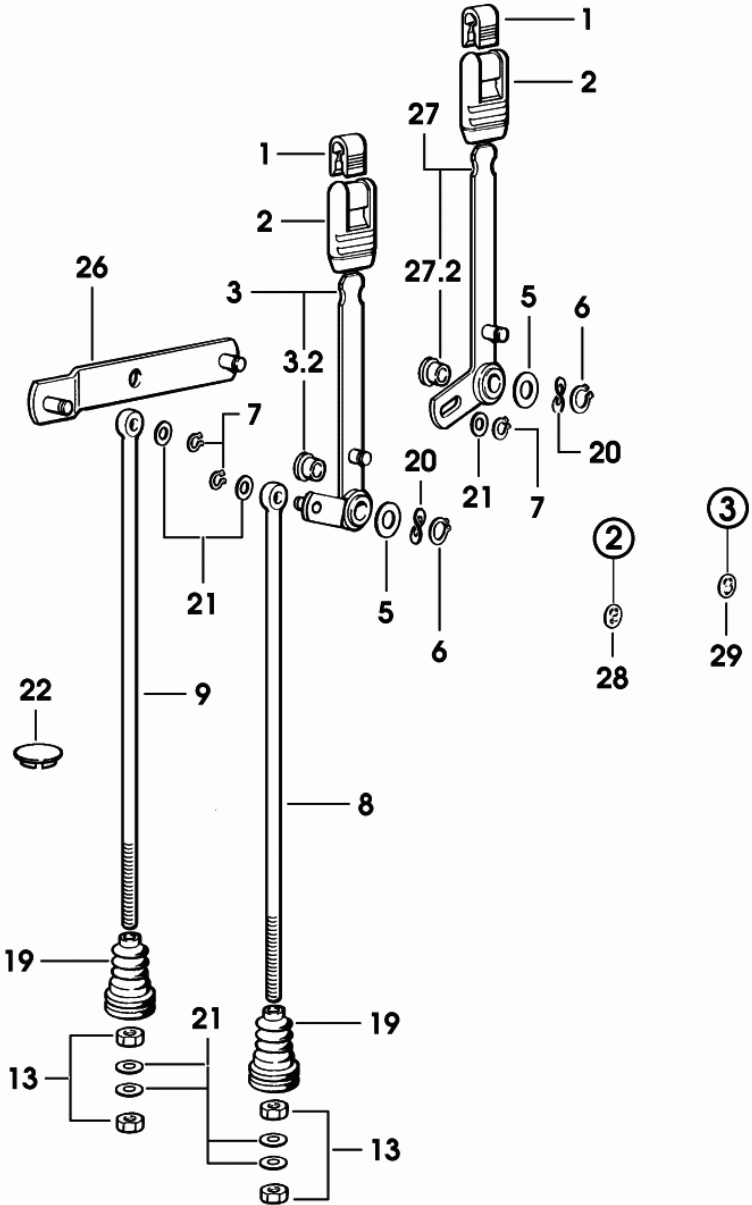

9_56688_30_0_0

3-POINT HITCH WITH HYDRAULIC LIFT ROD

Fig.	Code	QTY	Name
1	0.007.3999.4/30	1	adjustable tensioner COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.007.3999.4/30 ☞ 0E.00.93
2	0.008.8469.2	1	pin
3	2.1011.107.2	1	nut m 12 p.1.75
4	0.479.5868.0/10	1	pin mm 24
5	0.011.0889.0	1	small plate
6	2.1120.210.2	1	selflock nut m 18 p.1.5
7	0.98309.51.3/10	2	coupling 1/2
8	2.1560.054.0	2	gasket 21 x 26
9	2.1560.010.0	5	gasket 14.2 x 20 x 1.5
10	2.1549.011.2	1	spacer
11	0.011.7539.3	2	tube
13	2.3339.551.2/10	1	pipe union m 14 p.1.5x51
14	2.3332.004.1	1	pipe union m 14 p.1.5 x 27
16	0.98503.67.0	3	clamp


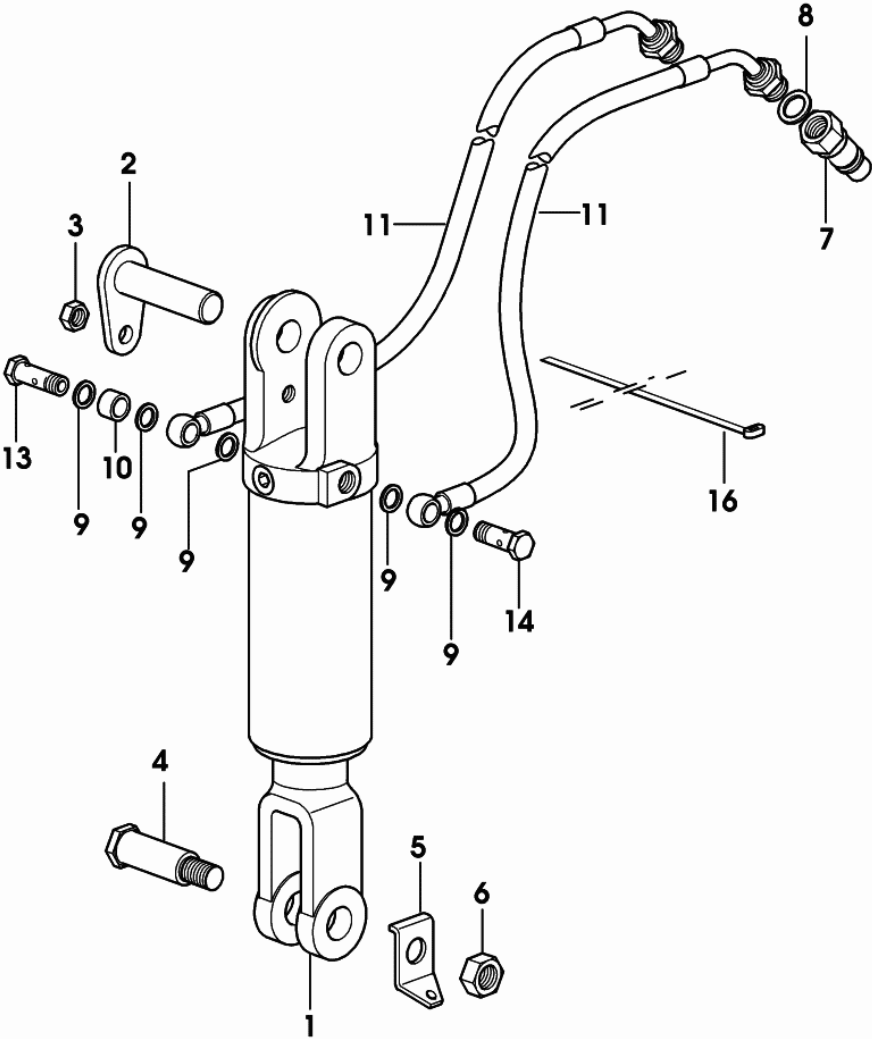


9_56658_14_0_0

Section: ACCESSORIES

TOOL POUCH


Fig.	Code	QTY	Name
1	9.59273.00.0	1	small tool box

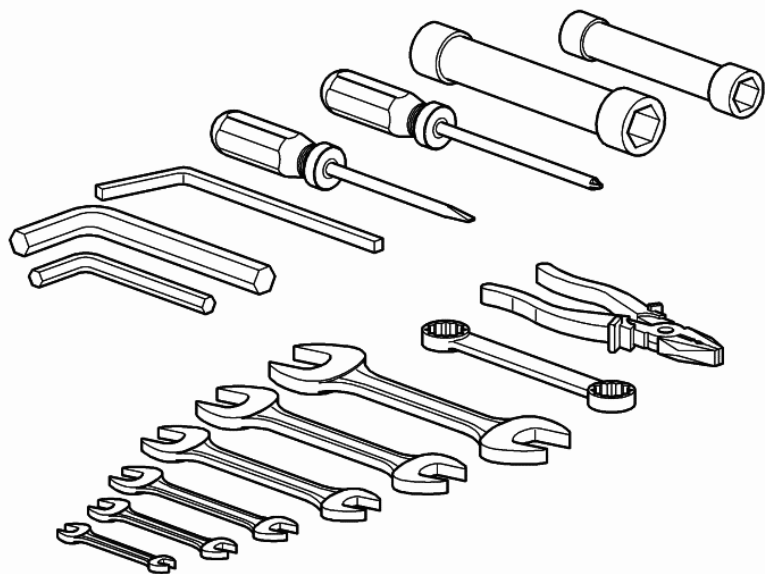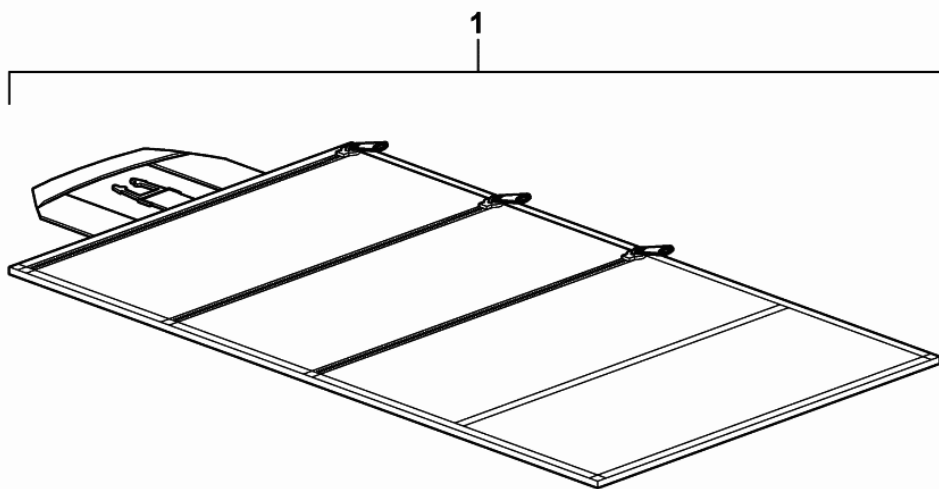

9_59273_00_0_0

Section: BODY WORK
HOOD - LEFT SIDE PANEL

Fig.	Code	QTY	Name
1	0.000.0000.1	0	not serviceable
1.1	0.013.1153.5	1	lift hand side panel
1.2	0.013.2829.0	1	grille sx/lh/li
1.3	0.010.1975.3	1	grille sx/lh/li
2	0.013.8654.0	1	panel sx/lh/li
3	0.009.0829.2	1	plate design giugiaro
4	0.270.7228.2	1	plate SAME
			1122 <- X FRUTTETO II 55
			1152 <- X FRUTTETO II 70

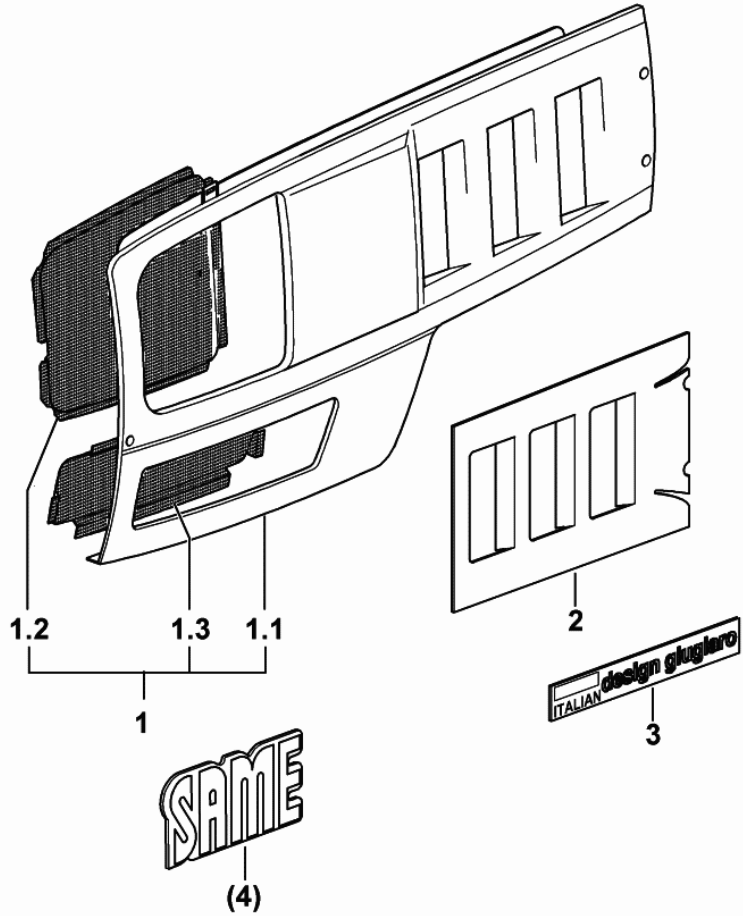


9_B5572_02_0_0

Section: BODY WORK

HOOD - SUPPORTS


Fig.	Code	QTY	Name
23	2.1470.004.2	2	washer 8
37	0.011.3639.0/10	2	pin m 8 p.1.25
38	2.1011.105.2	2	nut m 8 p.1.25
39	2.4019.619.0	6	spring
40	2.1310.001.2	6	flat washer 5.3
41	2.1120.001.2	6	selflock nut m 4 p.0.7

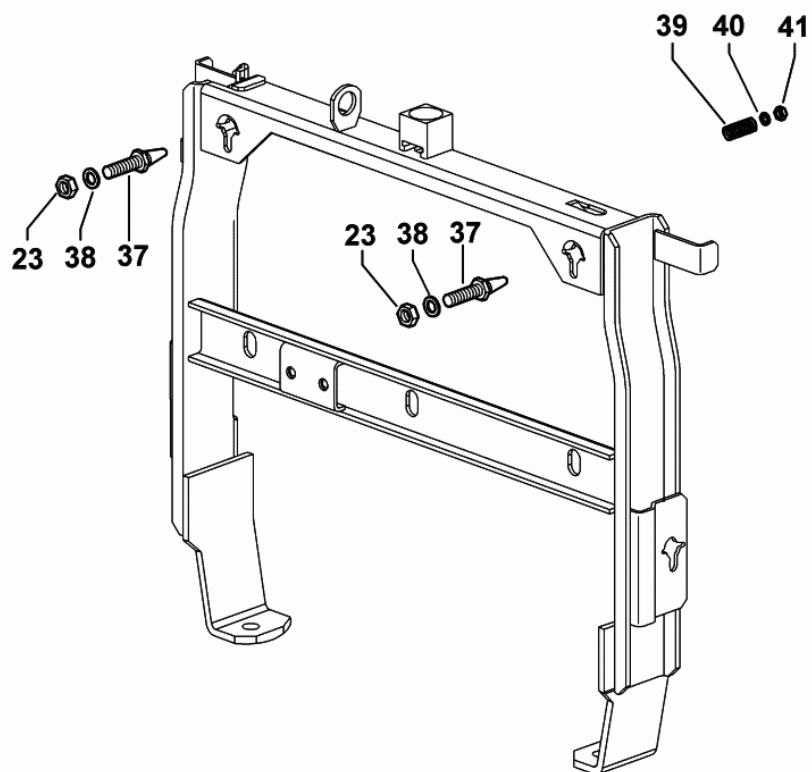

9_D4172_02_0_0

Section: BODY WORK
ACCELERATOR CONTROL DEVICE - MANUAL ENGINE STOP

Fig.	Code	QTY	Name
1	0.467.6722.0	1	knob
2	2.0322.406.6	1	screw m 6 p.1.0 x 16
3	2.0342.207.6	1	screw m 6 p.1 x 25
4	2.0342.208.3	1	screw m 6 p.1x30
5	0.014.0543.2	1	lever
6	0.014.0542.0	1	lever
7	2.1430.004.7	2	circlip 3.2
8	2.1310.001.2	2	flat washer 5.3
9	2.6569.018.0	1	wire guide 20 x 8 x 15
10	0.007.3800.3/10	1	rod

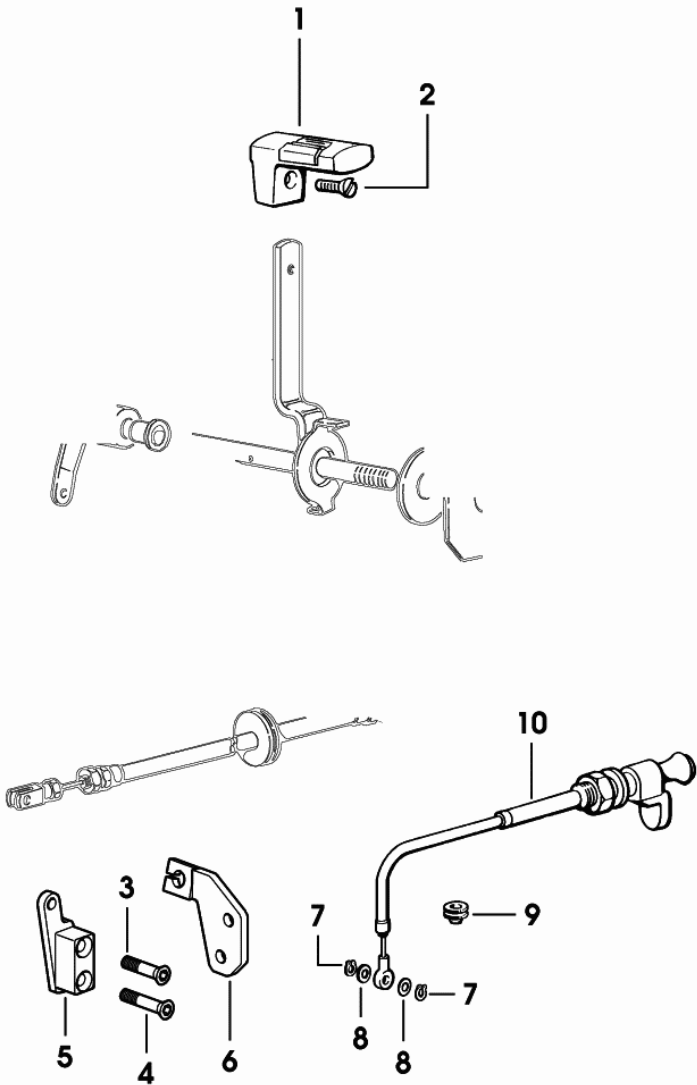

9_D7667_04_0_0

FRONT FENDER SUPPORT - FOR TYPES WITHOUT SAFETY FRAME


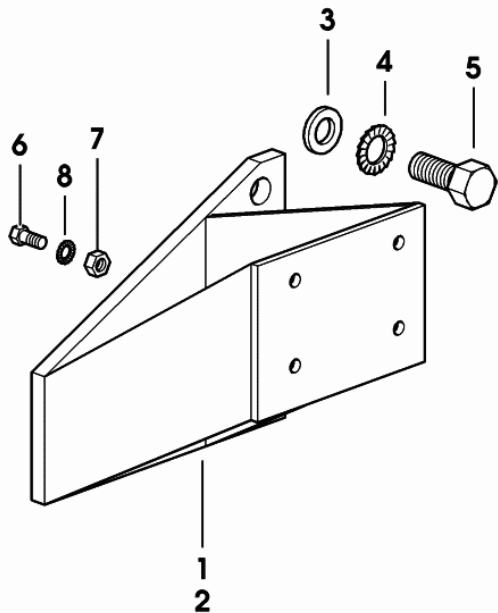


Fig.	Code	QTY	Name
1	0.009.8752.2/20	1	bracket dx/rh/re
2	0.009.8751.2/10	1	bracket sx/lh/li
3	2.1310.010.2	4	flat washer 16
4	2.1470.009.2	4	lock washer 16
5	2.0112.613.2	4	screw m 16 p.2x35
6	2.0112.205.2	1	screw m 8 p.1.25 x 16
7	2.1310.004.2	1	flat washer 8.5
8	2.1011.105.2	1	nut m 8 p.1.25

Section: BODY WORK

MUDGUARDS EXTENSIONS mm 170

Fig.	Code	QTY	Name
1	0.012.1656.0/20	1	extension dx/rh/re
2	0.012.1658.0/20	1	extension sx/lh/li

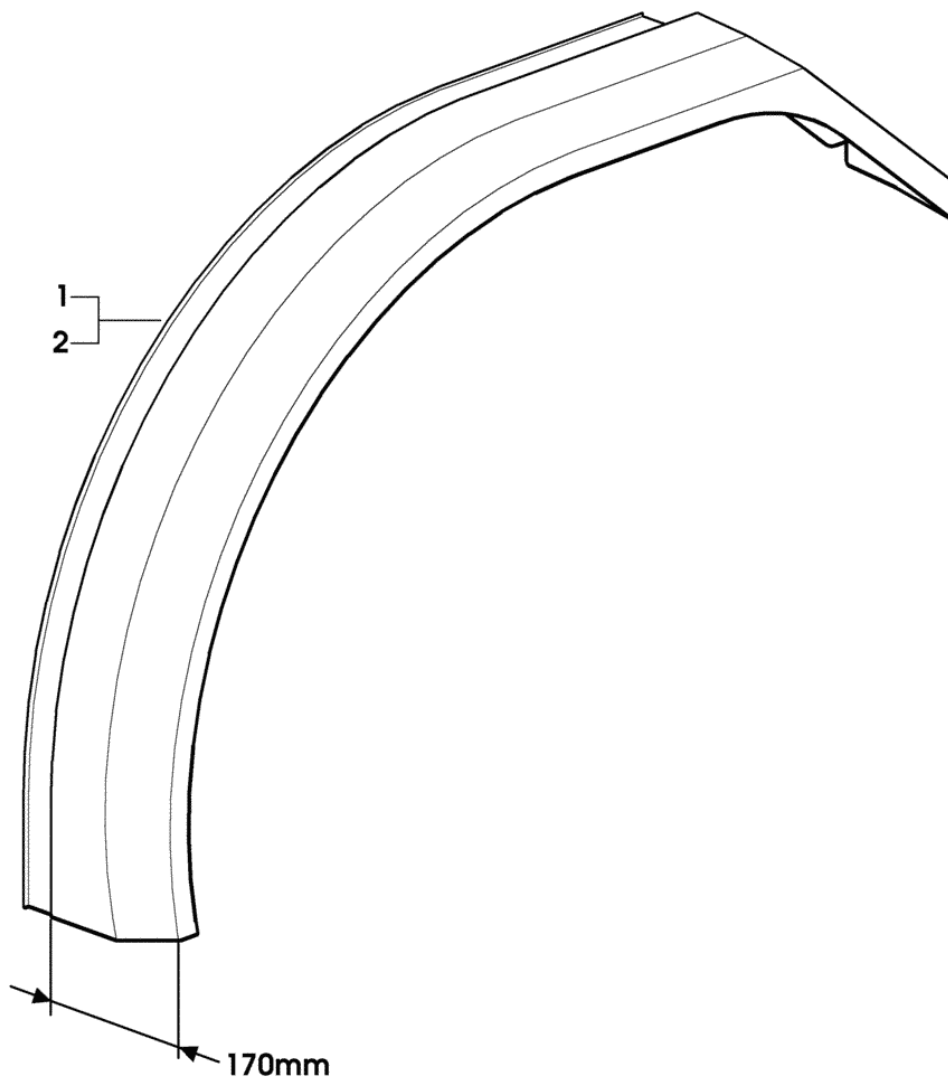


9_21076_25_0_0

Section: BODY WORK

BATTERY COVER


Fig.	Code	QTY	Name
1	0.009.3977.2	1	shutter
2	2.3199.115.0	1	plug 38x12

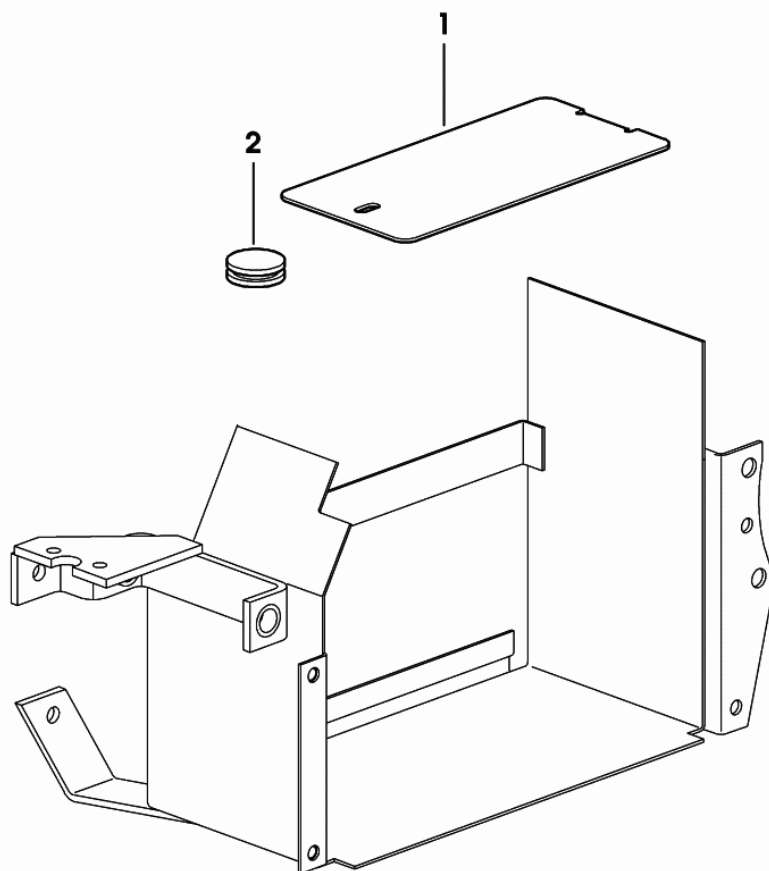

9_D7685_05_0_0

SAFETY ROLL BAR SUPPORTS


Fig.	Code	QTY	Name
1	0.007.3720.3/50	1	support dx/rh/re
2	0.007.3721.3/50	1	support sx/lh/li
3	0.014.0300.3	1	support
4	0.008.1550.0	1	socket
5	0.014.0015.4	1	wire
6	2.1312.003.2	1	washer 6
7	2.1011.103.2	1	nut m 6 p.1

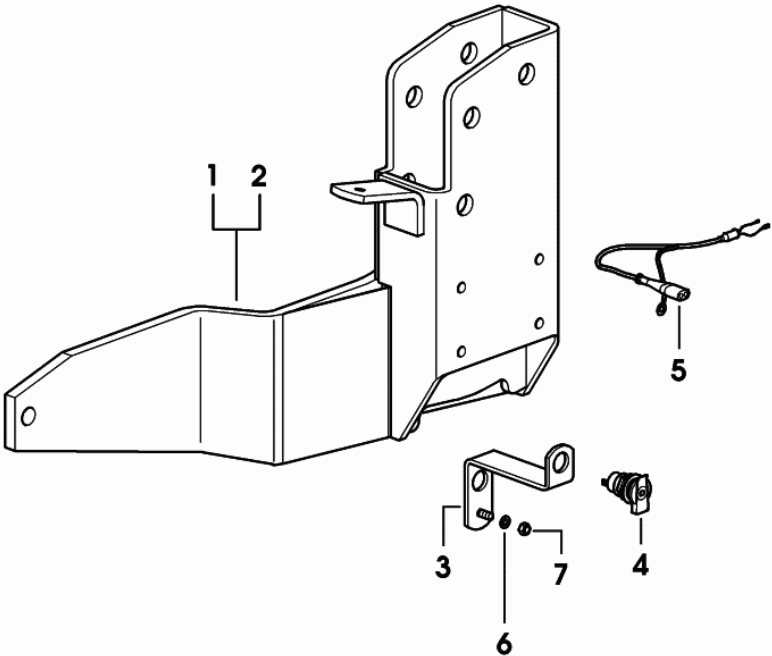

9_D7678_01_0_0

Section: BODY WORK
AIR PRE-CLEANER

Fig.	Code	QTY	Name
1	2.4239.110.0	1	precleaner COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.4239.110.0 ☞ 07.00.32
2	0.010.4698.0	1	filter extension
4	0.010.4697.0/10	1	sleeve
5	0.164.8157.3/20	1	hose clip Ø 97

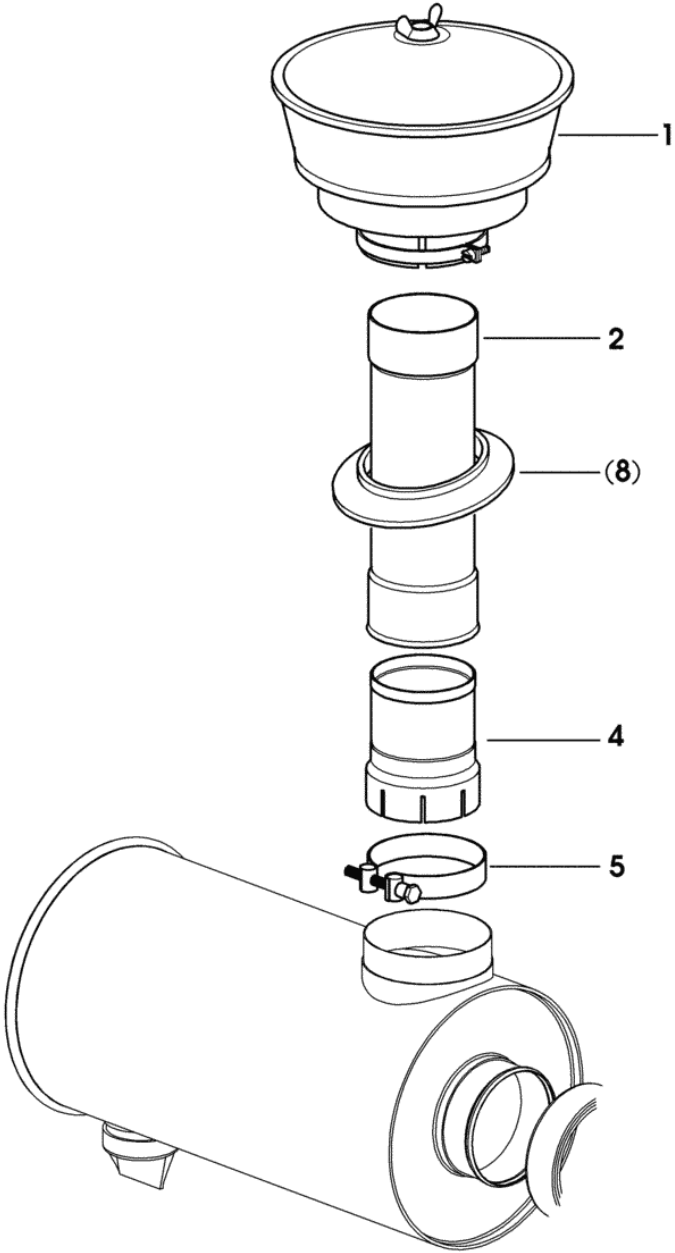

9_64881_10_0_0

Section: BODY WORK


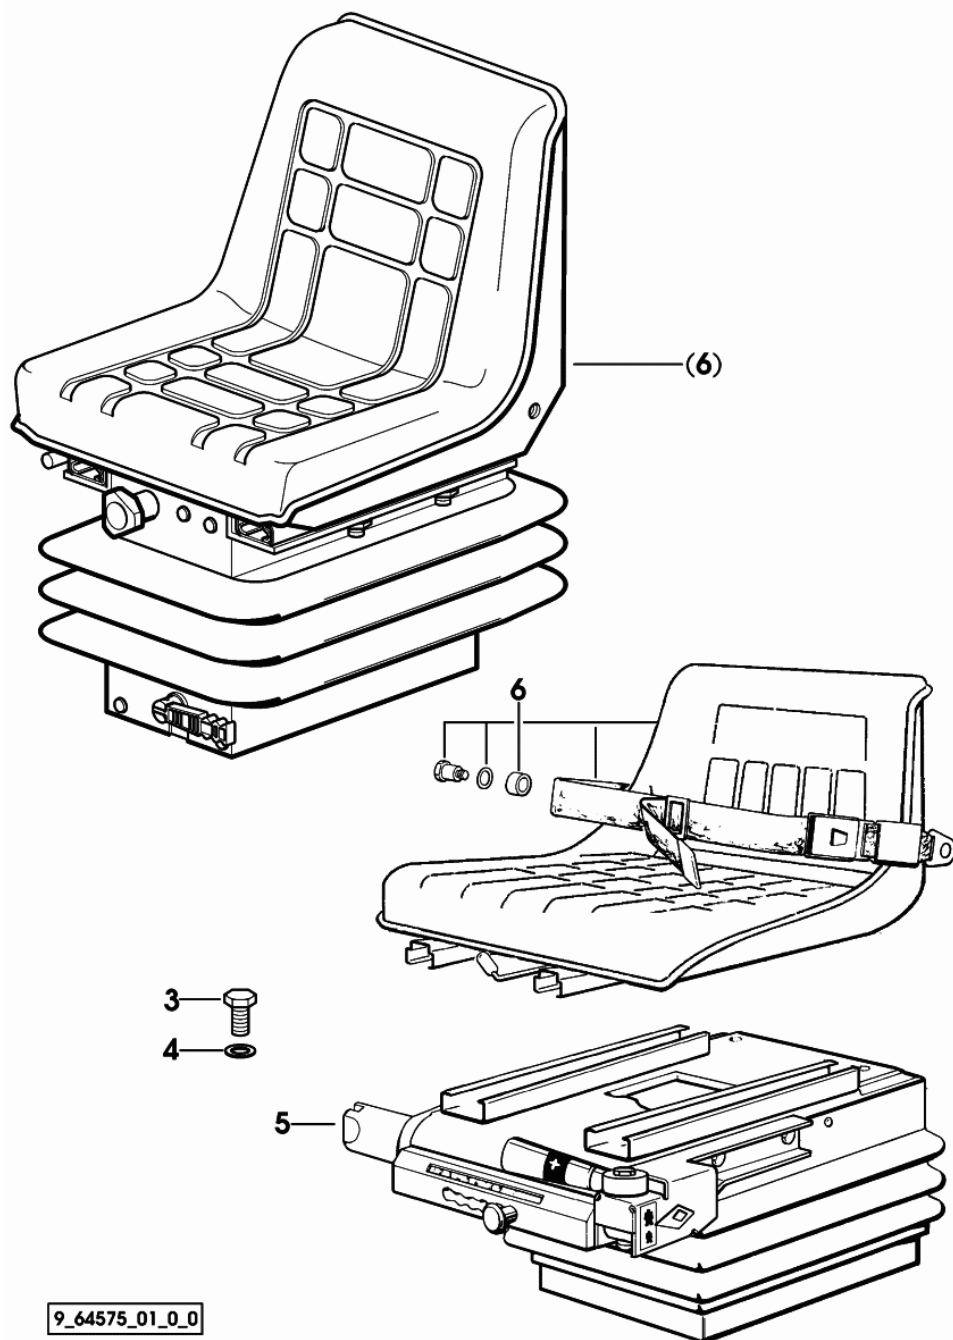
DRIVER'S SEAT KAB 184783

Fig.	Code	QTY	Name
3	2.0112.205.2	4	screw m 8 p.1.25 x 16
4	2.1475.102.7	4	washer 8
5	0.010.5356.4	1	seat springs KAB XH2 COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.010.5356.4 ☞ 07.00.34
6	0.012.4782.4/20	1	seat COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.012.4782.4/20 ☞ 07.00.35

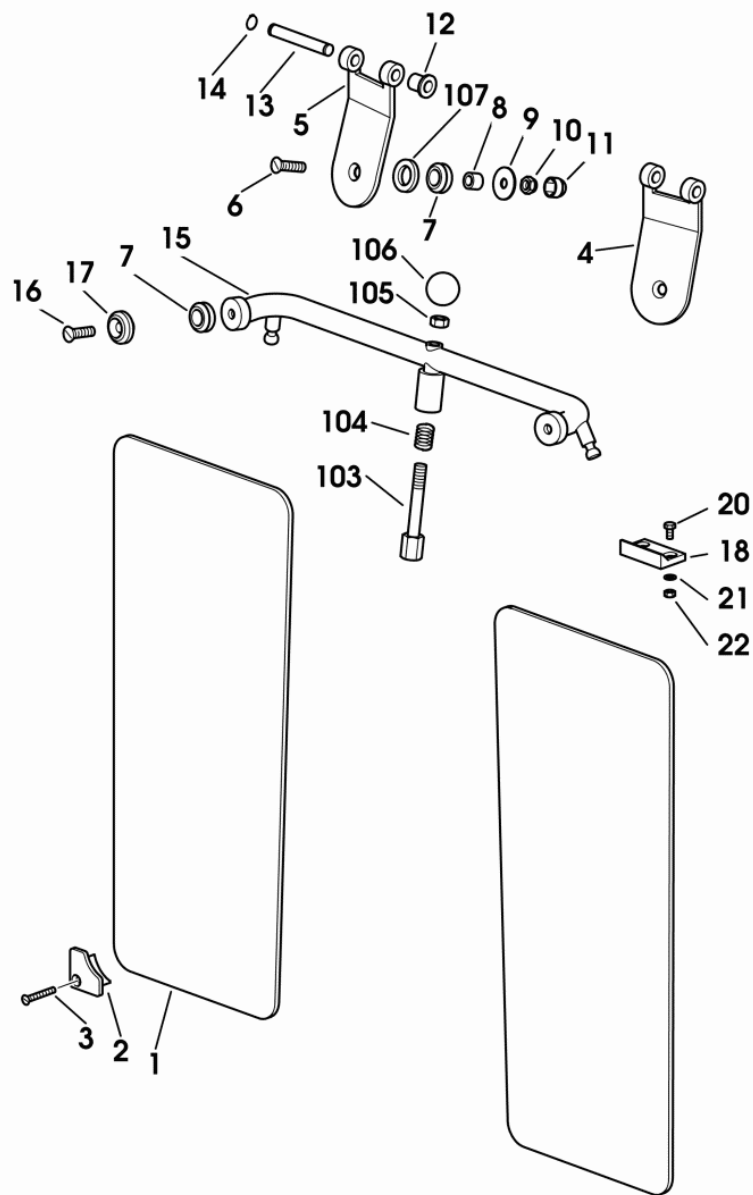9_56671_10_0_A



FRUTTETO II 55


Section: CAB

Ref.: 0B.00.4

GLASSES AND SEALS


Fig.	Code	QTY	Name
1	0.009.8592.0/10	2	window glass
2	0.008.2738.0/30	4	small block
3	2.0352.509.3	4	screw 4.8x32
4	0.009.8595.3/20	1	hinge sx/lh/li
5	0.009.8596.3/20	1	hinge dx/rh/re
6	2.0342.308.3	2	screw m 8 p.1.25 x 30
7	2.6569.011.0	4	rubber plug
8	2.1579.450.2	2	spacer 8.5 x 14 x 12
9	2.1599.352.2	2	washer 8.5x28x2
10	2.1120.105.2	2	selflock nut m 8 p.1.25
11	0.163.7856.0	2	cap
12	2.1559.147.0	4	bushing 10 x 28 x 18
13	2.1699.327.2/10	2	pin
14	2.1410.001.1	4	circlip 10
15	0.009.8766.3/10	1	handle
16	2.0342.307.6	2	screw m 8 p 1.25 x 25
17	0.009.8600.0	2	spacer
18	0.009.8952.0	1	small plate
20	2.0312.004.2	2	screw m 5 p.0.8 x 10
21	2.1310.001.2	2	flat washer 5.3
22	2.1011.102.2	2	nut m 5 p.0.7
103	2.1699.142.0	2	pin
104	2.4019.240.1	1	spring
105	2.1011.105.2	2	nut m 8 p.1.25
106	0.9215.268.0	2	knob
107	2.1549.155.0	4	washer

Fig.	Code	QTY	Name
1	0.9241.343.4/10	1	roll-up sun-shade
2	0.009.9110.0	2	rod
3	0.009.9111.0	1	square dx/rh/re
4	0.009.9112.0	1	square sx/lh/li
5	2.0350.454.3	4	screw m 4.2 x 13 -AB-
6	2.0350.203.6	2	screw m 3.5x9.5B

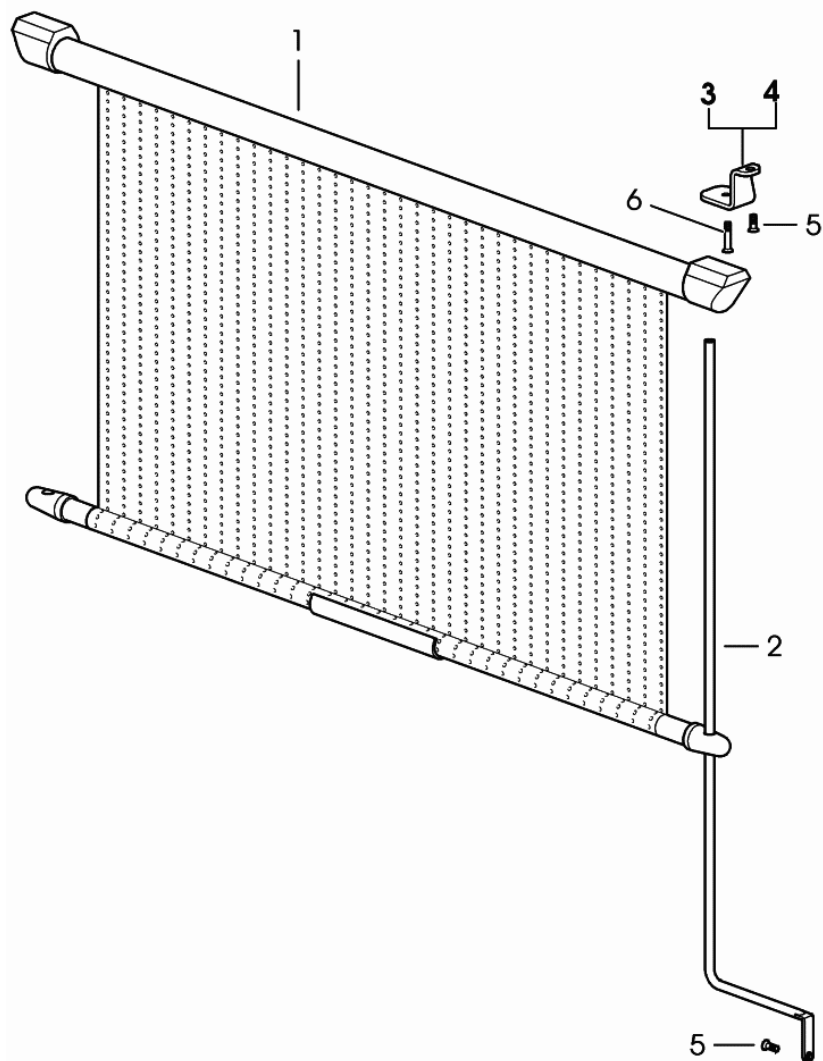

9_56871_28_0_0

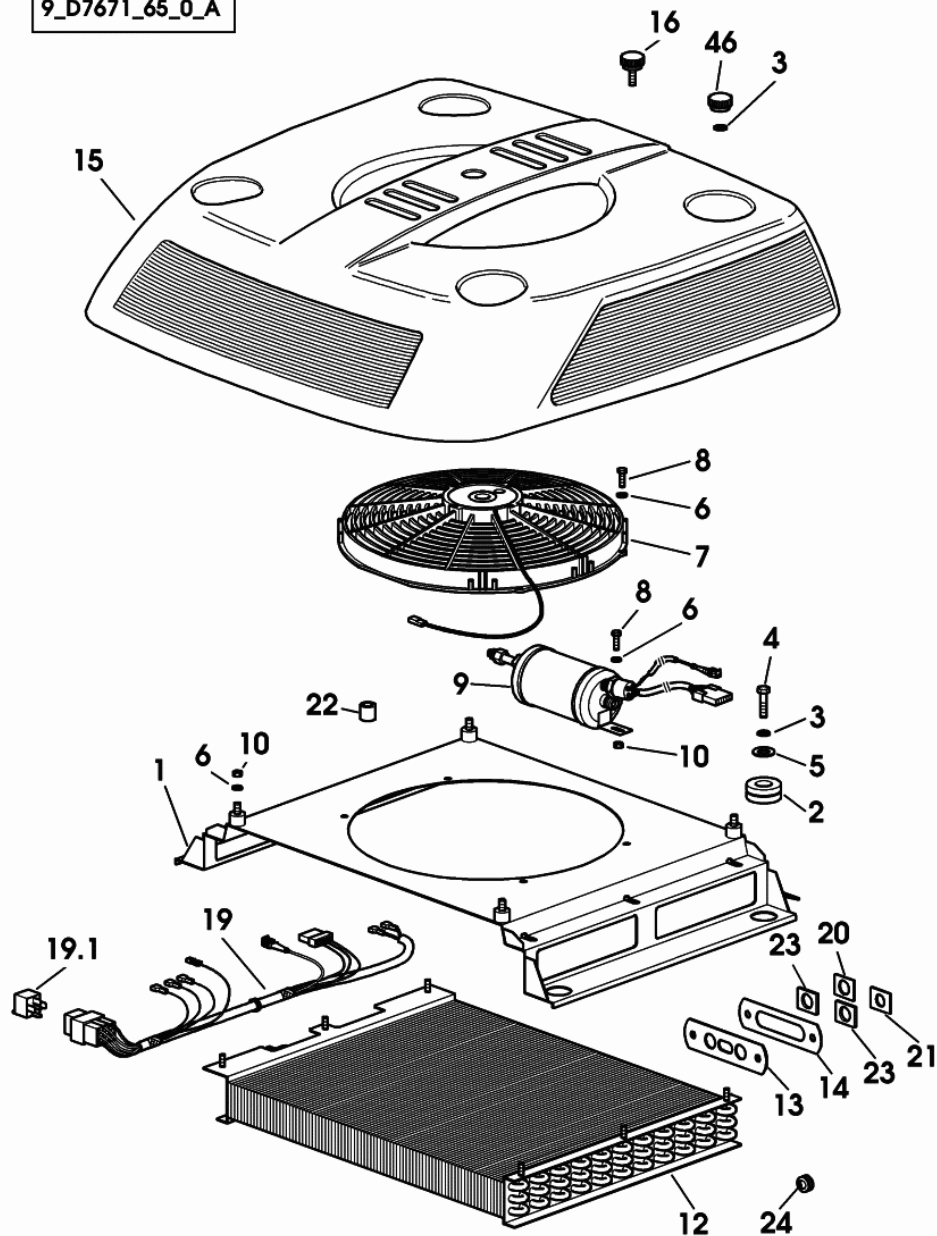9_D7671_65_0_A



FRUTTETO II 55

Section: CAB

Ref.: 0B.00.28


CAB ROOF - FOR TRACTORS WITH AIR CONDITIONING

Fig.	Code	QTY	Name
1	0.009.8248.2/10	1	support
2	0.007.5607.0	4	rubber plug
3	2.1310.004.2	8	flat washer 8.5
4	2.0112.213.2	4	screw m 8 p.1.25 x 35
5	2.1310.009.2	4	flat washer 14
6	2.1310.002.2	11	washer 6.6, d125
7	0.009.8263.4	1	fan Ø 382
8	2.0112.007.2	5	screw m 6 p.1 x 20
9	0.007.6265.4/20	1	filter R 134a
			COMPONENT PARTS SEE
			COMPONENTS LIST
			☞ 0.007.6265.4/20
			☞ 0B.00.75
10	2.1011.103.2	7	nut m 6 p.1
12	0.009.8260.3/10	1	condenser
13	0.009.8265.0/20	1	small plate
14	0.009.8266.0	1	gasket
15	0.012.8985.2/10	1	cover
16	0.012.9389.2	4	knob m 8
19	0.010.0099.3	1	electrical system
19.1	2.7659.101.0	1	relay 12V-30A
20	0.007.7779.0	1	small plate
21	0.007.7780.0/10	1	small plate
22	2.1579.879.2	4	spacer 12x20x19
23	0.007.7781.0/10	2	gasket
24	2.6569.018.0	6	wire guide 20 x 8 x 15
46	0.013.1092.2	2	knob

Section: ELECTRIC AL SYSTEM
HEADLAMP FOR LEFT-HAND DRIVE


Ref.: 08.00.1

Fig.	Code	QTY	Name
1	2.8029.770.0/30	2	lamp COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.8029.770.0/30 ☞ 08.00.45

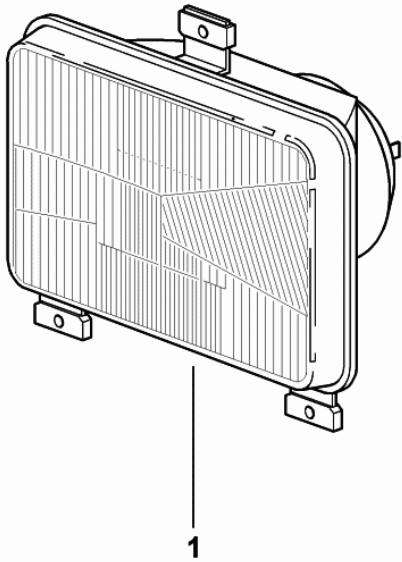

9_62085_22_0_A


Fig.	Code	QTY	Name
4	2.8029.300.0	1	headlight COMPONENT PARTS SEE COMPONENTS LIST 2.8029.300.0 08.00.54
5	0.007.3950.0/20	1	bracket
6	2.0112.307.2	2	screw m 10 p.1.5 x 20
7	2.1599.082.0	2	washer 11 x 35 x 3
8	2.1011.106.2	2	nut m 10 p.1.5
9	0.009.7717.3	1	bracket
10	2.7659.096.0/10	1	switch
11	2.1310.028.2	2	flat washer 4
12	2.0332.204.2	2	screw m 4x0.7x12
13	0.007.3086.2	1	knob
14	0.009.3698.0	1	plate
15	2.1430.007.7	1	circlip 6, d128
16	2.6839.024.2	1	clamp
17	2.0112.207.2	1	screw m 8 p 1.25 x 20
18	2.1470.004.2	1	washer 8
19	2.1011.105.2	1	nut m 8 p.1.25
20	0.98503.67.0	5	clamp
21	2.9929.703.0	1	plate

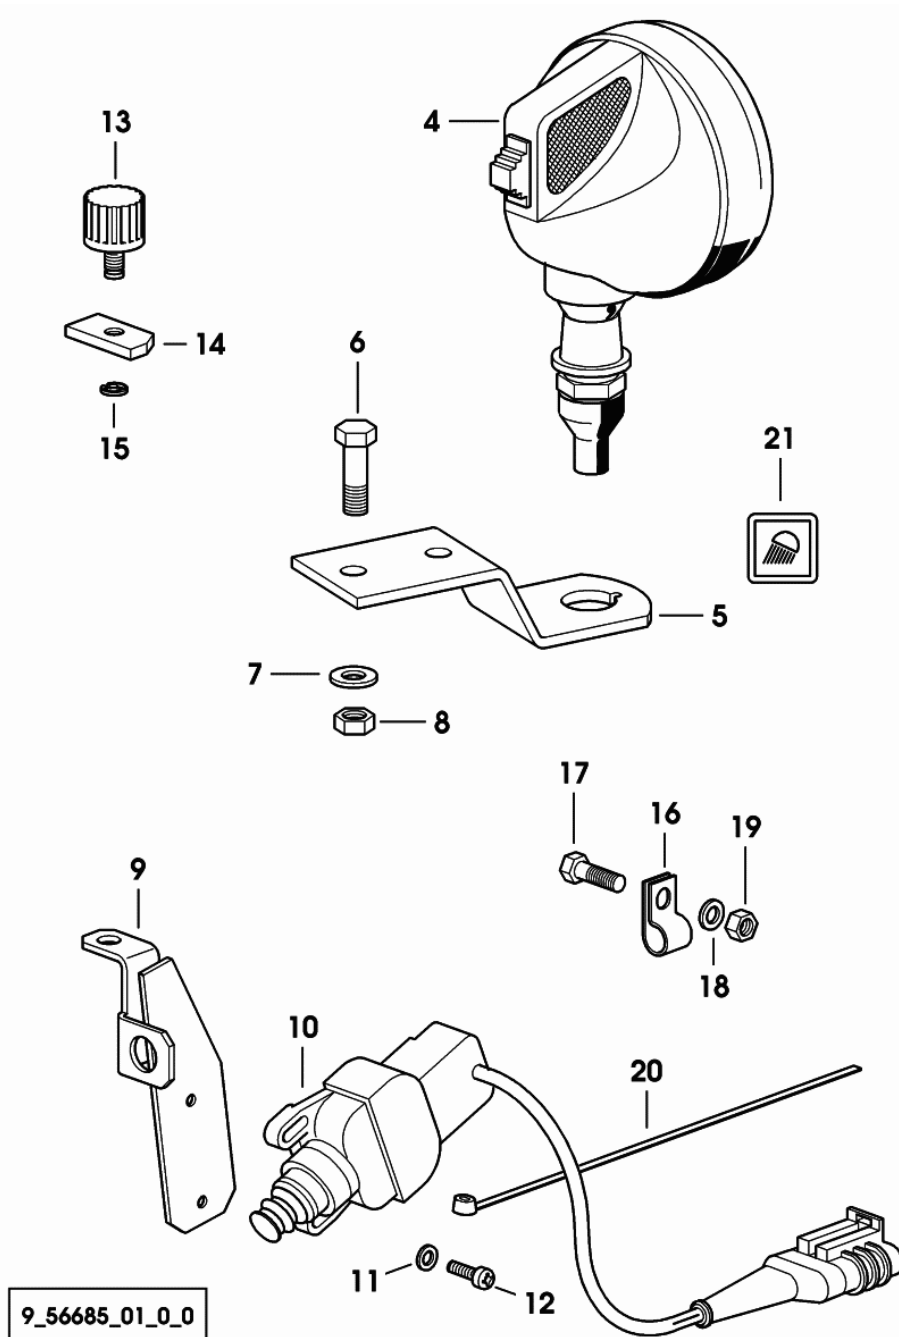

Section: ELECTRIC AL SYSTEM
STARTER

Ref.: 08.00.21

Fig.	Code	QTY	Name
2	2.1470.007.2	2	lock washer 12
3	2.1011.422.2	1	nut m 12 p.1.25
8	2.9619.400.0	1	starter motor 12V - 2.4KW - Z = 11 COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.9619.400.0 ☞ 08.00.59
95	2.1011.522.2	1	nut m 12 p.1.25

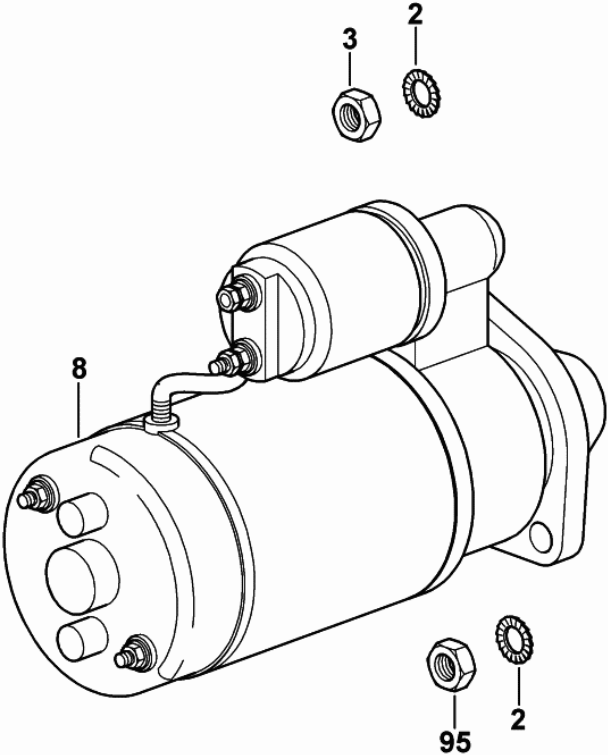


9_69484_09_0_0

Section: ELECTRIC AL SYSTEM
ELECTRICAL SYSTEM

Ref.: 08.00.34

Fig.	Code	QTY	Name
1	0.013.7692.4	1	electrical system

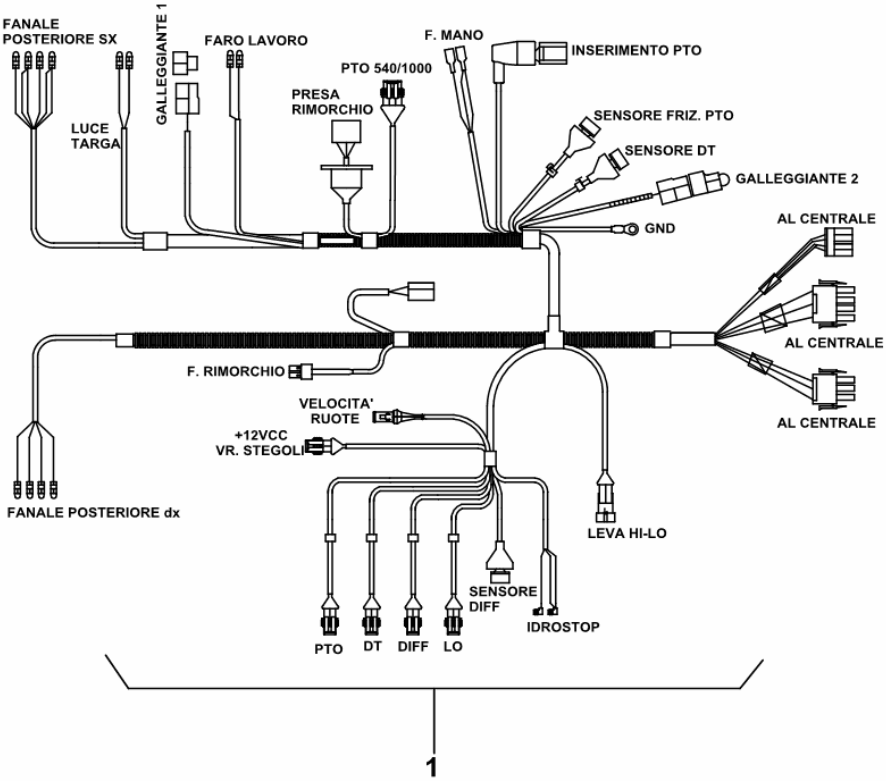

9_D7684_07_0_0

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below




- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

SPEED SENSOR

Fig.	Code	QTY	Name
9	0.008.1646.0	1	speed sensor

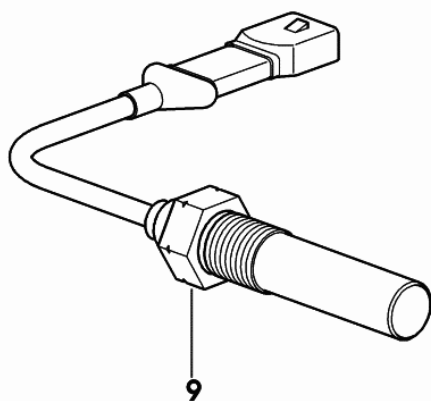

Section: ENGINE

CRANKSHAFT

9_34812_00_0_0


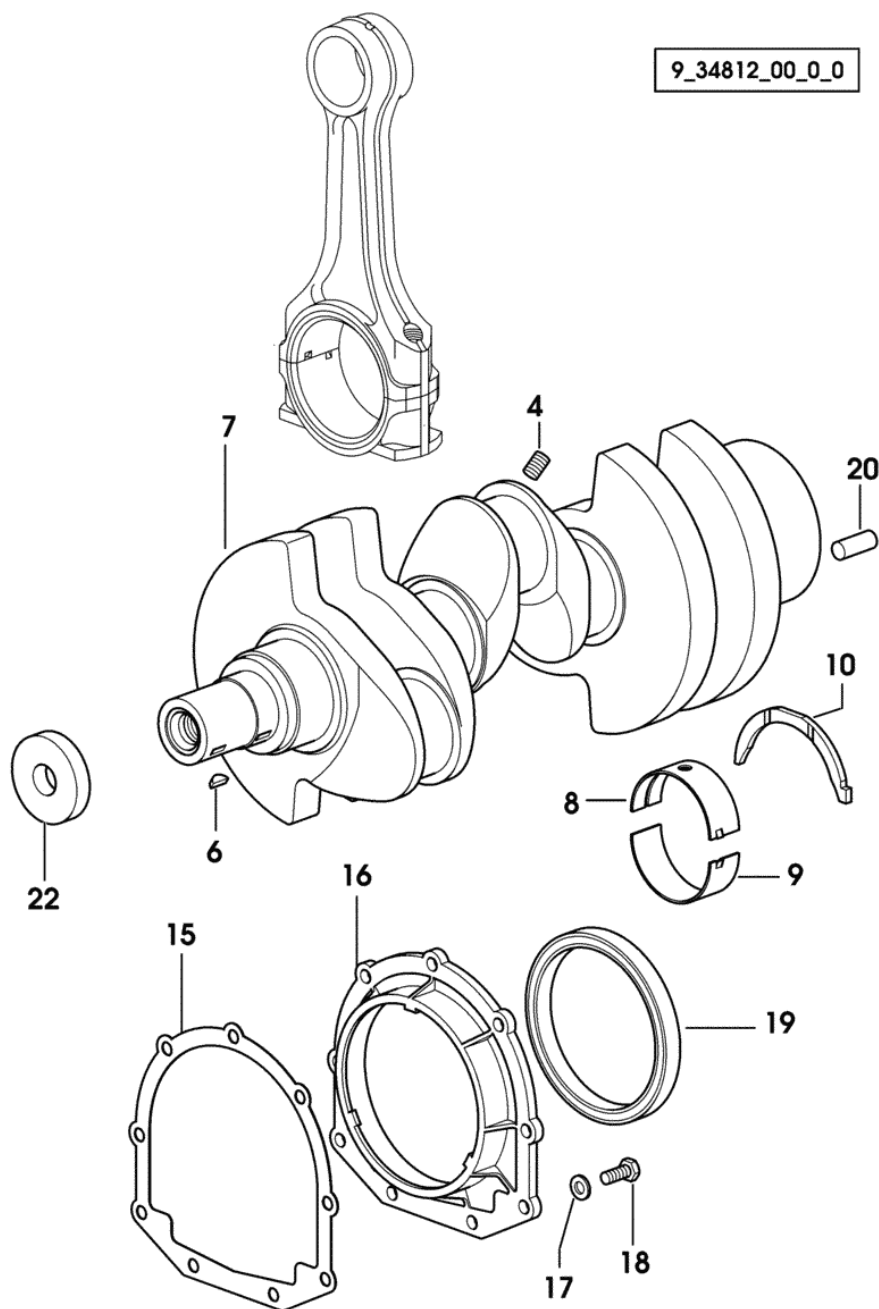


Fig.	Code	QTY	Name
4	2.3130.001.1	3	plug 1/8" gas
6	2.1720.006.0	2	key 4x6.5
7	0.007.1554.0/20	1	crank shaft
8	0.065.1215.0	4	main half bushing STANDARD
8	0.065.1215.7	0	main half bushing - mm 0.25
8	0.065.1215.8	0	main half bushing - mm 0.50
9	0.065.1216.0	4	main half bushing
9	0.065.1216.7	0	main half bushing - mm 0.25
9	0.065.1216.8	0	main half bushing - mm 0.50
10	0.065.1218.0	4	shim STANDARD
10	0.065.1218.7	0	shim + mm 0.10
10	0.065.1218.8	0	shim + mm 0.15
15	0.065.1254.0/20	1	gasket
16	0.007.1711.0/10	1	cover
17	2.1475.002.2	9	conical washer 8
18	2.0112.207.2	9	screw m 8 p 1.25 x 20
19	2.1529.073.0	1	'o' ring 110x130x13
20	2.1651.915.0	1	pin 12x35
22	2.1599.524.7	1	washer 21x60x12

LUBRIC. OIL FILTER


Fig.	Code	QTY	Name
81	0.044.1567.0	1	oil filter element

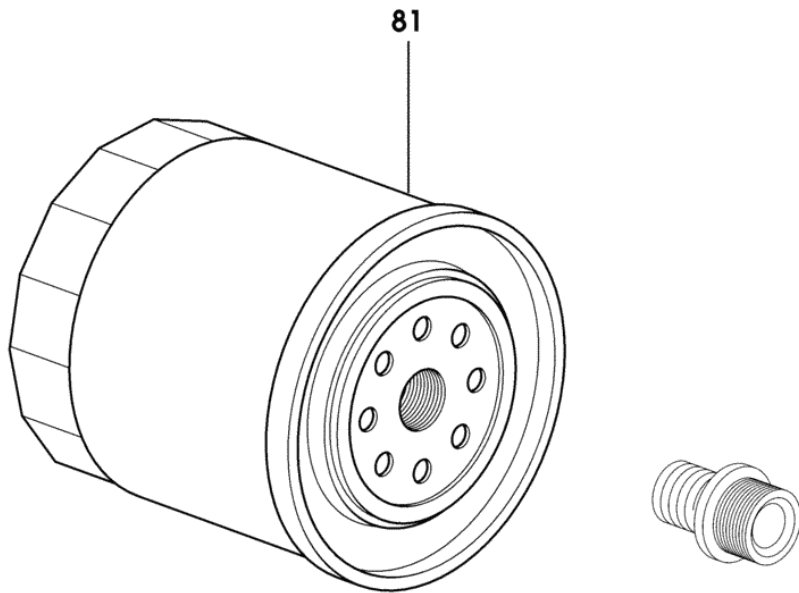

9_33015_04_0_0

Section: ENGINE
INJECTION PUMP - INJECTOR

Fig.	Code	QTY	Name
1	2.4619.270.0/10	3	injector pump
2	2.4619.230.0	3	tappets
3	2.1589.303.0	9	shim mm 0.20
4	2.1589.304.0	6	shim mm 0.30
5	0.012.9348.0/20	3	bracket
6	2.1599.458.0/10	6	snoulder 8.4x18x2
7	2.1011.405.2	6	nut m 8 p.1
8	0.013.0021.3	1	tube Ø 6 / Ø 1.5
9	0.013.3199.3	1	tube Ø 1,5 / m 12 p.1.5
10	2.4719.630.0	3	injector
10.1	2.4719.590.0/10	1	nozzle holder
10.2	2.4729.620.0	1	nozzle
11	2.3199.270.0	3	plug 5.9x7.8
12	0.012.5977.0/20	3	bracket
13	2.1599.454.0	3	snoulder 10.5x17x7.5
14	2.1011.421.2	3	nut m 10 p.1.25
15	0.013.1014.3	1	terminal
16	0.013.3198.3	1	tube Ø 1,5 / m 12 p.1.5
17	2.1589.504.0/10	6	shim mm 0.05
19	2.1569.213.0	12	washer
20	2.3249.093.2	0	pipe fitting m 12 p.1

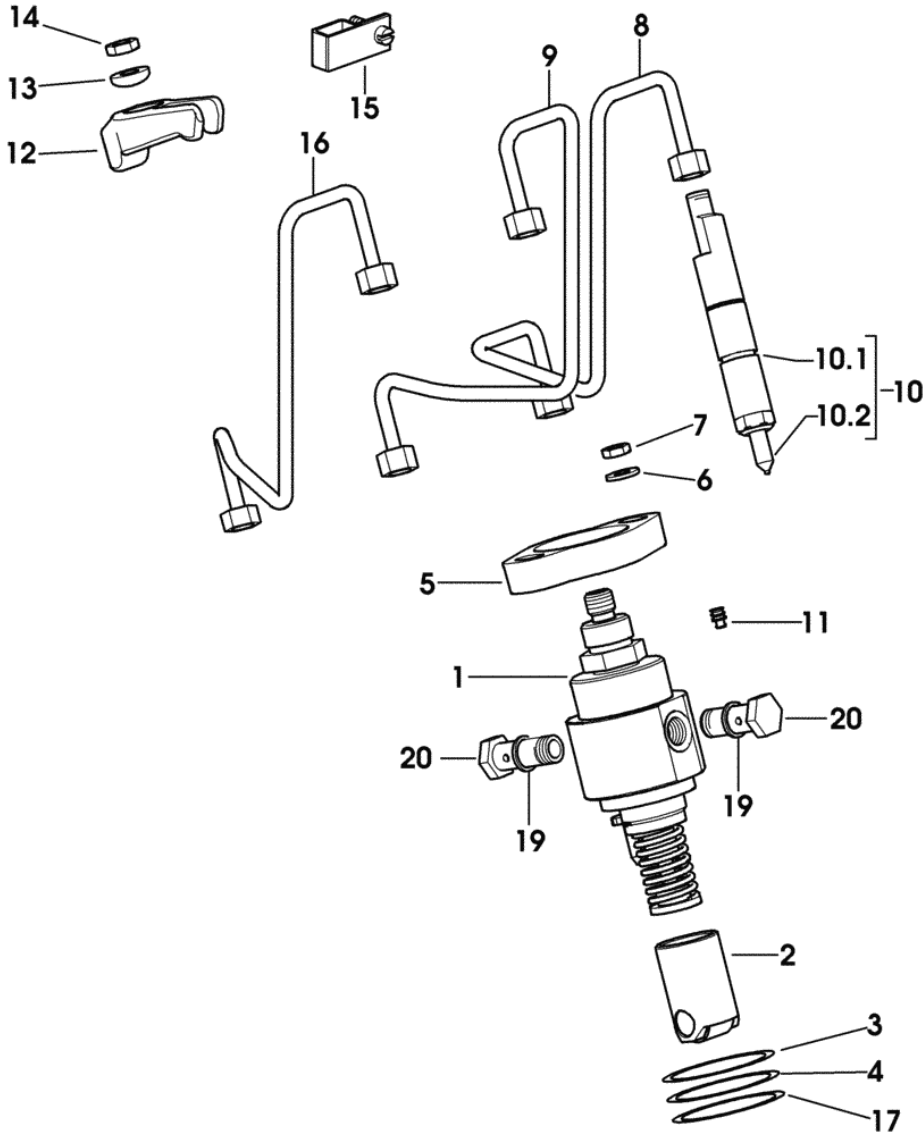


Section: ENGINE

PULLEY FOR ACCESSORIES

Fig.	Code	QTY	Name
1	0.007.1788.0/10	1	pulley
2	2.0432.018.7	4	stud bolt m 8 p.1.25 / p.1 x 65
3	2.1589.131.0	5	snoulder 29 x 68 x 1.0

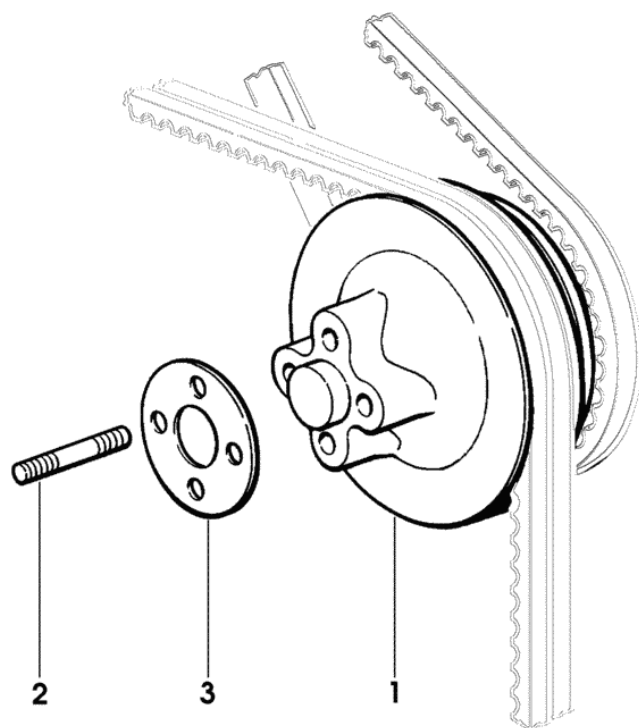
9_36317_04_0_0



Section: ENGINE

EXHAUST PIPE

Fig.	Code	QTY	Name
1	0.007.1441.0/10	1	u bolt
2	0.007.1440.0	1	clamp
3	2.1474.009.2	2	spring washer 8
4	2.1011.105.2	2	nut m 8 p.1.25
5	0.010.9578.2/10	1	exhaust
17	0.013.8356.3	1	bracket
18	0.011.0383.0	1	support
19	2.0112.207.2	1	screw m 8 p 1.25 x 20
21	2.1310.013.2	1	flat washer 21x37

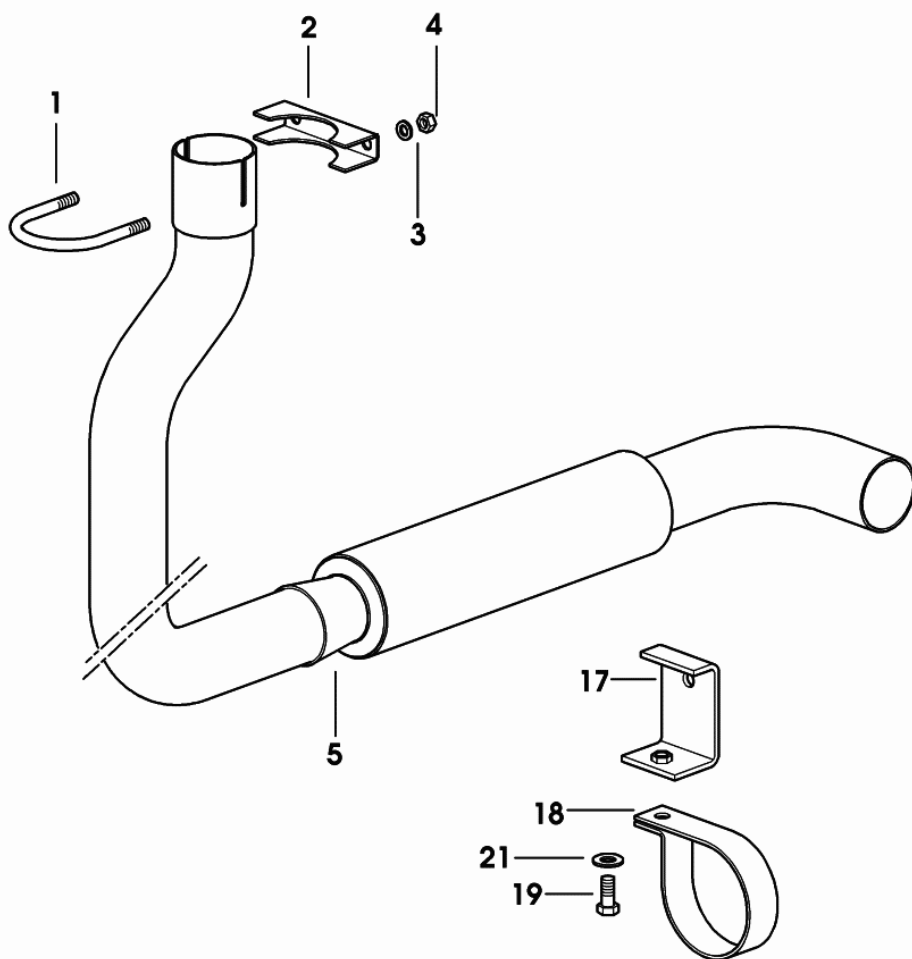

9_D7456_01_0_0


P.T.O. FRONT

Fig.	Code	QTY	Name
130	0.000.0000.1	0	not serviceable
130.31	0.146.4632.4/10	1	universal joint
130.34	2.3139.011.1	1	grain 1/8" gas
130.40	2.1499.012.1/10	4	circlip Ø 24
130.41	2.1569.109.0	3	gasket 46x50x2
130.42	0.275.3910.0/50	1	body
130.43	2.1539.067.0	1	'o' ring 44.12x2.72
130.44	2.1539.064.0	1	'o' ring 120.33x2.62
130.45	0.255.3938.0/40	1	piston
130.46	2.4019.373.1	1	spring 79.5x61.5x6.5
130.47	0.255.3933.0	1	disc
130.48	2.1419.027.1	1	circlip 48
130.49	2.1599.415.0	1	snoulder 35x52x1
130.50	0.255.3936.0	4	disc
130.51	0.255.3970.2	4	disc
130.52	0.255.3969.0/10	1	disc
130.53	2.1419.035.1	1	circlip 127
130.54	0.445.3932.0/20	1	hub
130.55	2.1410.009.1	1	circlip 24
130.56	0.007.3110.0	1	cover
130.57	2.0312.106.2	6	screw m 6 p.1 x 20
130.58	2.1480.012.1	6	washer 6, d128
130.59	2.1411.027.1	1	circlip 68
130.60	2.1651.507.0	2	pin 6 x 16
130.61	0.008.1363.0/10	1	pinion z = 25 z = 30
130.62	0.008.1362.0/10	1	crown wheel Z = 31
130.63	0.008.8345.0/10	1	sleeve
130.64	2.1420.016.0	1	circlip a 40
130.65	2.2030.009.0	1	ball bearing 40x68x15
130.66	0.007.3712.0	1	shaft
130.67	2.1520.026.0	1	oil seal 50 x 68 x 10
130.68	0.007.3713.0	1	sleeve
130.98	2.1631.819.0	1	roll pin 10x50
130.113	2.1599.499.0	1	snoulder 110 x 126.5 x 1.2

9_56659_85_0_B

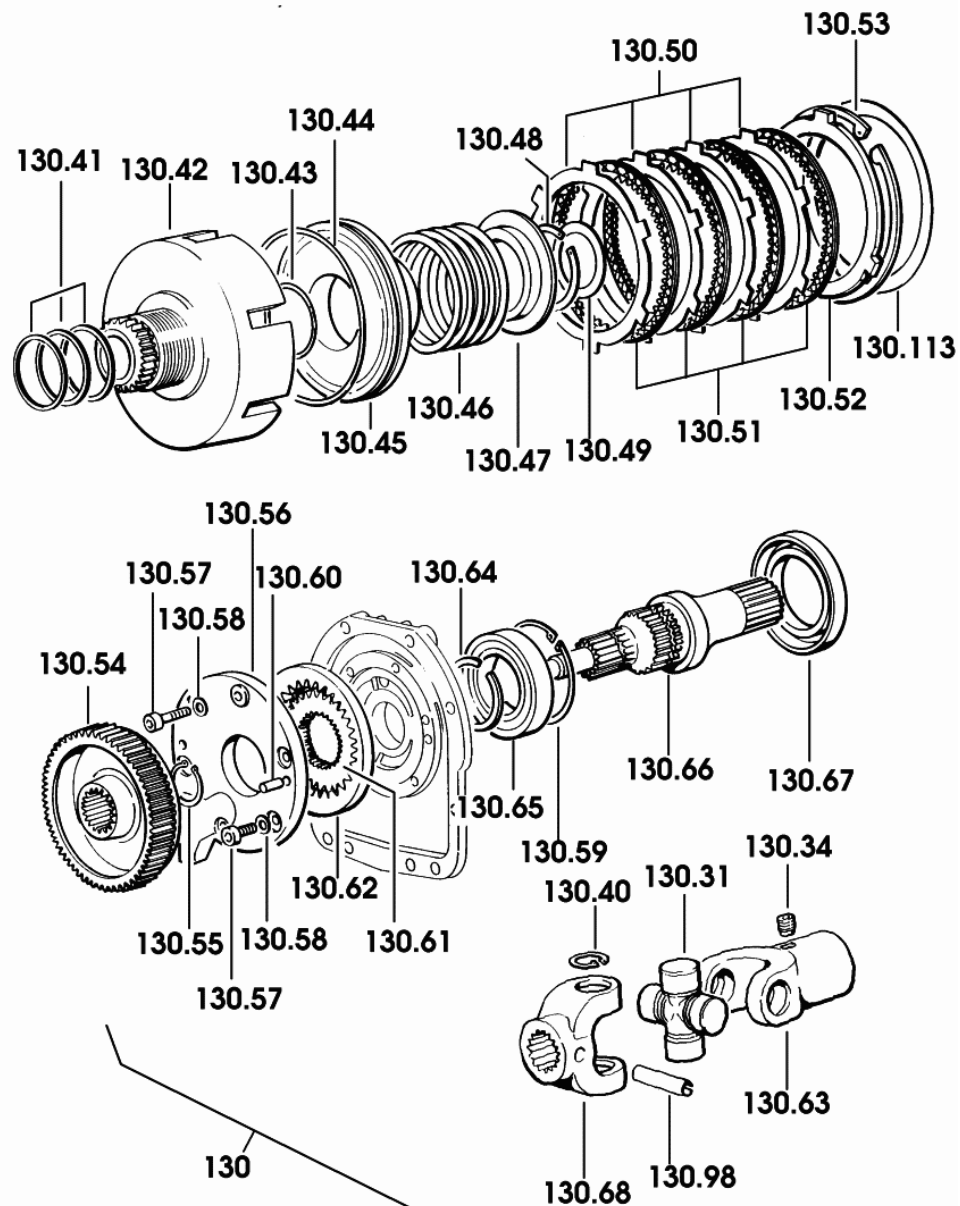Section: FRONT AND REAR P.T.O.
P.T.O. - WITH N' 540 - 1000

Ref.: 05.00.14


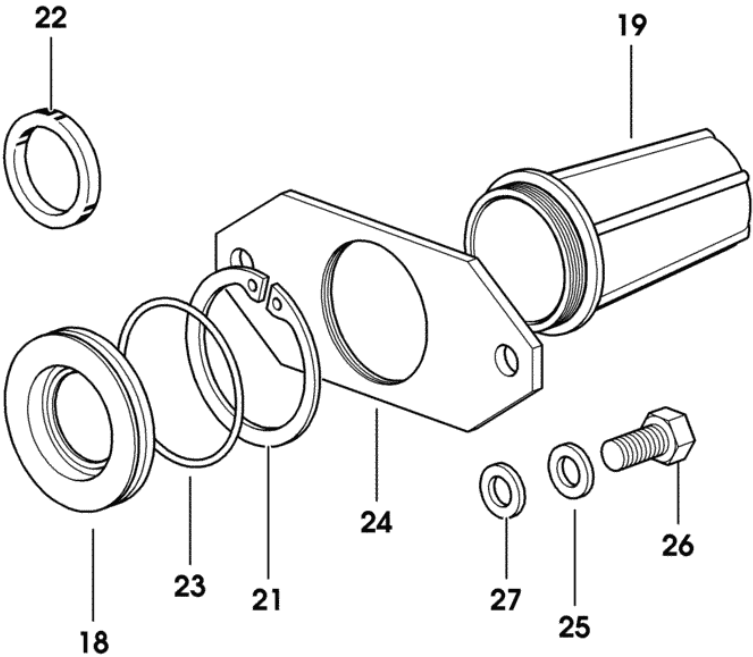


Fig.	Code	QTY	Name
18	0.177.3652.0	1	small cover 12 mm
19	0.154.3655.0/10	1	guard
21	2.1411.032.1	1	circlip 80 x 2.5
22	2.1510.020.0	1	oil seal 40x52x7
23	2.1530.172.0	1	'o' ring 73.03x3.53
24	0.007.3671.0/10	1	plate
25	2.1470.007.2	2	lock washer 12
26	2.0112.409.2	2	screw m 12 p.1.75 x 25
27	2.1311.008.2	2	flat washer 12

PLUG

Fig.	Code	QTY	Name
1	2.1560.010.0	1	gasket 14.2 x 20 x 1.5
2	2.3110.422.1	1	plug m 12 p.1.25 x 10
3	0.006.6161.4/10	1	plug
3.1	2.1530.048.0	1	'o' ring 18.72x2.62
3.3	2.1530.035.0	1	'o' ring 14.00x1.78

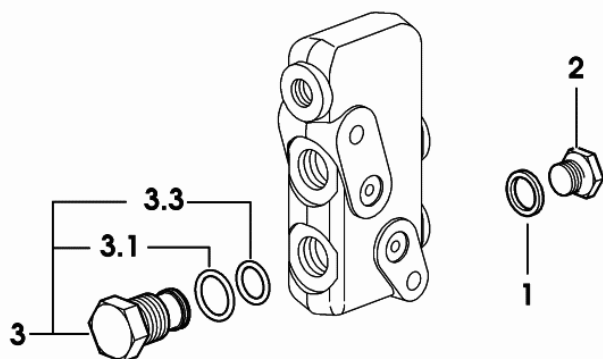

Section: FRONT AXEL
4WD - FRONT SUPPORT

Ref.: 04.00.11


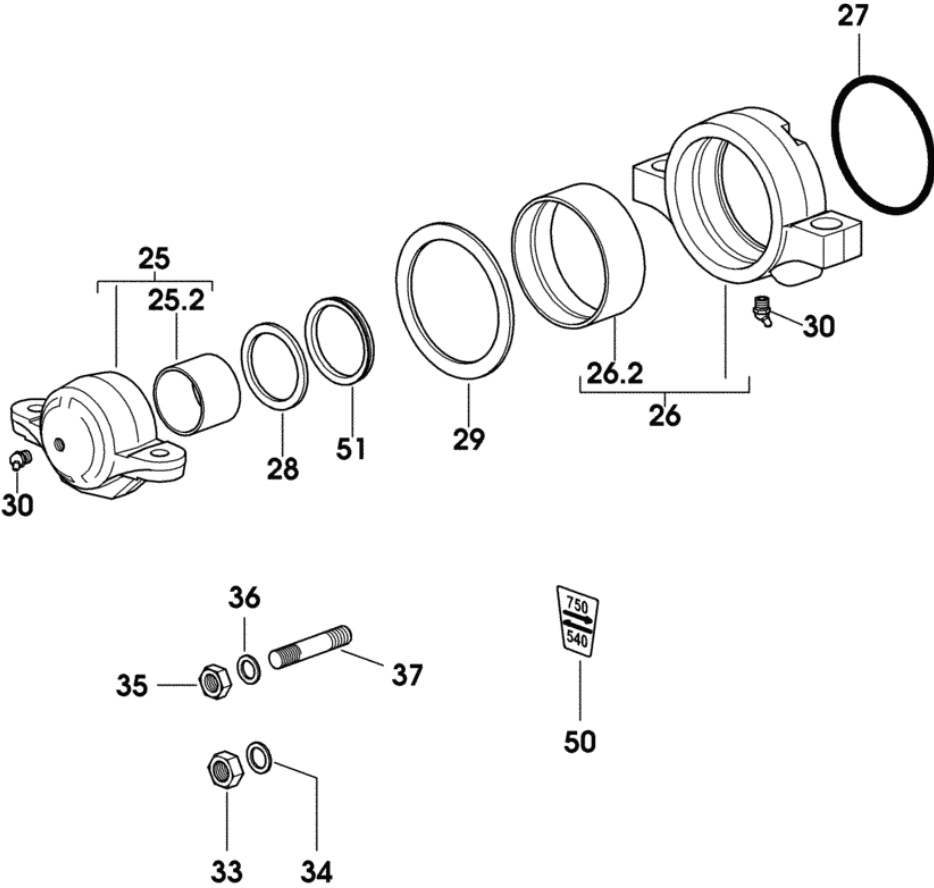


Fig.	Code	QTY	Name
25	0.146.5232.3/10	1	support
25.2	2.1552.529.0	1	bushing 50x55x40
26	0.146.5233.3/10	1	support
26.2	0.146.5250.0	1	bushing 99.3x106.3x40
27	2.1530.205.0	1	'o' ring 101.2x5.34
28	2.1599.870.0	1	snoulder 69x55x4
29	2.1599.004.0	1	snoulder 101x125x4
30	2.3820.105.2	2	lubricator m 10 p.1 x 7
33	2.1011.409.2	4	nut m 16 p.1.5
34	2.1470.009.2	4	lock washer 16
35	2.1011.408.2	6	nut m 14 p.1.5
36	2.1470.008.2	6	lock washer 14
37	2.0439.190.1	4	screw m 14 p.1.75-m 14x60
50	2.9929.229.0	1	plate P.T.O.
51	2.1535.026.0	1	ring 58x68x9

Section: FRONT AXEL
4WD - AXLESHAFTS

Ref.: 04.00.21


Fig.	Code	QTY	Name
1	0.011.2611.4	2	joint COMPONENT PARTS SEE COMPONENTS LIST ☞ 0.011.2611.4 ☞ 04.00.19

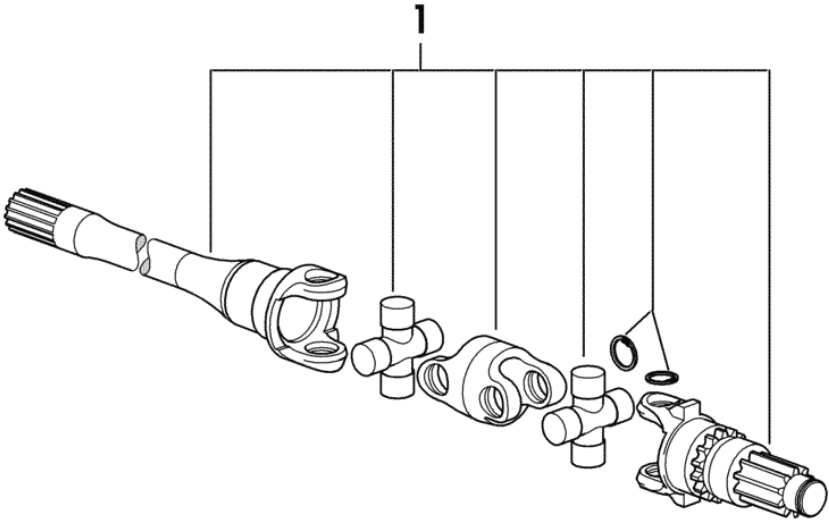

9_56646_06_0_0


4WD - DIFFERENTIAL LOCK CONTROL-ELECTROHYDRAULIC

Fig.	Code	QTY	Name
2	0.009.8698.3/10	1	tube
3	2.3339.361.2/10	1	pipe union m 12 p.1.25 x 28
4	2.1579.765.2/10	1	spacer 12.5 x 18 x 8.0
6	2.1560.010.0	3	gasket 14.2 x 20 x 1.5
7	2.1019.093.2	1	nut 1/2 - 20 UNF-2B
38	0.009.8738.0	1	cover
39	2.1858.105.0	2	rivet

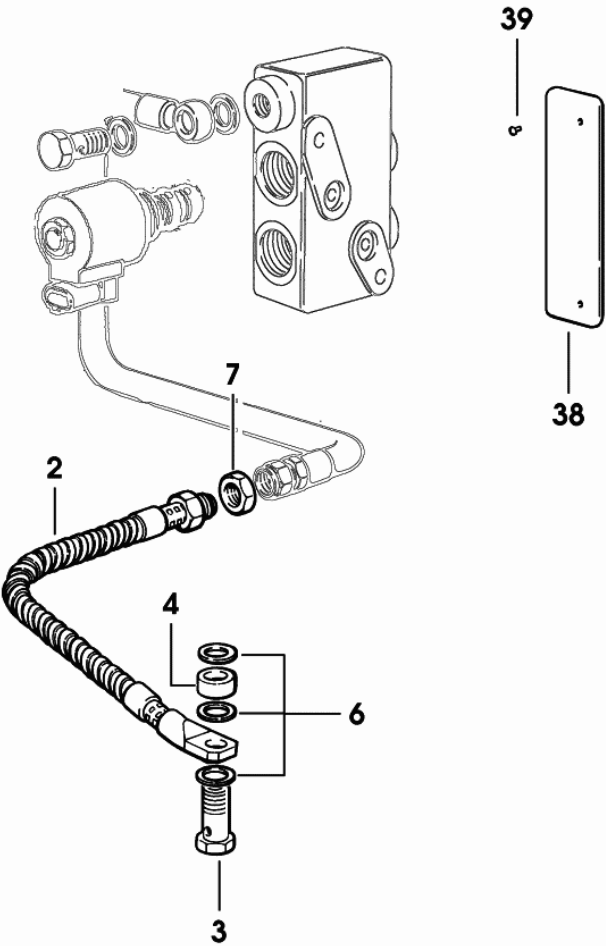


9_56682_08_0_0

Fig.	Code	QTY	Name
24	0.007.3703.0	1	plate
25	2.0112.513.2	6	screw m 14 p.2 x 35
26	2.1310.009.2	6	flat washer 14
27	2.1599.565.2	4	shim 15 x 30 x 6
28	2.0112.515.2	4	screw m 14 p.2 x 40
29	2.1310.009.2	8	flat washer 14
30	2.1579.976.2	4	spacer
31	2.0112.519.2	4	screw m 14 p.2x50
36	0.007.6323.4	1	3 point hitch
36.1	0.96018.13.3	1	sleeve
36.2	0.96044.14.3	1	rod dx/rh/re
36.3	0.760.3515.3	1	rod sx/lh/li
36.4	0.96014.57.0	1	wing nut m 27 p.3
39	0.007.3733.4/10	2	cylinder
			COMPONENT PARTS SEE
			COMPONENTS LIST
			☞ 0.007.3733.4/10
			☞ 0C.00.79
40	0.007.3705.2/10	2	pin
41	0.007.3704.2	2	pin
42	2.1569.125.0	8	gasket 23x35x6
43	2.0112.204.2	4	screw m 8 p.1.25x14
44	2.1310.004.2	4	flat washer 8.5
45	0.009.8744.2/10	1	support
46	0.010.0036.2/10	1	lever
47	2.7099.995.0	1	position sensor
49	0.010.0033.2	1	rod
50	2.3519.055.2/10	1	fork
53	2.0112.207.2	2	screw m 8 p 1.25 x 20
54	2.1310.004.2	2	flat washer 8.5
57	2.0332.207.2	2	screw m 4 p.0.7 x 20
58	2.1470.052.2	2	lock washer 4
59	2.1430.006.2	1	circlip 5
60	2.0112.313.2	4	screw m 10 p.1.5 x 35
61	2.1310.006.2	4	flat washer 10.5
62	0.009.8249.0/10	2	pin
115	0.010.9322.4	4	pin Ø 11
116	2.1669.024.2	2	pin 25.4 x 133
117	2.4049.078.1/20	1	spring
118	0.010.0032.0	1	small plate

 

9_56965_00_0_0

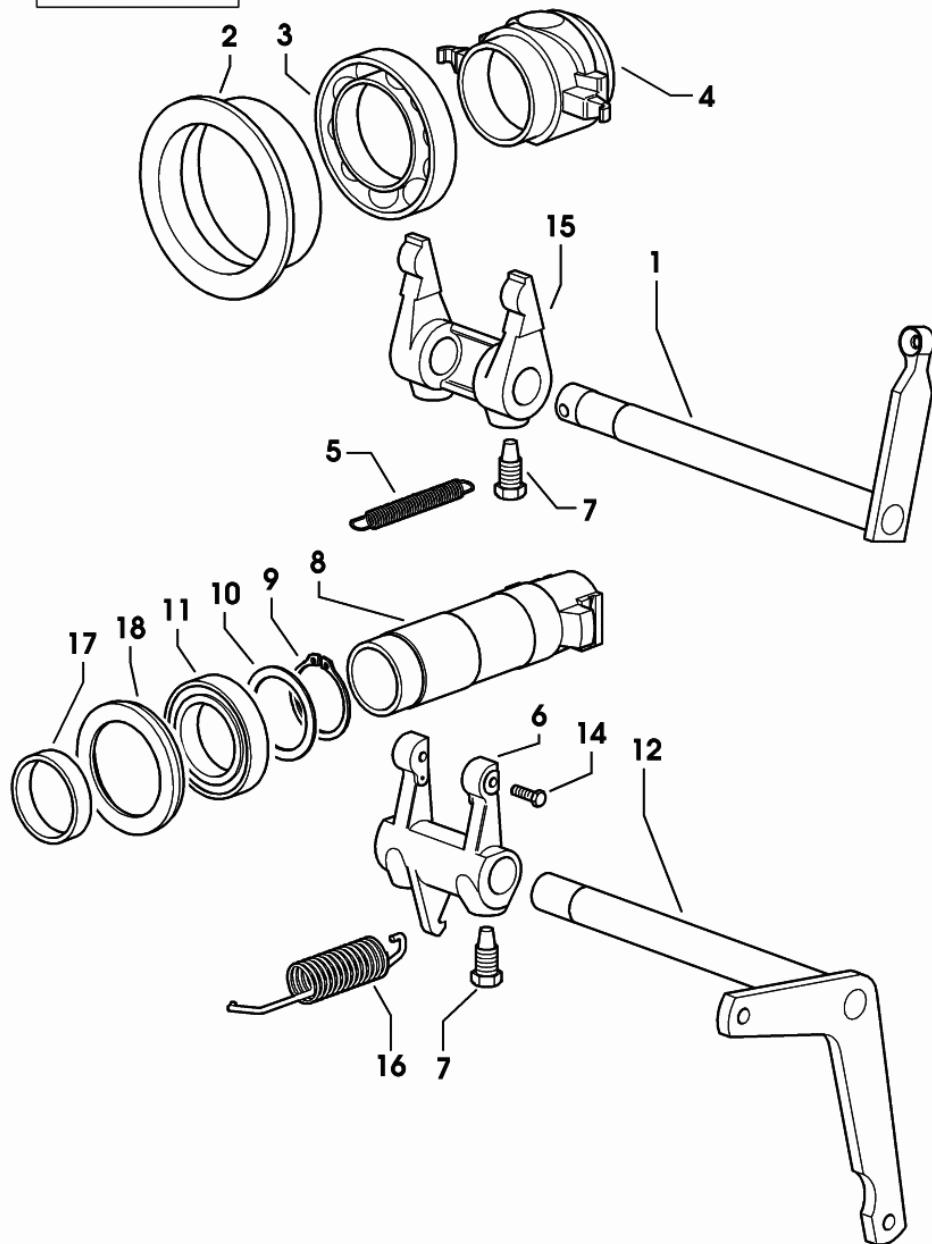

FRUTTETO II 55

Ref.: 02.00.5

Section: GEAR

CLUTCH CONTROL

Fig.	Code	QTY	Name
1	0.009.8773.3	1	clutch lever
2	0.254.6545.0	1	spring housing
3	2.2021.018.0	1	ball bearing 70x110x20
4	0.422.6544.0	1	sleeve
5	2.4049.504.1	2	spring
6	0.007.2465.0/30	1	fork
7	2.0399.514.1	4	screw m 14 p.1.5x30
8	0.254.6533.0/10	1	sleeve
9	2.1410.020.1	1	circlip 50
10	2.1579.488.0	1	spacer
11	2.2999.478.0	1	bearing
12	0.008.4904.3	1	gear lever
14	2.0399.513.1	2	screw
15	0.422.6542.0	1	fork
16	2.4049.501.1	1	spring 30x1
17	0.008.4353.0	1	spacer
18	0.013.4813.0/10	1	ring

Section: GEAR


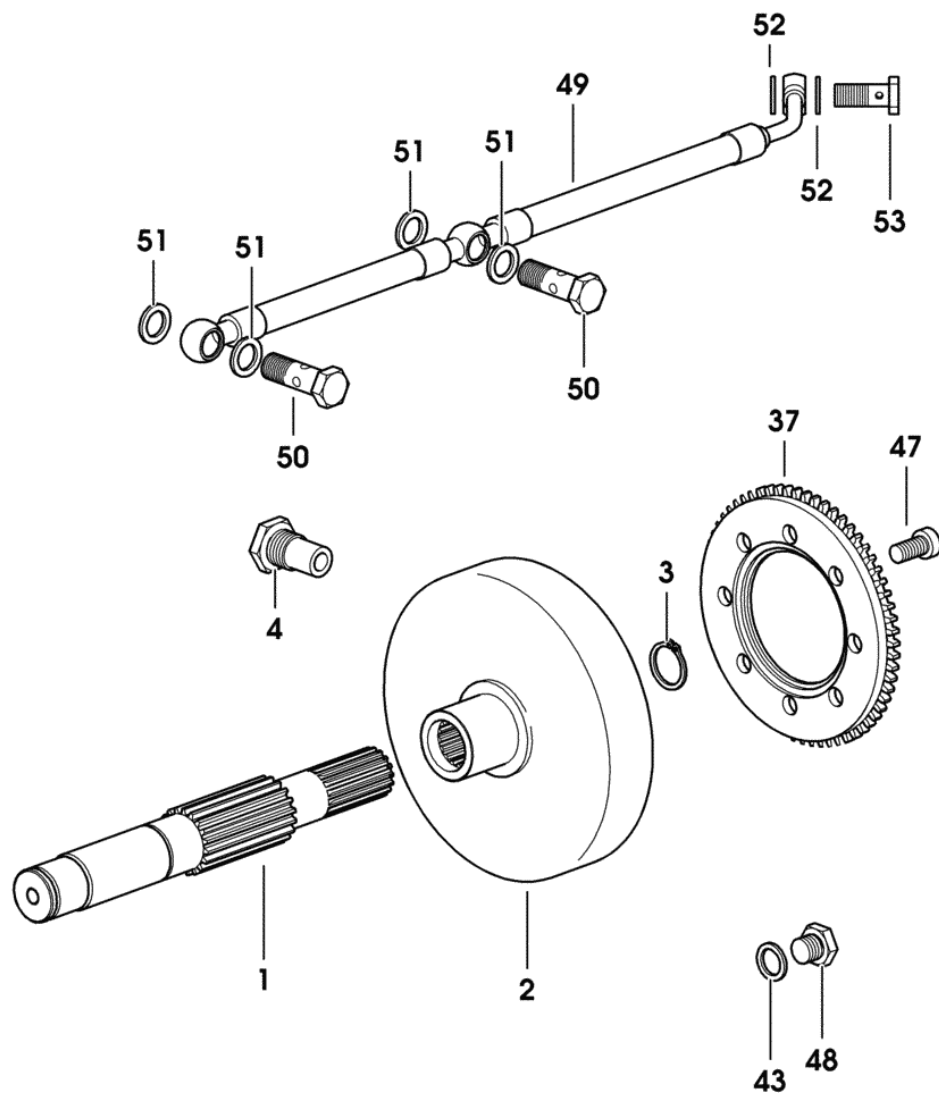
HYDRAULIC MINI REDUCTION GEAR

Fig.	Code	QTY	Name
1	0.008.4822.0/10	1	shaft
2	0.008.5052.0/20	1	crown wheel
3	2.1410.011.1	1	circlip 28
4	2.3199.211.2	1	plug m 20 p.1.5x38.5
37	0.007.2438.0/10	1	disc
43	2.1560.010.0	1	gasket 14.2 x 20 x 1.5
47	2.0399.093.1/10	8	screw m 10 p.1.5 x 20
48	2.3110.403.1	1	plug m 14 p.1.5
49	0.008.4892.3/30	1	tube
50	2.3335.005.2	2	pipe union m 12 p.1.5 x 24
51	2.1560.008.0	4	gasket 12.2 x 18
52	2.1560.010.0	2	gasket 14.2 x 20 x 1.5
53	2.3335.006.2	1	pipe union m 14 p.1.5x24

Section: GEAR

SYNCHROMESH SPLITTER COVER

Fig.	Code	QTY	Name
1	0.007.3970.0/10	1	cap

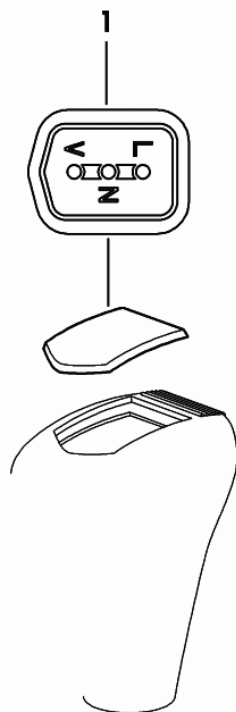


9_56664_03_0_0

Section: GEAR

Ref.: 0.007.7646.4/10.A

SYNCHRONIZER PARTS

Fig.	Code	QTY	Name
1	0.007.7646.4/10	1	lock synchronizer Ø 68 mm
2	0.009.4324.1	2	ring

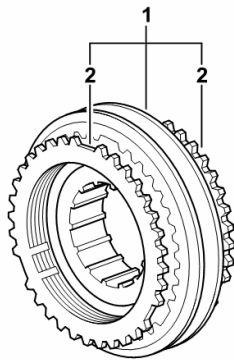

0_007_7646_4_10

Section: REAR AXLE
DISC BRAKE

Ref.: 03.00.9


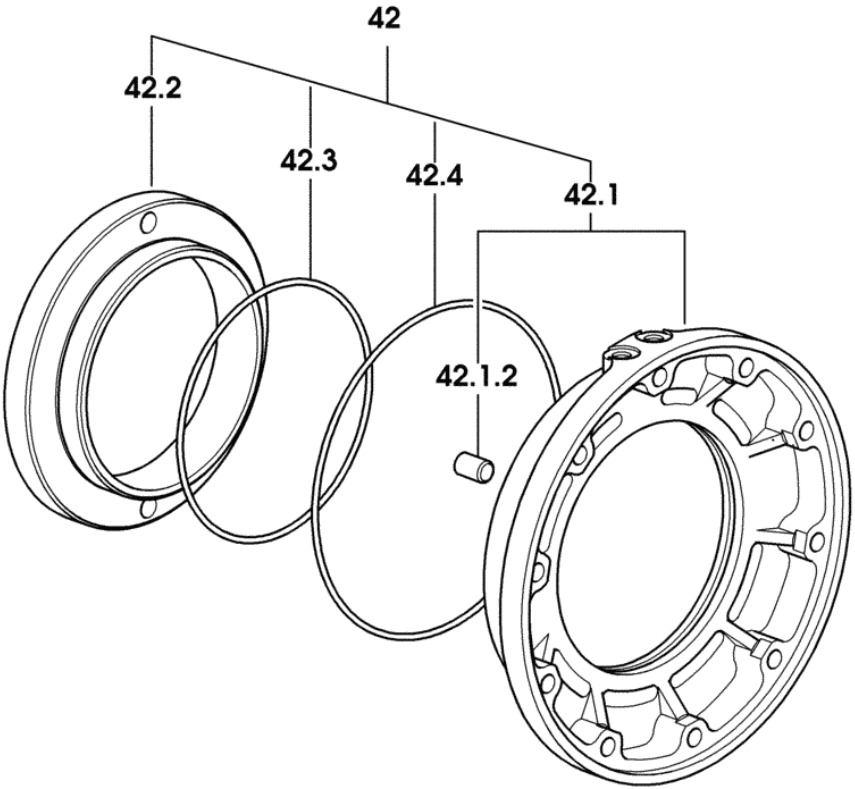


Fig.	Code	QTY	Name
42	0.000.0000.1	0	not serviceable
42.1	0.008.5592.3	1	box
42.1.2	2.1699.329.0	2	pin 14x22
42.2	0.008.5593.0	1	piston
42.3	2.1539.177.0	1	'o' ring Ø 171.04 x 3.53
42.4	2.1539.118.0	1	'o' ring Ø 221.84 x 3.53

Section: S.A.C.
DISTRIBUTOR

Ref.: 0D.00.4

Fig.	Code	QTY	Name
1.44	0.9135.457.0	2	pin
1.45	2.3199.158.0	1	plug
1.46	2.0312.104.2	2	screw m 6 p.1 x 16
1.47	0.9135.451.0	2	bushing
1.48	2.0313.108.7	5	screw m 6 x 25
1.49	0.9061.455.0	1	ring
1.50	2.4019.391.1	1	spring
1.51	2.1420.003.0	1	circlip a 10
1.52	0.009.2162.0	1	guide
1.53	2.4019.440.1	1	spring 5x6.6x32x0.8
1.54	0.009.2161.0	1	small piston

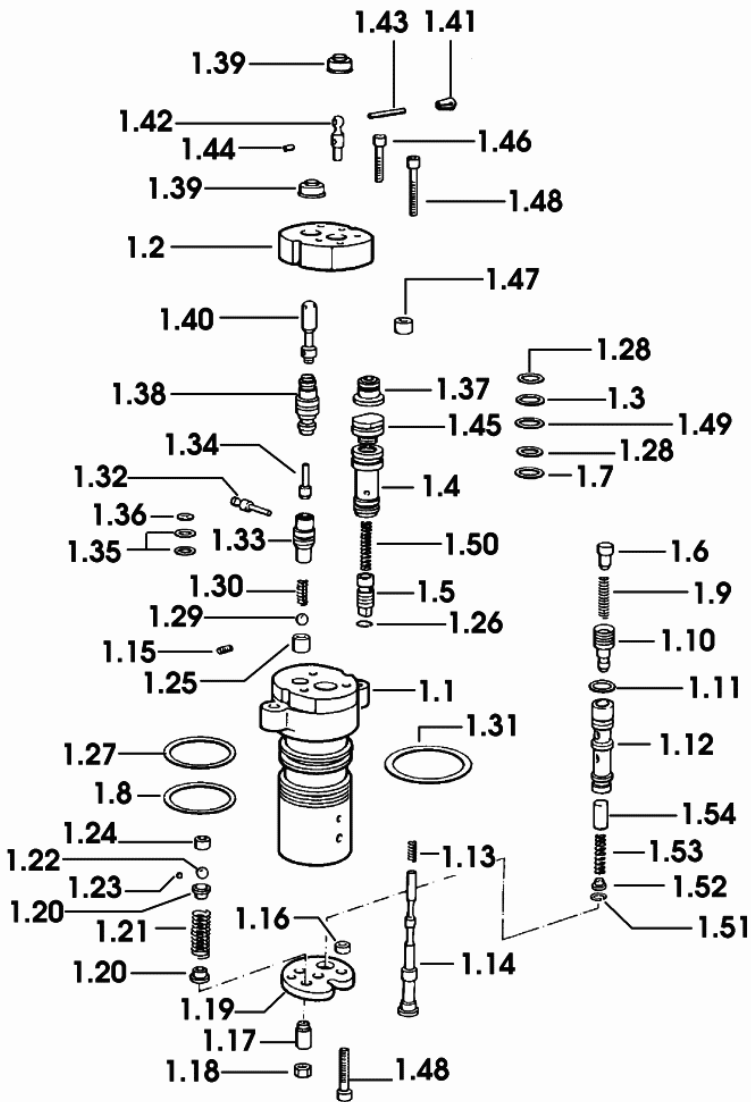

9_56659_31_0_0

Section: POWER STEERING - HYDRAULIC SYSTEM
STEERING WHEEL CAP

Ref.: 06.00.2

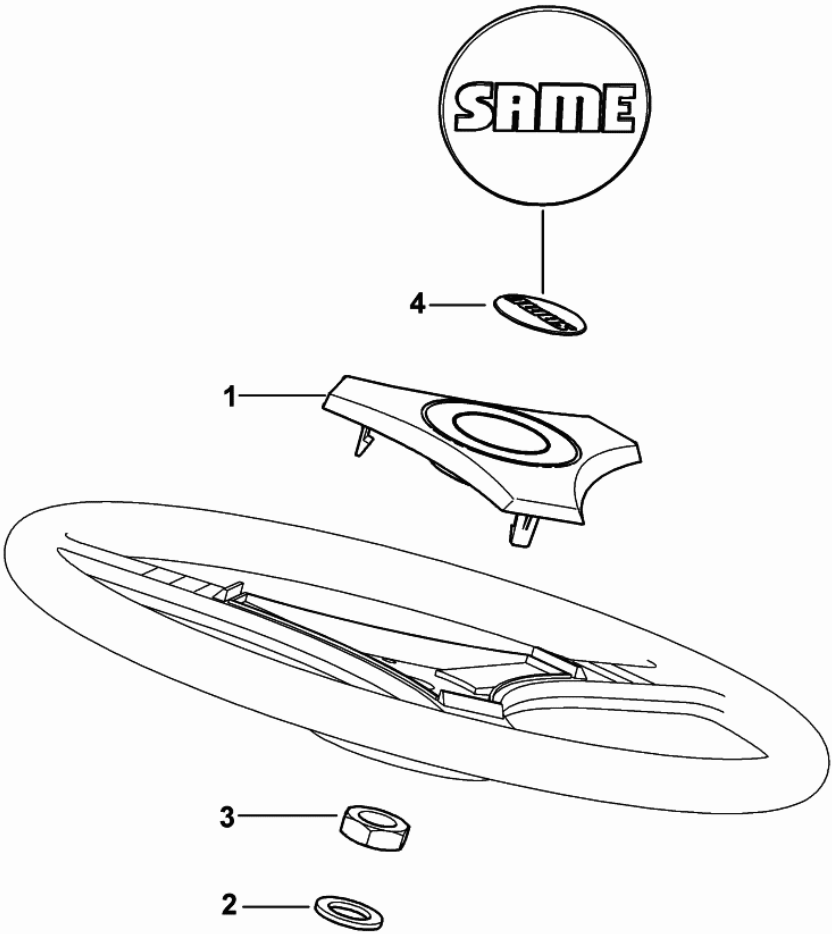



Fig.	Code	QTY	Name
1	0.009.8469.0	1	plug 1122 <- X FRUTTETO II 55 1160 <- X FRUTTETO II 70 15618 <- X FRUTTETO II 75 1431 <- X FRUTTETO II 90 1332 <- X FRUTTETO II 100
1	0.014.5213.0	1	plug -> 1123 X FRUTTETO II 55 -> 1161 X FRUTTETO II 70 -> 15619 X FRUTTETO II 75 -> 1432 X FRUTTETO II 90 -> 1333 X FRUTTETO II 100
2	2.1470.011.2	1	washer 20
3	2.1011.511.2	1	nut m 20 p.1.5
4	0.014.4292.0	1	plate SAME -> 1123 X FRUTTETO II 55 -> 1161 X FRUTTETO II 70 -> 15619 X FRUTTETO II 75 -> 1432 X FRUTTETO II 90 -> 1333 X FRUTTETO II 100

9_56661_01_0_0

Section: POWER STEERING - HYDRAULIC SYSTEM
INTAKE TUBE - FOR MODELS WITH TWO PUMPS


Ref.: 06.00.17

Fig.	Code	QTY	Name
2	2.0112.213.2	4	screw m 8 p.1.25 x 35
3	2.1470.004.2	4	washer 8
4	2.1530.037.0	2	'o' ring 15.08x2.62
5	0.009.9314.3	1	tube
6	2.0312.112.2	3	screw m 6 p.1 x 35
7	2.1480.012.1	3	washer 6, d128
8	2.6850.008.0	2	clamp 25-47
9	0.9015.252.0	1	sleeve 30 x 22 x 80
11	2.4419.320.0/10	1	hydr.oil filter elem
35	2.0112.011.2	3	screw m 6 p.1x30
36	2.1470.002.2	3	washer 6, d128
37	0.007.3885.3/20	1	tube
128	2.4539.180.0	1	hydraulic pump 8.4 cc sx/lh/li COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.4539.180.0 ☞ 06.00.25
130	2.4539.190.0	1	hydraulic pump 8 cc sx/lh/li - BOSCH - COMPONENT PARTS SEE COMPONENTS LIST ☞ 2.4539.190.0 ☞ 06.00.26

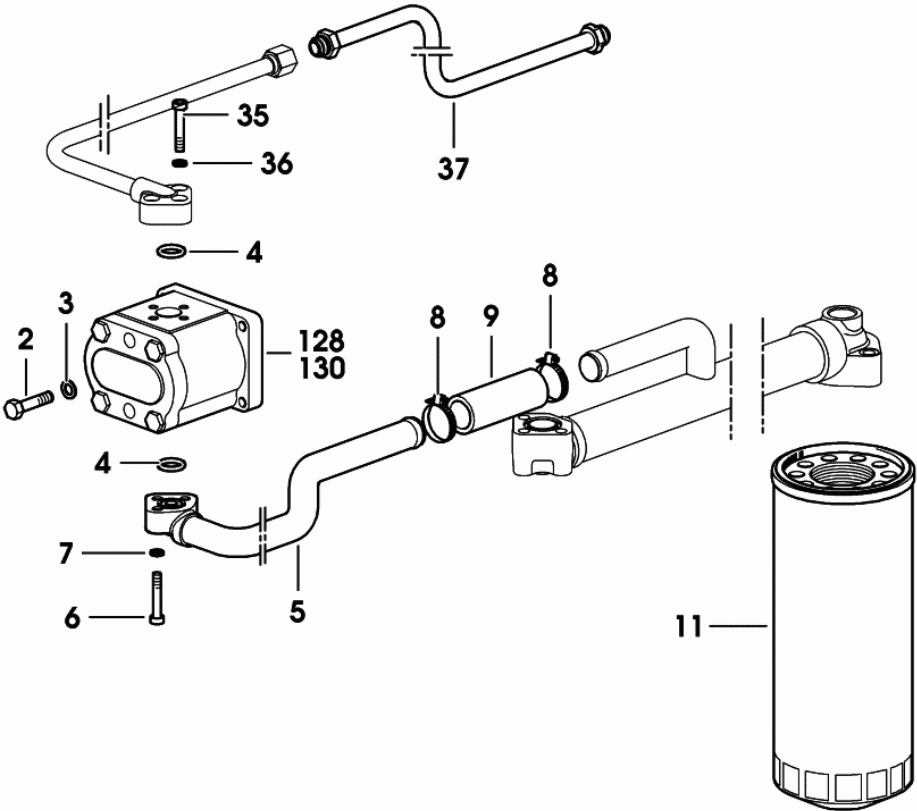

Section: WHEELS
REAR WHEEL BOLTS


Fig.	Code	QTY	Name
1	2.0399.129.6	16	screw m 18 p.1.5 x 38
2	2.1599.501.6/10	16	washer 19 x 40 x 7.5

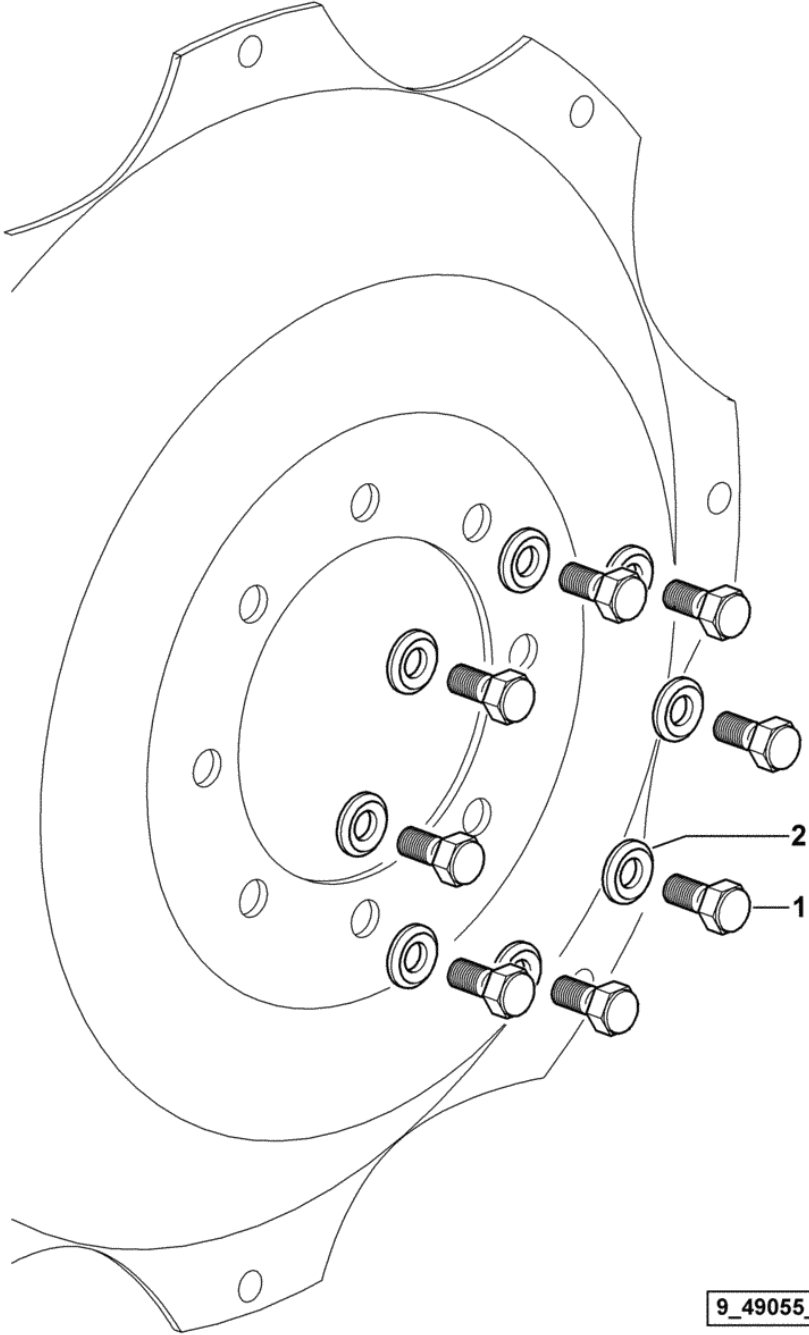

9_49055_03_0_0

Section: WHEELS
WHEELS 300/65R18"

Fig.	Code	QTY	Name
1	0.000.0000.1	0	not serviceable
1.1	0.012.2862.3	1	rim W 9x18 C/ST.
1.2	0.011.5697.0	1	flange
1.3	2.0099.005.6	4	screw m 16 p.1.5 x 38
1.4	2.1499.019.6	4	washer 16.3 x 31.5
1.5	2.1019.059.6	4	nut m 16 p.1.5 x 16
2	2.4811.183.0	2	tyre 300/65R18"
3	0.012.6364.0	2	valve

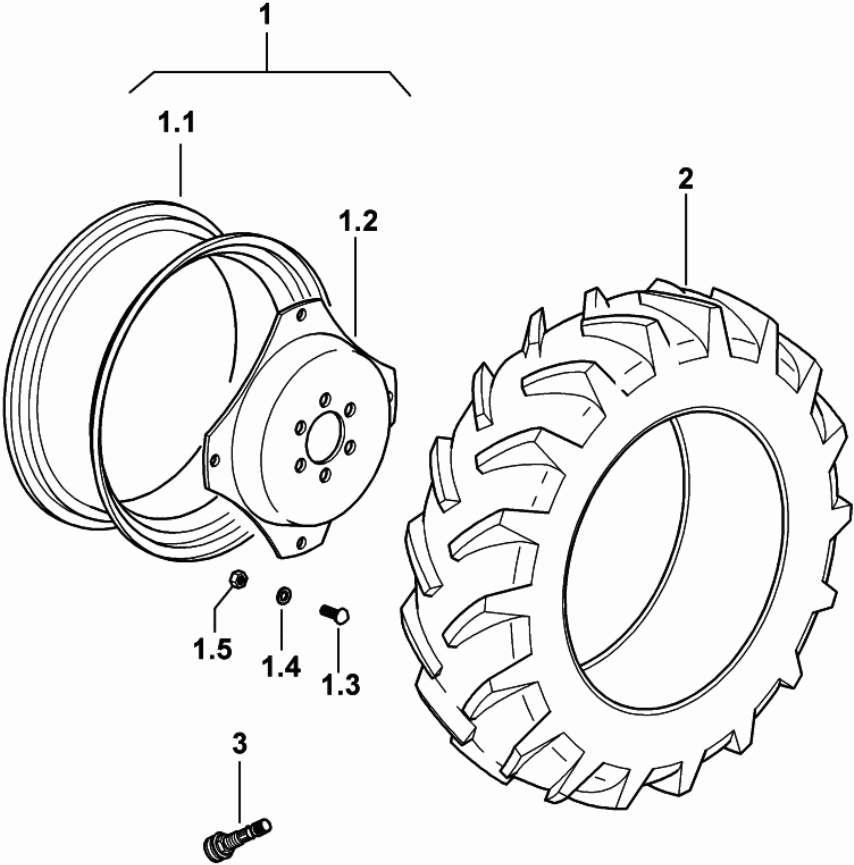

9_B6155_20_0_0

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL