

Spare parts catalogue **S4R U.S.A.**

DUCATI *MONSTER*

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

DRAWING 001a WORKSHOP SPECIAL TOOLS


NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	88713.1096	Tool for overhauling SHOWA forks - assembling seal ring		1
2	0000.70139	Wrench for front wheel spindle		1
3	88713.1213	Tool for assembling chain		1
4	88713.1071	Stopper for assembling the rocker needle bearings		1
5	88713.1040	Frame/engine mount		1
6	88713.1072	Stopper for driving the half bearing of the steering head base		1
7	88713.0957	Tool for holding SHOWA fork spacer		1
8	88713.1058	Wrench for assembling the steering head cap		1
9	88713.1062	Tool for assembling the steering head bearings		1
10	88713.1073	Tool for balancing rear wheel		1
11	88713.1038	Wrench for adjusting the eccentric hub		1

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
-----------	----------	-------------	----------	--

DRAWING 004

CLUTCH


NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	0659.16.555	Clutch spring		6
2	841.1.002.2A	Retainer		6
3	818.2.009.1A	Clutch control pin		1
4	771.5.043.8B	Screw		6
5	851.4.001.1A	Lock washer		1
6	764.1.003.1B	Rubber pad		12
7	162.1.001.1B	Plate holder hub		1
8	190.2.011.1A	Clutch plates set		1
9	851.1.001.1B	Lock washer		1
10	196.1.001.2B	Clutch drum		1
11	70610.8120	Screw		8
12	194.2.001.1B	Pressure plate		1
13	198.1.029.1A	Clutch housing		1
14	702.5.016.1A	Bearing		1
15	463.2.053.7A	O-ring		1
16	930.4.035.1A	Seal ring		1
17	170.2.020.1B	Clutch/crankshaft gears pair		1
18	702.5.051.1A	Bearing		1
19	881.2.001.1A	Circlip - spacer		1
20	702.4.017.1A	Bearing		1
21	0660.16.145	Spacer		1
22	195.4.003.1A	Piston assembly		1
23	710.1.002.1A	Bush		1
24	74224.0570	Pin		1
25	750.1.002.1B	Nut		1
26	886.4.118.1A	O-ring		1
27	886.4.043.1A	O-ring		1


NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
28	771.5.065.8B	Screw		3
29	117.2.006.1A	Clutch control rod		1
30	93823.2018	O-ring		2
31	713.1.012.1B	Spacer		1
32	93823.0128	O-ring		1

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07

DRAWING 009 FILTERS AND OIL PUMP


NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	174.2.025.6A	Complete oil pump		1
2	886.4.037.1A	O-ring		1
3	593.1.018.1A	Bypass valve		1
4	852.1.120.1A	Aluminium gasket		1
5	780.1.018.1A	Bypass cap		1
6	873.1.037.1A	Cap		1
7	799.1.055.1A	Bypass spring		1
8	771.5.129.8B	Screw		2
9	853.1.002.1A	Spring washer		2
10	771.5.069.8B	Screw		1
11	853.1.004.1A	Spring washer		1
12	174.1.025.2A	Pump drive gear		1
13	710.1.001.1A	Bush		1
14	799.2.077.2A	Bypass spring		1
15	0759.49.280	Locating bush		2
16	220.3.208.3A	Gasket		1
17	780.2.047.1A	Oil drain plug with magnet		1
18	852.5.005.1A	Gasket th.1,5		1
19	894.2.009.1A	Oil filter		1
20	444.4.003.4A	Oil filter cartridge		1
21	815.1.028.1A	Nipple		1
22	93827.0114	O-ring		1
23	779.1.198.2A	Cap		1
24	884.4.042.1A	Snap ring		1
25	884.5.036.1A	Circlip		1
26	0670.49.310	Reduction bush		1
27	779.1.162.2A	Cap		1


NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
28	852.1.195.1A	Gasket th.2		1

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07

DRAWING 013 HEAD

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	301.2.095.2A	Head (2,3,4,6 included)		2
2	303.1.009.1A	Intake valve bronze guide		4
2	303.1.009.1AB	Oversize valve guide 0.03		4
2	303.1.009.1AC	Oversize valve guide 0.06		4
2	303.1.009.1AD	Oversize valve guide 0.09		4
3	303.1.015.1A	Exhaust valve bronze guide		4
3	303.1.015.1AB	Oversize valve guide 0.03		4
3	303.1.015.1AC	Oversize valve guide 0.06		4
3	303.1.015.1AD	Oversize valve guide 0.09		4
4	304.1.026.1A	Intake valve seat		4
4	304.1.026.1AB	Oversize intake valve seat 0.03		4
4	304.1.026.1AC	Oversize intake valve seat 0.06		4
5	210.1.022.2A	Intake valve		4
6	304.1.012.2A	Exhaust valve seat		4
6	304.1.012.2AB	Oversize exhaust valve seat 0.03		4
6	304.1.012.2AC	Oversize exhaust valve seat 0.06		4
7	211.1.010.2A	Exhaust valve		4
8	764.1.002.1A	Rubber pad		8
9	840.2.002.1B	See table		8
10	669.1.001.1E	Split rings		16
11	840.2.001.1A	See table		8
12	821.1.004.1A	Closing rocker shaft		8
13	799.1.015.1A	L.H. valve return spring		4
14	209.1.002.7A	L.H. Closing rocker		4
15	209.1.001.7A	R.H. Closing rocker		4
16	799.1.014.1A	R.H. valve return spring		4
17	821.1.003.1A	Exhaust opening rocker shaft		4

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
18	208.1.002.7A	L.H. Opening rocker		4
19	208.1.001.7A	R.H. Opening rocker		4
20	821.1.002.1A	Opening rocker shaft		4

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.


CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


DRAWING 018 OIL COOLER

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	548.4.044.1A	Oil cooler		1
2	852.5.024.1A	Gasket th.1		2
3	764.1.022.1A	Vibration damper pad		2
4	713.1.304.1A	Spacer		1
5	772.5.033.1A	Screw		1
6	875.1.055.1A	Oil return pipe		1
7	875.1.054.1A	Oil delivery pipe		1
8	779.1.083.1A	Special screw		1
9	875.1.027.1A	Oil delivery pipe		1
10	741.4.033.1A	Hose guide		1
11	771.5.064.8B	Screw		1
12	787.1.005.1A	Copper gasket		4
13	779.1.086.1B	Special screw		2
14	779.1.058.1A	Special screw		1

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
-----------	----------	-------------	----------	--

DRAWING **023** EXHAUST SYSTEM

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	790.1.001.2A	Exhaust gasket		2
2	570.2.095.1B	Horizontal head exhaust pipe		1
3	572.1.012.1D	Presilencer		1
4	571.1.095.1B	Vertical head exhaust pipe		1
5	573.1.077.5A	Top RH silencer (REMUS)		1
6	571.1.096.1A	Vertical head exhaust pipe		1
7	570.1.096.1A	Horizontal head exhaust pipe		1
8	247.1.181.1A	Exhaust guard		1
9	576.1.044.1A	Clamp		4
10	573.1.078.5A	Bottom Rh silencer (REMUS)		1
11	247.1.217.1A	Exhaust guard		2
12	775.1.022.1B	Screw		2
13	852.5.009.1A	Washer		2
14	716.1.119.1B	Spacer		2
15	775.1.035.1C	Screw		4
16	780.1.007.1A	Cap		2
17	852.5.024.1A	Gasket th.1		2
18	748.1.024.1A	Nut		6
19	576.1.042.1A	Bracket		1
20	772.5.037.1AB	Screw		4
21	764.1.001.1A	Rubber pad		2
22	80A0.62649	Holder		2
23	764.1.024.1A	Vibration damper pad		4
24	713.1.082.1A	Spacer		8
25	772.5.038.1A	Screw		2
26	772.5.033.1A	Screw		2
27	684.1.044.1A	Stud bolt		1

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
28	771.5.727.8B	Screw		1
29	716.1.107.1B	Spacer		4
30	852.1.072.1A	Washer		12
31	779.1.247.1B	Screw		2
32	764.1.071.1A	Rubber pad		1
33	790.1.012.1A	Gasket		2
34	748.4.034.1B	Nut		1

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07

CATALOGUE No: 915.1.187.2D
ISSUED: 01 - 07


DRAWING 027 FRONT FORK

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	340.2.069.1C	R.H. fork leg assembly		1
2	349.1.095.1A	Centering ring		2
3	349.1.112.1C	Spring coupling		2
4	340.2.070.1C	L.H. fork leg assembly		1
5	884.1.005.1A	Ring		2
6	347.1.014.1A	Spring		2
7	349.1.097.1A	Spring coupling		2
8	349.1.064.1A	Slider		2
9	349.1.065.1A	Rubber cush drive hub		2
10	349.2.014.1A	Complete cap		2
11	349.1.098.1A	Snap ring		2
12	741.1.022.1A	R.H. clamp		2
13	772.5.026.1B	Screw		4
14	741.1.021.1A	L.H. Clamp		2
15	349.2.010.1A	Adjusting screw		2
16	349.1.096.1A	Special washer		2
17	349.1.109.1F	Complete R.H. slider		1
18	349.1.101.1A	Dust seal		2
19	930.1.005.1A	Seal ring		2
20	349.1.102.1A	Check ring		2
21	349.1.103.1A	Bush		2
22	349.1.111.1A	Stanchion tube		2
23	349.1.110.1F	Complete L.H. slider		1

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
-----------	----------	-------------	----------	--


DRAWING 032

REAR SUSPENSION

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	372.2.008.3A	Rocker assembly		1
2	93781.1824	Seal ring		2
3	701.4.006.1A	Needle bearing		4
4	710.1.025.1A	Bush		4
5	771.5.938.8B	Screw		1
6	365.2.052.1A	Shock absorber		1
7	771.5.937.8B	Screw		1
8	715.1.004.1A	Spacer		1
9	710.1.085.1A	Spacer		1
10	771.1.015.1A	Screw		1
11	771.1.016.1A	Screw		1
12	750.1.111.1B	Special nut		1
13	848.4.027.1A	Ball joint		1
14	417.9.090.1B	Nut		1
15	848.4.026.1A	Ball joint		1
16	875.1.038.2A	Tie rod		1
17	747.1.006.1B	Nut		1
18	710.1.088.1A	Spacer		1
19	872.1.046.1A	Cap		1


NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
-----------	----------	-------------	----------	--

DRAWING 037 FRONT HEAD-LIGHT

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	520.4.006.1C	Complete headlight		1
2	852.5.028.1A	Washer		1
3	521.4.005.1A	Lamp holder		1
4	723.1.003.1A	Cap		1
5	510.1.075.1A	Electric wiring		1
6	771.5.667.8B	Screw		3
7	829.1.099.1D	Headlight holder		1
8	830.1.194.1A	R.H. bracket		1
9	530.4.007.3A	Turn indicator		1
10	771.5.069.8B	Screw		1
11	0796.38.305	Bulb 55/60W		1
12	764.1.090.1A	Rubber pad		4
13	716.1.022.1B	Spacer		4
14	758.1.014.1A	Fairlead		1
15	0659.38.226	Bulb 4W		1
16	530.4.008.3A	Turn indicator		1
17	750.5.001.1B	Nut		4
18	779.5.056.1A	Screw		2
19	841.1.017.1A	Retainer		2
20	830.1.195.1A	L.H. bracket		1
21	881.1.035.1A	Ring		1
22	0797.41.090	Fairlead rubber ring		1

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
-----------	----------	-------------	----------	--

DRAWING 041 HEADLIGHT FAIRING

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
1	0370.72.020	Vibration damper pad		2
2	779.1.475.1A	Screw		2
3	850.4.082.1A	Insert		2
4	481.1.023.2AJ	Headlight fairing (RED/WHITE STRIP)		1
4	481.1.023.2AK	Headlight fairing (BLACK/WHITE STRIP)		1
4	481.1.023.2AU	Headlight fairing (BLUE/WHITE STRIP)		1
5	487.1.023.2A	Windshield		1
6	0000.63161	Washer		2
7	775.1.017.1A	Screw		2
8	772.5.029.1A	Screw		2
9	749.4.031.1A	Nut		2
10	436.1.149.1A	White strip		1

NOTES NO.	CODE NO.	DESCRIPTION	VALIDITY	Q.TY 
-----------	----------	-------------	----------	--

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL