


Spare parts catalogue

ARX 91

Cummins

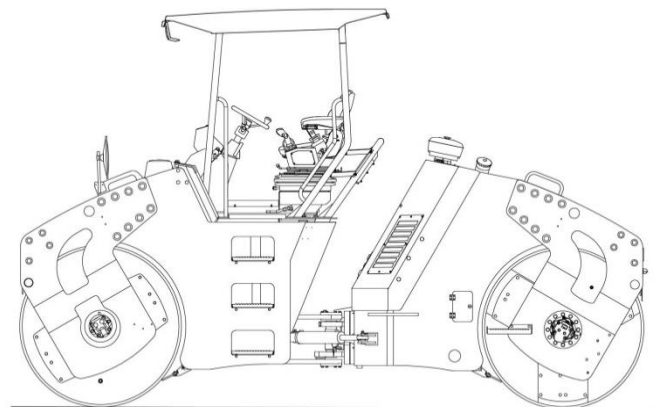

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

	Article	Description
005	AF-O-462-005	ARX 91 Hydraulic System
005-001	1472690	Lifting Hydraulics Assembly
005-002	1472662	Hydraulic Hose Fitting
005-003	1472663	Hydraulic Hose
005-004	1472700	Hydraulic Hose Clamps
006	AF-O-462-006	ARX 91 Electrical System
006-001	1472696	Panel Plate Assembly
006-002	1472734	Controller Box
006-003	1472697	Electrical Materials
007	AF-O-462-007	ARX 91 Labelling System
007-001	1472659	Emblems
007-002	1472691	Reflectors & Reflective Tapes
007-003	1457173	Name Plate
008	AF-O-462-009	ARX 91 Tool Kit
008-001	1472701	Tool Kit

001-001**1472557**

Pos	Article	Qty.	Unit	Description	Note
29	4-3001512040	2	ST	Hexagonal Head screw	
30	4-3170200105	8	ST	Plain Washer	
31	4-3170200084	3	ST	Plain Washer	
32	4-3900017080	3	ST	Spring Washer	
33	4-3002508020	3	ST	Hexagonal Head screw	
34	4-3170600140	2	ST	Plain Washer	
35	1450868	2	ST	Socket Head Screw	
36	4-3170600130	2	ST	Plain Washer	
37	4-3114312030	2	ST	Socket Head screw	
38	1472596	1	ST	Diesel Filter Bracket	
39	1472671	1	ST	Engine cover Bracket	
40	4-3001510065	12	ST	Hexagonal Head screw	
41	4-3114310030	2	ST	Socket head screw	
42	4-3170600100	2	ST	Plain Washer	
43	4-3114305025	2	ST	Socket Head screw	
44	4-3114305016	2	ST	Socket Head screw	
45	4-3900017050	4	ST	Spring Washer	
46	1450872	2	ST	Belleville Washer	
47	4-3114310025	4	ST	Socket Head screw	
48	1472675	1	ST	Relay Bracket	
49	1474320	1	ST	Engine oil drain Hose	
50	4-5160600015	1	ST	Cutting Ring	
51	4-6090010415	1	ST	Sealing Ring	
52	4-13219	1	ST	Hollow Screw	
53	4-9540000012	1	ST	Sealing Plug	
54	4-5160670139	1	ST	Bulk Head Elbow	
55	4-5531020073	3	ST	Hose Clamp	
56	1474319	1	ST	Fuel Return Hose	
57	1474318	1	ST	Filter to Engine Hose	
58	1474317	1	ST	Tank to Filter Hose	
59	1472031	2	ST	Connector	
60	1482398	1	ST	Ground Strap	
61	4-3048500100	2	ST	Hexagonal Nut	

001-004**1472584**

Pos	Article	Qty.	Unit	Description	Note
0	1472584	1	ST	Intake&Exhaust Assembly	
1	1457038	1	ST	Tb Hose Clamp	
2		1	ST	Air Cleaner	
2.01	1450897	1	ST	Primary Air Filter	
2.02	1450898	1	ST	Secondary Air Filter	
3	1472588	1	ST	Air Cleaner Holding Bracket	
4	1457031	1	ST	Tb Hose Clamp	
5	1450911	1	ST	Silencer Inlet Pipe	
6	1450910	1	ST	Exhaust Silencer	
7	1450909	1	ST	Silencer Tail Pipe	
8	1450904	1	ST	Air Intake Hose	
9	1472585	1	ST	Air Intake Tube	
10	1472591	1	ST	U-Bolt Calmp	
11	1472672	1	ST	U-Bolt Clamp	
12	4-3048500100	8	ST	Hexagon nut	
13	4-3170200105	8	ST	Plain Washer	
14	4-3002508018	1	ST	Hexagon head screw	
15	4-3900017080	1	ST	Spring washer grooved	
16	4-09782A	1	ST	Washer	
17	4-3002510025	4	ST	Hexagon head screw	
18	4-3002510020	3	ST	Hexagon head screw	
19	4-3900017100	7	ST	Spring washer Grooved	
20	1472097	1	ST	Nipple	
21	1472699	1	ST	Insulation Tape	

002-001-002**4-15330**

Pos	Article	Qty.	Unit	Description	Note
0	4-15330	1	ST	Housing	
1	4-15331	1	ST	Housing	
2	4-06766A	1	ST	Cap	
3	4-06767A	1	ST	Cover	
4	4-06822A	1	ST	Washer	
5	4-06823A	1	ST	Washer	
6	4-06824A	3	ST	Washer	
7	4-3002506014	12	ST	Hexagon head screw	

003-001**1472330**

Pos	Article	Qty.	Unit	Description	Note
0	1472330	1	ST	Front Frame	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

003-006**1472477**

Pos	Article	Qty.	Unit	Description	Note
0	1472477	1	ST	Showering Assembly	
1	1472710	2	ST	Pipe for Sprinkler	
2	1456308	8	ST	Eyelet Clamp	
3	1472713	2	ST	Connector	
4	1455771	2	ST	Hex Head Plug	
5	1290711	8	ST	Round Hole Cap	
6	4-6150090034	8	ST	Filter	
7	4-6150090029	8	ST	Tongue Nozzle	
8	4-10333A	1	ST	Holder Plate	
9	1472486	1	ST	Angle Plate	
10	1472476	1	ST	Housing	
11	4-5325110014	2	ST	Reduction Connector	
12	4-5325110009	1	ST	Reduction Connector	
13	4-9500600034	2	ST	Water pump	
14	4-9500600035	4	ST	Swivel Elbow	
15	4-5358520088	1	ST	Water filter	
16	4-5326020006	1	ST	Ball Valve	
17	4-5531020055	2	ST	Connector	
18	4-5531020052	1	ST	Connector	
19	4-5531020054	4	ST	Connector	
20	4-5531020002	22	ST	Hose clamp	
21	4-3002508018	2	ST	Hexagon head screw	
22	4-3113105025	8	ST	Socket head cap screw	
23	4-3002510025	3	ST	Hexagon head screw	
24	4-3002508014	2	ST	Hexagon head screw	
25	4-3048500100	3	ST	Hexagon nut	
26	4-3170200053	8	ST	Plain Washer	
27	4-3170200084	6	ST	Plain Washer	
28	4-3170200105	3	ST	Plain Washer	
29	4-3174000082	6	ST	Lock washer	
30	4-3174000102	3	ST	Lock washer	
31	4-3001508090	2	ST	Hexagon head screw	
32	4-3149200080	2	ST	Lock Nut	
33	4-3048500080	2	ST	Hexagon nut	
34	1457023	6	ST	Pipe Clamp	
35	4-6160090555	9	M	Hose	

004

AF-O-462-004

Pos	Article	Qty.	Unit	Description	Note
1	1472350	1	ST	Operator Platform	
2	1472455	1	ST	Platform Support	
3	1472429	1	ST	Travel Control	
4	1472434	1	ST	Platform Railing	
5	1472631	1	ST	Bonnet	

004-003-001**1472431**

Pos	Article	Qty.	Unit	Description	Note
0	1472431	1	ST	Drive Mechanism	
1	4-04427A	1	ST	Connecting rod	
2	4-04452A	2	ST	Lever Rod	
3	4-04426A	1	ST	Left Lever	
4	4-04453A	1	ST	Yoke	
5	4-9502000961	4	ST	Angular Joint	
6	4-04425A	1	ST	Right Lever	
7	4-04454A	2	ST	Pull Rod	
8	4-9200600013	2	ST	Lever Grip	
9	4-9540000143	1	ST	Angle Transmitter	
10	4-04457A	1	ST	Hanger	
11	4-04461A	1	ST	Probe Pin	
12	4-5422120023	2	ST	Inductive Proximity Sensor	
13	4-04463A	2	ST	Holder	
14	4-04456A	1	ST	Ring	
15	4-04464A	2	ST	Armrest Cover	
16	4-04462A	2	ST	Lever Pin	
17	4-04584A	2	ST	Lower Cover	
18	4-3738005010	16	ST	Oval head screw	
19	4-4100020039	1	ST	Tension spring	
20	4-04690A	2	ST	Wing Plate	
21	4-3910001223	2	ST	Bush	
22	4-3738005016	8	ST	Oval head screw	
23	4-11545A	1	ST	Lever	
24	4-11544A	1	ST	Wing	
25	1472432	1	ST	Cabinet Mechanism	
26	4-3149200060	1	ST	Lock Nut	
27	4-3118106008	1	ST	Adjusting Screw	
28	4-5535010012	2	ST	External Circlip	
29	4-3048500080	8	ST	Hexagon nut	
30	4-3149200100	1	ST	Lock Nut	
31	4-3174000082	8	ST	Lock washer	
32	4-3001508040	4	ST	Hexagon head screw	
33	4-3002508025	2	ST	Hexagon head screw	

004-005**1472631**

Pos	Article	Qty.	Unit	Description	Note
33	1472549	2	ST	Washer	
34	4-3048500050	8	ST	Hexagon Nut	
35	4-3002506016	3	ST	Hexagon head screw	
36	4-3170200130	8	ST	Plain Washer	
37	1472656	1	ST	Bonnet Grille LH	
38	1472657	1	ST	Bonnet Grille LH	
39	4-3002506010	16	ST	Hexagon head screw	
40	1472685	1	ST	Rubber Profile	
41	J902123	2	ST	Hexagon Nut	
42	4-5536210003	2	ST	Greasing Nipple	
43	4-3170200064	2	ST	Plain Washer	
44	1472629	1	ST	Cover Handle	
45	1472117	2	ST	Candy Rubber	
46	1502847	1	ST	Air Pre-Cleaner	

005-003**1472663**

Pos	Article	Qty.	Unit	Description	Note
0	1472663	1	ST	Hydraulic Hose	
1	1474290	1	ST	Hose	
2	1474291	1	ST	Hose	
3	1474294	1	ST	Hose	
4	1474295	1	ST	Hose	
5	1474269	1	ST	Hose	
6	1474261	1	ST	Hose	
7	1474262	1	ST	Hose	
8	1474263	1	ST	Hose	
9	1474264	1	ST	Hose	
10	1474301	1	ST	Hose	
11	1474302	1	ST	Hose	
12	1474298	1	ST	Hose	
13	1474299	1	ST	Hose	
14	1474309	1	ST	Hose	
15	1474307	1	ST	Hose	
16	1474305	1	ST	Hose	
17	1474306	1	ST	Hose	
18	1474270	1	ST	Hose	
19	1474266	1	ST	Hose	
20	1474268	1	ST	Hose	
21	1474304	1	ST	Hose	
22	1474277	1	ST	Hose	
23	1474278	1	ST	Hose	
24	1474273	1	ST	Hose	
25	1474275	1	ST	Hose	
26	1474303	1	ST	Hose	
27	1474297	1	ST	Hose	
28	1474300	1	ST	Hose	
29	1474271	1	ST	Hose	
30	1474265	1	ST	Hose	
31	1474267	1	ST	Hose	
32	1474289	1	ST	Hose	
33	1474286	1	ST	Hose	

006-001**1472696**

Pos	Article	Qty.	Unit	Description	Note
34	4-3113104012	2	ST	Socket Head Cap Screw	
35	J902260	2	ST	Plain Washer	
36	4-3149200040	2	ST	Lock Nut	
37	4-5358010401	1	ST	Ignition Lock	
37.01	1502694	1	ST	Ignition Key	
38	4-5358010402	1	ST	Flap	

007-001**1472659**

Pos	Article	Qty.	Unit	Description	Note
0	1472659	1	ST	Emblems	
1	1472504	2	ST	Logo ARX91	
2	4-6531012942	3	ST	Hazard symbol	
3	4-6531012941	4	ST	Hazard symbol	
4	4-6531012428	1	ST	Symbol operating manual	
5	4-6531012158	1	ST	Symbol Hydraulic Oil	
6	4-6531013201	1	ST	Symbol Hood lifting	
7	4-6531012668	1	ST	Symbol Disconnect wiring before welding	
8	4-6531012225	1	ST	Symbol Electric Apparatuses	
9	4-6531012153	4	ST	Symbol Sling Points	
10	4-6531013227	1	ST	Symbol	
11	4-6531012584	1	ST	Symbol	
12	4-6531013017	1	ST	Symbol	
13	4-6531012167	2	ST	Symbol	
14	4-6531012151	1	ST	Symbol	
15	4-6531012586	2	ST	Symbol	
16	4-6531013205	1	ST	Symbol	
17	4-6531012409	1	ST	Symbol	
18	4-6531012152	1	ST	Symbol	
19	4-6531013207	1	ST	Symbol	
20	4-6531013208	4	ST	Symbol	
21	4-6531012601	1	ST	Symbol	
22	4-6531012702	1	ST	Symbol	
23	4-6531012687	1	ST	Symbol	
24	4-6531013291	2	ST	Symbol Logo AMMANN	
25	4-6531013443	2	ST	Symbol Logo AMMANN	
26	4-6531013210	1	ST	Symbol Logo	
27	1482363	1	ST	Symbol Number Border	
28	4-6531012475	1	ST	Symbol	
29	4-6531012775	1	ST	Symbol	
30	4-6531013048	4	ST	Symbol	
31	4-6531013212	1	ST	Symbol	
32	4-6531013237	1	ST	Symbol	
33	4-6531013292	1	ST	Symbol	
34	4-6531012408	1	ST	Symbol	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL