

## Quality Parts

OS 3.0

Valid for machine number..... 268927AA-271425AA

Only valid for machine number..... 

--	--	--	--	--	--	--	--	--	--

Ordering number ..... 147899

Date ..... 1995-05-04 / ITS / ESIF

Language..... GB; SE; DE; FR

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

## 0340-006 Inspection covers

[1995-04-27]

Huvar, luckor; Hauben, Abdeckungen; Capots, couvercles

			346 OS 3.0	262700 - 271425
Pos	Description	Pcs	Part No	Note
11	Cover. Lucka; Deckel; Couvercle	1	138535	
12	Screw Skruv; Schraube; Vis	2	20338	
13	Cover(Plastic) Huv(Plast); Haube(Kunststoff); Capot(Plastique)	1	142122	
14	Screw Skruv; Schraube; Vis	2	28344	
15	Nut Mutter; Mutter; Ecrou	2	28931	
16	Guide Styrning; Steuerung; Guidage	2	134467	
17	Screw Skruv; Schraube; Vis	2	21116	
18	Cover. Lucka; Deckel; Couvercle	1	141961	
19	Screw Skruv; Schraube; Vis	2	28545	
20	Washer Bricka; Scheibe; Rondelle	2	20375	
21	Nut Mutter; Mutter; Ecrou	2	29692	
22	Cover.(C = 260 mm) Lucka; Deckel; Couvercle	1	142077	
22	Cover.(C = 400 mm) Lucka; Deckel; Couvercle	1	142079	
23	Locking plate Låsplåt; Schlussplatte; Lame de serrage	1	142084	
24	Screw Skruv; Schraube; Vis	1	20319	
25	Nut Mutter; Mutter; Ecrou	1	20130	
26	Spring Fjäder; Feder; Ressort	1	143584	
27	Piston Kolv; Kolben; Piston	2	142365	
28	Screw Skruv; Schraube; Vis	2	20683	
29	Spring Fjäder; Feder; Ressort	2	29684	
30	Axle Axel; Achse; Axe	2	27952	
31	Cotter Sprint; Federsplint; D'attelage	2	29700	
32	Screw Skruv; Schraube; Vis	1	117919	
33	Nut Mutter; Mutter; Ecrou	2	20016	
34	Door(B = 263 mm, left) Dörr(B = 263 mm, vänster); Tür(B = 263 mm, Links); Porte(B = 263 mm, gauche)	1	142086	
34	Door(B = 403 mm, left) Dörr(B = 403 mm, vänster); Tür(B = 403 mm, Links); Porte(B = 403 mm, gauche)	1	142088	
35	Door(B = 263 mm, right) Dörr(B = 263 mm, höger); Tür(B = 263 mm, Recht); Porte(B = 263 mm, droit)	1	142087	
35	Door(B = 403 mm, right) Dörr(B = 403 mm, höger); Tür(B = 403 mm, Recht); Porte(B = 403 mm, droit)	1	142089	
36	Lock(Left) Lås(Vänster); Schloss(Links); Verrou(Gauche)	1	142092	



 
**2550-005 Mechanical drive gear unit**

[1998-08-19]

Drivaggregat/-växel; Antriebsaggregat/-getriebe; Groupe de traction, réducteur

Steering arm without servo, Steering wheel system; Manöverarmsstyrning utan servo, Rattstyrning; Steuerarm ohne servo, Lenkrad steuerung; Bras de manoeuvre sans servo, Volant de direction		346 OS 3.0	262700 - 346577	
Pos	Description	Pcs	Part No	Note
01	Driving gear compl. Drivväxel kompl.; Antriebsatz kompl.; Groupe de entraînement compl.	1	139715	
11	Nut Mutter; Mutter; Ecrou	1	139713	
12	Washer Bricka; Scheibe; Rondelle	1	20013	
13	Gear wheel Kuggghjul; Zahnrad; Roue dentée	1	139710	
14	Roller bearing Rullager; Rollenlager; Palier à rouleaux	1	27208	
15	Screw Skruv; Schraube; Vis	2	28343	
16	Shim(0,05 mm) Shims; Schim; Cale		140100-001	
16	Shim(0,2 mm) Shims; Schim; Cale		140100-003	
16	Shim(0,3 mm) Shims; Schim; Cale		140100-004	
16	Shim(0,5 mm) Shims; Schim; Cale		140100-005	
16	Shim(1 mm) Shims; Schim; Cale		140100-006	
17	Shim(0,05 mm) Shims; Schim; Cale		140102-001	
17	Shim(0,1mm) Shims; Schim; Cale		140102-002	
17	Shim(0,2 mm) Shims; Schim; Cale		140102-003	
17	Shim(0,3 mm) Shims; Schim; Cale		140102-004	
17	Shim(0,5 mm) Shims; Schim; Cale		140102-005	
17	Shim(1 mm) Shims; Schim; Cale		140102-006	
18	Bearing Lager; Lager; Roulement	1	29569	
19	O-ring O-ring; O-ring; Joint torique	1	23620	
20	Spare part kit : Bevel gear Reservdelssats : Koniskt kuggghjul; Satz : Kegelrad; Jeux : Roue conique à denture droite	1	142932	
21	Washer Bricka; Scheibe; Rondelle	1	140097	
22	Nut Mutter; Mutter; Ecrou	1	139714	
23	Cap Lock; Deckel; Couvercle	1	139705	
24	Screw Skruv; Schraube; Vis	6	21141	
25	Bearing Lager; Lager; Roulement	1	29570	
26	Gear housing Växelhus; Getriebhäuse; Carter étauche	1	139700	
27	Bearing Lager; Lager; Roulement	1	26312	
28	Shim(0,05 mm) Shims; Schim; Cale		140101-001	
28	Shim(0,1mm) Shims; Schim; Cale		140101-002	

## 3570-019

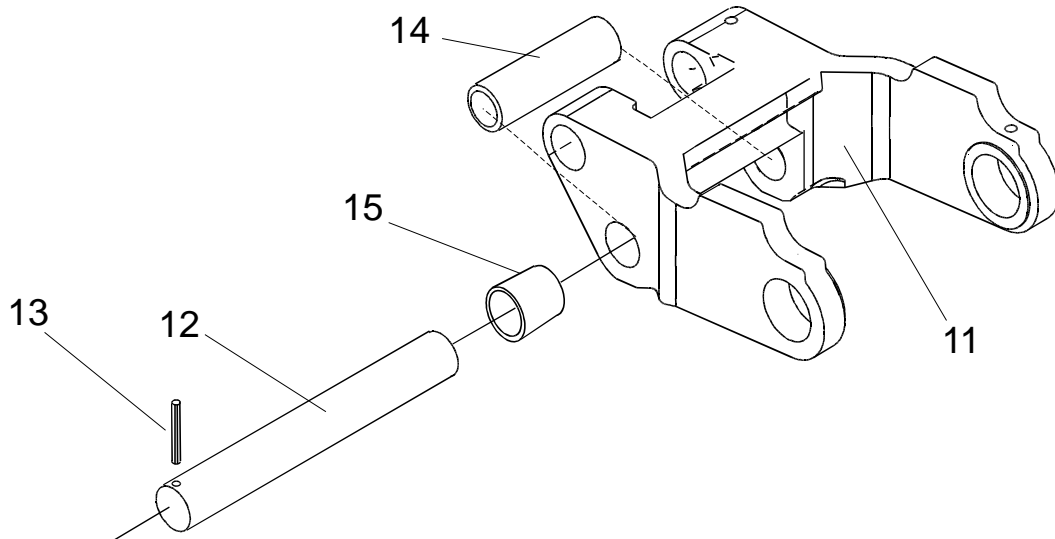

## 3570-019 Wheel locating points

[1996-09-10]

Hjulinfästning/-upphängning; Radaufhängung; Point de fixation/suspension roues

		346 OS 3.0		262700 - 295606	
Pos	Description	Pcs	Part No	Note	
11	Wheel fork Hjulgaffel; Radgabel; Fourche de roue	2	144147		
12	Axle Axel; Achse; Axe	2	143084		
13	Locking pin Spännstift; Spannstift; Goupille	4	20001		
14	Sleeve Hylsa; Hülse; Douille	2	142771		
15	Bush Bussning; Bague; Bague	4	144291		

 
**4120-003 Steering column/gear**

[1998-08-20]

Styrrör/-axel, styrväxel; Lenksäule, Lenkgetriebe; Colonne direction et pignon

Steering arm without servo; Manöverarmsstyrning utan servo; Steuerarm ohne servo; Bras de manoeuvre sans servo		346 OS 3.0	268927 - 336995	
Pos	Description	Pcs	Part No	Note
11	Steering pipe Styrrör; Steuerrohr; Tube de direction	1	147503	
12	Bearing Lager; Lager; Roulement	2	150787	
13	Consol Konsol; Konsole; Console	1	144082	
14	Distance piece Distans; Distanz; Distance	1	140785	
15	Locking ring Spårring; Schliessring; Circlip	1	23233	
16	Key Kil; Keil; Clavette	1	23514	
17	Chain wheel Kedjehjul; Kettenrad; Roue de chaine	1	138391	
18	Steering gear(Complete) Styrväxel(Komplett); Lenkgetriebe(Komplett); Bötier de direction(Complet)	1	141861	
19	Locking ring Spårring; Schliessring; Circlip	1	20019	
20	Chain wheel Kedjehjul; Kettenrad; Roue de chaine	1	141860	
21	Washer Bricka; Scheibe; Rondelle	1	20367	
22	Ball bearing Kullager; Kugellager; Roulement a billes	1	20906	
23	Consol Konsol; Konsole; Console	1	141856	
24	Axle Axel; Achse; Axe	1	141859	
25	Ball bearing Kullager; Kugellager; Roulement a billes	1	20906	
26	Distance piece Distans; Distanz; Distance	1	24115	
27	Key Kil; Keil; Clavette	1	26547	
28	Chain wheel Kedjehjul; Kettenrad; Roue de chaine	1	141855	
29	Locking ring Spårring; Schliessring; Circlip	1	20019	
30	Screw Skruv; Schraube; Vis	2	29695	
31	Screw Skruv; Schraube; Vis	4	20078	
32	Washer Bricka; Scheibe; Rondelle	4	20404	

## 5310-009

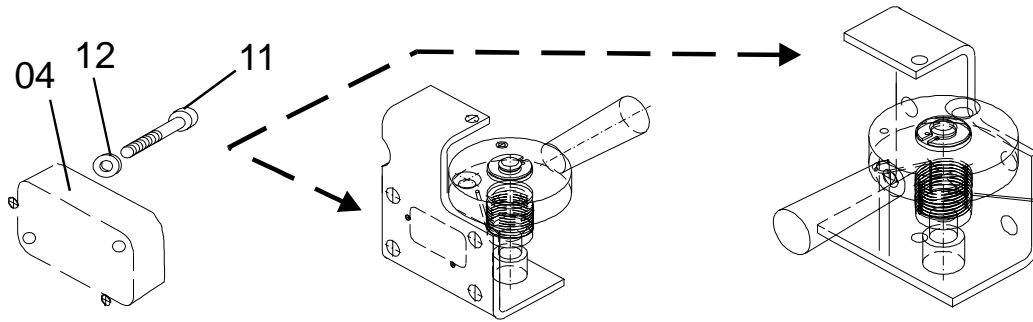

## 5310-009 Start/stop switch

 
[1994-07-06]

Start/stoppströmställare; Schalter Fahren/Anhalten; Interrupteur (coupe-circuit) démarrage/arrêt

Brake; Brooms; Brems; Frein		346 OS 3.0		262700 - 289678	
Pos	Description	Pcs	Part No	Note	
04	Switch(Cold stores) Brytare(Fryshus); Schalter(Gefrieranlage); Rupteur(Chambre frigorifique)	1	148063		
04	Switch Brytare; Schalter; Rupteur	1	28441		
11	Screw Skruv; Schraube; Vis	2	23638		
12	Washer Bricka; Scheibe; Rondelle	2	21392		



5680-006

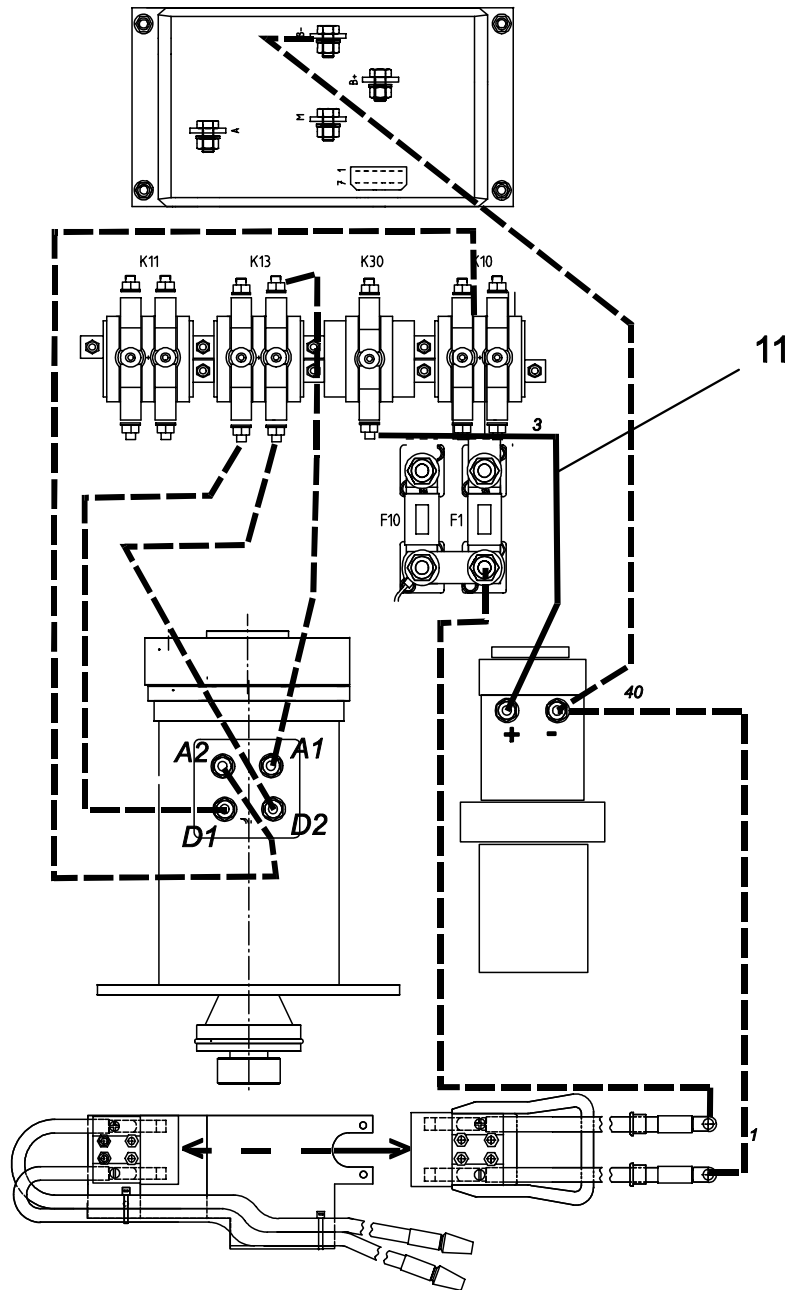


**5680-006 Battery/motor cables, fuse**

[1996-09-10]

Batteri-/motorkablar, säkring; Batterie-/Motor kabel, Sicherung; Câbles de batterie/moteur, fusible

			346 OS 3.0	262700 - 325961
Pos	Description	Pcs	Part No	Note
11	Cable(3) Kabel; Kabel; Câble	1	142735	
 
## 6120-018

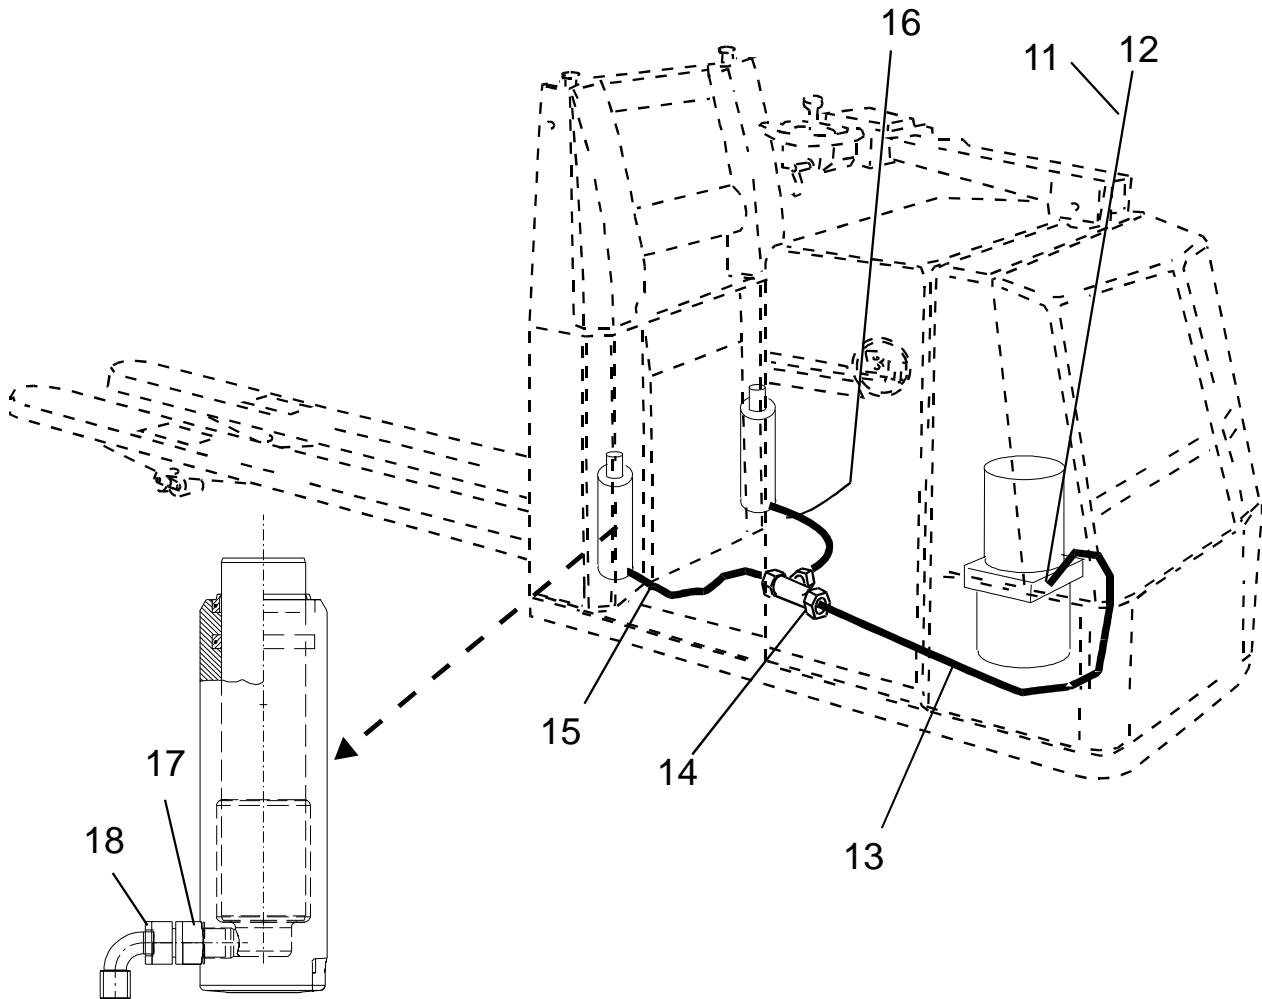

## 6120-018 Hoses and pipes, connection, fixation

[1995-04-26]

Rör-/slangedning, koppl., fastsättning; Rohr/Schlauch/Verschraubung. befestig.; Tuyaux / flexibles raccords

		346 OS 3.0		262700 - 289678	
Pos	Description	Pcs	Part No	Note	
11	Hollow screw Hålskruv; Hohlschraube; Vis à torage	1	29661		
12	Sealing Tätning; Dichtung; Joint	2	23062		
13	Hose Slang; Schlauch; Tuyau flexible	1	147053		
14	Connection Koppling; Kupplung; Raccord	1	28777		
15	Hose Slang; Schlauch; Tuyau flexible	1	142057		
16	Hose Slang; Schlauch; Tuyau flexible	1	142058		
17	Connection Koppling; Kupplung; Raccord	1	28943		
18	Connection Koppling; Kupplung; Raccord	1	28946		

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL