




Quality Parts

CMX6000/8000

Electric Center Riding Pallet Truck

Effective Serial Number CMX__26288001

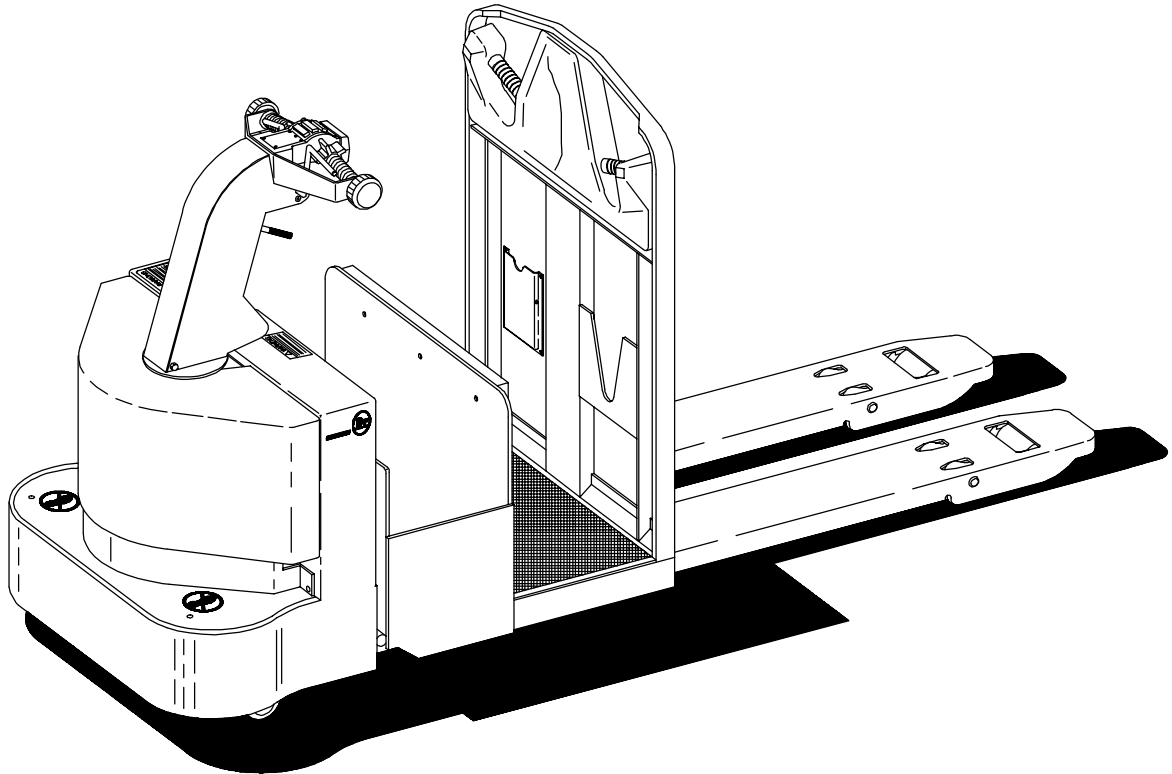

⚠ WARNING Read and observe all warnings on this unit before operating it.

⚠ WARNING **DO NOT** operate this equipment unless all factory installed guards and shields are properly secured in place.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

0340-008 Inspection covers (Shields & guards)

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	301922-020	Screw, flat head	19	
2	302398-000	Pad, knee	1	
3	302830-000	Cushion, backrest with controls	1	
4	302909-000	Cushion, backrest	1	
5	302597-000	Pad, platform	1	
6	305312-000	Plate, platform	1	
7	301955-016	Screw, socket head	2	
8	302379-000	Angle, platform	1	
9	301827-016	Screw, thread form	2	
10	303343-000	Cover	1	
11	306238-000	Door	1	
12	301802-000	Latch	1	
13	302060-000	Plate, latch	1	
14	301652-030	Screw, locking	2	
15	302596-000	Plate, cover	1	
16	301826-016	Screw, thread form	2	
17	302069-000	Bumper, door	2	

2550-003 Mechanical drive gear unit

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
*	301633-006	Transmission assembly	1	
1	301580-001	Case, gear	1	
2	11890-09	Pin, dowel	2	
3	11844-02	Key	1	
4	301887-000	Gear, pinion	1	
5	301654-012	Nut, flanged (Torque 35 ft-lb)	1	
6	303009-025	Screw, socket head (Torque 14 ft-lb)	9	
7	301581-000	Cover, gear case	1	
8	301653-020	Plug, drain/fill pipe	2	
9	11897-05	Washer, sealing	1	
10	11030-21	Bearing, ball	2	
11	301626-000	Gear, idler	1	
12	11205-27	Bearing	2	
13	23007-00	Ring	1	
14	11039-31	Seal	1	
15	164046	Nut, flanged (Torque 250 ft-lb)	1	
16	301627-000	Gear, drive	1	

3550-007 Fork / support arm / outrigger wheels

LOAD WHEEL ASSEMBLY					
	CMX 6000 LBS. (2948kg)		CMX 8000 LBS. (3629kg)		
	VULKOLLAN	URETHANE	VULKOLLAN	URETHANE	
1	302307-001	27626-02	302307-001	27626-03	Wheel load
2	49910-01	49910-01	49910-01	49910-01	Bearing, sealed
3	11030-05	-----	11030-05	11030-05	Bearing, No Seal
4	302287-000	302287-000	302287-000	302287-000	Guard, string

4180-002 Steering / radial bearing

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	301946-001	Seal, small felt	1	
2	-----	Frame, carrier	1	
3	11160-14	Fitting, 90° grease	1	
4	-----	Transmission assembly	1	
5	11205-26	Bearing	1	
6	301946-000	Seal, large felt	1	
7	11205-30	Bearing	1	

5230-003 Voltage / battery indicator

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	306051-000	Display, BDI/Hourmeter lift interrupt, 12 Volt	1	12 Volt
1	306051-001	Display, BDI/Hourmeter lift interrupt, 24 Volt	1	24 Volt
2	306054-000	Harness, wire	1	
3	14915-01	Plug, gauge (Cap)	1	
4	305282-000	Battery discharge indicator, BDI 12 Volt	1	12 Volt
4	305282-001	Battery discharge indicator, BDI 24 Volt	1	24 Volt
5	301445-000	Battery discharge indicator/hourmeter 12 Volt	1	12 Volt
5	301445-001	Battery discharge indicator/hourmeter 24 Volt	1	24 Volt

5440-002 Direction contactors (24 Volt)

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
*	27692-00	Forward/rearward Contactor Assembly	1	24 Volt
1	200076	Base, magnet	1	
2	200077	Coil, field 24 Volt	2	
3	200078	Frame, magnet	2	
4	200079	Spring (RED)	2	RED
5	200080	Armature	2	
6	200081	Base, bu	2	
7K	NSS	Tip, contact	2	
8K	NSS	Tip, contact	1	
9K	NSS	Tip, movable	4	
10	201266	Spring (GOLD)	2	GOLD
11	200085	Insulation	2	
12	201215	Locknut	2	
13	200086	Clamp	4	
14K	NSS	Tip, contact	1	
15	200088	Cover	2	
16	201368	Lockwasher	8	
17	201372	Screw, machine	8	
18	200089	Screw, cap	2	
19	200090	Lockwasher	2	
20	200091	Washer, flat	2	
21K	NSS	Tip, contact	1	
22	200093	Clamp	2	
23	201367	Washer, flat	2	
24	200094	Seat	4	
25	200095	Carrier	2	
26	200096	Bushing	2	
27K	NSS	Tip, contact	1	
28	27704-04	Suppressor	2	
K	301741-000	Kit, contactor tip (Contains Items Marked with "K")	1	

6100-022 Hydraulic pump (Prime-Trak)

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
*	302871-000	Pump and Motor Assembly, Prime-Trak	1	
1	300947-044	Pump assembly	1	
2	300947-045	Cap, relief valve	1	
3	NSS	O ring	1	
4	300947-046	Screw, adjusting valve	1	
5	300947-047	Spring	1	
6	301622-000	Ball	1	
7	201460	Seal, oil	1	
8	300947-048	Ball	1	
9	300947-049	Spring	1	
10	300947-050	Plug	1	
11	300947-051	Valve, NO solenoid	1	
12	302941-000	Coil	1	
13	300947-062	Screw, flat head	2	
14	300947-052	Bracket, mounting	1	
15	300947-053	Spacer	1	
16	300947-054	Coupler	1	
17	300947-055	Motor assembly	1	
*	300947-056	Set, brush	1	
18	300947-057	Boot	2	
19	300947-031	Cable assembly	1	
20	300947-058	Switch Assembly	1	
21	22226-01	Solenoid	1	
22	300947-059	Wire assembly	1	
23	300947-060	Screw, socket head	2	
24	300947-061	Lockwasher	2	
25	201450	Pin, dowel	1	
26	201465	Adapter, pump	1	
27	300947-063	Screw, socket head	2	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL