



BT Prime-Mover

PMX-1

● Operator's Manuals

310520-000 1988_June

300390-001 1989_December



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

SAFETY

WHEN A POWERED INDUSTRIAL TRUCK IS TO BE LEFT UNATTENDED

- A Stop truck.
 - B Lower load-engaging means to the floor.
 - C Place directional controls in neutral.
 - D Apply the brake.
 - E Turn key switch to OFF and disconnect battery connectors.
 - F Block wheels if truck is on a slight incline.
- 8 Maintain a safe distance from the edge of docks and platforms when operating powered industrial trucks. DO NOT use powered industrial trucks while on any elevated dock or platform, to move freight cars.
- 9 ELEVATING PERSONNEL: This truck was not designed for elevating personnel. Refer to ANSI B56.1 1983 for elevating personnel requirements.
- 10 Care shall be taken that overhead installation such as lights, pipes, sprinkler systems, etc. are not contacted.
- 11 A load bracket extension shall be used when necessary to guard against the load, or part of it, falling toward the operator.

WHEN A POWERED INDUSTRIAL TRUCK IS TRAVELING:

- 1 Observe all traffic regulations including authorized plant speed limits. Under normal traffic conditions, keep to the right. Maintain a safe distance, based on speed of travel, from the truck ahead, and keep the truck under control at all times.
- 2 Yield right of way to pedestrians, ambulances, fire trucks or other vehicles in emergency situations.

SAFETY

WHEN A POWERED INDUSTRIAL TRUCK IS TO BE LEFT UNATTENDED

- A Stop truck.
 - B Lower load-engaging means to the floor.
 - C Place directional controls in neutral.
 - D Apply the brake.
 - E Turn key switch to OFF and disconnect battery connectors.
 - F Block wheels if truck is on a slight incline.
- 8 Maintain a safe distance from the edge of docks and platforms when operating powered industrial trucks. DO NOT use powered industrial trucks while on any elevated dock or platform, to move freight cars.
- 9 ELEVATING PERSONNEL: This truck was not designed for elevating personnel. Refer to ANSI B56.1 1983 for elevating personnel requirements.
- 10 Care shall be taken that overhead installation such as lights, pipes, sprinkler systems, etc. are not contacted.
- 11 A load bracket extension shall be used when necessary to guard against the load, or part of it, falling toward the operator.

WHEN A POWERED INDUSTRIAL TRUCK IS TRAVELING:

- 1 Observe all traffic regulations including authorized plant speed limits. Under normal traffic conditions, keep to the right. Maintain a safe distance, based on speed of travel, from the truck ahead, and keep the truck under control at all times.
- 2 Yield right of way to pedestrians, ambulances, fire trucks or other vehicles in emergency situations.

DATA PLATE AND DECALS

SAFETY DECALS

Clean or replace all safety and instruction decals that cannot be read.

When you clean decals, use only a cloth, soap and water. DO NOT use solvent, gasoline, etc.

You must replace a decal if the decal is damaged, missing, or cannot be read.

If a decal is on a part that is replaced, make sure you install a new decal on new part. See your Prime-Mover dealer for new decals. You can get new warning decals from your PRIME-MOVER DEALER at NO charge.

DATA PLATE AND DECALS

SAFETY DECALS

Clean or replace all safety and instruction decals that cannot be read.

When you clean decals, use only a cloth, soap and water. DO NOT use solvent, gasoline, etc.

You must replace a decal if the decal is damaged, missing, or cannot be read.


If a decal is on a part that is replaced, make sure you install a new decal on new part. See your Prime-Mover dealer for new decals. You can get new warning decals from your PRIME-MOVER DEALER at NO charge.

OPERATION

movement, gradually and deliberately move steering control handle to one of two positions, fully raised or fully lowered.

OPERATION

Before operating, be sure the before operation inspection is done and that you are familiar with the controls.

 **WARNING** Before operating and attempting to operate unit, review warnings and controls section of this manual. Know how to stop unit before operating.

OPERATION

- 1 Connect the battery, if not connected.
- 2 Remove blocks from drive wheel.
- 3 Remember that pushing down on the steering control handle will release the brake, and this should be avoided until ready to move unit.
- 4 Turn the key to the "ON" position.
- 5 Put your hands on the steering handle and press down (not all the way). This will release the brake and make power available to the drive motor.
- 6 Turn steering handle until steering is in the desired direction of travel.
- 7 Look in all directions to make sure that your path to travel is clear.
- 8 Put a firm grip on the steering control handle and slowly twist your hands in the direction you want to travel.


To stop travel. Return the steering handle to

OPERATION

movement, gradually and deliberately move steering control handle to one of two positions, fully raised or fully lowered.

OPERATION

Before operating, be sure the before operation inspection is done and that you are familiar with the controls.

 **WARNING** Before operating and attempting to operate unit, review warnings and controls section of this manual. Know how to stop unit before operating.

OPERATION

- 1 Connect the battery, if not connected.
- 2 Remove blocks from drive wheel.
- 3 Remember that pushing down on the steering control handle will release the brake, and this should be avoided until ready to move unit.
- 4 Turn the key to the "ON" position.
- 5 Put your hands on the steering handle and press down (not all the way). This will release the brake and make power available to the drive motor.
- 6 Turn steering handle until steering is in the desired direction of travel.
- 7 Look in all directions to make sure that your path to travel is clear.
- 8 Put a firm grip on the steering control handle and slowly twist your hands in the direction you want to travel.

To stop travel. Return the steering handle to

PRIME-MOVER®

THE PRIME-MOVER CO.
MUSCATINE, IOWA 52761-0879


PRIME-MOVER®

THE PRIME-MOVER CO.
MUSCATINE, IOWA 52761-0879

OPERATION

"NEUTRAL" position and raise or lower (all the way) the steering handle to apply the brake.

- 9 This unit is equipped with a plugging feature which means that you need not brake to a complete stop to change directions. Use the direction/speed control handle to change direction.
- 10 Always be alert for pedestrians, other vehicles or obstacles in your path of travel.
- 11 Remember to enter load slowly and squarely.
- 12 Load should be centered.
- 13 The lift (raising forks) is controlled by pushing down on the raise bar. The forks will continue to raise as long as the bar is depressed or until the lifting stops are reached. Releasing the bar will automatically stop the raising.
- 14 The lower (lowering forks) is controlled by pushing down on the lower bar. The forks will continue to lower as long as the bar is depressed or until the lowering stops are reached. Releasing the bar will automatically stop the lowering.

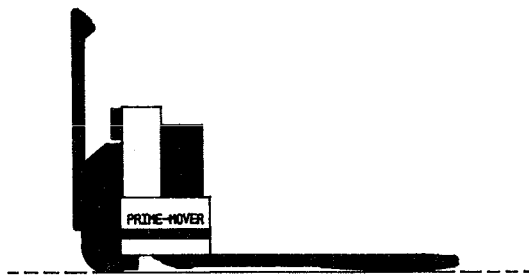

SAFETY

WHEN A POWERED INDUSTRIAL TRUCK IS TO BE LEFT UNATTENDED

- A Stop truck.
 - B Lower load-engaging means to the floor.
 - C Place directional controls in neutral.
 - D Apply the brake.
 - E Turn key switch to OFF and disconnect battery connectors.
 - F Block wheels if truck is on a slight incline.
- 8 Maintain a safe distance from the edge of docks and platforms when operating powered industrial trucks. DO NOT use powered industrial trucks while on any elevated dock or platform, to move freight cars.
 - 9 ELEVATING PERSONNEL: This truck was not designed for elevating personnel. Refer to ANSI B56.1 1983 for elevating personnel requirements.
 - 10 Care shall be taken that overhead installation such as lights, pipes, sprinkler systems, etc. are not contacted.
 - 11 A load bracket extension shall be used when necessary to guard against the load, or part of it, falling toward the operator.

WHEN A POWERED INDUSTRIAL TRUCK IS TRAVELING:

- 1 Observe all traffic regulations including authorized plant speed limits. Under normal traffic conditions, keep to the right. Maintain a safe distance, based on speed of travel, from the truck ahead, and keep the truck under control at all times.
- 2 Yield right of way to pedestrians, ambulances, fire trucks or other vehicles in emergency situations.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL