

 
# PART MANUAL

Manual Part Number 300379-004  
ELECTRIC REACH TRUCK

RR-30/RR-34

Effective Serial Number 238728

---

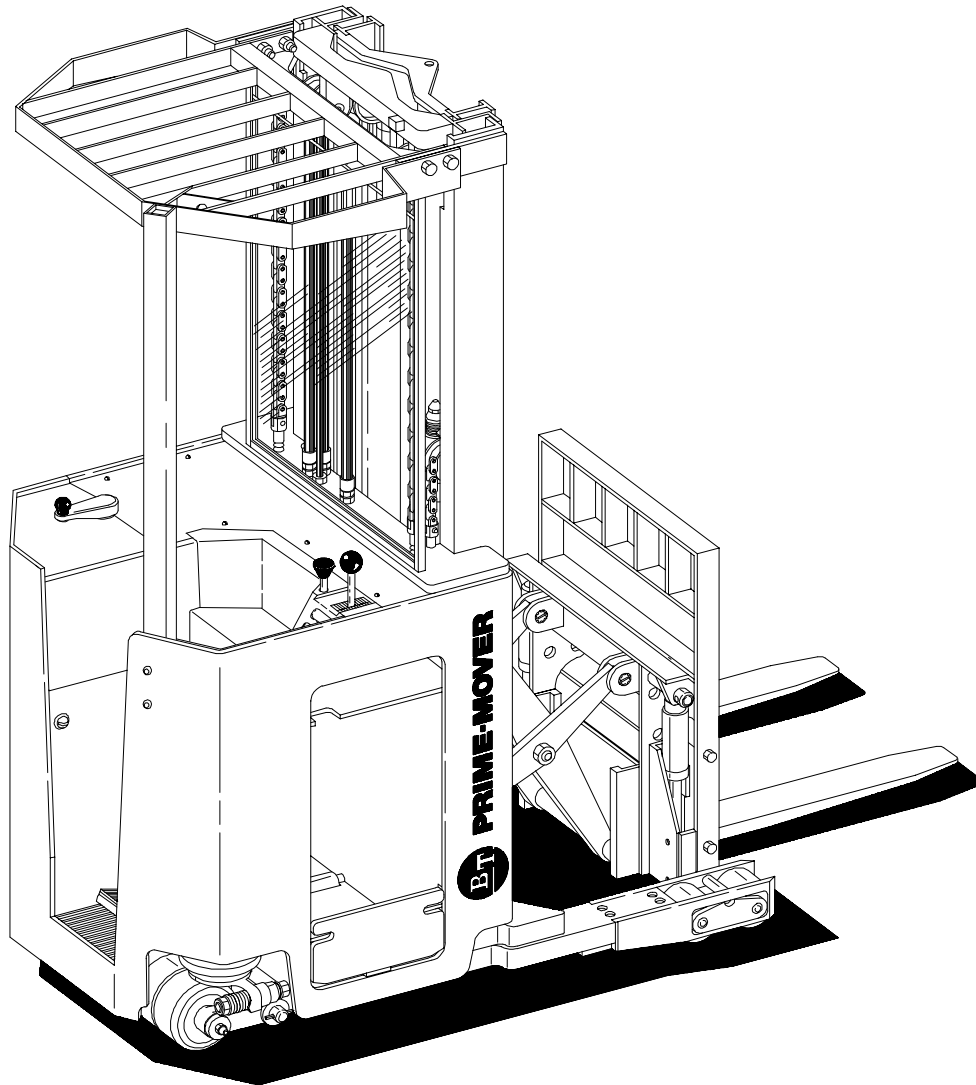

**WARNING** Read and observe all warnings on this unit before operating it.



**WARNING** **DO NOT** operate this equipment unless all factory installed guards and shields are properly secured in place.



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.


CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
1.1	1	14989-18	Screw, cap	4	
1.1	2	-----	Drive motor assembly (See Fig.# 1.2)	1	
1.1	3	14994-06	Screw, cap	4	
1.1	4	11016-04	Washer, flat	6	
1.1	5	-----	Transmission assembly (See Fig.# 1.3 & 1.4)	1	
1.1	6	14994-07	Screw, cap	2	
1.1	7	20904-01	Bumper	1	
1.1	8	40425-00	Shim, .005"	As Req'd.	

 FIGURE # 2.4 ELECTRICAL SCHEMATIC SYMBOLS




DOUBLE TIP CONTACTOR

 


SCR



 
DIODE




SINGLE TIP CONTACTOR

 


CAPACITOR

 

COIL

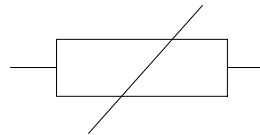 


THERMAL PROTECTOR

 

CONTROL SWITCH



 
RESISTOR




PLUG



 
TRANSFORMER




FUSE

 


ELECTRICAL LINE JOINING

 

ARMATURE

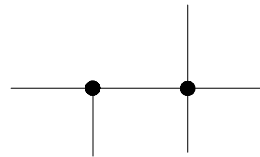 

ELECTRICAL LINE CROSSING

 

FIELD

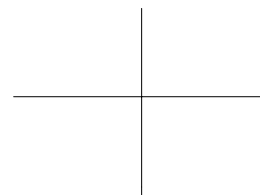 


FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
2.9	1	25332-01	Tie, wire	As Req'd	
2.9	2	41771-00	Harness, wiring (See Fig.# 2.6 & 2.27)	1	
2.9	3	49611-00	Receptacle	1	
2.9	4	49861-05	Relief, strain	1	
2.9	5	52-07920-00	Cable	As Req'd	
			21 FEET	89/192	
			23 FEET	95/210	
			24 FEET	98/216	
			25 FEET	102/225	
			26 FEET	111/240	
			28 FEET	119/258	
2.9	6	11170-06	Nut	1	
2.9	7	15677-08	Clamp	1	
2.9	8	49610-00	Pin	5	
2.9	9	11009-05	Lockwasher	2	
2.9	10	11854-03	Screw, cap	2	
2.9	11	40077-00	Bracket	1	
2.9	12	49609-00	Plug	1	
2.9	13	41255-00	Cable assembly, reach (See Fig.# 2.10)	1	
2.9	14	49608-00	Socket	5	
2.9	15	41588-00	Sleeve, cable	2	
2.9	16	49501-00	Spring	2	
2.9	17	41602-00	Strain relief, clamp	2	
2.9	18	41602-01	Strain relief, fitting	2	
2.9	19	41596-00	Bracket	2	


FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
2.14	1	41757-01	Panel assembly, 24 Volt contactor	1	24 Volt
2.14	1	41757-02	Panel assembly, 36 Volt contactor	1	36 Volt
2.14	2	-----	Contactor, 1A (See Fig.# 2.16)	1	
2.14	3	50000-13	Washer, flat	As Req'd	
2.14	4	50001-11	Lockwasher	As Req'd	
2.14	5	50003-01	Screw, cap (M8x1.25MM 16M LG)	As Req'd	
2.14	6	301122-000	Bar, buss	1	
2.14	6	NOT USED	Bar, buss (NOT USED ON "EE" ONLY)	0	"EE"TYPE
2.14	7	-----	Contactor, lift pump (See Fig.# 2.16)	1	
2.14	*	300113-000	Suppression	1	
2.14	8	-----	Contactor, auxiliary pump (See Fig.# 2.16)	1	
2.14	9	301121-000	Bar, buss	1	
2.14	10	301125-000	Standoff	1	
2.14	11	300110-000	Block, fuse	1	
2.14	12	25275-06	Fuse, 15 AMP control	1	
2.14	13	NSS	Screw, machine (M3.5x0.6MM 8M LG)	1	
2.14	14	301123-000	Bar, buss	1	"E" TYPE
2.14	15	301147-000	Harness, wiring	1	
2.14	16	301120-000	Bar, buss	1	
2.14	17	-----	Contactor, forward & rearward (See Fig.# 2.15)	1	
2.14	18	301126-000	Base	1	
2.14	19	50003-02	Screw, machine (M8x1.25MM 20M LG)	As Req'd.	
2.14	20	50001-11	Lockwasher	As Req'd.	
2.14	21	50000-13	Washer, flat	As Req'd.	
2.14	22	25094-02	Fuse, 500 AMP power (FOR "E" ONLY)	1	"E" TYPE
2.14	22	25094-01	Fuse, 300 AMP power ("EE" DRIVE)	1	"EE"TYPE
2.14	23	25094-03	Fuse, 400 AMP power ("EE" Hydraulic)	1	"EE"TYPE
2.14	24	29408-00	Bar, buss	1	"EE"TYPE
2.14	25	202009	Suppression, forward/rearward	2	
2.14	25	202004	Suppression, 1A contactor	1	

\* - NOT SHOWN BUT IS ON CONTACTOR PANEL ASSEMBLY (SEE ITEM # 25: EXAMPLE)


FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
2.19	*	303016-000	Drive Motor Assembly, 24 Volt	1	24 Volt
2.19	*	303017-000	Drive Motor Assembly, 36 Volt	1	36 Volt
2.19	1	-----	Coil, field	1	
2.19	2	301493-000	Plate assembly, brush	1	
2.19	3	300418-000	Spring, brush	8	
2.19	4	-----	Brush	8	
2.19	5	304273-000	Kit, terminal & lead assembly	1	
2.19	6	300413-000	Ring, retainer	1	
2.19	7	300412-000	Bearing	1	
2.19	8	304274-000	Endhead, commutator	1	
2.19	9	304275-000	Band, head	1	
2.19	10	-----	Armature	1	
2.19	11	304269-000	Fan	1	
2.19	12	304268-000	Endhead, drive	1	
2.19	13	301500-000	Seal, shaft	1	
2.19	14	303333-000	Band kit, head - "EE"	1	"EE"TYPE

	Drive Motor Assembly	
	303016-000 (24 Volt)	303017-000 (36 Volt)
1	304271-000	304277-000
4	304272-000	300430-000
10	304270-000	304276-000

 
FIGURE # 2.26 ELECTRICAL SCHEMATIC SYMBOLS




DOUBLE TIP  
CONTACTOR

 


SCR

 


DIODE

 


SINGLE TIP  
CONTACTOR

 


CAPACITOR

 

COIL

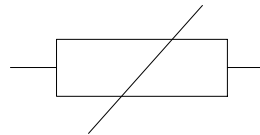 


THERMAL  
PROTECTOR

 

CONTROL  
SWITCH



 
RESISTOR





PLUG



 TRANSFORMER




FUSE

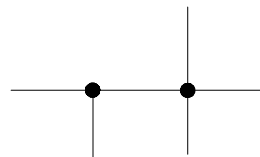  


ELECTRICAL LINE  
JOINING



 ARMATURE

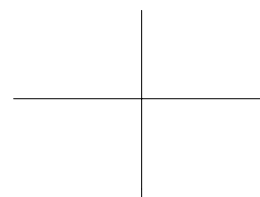

ELECTRICAL LINE  
CROSSING

 

FIELD

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
3.4	1	49582-00	Hose	1	
3.4	2	49582-01	Hose	1	
3.4	3	49653-01	Elbow, 90°	1	
3.4	4	49604-01	O ring	1	
3.4	5	12391-05	O ring	1	
3.4	6	49654-01	Elbow, 45°	1	
3.4	7	49604-01	O ring	1	
3.4	8	12391-05	O ring	1	
3.4	9	-----	Aux. Control Valve (See Fig.# 3.17)	1	
3.4	10	49655-01	Adapter, long	2	
3.4	11	49604-01	O ring	1	
3.4	12	12391-05	O ring	1	
3.4	13	49430-00	Hose	1	
3.4	14	49430-03	Hose	1	
3.4	15	49656-01	Adapter	2	
3.4	16	49604-01	O ring	1	
3.4	17	12391-05	O ring	1	
3.4	18	49653-01	Elbow, 90°	2	
3.4	19	49604-01	O ring	1	
3.4	20	12391-05	O ring	1	
3.4	21	-----	Valve assembly (See Fig.# 3.19)	1	
3.4	22	49623-01	Elbow, 90°	1	
3.4	23	49604-01	O ring	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
3.9	1	-----	Reservoir assembly (See Fig.# 3.16)	1	
3.9	2	14859-05	Clamp, hose	4	
3.9	3	14810-03	Hose	1	
3.9	4	49507-00	Tube	1	
3.9	5	14810-04	Hose	1	
3.9	6	14848-03	Elbow, 90°	1	
3.9	7	12391-10	O ring	1	
3.9	8	-----	Pump and motor assembly (See Fig.# 3.22)	1	
3.9	9	49653-14	Elbow, 90°	1	
3.9	10	12391-08	O ring	1	
3.9	11	49604-02	O ring	1	
3.9	12	49516-00	Hose assembly	1	
3.9	13	-----	Valve, lift control (See Fig.# 3.18)	1	
3.9	14	49654-12	Elbow, 90°	1	
3.9	15	12391-07	O ring	1	
3.9	16	49604-02	O ring	1	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
3.14	*	-----	Cylinder Assembly (See Chart Below)	1 2	RR-30 RR-34
3.14	1	49548-00	Screw	1	
3.14	2	11897-03	Washer, seal	1	
3.14	3	-----	Tube, cylinder	1	
3.14	4	11016-05	Washer, flat	1	
3.14	4	41258-00	Piston, RR-30	1	RR-30
3.14	5	41257-00	Piston, RR-34	1	RR-34
3.14	6	11894-06	Screw, cap	1	
3.14	7K	NSS	Ring, wear	1	
3.14	8	49714-12	Ring, retainer	1	
3.14	9	-----	Rod, cylinder	1	
3.14	10K	NSS	O ring	1	
3.14	11K	NSS	Ring, backup	1	
3.14	12	28142-00	Bearing, RR-30	1	RR-30
3.14	12	40067-00	Bearing, RR-34	1	RR-34
3.14	13K	NSS	Ring, wear	1	
3.14	14K	NSS	Seal	1	
3.14	15K	NSS	Wiper	1	
3.14	K	28200-00	Kit, seal RR-30 (CONTAINS ITEMS MARKED WITH "K")	1	RR-30
3.14	K	41535-00	Kit, seal RR-34 (CONTAINS ITEMS MARKED WITH "K")	1	RR-34

	Cylinder Assembly					
	RR-30			RR-34		
	Cylinder Assembly	ITEM # 3	ITEM # 9	Cylinder Assembly	ITEM # 3	ITEM # 9
89/180	-----	-----	-----	40891-01	40892-01	40071-01
89/192	41651-01	41652-01	40725-01	40891-01	40892-01	40071-01
95/198	-----	-----	-----	40891-02	40892-02	40071-02
95/210	41651-02	41652-02	40725-02	40891-02	40892-02	40071-02
98/216	41651-03	41652-03	40725-03	-----	-----	-----
102/225	41651-04	41652-04	40725-04	-----	-----	-----
107/226	-----	-----	-----	40891-03	40892-03	40071-03
111/240	41651-05	41652-05	40725-05	40891-04	40892-04	40071-04
119/258	41651-06	41652-06	40725-06	40891-05	40892-05	40071-05

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
3.19	*	42062-00	Valve Assembly	1	24 Volt
3.19	*	42062-01	Valve Assembly	1	36 Volt
3.19	1	NSS	Block, valve	1	
3.19	2	301970-000	Valve, spool	1	
3.19	3	301972-000	Kit, seal	1	
3.19	4	300949-001	Coil, 24 volt	2	24 Volt
3.19	4	300949-000	Coil, 36 volt	2	36 Volt

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
3.24	*	41997-00	Lift Pump Assembly, 36 Volt "E"	1	36 Volt
3.24	1K	NSS	Ring, retainer	1	
3.24	2K	NSS	Seal, oil	1	
3.24	3	NA	Plate, face	1	
3.24	4K	NSS	Seal, molded	2	
3.24	5K	NSS	Strip, backup	2	
3.24	6	NA	Plate, side	2	
3.24	7	NA	Case, bearing	2	
3.24	8	NA	Shaft, drive	1	
3.24	9	NA	Shaft, idler	1	
3.24	10	NA	Pin, dowel	4	
3.24	11	NA	Body	1	
3.24	12	NA	Plate, back	1	
3.24	13	NA	Washer	4	
3.24	14	NA	Screw, cap	4	
3.24	K	302122-000	Kit, seal (contains items marked with "K")	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
4.1	1	40919-00	Block	1	
4.1	2	11894-06	Screw, cap	1	
4.1	3	40923-00	Post	1	95/138,198,210
4.1	3	40923-01	Post	1	ALL ELSE
4.1	4	11884-01	Screw, socket	2	
4.1	5	11170-08	Locknut	2	
4.1	6	40806-00	Mat, floor	1	
4.1	7	40786-01	Pedal	1	
4.1	8	40419-00	Mat, pedal	1	
4.1	9	11073-26	Pin, roll	1	
4.1	10	11695-07	Bushing	2	
4.1	11	40743-00	Cover, 16½" battery	1	16½" battery
4.1	11	40743-01	Cover, 14½" battery	1	14½" battery
4.1	12	49922-01	Screw, machine	11	
4.1	13	40237-00	Cover, panel - Single Function Control	1	
4.1	13	40237-01	Cover, panel - Multi-Function Control	1	
4.1	14	40418-00	Pad, seat	1	
4.1	15	49892-01	Screw, flat head	1	
4.1	16	40233-00	Angle	1	
4.1	17	27561-03	Edging	1	
4.1	18	14851-02	Nut, clip	6	
4.1	19	40238-03	Cover, instrument	1	
4.1	20	41109-00	Cover, SCR	1	
4.1	*	52-05007-00	Edging	As Req'd.	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
4.6	1	49919-03	Knob	1	
4.6	2	14915-05	Plug, hole	1	
4.6	3	40105-01	Crank, steering	1	
4.6	4	11073-06	Pin, roll	1	
4.6	5	-----	Torque generator (See Fig.# 3.21)	1	
4.6	6	14994-11	Screw, cap	1	
4.6	7	11854-05	Screw, cap	2	
4.6	8	42097-03	Bearing, flange	1	
4.6	9	11261-05	Nut	2	
4.6	10	11047-21	Screw, cap	1	
4.6	11	26466-01	Sprocket	1	
4.6	12	11073-11	Pin, roll	1	
4.6	13	40783-00	Sprocket	1	
4.6	14	11875-09	Setscrew	1	
4.6	15	42100-00	Rod	1	
4.6	16	42096-00	Bearing, pillow block	1	
4.6	17	11830-03	Screw, cap	1	
4.6	18	25125-01	Sprocket	1	
4.6	19	11308-03	Pin, roll	1	
4.6	20	25121-01	Chain	1	
4.6	21	11057-03	Key	1	
4.6	22	41079-00	Shim, .120"	As Req'd.	
4.6	22	41079-01	Shim, .060"	As Req'd.	
4.6	22	41079-02	Shim, .030"	As Req'd.	
4.6	23	11057-03	Key	1	
4.6	24	21542-09	Chain	1	
4.6	25	11170-08	Locknut	2	
4.6	26	11016-04	Washer,flat	2	
4.6	27	11857-01	Washer, 18 gauge	2	
4.6	28	11857-02	Washer, 14 gauge	2	
4.6	29	11936-17	Bearing, thrust	2	
4.6	30	40780-00	Sprocket	2	
4.6	31	11020-35	Bearing	2	
4.6	32	40900-00	Sleeve, flanged	2	
4.6	33	42098-00	Bracket, mounting	1	
4.6	34	40781-00	Bolt, special	1	
4.6	35	11806-06	Nut	1	
4.6	36	40779-01	Screw, special	1	
4.6	37	11873-16	Screw, shoulder	1	
4.6	38	11695-07	Bearing, flange	1	
4.6	39	11025-02	Ring, retainer	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
4.11	1	11898-11	Ring, retainer	2	
4.11	2	42137-00	Toe Box, left hand	1	
4.11	2	42137-00	Toe Box, right hand	1	
4.11	3	42138-00	Axle	2	
4.11	4	11073-32	Pin, roll	2	
4.11	5	11160-09	Fitting, grease	2	
4.11	6	42143-00	Spacer	4	
4.11	7	11857-17	Washer	4	
4.11	8	49910-03	Bearing	4	
4.11	9	42140-00	Wheel Assembly	1	
4.11	10	42139-00	Wheel, rim	1	
4.11	11	40254-00	Tire	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
5.3	1	11857-05	Shim, .050"	As Req'd.	
5.3	1	11857-12	Shim, .025"	As Req'd.	
5.3	2	21089-02	Bearing	2	
5.3	3	-----	Chain, lift	2	
5.3	4	30558-00	Anchor, chain	2	
5.3	5	30554-00	Pin, chain	2	
5.3	6	49837-00	Nut	2	
5.3	7	11486-12	Nut, jam	2	
5.3	8	-----	Cylinder assembly (See Fig.# 5.4)	1	
5.3	9	-----	Column, outer	1	

	Outer Column Assembly	
	ITEM # 3	ITEM # 9
89/126	14835-44	40518-01
95/138	14835-45	40518-02
107/162	14835-46	40518-03
119/186	14835-47	40518-04

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
5.8	1	30553-02	Washer, shim	4	
5.8	2	49994-01	Bearing	2	
5.8	3	49993-02	Race, inner	2	
5.8	4	42193-00	Sheave	1	
5.8	*	11020-44	Bushing	1	
5.8	5	41584-00	Sheave	1	
5.8	6	40058-02	Spacer	1	
5.8	7	30553-07	Washer, shim	1	
5.8	8	30559-00	Sheave	1	
5.8	9	11143-04	Screw, cap	4	
5.8	10	11009-06	Lockwasher	4	
5.8	11	28159-06	Pin	1	
5.8	12	11160-11	Fitting, grease	2	
5.8	13	14994-10	Screw, cap	1	
5.8	14	14993-20	Washer, flat	1	
5.8	15	26617-03	Spacer	2	
5.8	16	26645-00	Sheave, hose	1	
5.8	17	26493-01	Bearing	1	
5.8	18	11857-10	Shim, .050"	As Req'd.	RR-30
5.8	18	11857-11	Shim, .025"	As Req'd.	RR-30
5.8	19	21089-02	Bearing	2	RR-30
				0	RR-34
5.8	20	-----	Column, intermediate	1	
5.8	21	28159-04	Pin	1	
5.8	22	11806-08	Nut, jam	2	
5.8	23	14994-05	Screw, cap	2	
5.8	24	49832-02	Bearing	2	RR-30
				4	RR-34
5.8	25	11857-09	Shim, .075"	As Req'd.	
5.8	25	11857-05	Shim, .050"	As Req'd.	
5.8	25	11857-12	Shim, .025"	As Req'd.	

	Three Stage Intermediate Column	
	Item # 20	
	RR-30	RR-34
89/180	-----	41694-01
89/192	40894-01	41694-17
95/198	-----	41694-02
95/210	40894-02	41694-16
98/216	40894-03	-----
102/225	40894-04	-----
107/226	-----	41694-03
111/240	40894-05	41694-04
119/258	40894-06	41694-05

FIG ITEM		PART #	NAME	# FOR ASSY.	UNIT
#	#				
5.13	*	25008-01	Fork Assembly, 30" (1.75 THICK)	1	30 inch
5.13	*	25008-02	Fork Assembly, 36" (1.75 THICK)	1	36 inch
5.13	*	21372-02	Fork Assembly, 42" (1.50 THICK)	1	42 inch
5.13	*	25008-03	Fork Assembly, 42" (1.75 THICK)	1	42 inch
5.13	*	25008-04	Fork Assembly, 48" (1.75 THICK)	1	48 inch
5.13	1	NSS	Pin, roll	1	
5.13	2	NSS	Handle	1	
5.13	3	NSS	Spring	1	
5.13	4	NSS	Pin	1	
5.13	5	NA	Fork	1	
5.13	K	200843	Pin assembly (CONTAINS ITEMS MARKED WITH "K")	1	

# ELECTRIC REACH TRUCK

## NUMERICAL INDEX

<u>PART #</u>	<u>FIG. #</u>	<u>ITEM #</u>	<u>PART #</u>	<u>FIG.#</u>	<u>ITEM #</u>
21089-02	5.2	2	26466-01	4.7	11
21089-02	5.6	10	26466-01	4.6	11
21089-02	5.10	29	26493-01	5.8	17
21089-02	5.3	2	26519-02	5.7	10
21089-02	5.8	19	26617-03	5.8	15
21372-02	5.13	*	26618-04	2.6	25
21542-01	4.7	24	26618-04	2.27	14
21542-09	4.6	24	26618-05	2.5	22
22005-06	4.13	23	26645-00	5.8	16
22012-05	1.3	32	26743-00	0.1	1
22014-02	3.28	2	27303-01	4.4	53
23228-01	2.27	3	27303-01	2.27	10
23228-01	2.6	3	27303-01	2.6	22
23228-02	2.6	3	27303-01	4.5	53
23228-02	2.27	3	27561-03	4.1	18
23309-01	2.6	24	27692-00	2.15	*
23309-01	2.27	15	27693-02	2.16	*
23309-02	2.6	24	27693-04	2.16	*
23309-02	2.27	15	27694-00	2.12	11A
25008-01	5.13	*	27697-00	2.22	13
25008-02	5.13	*	27702-02	2.12	11B
25008-03	5.13	*	28137-00	3.15	8
25008-04	5.13	*	28142-00	3.14	12
25094-01	2.14	22	28142-00	3.15	13
25094-02	2.14	22	28159-04	5.8	21
25094-03	2.14	23	28159-06	5.8	11
25109-05	3.10	19	28200-00	3.15	K
25109-05	3.13	45	28200-00	3.14	K
25121-01	4.6	20	28286	2.22	8
25121-01	4.7	20	29030-01	2.21	1
25125-01	4.6	18	29030-02	2.21	1
25125-01	4.7	18	29030-04	2.21	1
25189-02	4.9	8	29030-05	2.21	1
25203-06	4.9	10	29056-00	2.18	15
25203-07	4.9	10	29304-00	2.27	11
25204-03	4.9	9	29304-00	4.5	56
25204-06	4.9	9	29304-00	2.6	21
25275-01	2.21	*	29304-00	4.4	56
25275-06	2.22	11	29329-00	2.13	6
25275-06	2.14	12	29408-00	2.14	24
25306-01	4.7	25	29791-00	3.21	*
25332-01	2.7	1	29831-00	2.21	17
25332-01	2.8	1	300073-000	2.16	*
25332-01	2.21	13	300074-001	2.16	1
25332-01	2.9	1	300074-002	2.16	3
25332-01	2.5	3	300074-003	2.16	7
25332-01	3.3	40	300074-004	2.16	10
26204-00	2.27	2	300084-000	2.12	10
26204-00	2.6	2	300085-000	2.12	32
26270-00	0.1	16	300086-000	2.12	21
26270-00	4.2	1	300110-000	2.22	12
26389-00	5.7	11	300110-000	2.14	11

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL