


RS-50 Parts Manual

RS-50 Straddle Truck

RS-50

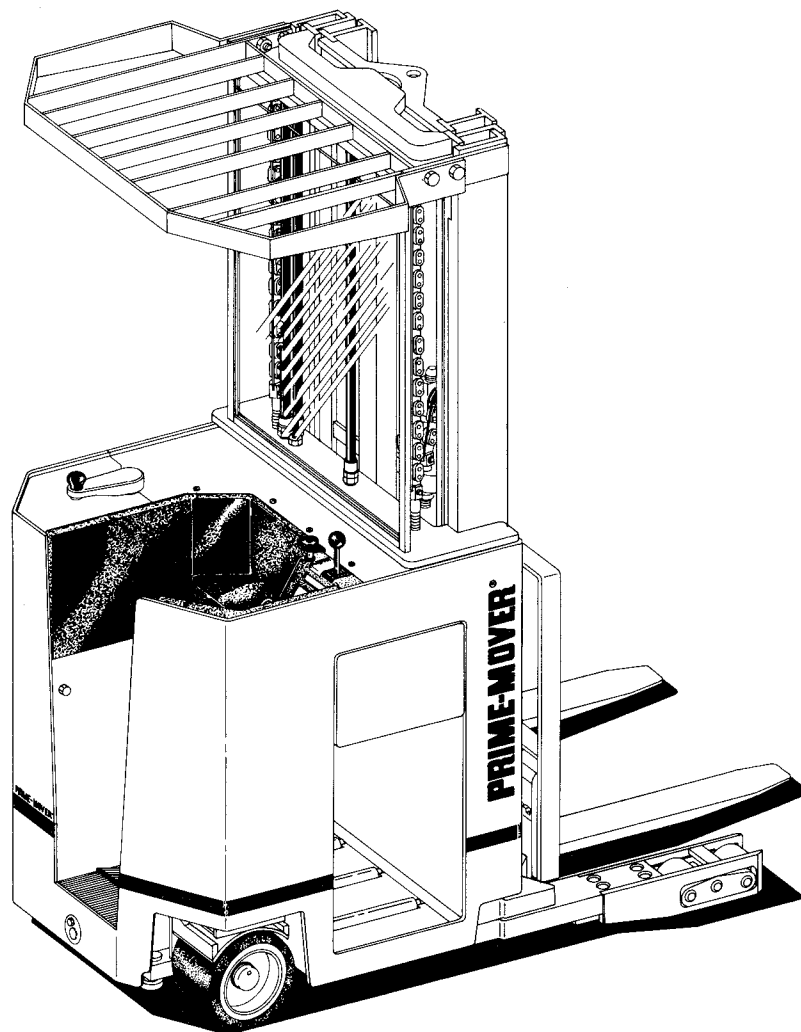

⚠ WARNING Read and observe all warnings on the unit before operating it. Do not operate this equipment unless all factory installed guards and shields are properly secure in place.

Issue May 1985

PRIME-MOVER®

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
3	1	C-40421	Pad, side	1	
3	2	D-40418	Pad, seat	1	
3	3	C-40239-01	Cover	1	16½ battery
3	3	C-40239-02	Cover	1	14½ battery
3	4	A-49922-01	Screw, machine	13	
3	5	D-40237	Cover, seat panel	1	
3	6	A-49892-01	Screw, flat head	1	
3	7	B-40284	Angle	1	
3	8	A-27561-03	Edging	1	
3	9	A-14851-02	Nut, clip	As Req'd	
3	10	D-40238-00	Cover, instrument	1	
3	11	D-40234	Cover, SCR	1	
3	12	C-40420	Pad, side	1	
3	13	D-40236	Plate, floor	1	
3	14	C-40415	Mat, floor	1	
3	15	P-11073-30	Pin, roll	1	
3	16	B-40419	Mat, pedal	1	

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
8	1	B-40789-01	Shaft	1	
8	2	P-11695-07	Bushing	2	
8	3	P-11073-26	Pin, roll	1	
8	4	C-40786-01	Pedal	1	
8	5	B-40881-00	Crank	2	
8	6	A-49672-00	Spring	1	
8	7	P-11854-04	Screw, cap	2	
8	8	A-41152-00	Bar	1	
8	9	P-11016-02	Washer, flat	3	
8	10	A-41151-00	Plate	1	
8	11	A-40879-00	Bar	1	
8	12	A-40949-01	Nut	1	
8	13	B-40914-00	Cylinder, master (see fig. #41)	1	
8	14	P-11936-20	Shim, washer	2	
8	15	A-40882-02	Roller	2	
8	16	P-11073-14	Pin, roll	2	
8	17	A-49744-00	Pin	1	
8	18	P-11157-03	Pin, cotter	1	
8	19	P-11854-05	Screw, cap	1	
8	20	P-11261-05	Nut	1	
8	21	P-11170-05	Locknut	1	

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
13	1	P-11261-08	Nut	1	
13	2	P-11016-04	Washer	1	
13	3	VHC-6593	Drum, brake	1	
13	4	P-11018-03	Key	1	
13	5K	VHA-5489-15	Nut	3	
13	6K	P-11261-08	Washer	1	
13	7K	VHA-4663	Arm, actuator	1	
13	8K	VHA-4820	Washer	2	
13	9K	VHA-5437-4	Shoe, brake	2	
13	10K	VHA-4709	Spring	2	
13	11K	VHA-4670	Block, drive	2	
13	12	P-11854-03	Screw, cap	4	
13	13K	VHB-5265	Plate, mounting	1	
13	14	P-11880-08	Screw, machine	2	
13	15	P-11009-01	Lockwasher	2	
13	16	A-49794	Switch	1	
13	17	P-11143-05	Screw, cap	1	
13	18	P-11016-03	Washer, flat	1	
13	19	P-11143-06	Screw, cap	1	
13	20K	VHA-4819	Nut, cam	1	
13	21K	VHA-4818	Washer, cam	1	
13	22K	VHA-6154	Cam	1	
13	23K	VHA-6158	Arm, cam	1	
13	24K	VHA-5488-12	Washer, flat	1	
13	25K	VHA-5488-3	Lockwasher	1	
13	26K	VHA-5489-2	Nut	1	
13	27	P-11143-03	Screw, cap	1	
13	28	B-40791	Plate, switch	1	
13	29	B-40944	Stop	1	
13	30	C-40941	Plate	1	
13	31	P-11016-03	Washer, flat	1	
13	32	P-11170-06	Nut	1	
13	33	P-11135-02	Pin with cotter pin	1	
13	34	B-40943	Rod	1	
13	35	A-49908	Spring	1	
13	36	A-40885	Sleeve	1	
13	37	P-11170-10	Nut	1	
13	38	P-11135-02	Pin with cotter pin	1	
13	39	D-40094	Cylinder, drive motor (see fig. #40)	1	
13	40	B-40994	Retainer	1	
13	41	P-11854-04	Screw, machine	2	
13	42	P-11016-02	Washer, flat	2	
13	43	A-40948	Mount, cylinder	1	
13	44	A-40950	Nut	1	
13	45	P-11170-05	Nut	2	
13	46	D-40506	Motor, drive (see fig. #14)	1	24 volt
13	46	D-40096	Motor, drive (see fig. #14)	1	36 volt

K (Brake assembly contains parts indicated by letter "K")

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
17	1	A-22050-03	Wheel, idler	1	
17	2	P-40136	Wheel	1	
17	3	A-40265	tire, polyurethane	1	
17	4	P-12298	Cap, hub	1	
17	5	P-11829-06	Nut	1	
17	6	P-11828-06	Lockwasher	1	
17	7	P-22005-06	Washer	1	
17	8	P-11205-01	Bearing	2	
17	9	P-11160-08	Fitting, grease	1	
17	10	P-11039-30	Seal	1	
17	11	D-40093-01	Brake assembly	1	
17	12K	VHB-5265	Plate, mounting	1	
17	13K	VHB-7047	Cam	1	
17	14K	VHA-4709	Spring	1	
17	15K	VHA-5437-4	Shoe, brake	2	
17	16K	VHA-4670	Block, drive	2	
17	17K	VHA-4820	Washer, shoe	2	
17	18K	VHA-5489-15	Nut (torque to 40 ft./lbs.)	3	
17	19K	VHA-4663	Arm, actuator	2	
17	20K	VHA-7048	Washer, cam	1	
17	21K	VHA-5890	Screw (torque to 45 ft./lbs.)	1	
17	22K	VHA-5488	Washer	1	
17	23K	VHA-5488-12	Washer, flat	1	
17	24K	VHA-5488-3	Lockwasher	1	
17	25K	VHA-5489-2	Nut (torque to 55 ft./lbs.)	1	
17	26	P-11020-27	Bushing	1	
17	27	B-40456	Arm	1	
17	28	P-11854-02	Screw, cap	4	
17	29	P-11898-03	Ring, retainer	1	
17	30	P-11936-03	Washer, flat	1	
17	31	P-11020-21	Bushing	1	
17	32	D-40936	Axle	1	
17	33	B-40946	Block, pivot	1	
17	34	B-40915	Cylinder, idler wheel (see fig. #42)	1	
17	35	P-11135-02	Pin with cotter pin	1	

K

(Brake assembly [item #11] contains parts indicated by letter "K")

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
23	1	C-40095-01	SCR and contactor panel assembly (see fig. #28)	1	
23	1	C-40095-02	SCR and contactor panel assembly (see fig. #28)	1	
23	2	P-25332-01	Tie, wire	6	
23	3	B-49830-01	Heater	7	24 volt
23	3	B-49830-00	Heater	7	36 volt
23	4	P-25427-01	Horn	1	24 volt
23	4	P-25427-03	Horn	1	36 volt
23	5	P-20479	Switch	1	
23	6	B-24455-01	Switch, master (see fig. #7)	1	
23	7	D-40100	Valve, lift control (see fig. #51)	1	
23	8		Auxiliary control (see fig. #5)	1	
23	9	D-40101	Valve, auxiliary control (see fig. #44)	1	
23	10	P-11823-27	Connector	1	
23	11	P-20151	Switch, key	1	
23	12	B-49771-00	Connector, blade	2	
23	13	B-49831	Thermostat	1	
23	14	P-11016-23	Washer	4	
23	15	P-11885-03	Screw, machine	2	
23	16	P-11823-12	Connector	1	
23	17	P-11823-13	Connector, butt	8	
23	18	52-7901-01	Wire, #16 AWG Black	As Req'd	
23	19	P-11823-06	Connector, butt	2	
23	20	52-7901-03	Wire, #16 AWG Red	As Req'd	

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
28	1	QUI58C3100SNP1	Base assembly	1	
28	2	QUIC4482CTRA700AH205X0	Contactora (A1)(see fig. #32)	1	24 volt
28	2	QUIC4482CTRA700AH208X0	Contactora (A1)(see fig. #32)	1	36 volt
28	3	QUIC4482CTRA800AH205X0	Contactora (P)(see fig. #32)	1	24 volt
28	3	QUIC4482CTRA800AH208X0	Contactora (P)(see fig. #32)	1	36 volt
28	4	QU205A9343G1	Insulator assembly	2	
28	5	QU232A9090ABP2	Bus	1	
28	6	QUIC4482CTRA701BD305X0	Contactora (F)(see fig. #34)	1	24 volt
28	6	QUIC4482CTRA701BD308X0	Contactora (F)(see fig. #34)	1	36 volt
28	7	QUIC4482CTRA701BE305X0	Contactora (R)(see fig. #34)	1	24 volt
28	7	QUIC4482CTRA701BE308X0	Contactora (R)(see fig. #34)	1	36 volt
28	8	QUIC2800M610P13A	Contactora (SP) (see fig. #33)	1	24 volt
28	8	QUIC2800M610P17A	Contactora (SP) (See fig. #33)	1	36 volt
28	9	QU233A21486P6	Shunt	1	
28	10	QUBMCABC-15	Fuse	1	
28	11	QU259A9577P1	Block, fuse control	1	
28	11	QU259A5115P1	Bracket, fuse	1	
28	11	QU259A9577P101	Insulation, fuse	1	
28	12	QUIC3645CPM1HMB1	Diodes, hour meter	1	
28	13	QUIC3645CPM1RDA2	Driver, contactora	2	
28	14	QU44A718824G01	Diode and resister assembly	1	
28	15	P-25094-2	Fuse (power)	1	
28	16	QU195B6250P6	Bus, bar	1	
28	17	QUIC36450SCR1H3BOXAAD	Control, SCR (see fig. #28)	1	

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
33	1	QUN57P15006B6	Screw	4	
33	2	QUN403P16B6	Lockwasher	4	
33	3	QU187B6774P1	Base	2	
33	4	QU161A8464P1	Plate, stop	2	
33	5	QUN910P25B6	Ring, retainer	1	
33	6	QUN402P41B6	Washer, retainer	1	
33	7	QU161A8452P1	Spring	1	
33	8	QU139B3373G3	Contact, moving	1	
33	9	QUN141P15006	Screw with lockwasher	2	
33	10	QU139B7648G1	Contact, stationary	2	
33	11	QU161A8463G2	Armature	1	
33	12	QU162A1730P1	Spring	1	
33	13	QUN51P15006B6	Screw	1	
33	14	QU194A4957P1	Core	1	
33	15	QU161A8453P3	Frame	1	
33	16	QUN57P21008B6	Screw	2	
33	17	QUN405P41C6	Lockwasher	2	
33	18	QU167A8791P1	Strip, terminal	2	
33	19	QU393B228G13	Coil	1	24 volt
33	19	QU393B228G17	Coil	1	36 volt

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
39	1	A-49928-05	Cap	1	
39	2	A-14912-07	Reducer	1	
39	3	P-25349-03	Tee, adjustable	1	
39	4	P-12391-06	O ring	1	
39	5	D-40502	Pump assembly (see fig. #10)	1	24 volt
39	5	D-40099	Pump assembly (see fig. #10)	1	36 volt
39	6	P-22012-05	Elbow, 90°	1	
39	7	A-14912-07	O ring	1	
39	8	B-40435	Tube assembly	1	
39	9	NSS	Reservoir assembly (see fig. #45)	1	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
44	1	QY16036-2	Screw, machine	2	
44	2	QY16089-22	Switch, micro	1	
44	3	QY16089-203	Shim .003	As Req'd	
44	3	QY16089-205	Shim .005	As Req'd	
44	3	QY16089-210	Shim .010	As Req'd	
44	3	QY16089-215	Shim .015	As Req'd	
44	4	QY31900-517	Nut	1	
44	5	QY31900-516	Plate, switch	1	
44	6K	NSS	O ring	1	
44	7	QY31900-518	Cap, switch	1	
44	8	QY16079-105	Ring, retaining	1	
44	9	QY16048-75	Washer	1	
44	10	QY31900-550	Spring	1	
44	11	QY31900-305	Spacer, spool	1	
44	12	QY16048-254	Washer	1	
44	13	QY31900-377	Bushing	1	
44	14K	NSS	O ring	2	
44	15	NA	Spool	1	
44	16	NA	Body	1	
44	17	QY16103-108	Plug	1	
44	18K	NSS	O ring	1	
44	19	QY16227-04	Plug, check	1	
44	20K	NSS	O ring	1	
44	21	QY30913-8	Spring	1	
44	22	QY30913-5	Plunger	1	
44	23	QY16227-021	Plug, relief	1	
44	24K	NSS	O ring	1	
44	25	QY16048-22	Washer .015	As Req'd	
44	25	QY16048-35	Washer .010	As Req'd	
44	25	QY16048-65	Washer .034	As Req'd	
44	26	QY32015-23	Spring	1	
44	27	QY32015-36	Poppet	1	
44	28	NA	Seat	1	
44	K	QY30921-912	Kit, seal	1	

(contains parts indicated by letter "K")

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
49	1K	NSS	Seal, shaft	1	
49	2	QY24300-44	Plate, front	1	
49	3K	NSS	Ball	2	
49	4K	NSS	Spring	2	
49	5K	NSS	Seal, diaphragm	1	
49	6K	NSS	Gasket, protector	1	
49	7K	NSS	Gasket, back-up	1	
49	8K	NSS	Diaphragm	1	
49	9	QY15510-12	Body, assembly	1	
49	10	QY16028-513	Pin, dowel	2	
49	11	QY24305-325	Gear, drive	1	
49	12	QY24305-303	Gear, idler	1	
49	13K	NSS	O ring	1	
49	14	QY24300-84	Plate, back	1	
49	15	QY16119-522	Screw, cap	4	
49	16	QY16119-526	Screw, cap	4	
49	K	QY24300-902	Kit, seal	1	

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
54	1K	NSS	Wiper	1	
54	2K	NSS	Seal	1	
54	3	C-40290	Bearing	1	
54	4K	NSS	Ring, back-up	1	
54	5K	NSS	O ring	1	
54	6K	NSS	O ring	1	
54	7K	NSS	O ring	1	
54	8K	NSS	Ring, wear	1	
54	9	B-40285	Piston	1	
54	10K	NSS	Ring, wear	1	
54	11	A-14908-08	Nut, lock	1	
54	12	C-40289	Tube, cylinder	1	
54	13	B-40286	Rod, cylinder	1	
54	14	B-49924-08	Bearing	1	
54	K	A-40470	Kit, seal	1	

NSS - Not sold separately

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
59	1	P-11176-01	Screw, machine	1	
59	2	P-11897-03	Washer, seal	1	
59	3	D-40090-01	Tube, cylinder	1	89/180
59	3	D-40090-02	Tube, cylinder	1	95/198
59	3	D-40090-02	Tube, cylinder	1	95/210
59	3	D-40090-03	Tube, cylinder	1	107/226
59	3	D-40090-04	Tube, cylinder	1	111/240
59	3	D-40090-05	Tube, cylinder	1	119/258
59	3	D-40090-06	Tube, cylinder	1	127/276
59	4	P-11894-06	Screw, cap	1	
59	5	P-11016-05	Washer	1	
59	6	A-49941-02	Washer, belleville	2	
59	7	B-40050	Piston	1	
59	8K	NSS	Ring, wear	1	
59	9	C-40071-01	Rod, cylinder	1	89/180
59	9	C-40071-02	Rod, cylinder	1	95/198
59	9	C-40071-02	Rod, cylinder	1	98/210
59	9	C-40071-03	Rod, cylinder	1	107/226
59	9	C-40071-04	Rod, cylinder	1	111/240
59	9	C-40071-05	Rod, cylinder	1	119/258
59	9	C-40071-06	Rod, cylinder	1	127/276
59	10K	NSS	O ring	1	
59	11K	NSS	Ring, back-up	1	
59	12	C-40067	Bearing	1	
59	13K	NSS	Ring, wear	1	
59	14K	NSS	Seal, rod	1	
59	15K	NSS	Wiper, rod	1	
59	K	A-40299	Kit, seal	1	

(contains parts indicated by letter "K")

NSS-Not Sold Separately

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
64	1	D-40466-02	Valve, manifold (see fig. #66)	1	24 volt
64	1	D-40466-01	Valve, manifold (see fig. #66)	1	36 volt
64	2	C-40451-16	Hose	2	
64	3	P-12391-05	O ring	1	
64	4	P-22013-06	Tee	4	
64	5	P-12391-03	O ring	1	
64	6	C-40637	Cylinder, tilt (see fig. #63)	2	
64	7	C-40632-01	Tube assembly	1	
64	8	C-40632-00	Tube assembly	1	
64	9	P-25108-05	Adapter	4	
64	10	P-12391-03	O ring	1	
64	11	C-40647	Tube assembly	1	
64	12	C-40648	Tube assembly	1	
64	13	P-22012-02	Elbow, 90°	2	
64	14	D-40466-02	O ring	1	
64	15	P-11854-11	Screw, cap	4	
64	16	C-40451-20	Hose	1	
64	17	C-40451-19	Hose	1	
64	18	P-22012-03	Elbow, 90°	1	
64	19	P-12391-05	O ring	1	
64	20		Cylinder, sideshift (see fig. #65)	1	
64	21	D-25108-07	Adapter	1	
64	22	P-12391-05	O ring	1	
64	23	B-40630-00	Tube assembly	1	
64	24	B-40630-01	Tube assembly	1	
64	25	P-25442-02	Elbow, 90°	2	
64	26	C-40451-15	Hose	1	
64	27	A-14919-01	Elbow, bulkhead	2	
64	28	P-11486-09	Nut, jam	2	
64	29	C-40451-15	Hose	1	

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
69	1	P-11857-05	Shim, washer	As Req'd	
69	2	P-21089-02	Bearing	2	
69	3	C-14835-44	Chain, lift	2	89/126
69	3	C-14835-45	Chain, lift	2	95/138
69	3	C-14835-46	Chain, lift	2	107/162
69	3	C-14835-47	Chain, lift	2	119/186
69	4	B-30558	Anchor, chain	2	
69	5	A-30554	Pin, chain	2	
69	6	A-14891	Nut	2	
69	7	P-11486-12	Nut, jam	2	
69	8		Cylinder assembly (see fig. #70)	1	
69	9	D-40518-01	Column, outer	1	89/126
69	9	D-40518-02	Column, outer	1	95/138
69	9	D-40518-03	Column, outer	1	107/162
69	9	D-40518-04	Column, outer	1	119/186

Fig. #	Item #	PART #	NAME	# for Assy.	Unit
74	1	D-40225	Guard, overhead	1	
74	2	P-11170-12	Nut	4	
74	3	P-14993-08	Screw, cap	4	
74	4	P-11143-19	Screw, cap	1	
74	5	A-40680	Tube	1	
74	6	A-14674	Washer	1	
74	7	P-11170-06	Nut	1	
74	8		Column, outer (see fig. #75)	1	
74	9		Laminated safety sheet glass S.A.E.J-673 30-1/8x33-3/4x.234(secure this part locally)		
74	10	A-40228-01	Channel	2	
74	10	A-40228-02	Channel	2	95/198
74	11	A-40228-03	Channel	1	
74	12	B-40467-00	Cushion, windshield	1	
74	13	B-40486-00	Sureen (cold storage)	1	
74	*	52-5007	Edge, rubber	As Req'd	
74	14	P-11271-14	Setscrew	4	
74	15	P-11271-15	Setscrew	4	
74	16	P-11016-06	Washer	2	
74	17	P-14992-17	Screw, cap	2	
74	18	A-49925-01	Shim, .250	As Req'd	
74	18	A-49925-02	Shim, .125	As Req'd	
74	18	A-49925-03	Shim, .062	As Req'd	
74	19		Column, intermediated (see fig. #76)	1	
74	20		Column, inner (see fig. #77)	1	
74	21	A-30554	Pin with cotter pin	4	
74	22	D-40472	Sideshifter assembly (see fig. #72)	1	
74	23		Lift frame assembly (see fig. #71)	1	
74	24	P-25008-01	Fork, 30" (see fig. #73)	2	
74	24	P-25008-02	Fork, 36" (see fig. #73)	2	
74	24	P-25008-03	Fork, 42" (see fig. #73)	2	
74	24	P-25008-04	Fork, 48" (see fig. #73)	2	

79	3	D-40150-19	Frame, standard	1	43"
79	3	D-40150-20	Frame, standard	1	45"
79	3	D-40150-21	Frame, standard	1	47"
79	3	D-40150-22	Frame, reach w/tilt	1	31"
79	3	D-40150-23	Frame, reach w/tilt	1	33"
79	3	D-40150-24	Frame, reach w/tilt	1	37"
79	3	D-40150-25	Frame, reach w/tilt	1	41"
79	3	D-40150-26	Frame, reach w/tilt	1	43"
79	3	D-40150-27	Frame, reach w/tilt	1	45"
79	3	D-40150-28	Frame, reach w/tilt	1	47"
79	3	3 stage frame, main 14½" battery			
79	3	D-40150-08	Frame, standard	1	31"
79	3	D-40150-09	Frame, standard	1	33"
79	3	D-40170-10	Frame, standard	1	37"
79	3	D-40170-11	Frame, standard	1	41"
79	3	D-40150-12	Frame, standard	1	43"
79	3	D-40150-13	Frame, standard	1	45"
79	3	D-40150-14	Frame, standard	1	47"
79	3	D-40150-29	Frame, reach w/tilt	1	31"
79	3	D-40150-30	Frame, reach w/tilt	1	33"
79	3	D-40150-31	Frame, reach w/tilt	1	37"
79	3	D-40150-32	Frame, reach w/tilt	1	41"
79	3	D-40150-33	Frame, reach w/tilt	1	43"
79	3	D-40150-34	Frame, reach w/tilt	1	45"
79	3	D-40150-35	Frame, reach w/tilt	1	47"
79	3	3 stage frame, main 16½" battery			
79	3	D-40150-22	Frame, standard	1	31"
79	3	D-40150-23	Frame, standard	1	33"
79	3	D-40150-24	Frame, standard	1	37"
79	3	D-40150-25	Frame, standard	1	41"
79	3	D-40150-26	Frame, standard	1	43"
79	3	D-40150-27	Frame, standard	1	45"
79	3	D-40150-28	Frame, standard	1	47"
79	3	D-40150-36	Frame, reach w/tilt	1	31"
79	3	D-40150-37	Frame, reach w/tilt	1	33"
79	3	D-40150-38	Frame, reach w/tilt	1	37"
79	3	D-40150-39	Frame, reach w/tilt	1	41"
79	3	D-40150-40	Frame, reach w/tilt	1	43"
79	3	D-40150-41	Frame, reach w/tilt	1	45"
79	3	D-40150-42	Frame, reach w/tilt	1	47"
79	4	P-14992-10	Screw, cap	4	
79	4	A-49761-11	Screw, cap	2	4"high outriggers
79	5	B-40123	Hinge	2	
79	6	P-14992-13	Screw, cap	4	
79	6	A-49761-11	Screw, cap	2	4"high outriggers
79	7	C-40152-04	Retainer, right battery	1	14½ battery
79	7	C-40152-02	Retainer, right battery	1	16½ battery
79	8	B-40837	Load wheel, left single(see fig. #80)	1	
79	8	B-40838	Load wheel, right single(see fig. #80)	1	
79	9	B-40839	Load wheel, articulating(see fig. #81)	2	
79	10	A-25203-07	Shaft	4	14½ battery
79	10	A-25203-06	Shaft	4	16½ battery
79	11	P-25189-02	Bearing	8	
79	12	A-25204-03	Roller	4	14½ battery
79	12	A-25204-06	Roller	4	16½ battery
79	13	A-49914	Screw, machine	1	
79	14	P-11016-03	Washer	1	
79	15	P-11429-04	Pin, cotter	1	
79	16	D-40114	Door	1	

MODEL RS-50 ELECTRIC STRADDLE TRUCK
NUMERICAL INDEX

<u>Part #</u>	<u>Figure #</u>	<u>Item #</u>	<u>Part #</u>	<u>Figure #</u>	<u>Item #</u>
C-30354-40	46	8	A-40030-02	24	8
C-30354-41	55	12	A-40030-02	25	12
C-30354-42	57	6	B-40039	70	10
C-30354-43	57	6	B-40039	78	21
C-30355-14	61	6	B-40039	75	21
C-30355-15	60	6	B-40045	70	12
C-30355-15	61	7	B-40045	78	10
B-30355-18	52	6	B-40045	75	10
B-30355-19	52	18	B-40046	70	9
C-30355-25	60	7	B-40047	56	8
B-30355-28	52	7	B-40047	58	8
C-30355-34	57	19	B-40050	59	7
A-30434	9	3	B-40051	56	5
A-30553-02	76	1	B-40051	58	5
A-30553-05	78	13	B-40052	56	4
A-30553-05	75	13	B-40052	58	4
A-30553-06	70	6	A-40058	76	2
A-30553-06	78	13	C-40067	59	12
A-30553-06	75	13	C-40068	56	13
A-30554	67	7	C-40068	58	13
A-30554	69	5	C-40070-01	58	10
A-30554	74	21	C-40070-02	58	10
A-30554	75	5	C-40070-03	58	10
A-30554	78	3	C-40070-04	58	10
A-30554	75	3	C-40070-05	58	10
B-30558	69	4	C-40070-06	58	10
B-30558	75	3	C-40070-07	58	10
B-30558	78	1	C-40071-01	59	9
B-30558	75	1	C-40071-02	59	9
B-30559	76	6	C-40071-02	59	9
A-30612-01	58	6	C-40071-03	59	9
A-30612-1	56	7	C-40071-04	59	9
B-30671	5	14	C-40071-05	59	9
D-40001	15	28	C-40071-06	59	9
D-40002	15	2	D-40080-01	76	19
C-40003	15	64	D-40080-02	76	19
D-40004	15	72	D-40080-03	76	19
B-40005	15	68	D-40080-04	76	19
B-40006	15	52	D-40080-05	76	19
B-40007	15	43	D-40080-06	76	19
D-40009	15	26	D-40080-16	76	19
D-40011-01	12	7	C-40081	76	3
D-40012	15	56	D-40085-01	75	8
C-40017	15	49	D-40085-02	75	8
C-40018	15	54	D-40085-03	75	8
C-40019	15	4	D-40085-04	75	8
D-40020	15	61	D-40085-05	75	8
B-40022	15	59	D-40085-06	75	8
A-40023	15	12	D-40085-16	75	8
A-40024-01	15	47	D-40088-01	77	1
A-40024-02	15	53	D-40088-01	74	1
A-40025	57	2	D-40088-02	77	1

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL