


HT300

Parts Manual

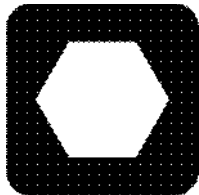

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.


CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

DECAL LOCATION HT300 ISO

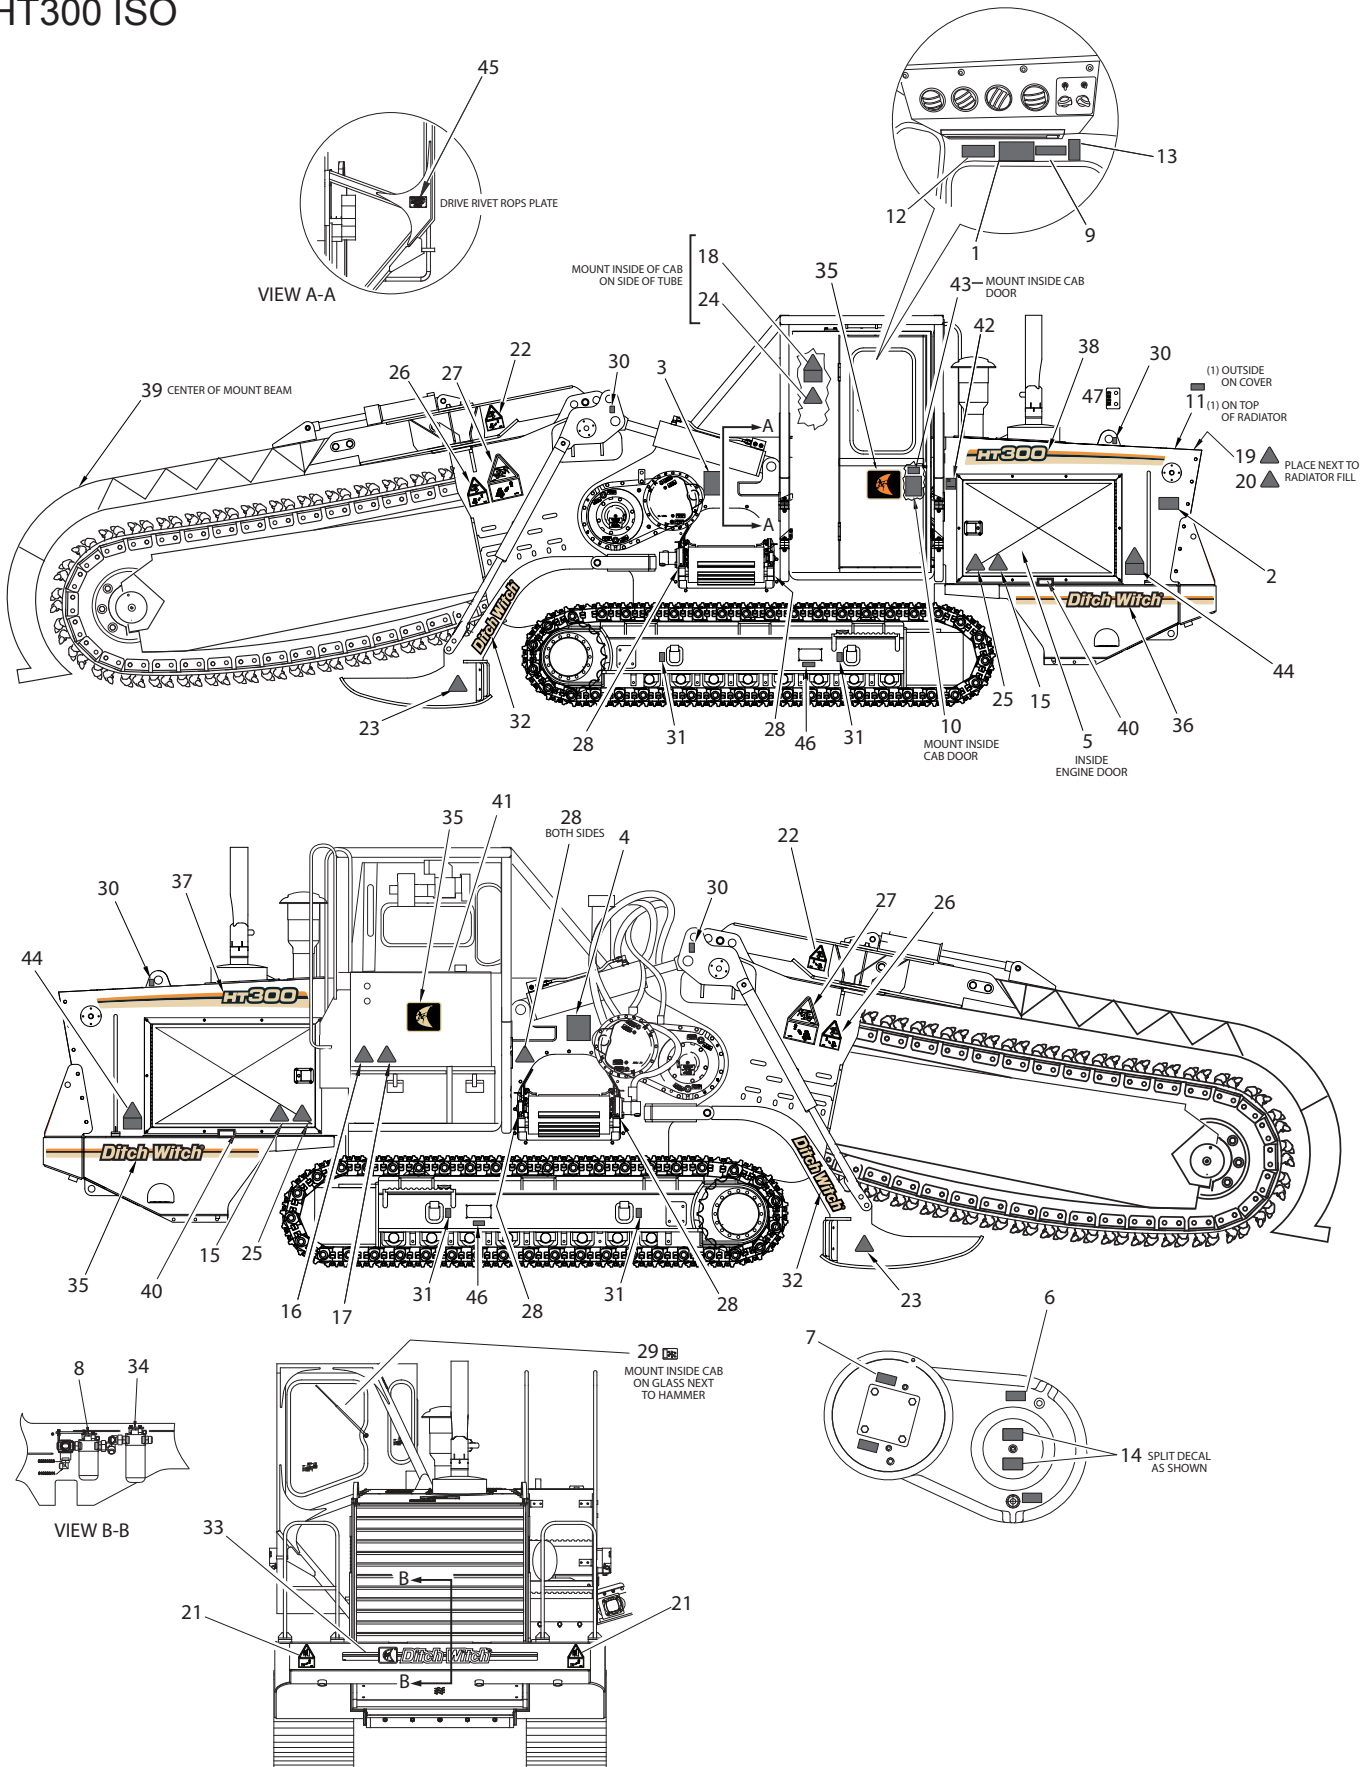


ENGINE INSTALLATION

HT300

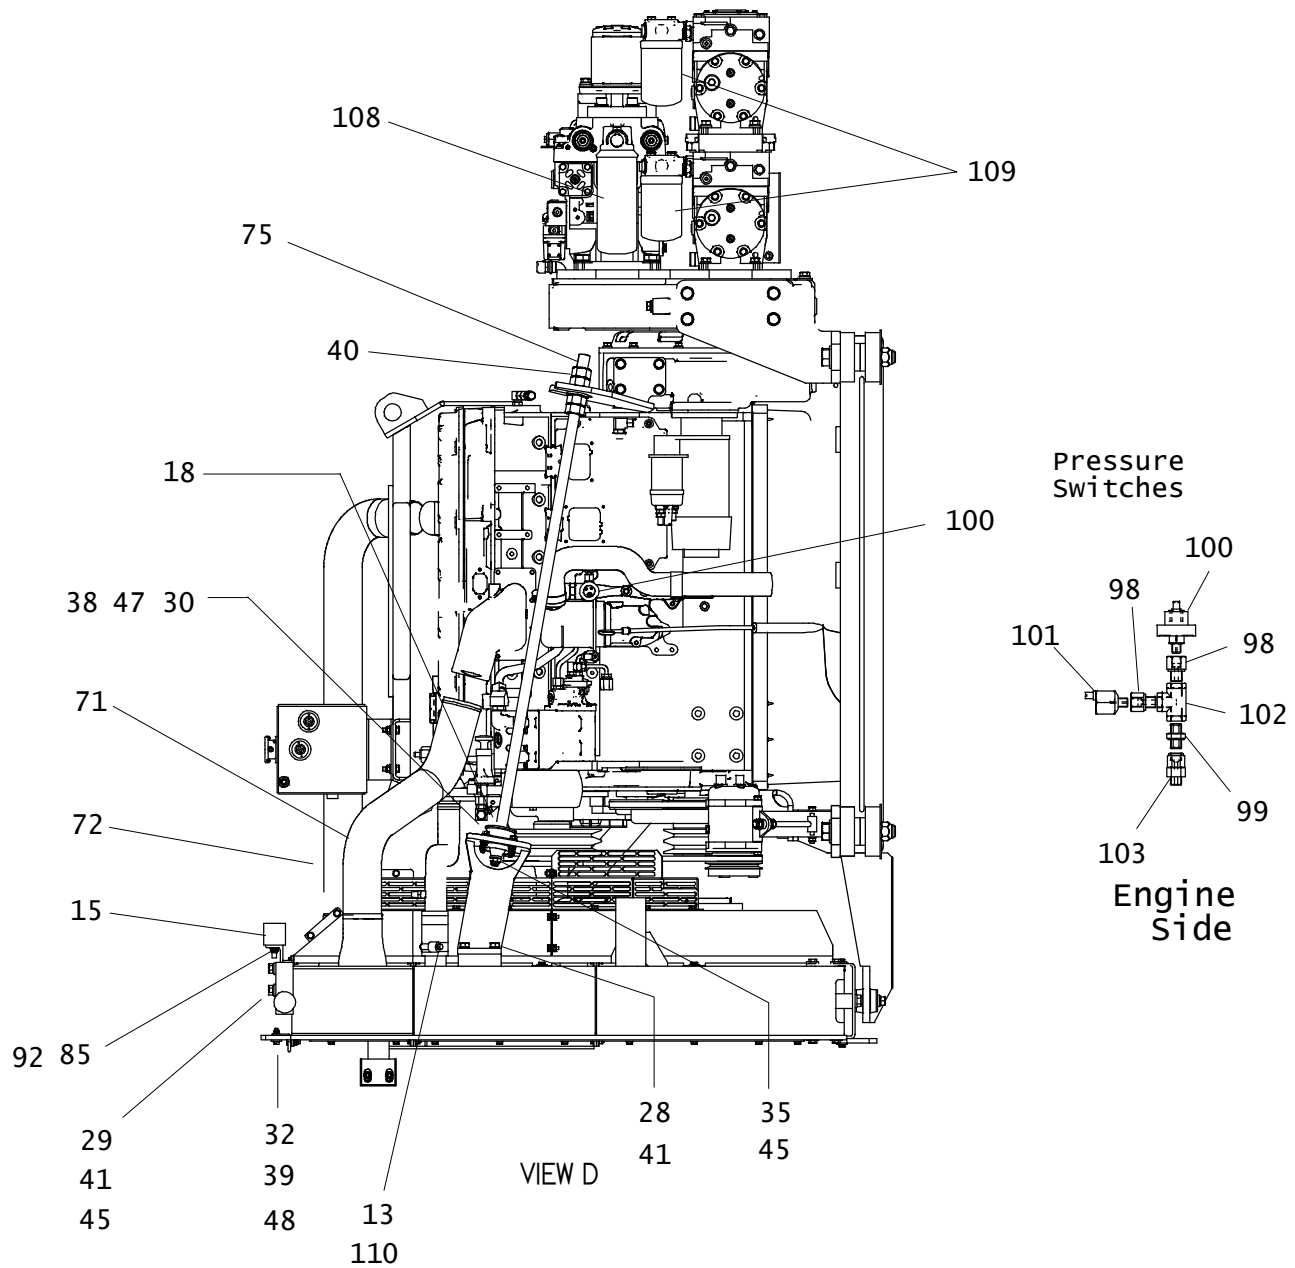

GUARD RAIL INSTALLATION

HT300

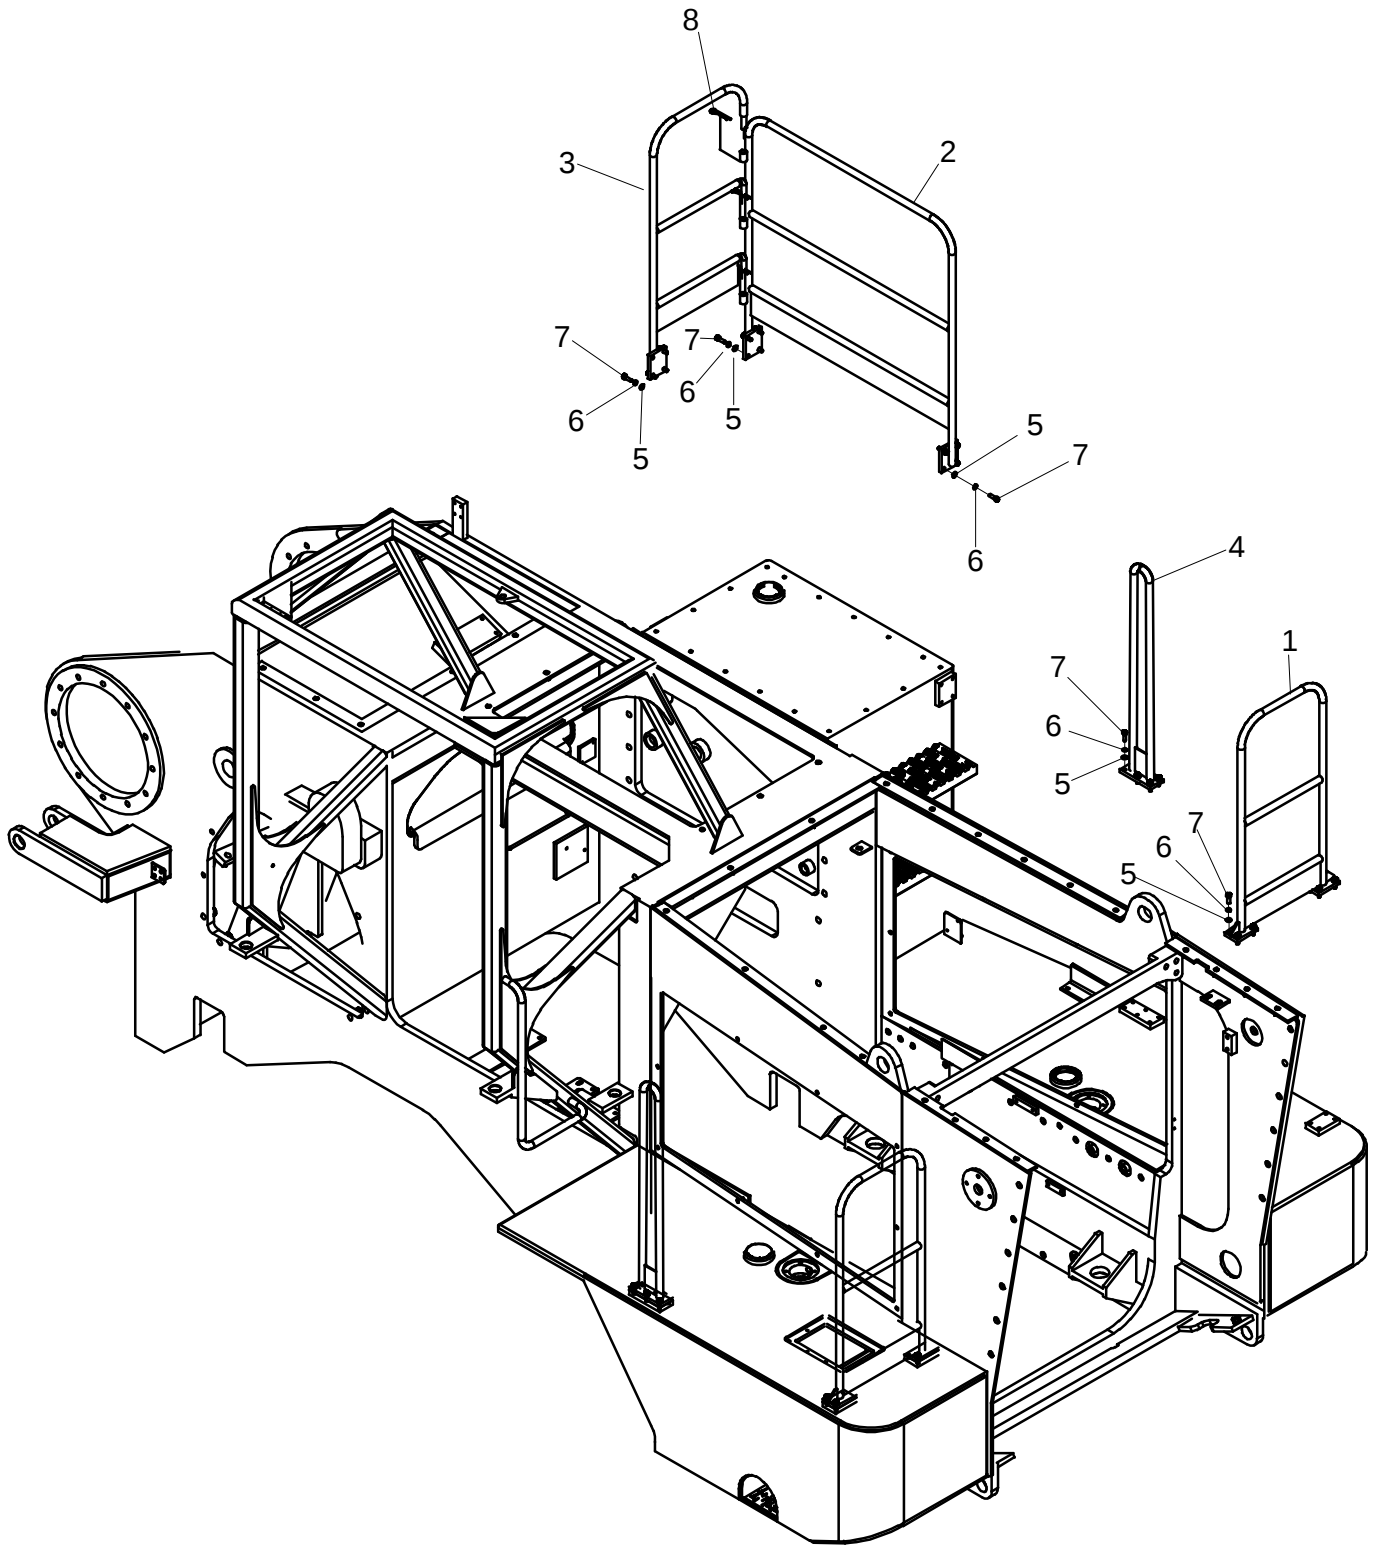


CAB INSTALLATION

HT300

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION		REMARKS
1.	TSE10-1304-800	1	CAB ASSEMBLY		
2.	TS30003097	1	SEAT		
3.	TS30003059	1	EXTINGUISHER		
4.	TS50000085	4	RUBBER MOUNT		
5.	TSU25010016	9	WASHER		
6.	TSU42116114	4	BOLT		
7.	TSE10-1303-003	4	WASHER		
8.	TSU26201016	4	LOCKNUT		
9.	TSV00-4501-001	3	BUMPER		
10.	TSU26201010	3	LOCKNUT		
11.	TSU25010010	3	WASHER		
12.	TSE10-1303-001	2	SUPPORT		
13.	TSV00-3204-001	4	PIN		
14.	TSU26000013	6	PIN		
15.	TSU25010013	16	WASHER		
16.	TSE10-1303-002	1	SLIDE		
17.	TSU42113032	2	BOLT		
18.	TSU42116095	1	BOLT		
19.	TSU42113032	8	BOLT		
20.	TSU25012013	8	WASHER		
21.	TS09103180	1	BOX		
22.	TS09100941	1	PLATE		
23.	TS09103179	1	PUSH BUTTON		
24.	TSU25010025	2	WASHER		
25.	TSU40505038	2	BOLT		
26.	TSU26201005	2	LOCKNUT		
27.	TS09105080	1	PUSH BUTTON BODY		
28.	TS09103190	1	FITTING		
29.	TS09102310	1	LIGHT		
30.	TSU42129114	2	BOLT		
31.	TSU26202129	2	NUT		


NOT

CARRIER ASSEMBLY HT300

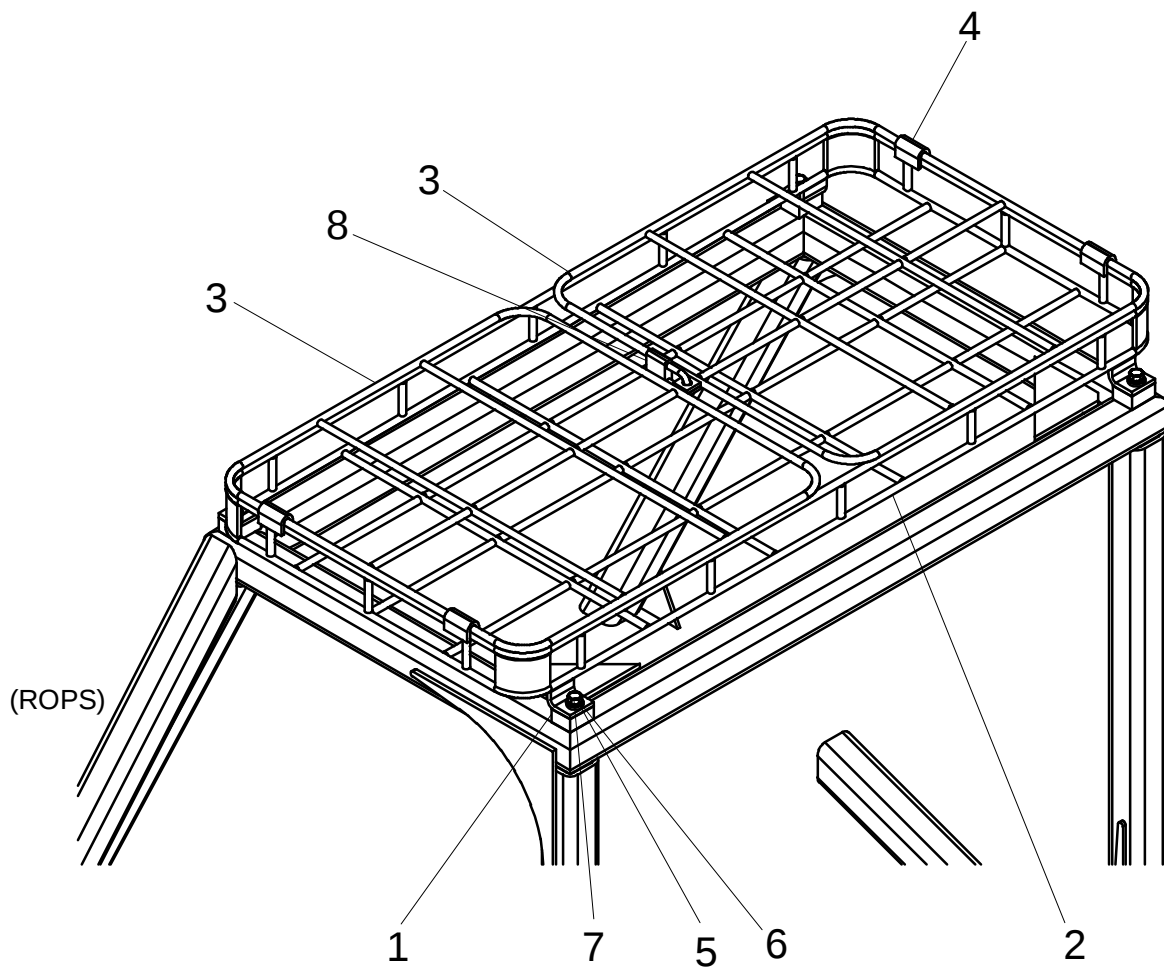


COMPRESSOR SUPPORT ASSEMBLY

HT300

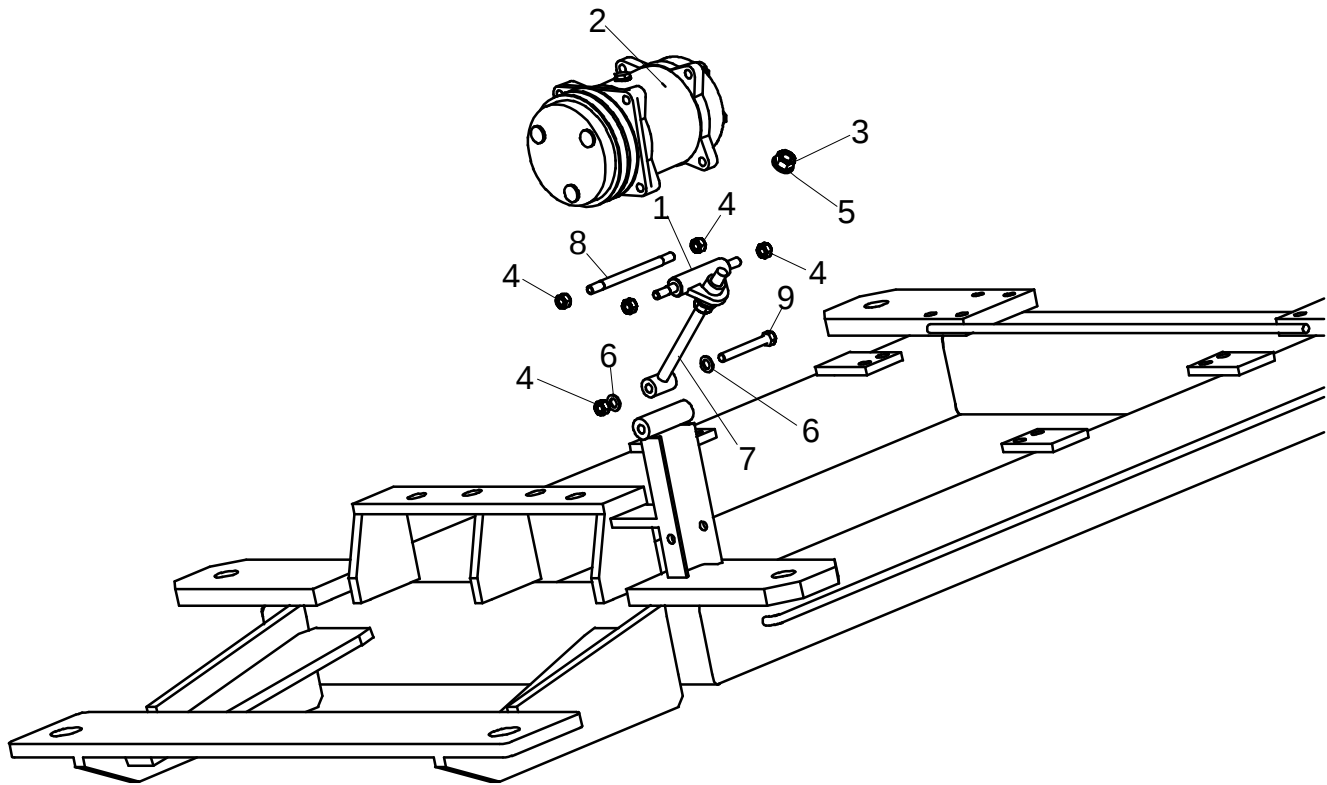

VALVE INSTALLATION HT300

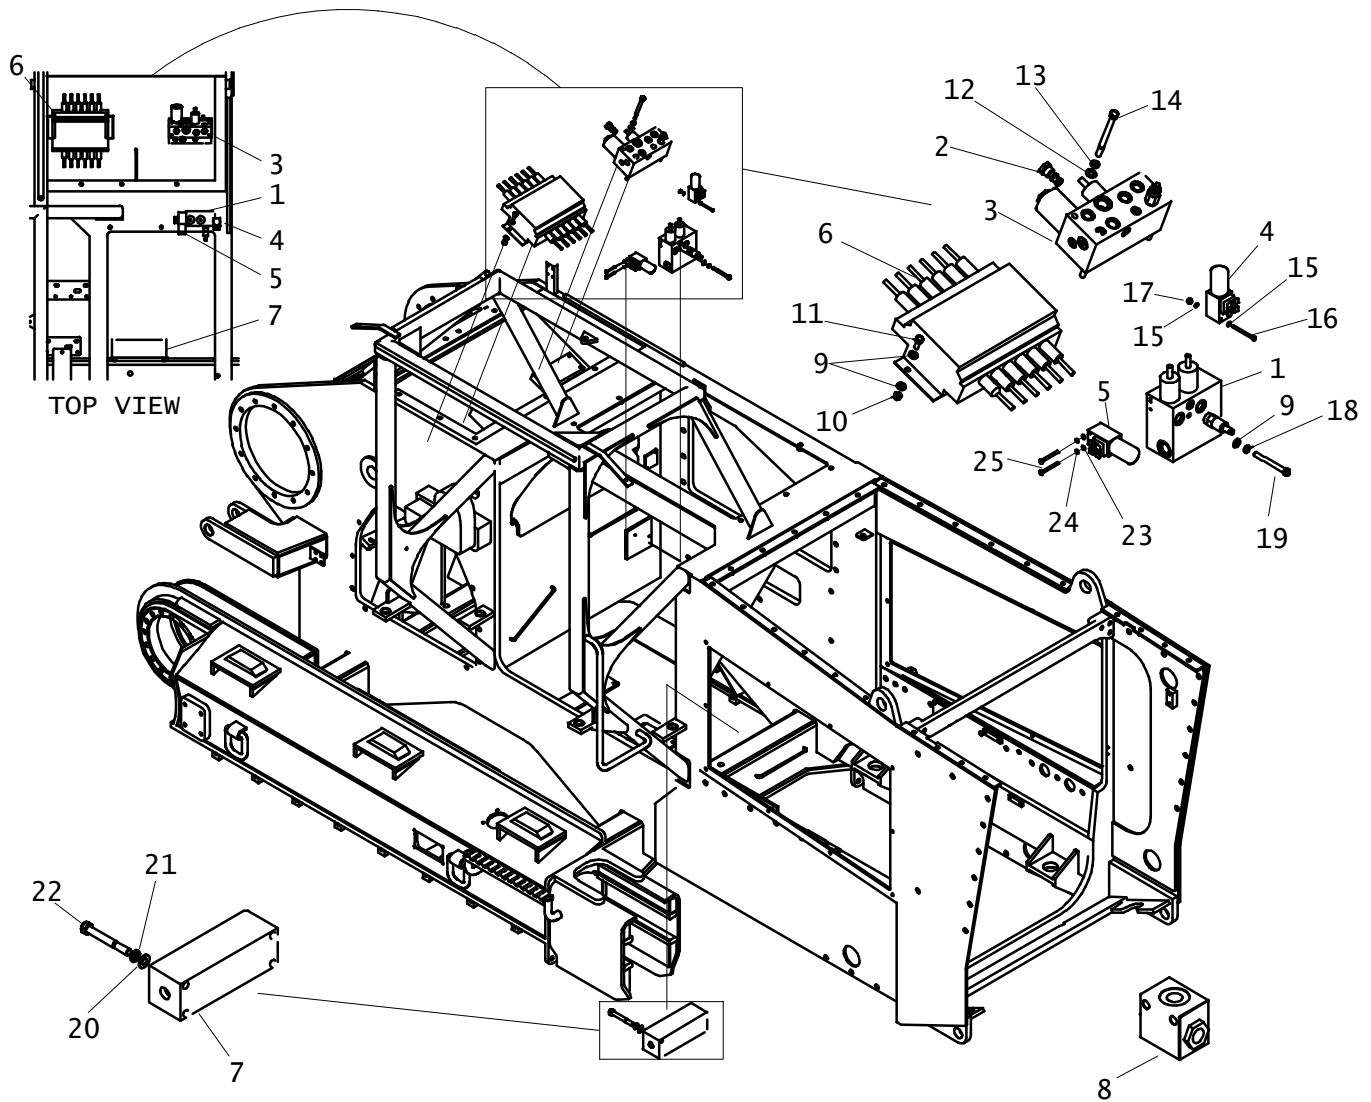

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.


CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

FUEL TANK ASSEMBLY HT300

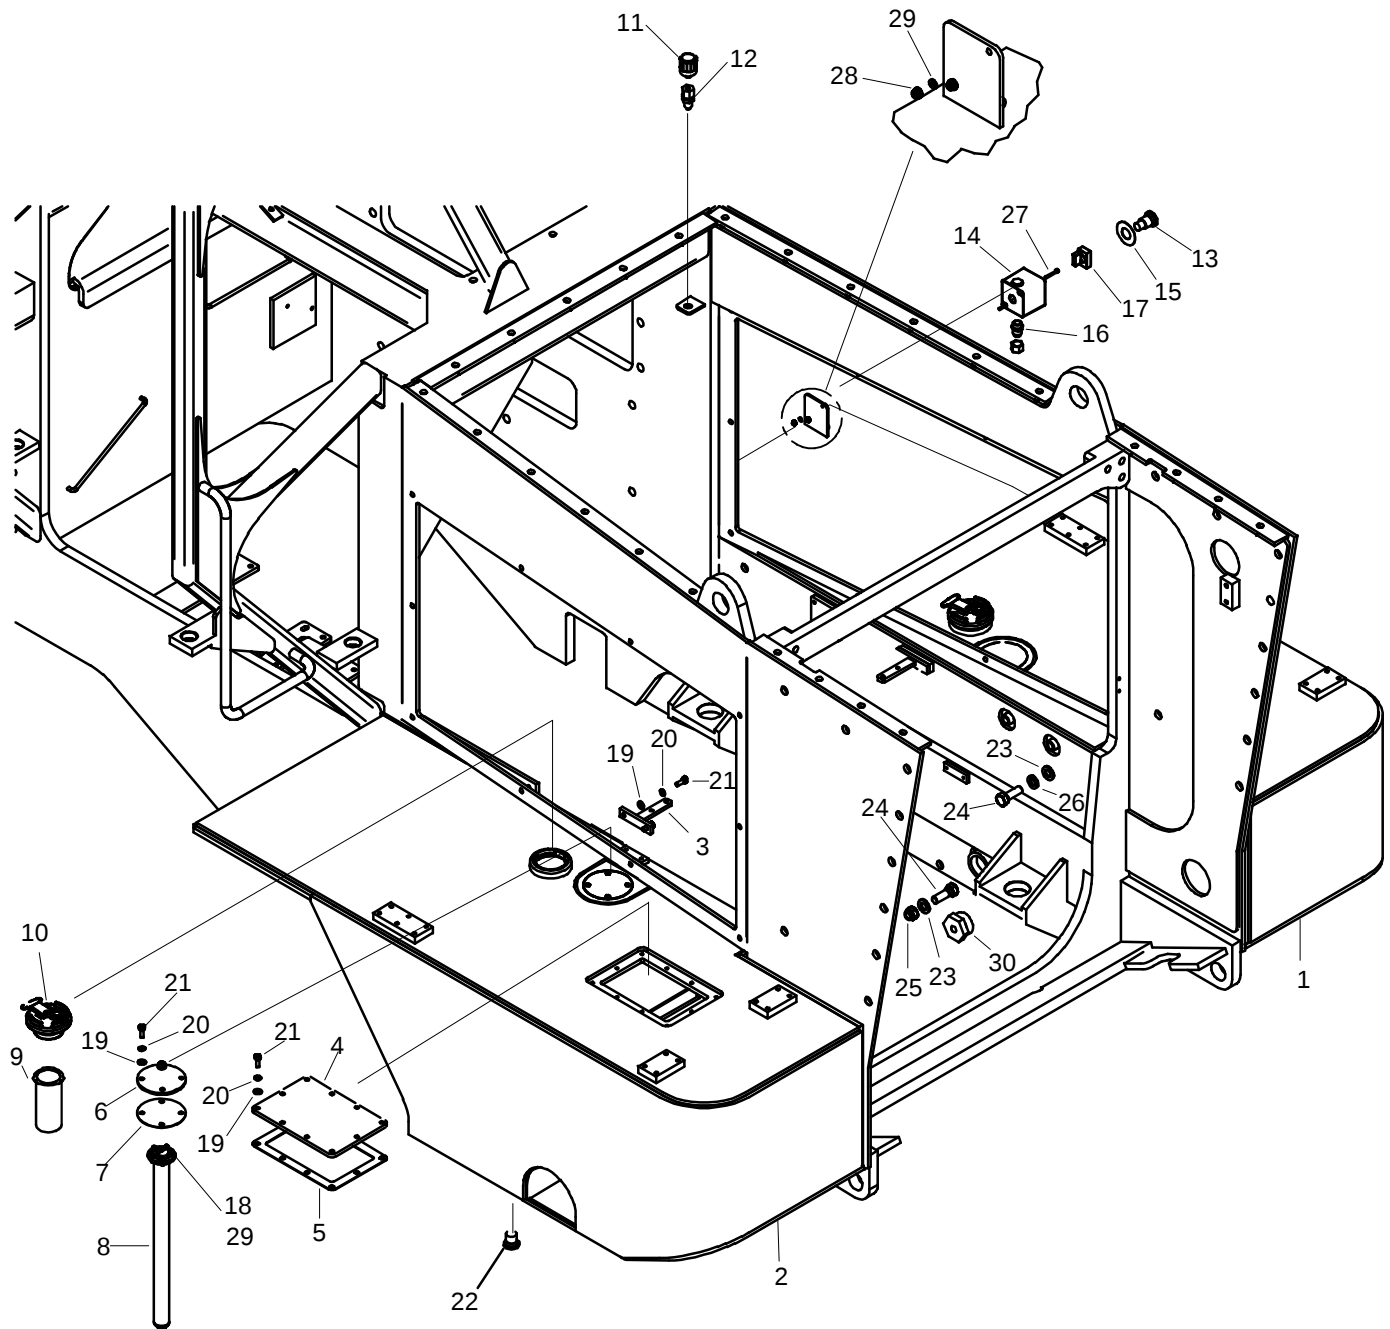


SINGLE TAIL WHEEL ASSEMBLY


HT300

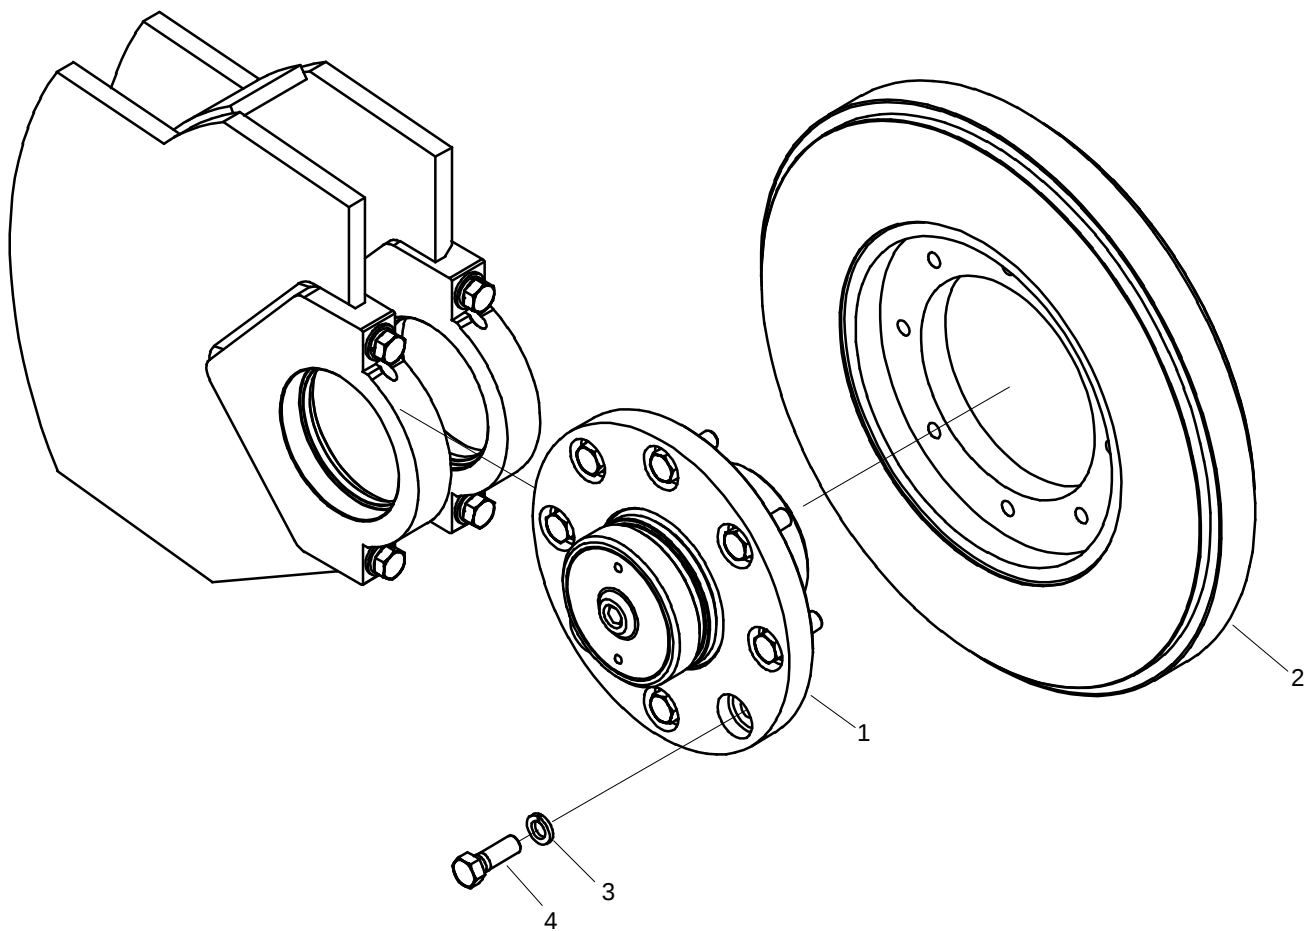


INNER SHROUD ASSEMBLY HT300

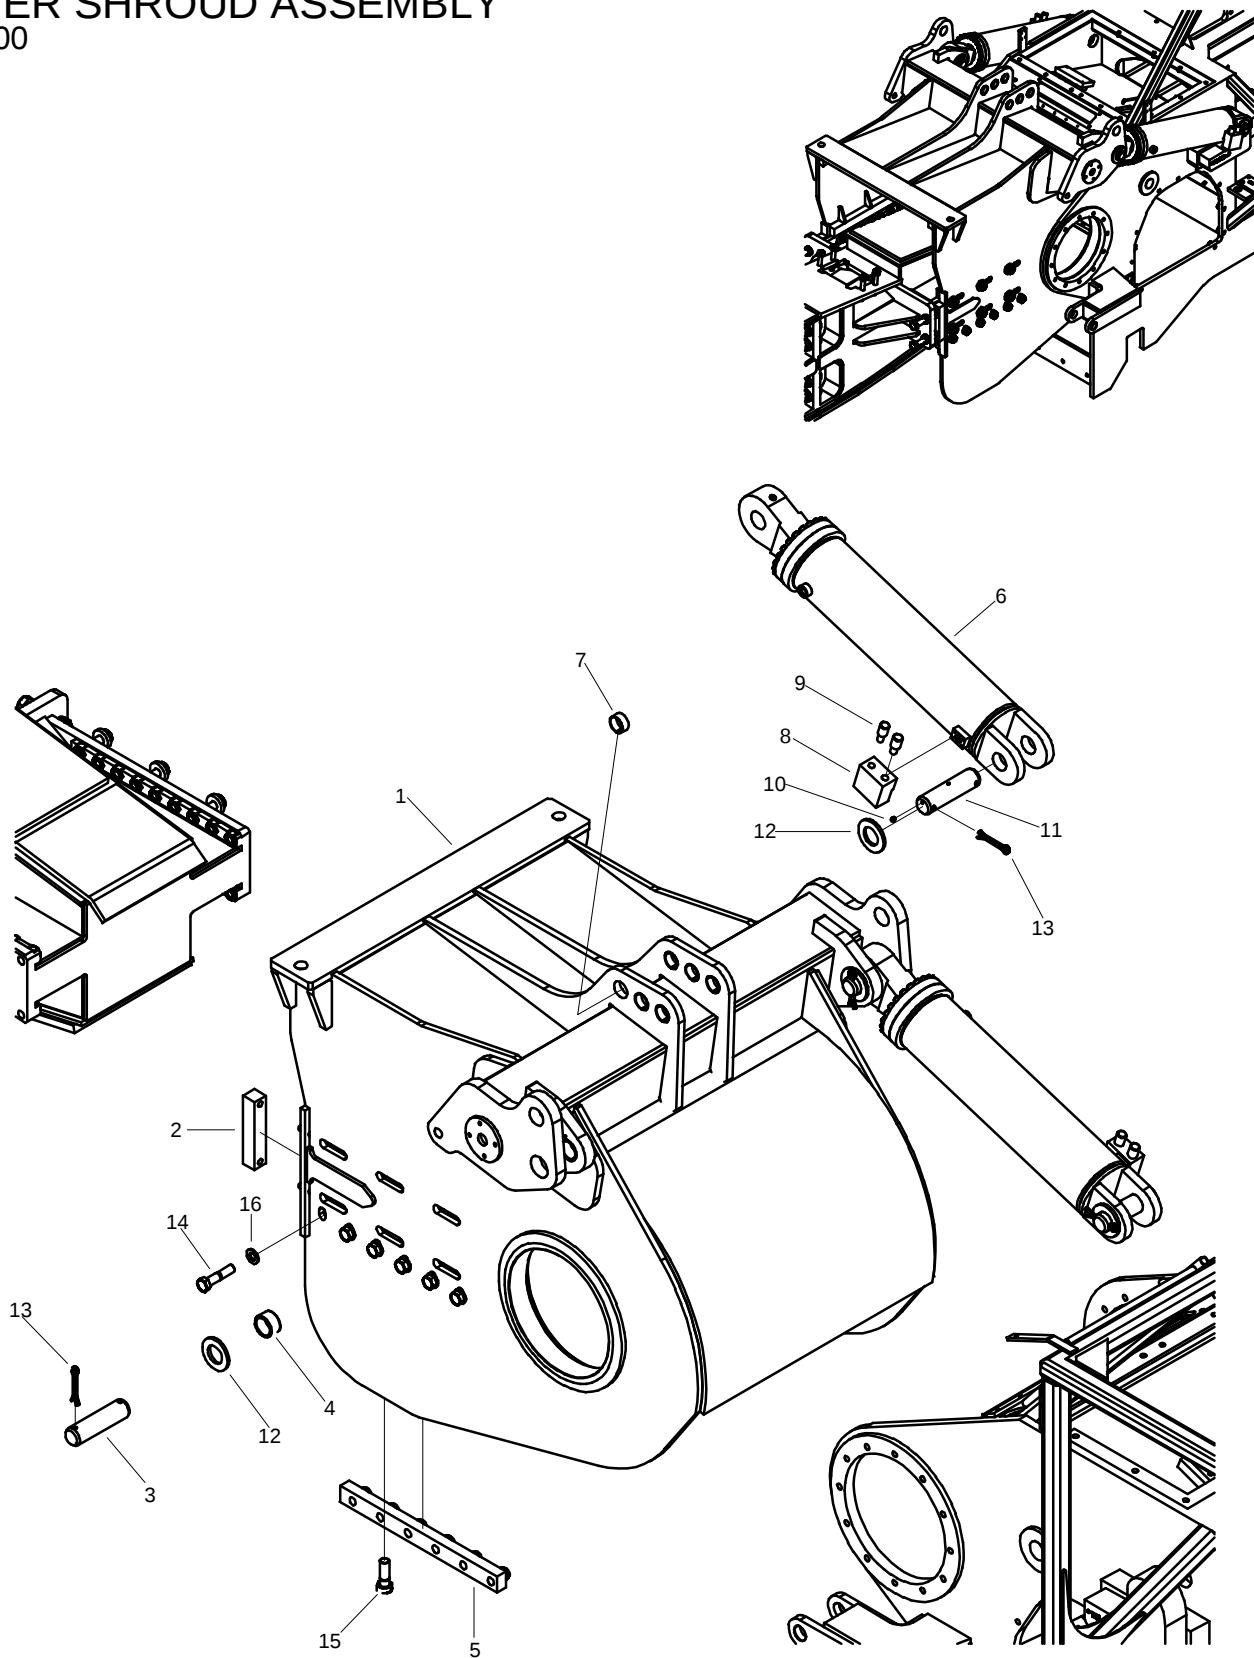

TRANSVERSAL CONVEYOR HT300

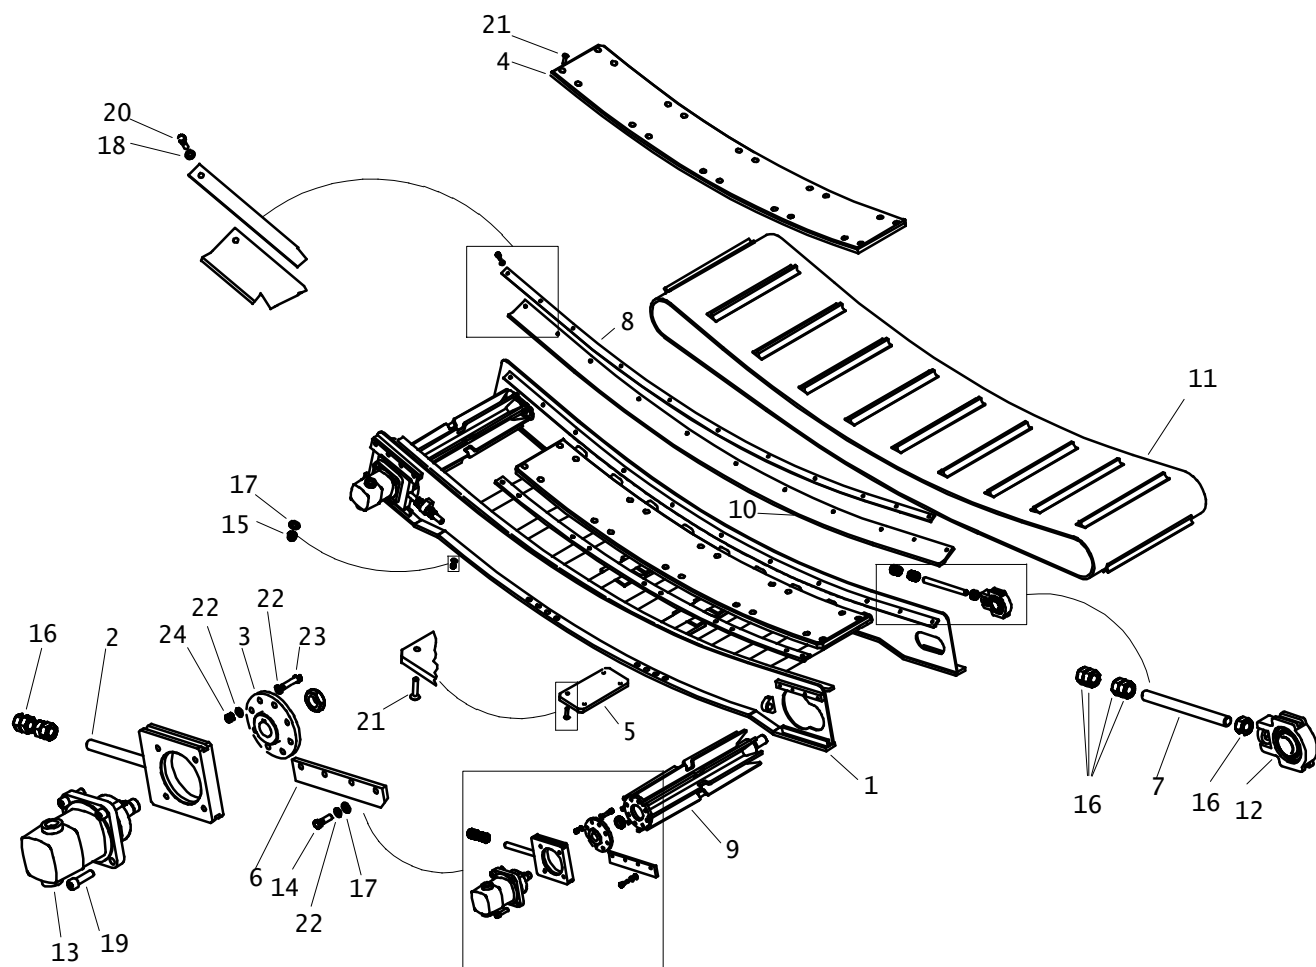

TRACTOR HOSE LIST HT300

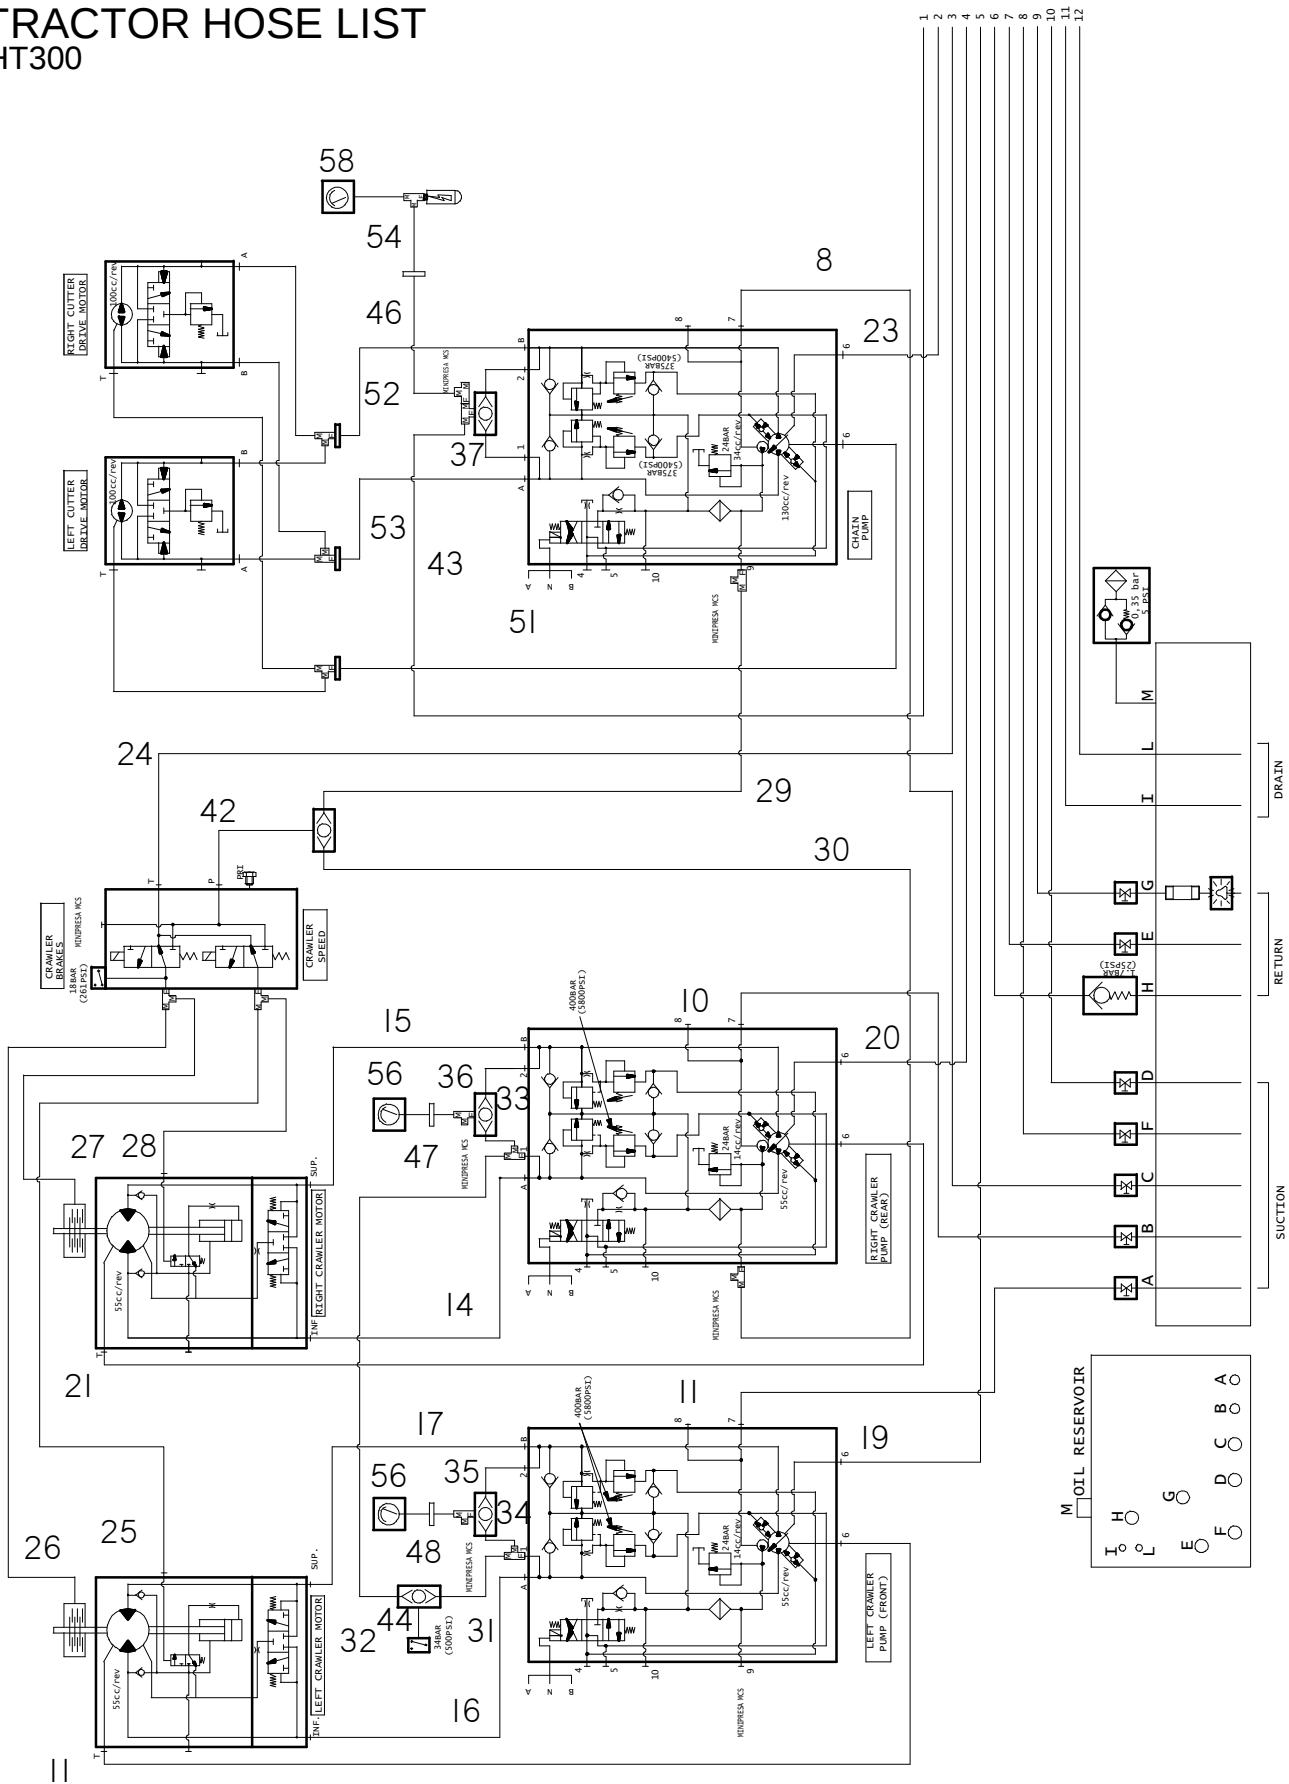

ELECTRICAL SCHMETIC

HT300

REF	PART				
NO.	NUMBER	QTY	DESCRIPTION	REMARKS	
43.	TS09103179	3	EMERGENCY STOP SWITCH, HEAD		
44.	TS09105180	3	EMERGENCY STOP SWITCH	BODY + N.O. CONTACT	
45.	TS09103180	2	EMERGENCY STOP BOX		
46.	TS09100941	2	EMERGENCY STOP CIRCULAR LEGEND		
47.	TS36402144	1	SEAT SWITCH		
48.	TSV00-8603-001	2	CLOGGING SWITCH		
49.	TST00-8600-087	1	HYD. FLUID LEVEL SENSOR		
50.	TS09105039	1	BACKUP HORN, 24 VDC, 112dB		
51.	TSV00-8603-003	1	PRESSURE SWITCH, 350 bar 1/4NPT		
52.	TS09105040	1	HORN, 24 VDC, 112dB		
53.	TS09105128	1	PRESSURE SWITCH, 0.4bar N.C. (M10X1)		
54.	TS09105025	2	FUEL LEVEL SENDER L=521.5		
55.	TS09102219	1	TEMPERATURE SENDER	12/24 VDC, MAX 150°C (M14-1.5)	
56.	TS09105129	1	PRESSURE SWITCH, 0.4bar N.O. (M10X1)		
57.	TSV00-8510-001	1	CAT COOLANT LEVEL SENSOR 7/30 VDC		
58.	TS09101189	3	SOLENOID RELAY, 24 VDC	1-CONTACT N.O. 80AMP	
59.	TSV00-8401-004	1	CAT CIRCUIT PROTECTOR, 60AMP		
60.	TSV00-8401-006	2	CAT CIRCUIT PROTECTOR, 20AMP		
61.	TSV00-8401-005	2	CAT CIRCUIT PROTECTOR, 15AMP		
62.	TSV00-8401-007	1	CAT CIRCUIT PROTECTOR, 30AMP		
63.	TSV00-8401-004	1	CAT CIRCUIT PROTECTOR, 135AMP		
64.	TSV00-4700-001	2	BATTERY, 12VDC, 180Ah, 1100AMP		
65.	TS09104160	1	BATTERY DISCONNECT SWITCH		
66.	TSV00-4510-016	1	STARTING MOTOR, 24VDC		
67.	TSV00-4510-015	1	ALTERNATOR, 24VDC, 65AMP		

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL