

# EP中力


EPT20-15EHJ

Semi-electric Pallet Truck

## 半电动搬运车

Parts Manual

## 零件目录

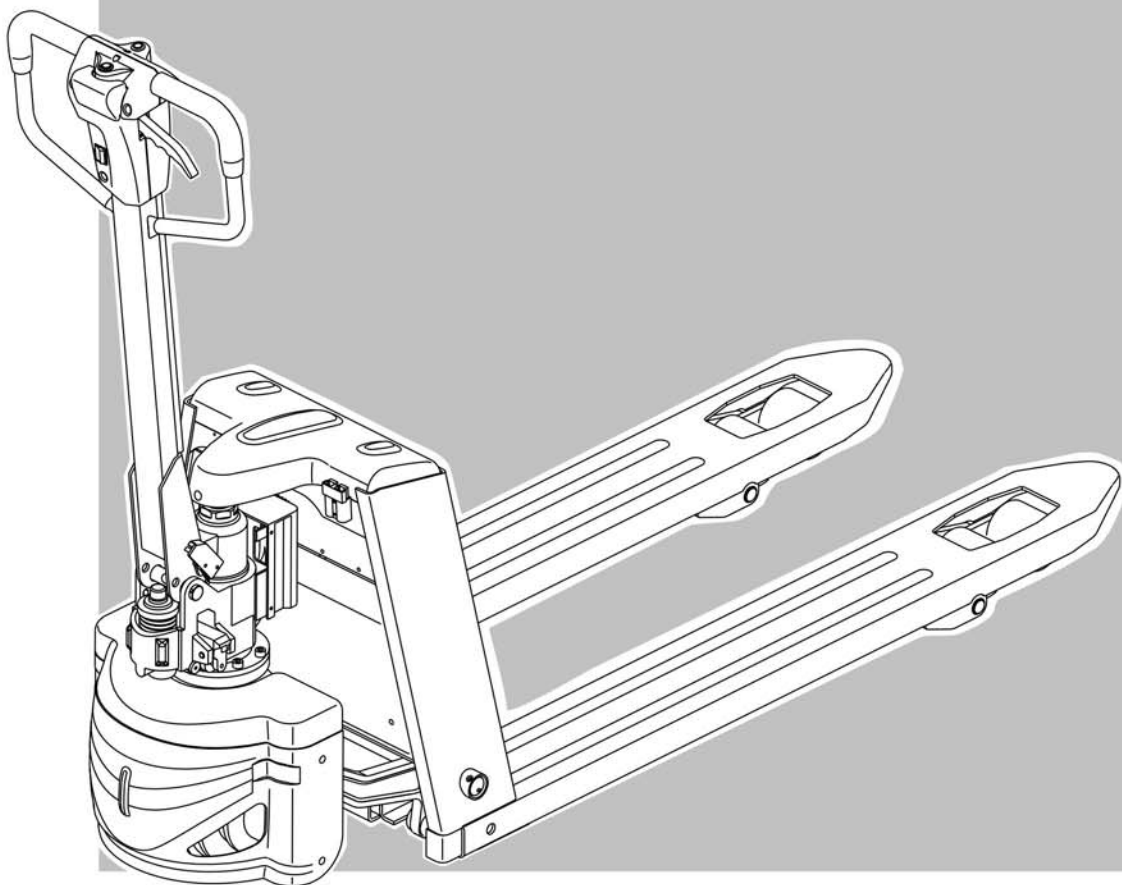

CE

CE CERTIFICATE

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

## Index 目录

<b>1000Frame System 车身系统</b>	
0101 Frame System ( Double Wheel )车身系统 (双轮) .....	3
0102 Frame System ( Single Wheel )车身系统 (单轮) .....	5
0103 Connecting Link ( Double Wheel )连杆总成 (双轮) .....	7
0104 Connecting Link ( Single Wheel )连杆总成 (单轮) .....	9
0105 Load Wheel ( Double Wheel )承载轮 (双轮) .....	11
0106 Load Wheel ( Single Wheel )承载轮 (单轮) .....	13
0107 Cover Assembly 外罩总成.....	15
<b>2000Driving System 驱动系统</b>	
0201 Driving System 驱动系统.....	20
<b>3000Operating Control System 操作系统</b>	
0301 Operating Control System 操作系统.....	23
0302 Control Pod Assembly 操作手柄头总成.....	25
<b>4000Hydraulic System 液压系统</b>	
0401 Hydraulic System 液压系统.....	30
<b>5000Electrical System 电气系统</b>	
0501 Electrical System 电气系统.....	33
0502 Wire Harness Assembly 线束总成.....	35
0503 Cable Assembly 电缆总成.....	39

0105 Load Wheel ( Double Wheel )

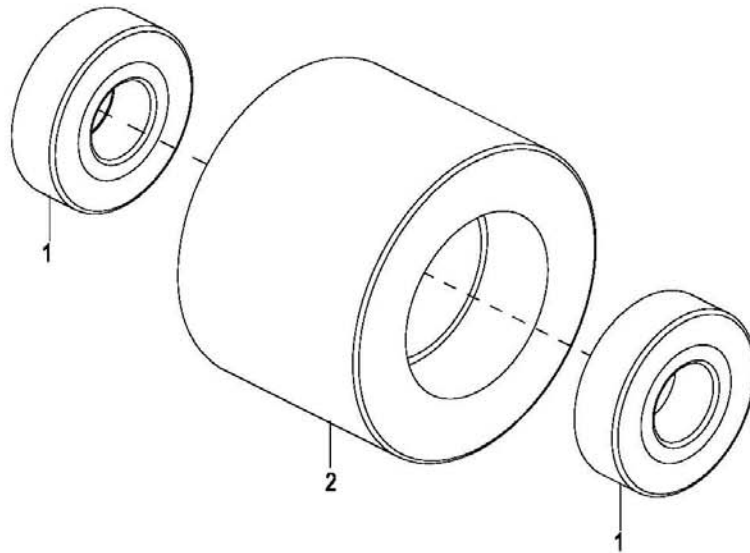

## 0201 Driving System

## 驱动系统

Index	Part No.	Part Name	No.	Applied Date	Remark
序号	零件编号	零件名称	数量	适用日期	备注
1	1121-200000-00	Driving Assembly	1		Including Index 2—27
2	1121-520003-00	Brake Assembly	1		
3	0000-000662-00	Flat Key 5x5x12	2		
4	1115-220000-00	Driving Wheel	1		
5	1115-200010-00	Bearing Baffle	1		
6	1115-250000-00	Motor	1		
7	0000-000663-00	Bearing 61824-2RS	2		
8	1121-210001-00	Gear Case	1		
9	0000-000671-00	Oil Seal $\phi 16 \times 28 \times 7$	1		
10	1115-200007-00	Cap	1		
11	0000-000386-00	Scrw M6x20	8		
12	0000-000056-00	Lockwasher $\phi 6$	8		
13	0000-000013-00	Grease Fitting M8	1		
14	0000-000704-00	Pin $\phi 6 \times 20$	2		
15	1115-200001-00	Gear Cover	1		
16	0000-000658-00	Snap Ring For Hole $\phi 42$	1		
17	0000-000659-00	Snap Ring $\phi 15$	2		
18	0000-000667-00	Bearing 61905Z	1		
19	1115-200004-00	Helical Gear	1		
	1115-200005-00	Helical Gear	1		
20	0000-000680-00	Bearing 16003Z	1		
21	1115-200003-00	Gear	1		
	1115-200002-00	Gear Loop	1		
22	0000-000660-00	Key 5x5x18	1		
23	0000-000026-00	Screw M8x30	5		
24	0000-000159-00	Lockwasher $\phi 8$	10		
25	0000-000670-00	Oil Seal $\phi 155 \times 172 \times 10$	1		
26	0000-000661-00	Screw M5x20	6		
27	0000-000206-00	Lockwasher $\phi 5$	6		
28	1115-240001-00	Brake lining	1		
29	0000-000665-00	Screw M4x45	3		
30	0000-001230-00	Bearing 51113	1		
31	0000-001231-00	Bearing 6013-Z	1		
32	1115-231000-00	Bracket	1		
33	0000-000004-00	Screw M5x12	2		
34	1115-250001-00	Brush	4		
35	1115-250002-00	Brush Spring	4		
36	1115-250003-00	Holder Brush	1		
37	1121-200001-00	Connecting Plate	1		
38	0000-000151-00	Screw M8x25	5		

### 0401 Hydraulic System

#### 液压系统

Index	Part No.	Part Name		No.	Applied Date	Remark
序号	零件编号	零件名称		数量	适用日期	备注
1	1121-410000-00	Hydraulic Assembly	液压动力单元	1		Including Index 6—22
2	0000-000151-00	Screw M8x25	螺钉	4		
3	0000-000159-00	Lockwasher ø8	弹垫	4		
4	0000-000176-00	Flatwasher ø8	平垫	4		
5	0000-000077-00	Screw M6x12	螺钉	1		
6	1121-410001-00	Steel Ball	钢球	1		
7	1121-410007-00	Pressure Bar	压杆	1		
8	1121-410008-00	Spring Cover	压簧盖	1		
9	1121-410009-00	Spring	压簧	1		
10	1121-410010-00	Pressure Release Lever	泄压杠杆	1		
11	0000-001237-10	Pin 8x45	弹性圆柱销	1		
12	1121-410011-00	Rod	泄压顶杆	1		
13	0000-000108-00	Nut M6	螺母	1		
14	1121-410012-00	Unloading Valve	卸荷阀	1		
15	1121-410013-00	Relief Valve	安全阀	1		
16	1121-410014-00	Control Valve	控制阀	1		
17	1121-410015-00	Ring Wiper 18	防尘圈	1		
18	1121-410016-00	YX-seal 18	YX 密封圈	1		
19	1121-410017-00	Ring Wiper 32	防尘圈	1		
20	1121-410018-00	O-ring 32x3.55	O 型圈	1		
21	1121-410002-00	Piston Rod	活塞杆	1		
22	1121-410019-00	seal 32	密封圈	1		
KIT	1121-ZZG-0A	Seal Kit For Hydraulic Assembly (include item17,18,19,20,22 )	起升泵修理包(包含零件 17、 18、19、20、22)	1		

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL