

# GENERAL INFORMATION

## 2007 TOURING MODELS PARTS CATALOG

**THIS IS NOT AN ASSEMBLY MANUAL AND SHOULD NOT BE USED AS SUCH**

### About This Manual

This Parts Catalog has been prepared to make it easier for you to order parts for the 2007 Touring model motorcycles. You will also find a complete Hardware Listing at the back of the book for your convenience. The numbers shown in the illustrations correspond to the numbers in the "INDEX NO." column in the parts lists. Please consult the illustrations when ordering parts to ensure you receive all the required parts. Take note that the number in parenthesis following the part description is the quantity of that part needed for complete assembly; if there is no number in parenthesis, only one is used. Prices of parts in this catalog are published separately.

The following instructions should be followed carefully when ordering parts:

- The "MODELS" column in the parts lists may include one or more two-character codes that correspond to the V.I.N. model designations. The Touring models and their respective two-character codes are listed at the bottom of each right-hand page for your reference. If a part fits all Touring models, "All" will be in the corresponding "MODEL" column.
- Be sure to specify the correct part number for each item. The part numbers appear under the "PART NO." column in the parts lists.
- Orders may be placed via your computer for all parts. Please review your system documentation for details on placing orders electronically. All non-warranty replacement crankcase orders require return of the complete left crankcase half with V.I.N.. All non-warranty replacement frame orders require return of the steering neck with V.I.N.. Non-compliance will result in a fine. See non-warranty frame and crankcase policy or contact your SPOC team for details.
- Parts marked "**RESTRICTED SALE PART**" are limited edition items and can only be ordered as direct replacements. Harley-Davidson may require that certain "**RESTRICTED SALE PART**" items be returned.

To the best knowledge of Harley-Davidson Motor Company, the material contained herein is accurate as of the date this publication was approved for printing. Harley-Davidson Motor Company reserves the right to change specifications, equipment, or designs at any time without notice and without incurring obligation.

### Vehicle Identification Number (V.I.N.)

See Figure 1 on the next page. The full 17-digit serial, or V.I.N., is stamped on the right side of the frame backbone at the rear of the steering head (under the main harness). The V.I.N. is also printed on a label on the left side of the steering head.

An abbreviated V.I.N. is stamped on the left side crankcase between the front and rear cylinders.

Sample V.I.N. as it appears on the steering head - **1HD1FC4137Y600041**

Sample abbreviated V.I.N. as it appears on the left crankcase - **FC47600041**

Always give the full 17-digit V.I.N. when ordering parts or making any inquiry about your motorcycle.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

**ROCKER ARM ASSEMBLY & PUSH RODS -TWIN CAM 96™**

<b>INDEX NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>MODEL(S)</b>
1	1039	SCREW (8)	ALL
2	3692A	SCREW (6)	ALL
3	3693A	SCREW (10)	ALL
4	3736A	SCREW (8)	ALL
5	3746A	SCREW (4)	ALL
6	4741A	SCREW (8)	ALL
7	6762B	WASHER (4)	ALL
8	11132	O-RING, push rod cover (4)	ALL
9	11145A	O-RING, push rod cover (4)	ALL
10	11270	O-RING (2)	ALL
11	11293	O-RING (4)	ALL
12	16719-99A	GASKET, rocker housing (2)	ALL
13	17045-99C	GASKET KIT, cam service	ALL
14	17162-03	GASKET KIT, breather assembly, w/ 26858-99, 63815-99, & gaskets	ALL
15	17360-83A	ROCKER ARM, front intake, rear exhaust, w/ bushings (2)	ALL
16	17375-83A	ROCKER ARM, rear intake, front exhaust, w/ bushings (2)	ALL
17	17386-99	GASKET, rocker cover (2)	ALL
18	17428-57	BUSHING, rocker arm (8)	ALL
19	17572-99	ROCKER COVER (chrome) (2)	FB/FC/FF/FR/FS/FY/KB
	17575-99	ROCKER COVER (polished) (2)	FV
20	17573-99	ROCKER HOUSING (chrome) (2)	FB/FC/FF/FR/FS/FY/KB
	17574-99	ROCKER HOUSING (polished) (2)	FV
21	17576-99	LIFTER COVER, front (polished)	FV
	17577-99	LIFTER COVER, rear (polished)	FV
	17964-99	LIFTER COVER, front (chrome)	FB/FC/FF/FR/FS/FY/KB
	17966-99	LIFTER COVER, rear (chrome)	FB/FC/FF/FR/FS/FY/KB
22	17594-99	SUPPORT, rocker arm (2)	ALL
23	17650-02	BREATHER ASSEMBLY KIT, w/ 26858-99, 63815-99, breather cover, baffle, & gaskets	ALL
24	17611-83	SHAFT, rocker arm (4)	ALL
25	17922-99	PUSH ROD, exhaust, 10.536 in. long (black oxide finish) (2)	ALL
	17923-99	PUSH ROD, intake, 10.418 in. long (plain finish) (2)	ALL
26	17939-99	COVER, push rod, lower (4)	ALL
27	17945-36B	CAP, cover spring (4)	ALL
28	17947-36	SPRING, push rod cover (4)	ALL
29	17948-99	COVER, push rod, upper (4)	ALL
30	17968-99	RETAINER, spring cap (4)	ALL
31	18535-99	PIN, anti-rotation (2)	ALL
32	18538-99B	HYDRAULIC LIFTER (4)	ALL
33	18635-99B	GASKET, lifter cover (2)	ALL
34	26858-99	VALVE, breather (2)	ALL
35	63815-99	FILTER ELEMENT, breather (2)	ALL

**2007 MODEL IDENTIFICATION CODES**

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3275	SCREW (4)	ALL
2	11291	SEAL, manifold air pressure sensor	ALL
3	26993-06	FLANGE, mounting (2)	ALL
4	26995-86B	SEAL, intake manifold (2)	ALL
5	27381-06	INTAKE AIR TEMPERATURE SENSOR KIT, w/ screws	ALL
	27708-06	INDUCTION MODULE ASSEMBLY, complete	ALL
6	27709-06A	FUEL INJECTOR ASSEMBLY (2)	ALL
7	27651-06	FUEL RAIL SERVICE KIT, w/ fuel rail, screws, washers, o-rings, & tube	ALL
8	27655-06	INDUCTION MODULE SERVICE KIT, sensor o-rings & screws, injector clips, fuel tube seal retainer, & o-rings	ALL
9	27658-06	KIT AIR CONTROL, idle EFI w/ motor & screws	ALL
10	27659-06	THROTTLE POSITION SENSOR, w/ screws	ALL
11	27684-06	HOUSING & STOP, throttle cable	ALL
12	32316-99	SENSOR, manifold air pressure	ALL
13	32424-98	SENSOR MAP, w/o seal	ALL

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	925	SCREW, cover	ALL
2	928	BOLT, starter (2)	ALL
3	929A	SCREW, w/ o-ring (2)	ALL
4	3403	LOCKNUT, flange	ALL
5	3559	BOLT, starter (2)	ALL
6	4419	SCREW, starter mount (2)	ALL
7	7838	NUT, bracket (2)	ALL
8	8871	BALL BEARING	ALL
9	8879	BEARING	ALL
10	8883	BALL BEARING	ALL
11	9077	CLUTCH ROLLER (5)	ALL
12	11116	O-RING	ALL
13	27444-00Y	O-RING, starter-to-case	ALL
14	31328-91	RING, snap	ALL
15	31345-06	GEAR, pinion	ALL
16	31515-90	ARMATURE ASSEMBLY	ALL
17	31518-90	BRUSH HOLDER ASSEMBLY	ALL
18	31519-90	FRAME, starter end	ALL
19	31525-90	IDLER GEAR	ALL
20	31530-90	RETAINER, idler	ALL
21	31535-91	COVER (chrome)	ALL
22	31604-91A	SOLENOID REPAIR KIT	ALL
	31618-06	STARTER ASSEMBLY COMPLETE (black)	ALL
23	31626-06	CLUTCH SUBASSEMBLY, 31328-91, 31345-06, 31632-06 & 31692-90	ALL
24	31631-06	SOLENOID ASSEMBLY, w/ 31688-90 & 31690-90	ALL
25	31632-06	CLUTCH, starter	ALL
26	31641-06	SPRING, solenoid	ALL
27	31643-06	CAP, terminal, rubber	ALL
28	31660-90	DRAIN VENT	ALL
29	31661-90	SPRING, brush (4)	ALL
30	31688-90	COVER, solenoid	ALL
31	31689-90	BOLT, w/ washer (3)	ALL
32	31692-90	SPRING	ALL
33	31695-90	O-RING (2)	ALL

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2980	SCREW (6)	ALL
2	7848W	JAM NUT	ALL
3	11096	RETAINING RING	ALL
4	37088-90	PUSH ROD, clutch release	ALL
5	37090-98A	SCREW, adjuster	ALL
6	37092-06	ROD ASSEMBLY	ALL
7	37312-75	BEARING, push rod	ALL
8	37313-80	THRUST WASHER (2)	ALL
9	37496-90A	NUT, mainshaft	ALL
10	37554-06A	HUB ASSEMBLY, clutch	ALL
11	37813-06	CLUTCH ASSEMBLY, w/ 1, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, & 21	ALL
12	37882-06	SPRING, clutch	ALL
13	37883-98	SEAT, damper spring	ALL
14	37884-98	DAMPER SPRING	ALL
15	37903-90	RELEASE PLATE	ALL
16	37904-90	RETAINING RING	ALL
17	37905-00	RETAINING RING, internal	ALL
18	37906-90	BEARING, ball	ALL
19	37909-90	RETAINING RING, internal	ALL
20	37912-98A	PRESSURE PLATE KIT, clutch	ALL
21	37913-98	PLATE CLUTCH (8)	ALL
22	37932-98	FRICTION PLATE KIT, w/ nine friction plates	ALL

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	44023-00C	CALIPER ASSEMBLY, right (black)	FB/FC/FF/FR/FV/FY/KB
	44046-00D	CALIPER ASSEMBLY, left (black)	FB/FC/FF/FR/FV/FY/KB
	44451-01C	CALIPER ASSEMBLY, right (silver)	FS
	44452-01C	CALIPER ASSEMBLY, left (silver)	FS
2	44048-83A	BLEEDER FITTING (2)	ALL
3	44082-00C	PAD KIT (2)	ALL
4	44147-87A	CAP BLEEDER (2)	ALL
5	44160-00	BOLT, caliper mounting, lower (2)	ALL
6	44163-00	BOLT, caliper mounting, upper (2)	ALL
7	44177-00	BOLT, bridge (2)	ALL
8	44313-01	PISTON KIT (2)	ALL
9	44314-00	PAD PIN KIT (2)	ALL
10	44315-00	SEAL KIT (2)	ALL
11	44337-00B	SPRING KIT, anti-rattle (2)	ALL
12	44338-00	DECAL (2)	ALL

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	608	ROLL PIN	ALL
2	3537	SCREW (4)	ALL
3	3892	SCREW (2 - FX/Y; 3 - FS)	FS/FY
4	4240	SCREW (2)	ALL
5	4752	BOLT (2)	ALL
6	6703	WASHER (2 FX/Y; 3 FS)	FS/FY
7	7039	LOCKWASHER (2)	ALL
	10225	PLUG, upper fork bracket (3) (not illustrated)	ALL
8	10138	TAB, electrical ground	FC/FF/FV/KB
9	41713-86	CLAMP	FS
10	45419-80	BOLT, fork (2)	ALL
11	45435-95	BRACKET, upper fork stem	ALL
12	45446-87A	BRACKET ASSEMBLY, fork stem	ALL
13	45718-60	NUT, fork stem	ALL
14	45733-48	OIL SEAL, fork bracket bolt (2)	ALL
15	45780-03	COVER, fork bracket (chrome)	FY
16	45964-86	COVER ASSEMBLY, fork tube (2)	ALL
17	47530-79B	FORK STOP (2)	ALL
18	48300-60	ROLLER BEARING, steering head, w/ 48315-60 (2)	ALL
19	48315-60	CUP, bearing	ALL
20	48333-80	SEAT, upper head cone	ALL
21	48361-80	DUST SHIELD, bearing, upper	ALL
22	48365-48A	DIRT GUARD, bearing, steering head	ALL
23	58520-79A	AIR BAFFLE	FS
24	72332-02	BRACKET, mounting	ALL

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	861A	SCREW (2)	FB/FC/FF/FR/FS/FV
2	2708A	SCREW (2)	FY/KB
3	3599	SCREW (3)	ALL
4	4017	BOLT (2)	ALL
	4600	SCREW, footboard (8) (not illustrated)	FY/KB
5	6738	WASHER (3)	ALL
6	7038	LOCKWASHER (2)	FB/FC/FF/FR/FS/FV
7	7041	LOCKWASHER (2)	ALL
8	7068	LOCKWASHER (3)	ALL
9	7716	LOCKNUT (4)	ALL
10	7748W	NUT	ALL
11	8860	BALL (2)	FB/FC/FF/FR/FS/FV
12	11304	RING, retaining, passenger footpeg support (2)	FY/KB
13	33085-74	SPRING (2)	ALL
14	45041-01	CLEVIS PIN, passenger footpeg support (2)	FY/KB
15	47365-83C	BRACKET, front footboard, w/ 3599 (2)	ALL
16	49015-04A	SUPPORT, right passenger footpeg (chrome)	FY/KB
17	49036-04A	SUPPORT, left passenger footpeg (chrome)	FY/KB
18	50208-04	MOUNT, passenger footpeg (2)	FY/KB
19	50345-04	FOOTPEG, passenger (2)	FY/KB
20	50350-04	PAD, passenger footpeg (2)	FY/KB
21	50518-83B	BRACKET KIT, right rear, w/ 3599	ALL
22	50606-06	PAD, passenger footboard (2)	FB/FC/FF/FR/FS/FV
23	50613-91A	FOOTREST, passenger (2)	ALL
24	50614-06	PAD, footboard (2)	FB/FC/FF/FR/FS/FV
25	50621-06	FOOTBOARD ASSEMBLY, operator, w/ 50614-06 (2)	FB/FC/FF/FR/FS/FV
26	50622-83C	BRACKET MOUNTING KIT, left-rear, w/ 4017	ALL
	50631-04	FOOTBOARD KIT, rider (left & right-hand) assemblies (not illustrated), w/ 7716 & 50635-82	FY/KB
27	50635-82A	SHOULDER BOLT, footboard (4)	ALL
28	50683-04	FOOTBOARD BOTTOM ASSEMBLY (right-hand)	FY/KB
29	50684-04	RUBBER PAD, footboard (right-hand)	FY/KB
30	50685-04	TOP PLATE, footboard (right-hand)	FY/KB
31	50688-04	FOOTBOARD BOTTOM ASSEMBLY (left-hand)	FY/KB
32	50689-04	RUBBER PAD, footboard (left-hand)	FY/KB
33	50690-04	TOP PLATE, footboard (left-hand)	FY/KB
34	50912-72	SPRING WASHER, passenger footpeg (2)	FY/KB
35	50938-04	PIN PIVOT KIT	FB/FC/FF/FR/FS/FV
36	52719-93B	SUPPORT KIT, footboard (2)	FB/FC/FF/FR/FS/FV
<b>INTERNATIONAL MODELS ONLY</b>			
37	50899-99A	FOOTBOARD, passenger (HDI) (2)	FB/FC/FF/FR/FS/FV

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

<b>INDEX NO.</b>	<b>PART NO.</b>	<b>DESCRIPTION</b>	<b>MODEL(S)</b>
1	3210A	SCREW (4)	ALL
2	3605	BOLT (2)	ALL
3	6083	WASHER, right only	ALL
4	6113	WASHER, right only	ALL
5	55908-04	HANDLEBAR	FY
6	55917-79A	CLAMP, upper, left	ALL
7	55918-79A	CLAMP, upper, right	ALL
8	55924-97	HANDLEBAR	FC/FF/FV/KB
9	55947-00	HANDLEBAR	FB/FR
10	56149-88B	RISER, lower, right	ALL
	56151-88B	RISER, lower, left	ALL
11	56159-73	CUP WASHER (4)	ALL
12	56161-83A	BUSHING, rubber (4)	ALL
13	56163-93	SPACER (2)	ALL
14	56571-98A	HANDLEBAR	FS
15	70142-94	CABLE ASSEMBLY, handlebar ground, w/ 72240-94	ALL
16	70345-84	RETAINER (4)	FB/FR/FS/FY
17	72240-94	TERMINAL, 10 ring, 14-16 gauge	ALL

**2007 MODEL IDENTIFICATION CODES**

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	933	SCREW (5)	FS
2	2647B	SCREW (8)	FS
3	3256	SCREW	FS
4	5207	WELL NUT (5)	FS
5	6054	WASHER (5)	FS
6	6702	WASHER (4)	FS
7	7462A	WASHER, rubber (5)	FS
8	7549A	ACORN NUT	FS
9	9847	TERMINAL, female spade (4)	FS
10	9848	TERMINAL, female spade (2)	FS
11	14629-04	DECAL, windshield	FS
12	57958-04A	WINDSHIELD KIT	FS
13	58454-04	MOUNT, lower fairing (2)	FS
14	58487-04	CLAMP, lower fairing mount (2)	FS
15	58705-98C	TRIM, windshield	FS
16	58733-98B	OUTER FAIRING (prime)	FS
17	58711-98	TRIM (3)	FS
18	67093-04	ISOLATOR STRIP	FS
19	68329-03	BULB, halogen HB2/H-4 (2)	FS
20	67759-98A	COVER, headlamps, w/ edge trim	FS
21	67775-01C	DUAL HEADLAMP ASSEMBLY	FS
22	67959-01	TRIM	FS
23	67978-98	BOOT (2)	FS
24	67979-98	RETAINER, headlamp bulb (2)	FS
25	67980-98A	ADJUSTMENT STUD (3)	FS
26	67981-98A	MOUNTING CLIP (3)	FS
27	68168-89A	BULB, turn signal (2)	FS
28	68904-00	SOCKET ASSEMBLY, w/ mount (2)	FS
29	68933-04	MOUNTING BRACKET, right	FS
	69199-04	MOUNTING BRACKET, left	FS
30	69283-04	GASKET (2)	FS
31	68973-00	LENS, turn signal (amber) (2)	FS
32	69550-04	TURN SIGNAL HOUSING, w/ 3256 (2)	FS
33	70423-98	HARNESS, dual headlamp adapter	FS
34	72056-92	CONNECTOR, spade terminal, 3-way (2)	FS
35	73153-96BK	HOUSING SOCKET, 3-way (2)	FS
36	73191-96	SOCKET CONTACT, 16-20 gauge (4)	FS
37	89582-04	CAP, thread protector	FS
<b>INTERNATIONAL MODELS ONLY</b>			
38	53436-97	BULB, position lamp, wedge (Japan)	FS
39	58246-05A	WINDSHIELD ASSEMBLY, w/ decal and foam tape (Japan)	FS
40	68083-01	POSITION LAMP, w/ 53436-97 (Japan)	FS
41	68163-84	BULB, turnsignal (2) (Japan)	FS
42	68906-00	SOCKET ASSEMBLY, turnsignal w/ mount (2) (Japan)	FS
43	68996-01B	HEADLAMP ASSMEBLY, dual, left, dip, w/ 19, 23, 24, 25, 26, 33, 40, 45, & 46 (Japan)	FS
44	69272-05	TURN SIGNAL ASSEMBLY, w/ 31, 32, 36, 41, & 42 (Japan) (2)	FS
45	69291-05	TRIM RING (Japan)	FS
46	89582-04	CAP, thread protector (Japan)	FS

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLTCU

FF = FLTCT

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	787	SCREW (7)	FB/FR/FY
2	2647B	SCREW (2)	FB/FR/FY
3	2806	SCREW	FB/FR/FY
4	2933	SCREW (2)	FB/FR/FY
5	3588	SCREW, flange (3)	FY
6	5210	WELLNUT (7)	FB/FR/FY
7	6150W	WASHER (2)	FB/FR/FY
8	6433	WASHER	FY
9	6789	WASHER	FB/FR
10	7889	NUT, w/ washer	FB/FR
11	7888A	NUT, speed	FB/FR/FY
12	9990W	CLAMP	FY
13	11489	TRIM (2)	FB/FR/FY
14	14019-83	LABEL, on - off (2)	FB/FR/FY
15	14448-94	EMBLEM, bar & shield	FY
16	57000-04	DEFLECTOR WING (chrome)	FY
17	61081-92	COVER, key-head, set (2)	FB/FR/FY
18	69604-03	DOOR ASSEMBLY KIT, NOTE: The headlamp door 67712-83, is not part of this kit.	FB/FR
	67616-03A	DOOR ASSEMBLY KIT, NOTE: The headlamp door 67712-83, is not part of this kit.	FY
19	67674-03A	NACELLE, right	FB/FR/FY
20	67668-05	MEDALLION, 7 inch bilb (Australia, England, HDI, Japan)	FB/FR/FY
	67682-03A	NACELLE, left	FB/FR/FY
21	67712-83	DOOR, headlamp	FB/FR
22	67718-60A	SCREW, headlamp door	FB/FR/FY
23	67720-03A	SPRING, top door, headlamp	FY
24	67721-48	SCREW (3)	FB/FR
25	67724-71	ADJUSTING SCREW (2)	FB/FR/FY
26	67726-71A	RETAINING RING	FB/FR/FY
27	67728-02	BUCKET ASSEMBLY	FB/FR/FY
28	67732-71B	MOUNTING RING	FB/FR
29	67778-60	SPRING, top door, headlamp	FB/FR
30	67866-03	COVER, handlebar	FB/FR
31	67867-04	COVER, handlebar (chrome)	FY
32	67868-03	TRIM, nacelle	FB/FR
33	67899-04	TRIM, nacelle (chrome)	FY

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
<b>NOTE: Refer to Painted Parts Book for painted part numbers.</b>			
30	68193-95	BULB, fender tip lamp	FB/FC/FF/FV
31	68706-00	FENDER LIGHT ASSEMBLY, w/ 59180-80, 68193-95, 73152-96BK, & 73191-96	FB/FC/FF/FV
32	70196-00	WIRE HARNESS ASM., jumper, w/ 73102-96BK, 73190-96, & 73191-96	FB/FC/FF/FV
33	73102-96BK	HOUSING PIN, 2-place	FB/FC/FF/FV
34	73190-96	TERMINAL PIN (2)	FB/FC/FF/FV
35	73191-96	PIN, single socket (2)	FB/FC/FF/FV
36	73152-96BK	SOCKET HOUSING, 2-place	FB/FC/FF/FV
37	91085-83C	BUMPER ASSEMBLY, w/ 3, 7, 8, 15, 16, 26, 31, 40, & 41	FC/FF
38	91090-77A	BRACKET, bumper	FC/FF
39	91107-77B	CUSHION, bumper	FC/FF
<b>INTERNATIONAL MODELS ONLY</b>			
40	755	HOLE PLUG (HDI)	FB/FC/FF/FS/FV
41	59116-96	FENDER TIP ASSEMBLY, w/ 59201-96 (HDI)	FB/FC/FF/FV
42	59201-96	LENS, fender tip (chrome) (HDI)	FB/FC/FF/FV
43	59289-92	REFLECTOR, right (amber) (HDI) (2-DD)	FB/FR/FS/FV/FY/KB
	59290-92	REFLECTOR, left (amber) (HDI) (2-DD)	FB/FR/FS/FV/FY/KB
	59748-06	FENDER TIP (not illustrated)	FS/FY/KB

**The HDI FLTR model uses a front fender assembly identical to the FLHT model.**

#### 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3529	SCREW (2)	FC/FF/FS/FV/KB
2	3652	SCREW	FC/FF/FS/FV
3	4033	SCREW (2)	FC/FF/FS/FV/KB
	4761	SCREW (2)	KB
4	4194	SCREW (2)	KB
5	7900	LOCKNUT (2)	FC/FF/FS/FV/KB
6	7964	STAKED NUT, j-type	FC/FF/FS/FV/KB
7	10105	CLIP, hinge mounting	FC/FF/FS/FV/KB
8	60957-89A	INSERT, console panel	DD/FV
	60961-04	INSERT, console panel Road Glide	FS
	60973-90	INSERT, console panel (black)	FF
	61266-06	INSERT, console panel	KB
9	61029-92A	LOCK, fuel tank	FC/FF/FS/FV/KB
10	61081-92	COVER, key-head, set (2)	FC/FF/FS/FV/KB
11	61109-85D	GASKET, filler cap	FC/FF/FS/FV/KB
12	61112-82A	BOOT	FC/FF/FS/FV/KB
13	61270-98A	CONSOLE ASSEMBLY, w/ 61279-88	FC/FF/FS/FV
	69214-04	CONSOLE ASSEMBLY, w/ 61279-88	KB
14	61274-92	FUEL FILLER CAP, vacuum vented	FC/FF/FS/FV/KB
15	61278-92	DOOR, console	FC/FF/FS/FV/KB
16	61279-88	HINGE PIN	FC/FF/FS/FV/KB
17	61305-06	BRACKET, console mount	KB
18	61313-88	BUMPER, cover (2)	FC/FF/FS/FV/KB
19	61296-06	MOLDING, rubber	KB
	71294-89A	MOLDING, rubber	FC/FF/FS/FV
20	71452-91A	KEY (specify key #)	FC/FF/FS/FV/KB
21	84850-92	NUT, lock	FC/FF/FS/FV/KB

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	3929	SCREW (4)	ALL
2	5416	BOLT	ALL
3	7041	LOCKWASHER (4)	ALL
4	7601	LOCKNUT	ALL
5	7593	NUT (4)	ALL
6	7796	NUT, w/ washer	ALL
7	9955	CLAMP, worm drive #24 (12)	ALL
8	27714-06	SEAL RING	ALL
9	27719-07	SENSOR, oxygen (O2) (2)	ALL
10	65283-94	MUFFLER CLAMP (3)	ALL
11	65324-83A	GASKET, exhaust port (2)	ALL
12	65325-83A	RETAINING RING, exhaust gasket (2)	ALL
13	65328-83	CLAMP, exhaust manifold (2)	ALL
14	65538-07	MUFFLER, left, (chrome)	FB/FC/FF/FV
	65547-07	MUFFLER, left, (chrome)	FR/FS/FY
	65592-07	MUFFLER, left, (chrome)	KB
15	65354-07	MUFFLER, right, (chrome)	FR/FS/FY
	65591-07	MUFFLER, right, (chrome)	KB
	65846-07	MUFFLER, right, (chrome)	FB/FC/FF/FV
16	65619-98	BRACKET TAB, exhaust mount at starter	ALL
17	65620-98	CLAMP, exhaust	ALL
18	65621-07	EXHAUST PIPE, right, front	ALL
19	65630-83C	SHIELD, front exhaust pipe	ALL
20	65626-07	EXHAUST PIPE ASSEMBLY, right, rear	ALL
21	65627-07	EXHAUST PIPE, left, rear (chrome)	ALL
22	65634-98A	SHIELD, right exhaust pipe, front	ALL
23	65636-07	SHIELD, left exhaust pipe, rear	ALL
24	65647-98	SHIELD, left exhaust pipe, front	ALL
25	65654-97	CLAMP, exhaust pipe	ALL
26	65678-07	BRACKET, rear exhaust mount	ALL
27	65723-85	MOUNTING BRACKET (2)	ALL
28	65724-85	MOUNT, rubber (2)	ALL
29	65951-98A	HEAT SHIELD ASSEMBLY, rear exhaust pipe	ALL
30	65952-98A	HEAT SHIELD ASSEMBLY, exhaust pipe, right rear lower	ALL
31	65988-07	SUPPORT BRACKET, exhaust mount at starter	ALL
32	72009-05	HOUSING, 2-way, pin	ALL
33	72011-05	WIRE SEAL, 16-20 AWG (yellow) (2)	ALL

#### INTERNATIONAL MODELS ONLY

34	65748-07	MUFFLER ASSEMBLY, right, catalytic (chrome) (Japan)	ALL
	65863-07	MUFFLER ASSEMBLY, right, catalytic (chrome) FB/C/F/R/V/Y;KB-Australia; FB/C/F/R/V/Y;KB-England; FB/C/F/R/S/V/Y;KB-HDI	ALL
35	65949-07	MUFFLER ASSEMBLY, left, catalytic (chrome) FB/C/F/R/V/Y;KB-Australia; FB/C/F/R/V/Y;KB-England; FB/C/F/R/S/V/Y;KB-HDI; Japan-FB/C/F/R/S/V/Y;KB	ALL
36	65626-07	EXHAUST PIPE ASSEMBLY, right, rear (Japan)	ALL
	65905-07	EXHAUST PIPE ASSEMBLY, right, rear FB/C/F/R/V/Y;KB-Australia; FB/C/F/R/V/Y;KB-England; FB/C/D/F/R/S/V/Y;KB-HDI	ALL

#### 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2501A	SCREW (6)	FY
2	3335	STUD	FY
3	3634	SCREW	FY
4	7549A	ACORN NUT	FY
	10073	CABLE STRAP (not illustrated)	FY
5	10103	CLIP, under instrument panel (3)	FY
	53596-03A	LOCKSET, complete, w/ keys, ignition switch, & fork lock	FY
6	60963-04	CONSOLE, fuel tank (chrome)	FY
7	61081-92	COVER, key-head, set (2)	FY
8	61192-96	GASKET, fuel gauge	FY
	62519-03	HOSE, shield 1/4 in. I.D., 5.00 in. long, fuel gauge wires (not illustrated)	FY
9	67096-04B	SPEEDOMETER ASSEMBLY, mph	FY
10	67190-89	SEAL, speedometer	FY
11	67341-04A	BACK CLAMP	FY
12	67487-04	BRACKET, console mount	FY
13	67854-98	SWITCH, odometer reset	FY
14	67880-94	BOOT, odometer reset switch	FY
15	68892-00A	HOUSING ASSEMBLY, w/ LED lights & connector	FY
16	68893-00A	BEZEL, indicator light	FY
17	71010-04	TRIM	FY
18	71293-04	INSERT, console	FY
19	71313-96A	IGNITION SWITCH (keyed-to-match), w/ 72327-03	FY
20	71452-91A	KEY (specify key #)	FY
21	72327-03	CONNECTOR, 3-way, igniton switch	FY
22	72904-01BK	PIN HOUSING, 4-way	FY
23	72990-01	PIN TERMINAL (3)	FY
24	74118-98BK	SOCKET HOUSING, 8-way, (black)	FY
25	74158-98	SECONDARY LOCK, 8-way socket housing	FY
26	74191-98	SOCKET TERMINAL (7)	FY
27	74193-98	SOCKET TERMINAL SOLID (7)	FY
28	74195-98	SEAL PIN	FY
29	75053-01B	FUEL GAUGE, w/o LED, w/ 72990-01	FY
<b>INTERNATIONAL MODELS ONLY</b>			
30	67204-04B	SPEEDOMETER, kph (FX-Canada, Japan; FY-Australia, Canada, HDI)	FY
	67242-04B	SPEEDOMETER, dual, mph/kph (England)	FY

### 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70274-07	WIRING HARNESS, interconnect	FS
<b>NOTE: Includes the following parts.</b>			
1	9839	TERMINAL, positive lock (8)	FS
2	9847	TERMINAL, female spade	FS
3	9848	TERMINAL, female spade (2)	FS
4	9898	TERMINAL, female flag, 14-16 gauge	FS
5	9937	TERMINAL, female spade, 1/4 in. slot (11)	FS
6	10039	CABLE STRAP	FS
7	10065	CABLE STRAP (6)	FS
8	67450-99	SWITCH ASSEMBLY, trip reset	FS
9	72056-92	TERMINAL HOUSING, 3-way	FS
10	72116-94BK	SOCKET HOUSING, 6-way, sealed (black)	FS
11	72130-04	SOCKET HOUSING, 12-way (black)	FS
12	72131-04	SOCKET HOUSING, 12-way (gray)	FS
13	72156-94	SOCKET LOCK, secondary, 6-way (2)	FS
14	72167-07BK	HOUSING, 16-way pin (black)	FS
15	72168-07	TERMINAL SOCKET, 18-20 AWG (20)	FS
16	72169-07	TERMINAL PIN, 16-20 AWG (28)	FS
17	72189-04	SEAL PIN (9)	FS
18	72191-94	TERMINAL, socket, 16-18 AWG (4)	FS
19	72195-94	SEAL PIN (4)	FS
20	72200-94	HOUSING, 3-way, female (4)	FS
21	72203-96	HOUSING, 2-position (4)	FS
22	72205-94	CONNECTOR, plug, 4-position, male	FS
23	72208-94	TERMINAL, 12 AWG, male	FS
24	72210-94	TERMINAL, 14 AWG, male (3)	FS
25	72272-07	TERMINAL SOCKET, 14-16 AWG (6)	FS
26	72290-94	TERMINAL, insulated (5)	FS
27	72294-94	TERMINAL, 14-16 AWG, female (2)	FS
28	72364-06	TERMINAL, 10-14 AWG, female, insulated	FS
29	72381-98	TERMINAL SOCKET (22)	FS
30	72382-98BK	HOUSING, 23-place (black)	FS
31	72397-98	SEAL PIN, 12-way (black)	FS
32	72473-07	SEAL PIN (2)	FS
33	72487-07BK	SOCKET HOUSING, 12-way (black)	FS
34	72490-07GY	PIN HOUSING, 12-way (grey)	FS
35	72491-07GY	SOCKET HOUSING, 16-way (grey)	FS
36	73103-96BK	PIN HOUSING, 3-place (black) (2)	FS
37	73110-96BK	PIN HOUSING, 10-place (black)	FS
38	73112-96BK	PIN HOUSING, 12-position (black)	FS
39	73153-96BK	SOCKET HOUSING, 3-place (black)	FS
40	73190-96	TERMINAL, pin, 16-20 AWG (24)	FS
41	73191-96	TERMINAL SOCKET, 16-20 AWG (2)	FS
42	73212-07	ANCHOR T-STUD CONNECTOR (2)	FS
43	74196-04	TERMINAL, socket, 20 AWG (15)	FS
44	74197-04	SOCKET LOCK, socket, 12-way (2)	FS

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
	70245-07	MAIN WIRING HARNESS	ALL
<b>NOTE: Includes the following parts.</b>			
1	9819	TERMINAL, 1/4 in. ring, 12 AWG	ALL
2	9825	TERMINAL, 1/4 in., ring, 14-18 AWG	ALL
3	9838	TERMINAL, 1/4 in. ring, 10-12 AWG	ALL
4	9842	TERMINAL, 1/4 in. ring, 10-12 AWG	ALL
5	9847	CONNECTOR, female spade, right	ALL
6	9848	CONNECTOR, female spade, left (2)	ALL
7	9898	TERMINAL, insulated (4)	ALL
8	9937	TERMINAL, 1/4 in., female, 14-18 AWG (4)	ALL
9	10006	CABLE STRAP (2)	ALL
10	10039	CABLE STRAP (2)	ALL
11	10065	CABLE STRAP (26)	ALL
12	10073	CABLE STRAP, rosebud mount	ALL
13	10177	CABLE STRAP, tree mount	ALL
14	10287	CABLE STRAP, x-mas tree mount	ALL
15	31504-91B	RELAY, w/ diode	ALL
16	31511-01B	RELAY, w/ diode	ALL
17	31579-04	RELAY (2)	ALL
18	67488-04	SWITCH ASSEMBLY	ALL
19	70291-89	HOUSING, 4-place (2)	ALL
20	70598-99	BOOT, engine temperature sensor	ALL
21	70976-06	WIRE GUIDE, throttle position sensor	ALL
22	70980-06	COVER, wire trough	ALL
23	70981-06	TRAY, wire trough	ALL
24	72006-05	SOCKET TERMINAL, 16-20 AWG (10)	ALL
25	72007-05	SOCKET HOUSING, 2-way (3)	ALL
26	72011-05	WIRE SEAL, 16-20 AWG (yellow) (10)	ALL
27	72012-07	SOCKET HOUSING, 5-way	ALL
28	72014-07	SEAL PIN	ALL
29	72033-93	SOCKET TERMINAL, 16-20 AWG (4)	ALL
30	72039-71A	PIN, terminal (4)	ALL
31	72046-79	HOUSING, 5-place, female	ALL

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
35	76259-86	JAMNUT (2 - FS; KB)	FC/FF/FS/KB
36	76260-89	ANTENNA ADAPTOR (2)	FC
37	76294-98	LOAD COIL, C.B.	FC
38	76306-98	ANTENNA MAST, AM/FM	FC/FF/FS/KB
39	76319-06	CABLE, C.B. antenna	FC
40	76335-87	ANTENNA BASE ASSEMBLY, w/ 7129 & 76259-86	FS/KB
41	77021-98B	KIT SPEAKER GRILLE, right, w/ 3387 (3)	FS
	77022-98B	KIT SPEAKER GRILLE, left, w/ 3387 (3)	FS
42	77029-06	SPEAKER, 5-1/4 in. (2)	FC/FF/FS/KB
43	77047-98	SPEAKER ADAPTOR & GRILLE (2)	FC/FF/KB
44	77126-98	WIND SOCK, microphone (1 - DOM; 2 - HDI)	FC
45	77147-98	HEADSET ASSEMBLY	FC
46	77148-98A	COILED CORD, headset (1 - DOM; 2 - HDI)	FC
47	77151-98	HEADSET CLAMP & HARDWARE (1 - DOM; 2 - HDI)	FC
48	90763-79	WASHER	FC

**INTERNATIONAL MODELS ONLY**

76322-97	REINFORCEMENT PLATE, right antenna (HDI) (not illustrated)	FC
----------	--	----

**2007 MODEL IDENTIFICATION CODES**

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2647B	SCREW (2)	ALL
2	6150W	WASHER (2)	ALL
3	10065	CABLE STRAP (2)	ALL
4	11290	O-RING, neutral indicator switch	ALL
5	31504-91B	RELAY, w/ diode (2, 4-FC/F/R/S)	ALL
6	33926-06	SWITCH, neutral indicator, w/ 11290	ALL
	53442-03	LOCKSET COMPLETE, w/ keys, ignition knob, & saddlebag lock	FS/FV/KB
	53571-03A	LOCKSET COMPLETE, w/ keys, ignition knob, & saddlebag lock	FB
	53591-03	LOCKSET COMPLETE, w/ keys, ignition knob, saddlebag, & Tour-Pak locks	FC/FF
	53596-03A	LOCKSET COMPLETE, w/ keys, ignition knob, & saddlebag lock	FR/FY
7	61081-92	COVER, key head, set (2)	ALL
8	68920-07	MODULE, turn signal canceller	ALL
	68922-07	MODULE, security system	ALL
9	68926-07	REMOTE CONTROL FOB (2)	ALL
10	68956-07	ANTENNA MODULE, security system (excluding Japan)	ALL
11	70045-94A	WIRE ASSEMBLY, circuit breaker to starter	ALL
12	70447-01	CLIP	ALL
13	70616-07	WIRE HARNESS, antenna jumper (excluding Japan)	ALL
14	71422-03	PLATE, ignition switch	FC/FF/FV/KB
	71662-03A	PLATE, ignition switch	FS
15	71452-91A	KEY (specify key #)	ALL
16	71459-03	SPRING, ignition knob	ALL
17	71466-03	DECAL, ignition switch knob	ALL
18	71532-03	KNOB, ignition switch, w/ 71466-03 (specify key code)	ALL
19	71572-06	HOUSING, ignition switch, w/ 71638-03, 71660-03 & 71661-03 (Domestic only)	ALL
20	71638-03	COLLAR, ignition switch, bottom	ALL
21	71660-03	NUT, ignition switch	ALL
22	71661-03	COLLAR, ignition switch, top	ALL
23	72023-51D	STOPLIGHT SWITCH, rear	ALL
24	72134-94GY	HOUSING, 4-way socket (grey)	ALL
25	72154-94	SECONDARY LOCK, 4-way socket	ALL
26	72191-94	TERMINAL, socket, 16-18 AWG (3)	ALL
27	72191-94	SEAL PIN, socket, 16-18 AWG	ALL
28	72191-94	HOUSING, 2-way socket	ALL
29	72191-94	TERMINAL, socket, 18-20 AWG (2)	ALL
30	72325-97	RELAY HOLDER	ALL

## INTERNATIONAL MODELS ONLY

31	2934	SCREW (2)	ALL
32	68922-07	MODULE, security system & turn signal canceller (Japan)	ALL
	68924-07	MODULE, security system & turn signal canceller (Australia, England, & HDI)	ALL
33	68926-07	REMOTE CONTROL FOB (Australia, England, HDI, & Japan) (2)	ALL
34	68958-00	SIREN ALARM (Australia, England, HDI, & Japan)	ALL
35	69018-00	BATTERY REPLACE KIT, siren alarm (Australia, England, HDI, & Japan)	ALL
36	71530-03B	HOUSING, ignition switch, w/ 71638-03, 71660-03 & 71661-03 (Australia, England, HDI & Japan)	ALL

**NOTE: For additional fuse, relay and circuit breaker part number information see wiring harness pages.**

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	1750	SCREW (4)	FC/FF
2	3584	SCREW (4)	FC/FF
3	3601	SCREW (2)	FB/FC/FF/FR/FV
4	3676	SCREW (8-FC/F) (4)	ALL
5	3678	SCREW (2-FS/FY/KB) (4)	ALL
6	3684	SCREW (4)	ALL
7	3787	BOLT (4)	ALL
8	6703	WASHER (4)	ALL
9	7490	CLIP NUT (2)	ALL
10	7531	LOCKNUT (4)	ALL
11	7667	NUT (2)	ALL
12	7686	LOCKNUT (2)	FB/FC/FF/FR/FV
13	47449-06	BRACKET, saddlebag mounting, front (flat black) (2)	ALL
14	49193-93	GUARD, saddlebags (4)	FC/FF
15	49194-85	SUPPORT, saddlebag, left	FB/FC/FF/FR/FV
	90781-93	SUPPORT, saddlebag, right	FB/FC/FF/FR/FV
16	49201-97	GUARD, left	FB/FR/FV
	49202-97	GUARD, right	FC/FF
	49203-97	GUARD, left	FC/FF
	49205-97	GUARD, right	FB/FR/FV
17	49206-04	SUPPORT, left (chrome)	FS/FY/KB
	49207-04	SUPPORT, right (chrome)	FS/FY/KB
18	70909-95	RECEPTACLE (4)	ALL
19	91054-07	TAPE (2)	FC/FF
20	90594-85	CUSHION (2)	ALL
21	90718-79C	SUPPORT BRACKET KIT, left	ALL
	90720-79C	SUPPORT BRACKET KIT, right	ALL
22	90801-06	BRACKET, saddlebag mounting, rear (flat black) (2)	ALL
23	90934-93	CLAMP, rear left, outer	FC/FF
	90946-93A	CLAMP, rear right, outer	FC/FF
24	90935-93A	CLAMP, rear right, inner, w/ 91054-07	FC/FF
	90936-93A	CLAMP, rear left, inner, w/ 91054-07	FC/FF
25	90943-93A	MOUNT, guard (4)	FC/FF
26	90945-93A	MOUNT, guard (4)	FC/FF
	91054-07	TAPE, mounting, (not illustrated)	FC/FF

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLFT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	2528	SCREW (2)	TLE/TLEU
2	4017	BOLT (2)	TLE/TLEU
3	4766	SCREW (2)	TLE/TLEU
4	6716	WASHER (2)	TLE/TLEU
5	7036	LOCKWASHER (2)	TLE/TLEU
6	7069	LOCKWASHER (2)	TLE/TLEU
7	8700	RIVET (3)	TLE/TLEU
8	10006	CABLE STRAP (10)	TLE/TLEU
9	10038A	CLAMP (2)	TLE/TLEU
10	10053	CLAMP (3)	TLE/TLEU
11	11287	E-RING (2)	TLE/TLEU
12	26438-98	O-RING, caliper assembly	TLE/TLEU
13	41731-01	GASKET, brakeline	TLE/TLEU
14	41747-82A	BANJO BOLT	TLE/TLEU
15	41804-07	RESERVOIR, master cylinder	TLE/TLEU
16	42311-58	PLUG, brake line tee	TLE/TLEU
17	42365-02	HOSE, brake reservoir	TLE/TLEU
18	42455-07	GASKET, brake reservoir cover	TLE/TLEU
19	42457-95	KIT, brake reservoir adapter, w/ o-rings	TLE/TLEU
20	44033-98	BLEED FITTING	TLE/TLEU
21	44238-98	BRAKE CALIPER ASSEMBLY, sidecar w/ 11287, 4766, 44033-98, 44239-98, 44240-98, 44241-98, 44242-98, 44244-98, 44245-98, 44252-98 & piston (not sold seperately)	TLE/TLEU
22	44241-98	SPRING CLIP	TLE/TLEU
23	44242-98	PIN, sidecar brake mounting, 8mm	TLE/TLEU
24	44243-98	BRAKE CALIPER PISTON REBUILD KIT, w/ 11287, 26438-98, 44244-98 & 44245-98	TLE/TLEU
25	44247-98A	BRAKE PAD SET	TLE/TLEU
26	44252-98	PIN, sidecar brake mounting, 5mm	TLE/TLEU
27	45057-07	COVER, master cylinder (DOT 4)	TLE/TLEU
28	45248-97	CRUSH WASHER	TLE/TLEU
29	87032-85	UNION FITTING, brake line	TLE/TLEU
30	87113-83	TEE, sidecar brake line	TLE/TLEU
31	87776-98A	BRAKE LINE ASSEMBLY	TLE/TLEU

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
1	601	ROLL PIN	TLE/TLEU
2	3234W	SCREW	TLE/TLEU
3	3655A	SCREW, brake disc mounting (5)	TLE/TLEU
	3655A	SCREW, hub cap (5)	TLE/TLEU
4	6653A	WASHER	TLE/TLEU
5	7043	LOCKWASHER	TLE/TLEU
6	7652	NUT	TLE/TLEU
7	7823	NUT	TLE/TLEU
8	9267	BALL BEARING (2)	TLE/TLEU
9	40575-05	INNER TUBE, 16 inch w/ 41123 & 54321-85	TLE/TLEU
	40558-82	INNER TUBE, 16 inch	TLE/TLEU
10	40999-87	VALVE STEM	TLE/TLEU
11	41048-00	WHEEL ASSEMBLY, 16 inch, 9 spoke w/ 9267 & 43608-00 (black)	TLE/TLEU
12	41123-79	VALVE CAP	TLE/TLEU
13	41212-04	WHEEL ASSEMBLY, cast, w/ 9267 & 43608-00 (chrome)	TLE/TLEU
14	41291-06	WHEEL ASSEMBLY, w/ 9267 & 43608-00 (black)	TLE/TLEU
15	43011-05A	WHEEL ASSEMBLY, profile laced (chrome) w/ 43440-05 & 43672-00	TLE/TLEU
16	43022-91A	TIRE, black wall	TLE/TLEU
	43115-91A	TIRE, white wall	TLE/TLEU
	43118-92A	TIRE, wide white wall	TLE/TLEU
17	43032-40C	SPOKE AND NIPPLE SET, 16 inch, w/ all 40 spokes	TLE/TLEU
18	43085-97	RIM, 16 inch (chrome)	TLE/TLEU
19	43147-40	RIM FLAP, 16 inch, side valve, w/ 43085-97 & 43440-05	TLE/TLEU
	43164-05	RIM FLAP, 16 inch, center valve, w/ 43085-97 & 43440-05	TLE/TLEU
20	43005-05	WHEEL ASSEMBLY, 16 inch, laced w/ 43085-97 & 43672-00	TLE/TLEU
21	43302-04	WHEEL ASSEMBLY, 9 spoke w/ 9267 & 43608-00 (silver)	TLE/TLEU
22	43440-05	RIM, laced profile wheel	TLE/TLEU
23	43901-00	SPACER, wheel	TLE/TLEU
24	43569-00	SPACER, wheel	TLE/TLEU
25	43608-00	SPACER, bearing	TLE/TLEU
26	43672-00	HUB, w/ bearings & seals	TLE/TLEU
27	44150-00	BRAKE DISC	TLE/TLEU
28	44447-00	HUB CAP	TLEU
29	54321-85	NUT, valve stem	TLE/TLEU
30	87436-98A	AXLE KIT, w/ 7652 & 43901-00	TLE/TLEU
31	87705-79	AXLE CAP	TLE/TLEU
32	95578-41	WEIGHT, 1/2 oz., 0.275 inch I.D., round	TLE/TLEU
	95581-47	WEIGHT, 3/4 oz., 0.275 inch I.D., round	TLE/TLEU
	95582-47	WEIGHT, 1 oz., 0.275 inch I.D., round	TLE/TLEU
33	95595-84	WEIGHT, 1/4 oz. (silver)	TLE/TLEU

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

## CALIFORNIA EVAPORATIVE EMISSIONS COMPONENTS

INDEX NO.	PART NO.	DESCRIPTION	MODEL(S)
<b>NOTE: These parts are required for motorcycles sold in the state of California.</b>			
1	27042-84A	CANISTER ASSEMBLY	ALL
2	27045-97	CANISTER RETAINING CLIP	ALL
3	27297-97A	TUBE, fuel vapor vent, from vapor valve	ALL
4	27298-97	TUBE, purge to induction module, canister end	ALL
5	27461-06	TUBE, induction module to valve, carburetor end	ALL
6	29312-95	CONNECTOR ELBOW	ALL

## 2007 MODEL IDENTIFICATION CODES

FB = FLHR

FC = FLHTCU

FF = FLHTC

FR = FLHRC

FS = FLTR

FV = FLHT

FY = FLHRS

KB = FLHX

# NUMERICAL INDEX

PART NO. ....	PAGE	PART NO. ....	PAGE	PART NO. ....	PAGE	PART NO. ....	PAGE
1000. ....	139	10103. ....	89	11256. ....	9	13350-05. ....	127
10003. ....	67	10103. ....	139	11270. ....	11	13351-05. ....	127
10003. ....	83	10103. ....	141	11271. ....	83	13385-05. ....	127
10006. ....	25	10105. ....	121	11272. ....	83	13390-07. ....	129
10006. ....	119	10108. ....	55	11273. ....	15	13454-06. ....	127
10006. ....	125	10110. ....	27	11287. ....	201	13967-99. ....	109
10006. ....	135	10113. ....	27	11289A. ....	29	14019-83. ....	101
10006. ....	143	10116. ....	135	11289A. ....	37	14019-83. ....	103
10006. ....	155	10120. ....	117	11290. ....	37	14019-83. ....	223
10006. ....	161	10120. ....	139	11290. ....	181	14148-86. ....	223
10006. ....	201	10120. ....	169	11291. ....	21	14270-92. ....	43
10006. ....	203	10138. ....	61	11291. ....	29	14331-90. ....	109
10006. ....	215	10143. ....	77	11292. ....	23	14422-94A. ....	109
10007. ....	83	10147. ....	149	11293. ....	11	14448-94. ....	101
10031. ....	55	10177. ....	155	11293. ....	17	14629-04. ....	91
10036. ....	199	10177. ....	161	11301. ....	17	14651-06. ....	75
10038A. ....	117	10177. ....	173	11304. ....	71	14651-06. ....	77
10038A. ....	123	10181. ....	77	11323. ....	117	15339-98. ....	89
10038A. ....	201	10181. ....	177	11323. ....	123	15341-03. ....	175
10039. ....	25	10181. ....	179	11351. ....	119	15342-06A. ....	223
10039. ....	149	10183. ....	27	11351. ....	125	15346-98. ....	103
10039. ....	151	10183. ....	143	11364. ....	55	15368-01A. ....	135
10039. ....	155	10184. ....	143	11364. ....	199	15368-01A. ....	223
10039. ....	161	10222. ....	117	11389. ....	33	1601. ....	215
10039. ....	173	10222. ....	119	11437. ....	109	16207-79C. ....	19
10053. ....	201	10222. ....	123	11445. ....	89	16219-79C. ....	19
10065. ....	73	10222. ....	125	11461. ....	17	16316-99. ....	19
10065. ....	77	10225. ....	61	11464. ....	183	16465-06. ....	9
10065. ....	89	10225. ....	63	11464. ....	187	16478-85A. ....	9
10065. ....	105	10287. ....	155	11486. ....	73	16480-92A. ....	9
10065. ....	109	10287. ....	161	11486. ....	169	16574-99A. ....	15
10065. ....	117	1039. ....	11	11488. ....	89	16574-99A. ....	37
10065. ....	123	1062. ....	43	11489. ....	93	16583-00A. ....	35
10065. ....	149	10991. ....	39	11489. ....	101	16583-00A. ....	43
10065. ....	151	10998. ....	35	11491A. ....	67	16585-96. ....	87
10065. ....	153	11061. ....	39	11492. ....	89	16585-96. ....	89
10065. ....	155	11081. ....	39	11497. ....	85	16589-99A. ....	15
10065. ....	161	11082. ....	39	11507. ....	73	16595-99A. ....	9
10065. ....	173	11096. ....	39	11575. ....	33	16595-99A. ....	15
10065. ....	175	11096. ....	41	11593. ....	219	16606-05. ....	9
10065. ....	181	11105. ....	37	11599. ....	39	16715-83. ....	9
10065. ....	203	11105. ....	43	11747A. ....	215	16719-99A. ....	11
10065. ....	207	11116. ....	31	12052A. ....	43	16775-99B. ....	9
10065. ....	217	11120. ....	37	12068. ....	15	16834-99A. ....	9
10065. ....	219	11132. ....	11	12074. ....	35	17045-99C. ....	11
10073. ....	25	11132. ....	35	12077. ....	39	17045-99C. ....	17
10073. ....	95	11140. ....	15	1311D. ....	119	17052-99B. ....	9
10073. ....	137	11143. ....	45	1311D. ....	125	17053-99B. ....	9
10073. ....	141	11143. ....	49	1314. ....	119	17162-03. ....	11
10073. ....	149	11145A. ....	11	1314. ....	125	17178-06. ....	9
10073. ....	155	11150. ....	33	13324-05. ....	127	17179-06. ....	9
10073. ....	161	11155. ....	83	13325-05. ....	127	17180-06. ....	9
10076. ....	67	11161. ....	35	13326-05. ....	127	17181-06. ....	9
10076. ....	83	11177A. ....	13	13327-05. ....	127	17360-83A. ....	11
10091. ....	73	11179. ....	35	13332-05. ....	127	17369-06. ....	43
10092. ....	25	11193. ....	85	13333-05. ....	127	17375-83A. ....	11
10102. ....	73	11201. ....	39	13348-05. ....	127	17386-99. ....	11
10102. ....	109	11207. ....	39	13349-05. ....	127	17428-57. ....	11

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL