



Illustrated Parts Manual

Models 60HT 60HTH

3120258

November 1 1987

ANSI



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—1		BOOM AND LIMIT SWITCH INSTALLATION	Ref.
	0236569	BOOM INSTALLATION (60HT)	Ref.
	0237582	BOOM INSTALLATION (60HTH)	Ref.
—1	0800407	Boom Assembly (See Figure 2-2 For Breakdown)	1
—2	4040129	Pin, Boom Pivot (Attaching Parts)	1
—3	1120192	Cap, Boom Pivot	2
—4	0630322	Bolt, Hex Head, 1/2"-13NC x 1" long (Grade 8)	4
—5	4761800	Lockwasher, 1/2" dia.	4
	0100019	Loctite	A/R
—6	3952020	Setscrew, 5/8"-11NC x 2 1/2" long	2
—7	3312002	Nut, Jam, 5/8"-11NC	2
—8	2760076	Boom Pivot Weldment (Attaching Parts)	2
—9	0630316	Bolt, Hex Head, 3/8"-16NC x 1 1/2" long (Grade 8)	20
—10	4761600	Lockwasher, 3/8" dia.	20
	4740185	Washer, Hardened, 3/8" (Not Shown)	20
	0100019	Loctite	A/R
—11	0960562	Bushing, Self-Aligning	2
—12	2160005	Fitting, Grease	2
—13	1681535	Cylinder, Lift (See Figure 2-6 For Breakdown) (Attaching Parts)	1
—14	3421326	Pin, Lift Cylinder (Upper), 2 1/2" dia. x 1 1/16" long	1
—15	3500120	Plate, Retaining	1
—16	4740277	Flatwasher, Special, 3 1/2" OD x 1/4" thick	1
—17	0641811	Bolt, Hex Head, 1/2"-13NC x 1 3/8" long (Grade 5)	4
—18	4761800	Lockwasher, 1/2" dia.	4
	0100019	Loctite	A/R
—19	0641606	Bolt, Hex Head, 3/8" - 16NC x 3/4" long (Grade 5)	1
—20	4761600	Lockwasher, 3/8" dia.	1
—21	4751600	Flatwasher, 3/8" dia.	1
—22	4040126	Pin, Lift Cylinder (Lower)	1
—23	4300045	Stud, 1/2"-13NC x 1 1/2" long (Welded On Part)	1
—24	4751800	Flatwasher, 1/2" dia.	1
—25	4761800	Lockwasher, 1/2" dia.	1
—26	3311805	Nut, Hex Lock, 1/2"-13NC	1
—27	1681563	Cylinder, Master Level (See Figure 2-7 For Breakdown) (Attaching Parts)	1
—28	0236548	Pin, Master Cylinder (Upper)	1
—29	4751500	Flatwasher, 5/16" dia.	1
—30	4761500	Lockwasher, 5/16" dia.	1
—31	3311501	Nut, Hex, 5/16"-18NC	1
	4300038	Stud, 5/16"-18NC x 1" long (Welded On Part)	1
—32	4740006	Flatwasher, 1-3/4" OD x 7/16" ID x 1/4" thick	1
—33	4761600	Lockwasher, 5/16" dia.	1
—34	0651608	Bolt, 3/8"-24NF x 1" long (Grade 5)	1
	0100019	Loctite	A/R
—35	3420085	Pin, Master Cylinder (Lower), 1 1/4" dia x 5 5/32" long	1
—36	4740040	Flatwasher, 2" OD x 1 1/4" ID x 1/8" thick	2
—37	3450610	Pin, Cotter, 3/16" dia. x 2 1/2" long	2

SECTION 2 — ILLUSTRATED PARTS LIST

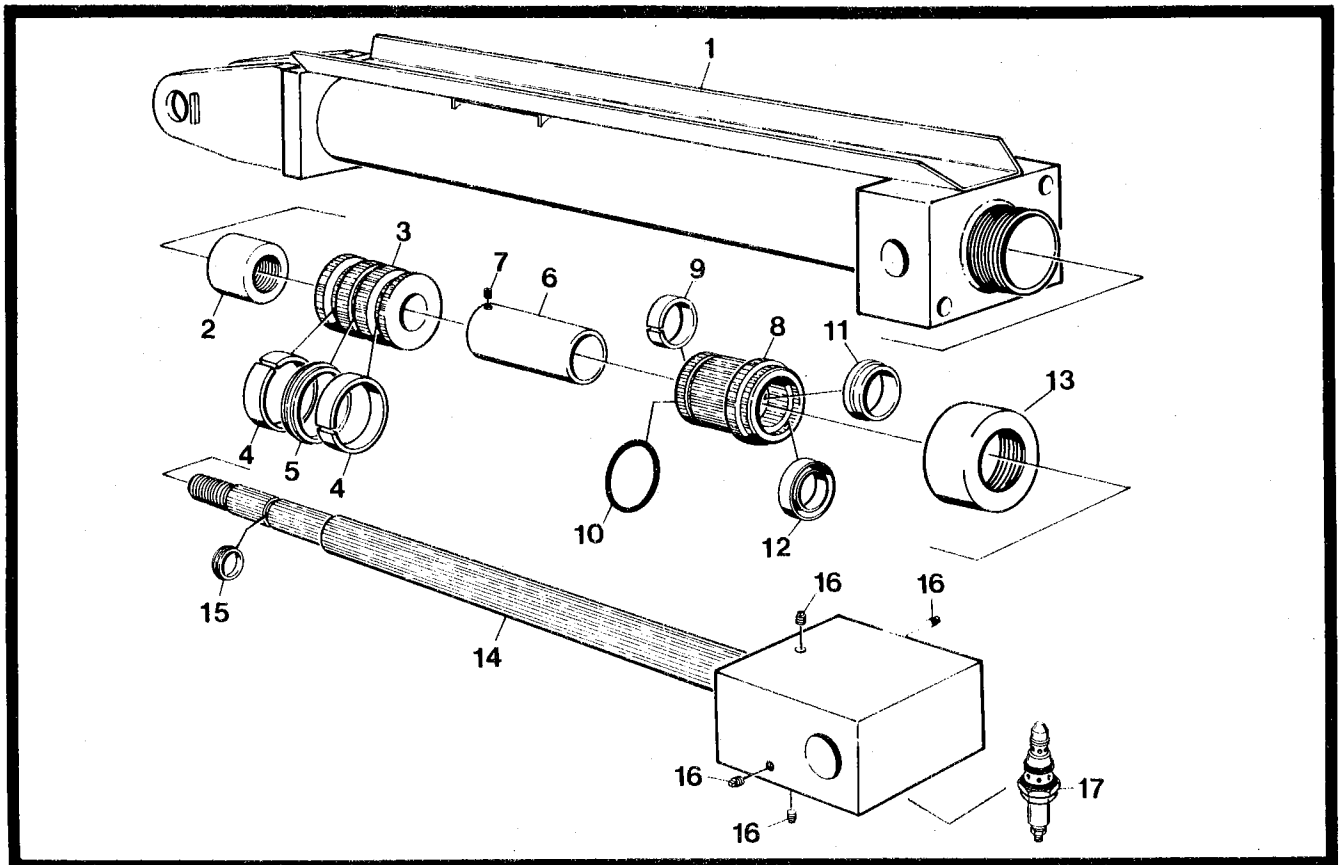


Figure 2-3. Telescope Cylinder Assembly.

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—3	1681553	TELESCOPE CYLINDER ASSEMBLY	Ref.
—1	1681349	Barrel	1
—2	3300086	Nut	1
—3	3480054	Piston	1
—4	3760001	Wear Band	2
—5	3960007	T-Seal	1
—6	4562808	Spacer	1
—7	3951405	Set Screw	1
	0100011	Loctite	A/R
—8	1681307	Head	1
—9	3760197	Wear Band	1
—10	3780164	O-Ring	1
—11	3960350	Rod Seal	1
—12	3960283	Rod Wiper	1
—13	1120108	End Cap	1
—14	1681350	Rod	1
—15	3960179	T Seal	1
—16	2200102	Pipe Plug	4
—17	4640210	Valve, Holding	1
	2900350	Seal Kit (Kit Includes Items 4, 5, 9, 10, 11, 12 and 15)	1

SECTION 2 — ILLUSTRATED PARTS LIST

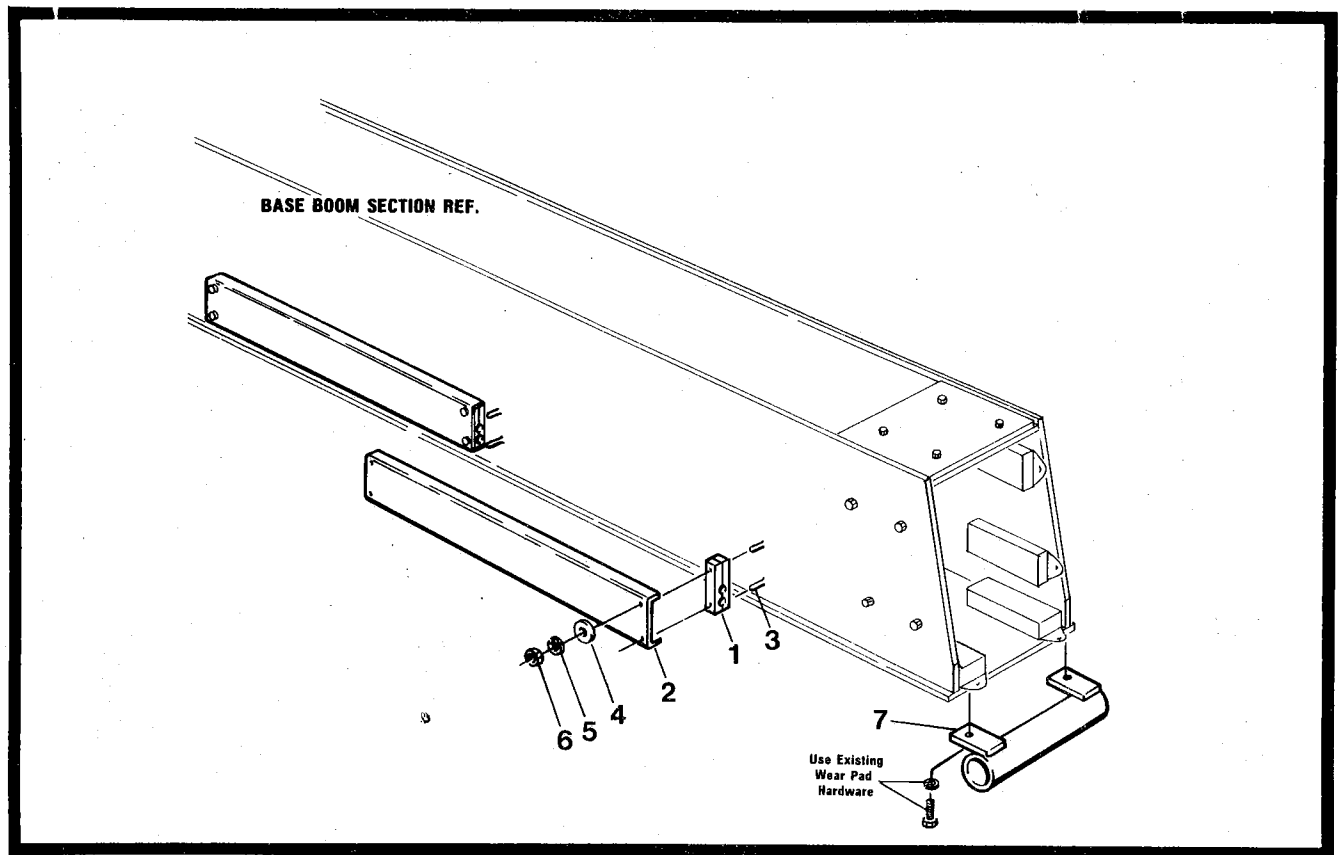


Figure 2-10. Steering Tube Support Installation.

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—10	0236631	STEERING TUBE SUPPORT INSTALLATION	Ref.
	0238152	STEERING TUBE SUPPORT INSTALLATION	Ref.
—1	4340477	Support, Hydraulic Tubes	4
—2	4060568	Shield (88 3/4" Length Without Slots)	2
	4060640	Shield (88 3/4" Length With Slots)	1
	4060599	Shield (108" Length) (Attaching Parts)	1
—3	4300036	Stud (Welded On Part)	8
—4	4751400	Flatwasher 1/4"	8
—5	4761400	Lockwasher 1/4"	8
—6	3311401	Nut 1/4"-20NC	8
—7	4842120	Hose Crossover	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2-13		CONSOLE BOX ASSEMBLY (CONTINUED)	Ref.
-38	3300048	Nut	1
-39	4460263	Terminal Strip (Attaching Parts)	1
	0721008	Screw, Hex #10-24NC x 1"	2
	4761000	Lockwasher #10	2
	3311001	Nut #10-24NC	2
-40	0860038	Box, Switch (Attaching Parts)	1
-41	3911008	Screw, Round Head #10-24NC x 1/2"	4
-42	4761000	Lockwasher #10	4
-43	4060092	Shield, Weatherproof	1
	4460190	Terminal, Receptacle (Not Shown)	1
-44	4460049	Connector	1
-45	0960407	Bushing, Reducer	1
-46	4320002	Stud	4
-47	3311505	Locknut 5/16"-18NC	8
-48	4751500	Flatwasher 5/16"	8
-49	3251607	Decal, Caution	1
-50	3251549	Decal, Danger (Attaching Parts)	1
-51	3311405	Locknut 1/4"-20NC	4
-52	4751400	Flatwasher 1/4"	8

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—16		PLATFORM CONTROL BOX INSTALLATION	Ref.
	0236522	CONSOLE BOX ASSEMBLY - WITH CAPACITY INDICATOR (RACINE VALVES)	Ref.
	0236497	CONSOLE BOX ASSEMBLY - WITHOUT CAPACITY INDICATOR (RACINE VALVES)	Ref.
	0236750	CONSOLE BOX ASSEMBLY - WITH CAPACITY INDICATOR - OEM CONTROLS (PROPORTIONAL TELESCOPE)	Ref.
	0236751	CONSOLE BOX ASSEMBLY - WITHOUT CAPACITY INDICATOR - OEM CONTROLS (PROPORTIONAL TELESCOPE)	Ref.
—1	0860472	Box, Console	1
	0860497	Box, Console (Used With OEM Controls)	1
—2	3960250	Weatherstrip	A/R
	0100001	Adhesive	A/R
—3	3251537	Decal, Console	1
	3251614	Decal, Console (Used With OEM Controls) (Attaching Parts)	1
—4	3910806	Screw, Round Head #8-32NC x 3/8"	13
—5	3300177	Nut, Tinnerman	13
—6	3509858	Cover, Rear	1
	1670334	Cover, Rear (Used With OEM Controls) (Attaching Parts)	1
—7	0751006	Screw, Pan Head #10-X 3/4"	2
—8	3300177	Nut, Tinnerman	2
—9	4420038	Weatherstrip	A/R
	0100001	Adhesive	A/R
—10	1600064	Controller, PQ	3
	4931414	PQ Controller Adjustment Procedure (Attaching Parts)	Ref.
	0640803	Bolt #8-32NC x 3/8"	12
	4760800	Lockwasher #8	12
	2560040	Knob, Swing (PQ)	1
	2560038	Knob, Lift (PQ)	1
	2560041	Knob, Drive (PQ)	1
—11	1600080	Controller OEM (Not Shown) (Attaching Parts)	4
	4740120	Washer, Nylon (Used On All OEM Controllers)	8
	3900127	Screw, Round Head (Used On All OEM Controllers)	5
	3900157	Screw, Round Head (Use 1 Each On Lift, Drive And Telescope OEM Controllers)	3
	4070589	Shim (Used On Swing OEM Controller)	1
	4070588	Shim (Used On Lift, Drive and Telescope OEM Controllers)	3
—12	4360202	Switch, Platform Level - DPDT	1
	3790012	O-Ring	1
	4060087	Shield	1
—13	4360199	Switch, Emergency Stop-SPST	1
	3790012	O-Ring	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2-18	0238062	GROUND CONTROLS ASSEMBLIES AND INSTALLATION (CONTINUED)	Ref.
-37	1840002	Duct, Wire (1 Each Side) (Attaching Parts)	.897 ft.
	3911008	Screw, Round Head #10-24NC x 1/2" long (Not Shown)	4
	4761000	Lockwasher 3/16" ID (Not Shown)	4
	3311001	Nut, Hex #10-24NC (Not Shown)	4
-38	1700789	Decal, Relay Functions	1
-39	1700788	Decal, Relay Functions	1
-40	3640492	Rail	1
-41	3910606	Screw, Round Head #6-32NC x 3/8" long	2
-42	4760600	Lockwasher #6 ID	2
-43	3310601	Nut, Hex #6-32NC	2
-44	4460298	Terminal, Strip	17
-45	4460300	Terminal, Barrier	1
-46	4460303	Terminal, Ground Block	1
-47	4460229	Terminal, Stop	1
-48	4460305	Screw	7
-49	4460306	Washer	7
-50	4460308	Terminal, Bus Bar (2 Position)	1
-51	4460311	Terminal, Bus Bar (5 Position)	1
-52	4460307	Sleeve	7
-53	4460301	Terminal, Marker Strip	2
-54	3251650	Lid (Attaching Parts)	1
-55	0750806	Screw (Top) #8-32NC x 3/4" long	2
-56	3300177	Nut, Tinnerman	2
-57	3911006	Screw (Bottom) #10-24NC x 3/8" long	4
-58	4761000	Lockwasher 3/16" dia.	4
-59	3311001	Nut, Hex #10-24NC	4
-60	4360186	Circuit Breaker (35 AMP)	1
-61	4360069	Circuit Breaker (10 AMP)	2
-62	4360003	Switch, Master	1
-63	4360073	Switch, Control Selection DPDT	1
	3790012	O-Ring	1
-64	4360016	Switch, Push Button	1
-65	4360199	Switch, Ignition SPST	1
	3790012	O-Ring	1
-66	4360200	Switch, Auxiliary Power SPST/MC	1
	3790012	O-Ring	1
-67	4360202	Switch, Lift DPDT/MC Center Off	1
	3790012	O-Ring	1
-68	4360202	Switch, Swing DPDT/MC Center Off	1
	3790012	O-Ring	1
-69	4360202	Switch, Telescope DPDT/MC Center Off	1
	3790012	O-Ring	1
-70	1700790	Decal, Relay Schematic	1
	4460234	Clamp, Cable (Not Shown)	5
-71	2920024	Light Panel (Optional)	1
-72	0901192	Bracket, Manual Descent (Attaching Parts)	1
-73	4300038	Stud 5/16"-18NC x 1" long (Welded On Part)	2
-74	4761600	Lockwasher 3/8" ID	2
-75	3311601	Nut, Hex 3/8"-20NC	2
-76	4640005	Valve, Needle	3
	2900062	Kit, Panel Mounting	3

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—21	7004888	LIFT VALVE SECTION (RACINE)	Ref.
	7004891	SWING VALVE SECTION (RACINE)	Ref.
	7004890	DRIVE VALVE SECTION (RACINE)	Ref.
—1	7002314	VALVE ASSEMBLY - LIFT	1
	7002313	VALVE ASSEMBLY - SWING	1
	7004866	VALVE ASSEMBLY - DRIVE	1
—2	7002391	Screw, Socket Head	1
—3	7004808	Ramp (Supplied with Servo)	Ref.
—4	7002233	Ring (Supplied with Servo)	Ref.
—5	7004802	Plug Assembly	1
—6	7004867	O-Ring	1
—7	7002398	Cap End (Attaching Parts)	1
—8	7002231	Screw, Socket Head	2
—9	7004805	Spool, Lift Section	1
	7004807	Spool, Swing Section	1
	4140010	Spool, Drive Section	1
—10	7002394	Piston Ring	1
—11	7002388	O-Ring	1
—12	7002381	O-Ring	2
—13	7002393	O-Ring	1
—14	7002380	O-Ring	1
—15	7002378	O-Ring	1
	7004832	Seal Kit	4

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—24		CONTROL VALVES INSTALLATIONS - VICKERS/RACINE	Ref.
	0237818	CONTROL VALVES INSTALLATION - WITHOUT STEERING WHEEL AND WITHOUT ROTATOR	Ref.
	0237819	CONTROL VALVES INSTALLATION - WITHOUT STEERING WHEEL AND WITH ROTATOR	Ref.
	0237820	CONTROL VALVES INSTALLATION - WITH STEERING WHEEL AND WITHOUT ROTATOR	Ref.
	0237821	CONTROL VALVES INSTALLATION - WITH STEERING WHEEL AND WITH ROTATOR	Ref.
	0238202	CONTROL VALVES INSTALLATION - PROPORTIONAL TELESCOPE, WITHOUT STEERING WHEEL AND WITHOUT ROTATOR	Ref.
	0238203	CONTROL VALVES INSTALLATION - PROPORTIONAL TELESCOPE, WITHOUT STEERING WHEEL AND WITH ROTATOR	Ref.
	0238204	CONTROL VALVES INSTALLATION - PROPORTIONAL TELESCOPE, WITH STEERING WHEEL AND WITHOUT ROTATOR	Ref.
	0238205	CONTROL VALVES INSTALLATION - PROPORTIONAL TELESCOPE, WITH STEERING WHEEL AND WITH ROTATOR	Ref.
—1	4640514	Proportional Control Valve Assembly - Vickers (3 Section) (See Figure 2-25 For Breakdown)	1
	4640524	Proportional Control Valve Assembly (4 Section - Proportional Telescope) (Attaching Parts)	1
—2	0641708	Bolt 7/16"-14NC x 1"	2
—3	4761700	Lockwasher	2
—4	4640461	Control Valve - Racine (1 Stack)	1
	4640447	Control Valve - Racine (2 Stack)	1
	4640246	Control Valve - Racine (3 Stack)	1
	4640247	Control Valve - Racine (4 Stack) (Attaching Parts)	1
—5	0641610	Bolt 3/8"-16NC x 1 1/4"	2
	4300034	Stud (Welded On Part - Not Shown)	2
—6	4751600	Flatwasher 3/8"	4
—7	4761600	Lockwasher 3/8"	4
—8	3311601	Nut 3/8"-16NC	4
—9	0140001	Horn	1
—10	3600052	Pump, Auxiliary (Attaching Parts)	1
—11	0641612	Bolt 3/8"-16NC x 1 1/2"	2
—12	4761600	Lockwasher 3/8"	2
—13	4640151	Divider, Flow (Machines with Steering Wheel) (Attaching Parts)	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—26	4640247	CONTROL VALVE ASSEMBLY - 4 SECTION RACINE BANG-BANG	Ref.
	4640246	CONTROL VALVE ASSEMBLY - 3 SECTION RACINE BANG-BANG	Ref.
—1	7002304	Dump Section - Complete	1
		Solenoid Assembly	1
—2	7004823	Seat	1
	7002378	O-Ring	1
—3	7002229	Ball	1
		Guide Tube Assembly	1
—4	7004822	Cone, Female	1
	7004840	O-Ring	1
—5	7002346	Pin, Push	1
—6	7004839	Plunger	1
—7	7004838	Tube, Guide	1
—8	7004841	Pin, Push	1
	7002342	O-Ring	1
—9	7002340	Guide, External Push Pin	1
	7002337	O-Ring	1
—10	7004834	Sleeve, Inner Flux	1
—11	7002334	Spring	1
—12	7004835	Sleeve, Outer Flux	1
—13	7000417	Coil	1
—14	7004836	Case, Solenoid	1
—15	7002338	Plate, End	1
	7002327	Nameplate	1
—16	7004837	Screw	4
—17	7002322	Seat	1
	7004826	O-Ring	1
		Main Relief (Poppet) Valve	1
—18	7002321	Case, Poppet	1
—19	7002328	Spring	1
—20	7002294	Poppet	1
—21	7002320	Seat, Adjustable	1
	7004842	O-Ring	1
—22	7002329	Spring	1
—23	7002323	Plug	1
	7000102	O-Ring	1
—24	7002326	Orifice	1
—25	7002324	Plug	1
—26	7002317	Rotate Section - Complete (4 Section Only)	1
—27	7004859	Solenoid Assembly (Refer To Items 41-56 For Serviced Parts)	2
—28	7002315	Telescope Section - Complete	1
—29	7004859	Solenoid Assembly (Refer To Items 41-56 For Serviced Parts)	2
—30	7000468	Relief Valve Block Assembly (Refer To Items 58-63 For Serviced Parts)	1
—31	7002316	Level Section - Complete	1
—32	7004859	Solenoid Assembly (Refer To Items 41-56 For Serviced Parts)	2
—33	7002262	Relief Valve Block Assembly	1
—34	7002359	Poppet	2
—35	7002356	Spring	2
—36	7002225	Ball	2
—37	7002358	Spring	2
—38	7002357	Plug	2
	7002351	O-Ring	2

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—27		ENGINE COMPONENTS ASSEMBLY AND INSTALLATION - FORD LSG-423 (CONTINUED)	Ref.
—118	1320041	Clamp (Attaching Parts)	2
—119	0641405	Bolt 1/4"-20NC x 5/8"	1
	4761400	Lockwasher 1/4"	1
	3311401	Nut 1/4"-20NC	1
—120	2220295	Fitting, Barbed	2
—121	2200261	Fitting, Coupling (When Equipped)	2
—122	4360067	Switch, Vacuum	1
—123	4360066	Switch, Vacuum (When Equipped)	1
—124	0901333	Bracket (4 3/4" Long)	1
	0901306	Bracket (4" Long)	1
—125	4562784	Exhaust System Installation Tube, Exhaust (Machines with Pump Facing CWT)	1
	4842669	Tube, Exhaust (Not Shown - Machines with Fan Facing CWT) (Attaching Parts)	1
—126	0630190	Bolt M10 x 1.5 x 20mm	4
—127	4761700	Lockwasher 7/16"	4
	0901432	Bracket, Tube Support (Not Shown - Machines with Fan Facing CWT)	1
—128	1320019	Clamp, Muffler	2
—129	3220043	Muffler	1
—130	4300056	Stud, Carburetor	1
—131	3311405	Locknut 1/4"-20NC	1
—132	0080091	Adapter, Choke	1
—133	2220314	Fitting	1
	2200053	Plug, Pipe (When Equipped)	1
—134	2720160	Hose	A/R
	1320022	Clamp	2
—135	4842364	Air Cleaner Installation Tube, Intake	1
—136	1320016	Clamp	4
—137	0080039	Elbow	2
—138	4560914	Tube, Connector	1
—139	1120161	Cap, Air Inlet	1
—140	1340020	Cleaner, Air	1
—141	7003655	Element	1
—142	0340002	Bands, Hold-Down (Attaching Parts)	2
—143	0641408	Bolt 1/4"-20NC x 1"	4
—144	4761400	Lockwasher 1/4"	4
—145	3311401	Nut 1/4"-20NC	4
	2420047	Service Indicator - Air Cleaner (Not Shown - Optional)	1

SECTION 2 — ILLUSTRATED PARTS LIST

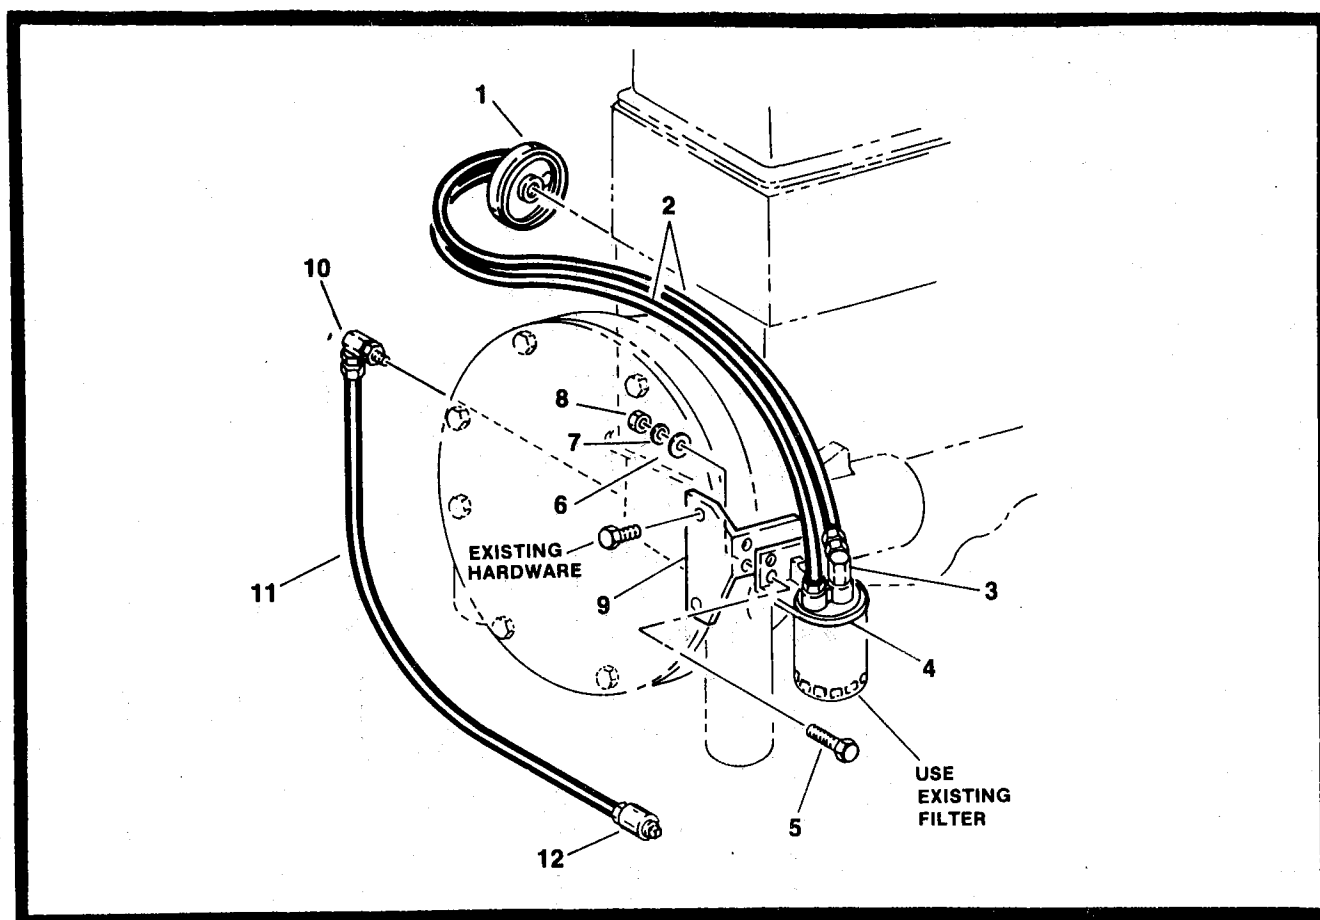


Figure 2-32. Remote Oil Filter and Drain - Ford.

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2-32	0237411	REMOTE OIL FILTER AND DRAIN - FORD	Ref.
-1	0080133	Adapter (Includes O-Ring)	1
-2	2750123	Hose	2
	0010020	Sealant	A/R
-3	2220128	Fitting, 45°	1
-4	0080132	Adapter	1
		(Attaching Parts)	
-5	0641408	Bolt 1/4"-20NC X 1"	3
-6	4751400	Flatwasher 1/4"	3
-7	4761400	Lockwasher 1/4"	3
-8	3311401	Nut 1/4"-20NC	3
-9	0901361	Bracket (Use Existing Hardware)	1
-10	3520066	Fitting	1
	2180669	Fitting	1
-11	2750354	Hose	1
-12	2200262	Coupling	1
	2200102	Plug	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—35		ADECO THROTTLE COMPONENTS INSTALLATION - DEUTZ	Ref.
	0237641	THROTTLE ACTUATOR INSTALLATION (TURNTABLE MOUNTED ACTUATOR)	Ref.
—1	0060023	Actuator (Attaching Parts)	1
—2	0641411	Bolt 1/4"-20NC x 1 3/8"	2
—3	4751400	Flatwasher 1/4"	2
—4	0901389	Bracket, Cable (Attaching Parts)	1
—5	0630400	Bolt, Metric M8-1.25 x 90 mm	2
—6	4761500	Lockwasher 5/16"	2
—7	3290801	Nut, Metric M8-1.25	2
—8	4460302	Stop, Cable (Attaching Parts)	1
	4711400	Flatwasher 1/4" Narrow	1
	3450203	Pin, Cotter 1/16" x 3/4"	1
	0237630	STOP-RUN SOLENOID INSTALLATION (TURNTABLE MOUNTED ACTUATOR)	Ref.
	0236953	STOP-RUN SOLENOID INSTALLATION (ENGINE BRACKET MOUNTED ACTUATOR)	Ref.
—9	3740055	Solenoid (Attaching Parts)	1
—10	0641406	Bolt 1/4"-20NC x 3/4"	4
—11	4751400	Flatwasher 1/4"	4
—12	3311401	Nut 1/4"-20NC	4
—13	3321401	Nut 1/4"-28NF	1
—14	4160086	Spring, Swivel	1
—15	1360112	Clevis (Attaching Parts)	3
—16	3321401	Nut 1/4"-28NF	1
—17	3430406	Pin, Clevis	1
—18	4751400	Flatwasher 1/4"	1
—19	3450203	Pin, Cotter 1/16" x 3/4"	1
—20	4842269	Arm (Attaching Parts)	1
—21	3311605	Locknut 3/8"-16NC	1
—22	4751600	Flatwasher 3/8"	1
—23	4160024	Spring	1
—24	3840818	Rod	1
—25	4842476	Bracket (Not Shown - Turntable Mounted Actuator)	1
	4842270	Bracket (Engine Bracket Mounted Actuator) (Attaching Parts)	1
—26	0630136	Bolt, Metric 8 mm x 24 mm	4

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

SECTION 2 — ILLUSTRATED PARTS LIST

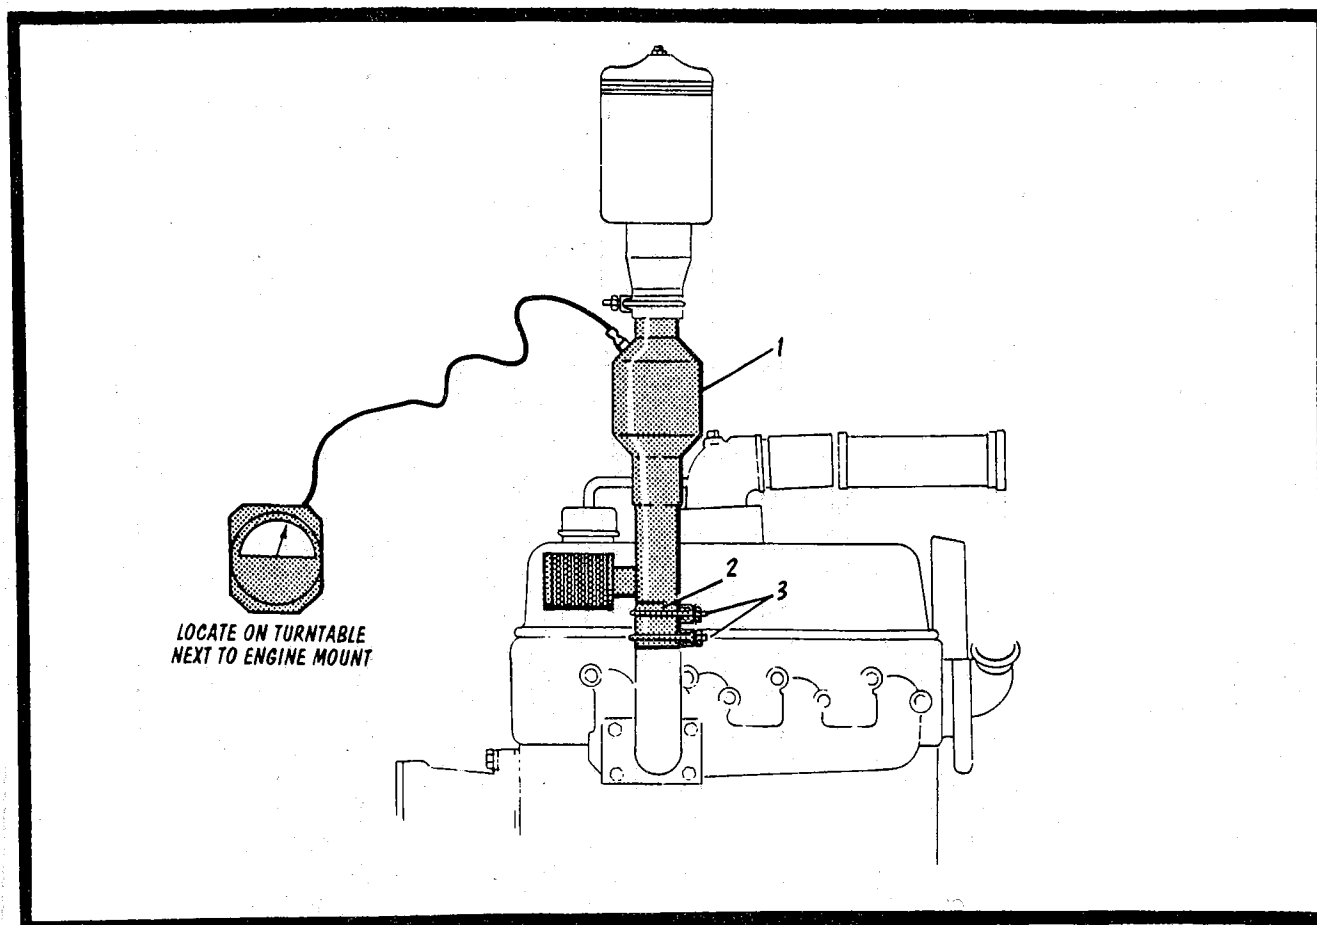


Figure 2-38. Oxy Catalyst Purifier Installation.

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—38	0237014	OXY CATALYST PURIFIER INSTALLATION	Ref.
—1	3220053	Muffler, Oxy Catalyst Purifier	1
—2	4100015	Sleeve, Exhaust	1
—3	1320019	Clamp	2
		Pyrometer and Bracket Supplied with Purifier (Attaching Parts)	1
	4300031	Stud (Welded On Part)	2
	4761400	Lockwasher 1/4"	2
	3311401	Nut 1/4"-20NC	2

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—43	0236455	TANK INSTALLATION (RACINE - GEAR PUMP)	Ref.
	0236770	TANK INSTALLATION (RACINE - PISTON PUMP)	Ref.
	0236557	FUEL TANK ASSEMBLY	Ref.
—1	4842065	Tank (Attaching Parts)	1
—2	0641616	Bolt 3/8"-16NC x 2"	4
—3	4761600	Lockwasher 3/8"	4
—4	3311601	Nut 3/8"-16NC	4
—5	1120240	Fill Cap	1
—6	4562516	Tube (Attaching Parts)	1
—7	2180467	Fitting	2
—8	1320022	Hose Clamp	2
	0100020	Pipe Sealant	A/R
—9	4060600	Shield, Sight Gauge (Attaching Parts)	1
—10	4751400	Flatwasher 1/4"	3
—11	4761400	Lockwasher 1/4"	3
—12	3311401	Nut 1/4"-20NC	3
—13	2720015	Vent Line (Attaching Parts)	1
—14	2220317	Fitting	1
—15	1320022	Hose, Clamp	1
	0100020	Pipe Sealant	A/R
—16	1320041	Conduit Clamp (Attaching Parts)	1
—17	4751400	Flatwasher 1/4"	1
—18	4761400	Lockwasher 1/4"	1
—19	3311401	Nut 1/4"-20NC	1
	2200052	Plug, Pipe (Not Shown)	1
	0100020	Pipe Sealant	A/R
	0236527	OIL TANK ASSEMBLY	Ref.
	0236769	OIL TANK ASSEMBLY (PISTON PUMP)	Ref.
—20	4842073	Oil Tank	1
	4842194	Oil Tank (Piston Pump) (Attaching Parts)	1
—21	0641616	Bolt 3/8"-16NC x 2"	4
—22	4761600	Lockwasher 3/8"	4
—23	3311601	Nut 3/8"-16NC	4
—24	4070550	Shim	A/R
—25	4070410	Shim	A/R
	4070411	Shim	A/R
	4070412	Shim	A/R
—26	2420080	Gauge, Hydraulic Oil Indicator	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—46		HOOD INSTALLATION AND ACCESSORIES (STANDARD)	Ref.
	0236605	HOOD INSTALLATION (FORD)	Ref.
	0236618	HOOD INSTALLATION (DEUTZ)	Ref.
—1	1670326	Cover - L.H. (Welded In Place)	1
—2	1670328	Cover - R.H. (Welded In Place)	1
—3	4842092	Engine Cover (Ford)	1
	1670331	Engine Cover (Deutz - Not Shown) (Attaching Parts)	1
—4	3900022	Self-Tapper 1/4" x 3/4" long	6
—5	4761400	Lockwasher 1/4" ID	6
—6	0641406	Bolt, Hex 1/4"-20NC x 3/4" long (Grade 5)	7
—7	4751400	Flatwasher 1/4" ID	7
—8	4761400	Lockwasher 1/4" ID	7
—9	3311401	Nut, Hex 1/4"-20NC	7
—10	4842228	Door - Engine (Attaching Parts)	1
—11	0641406	Bolt, Hex 1/4"-20NC x 3/4" long (Grade 5)	4
—12	4751400	Flatwasher 1/4" ID	4
—13	4761400	Lockwasher 1/4" ID	4
—14	3311401	Nut, Hex 1/4"-20NC	4
—15	0901256	Bracket, Gas Spring Mounting (Welded In Place)	1
—16	3200222	Gas Spring Mount (Attaching Parts)	1
—17	0630383	Bolt, Carriage 5/16"-18NC x 3/4" long	2
—18	4751500	Flatwasher 5/16" ID	2
—19	4761500	Lockwasher 5/16" ID	2
—20	3311501	Nut 5/16"-18NC	2
—21	4160081	Gas Spring (Attaching Parts)	1
—22	4761400	Lockwasher 1/4" ID	2
—23	3311401	Nut 1/4"-20NC	2
—24	0880083	Filler Plate (Attaching Parts)	1
—25	3900022	Self-Tapper 1/4" x 3/4" long	5
—26	4761400	Lockwasher 1/4" ID	5
—27	3820019	Latch Plate (Attaching Parts)	1
—28	4300032	Stud (Welded In Place) 1/4"-7/8" long	2
—29	4761400	Lockwasher 1/4" ID	2
—30	3311401	Nut, Hex 1/4"-20NC	2
—31	2940048	Latch	1
	2080004	Fastener	1
—32	0880085	Brace (Ford)	1
	4842108	Brace (Deutz - Not Shown) (Attaching Parts)	1
—33	3900022	Self-Tapper 1/4" x 3/4" long	2
—34	4761400	Lockwasher 1/4" ID	2

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—49	0237176	OIL COOLER INSTALLATION	Ref.
—1	0860365	Box Weldment (Attaching Parts)	1
—2	4300034	Stud (Welded On Part)	4
—3	4751600	Flatwasher 3/8"	4
—4	4761600	Lockwasher 3/8"	4
—5	3311601	Nut 3/8"-16NC	4
—6	2520071	Grill Weldment (Attaching Parts)	1
—7	3941403	Screw, Self Tap 1/4"-20NC x 3/8"	6
—8	2540002	Grommet	1
—9	1320060	Clamp, Hose	4
—10	4561947	Tube (Attaching Parts)	2
—11	0641412	Bolt, Hex 1/4"-20NC x 1 1/2"	4
—12	4751400	Flatwasher 1/4"	4
—13	4761400	Lockwasher 1/4"	4
—14	3311401	Nut 1/4"-20NC	4
—15	3740049	Relay, Weatherproof (Attaching Parts)	1
—16	0721008	Screw, Hex #10-24NC x 1"	1
—17	4761000	Lockwasher #10	1
—18	4751000	Flatwasher #10	1
—19	3311001	Nut #10-24NC	1
—20	0901123	Bracket (Attaching Parts)	2
—21	0641508	Bolt, Hex 5/16"-18NC x 1"	4
—22	4751500	Flatwasher 5/16"	4
—23	4761500	Lockwasher 5/16"	4
—24	3311501	Nut 5/16"-18NC	4
—25	2060012	Electric Motor, Fan and Assembly (Attaching Parts)	1
—26	0721008	Screw, Hex #10-24NC x 1"	4
—27	4751000	Flatwasher #10	4
—28	4761000	Lockwasher #10	4
—29	3311001	Nut #10-24NC	4
—30	3620016	Cooler, Oil (Attaching Parts)	1
—31	Not Used		
—32	2220282	Pipe Reducer	1
—33	4360181	Temperature Switch	1
	0100020	Pipe Sealer	A/R
—34	4280059	Strip, Rubber	4
	0100001	Adhesive	A/R

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—54	2780055	SWING DRIVE HUB ASSEMBLY	Ref.
—1	7000209	Cover (Attaching Parts)	1
—2	7000217	Bolt, Hex Head	8
—3	7000214	Bolt, Hex Head, Shoulder	4
—4	4751500	Flatwasher	12
—5	7000242	Plug, Pipe	1
—6	7000230	O-Ring	2
—7	7000208	Gear, Ring	1
—8	7000253	Washer, Thrust	2
—9	7000207	Planet Carrier Assembly-No Service Breakdown Parts- Purchase Entire Assembly.)	1
—10	7000270	Washer, Thrust	1
—11	7000268	Gear, Sun-Input	1
—12	7000269	Spacer, Sun Gear	1
—13	7000246	Gear, Internal	1
	7000271	HUB ASSEMBLY	
—14	7000229	Ring, Retaining	1
—15	7000232	Spacer	1
—16	7000258	Bearing, Tapered Roller	1
—17	7000257	Cup, Bearing	1
—18	7000210	Hub	1
—19	7000242	Plug, Pipe	1
—20	7000255	Cup, Bearing	1
—21	7000256	Bearing, Tapered Roller	1
—22	7000228	Seal	1
—23	7000233	Shaft, Output	1
	2900034	Kit, Repair (Includes Items 6, 14, 15 and 22.)	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—57		FRAME, STEERING AND DRIVE COMPONENTS, ASSEMBLIES AND INSTALLATIONS - OSCILLATING AXLE (60HTH)	Ref.
—1	2360258	Frame	1
—2	2160002	Fitting, Grease	5
	0236747	FRONT AXLE INSTALLATION - OSCILLATING	Ref.
—3	4842178	Front Axle Weldment (Attaching Parts)	1
—4	2160002	Fitting, Grease	1
—5	3451214	Pin, Cotter	1
—6	0641838	Bolt 1/2"-13NC x 4 3/4"	1
—7	4751800	Flatwasher 1/2"	1
—8	3311805	Locknut 1/2"-13NC	1
—9	3421273	Pin, Front Axle	1
—10	0440163	Bearing, Thrust	2
—11	1681569	Cylinder, Lockout (See Figure 2-68 For Breakdown) (Attaching Parts)	2
—12	3421220	Pin, Clevis	2
—13	4740190	Flatwasher	4
—14	3450607	Pin, Cotter	2
—15	3421219	Pin Weldment	2
—16	4751600	Flatwasher 3/8"	2
	4761600	Lockwasher 3/8"	2
—17	0641606	Bolt 3/8"-16NC x 3/4"	2
—18	4220099	Stop, Axle (Attaching Parts)	2
—19	4300048	Stud (Welded On Part)	4
—20	4751800	Flatwasher 1/2"	4
—21	4761800	Lockwasher 1/2"	4
—22	3311801	Nut 1/2"-13NC	4
—23	4070539	Shim, Axle (Attaching Parts)	A/R
—24	4300034	Stud (Welded On Part)	4
—25	4751600	Flatwasher 3/8"	4
—26	4761600	Lockwasher 3/8"	4
—27	3311601	Nut 3/8"-16NC	4
	0238261	STEERING AND SPINDLE INSTALLATION	Ref.
—28	1681562	Cylinder, Steer (See Figure 2-67 For Breakdown) (Attaching Parts)	1
—29	3431622	Pin, Clevis	1
—30	4740230	Flatwasher	1
—31	3450606	Pin, Cotter	1
—32	0440091	Washer, Thrust	1
—33	3300175	Locknut	1
—34	2160002	Fitting, Grease	2
—35	3840866	Tie Rod (Attaching Parts)	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—60	3160132	DRIVE MOTOR (VICKERS FIXED AND 60HTH FIXED & OSCILLATING)	Ref.
	3160140	DRIVE MOTOR (4WD REAR)	Ref.
—1	7006766	Yoke	1
—2	7006767	Roll Pin	1
—3	7006768	Spherical Seat	1
—4	7006769	Spring Seat (3160132)	1
	7006772	Spring Seat (3160140)	1
—5	7006774	Yoke Spring	1
—6	7006776	Yoke Stop	1
—7	7006785	Gasket	1
—8	7006786	Housing	1
—9	7006787	Washer	6
—10	7006788	Screw	6
—11	7006789	Screw	4
—12		Shim (Included in Kit 7006794)	1
—13	7006790	Retaining Ring	1
—14	7006721	Shaft Steel	1
—15	7006791	Bearing	2
—16	7006792	Pintle Bearing	2
—17	7006793	O-Ring	2
—18	7006794	Shim Kit	1
—19	7006795	Cover	2
—20	7006719	Bearing	1
—21	7006797	Piston	1
—22	7006798	Piston Rod	1
—23	7006703	Plug	1
—24	7006799	O-Ring	1
—25	7009300	Screw	4
—26	7009301	Control Block	1
—27	7009302	Gasket	1
—28	7009303	O-Ring	1
—29	7009304	Back-up Ring	1
—30	7009305	Retaining Ring	1
—31	7009306	Valve Block	1
—32	7006706	Pin	1
—33	7009307	Pin	2
—34	7009308	Shaft	1
—35	7006717	Piston and Shoes	9
—36	7006716	Shoe Plate	1
—37	7006715	Spherical Washer	1
—38	7006714	Pin, Retainer	1
—39	7006713	Pin	3
—40	7006712	Cylinder, Block	1
—41	7006711	Spring Washer	1
—42	7006710	Spring	1
—43	7006709	Spring Washer	1
—44	7009309	Retaining Ring	1
—45	7006707	Bearing Spacer Kit	1
—46	7009310	Wafer Plate	1
—47	7006704	Bearing S/A	1
	2900659	Seal Kit	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—65	2780138	DRIVE REDUCER (VICKERS FIXED AND 60HTH FIXED & OSCILLATING)	Ref.
—1	7007663	Hub	1
—2	7007678	Bolt	2
—3	7007673	Washer, Thrust	1
	7007665	Carrier Sub-Assembly	1
—4	7007666	Carrier	1
—5	7007672	Shaft (Output)	1
—6	7000285	Ring, Retaining	1
—7	7000270	Washer, Thrust	1
—8	7007671	Gear (Planet)	3
—9	7007668	Roller, Needle	57
—10	7007670	Shaft (Planet)	3
—11	7007669	Pin, Spring	3
—12	7007667	Washer, Thrust	6
—13	7007676	Gear (Input)	1
—14	7007675	Washer, Thrust	1
—15	7007677	O-Ring	2
—16	7007664	Ring Gear	1
—17	7000253	Washer, Thrust	1
—18	7007674	Cover	1
	7007679	Plug, Pipe (Not Shown)	3

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—69		VALVES INSTALLATION (FRAME MOUNTED)	Ref.
	0236404	LOCKOUT VALVE INSTALLATION (OSCILLATING AXLE)	Ref.
—1	1100037	Cam Assembly (Attaching Parts)	1
—2	0641612	Bolt 3/8"-16NC x 1 1/2"	2
—3	4761600	Lockwasher 3/8"	2
—4	4070570	Shim	A/R
	4070571	Shim	A/R
	4070572	Shim	A/R
—5	4640485	Valve, Axle Lockout (See Figure 2-70 For Breakdown) (Attaching Parts)	1
—6	0641634	Bolt 3/8"-16NC x 4 1/4"	2
—7	4751600	Flatwasher 3/8"	2
—8	4761600	Lockwasher 3/8"	2
—9	3311601	Nut 3/8"-16NC	2
	0236842	2 WHEEL/4 WHEEL DRIVE VALVES INSTALLATION	Ref.
—10	4640471	Valve (Attaching Parts)	1
—11	0641526	Bolt 5/16"-18NC x 3 1/4"	2
—12	4751500	Flatwasher 5/16"	2
—13	4761500	Lockwasher 5/16"	2
—14	3311501	Nut 5/16"-18NC	2
—15	4640363	Valve, Solenoid (Attaching Parts)	1
—16	0641522	Bolt 5/16"-18NC x 2 1/2"	2
—17	4751500	Flatwasher 5/16"	2
—18	4761500	Lockwasher 5/16"	2
—19	3311501	Nut 5/16"-18NC	2
—20	0181221	Angle (Welded On Part)	1
	0236590	COUNTERBALANCE AND FLOW DIVIDER VALVES INSTALLATION (STANDARD AND 7' X 7')	Ref.
	0238014	COUNTERBALANCE AND FLOW DIVIDER VALVES INSTALLATION (VICKERS AND 60HTH)	Ref.
—21	4640443	Divider, Flow (Standard and 7' x 7')	1
	4640260	Divider, Flow (Vickers and 60HTH)	1
—22	2220061	Fitting, Adapter	1
—23	2180134	Fitting	1
—24	4640451	Valve, Dual Counterbalance (Attaching Parts)	1
—25	0641626	Bolt 3/8"-16NC x 3 1/4"	2
—26	4761600	Lockwasher 3/8"	2
—27	3311601	Nut 3/8"-16NC	2

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—74	2790980	DRIVE CIRCUIT, HYDRAULIC (STANDARD AND 7' X 7' PISTON PUMP)	Ref.
	2791172	DRIVE CIRCUIT, HYDRAULIC (7' X 7' GEAR PUMP)	Ref.
—1	2220376	Fitting, Straight	2
	2220404	Fitting, 90°	2
—2	2751045	Hose	1
—3	2751555	Hose	1
—4	2220348	Fitting, Straight	4
—5	2180095	Fitting, Nipple (Standard and 7' x 7' Piston Pump)	1
	2220719	Fitting (Standard and 7' x 7' Piston Pump)	1
	2200052	Plug, Pipe (7' x 7' Gear Pump)	1
—6	2200052	Plug, Pipe (Standard and 7' x 7' Piston Pump)	1
	2220396	Fitting, Straight (7' x 7' Gear Pump)	1
	2220471	Fitting, 90° (7' x 7' Gear Pump)	1
—7	2220399	Fitting, Straight (Standard and 7' x 7' Piston Pump)	1
	2200052	Plug, Pipe (7' x 7' Gear Pump)	1
—8	2200052	Plug, Pipe (Standard and 7' x 7' Piston Pump)	1
	2220580	Fitting, 90° (7' x 7' Gear Pump)	1
—9	2751001	Hose (Standard and 7' x 7' Piston Pump)	1
	2750773	Hose (7' x 7' Gear Pump)	1
—10	2751553	Hose	2
—11	2220646	Fitting, 45°	2
—12	2220466	Fitting, 90°	1
—13	2751014	Hose	1
—14	2220451	Fitting, Straight	2
—15	2220465	Fitting, 90°	1
—16	2220682	Fitting, Tee	1
	2220407	Fitting, 90°	2
—17	2750874	Hose	2
—18	2220504	Fitting, Tee	1
—19	2751409	Hose	2
—20	2220466	Fitting, 90°	2
—21	2220451	Fitting, Straight	4
—22	2220371	Fitting, Straight (Standard and 7' x 7' Piston Pump)	1
	2220373	Fitting, Straight (7' x 7' Gear Pump)	1
—23	2750918	Hose (Standard and 7' x 7' Piston Pump)	2
	2751502	Hose (7' x 7' Gear Pump)	2
—24	2220490	Fitting, Tee (Standard and 7' x 7' Piston Pump)	1
	2220362	Fitting, Tee (7' x 7' Gear Pump)	1
—25	2751325	Hose	2
—26	2220069	Fitting, Straight	1
	2220280	Fitting, Nipple (7' x 7' Gear Pump Only)	1
—27	2220608	Fitting, Tee (Standard and 7' x 7' Piston Pump)	1
	2220402	Fitting, Tee (7' x 7' Gear Pump)	1
—28	2220609	Fitting, Reducer (Standard and 7' x 7' Piston Pump)	1
	2220444	Fitting, Tee (7' x 7' Gear Pump)	1
—29	2220605	Fitting, Tee (Standard and 7' x 7' Piston Pump)	1
	2220581	Fitting, Tee (7' x 7' Gear Pump)	1
—30	2220618	Fitting, Reducer (7' x 7' Gear Pump Only)	1
—31	2220605	Fitting, Tee (Standard and 7' x 7' Piston Pump Only)	1
—32	2751006	Hose (Standard and 7' x 7' Piston Pump)	1
	2751477	Hose (7' x 7' Gear Pump)	1

SECTION 2 — ILLUSTRATED PARTS LIST

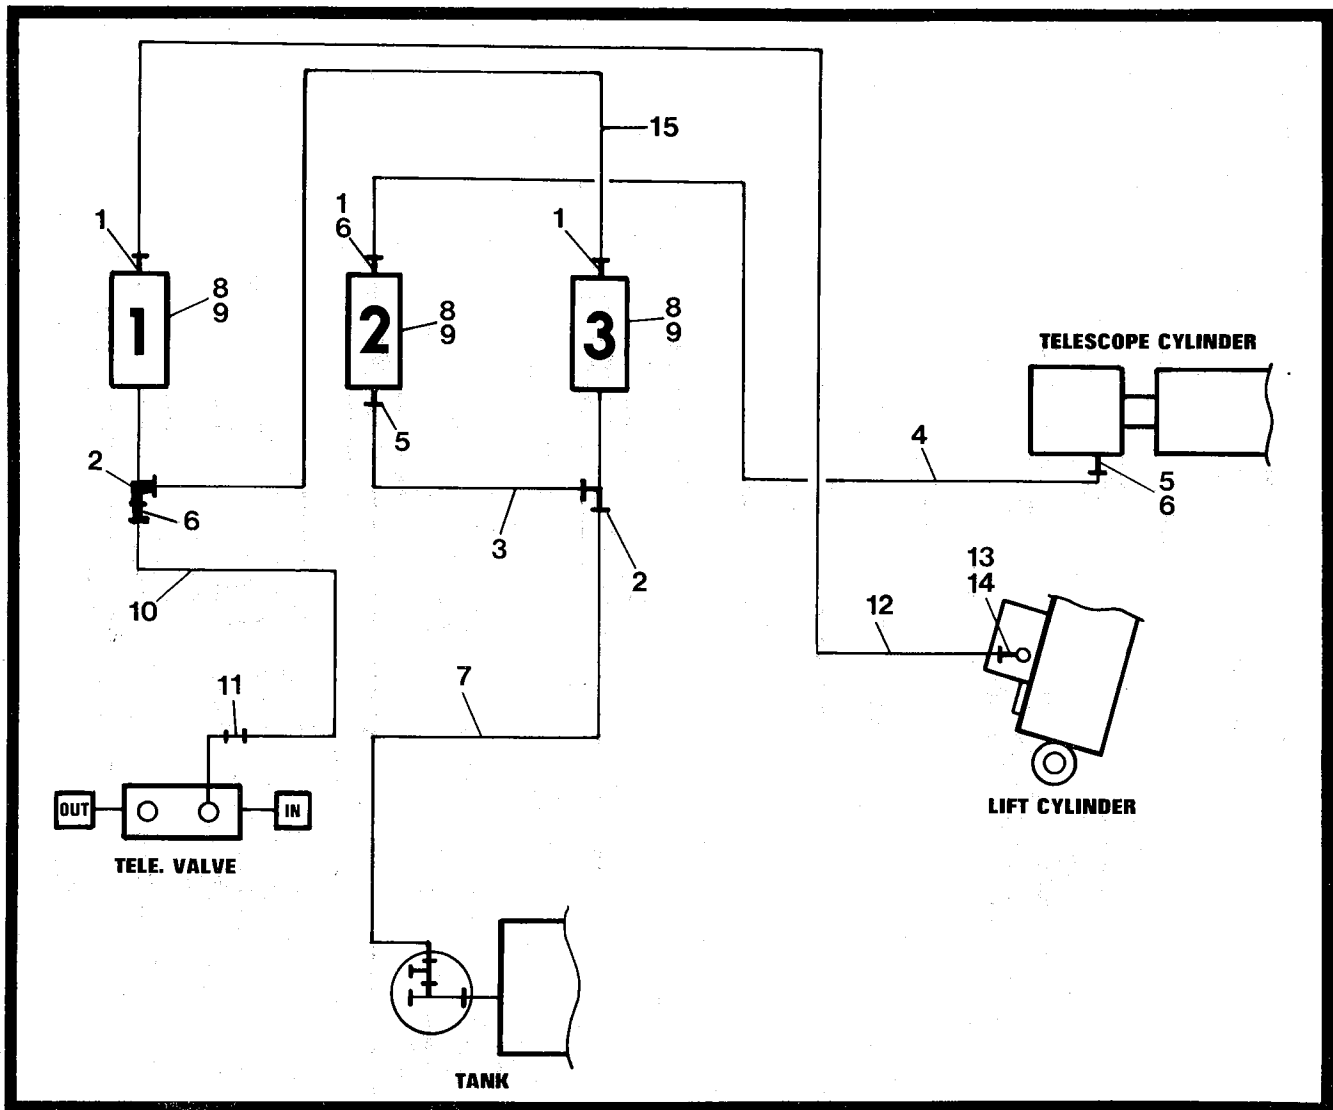


Figure 2-80. Manual Descent Circuit, Hydraulic.

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—80.	2790978	MANUAL DESCENT CIRCUIT, HYDRAULIC	Ref.
—1	2220416	Fitting, 90°	3
—2	2220684	Fitting, Tee	2
—3	2750901	Hose	1
—4	2750896	Hose	1
—5	2220414	Fitting, Straight	2
—6	2220462	Fitting, 90°	3
—7	2750903	Hose	1
—8	4640005	Valve, Needle	3
—9	2900062	Kit, Panel Mounting	3
—10	2751396	Hose	1
—11	2220609	Fitting, Reducer	1
—12	2751393	Hose	1
—13	2180630	Fitting, 90°	1
—14	2180631	Plug, Orifice	1
—15	2750902	Hose	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—83	2791010	PUMP CIRCUIT, HYDRAULIC - STANDARD AND 7' X 7' WITH PISTON PUMP	Ref.
—1	2720025	Hose, Suction	2.8 Ft.
—2	2720138	Hose, Suction	2.25 Ft.
—3	1320016	Clamp, Hose	4
—4	1320030	Clamp, Hose	4
—5	2220451	Fitting	1
—6	2210027	Fitting, Suction Nipple	1
—7	2210049	Fitting, Suction Nipple	1
—8	2220707	Flange, Split Half	2
—9	3790228	O-Ring	1
—10	0641812	Cap Screw	4
—11	4761800	Lockwasher	4
—12	2220374	Fitting	2
—13	2750758	Hose	1
—14	2220478	Kit, Split Flange	1
—15	2220630	Fitting, 90°	1
—16	2751062	Hose	1
—17	2220349	Fitting	2
	0100020	Pipe, Sealant	A/R
—18	4640108	Valve, Check	1
—19	2220340	Fitting, Nipple	2
—20	2220337	Fitting, Tee	1
—21	Not Used		
—22	Not Used		
—23	Not Used		
—24	Not Used		
—25	Not Used		
—26	2751547	Hose	1
—27	2220379	Fitting	1
—28	2220365	Fitting, 45°	1
—29	2220330	Fitting, Reducer	1
—30	2751041	Hose	1
—31	2220733	Fitting	1
—32	2220731	Fitting, 90°	1
—33	2220626	Fitting, Reducer	1
—34	2220642	Fitting, Tee	2
—35	2220624	Fitting, Reducer	2
—36	2750771	Hose	1
—37	2180456	Fitting, Modified	1
—38	2220261	Fitting, Nipple	3
—39	2220428	Fitting, Quick Connect	2
—40	2220429	Cap, Dust	2
—41	2750974	Hose	1
—42	2220466	Fitting, 90°	1
—43	2751020	Hose	1
—44	2220373	Fitting	1
—45	2220128	Fitting, 45°	1
—46	2750125	Hose	1
—47	2220117	Fitting, 90°	1
—48	2220473	Fitting, 90°	1
—49	2220659	Fitting, 90°	1
—50	4640009	Valve, Check	1
—51	2220665	Fitting, Tee	1
—52	2220618	Fitting, Reducer	2
—53	2750757	Hose	1

SECTION 2 — ILLUSTRATED PARTS LIST

FIGURE & INDEX NO.	PART NUMBER	ITEMS & DESCRIPTION	QTY.
2—85	2791251	PUMP CIRCUIT, HYDRAULIC - VICKERS VALVE AND 60HTH WITH STEERING WHEEL (CONTINUED)	Ref.
—55	2220409	Fitting, 45°	1
—56	2751020	Hose	1
—57	2750889	Hose	1
—58	2750900	Hose	1
—59	2220250	Fitting, Reducer	1
—60	2180217	Fitting, Modified	1
—61	2180651	Fitting, Modified	1
—62	2220673	Fitting, 90°	1
—63	4640197	Valve, Check	1
—64	2220070	Fitting, 90°	1
—65	2220432	Fitting, Tee	1
—66	2220679	Fitting	1
—67	2220252	Fitting, Nipple	1
—68	2220057	Fitting	1
—69	2750972	Hose	2
—70	2220374	Fitting	1
—71	4640520	Valve, Relief	1
—72	2720247	Hose, Suction	1
—73	2220809	Fitting, 45°	1
—74	2220808	Fitting, 45°	1
—75	2720222	Hose, Suction	1
—76	1320012	Clamp	8
—77	2220128	Fitting, 45°	1
—78	2220111	Fitting, 90°	2
—79	2751833	Hose	1
—80	4563651	Tube	2
—81	2751832	Hose	1
—82	2751831	Hose	1
—83	2220371	Fitting, Straight	2
—84	2220606	Fitting, Tee	1
—85	2220371	Fitting, Straight	2
—86	2750913	Hose	1
—87	2750926	Hose	1
—88	2220507	Fitting, 90°	1
—89	2751833	Hose	2
—90	2750777	Hose	1
	0100020	Sealant	A/R

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL