 


PARTS BOOK

H-20

GASOLINE ENGINE (Z SERIES)

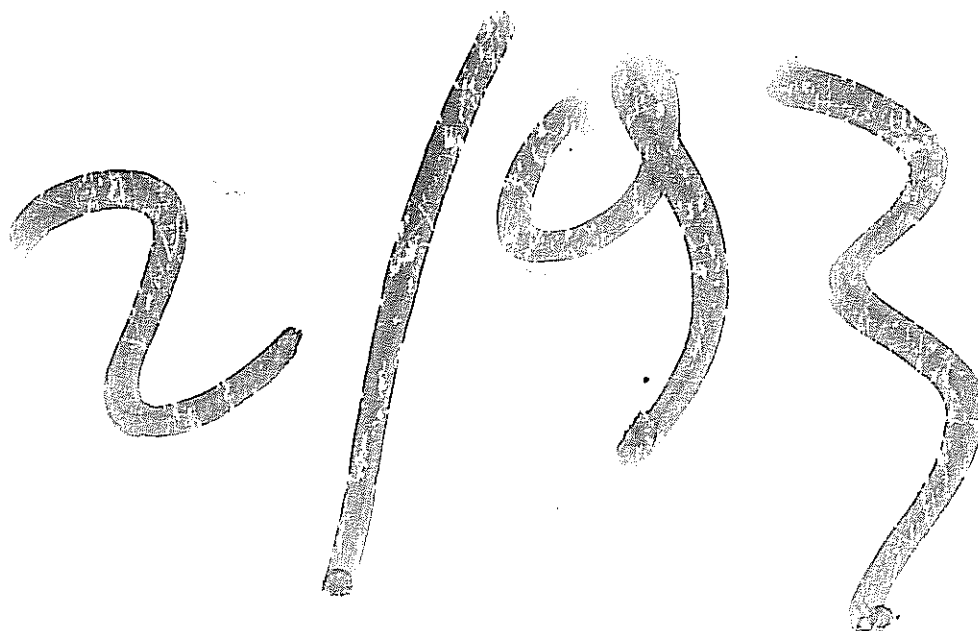

❁ KOMATSU FORKLIFT

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL




CAMSHAFT AND VALVE MECHANISM

图书索引号 Fig. & Index No.	品 番 P a r t N o.	品 名 D e s c r i p t i o n	個数 Q ' t y	互換性 I T C	備 考 R e m a r k s
111-28	13231-78201	LIFTER-VALVE	8		
29	13224-78200	BOLT-ROCKER SHAFT	4		
30	NJ08120-61662	BOLT	2		
31	NJ08120-63562	BOLT	2		
32	NJ08915-14010	WASHER	1		
33	NJ08915-44010	WASHER	4		
34	NJ00926-41610	KEY	1		
35	NJ00921-22500	PIN	2		

BLOCK FITTING AND FRONT COVER

図表上の 索引番号 Fig. & Index No.	品 番 P a r t N o.	品 名 D e s c r i p t i o n	個数 Q' t y	互換性 I T C	備 考 R e m a r k s
205- 1	11046-73402	DOWEL-WATER PUMP	2		
2	13033-00H01	CASE-FRONT COVER	1		
3	NJ08216-63010	.STUD	2		
4	13501-COH01	COVER ASS'Y-FRONT	1		
5	13521-L1100	PACKING-FRONT COVER	1		
6	13042-L1401	SEAL-OIL, crankshaft front	1		
7	13520-L1100	GASKET-CASE, front cover	1		
8	NJ08110-85510	BOLT	5		
9	NJ08110-82062	BOLT	2		
10	NJ08110-83062	BOLT	1		
11	NJ08120-62562	BOLT	4		
12	NJ08120-63562	BOLT	7		
13	NJ08911-10810	BOLT	1		
14	NJ08915-13810	WASHER	6		
15	12320-K9000	HOUSING-FLYWHEEL (GD21, GD22, GD31, GD32, SD21, SD22) ..	1		
	12320-K9001	HOUSING-FLYWHEEL (GD23)	1		
16	NJ08131-02810	BOLT (GD21, GD22, GD31, GD32, SD21, SD22) ..	4		
	30412-K7320	BOLT-FLYWHEEL HOUSING (GD23)	4		
17	NJ08915-24010	WASHER (GD21, GD22, GD31, GD32, SD21, SD22) ..	4		
	NJ08915-44010	WASHER (GD23)	4		
18	12322-K7320	WASHER-SEAL (GD23)	4		
19	30415-K4306	SEAL-OIL, flywheel housing (GD23) ..	1		

   
FIG. 451 FUEL PUMP

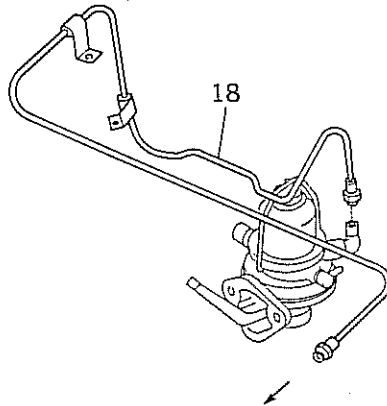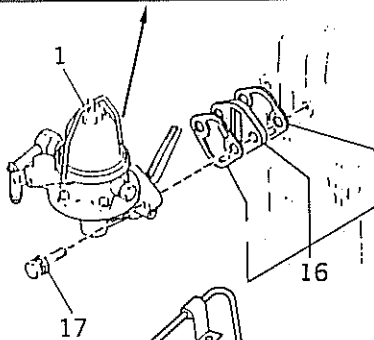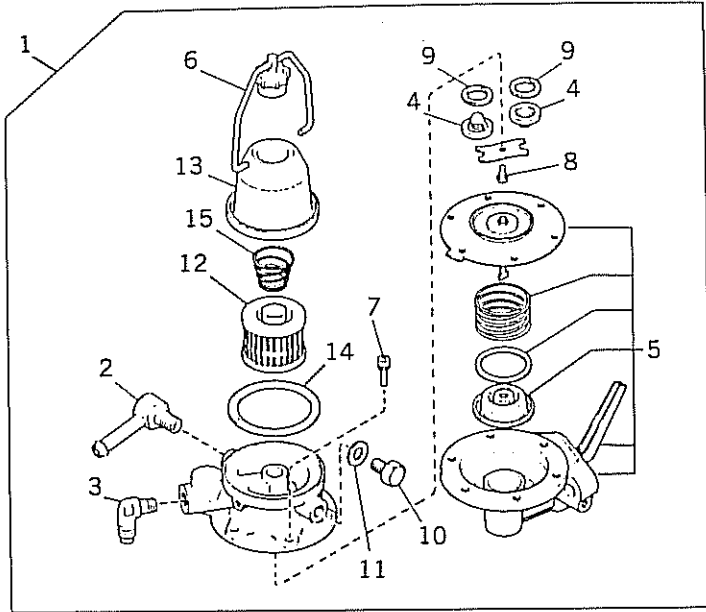

ALTERNATOR (GD21, GD22, GD23, GD31, GD32)

図書および 索引番号 Fig. & Index No.	品番 Part No.	品名 Description	個数 Qty	互換性 I T C	備考 Remarks
611- 1	23100-B9810	ALTERNATOR ASS'Y (GD21, GD22, GD23, GD31, GD32)	1		
2	23108-M0412	.ROTOR ASS'Y (GD21, GD22, GD23, GD31, GD32)	1		
3	23120-14610	.. BEARING-BALL (GD21, GD22, GD23, GD31, GD32)	1		
4	23102-U0100	.STATOR ASS'Y (GD21, GD22, GD23, GD31, GD32)	1		
5	23127-B9810	.COVER ASS'Y-REAR (GD21, GD22, GD23, GD31, GD32)	1		
6	23124-B9810	.. DIODE ASS'Y (GD21, GD22, GD23, GD31, GD32)	1		
7	23156-B9810	.. TERMINAL ASS'Y-B (GD21, GD22, GD23, GD31, GD32)	1		
8	23215-P3017	.. REGULATOR ASS'Y-IC (GD21, GD22, GD23, GD31, GD32)	1		
9	23138-A5510	... SPRING-BRUSH (GD21, GD22, GD23, GD31, GD32)*	2		
10	23135-W7110	... BRUSH ASS'Y (GD21, GD22, GD23, GD31, GD32)	2		
11	23118-B9810	.COVER ASS'Y-FRONT (GD21, GD22, GD23, GD31, GD32)	1		
12	23120-W1710	.. BEARING-BALL (GD21, GD22, GD23, GD31, GD32)	1		
13	23115-A5510	.. SCREW (GD21, GD22, GD23, GD31, GD32)	1		
14	23131-U0515	.BOLT-THROUGH (GD21, GD22, GD23, GD31, GD32)	1		
15	23150-B9810	.PULLEY ASS'Y (GD21, GD22, GD23, GD31, GD32)	1		
16	23153-M0412	.NUT ASS'Y-PULLEY (GD21, GD22, GD23, GD31, GD32)	1		

 FIG. 681 DISTRIBUTOR FITTING

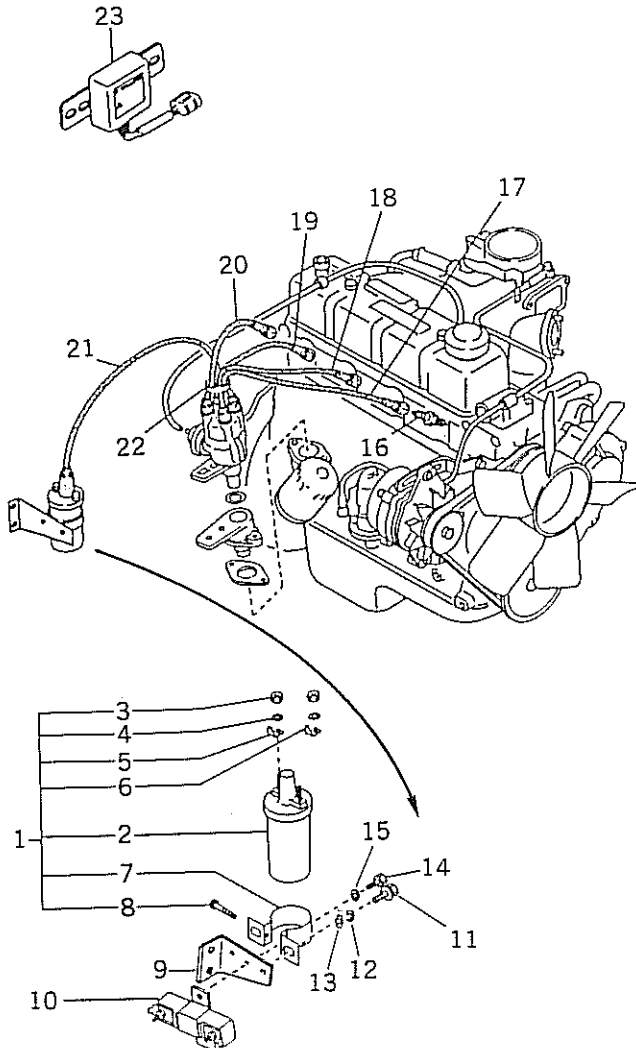

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL