


# PART MANUAL

Manual Number 9212  
Manual Part Number 301995-000  
SKID STEER LOADER

L-933

Effective Serial Number L9330

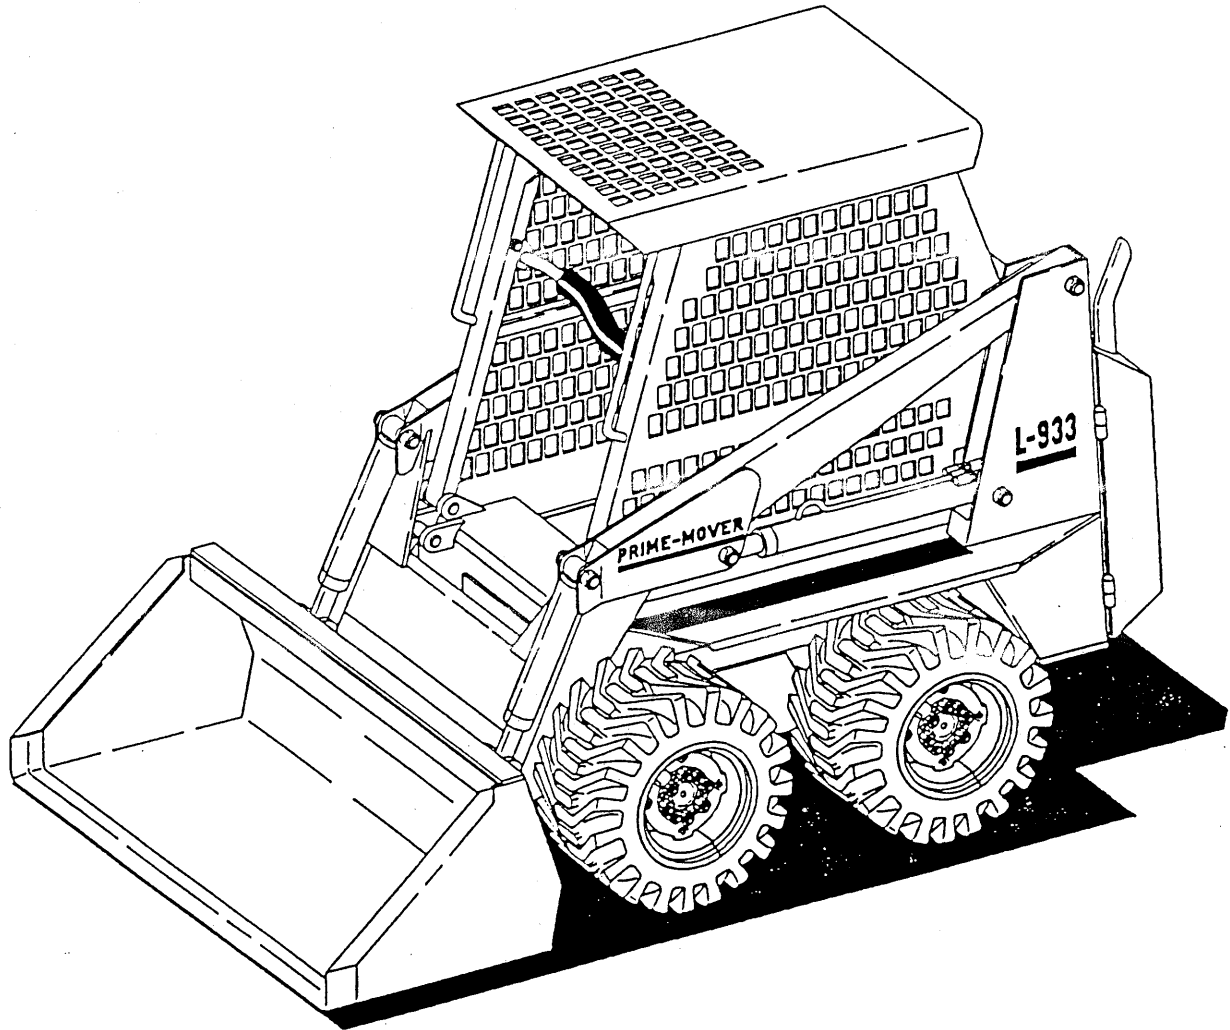

**⚠ WARNING**

Read and observe all warnings on this unit before operating it.

**⚠ WARNING**

DO NOT operate this equipment unless all factory installed guards and shields are properly secured in place.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
1.1	47	11143-14	screw, cap	6	
1.1	48	14994-06	Screw, cap	4	
1.1	49	11170-08	Nut	4	
1.1	50	05530-00	Mount, side engine	2	
1.1	51	11009-08	Lockwasher	2	
1.1	52	14994-05	Screw, cap	1	
1.1	53	11261-08	Nut	2	
1.1	54	05589-00	Plate, flex	1	
1.1	55	302046-001	Disc	1	
1.1	56	302046-002	Hub	1	
1.1	57	04011011	Mount, transmission	1	
1.1	58	-----	Transmission assembly (See Fig.# 4.6)	1	
1.1	59	11009-08	Lockwasher	2	
1.1	60	11143-04	Screw, cap	2	
1.1	61	05568-00	Plate, mounting	10	
1.1	62	11143-03	Screw, cap	8	
1.1	63	05567-00	Engine, QT-35	8	
1.1	64	-----	Gasket, exhaust	2	
1.1	65	-----	Lockwasher	3	
1.1	66	-----	Nut	2	
1.1	67	05569-00	Pipe, exhaust	1	
1.1	68	01803106	Clamp, hose	2	
1.1	69	05541-00	Hose, air filter	1	
1.1					

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
2.3	1	04194015	Sender, oil temperature	1	Positive
2.3	2	03996-03	Harness, wiring	1	
2.3	3	NSS	Starter, engine (Part of engine)	1	Negative
2.3	4	04194015	Sender, water temperature	1	
2.3	5	NSS	Alternator, engine (Part of engine)	1	
2.3	6	04195013	Sender, oil pressure	1	
2.3	7	02675025	Sender, fuel level	1	
2.3	8	NSS	Regulator (Part of engine)	1	
2.3	9	NSS	Plug, glow (Part of engine)	3	
2.3	10	NSS	Jumper (Part of engine)	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
3.5	1	02171023	Tilt cylinder, right hand (See Fig.# 3.6)	1	Right Hand
3.5	2	02506064	Hose assembly	2	
3.5	3	03961019	Tube assembly	2	
3.5	4	02508036	Hose assembly	2	
3.5	5	25108-08	Fitting, straight	2	
3.5	6	02377-02	Valve, control (See Fig.# 3.13)	1	
3.5	7	14859-07	Clamp, hose	2	
3.5	8	02171015	Tilt cylinder, left hand (See Fig.# 3.6)	1	Left Hand
3.5	9	02506056	Hose assembly	2	

FIG ITEM		PART #	NAME	# FOR ASSY.	UNIT
#	#				
3.10	1	202294	Pump assembly, charge	1	
3.10	2	200388	Bearing, needle	1	
3.10	3	200395	Nut	4	
3.10	4	200353	Rod, threaded	4	
3.10	5	200345	Housing, charge pump	1	
3.10	6	200347	Gasket	1	
3.10	7	200416	O ring	1	
3.10	8	200358	Gerotor assembly	1	
3.10	9	200441	Pin	1	
3.10	10	200349	Shaft, charge pump	1	
3.10	11	200385	Bearing, ball	1	
3.10	12	200458	Ring, retainer	1	
3.10	13	200346	Coupler	1	
3.10	14	200470	Seal	4	
3.10	15	200391	Bearing	4	
3.10	16	200360	Shaft	4	
3.10	17	200465	Screw, cap	8	
3.10	18	201964	Lockwasher	2	
3.10	19	200466	Screw, cap	2	
3.10	20	200511	Bearing	2	
3.10	21	200427	Pin, roll	8	
3.10	22	200342	Plate, variable swash	2	
3.10	23	200335	Plate, thrust	2	
3.10	24	200354	Gasket	2	
3.10	25	200348	Shaft, pump	1	
3.10	26	200364	Kit, cylinder block	2	
3.10	27	200341	Plate, valve	2	
3.10	28	200510	Bearing	2	
3.10	29	200341	Pin	2	
3.10	30	200444	Plug	4	
3.10	31	200417	O ring	1	
3.10	32	200506	Valve, check	4	
3.10	33	200382	Ball, check valve	1	
3.10	34	200329	Spring, check valve	1	
3.10	35	200421	O ring	1	
3.10	36	200340	Plug, check valve	1	
3.10	37	202293	End, cap pump	1	
3.10	38	200393	Connector	2	
3.10	39	200512	Valve, relief	1	
3.10	40	202273	Plug	1	
3.10	41	200422	O ring	1	
3.10	42	200514	Kit, shim	1	
3.10	43	200344	Spring	1	
3.10	44	200343	Valve, relief	1	
3.10	45	200443	Plug, pipe	4	
3.10	46	200352	Housing	1	
3.10	47	200445	Plug	2	
3.10	48	200424	O ring	1	
3.10	49	200351	Gasket	1	
3.10	50	200450	Ring, retainer	1	
3.10	51	200355	End, cap pump	1	
3.10	52	200544	Tube assembly	1	
3.10	53	200361	Shaft, front pump	1	
3.10	54	200359	Housing, pump	1	
3.10	55	200469	Seal	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
4.1	1	01992016	Screw, cap	2	
4.1	2	04273017	Strap	2	
4.1	3	03954014	Tank, fuel	1	
4.1	4	02675025	Sender, fuel level	1	
4.1	5	01171016	Cap, fuel tank	1	
4.1	6	91200635	Elbow, 90°	1	
4.1	7	03136018	Lever assembly, back door	1	
4.1	8	11854-05	Screw, cap	2	
4.1	9	11125-10	Nut	2	
4.1	10	02266014	Pin, hinge	2	
4.1	11	04104022	Grill assembly, back door	1	
4.1	12	03418028	Lock, boom	1	
4.1	13	01809013	Pin, hair cotter	5	
4.1	14	11170-06	Nut	16	
4.1	15	11016-13	Washer, flat	16	
4.1	16	02260016	Cover, side	2	
4.1	17	02309020	Gasket, side cover	4	
4.1	18	02310019	Gasket, side cover	4	
4.1	19	11816-04	Plug	5	
4.1	20	03337012	Plate, bottom	1	
4.1	21	04082012	Cover	1	
4.1	22	01725037	Cap, dip stick	1	
4.1	23	03348019	Frame, main	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
4.6	1	01134014	Grip, handle	2	
4.6	2	02638049	Handle, right hand	1	
4.6	3	11261-07	Nut	1	
4.6	4	11847-07	Screw, cap	1	
4.6	5	11170-06	Nut, lock	1	
4.6	6	02246016	Shock	2	
4.6	7	91203887	Washer	2	
4.6	8	11143-07	Screw, cap	2	
4.6	9	01814012	Fitting, grease	2	
4.6	10	03984011	Arm	2	
4.6	11	01115014	Yoke	2	
4.6	12	01804013	Pin	2	
4.6	13	01809013	Pin, cotter	2	
4.6	14	04028016	Rod	2	
4.6	15	94134534	Nut	6	
4.6	16	02629014	End, rod	6	
4.6	17	02795013	Washer	4	
4.6	18	11170-04	Nut	1	
4.6	19	11143-04	Screw, cap	3	
4.6	20	11129-06	Nut	10	
4.6	21	02644012	Rod	1	
4.6	22	03668013	Screw, cap	1	
4.6	23	11845-10	Screw, cap	1	
4.6	24	02655019	Lever, pump	1	
4.6	25	03298016	Rod	2	
4.6	26	02629022	End, left hand rod	2	
4.6	27	03430030	Neutral assembly, right hand	1	
4.6	28	11017-11	Screw, cap	1	
4.6	29	22120-00	End, yoke	1	
4.6	30	03596022	Roller	1	
4.6	31	03776012	Bushing	1	
4.6	32	11129-06	Nut, lock	1	
4.6	33	02754019	Spacer	3	
4.6	34	02453017	Plate, pump control	2	
4.6	35	11170-06	Nut	3	
4.6	36	02794023	Guide, right hand control	1	
4.6	37	11143-04	Screw, cap	2	
4.6	38	03413010	Rod	2	
4.6	39	02452019	Plate	2	
4.6	40	11016-03	Washer, flat	6	
4.6	41	11143-09	Screw, cap	2	
4.6	42	94563907	Pin, roll	2	
4.6	43	02454015	Lever, pump	2	
4.6	44	11170-05	Nut	6	
4.6	45	11854-05	Screw, cap	2	
4.6	46	02081016	Pump assy, hydrostatic (See Fig.# 3.10)	1	
4.6	47	02638031	Handle, left handle	1	
4.6	48	11261-07	Nut	1	
4.6	49	11847-07	Screw, cap	1	

FIG ITEM		PART #	NAME	# FOR ASSY.	UNIT
#	#				
4.10	1	01809012	Pin, cotter	2	
4.10	2	02816017	Pin, left hand	1	Left Hand
4.10	2	02816025	Pin, right hand	1	Right Hand
4.10	3	11160-11	Fitting, grease	2	
4.10	4	02829010	Plate, quick attach	1	

FIG #	ITEM #	PART #	NAME	# FOR ASSY.	UNIT
5.3	1	11160-11	Fitting, grease	1	
5.3	2	11160-13	Fitting, grease	1	
5.3	3	02169010	Retainer	1	
5.3	4	14908-12	Nut, lock	1	
5.3	5	02150019	Tube, cylinder	1	
5.3	6K	NSS	Ring, wear	1	
5.3	7	02114015	Piston	1	
5.3	8K	NSS	Seal, piston	1	
5.3	9K	NSS	O ring	1	
5.3	10K	NSS	O ring	1	
5.3	11K	NSS	O ring	1	
5.3	12K	NSS	Ring, back-up	1	
5.3	13	02115013	Head, cylinder	1	
5.3	14K	NSS	Seal, rod	1	
5.3	15K	NSS	Seal, wiper	1	
5.3	16	02116061	Rod, cylinder	1	
5.3	K	02622018	Kit, seal	1	

(contains items marked with "K")

NSS - Not Sold Separately

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL