

# SD10YE 目录

## Catalogue

发动机关联部件 .....	1
ENGINE RELATED PARTS .....	1
发动机附件及安装.....	2
ENGINE MOUNTING AND ATTACHMENT.....	2
散热器及其管路.....	6
RADIATOR AND PIPING .....	6
散热器及其管路.....	8
RADIATOR AND PIPING .....	8
燃油箱及其管路总成.....	10
燃油箱及其管路总成.....	12
联轴器总成 .....	14
COUPLING.....	14
液压系统 .....	17
HYDRAULIC SYSTEM.....	17
工作油箱附件总成.....	18
OIL TANK ASS' Y .....	18
工作泵管路 .....	20
PIPING .....	20
铲刀提升管路总成.....	24
BLADE LIFT PIPING ASS' Y .....	24
倾斜及调角管路.....	26
TILT AND ANGLE PIPING .....	26
温控风扇系统总成.....	28
行走液压管路总成.....	32
TRAVELING HYDRAULIC PIPING ASS' Y .....	32
行走液压管路总成.....	36
TRAVELING HYDRAULIC PIPING ASS' Y .....	36
行走液压管路总成.....	38
TRAVELING HYDRAULIC PIPING ASS' Y .....	38
集中测压管路.....	40
PRESSURE MEASUREMENT PIPING .....	40
PPC 控制管路 .....	42
WORK EQUIPMENT CONTROL AND PPC PIPING.....	42
主机架 .....	45
FRAME .....	45
主机架 .....	46
MAIN FRAME .....	46
底盘 .....	49
UNDER CARRIAGE .....	49
终传动总成 .....	50
FINAL DRIVE .....	50

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


**散热器及其管路**  
**RADIATOR AND PIPING**

件号 ITEM	部件号 PART NO.	零件名称	PART NAME	数量 Q' TY
19	07281-00709	喉箍	CLAMP	8
20	121-03-07000	抱箍	CLAMP	8
21	121-03-00009	板	PLATE	2
22	01010-51030	螺栓 M10*30	BOLT	8
23	07281-00197	喉箍	CLAMP	4
24	121-03-03000	减震套	DAMPING COVER	1
25	07261-02012	软管	HOSE	1
26	121-03-00010	管	TUBE	2
27	07280-01920	管夹	CLIP	1
28	01010-51460	螺栓 M14*60	BOLT	1
29	01643-31445	垫圈 14	WASHER	1
30	121-03-04000	架	GUARD NET	1
31	01580-11008	螺母 M10	NUT	1
32	121-03-05000	遮护板	COVER	2
33	01643-30823	垫圈 8	WASHER	10
34	01010-51035	螺栓 M10*35	BOLT	7
35	01010-50825	螺栓 M8*25	BOLT	10
36	121-03-09000	遮护板	SHIELD	1
37	07270-01530	软管	HOSE	1
38	121-03-00008	管	TUBE	1
39	07730-50004	阀	VALVE	1
40	07281-00419	喉箍	CLAMP	2

**工作油箱附件总成**  
**OIL TANK ASS' Y**

件号 ITEM	部件号 PART NO.	零件名称	PART NAME	数量 Q' TY
1	121-60-02000	加油滤清器	OIL STRAINER	
2	121-60-03000	液位计	TUBE	1
3	01643-51032	垫圈 10	WASHER	2
4	01010-51035	螺栓 M10*35	BOLT	2
5	14Y-62-01001	放油塞	PLUG	1
6	121-60-04000	放油阀座	VALVE SEAT	1
7	07000-13028	O 形圈	O-RING	1

# 温控风扇系统总成

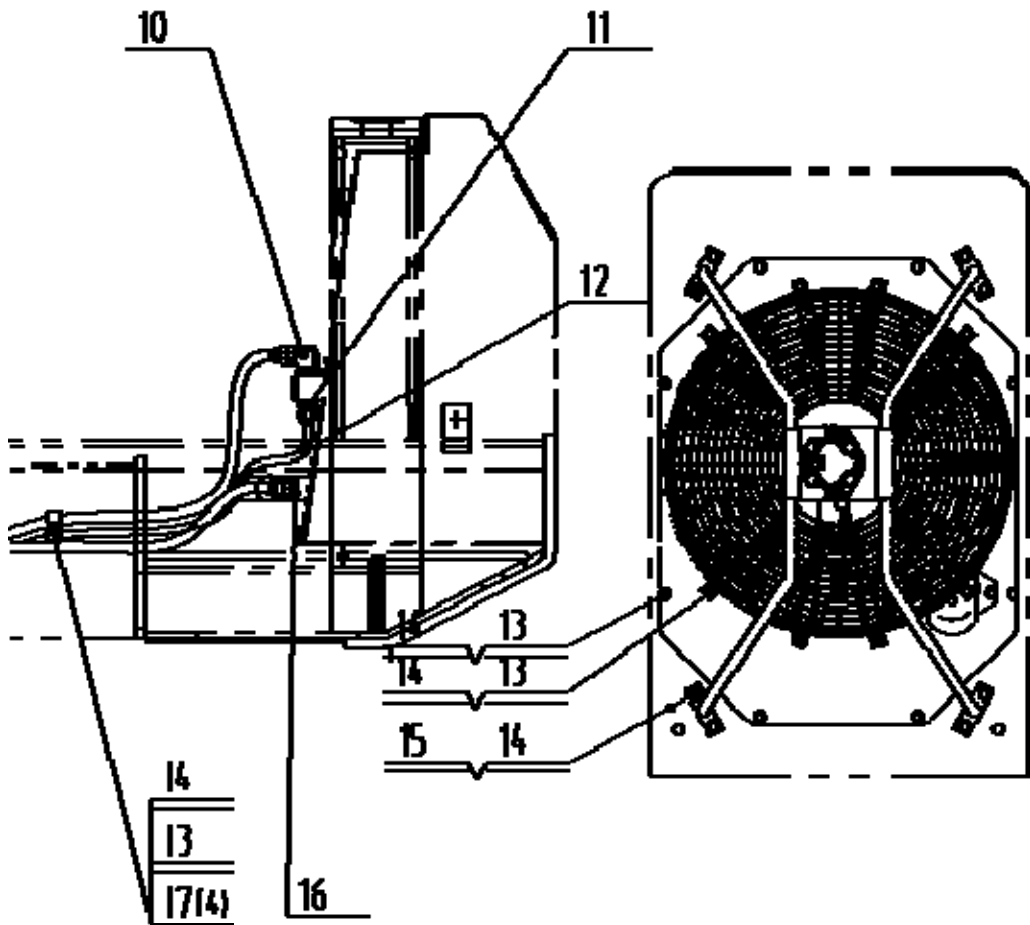

**行走液压管路总成**  
**TRAVELING HYDRAULIC PIPING ASS' Y**

件号 ITEM	部件号 PART NO.	零件名称	PART NAME	数量 Q' TY
1	121-75-13000	马达减速机总成	NIPPLE	2
2	01643-32060	垫圈 20	WASHER	36
3	01010-82065	螺栓 M20*65	BOLT	36
4	121-75-17000	螺栓法兰组件	OIL TUBE	4
5	121-75-56000	软管	HOSE	1
6	121-75-02000	螺栓法兰组件	HOSE	4
7	01643-31645	垫圈 16	WASHER	2
8	01010-51645	螺栓 M16*45	BOLT	2
9	01010-81270	螺栓 M12*70	BOLT	2
10	01643-31232	垫圈 12	WASHER	2
11	07094-30620	管夹	CLIP	4
12	07095-00628	缓冲套	CUSHION COVER	4
13	121-75-60000	软管	HOSE	1
14	121-75-61000	软管	HOSE	1
15	121-75-57000	软管	HOSE	1

底盘

**UNDER CARRIAGE**

**托轮总成**  
**CARRIER ROLLER ASS' Y**

件号 ITEM	部件号 PART NO.	零件名称	PART NAME	数量 Q' TY
0	121-40-03000	托轮总成	CARRIER ROLLER	2
1	121-40-03004	托轮轮体	CARRIER ROLLER BODY	1
2	121-40-03001	浮封座	SEAT, FLOAT SEAL	1
3	121-40-03005	托轮轴	SHAFT	1
4	121-40-03007	端盖	COVER	1
5	07000-12105	O 形圈	O-RING	1
6	GB297-32008	轴承	BEARING	2
7	111-40-01004	浮封环	RING, FLOAT SEAL	2
8	111-40-01003	O 形圈	O-RING	2
9	121-40-03006	垫圈	WASHER	1
10	01010-51630	螺栓 M16*30	BOLT	1
11	04065-01154	挡圈	RETAINER	1
12	07043-70108	螺塞	PLUG	1
13	01010-51680	螺栓 M16*80	BOLT	2
14	01643-31645	垫圈 16	WASHER	2

**机罩总成**  
**HOOD ASS' Y**

件号 ITEM	部件号 PART NO.	零件名称	PART NAME	数量 Q' TY
33	121-50-08100	框架板	FRAME PLATE	1
34	121-50-08200	盖板	PLATE	1
35	01010-50825	螺栓 M8*25	BOLT	4
36	01643-30823	垫圈 8	WASHER	4
37	121-50-08001	弯板	PLATE	2
38	01010-51235	螺栓 M12*35	BOLT	8
39	121-50-09200	盖板	PLATE	1
40	121-50-09100	框架板	FRAMW PLATE	1
41	01010-51645	螺栓 M16*45	BOLT	18
42	01643-31645	垫圈 16	WASHER	18

## 电气系统 1 CAB

件号 ITEM	部件号 PART NO.	零件名称	PART NAME	数量 Q' TY
1	D2401-07010	工作灯	LAMP	6
2	D2801-09540	刮雨器	WIPER	1
3	10Y-05E-02000	手油门	TROTTL KNOB	1
4	01220-40420	螺钉 M4*20	BOLT	6
5	121-07-20000	行走控制手柄	TRAVELING CONTROL HANDLE	1
6	121-07-09000	电缆(发电机-马达)	BATTERY RELAY CABLE	2
7	D2800-10510	左门雨刮	LEFT WIPER	1
8	D2430-01010	室内灯	LAMP	1
9	121-07-15000	板	PLATE	1
10	D2801-03010	刮雨器	WIPER	1
11	D2201-00000	仪表盘	METER PANEL	1
12	121-07-18000	五联开关	SWITCH	1
13	D2500-00010	启动开关	START SWITCH	1
14	D2232-00000	GPS 智能服务系统	GPS INTELLIGENCE SERVICE	1
15	121-07-21000	制动踏板	BRAKE PEDAL	1
16	10Y-05E-01000	脚油门	TROTTLE PEDAL	1
17	121-07-07000	脚油门线束	GROUND WIRE	1
18	D2800-10520	右门雨刷	RIGHT WIPER	1
19	D2250-30000	永青控制器	CONTROLLER	1
20	D2251-60900	力士乐控制器	CONTROLLER	1
21	D2611-20010	预热继电器	RELAY	1
22	121-07-01160	配电箱	DISTRIBUTING BOX	1
23	01220-40520	螺钉 M5*20	BOLT	4
24	01016-30810	螺栓 M8*10	BOLT	2
25	D2630-20000	复合继电器	RELAY	1
26	D2601-50000	蓄电池继电器	BATTERY RELAY	1
27	121-07-17000	七联开关	SWITCH	1
28	121-07-24000	五联开关	SWITCH	1
29	D2510-00600	喇叭开关	SWITCH, HORN	1
30	121-07-40000	铲刀操作手柄	BLADE CONTROL	1
31	121-07-42000	支架	BRACKET	1
32	121-07-01000	地板架线束	BATTERY GROUND LINE	1

## 空调系统 AIR CONDITIONER SYSTEM

件号 ITEM	部件号 PART NO.	零件名称	PART NAME	数量 Q' TY
1	01010-51225	螺栓 M12*25	BOLT	7
2	01643-51232	垫圈 12	WASHER	15
3	121-58-06000	后罩总成	COVER	1
4	01643-51032	垫圈 10	WASHER	25
5	01010-51025	螺栓 M10*25	BOLT	14
6	01010-51235	螺栓 M12*35	BOLT	8
7	121-58-07000	左灯架	LAMP BRACKET, L. H	1
8	121-58-03000	支架(左)	BRACKET (L. H.)	1
9	01010-51020	螺栓 M10*20	BOLT	4
10	121-58-13000	冷凝器总成	CONDENSER ASS' Y	1
11	01010-50840	螺栓 M8*40	BOLT	4
12	01643-30823	垫圈 8	WASHER	8
13	121-58-01000	软管(压缩机-冷凝器)	HOSE	1
14	01598-10809	螺母 M8	NUT	4
15	121-58-00003	板	HOSE	1
16	09483-10540	软管	HOSE	1
17	121-58-04000	支架(右)	BRACKET (R. H.)	1
18	121-58-05000	右灯架	LAMP BRACKET, R. H	1
19	121-58-00004	冲孔板	PLATE	1
20	121-58-00002	橡胶环管	NIPPLE	1
21	121-58-08000	软管(冷凝器-储液罐)	HOSE	1
22	121-58-00006	储液罐支架	BRACKET	1
23	23Y-58D-09000	储液罐	TIN	1
24	01643-30623	垫圈 6	WASHER	4
25	01010-50620	螺栓 M6*20	BOLT	2
26	01580-10605	螺母 M6	NUT	2
27	121-58-09000	软管(储液罐-蒸发器)	HOSE	1
28	121-58-11000	涨紧轮	TENSIONING WHEEL	1
29	07700-40460	阀门	VALVE	2
30	17Y-58B-00004	接头	NIPPLE	2
31	07281-00259	喉箍	CLAMP	4
32	09483-10526	软管	HOSE	1

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL