 


PARTS CATALOG

TB62

COMPACT EXCAVATOR

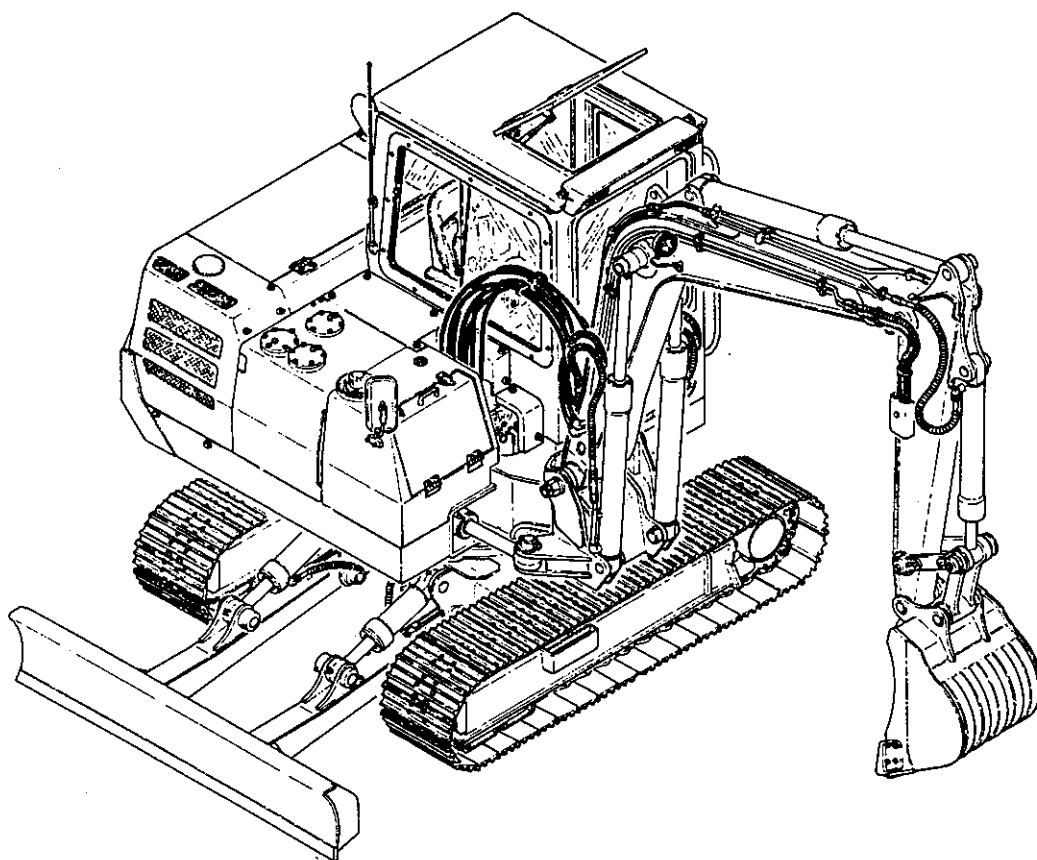

株式会社 **竹内製作所**
TAKEUCHI MFG. CO., LTD.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

 
- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

LOWER FRAME ロアフレーム

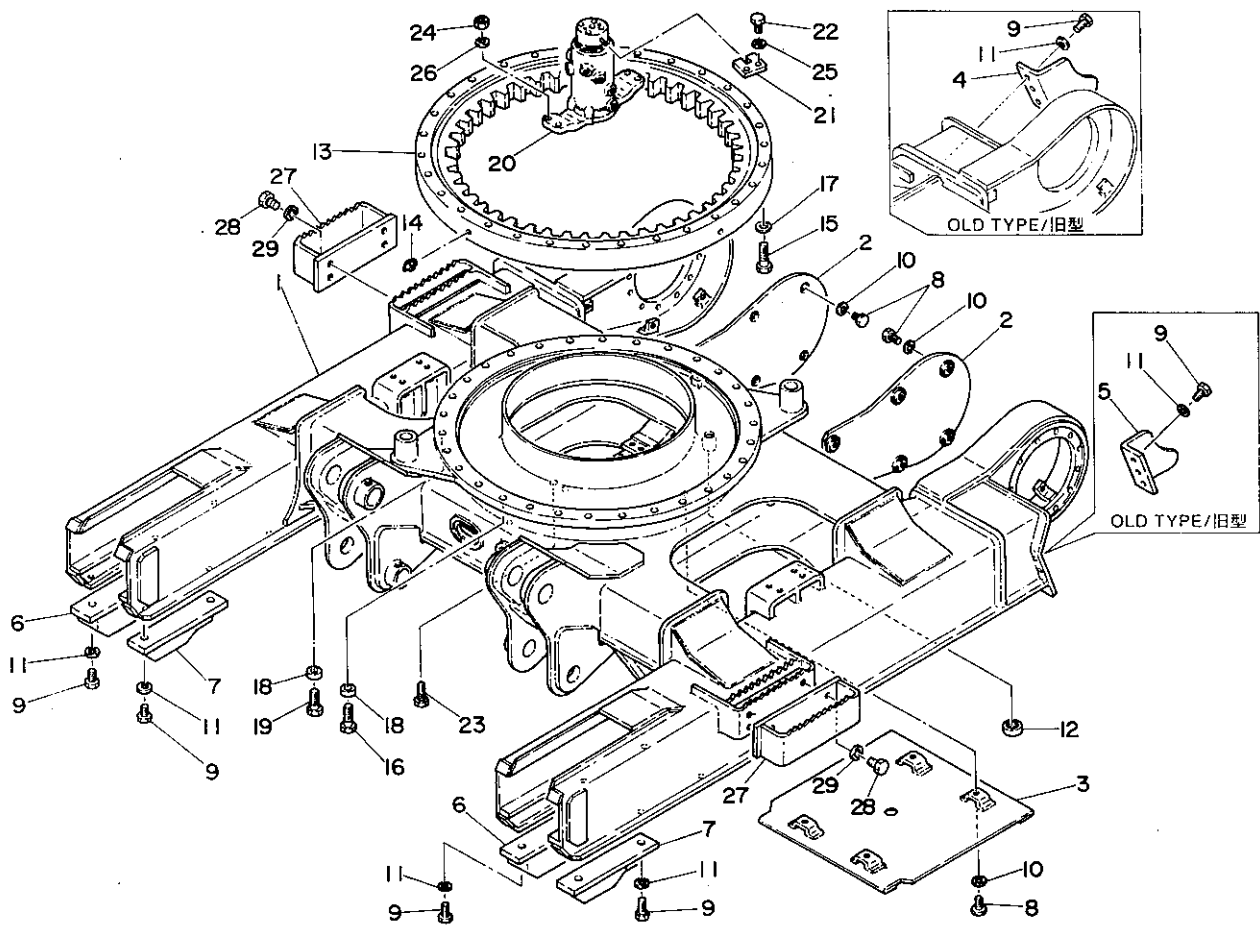


L0-01a-2-D

符号 Item	部品番号 Part number	Description	部品名称	数量 Q'ty	互換性 Chan.	適用号機 Serial No.	備考 Remarks
29	11400-20010	WASHER, spring	スプリングワッシャー	8			OPTION/オプション

UPPER MACHINERY 1

アップーマシナリー構成 1

SLEW GEARBOX	旋回装置
TURNTABLE	本体
TRAVEL LEVER	走行用レバー
OPERATION LEVER ; RIGHT	操作用レバー (右)
OPERATION LEVER ; RIGHT	操作用レバー (右)
OPERATION LEVER ; LEFT	操作用レバー (左)
OPERATION LEVER ; LEFT	操作用レバー (左)
BREAKER PEDAL	ブレーカー用ペダル
BLADE LEVER	排土板用レバー

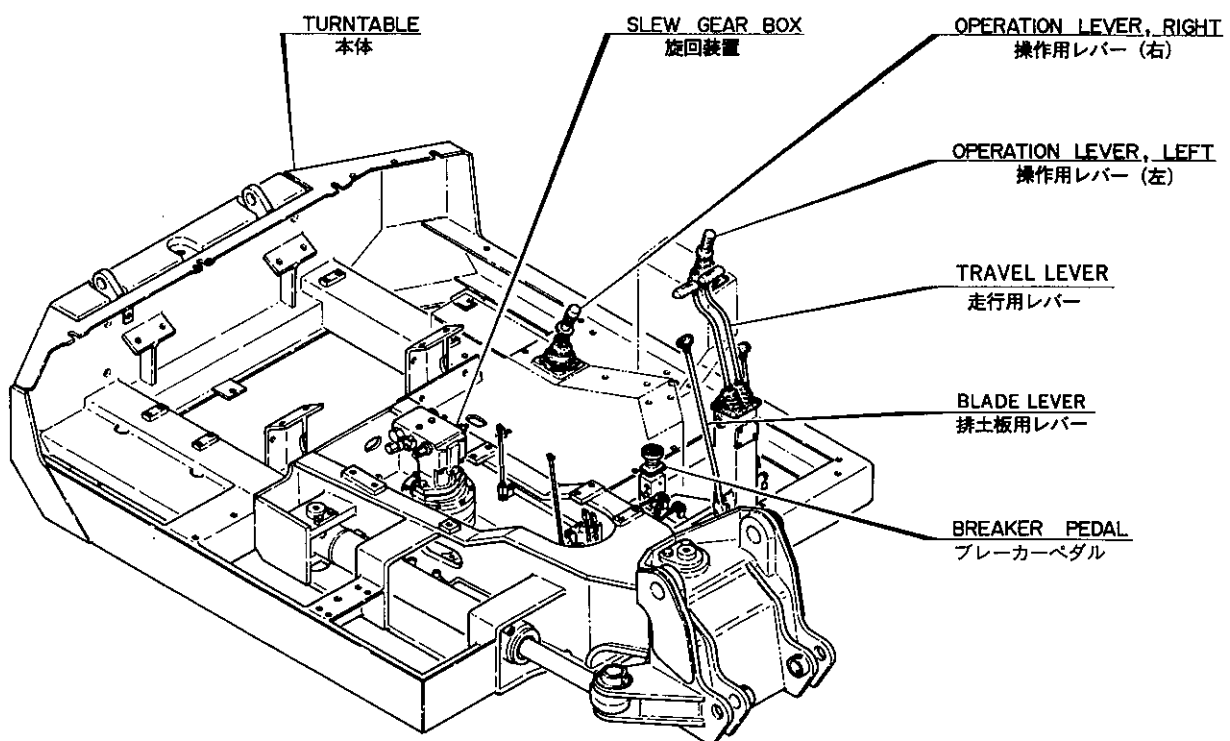 


OPERATION LEVER ; LEFT

TYPE "A"

操作用レバー (左)

 
タイプ "A"

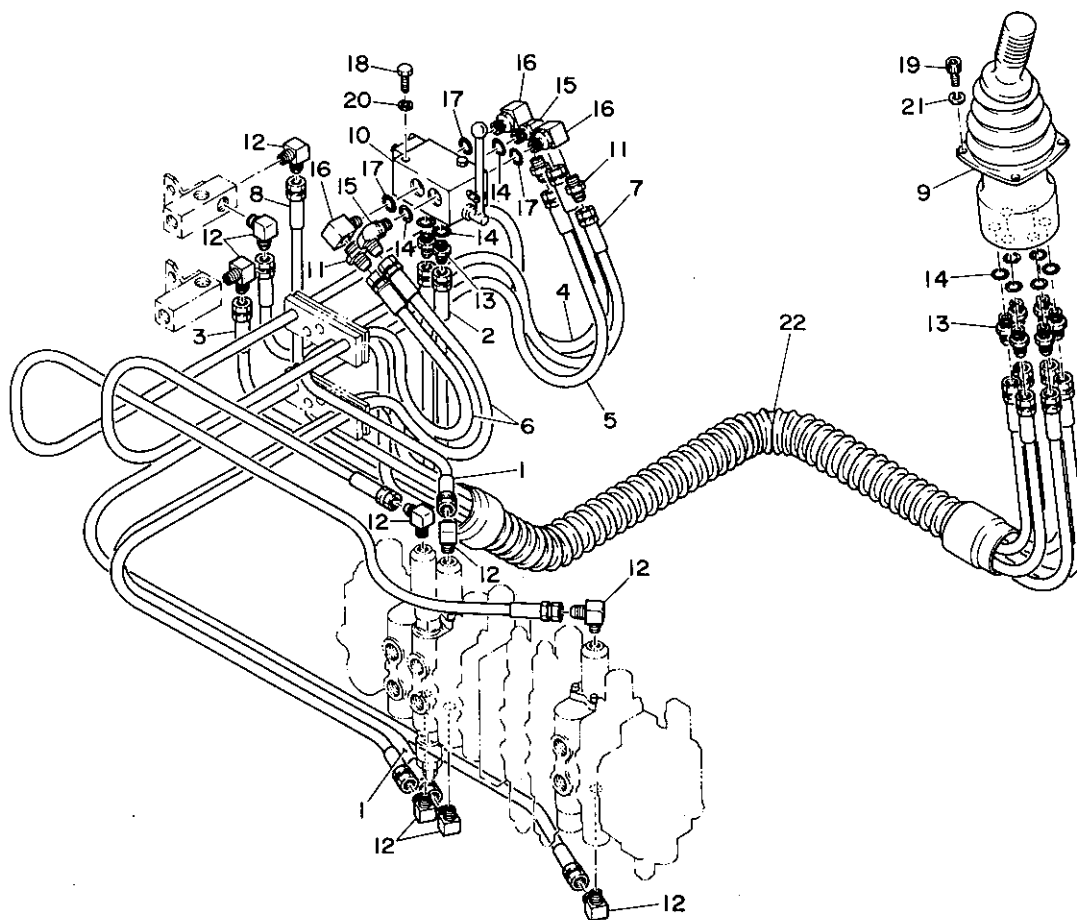

L0-14g-0-D

符号 Item	部品番号 Part number	Description	部品名称	数量 Q'ty	互換性 Chan.	適用号機 Serial No.	備考 Remarks
1	19048-22240	HOSE ASSY	ホース ASSY	2		#68248~	
2	19048-22170	HOSE ASSY	ホース ASSY	2		#68248~	
3	19048-22155	HOSE ASSY	ホース ASSY	1		#68248~	
4	19048-22100	HOSE ASSY	ホース ASSY	1		#68248~	
5	19048-22090	HOSE ASSY	ホース ASSY	1		#68248~	
6	19048-22085	HOSE ASSY	ホース ASSY	2		#68248~	
7	19048-22050	HOSE ASSY	ホース ASSY	1		#68248~	
8	19048-22165	HOSE ASSY	ホース ASSY	1		#68248~	
9	19017-11000	LEVER, joy stick	ジョイスティックレバー	1		#68248~#68573	
	19017-16800	LEVER, joy stick	ジョイスティックレバー	1	↑	#68574~	
10	19017-03900	VELVE, selector	セレクトターバルブ	1	↓	#68248~#68661	
	19017-18500	VELVE, selector	セレクトターバルブ	1	↑	#68662~	
11	15110-00002	ADAPTOR	アダプター	3		#68248~	
12	15111-00002	ELBOW, 90°	エルボ,90°	9		#68248~	
13	15156-00581	ADAPTOR	アダプター	8		#68248~	
14	14200-10110	O-RING	O-リング	8		#68248~	
15	15150-00211	ELBOW, 90°	エルボ,90°	2		#68248~	
16	15133-00008	ELBOW, 90°	エルボ,90°	3		#68248~	
17	14200-10110	☆O-RING	☆O-リング	1		#68248~	
18	11000-40816	BOLT	ボルト	2		#68248~	
19	11100-40616	BOLT, socket	ソケットボルト	4		#68248~	
20	11400-20008	WASHER, spring	スプリングワッシャー	2		#68248~	
21	11400-20006	WASHER, spring	スプリングワッシャー	4		#68248~	
22	15670-05090	HOSE	ホース	1		#68248~	

 
CONTROL BOX ; RIGHT コントロールボックス (右)

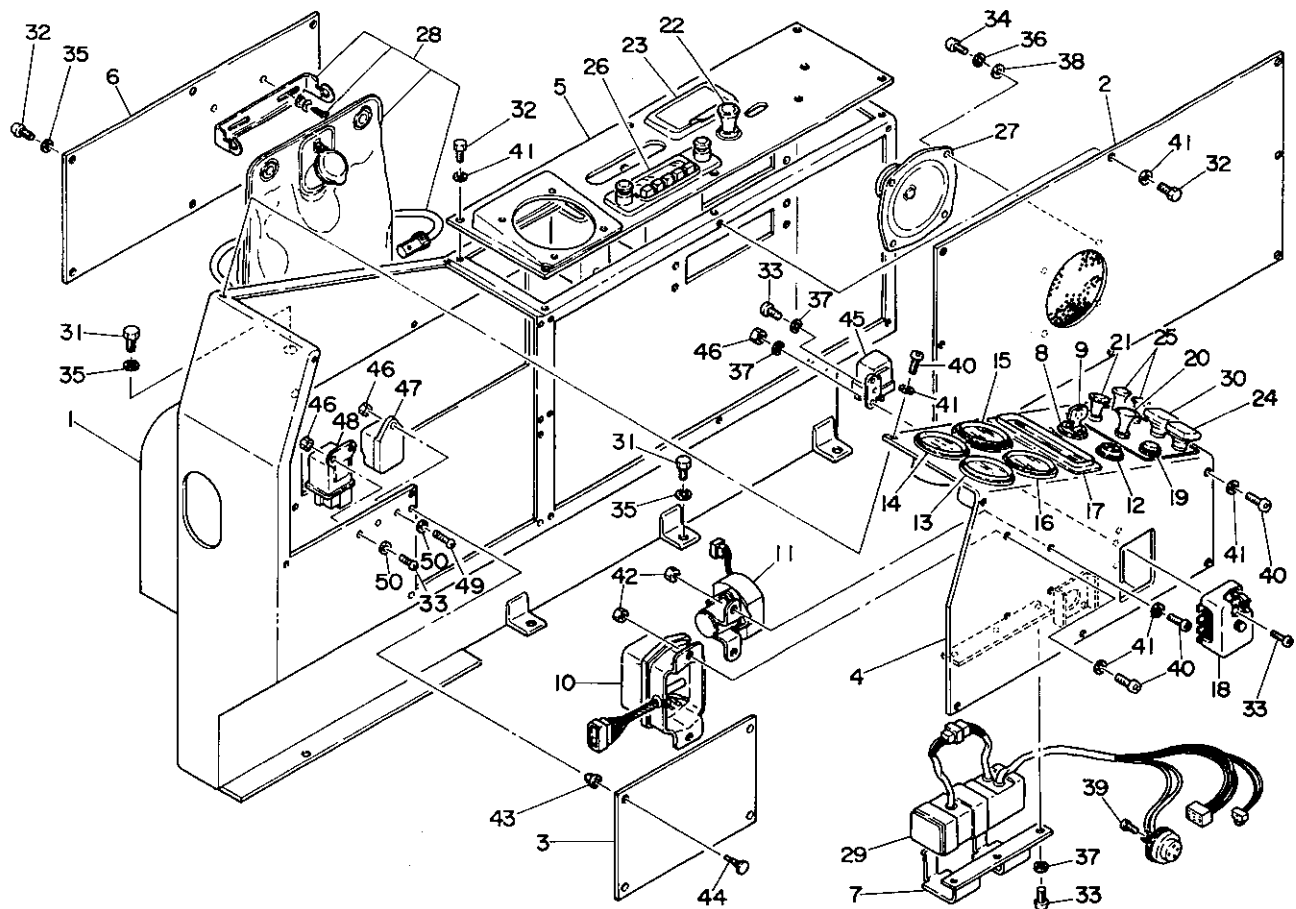

L0-20a-2-D

符号 Item	部 品 番 号 Part number	Description	部 品 名 称	数量 Q'ty	互換性 Chan.	適 用 号 機 Serial No.	備 考 Remarks
28	17119-10010	WASHER, window	ウィンドウワッシャー	1			
29	17301-40090	CIRCUIT ASSY	サーキット ASSY	1	☆	new type - 旧型	
30	17010-00300	SWITCH, light	ライトスイッチ	1			
31	11000-40816	BOLT	ボルト	5			
32	11000-40616	BOLT	ボルト	20			
33	11205-30516	SCREW, pan-head	ナベコネジ	8		#68251~	
34	11205-30416	SCREW, pan-head	ナベコネジ	4			
35	11400-20008	WASHER, spring	スプリングワッシャー	5			
36	11400-20004	WASHER, spring	スプリングワッシャー	4			
37	11400-20005	WASHER, spring	スプリングワッシャー	6			
38	11411-10004	WASHER, plain	プレーンワッシャー	4			
39	11205-30308	SCREW, pan-head	ナベコネジ	2			
40	11205-30616	SCREW, pan-head	ナベコネジ	11			
41	11411-10006	WASHER, plain	プレーンワッシャー	31			
42	11300-40006	NUT	ナット	4			
43	16527-12320	LATCH	ラッチ	4			
44	16527-13312	LATCH	ラッチ	4			
45	19100-33117	RELAY	リレー	1			エンジン附属
46	11300-40005	NUT	ナット	4		#68251~	
47	19100-33122	CONTROLLER	コントローラー	1		#68293~	エンジン附属
48	19100-33120	RELAY, glow	グローリレー	1		#68251~	エンジン附属
49	11205-30525	SCREW, pan-head	ナベコネジ	1		#68251~	
50	11411-10005	WASHER, plain	プレーンワッシャー	3		#68251~	

 PIPING ; UPPER 1 油圧配管 1

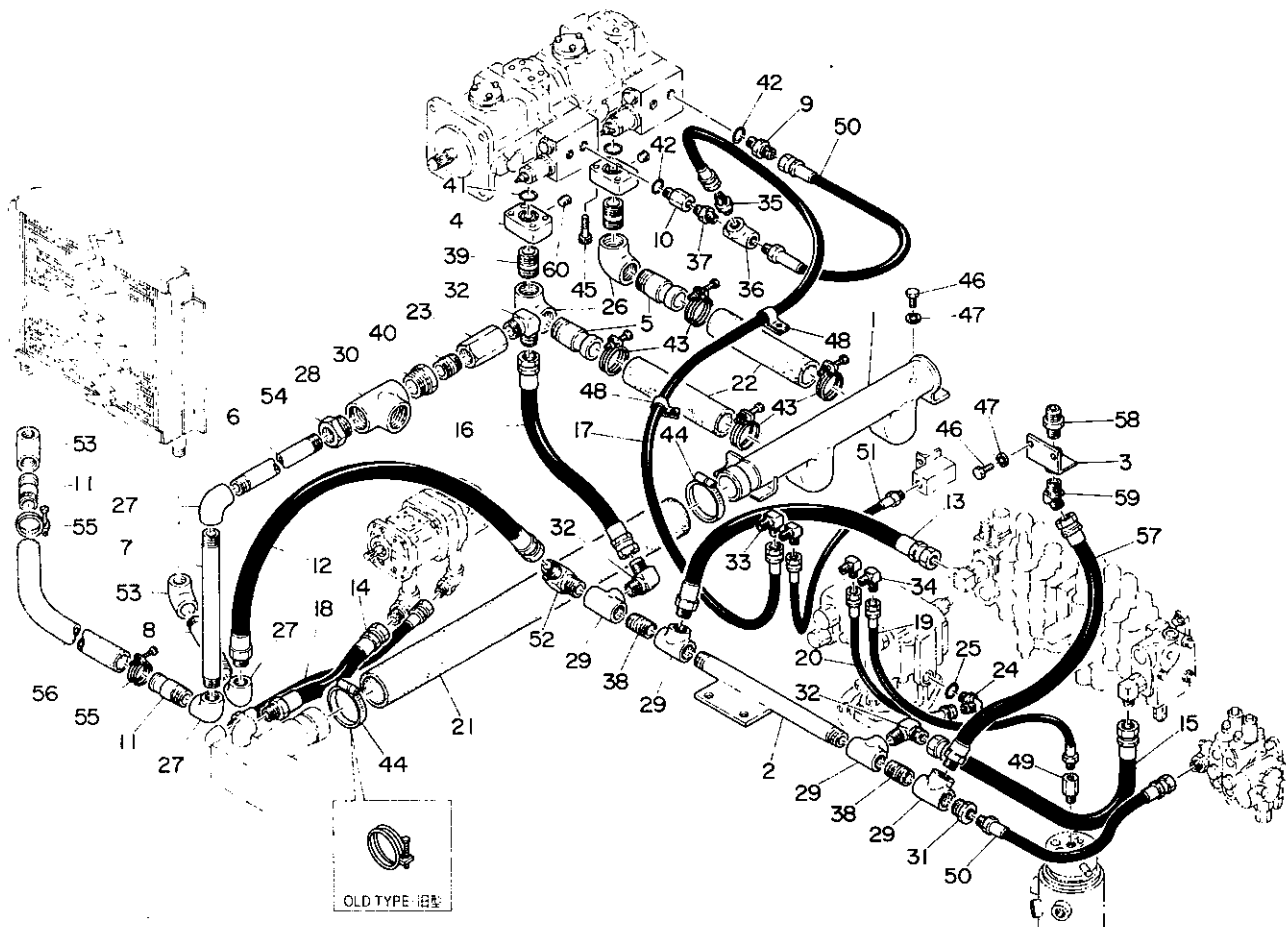


L0-25a-2-D

符号 Item	部 品 番 号 Part number	Description	部 品 名 称	数量 Q'ty	互換性 Chan.	適 用 号 機 Serial No.	備 考 Remarks
31	15086-01004	ADAPTOR	アダプター	1			
32	15111-00006	ELBOW, 90°	エルボ,90°	3			
33	15111-00004	ELBOW, 90°	エルボ,90°	1			
34	15111-00003	ELBOW, 90°	エルボ,90°	3			
35	15111-00004	ADAPTOR	アダプター	1			
36	15082-00004	TEE	ティー	1			
37	15085-00004	CONNECTOR	コネクター	1			
38	15130-00010	NIPPLE	リップル	2			
39	15130-00012	NIPPLE	リップル	2			
40	15130-00006	NIPPLE	リップル	1			
41	14201-10400	O-RING	O-リング	2			
42	14200-10180	O-RING	O-リング	2			
43	15330-01055	CLAMP	クランプ	4			
44	15330-01075	CLAMP	クランプ	2		old type 旧型	
	15337-00080	CLAMP	クランプ			new type 新型	
45	11100-51045	BOLT, socket	ソケットボルト	8			
46	11000-40820	BOLT	ボルト	6			
47	11400-20008	WASHER, spring	スプリングワッシャー	6			
48	00073-00001	CLAMP	クランプ	2			
49	02670-12500	CONNECTOR	コネクター	1			
50	19060-12050	HOSE ASSY	ホース ASSY	2			
51	19060-09060	HOSE ASSY	ホース ASSY	1			
52	15111-00010	ELBOW, 90°	エルボ,90°	1			
53	15090-01006	ELBOW, 90°	エルボ,90°	2			
54	15086-01410	ADAPTOR	アダプター	1			
55	15330-01045	CLAMP	クランプ	2			
56	15305-33050	HOSE	ホース	1			
57	15305-33050	HOSE ASSY	ホース ASSY	1			
58	15110-00006	ADAPTOR	アダプター	1			
59	15112-00006	ELBOW, 45°	エルボ,45°	1			

T B 68
24-2


L0-25a-2-L

 FUEL TANK 燃料タンク

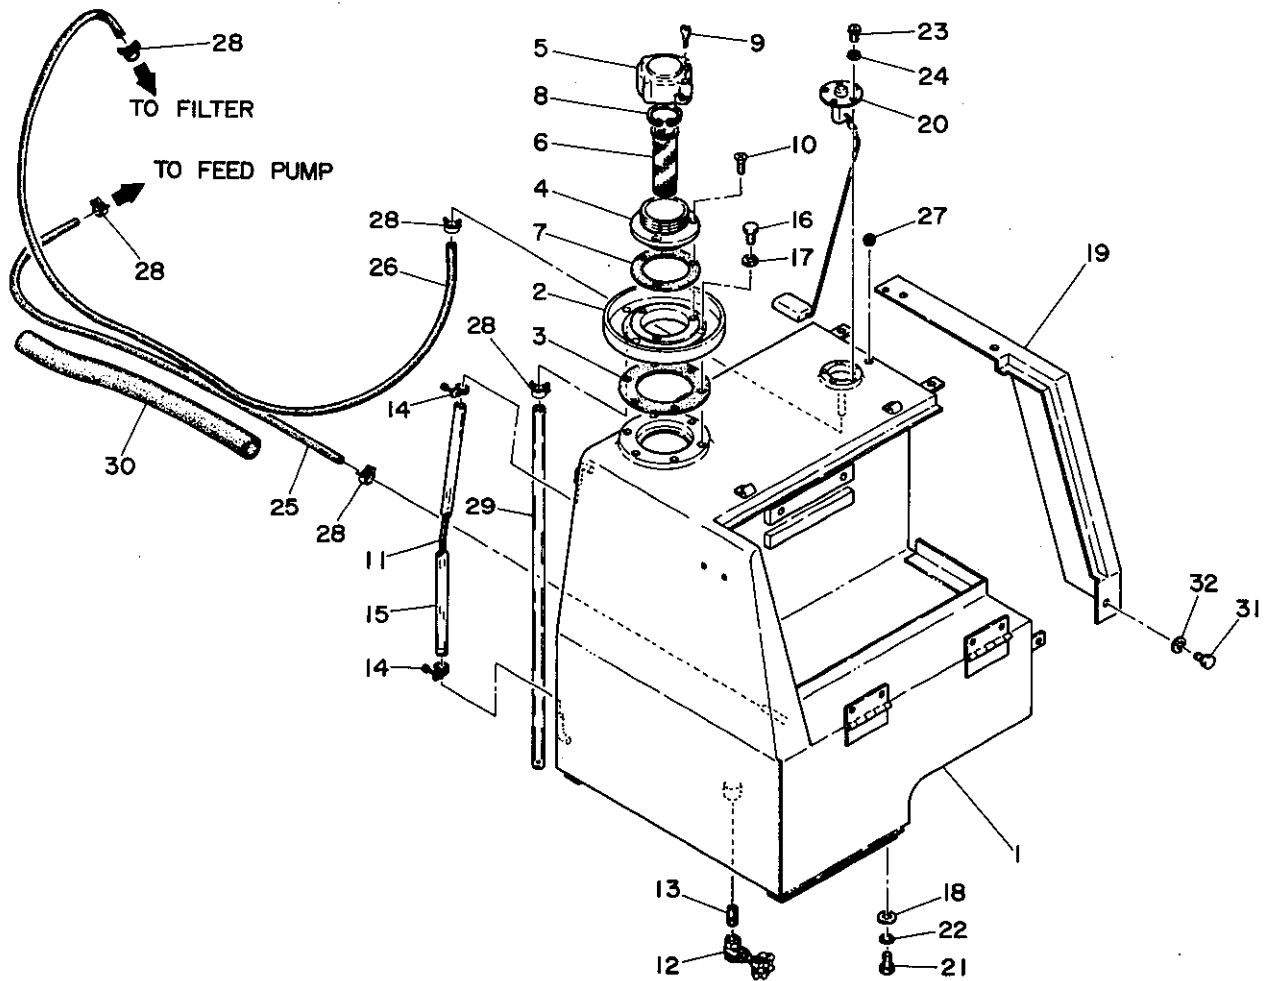

符号 Item	部品番号 Part number	Description	部品名称	数量 Q'ty	互換性 Chan.	適用号機 Serial No.	備 考 Remarks
29	15310-10075	HOSE	ホース	1		#68020~	
30	15313-35100	HOSE	ホース	1		#68020~	
31	11000-40816	BOLT	ボルト	3		#68020~	
32	11411-10008	WASHER, plain	プレーンワッシャー	3		#68020~	

 CABIN 1 キャビン 1

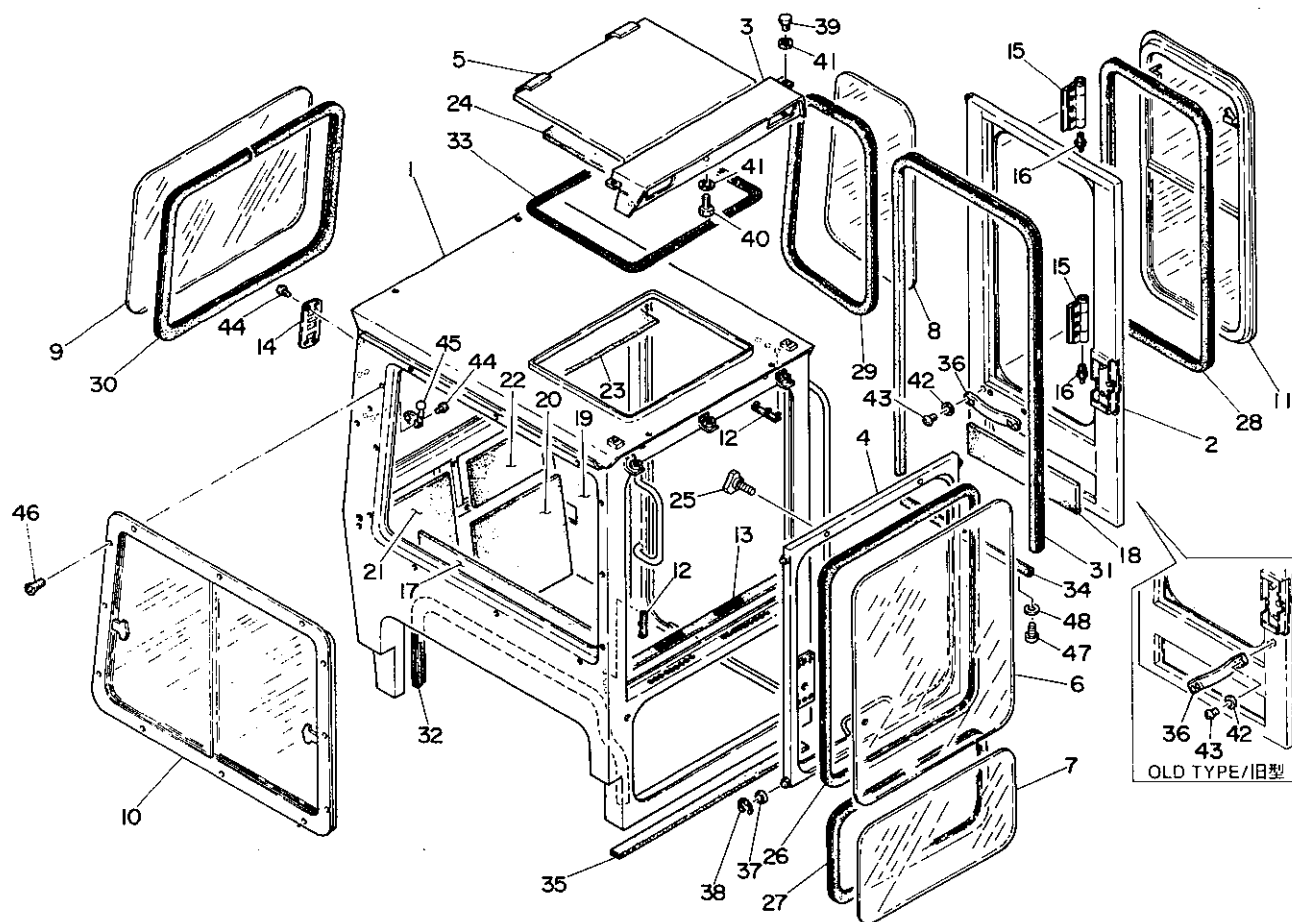

LO-35a-3-D


符号 Item	部品番号 Part number	Description	部品名称	数量 Q'ty	互換性 Chan.	適用号機 Serial No.	備考 Remarks
1	05686-15100	CABIN	キャビン	1		#68269~#68479	
	×05686-17100	CABIN	キャビン	1		#68480~	
2	05686-15200	DOOR	ドア	1		#68269~	
3	05686-13200	COVER	カバー	1			
4	05686-13300	SASH	サッシ	1			
5	05686-13400	COVER	カバー	1			
6	05686-10600	GLASS	ガラス	1			
7	05686-10700	GLASS	ガラス	1			
8	05686-10800	GLASS	ガラス	1			
9	05686-10900	GLASS	ガラス	1			
10	05686-11000	SASH	サッシ	1			
11	05686-11100	SASH	サッシ	1			
12	05686-14300	SPACER	スペーサー	4			
13	05686-11800	PLATE, rubber	ラバープレート	1			
14	01486-16100	COVER	カバー	1			
15	02686-01600	HINGE	ヒンジ	2			
16	15600-01675	☆NIPPLE, grease	☆グリスニップル	1			
17	05686-13500	ABSORBENT	キュウオンザイ	1			
18	05686-15300	ABSORBENT	キュウオンザイ	1		#68269~	
19	05686-13700	ABSORBENT	キュウオンザイ	1			
20	05686-13800	ABSORBENT	キュウオンザイ	1			
21	05686-13900	ABSORBENT	キュウオンザイ	1			
22	05686-14000	ABSORBENT	キュウオンザイ	1			
23	05686-14100	ABSORBENT	キュウオンザイ	1			
24	05686-14200	ABSORBENT	キュウオンザイ	2			
25	16539-60840	BOLT, knob	ノブボルト	2		#68480~	
26	16542-52337	H-RUBBER	H-ゴム	1			
27	16542-52331	H-RUBBER	H-ゴム	1			
28	16542-52320	H-RUBBER	H-ゴム	1			
29	16542-52210	H-RUBBER	H-ゴム	1			

HOE ATTACHMENT

ホーアタッチメント構成

HOE	アタッチメント
BUCKET	バケット
PIPING ; HOE 1	アタッチメント油圧配管 1
PIPING ; HOE 2	アタッチメント油圧配管 2

 STICKERS 銘 板

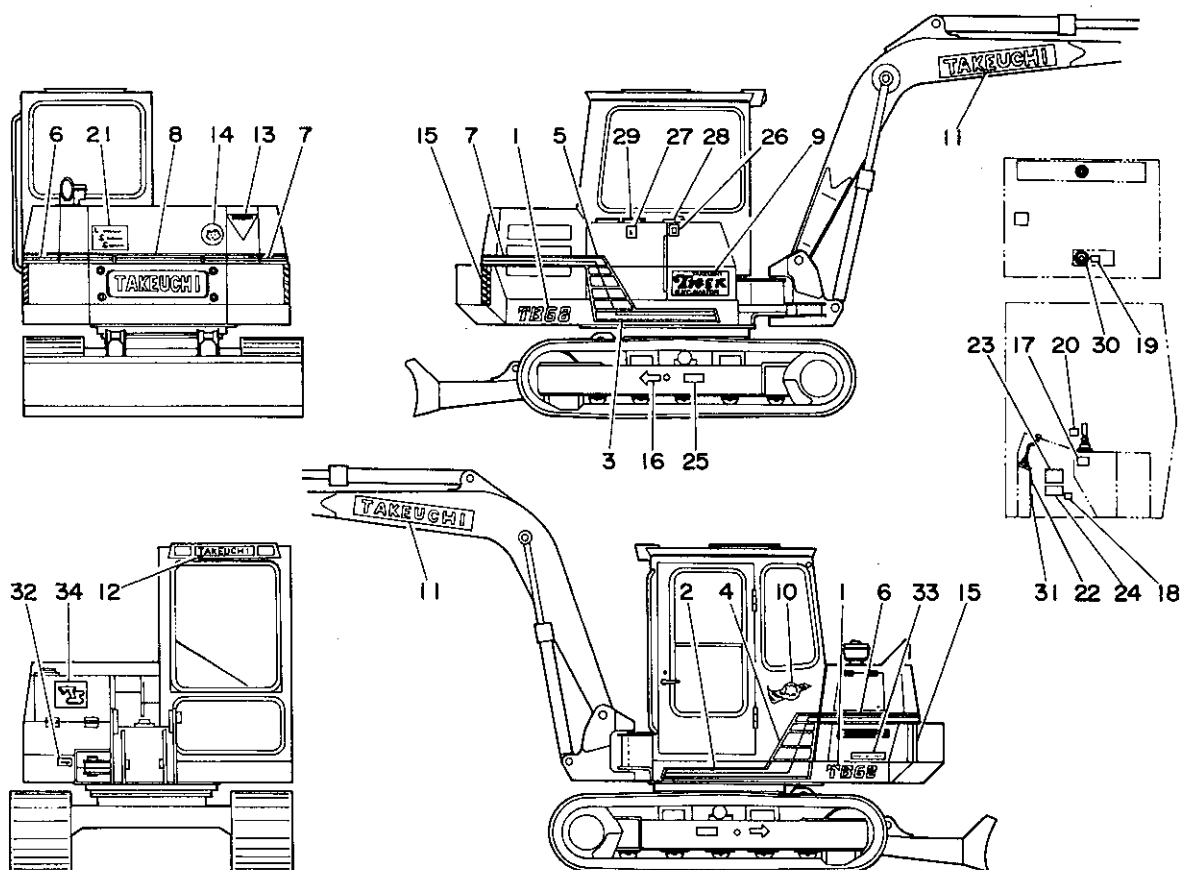

LO-43a-0-D


符号 Item	部 品 番 号 Part number	Description	部 品 名 称	数量 Q'ty	互換性 Chan.	適 用 号 機 Serial No.	備 考 Remarks
30	05693-10800	☆STICKER	☆ステッカー	1		#68234~	
31	01893-11200	☆STICKER	☆ステッカー	1		#68234~	
32	03093-01700	☆STICKER	☆ステッカー	1		#68234~	
33	01493-62400	☆STICKER	☆ステッカー	1		#68234~	
34	03093-01500	☆SYMBOL MARK	☆シンボルマーク	1		#68234~	

CONTROL VALVE ; SUB

コントロールバルブ (サブ)

#68003~#
 
#68003~#

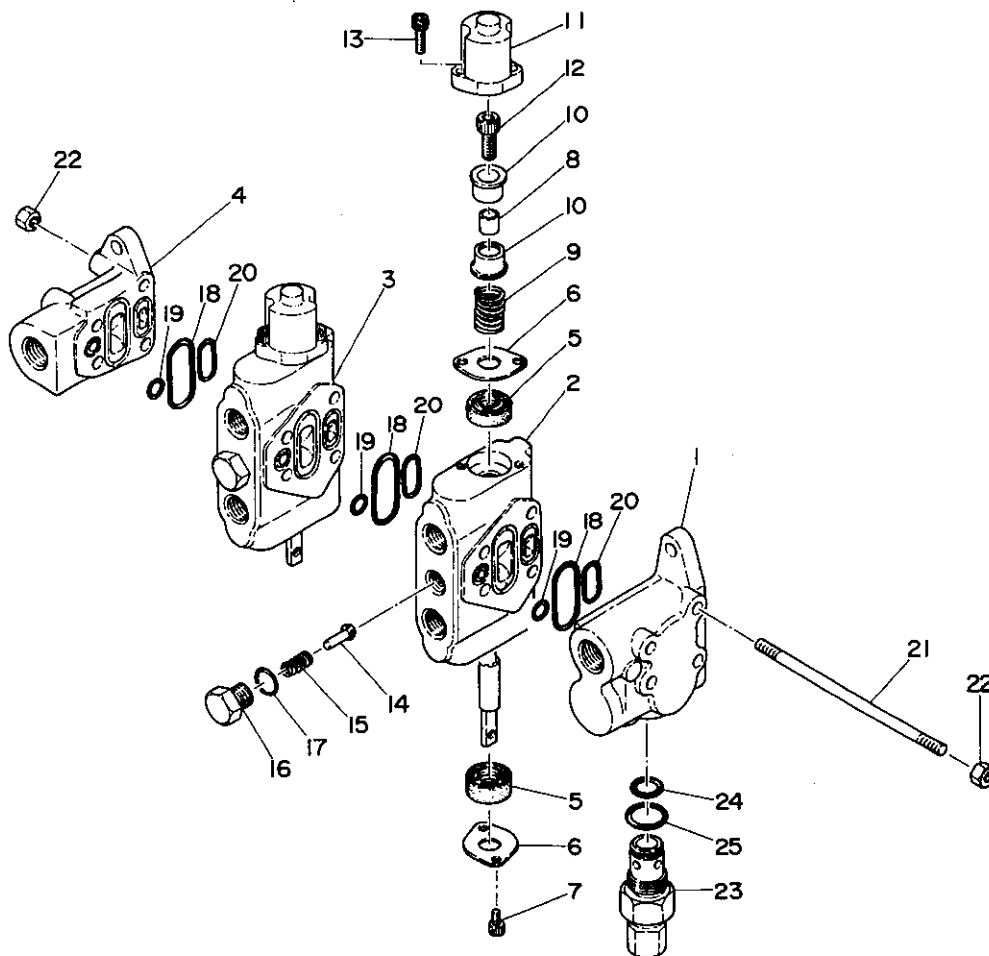

L0-48a-0-D

符号 Item	部品番号 Part number	Description	部品名称	数量 Q'ty	互換性 Chan.	適用号機 Serial No.	備 Remarks	考
0-1	19010-09800	VALVE ASSY, control	コントロールバルブ ASSY	1				
1	19010-04101	☆HOUSING, inlet	☆インレットハウジング	1				
2	19010-09817	☆BLOCK ASSY	☆ブロック ASSY	1			blade/ブレード	
3	19010-09818	☆BLOCK ASSY	☆ブロック ASSY	1			service/サービス	
4	19010-09803	☆HOUSING, outlet	☆アウトレットハウジング	1				
5	19010-09891	☆☆SEAL, oil	☆☆オイルシール	4				
6	19010-09841	☆☆HOLDER, seal	☆☆シールホルダー	4				
7	11100-40610	☆☆BOLT, socket	☆☆ソケットボルト	4				
8	19010-04191	☆SPACER	☆スペーサー	2				
9	19010-04156	☆☆SPRING	☆☆スプリング	2				
10	19010-09851	☆☆HOLDER, spring	☆☆スプリングホルダー	4				
11	19010-04162	☆COVER	☆カバー	2				
12	11100-40820	☆☆BOLT, socket	☆☆ソケットボルト	2				
13	11100-40620	☆☆BOLT, socket	☆☆ソケットボルト	4				
14	19010-09866	☆PLUNGER, check	☆チェックプランジャー	2				
15	19010-04157	☆☆SPRING	☆☆スプリング	2				
16	19010-04166	☆☆PLUG	☆☆プラグ	2				
17	14200-10140	☆☆O-RING	☆☆O-RING	2				
18	14329-00011	☆O-RING	☆O-RING	3				
19	14200-10101	☆☆O-RING	☆☆O-RING	3				
20	14200-10200	☆O-RING	☆O-RING	3				
21	19010-09806	☆TIE, rod	☆タイロッド	4				
22	11300-40008	☆NUT	☆ナット	8				
23	19010-00081	☆VALVE, relief	☆リリーフバルブ	1				
24	14329-00010	☆☆O-RING	☆☆O-RING	1				
25	14200-10220	☆☆O-RING	☆☆O-RING	1				

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

 
- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

BOOM CYLINDER ブームシリンダー


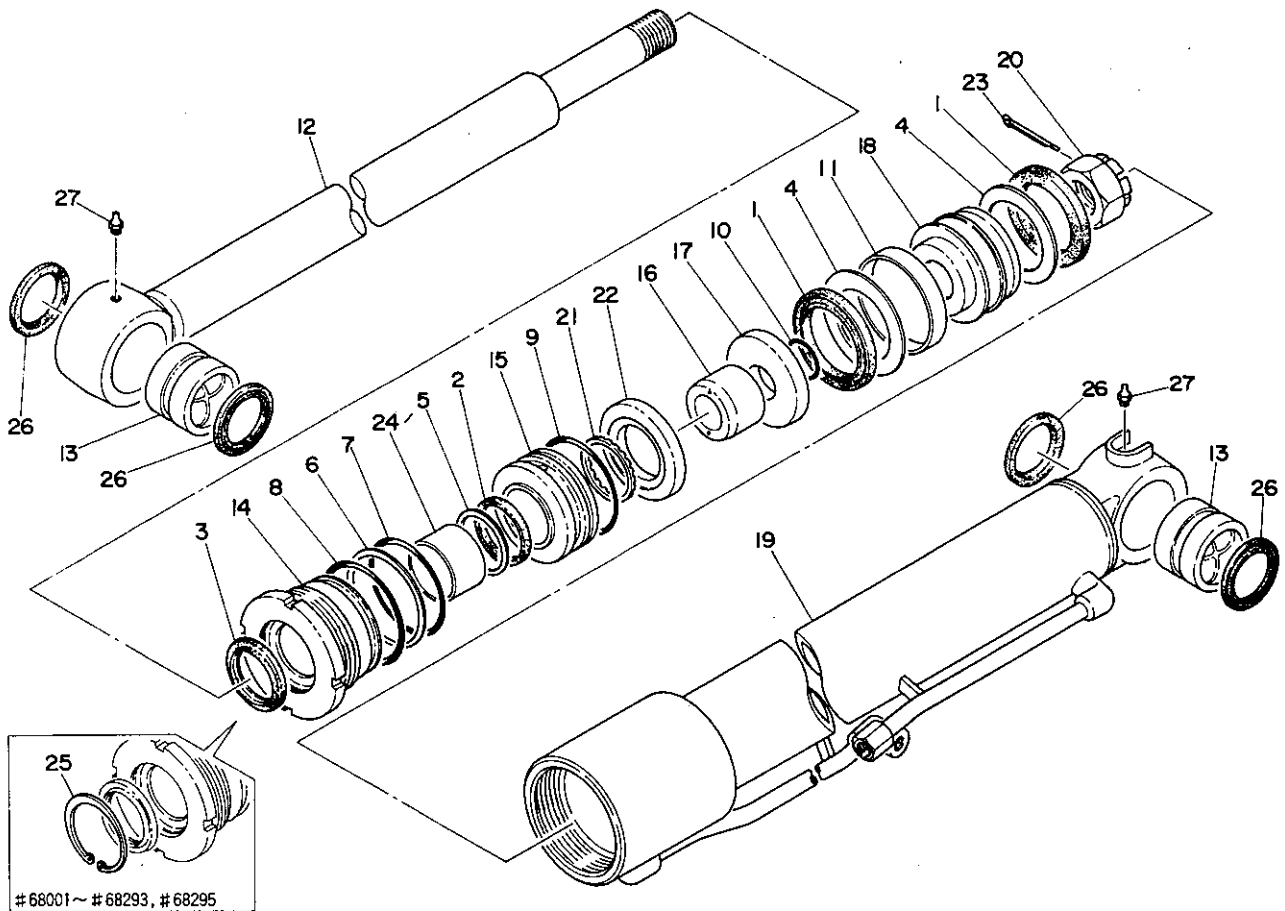


#68001~#68293, #68295

LO-51a-2-D

符号 Item	部品番号 Part number	Description	部品名称	数量 Q'ty	互換性 Chan.	適用号機 Serial No.	備考 Remarks
21	19000-26216	☆RING, cushion	☆クッションリング	1		#68195~#68232,	#68243~
22	19000-26215	☆SPACER	☆スペーサー	1		#68195~#68232,	#68243~
23	12100-00665	☆PIN, split	☆ワリピン	1			
24	13330-05540	☆BUSHING	☆ブッシング	1			
25	12210-00075	☆RING, snap	☆スナップリング	1		#68001~#68293,	#68295
26	14322-00055	☆SEAL, dust	☆ダストシール	4			
27	15600-01000	☆NIPPLE, grease	☆グリースニップル	2			

  TRAVEL MOTOR 走行モータ

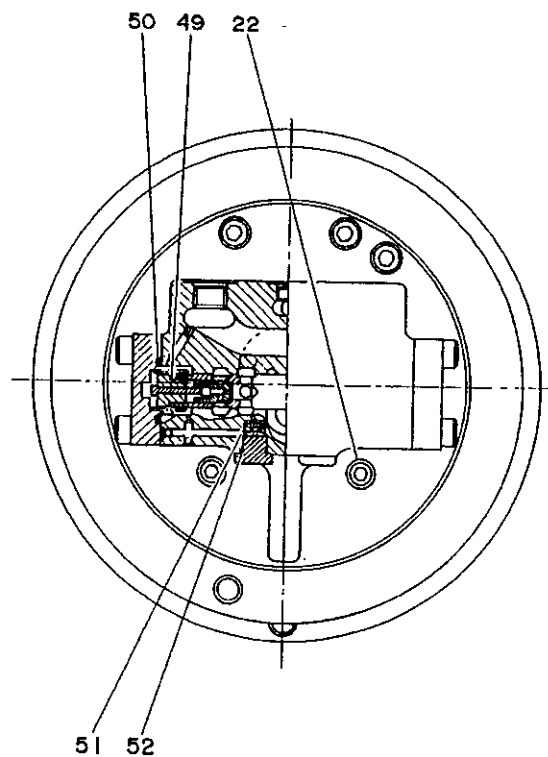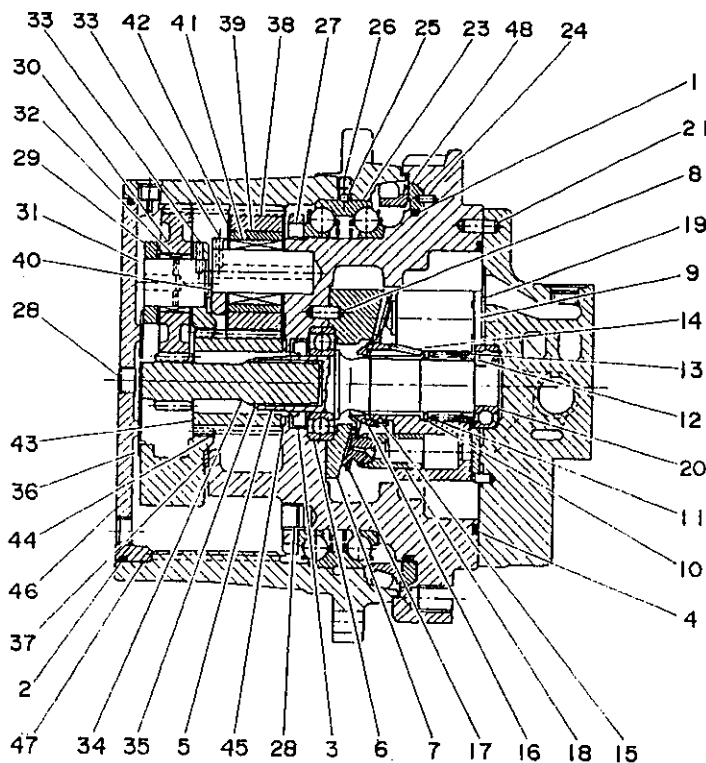

L0-56b-0-D

符号 Item	部品番号 Part number	Description	部品名称	数量 Q'ty	互換性 Chan.	適用号機 Serial No.	備考 Remarks
29	19120-00812	☆HOLDER	☆ホルダ	1			
30	19120-00813	☆GEAR, planetary	☆プラネタリギヤ	3			
31	19120-00814	☆SHAFT	☆シャフト	3			
32	19120-00815	☆CAGE & ROLLAR	☆ケージ & ローラ	3			
33	12130-00420	☆PIN, spring	☆スプリングピン	6			
34	19120-00817	☆GEAR, drive	☆ドライブギヤ	1			
35	19120-00818	☆RING, snap	☆スナップリング	1			
36	19120-00819	☆COLLAR	☆カラー	AR			t=1.0mm
	19120-00890	☆COLLAR	☆カラー	AR			t=1.6mm
	19120-00891	☆COLLAR	☆カラー	AR			t=2.3mm
37	19120-00820	☆COLLAR	☆カラー	1			
38	19120-00821	☆GEAR, planetary	☆プラネタリギヤ	3			
39	19120-00822	☆BUSHING	☆ブッシング	3			
40	19120-00823	☆SHAFT	☆シャフト	3			
41	19120-00824	☆CAGE & ROLLAR	☆ケージ & ローラ	3			
42	19120-00825	☆COLLAR	☆カラー	3			
43	19120-00826	☆GEAR, sun	☆サンギヤ	1			
44	19120-00827	☆RING, snap	☆スナップリング	1			
45	19120-00828	☆COLLAR	☆カラー	1			
46	19120-00829	☆COVER	☆カバー	1			
47	19120-00831	☆WIRE	☆ワイヤ	1			
48	19120-00892	☆SEAL, floating	☆フローティングシール	1			
49	14200-10125	☆O-RING	☆O-リング	2			
50	14201-10350	☆O-RING	☆O-リング	2			
51	14200-10100	☆O-RING	☆O-リング	2			
52	15203-10112	☆O-RING	☆O-リング	2			

L0-56b-0-L

T B 68
56A②

OPTION オプション

WIDE SHOE
BUCKET
WIDE BLADE
PIPING ; HOE SERVICE

巾広シュー
バケット
巾広排土板
アタッチメント油圧配管サービス

PUMP-OIL (INNER PARTS)

FIG.E111P

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用																I N T	Execution (E / #)
1- 17	PUMP ASSY-OIL		15010-90063	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
1	SHAFT-DRIVEN GEAR		15028-61502	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
2	SHAFT-DRIVE		15027-C6800	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
3	GEAR-DRIVE		15021-61503	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
4	KEY-WOODRUFF		00926-31300	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
7	GEAR-DRIVEN		15023-61503	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
8	STRAINER ASSY		15050-37501	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
9	VALVE		15132-37501	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
10	SPRING		15133-37500	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
11	PIN		00921-43510	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
12	WASHER		15136-37500	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
14	BOLT, W/WASHER		08120-82028	4	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
15	BOLT, W/WASHER		08120-61628	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
17	BODY		15012-C6800	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		



PISTON & CRANKSHAFT

FIG.E120A

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用														1 N T	Execution (E/#)
1- 3	PISTON SET (IZUMI MAKE)	S	12010-J5310	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
1- 3	PISTON SET (ATSUGI MAKE)	S	12010-J5311	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
2	PIN-PISTON		12024-37501	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
3	RING-SNAP		12032-37500	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
4	RING SET-PISTON (NPR MAKE)	S	12033-C6813	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
4	RING SET-PISTON (RIKEN MAKE)	S	12033-C6812	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
5- 8	ROD ASSY-CONN.		12100-37502	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
6	BOLT-CONN.ROD		12109-37502	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
7	NUT-CONN.ROD		12113-37501	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
8	BUSHING-CONN.		12030-37500	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (STD.SIZE D1D0)	S	12117-Y5200	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.0.25 D1D0)	S	12117-Y5201	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.0.50 D1D0)	S	12117-Y5202	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.0.75 D1D0)	S	12117-Y5203	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.1.00 D1D0)	S	12117-Y5204	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (STD.SIZE NDC)	S	12117-Y5210	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.0.25 NDC)	S	12117-Y5211	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.0.50 NDC)	S	12117-Y5212	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.0.75 NDC)	S	12117-Y5213	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
9	METAL-SHELL (O.S.1.00 NDC)	S	12117-Y5214	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
10. 11	CRANKSHAFT ASSY		12200-61503	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
11	NUT-CRANKSHAFT		12309-61503	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (STD.SIZE D1D0)	S	12207-61506	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.0.25 D1D0)	S	12209-61506	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.0.50 D1D0)	S	12210-61506	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.0.75 D1D0)	S	12211-61506	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.1.00 D1D0)	S	12212-61506	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (STD.SIZE NDC)	S	12207-61507	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.0.25 NDC)	S	12209-61507	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.0.50 NDC)	S	12210-61507	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.0.75 NDC)	S	12211-61507	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
13	METAL SET-SHELL (U.S.1.00 NDC)	S	12212-61507	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	



VALVE MECHANISM

FIG.E130A

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用																I N T	Execution (E / #)
27	PIN-SPLIT		08921-32510	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
28	ROCKER-VALVE A		13257-37503	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
29	ROCKER-VALVE B		13258-37503	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
30	ROCKER-VALVE C		13284-37503	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
31	ROCKER-VALVE D		13285-37503	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
32	SCREW-ADJUSTING		13287-37501	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
33	NUT		13288-37500	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
34	ROD-PUSH		13238-37502	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	
35	LIFTER-VALVE		13231-78201	12	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	



FILTER-FUEL (FITTING PARTS)

FIG.E164A

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用																I N T	Execution (E/#)
1	FILTER ASSY-FUEL (INNER PARTS E164P)		16400-90201	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
2	BRACKET-FILTER		16419-61501	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
3	BOLT,W/WASHER		08114-03062	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
4	BOLT		08100-82010	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
5	WASHER-SPRING		08915-23810	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
6	TUBE-FUEL		16817-Y8401	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
7	TUBE-FUEL		16817-Y8400	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
12	VALVE ASSY		16413-Y7500	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
13	GASKET		01351-11144	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
14	CONNECTOR-FUEL		17516-90000	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
15	CONNECTOR-FUEL		16669-90014	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		



NOZZLE (INNER PARTS)

FIG-E166P

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用																I N T	Execution (E/#)
4	SHIM T=1.06	S	16613-V0763	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.08	S	16613-V0764	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.10	S	16613-V0765	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.12	S	16613-V0766	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.14	S	16613-V0767	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.16	S	16613-V0768	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.18	S	16613-V0769	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.20	S	16613-V0770	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.22	S	16613-V0771	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.24	S	16613-V0772	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.26	S	16613-V0773	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.28	S	16613-V0774	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.30	S	16613-V0775	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.32	S	16613-V0776	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.34	S	16613-V0777	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.36	S	16613-V0778	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.38	S	16613-V0779	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.40	S	16613-V0780	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.42	S	16613-V0781	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.44	S	16613-V0782	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.46	S	16613-V0783	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.48	S	16613-V0784	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.50	S	16613-V0740	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.52	S	16613-V0741	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
4	SHIM T=1.54	S	16613-V0742	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
5	PIECE-DISTANCE		16616-37500	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
6	NUT-RETAINING		16629-37501	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
7	JOINT		16626-J2000	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
8	NUT		16618-90003	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
9	NOZZLE		16620-37501	6	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.



GOVERNOR (INNER PARTS)

FIG.E167S

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用																I N T	Execution (E / #)
33	SHIM T=0.5	S	19342-T9300	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
33	SHIM T=1.5	S	19342-T9301	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
34	SPRING		19303-90010	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
35	SPRING		19280-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
36	CAPSULE		19376-99113	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
37	NUT		19314-99016	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
38	GASKET		16778-99002	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
39	NUT-CAP		19290-99004	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
40	CAPSULE		19376-99114	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
41	NUT		19314-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
42	LEVER-SWIVEL		19276-90003	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
43	BUSH		19277-Z9001	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
44	O RING		19278-90000	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
45	RING-SNAP		19279-90000	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
46	SEAL-OIL		19386-99005	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
47	SHIM		19283-99014	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
48	SHIM		19283-90001	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
49	PLUG		19378-90002	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
50	KEY-WOODRUFF		19344-90000	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
51	COLLAR		16854-Z9000	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
52	WASHER		16854-90001	N	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
53	LEVER-GUIDE		19353-90005	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
54	LINK		19340-99002	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
55	RING-SNAP		19332-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
56	LEVER-TENSION		19331-99104	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
57	PIN		19350-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
58	LEVER		19334-90015	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
59	LEVER		19120-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
60	BOLT		19382-99017	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
61	O RING		19278-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
62	CAP		19124-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.
63	SPRING		19131-90001	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.



PUMP-WATER (INNER PARTS)

FIG.E210P

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用																I N T	Execution (E / #)
1- 12	PUMP ASSY-WATER		21010-61505	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
2	VANE		21022-61505	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
3	SEAT-FLOATING		21027-61500	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
4	BEARING ASSY		21035-37502	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
5	SEAL		21026-31W00	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
6	HUB		21054-37503	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
7	RING-SNAP		21055-37500	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
8	GASKET		21014-61503	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
9	SCREW-MACHINE		08320-61410	2	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
10	COVER		21013-61502	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
11	PLUG-TAPER		00931-30610	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
12	WIRE-LOCK		21043-37500	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		



MOTOR-STARTING (FITTING PARTS)

FIG.E233A

Key-No.	Description 部 品 名 称	C O D E	Part Number 部 品 番 号	Quantity Per Section 個 数 及 び 適 用																I N T	Execution (E / #)
1	MOTOR ASSY-STARTING (INNER PARTS E233P) (FOR 12V)		23300-61504	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
				*	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
2	BOLT,W/WASHER		08121-23028	3	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
3	SCREW-MACHINE		08360-41012	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
4	WASHER-SPRING		08915-13410	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
5	WASHER-PLAIN		08915-43410	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
6	NUT-LOCK		08911-30810	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		
7	WASHER-SPRING		08915-13810	1	.	.	.	.	.	.	.	.	.	.	.	.	.	.	.		



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to **CLICKING** the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL