



TEREX®

Parts Manual

Serial number range

TH-1955

From serial n.: 19925

Part No. 645012

Rev B

July 2009

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Parts Stocking List

Required Parts

The following parts are required to perform maintenance procedures as outlined in the TH-1955 Operator's and Service Manuals.

Description	Part No.
Diesel Fuel Filter	07.4501.0139
Engine Oil Filter	07.4501.0138
Hydraulic Oil Filter Cartridge	07.0700.0023
Engine Air Filter Primary Cartridge	07.0700.0037
Engine Air Filter Secondary Cartridge	07.0700.0036
Oil Filter Immersed in the Tank	09.4604.0004
Manual, PERKINS	07.0501.0019

Used Varnishes

Description	Type
Terex Grey	RAL 7012
Terex White	RAL 1013
Terex Matte Black for Cylinders	RAL 9005

Manuals

Terexlift offers the following support documents for these models:

Title	Part No.
Terex TH 1955 Operator's Manual, 1 st edition	57.0100.5605
Terex TH 1955 Service Manual, 1 st edition (English)	57.4400.9201

Part list abbreviations

ZN	Zinc-plated
RNFT	Reinforced
FLNG	Flanged
PSNT	Heavy type
OC	Eye
PSRT	Through-coupling
CNTF	Hole centre

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	09.0805.0000	Hose D8x15Inch.118		32	09.0803.0510	Hex-Head Cap..... 1	
2	04.0227.0051	Light hose-clamp DN 10/16 LG 9..... 4		33	07.4529.0119	O-Ring 1	
3	09.0805.0000	Carbonpress Pipe D8x15 Inch. 236		34	01.0023.0056	Stop Nut M12..... 1	
4	51.1000.5200	Counterweight 1		35	01.0031.0151	Washer D12..... 3	
5	01.4001.0025	Screw TE M24x60 2		36	01.0001.0405	Screw TE M12x60 1	
6	01.4032.0000	Spring washer D24 2		37	01.0031.0059	Plain Washer D16..... 2	
7	51.0800.3800	Hitch 1		38	01.0001.0260	Screw M8x45..... 2	
8	01.0001.0703	Screw TE M16x35 2		39	01.4032.0003	Spring Washer D8 2	
9	01.4032.0007	Spring washer D16 ZN Reinforced 2		40	01.0031.0299	Plain Washer D8..... 2	
10	54.0000.0027	Hitch Pin 1					
11	09.0803.0026	Spring Split 1					
12	01.0001.0156	Screw TE M6x20 4					
13	01.4032.0002	Spring washer D6 4					
14	01.0031.0298	Plain washer D6 4					
15	01.0019.0103	Stop Nut..... 4					
16	09.0803.0421	Hinge 1					
17	52.1100.8000	Cover 1					
18	09.0803.0422	Lock 1					
19	51.0811.2000	Support..... 1					
20	52.1100.9101	Cover 1					
21	01.4001.0078	Screw TE M8x20 4					
22	09.0803.0352	Pincers M8..... 4					
23	51.0600.2700	Diesel Tank 1					
24	09.4661.0022	Chain 1					
25	09.4661.0021	Air Inlet 1					
26	09.4661.0020	Plug 1					
27	01.4001.0045	Screw TE M5x10 3					
28	01.0001.0254	Screw TE M8x20 1					
29	09.0805.0000	Hose D8x15Inch.118					
30	56.0013.0001	Fuel Gauge..... 1					
31	01.4001.0006	Screw TE M4x10 6					

605657
Hydraulic Oil Tank Rev A

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	07.0700.0006	Cover	1				
2	07.0700.0023	Filter Cartridge	1				
3	07.0700.0028	Transmitter.....	1				
5	09.4604.0047	Combined Filter	1				
6	01.0023.0054	Stop Nut M 8	10				
7	01.0001.0355	Screw TE M10x25	4				
8	01.4032.0004	Washer D10	4				
9	01.0031.0055	Plain Washer D8.....	10				
10	01.4032.0011	Washer D 4	6				
11	01.0031.0054	Plain Washer D 6	6				
12	01.4003.0012	Screw M 4X16	6				
13	56.0013.0028	Low Oil Level Indicator	1				
14	04.4220.0063	Hex-head Cap DA 1" Gas.....	2				
15	06.0442.0107	Copper Washer JC 33	3				
16	07.0726.0102	Inspection Hatch	1				
17	53.3301.0005	Rubber Gasket 240 X 330	1				
18	51.0600.9100	Oil Tank.....	1				
19	53.3001.4800	Oil Manifold.....	1				
20	09.4661.0002	Oil Level Indicator.....	1				
21	06.0442.0111	Washer	1				
22	09.4661.0016	Filter.....	1				
23	09.4661.0014	Plug	1				
24	09.0805.0087	Rubber Pipe D.48/58	1				
25	56.0013.0000	Thermistor M16 X 1,5.....	1				
26	06.0442.0102	Copper Washer JC 17	2				
27	04.0220.0055	Seal TE 1/2" GAS	1				
28	06.0442.0103	Copper Washer JC 21	1				
29	06.0442.0102	Copper Washer JC 17	2				
30	04.0220.0053	Cap TE 3/8" Gas.....	1				
31	04.0227.0144	Clamp	2				
32	09.4604.0004	Filter.....	1				

605662
Front Axle - Steering Cylinder Rev B

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	07.0709.0908	Cylinder	1				
2	634397	O-Ring	2				
3	07.0709.0909	Axial Rod	2				
4	07.0709.0930	Cylindrical Head Screw	4				
5	07.0709.0417	Gasket Kit	1				

605918
Diesel Engine - Exhaust System - Injection - Accelerator Rev B

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	09.4656.0012	Complete Throttle Pedal.....	1	38	09.0805.0094	Connecting Sleeve 60/70 LG.220..	1
2	04.0227.0067	Clamp DN 50/70 LG12	3	39	07.0700.0031	Connecting Sleeve 60/65 LG=68...	1
3	09.0803.0008	Toggle joint D6	2	40	09.4604.0045	Indicator.....	1
4	01.0001.1476	Screw TE M10X45.....	2	41	51.0810.5400	Bracket	1
5	01.0031.0056	Plain Washer D10.....	6	42	01.0001.0256	Screw TE M8x25	2
6	01.0023.0055	Self-Locking Nut M10	4	43		505919 Ref. 1	Ref
7	04.4227.0007	Clamp S16 D32	5	44		505919 Ref 29	Ref
9	53.3100.0034	Muffler.....	1	45	07.4501.0139	Diesel Fuel Filter.....	1
10	09.0803.0347	Clamp TFCV 64-67.....	1	46	07.0501.0029	Diesel Filter Cartridge.....	1
13	55.0208.0046	Steel Exhaust Pipe Assembly.....	1	47	01.0001.1465	Screw TE M 8X40.....	2
14	09.4645.0032	Throttle Cable	1	48	01.0031.0299	Plain Washer D 8.....	4
15	09.0803.0027	Soundproof Muffler Cap	1	50	51.0810.1100	Bracket	1
16	07.0501.0024	Complete Filter	1	51	01.0001.0355	Screw TE M10X25.....	2
17	07.0700.0037	Main Component	1	52	01.0031.0301	Plain Washer D10.....	2
18	07.0700.0036	Secondary Component.....	1	53	01.4032.0004	Spring Washer D10	2
19	01.0023.0054	Nut M8	4	54	09.0805.0000	Hose D8X15	Inch 35,43
20	07.0700.0033	Compression Spring	2	55	09.0805.0000	Hose D8X15	Inch 21,65
21	07.0700.0034	Ring	1	56	01.0001.0357	Screw TE M10X35.....	2
22	07.0700.0035	Output Valve	1	58	09.0806.0057	Pipe Fitting 1/2-20	2
23	09.4604.0060	Air Filter Kit.....	1	59	04.0227.0051	Clamp DN 10/16	4
24	01.0023.0053	Self-locking Nut M 6	4	60	09.0806.0056	Pipe Fitting 1/8M X 1/4F	1
25	07.0730.0052	Pedal	1	61	09.0806.0007	Pipe Fitting T 1/4 MFF	1
26	07.0730.0053	Removable Pedal	1	62	09.0806.0008	Pipe Fitting RA.....	2
27	09.0803.0536	Spring	1				
28	51.0806.2800	Bracket	1				
29	01.0001.0252	Screw TE M8x16	2				
30	07.0730.0056	Crinkle Washer	2				
31	07.0730.0057	Twist Spring	1				
32	01.0001.0257	Screw TE M8x30	1				
33	07.0730.0058	Nut 8MA.....	1				
34	01.0003.0205	Screw TCEI M8x25.....	1				
35	01.0031.0055	Washer M8	1				
36	09.4604.0055	Air filter cap.....	1				

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	07.0723.0468	Hatch on Front Dashboard Support.....	1	35	56.0016.0079	Right lever	1
2	07.0723.0469	Rear Side Dashboard	1	36	56.0017.0065	Key	2
3	07.0723.0470	Upper Front Dashboard.....	1	37	56.0017.0070	Hazard Warning Lights Switch.....	1
4	07.0723.0471	Lower Front Dashboard.....	1	38	09.0803.0572	Spring	4
5	56.0015.0007	Box Dashboard.....	1				
6	54.0100.0099	Braking disk	1				
7	56.0017.0049	Contact	1				
8	07.0703.0429	Steering Mode Selector	1				
9	51.0811.4009	External Support.....	1				
10	56.0017.0046	Parking Brake Switch	1				
11	56.0017.0044	Contact	1				
12	56.0017.0039	Cap	4				
13	51.0811.1700	Load Chart Support	1				
14	56.0017.0047	Continuous Flow Switch	1				
15	56.0017.0054	Cabin Fan Switch	1				
16	56.0016.0088	Instruments Panel.....	1				
17	07.0723.0039	Screw.....	9				
18	56.0017.0037	Contact	3				
19	56.0016.0090	Left Steering Column Switch Unit..	1				
20	07.0723.0104	Spring	6				
21	07.0723.0480	Air Inlet + Frame.....	2				
22	51.0811.4008	Internal Support	1				
23		Starting Switch					
"	07.0703.0472	Up To S/N 20071	1				
"	56.0017.0073	From S/N 20072	1				
24	56.0017.0038	Windscreen Wiper Switch.....	1				
25		Starting Switch Decal					
"	09.4618.0114	Up To S/N 20071	1				
"	09.4618.1259	From S/N 20072	1				
26	56.0017.0063	Auxiliary Hydraulic Switch	1				
27	56.0017.0035	Contact	2				
28	56.0017.0055	Road Lights Push Button.....	1				
34	56.0017.0064	Hazard Warning Lights Contact.....	1				

58.2511.9007A
 Hydraulic Quick Coupling for Attachment (Hydraulic Part 1) Rev A

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	51.0807.1800	Bracket	1				
2	01.0001.0254	Screw TE M 8X20.....	2				
3	01.4032.0003	Spring Washer D8	2				
4	01.0031.0055	Plain Washer D8.....	4				
5	04.4240.0011	Deflector Manifold.....	1				
6	01.0001.0207	Screw TE M 8X60.....	2				
7	01.0023.0054	Self-locking Nut M8	2				
8	04.0220.0051	Cap	1				
9	06.0442.0101	Copper Washer JC 13	1				
10	06.0442.0103	Copper Washer JC 21	6				
11	04.0600.0016	Pipe Fitting CMF G1/2 ES LG. 45 .	1				
12	04.0600.0087	Pipe Fitting MFK 90 1/2 BSP.....	2				
13	04.4210.0019	Female Coupling 1/2	1				
14	04.0600.0017	Pipe Fitting 1/2X 1/2 BSP	4				
15	04.0600.0091	Pipe Fitting CMF 1/2 ES LG. 25	1				
16	04.0607.0110	Pipe Fitting 1/2BSP X 11/16-16 ORFS.....	2				
18	04.4210.0018	Male Coupling 1/2.....	1				
19	04.0602.0581	Flexible Hose R2 X 1/2 F90 15,75inch	2				
20	04.0605.0934	Flexible Hose R2 X 3/8 F90 37,4inch	1				
21	04.0605.0933	Flexible Hose R2 X 3/8 F90 39,37inch	1				
22	01.0001.0156	Screw TE M 6X20.....	2				
23	01.4032.0002	Spring Washer D6	2				
24	01.0031.0054	Washer D 6.....	2				
25	53.3001.0500	Boom Pipe Manifold	1				
26	54.0000.0194	Fork Attachment Pin	1				

Hydraulic System - Auxiliary Circuits

605896
Rev A

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	04.0607.0111	Pipe Fitting 1/2BSP x 13/16-16 ORFS.....	2				
2	04.0605.0351	Flexible Hose R2 X 1/2 LG.1800 ...	2				
3	53.3402.2200	Pipe	1				
4	53.3402.2300	Pipe	1				
5	04.0605.0613	Equipment Lock Cylinder Pipe	1				
6	04.0605.0614	Equipment Lock Cylinder Pipe	1				
7	01.0001.0257	Screw M 8X30 UNI 5739 8.8 ZN ...	4				
8	09.0803.0061	Plate	4				
9	09.0803.0060	Clamp	4				
10	04.0607.0124	Pipe Fitting 90°M-M	2				
11	04.0605.0626	Flexible Hose R2 X 1/2 LG.1100 ...	2				

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	53.3001.4900	Manifold	1				
2	04.4227.0023	Clamp	1				
3	09.0805.0088	Rubber Pipe R4 X 1-1/4inch	38				
4	01.0003.0255	Screw TCEI M10X25 UNI5931	4				
5	04.4032.0004	Spring Washer	4				
6	04.0607.0107	Pipe Fitting 3/4"	2				
7	06.0401.0123	Seal	1				
8	04.0605.0649	Hose 3/4 LG. 730	1				
9	04.4227.0027	Clamp	1				
10	09.0806.0020	Hose Holder D=1" X D=30.....	1				
11	04.0600.0055	Reduction GWR 1"1/2 M X 1" F.....	1				
12	04.4224.0000	Ball Valve DN 1 1/2.....	1				
13	06.0442.0107	Copper Washer JC 33	3				
14	06.0442.0111	Copper Washer JC 49	1				

605911
Fuse Box Rev A

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	07.0703.0080	Fuse 5A	3				
2	07.0703.0148	Fuse 10A	12				
3	634973	Fuse 15A	4				
4	07.0703.0071	Fuses 25A.....	1				
5	56.0005.0008	Relay - Fuse Support.....	1				
6	56.0021.0078	Timer Relay	1				
7	07.0703.0487	Intermittence Relay.....	1				
8	56.0021.0104	Complete Fuse and Relay Card	1				

09.4610.0025
Seat Spring Rev A

Item	Part No.	Description	Qty.	Item	Part No.	Description	Qty.
1	09.4610.0025	Seat spring	1				

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL