

**TOYOTA  
INDUSTRIAL  
VEHICLE**

**PARTS CATALOG**

02-3FGC30

02-FGC28

No.G107-2

**TOYOTA MOTOR CORPORATION  
TOYODA AUTOMATIC LOOM WORKS, LTD.**

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

# FIG. INDEX

 

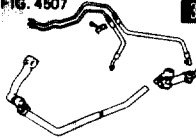 
 



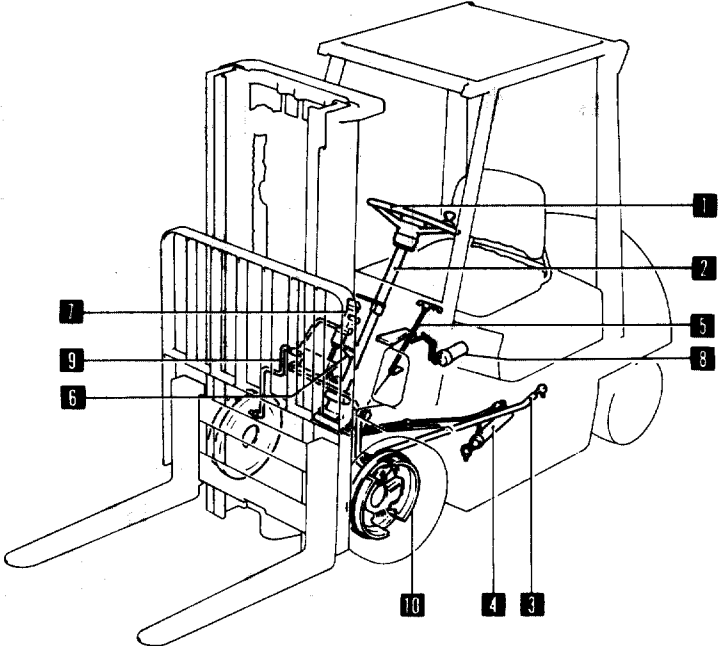 


 
<p>FIG. 4501</p>  <p>ステアリングホイール Steering Wheel</p>	<p>FIG. 4502</p>  <p>ステアリングポスト Steering Post</p>	<p>FIG. 4507</p>  <p>ドラッグリンクトパイピング Drag Link &amp; Piping</p>	<p>FIG. 4508</p>  <p>パワーシリンダ Power Cylinder</p>	<p>FIG. 4601</p>  <p>パーキングブレーキ Parking Brake</p>	<p>FIG. 4701</p>  <p>ブレーキペダル Brake Pedal</p>	<p>FIG. 4704</p>  <p>ブレーキバルブ Brake Valve</p>
<p>シャシ グループ CHASSIS GROUP (2/2)</p> 						<p>FIG. 4706</p>  <p>ブレーキアキュムレータ Brake Accumulator</p>
						<p>FIG. 4714</p>  <p>ブレーキパイプ Brake Pipe</p>
						<p>FIG. 4715</p>  <p>ブレーキ Brake</p>




FIG. 1701  
MANIFOLD

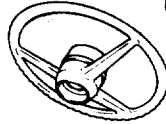1701

5P

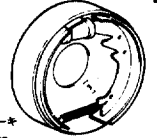85/01

 5P

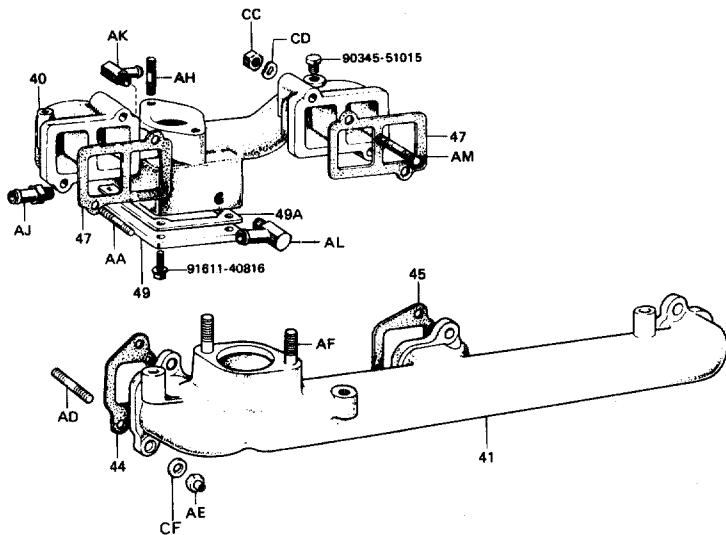

PART NAME CODE	PART NAME	QTY
1701-40	MANIFOLD, INTAKE	1
1701-41	MANIFOLD, EXHAUST	1
1701-44	GASKET, EXHAUST MANIFOLD, NO.1	2
1701-45	GASKET, EXHAUST MANIFOLD, NO.2	1
1701-47	GASKET, INTAKE MANIFOLD, NO.1	2
1701-49	PLATE, WATER STOPPER	1
1701-49A	GASKET, WATER STOPPER PLATE	1
1701-AA	BOLT, STUD	2
1701-AD	BOLT, STUD	6
1701-AE	NUT	6
1701-AF	BOLT, STUD	2
1701-AH	BOLT, STUD	2
1701-AJ	UNION	1
1701-AK	ELBOW	1
1701-AL	ELBOW	1
1701-AM	BOLT, STUD	2
1701-CC	NUT	4
1701-CF	WASHER, PLATE	6

1701-007B


FIG. 1904  
STARTER

1904

5P

85/01

 5P..MTM (D1L CLUTCH)

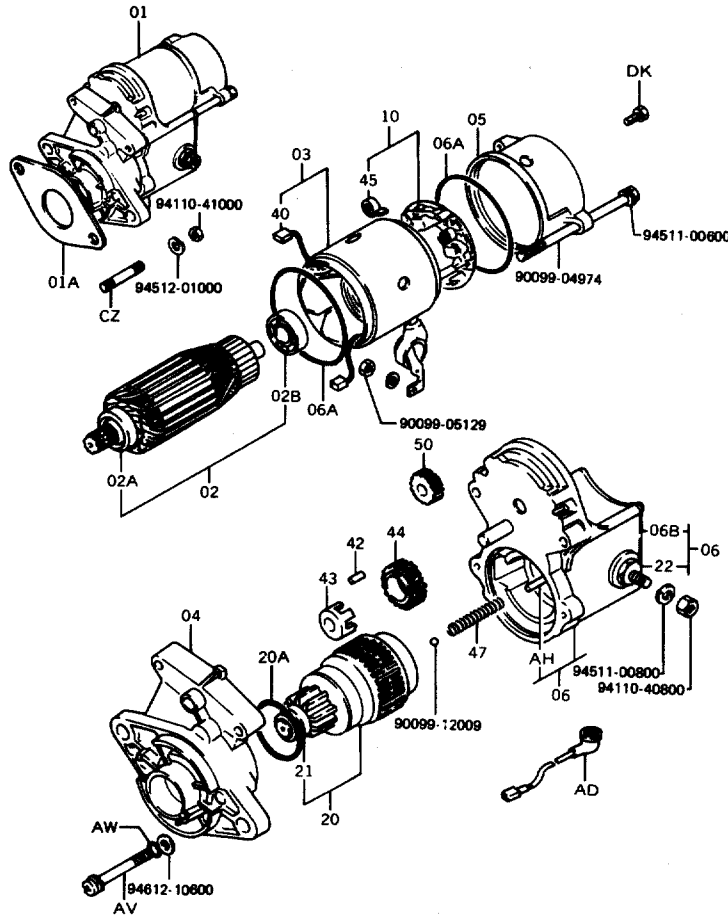

PART NAME	PART NAME	QTY
CODE		
1904-01	STARTER ASSY	1
1904-01A	GASKET (FOR STARTER HOUSING)	1
1904-02	ARMATURE ASSY, STARTER	1
1904-02A	BEARING, ARMATURE, NO.1	1
1904-02B	BEARING, ARMATURE, NO.2	1
1904-03	YOKE ASSY, STARTER	1
1904-04	HOUSING ASSY, STARTER DRIVE	1
1904-05	FRAME ASSY, COMMUTATOR END	1
1904-06	SWITCH ASSY, MAGNET	1
1904-06A	PACKING, RUBBER (FOR STARTER YOKE)	2
1904-06B	PACKING (FOR MAGNET SWITCH END COVER)	1
1904-10	HOLDER ASSY, STARTER BRUSH	1
1904-20	CLUTCH SUB-ASSY, STARTER	1
1904-20A	RING, O (FOR STARTER CLUTCH)	1
1904-21	PINION SUB-ASSY, STARTER	1
1904-22	CHIP SUB-ASSY, CONTACT	1
1904-40	BRUSH, STARTER	1
1904-42	ROLLER, STARTER IDLE GEAR CLUTCH	5
1904-43	RETAINER, STARTER IDLE GEAR	1
1904-44	GEAR, STARTER IDLE	1
1904-45	SPRING, STARTER BRUSH	4
1904-47	SPRING, STARTER MAGNET SWITCH RETURN	1
1904-50	GEAR, STARTER PINION	1
1904-AD	WIRE, LEAD	1
1904-AG	COVER, END FRAME	1
1904-AH	PLUNGER SUB-ASSY, CONTACTOR	1
1904-AV	SCREW, W/WASHER	2
1904-AW	RING, O	2
1904-AZ	BOLT, STUD	2
1904-DK	SCREW, W/RING, O	2

1904-058

PART NAME CODE	PART NAME	QTY
2311-02	ADAPTOR ASSY	1
2311-02A	GASKET (FOR ADAPTOR)	1
2311-10	VALVE ASSY, SOLENOID, LPG	1
2311-11	CONNECTION ASSY, HIGH PRESSURE, LPG	1
2311-12	VALVE ASSY, SERVICE	1
2311-13	SWITCH ASSY, LPG	1
2311-14	SWITCH ASSY, OIL PRESSURE (FOR LPG)	1
2311-15	RELAY ASSY (FOR LPG)	1
2311-16	VALVE ASSY, SOLENOID, GASOLINE	1
2311-17	VALVE ASSY, RELIEF, LPG	1
2311-18	COUPLING ASSY, LPG	1
2311-30	SLEEVE SUB-ASSY, VALVE JOINT	1
2311-31	HOSE SUB-ASSY, (CONTAINER TO FILTER)	1
2311-33	PIPE SUB-ASSY, FUEL (VALVE TO REGULATOR)	1
2311-34	PIPE SUB-ASSY, FUEL, NO.1 (FOR GASOLINE)	1
2311-35	PIPE SUB-ASSY, FUEL, NO.2 (FOR GASOLINE)	1
2311-40	WRENCH, LPG HOSE	1
2311-41	PACKING, TANK VALVE JOINT	1
2311-42	HOSE, FUEL MAIN (REGULATOR TO CARBURETOR)	1
2311-43	HOSE, FUEL SLOW (REGULATOR TO CARBURETOR)	1
2311-45	HOSE, WATER, NO.1	1
2311-46	HOSE, WATER, NO.2	1
2311-47	HOSE, VACUUM	1
2311-AA	NUT, HEXAGON	1
2311-AB	NUT, UNION	1
2311-AC	GROMMET	1
2311-AF	UNION	1
2311-AG	BRACKET, REGULATOR	1
2311-AH	CLAMP	1
2311-AI	LABEL	1
2311-AJ	JOINT, WATER HOSE	1
2311-AL	CLAMP	1
2311-AM	SCREW	1
2311-AN	UNION	1
2311-AD	HOLDER	1
2311-AQ	CLAMP	2
2311-AS	STAY SUB-ASSY	1
2311-AT	HARNESS, WIRE	1
2311-AU	HARNESS	1
2311-AV	JOINT	1
2311-AX	BOLT, STUD	1
2311-AY	UNION	2
2311-BA	UNION	1
2311-BB	UNION	1
2311-BC	CLAMP	1
2311-BD	HARNESS	1
2311-BE	PLUG, PLATE	1
2311-BF	GASKET, FUEL PLUG	1
2311-BG	COVER, FUEL TANK	1
2311-BH	CAP, FUEL	1
2311-BI	BRACKET, SPRING	1
2311-BJ	CLAMP	2
2311-BK	ELBOW	2
2311-BL	NUT	1
2311-BM	WASHER	1
2311-BN	BRACKET	1
2311-BD	FITTING	1
2311-BP	3-WAY SUB-ASSY	1
2311-BR	NUT	1
2311-BS	SCREW	1
2311-CE	CONNECTOR	1
2311-CF	CONNECTOR	1
2311-CG	CLAMP	1
2311-CL	BOLT, W/WASHER	2

PART NAME CODE	PART NAME	QTY
2311-CR	BOOT	1

FIG. 3201  
TORQUE CONVERTER HOUSING

 
 
 
 
 
 
 
3201

ATM

85/01

ATM

01K ... (INCL. ● )  
03K ... (INCL. ⊗ )

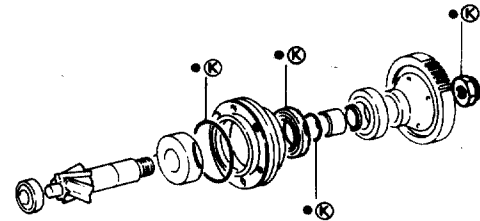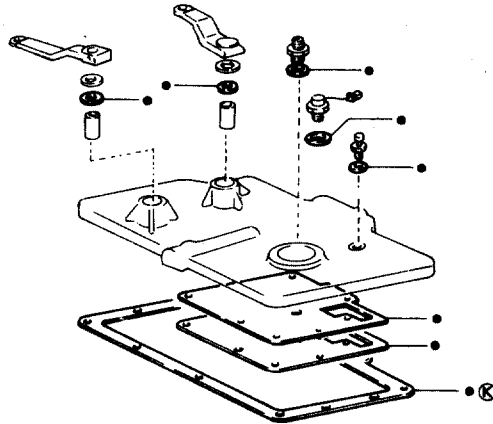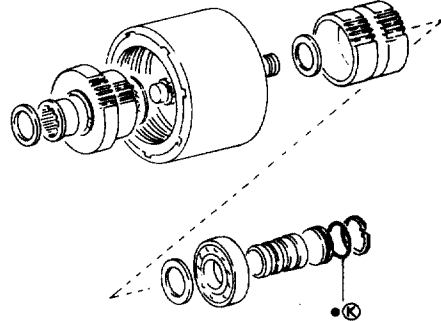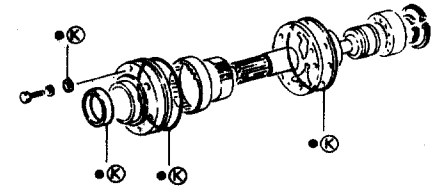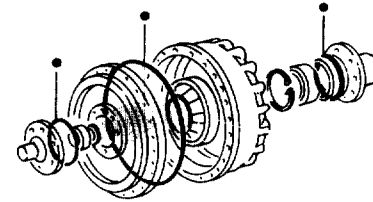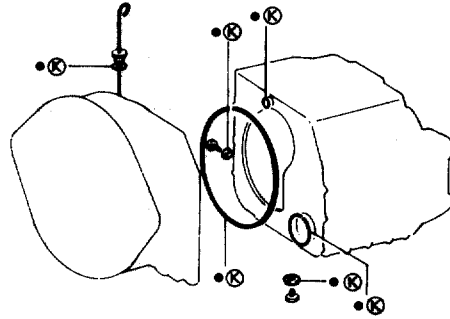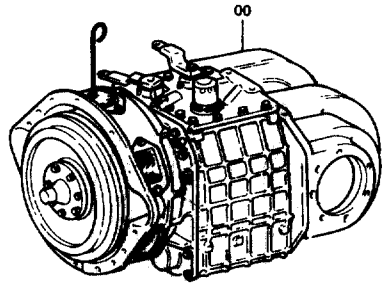

3201-014A


FIG. 3213  
TORQUE CONVERTER PIPING

3213

ATM

85/01

 ATM

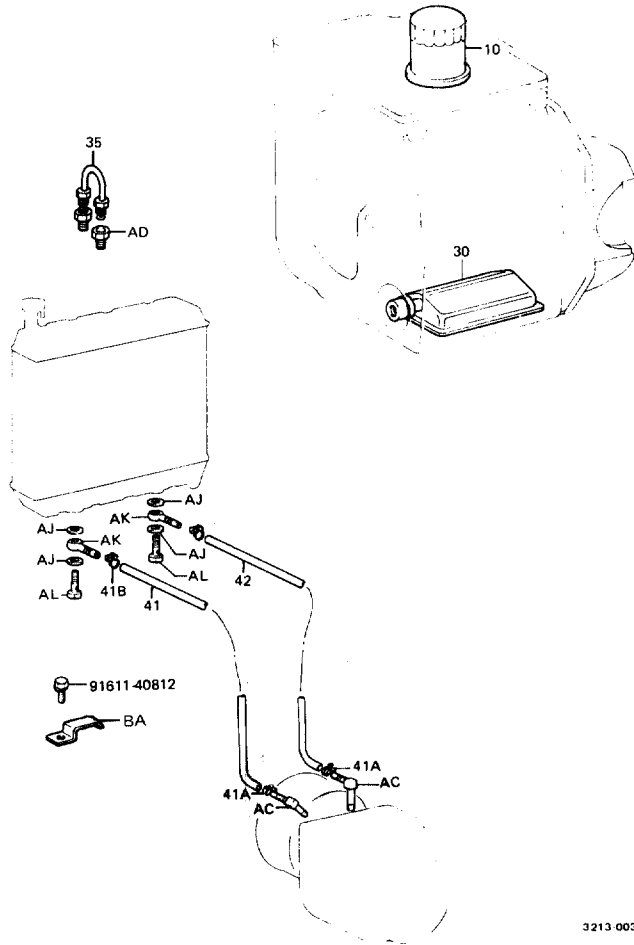

3213-003A

PART NAME CODE	PART NAME	QTY
3213-10	FILTER ASSY, OIL	1
3213-30	STRAINER SUB-ASSY, OIL (SCREEN)	1
3213-35	PIPE SUB-ASSY, CASE TO CASE	1
3213-41	HOSE, LOW PRESSURE, NO.1 (FOR OIL COOLER)	1
3213-41A	CLAMP, NO.1 (FOR OIL COOLER HOSE)	2
3213-41B	CLAMP, NO.2 (FOR OIL COOLER HOSE)	2
3213-42	HOSE, LOW PRESSURE, NO.2 (FOR OIL COOLER)	1
3213-AC	ELBOW	2
3213-AD	UNION	2
3213-AJ	PACKING	4
3213-AK	UNION	2
3213-AL	BOLT, UNION	2
3213-BA	CLAMP, HOSE	1

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL




FIG. 4715  
DRUM BRAKE

4715

ATM














85/01

 ATM

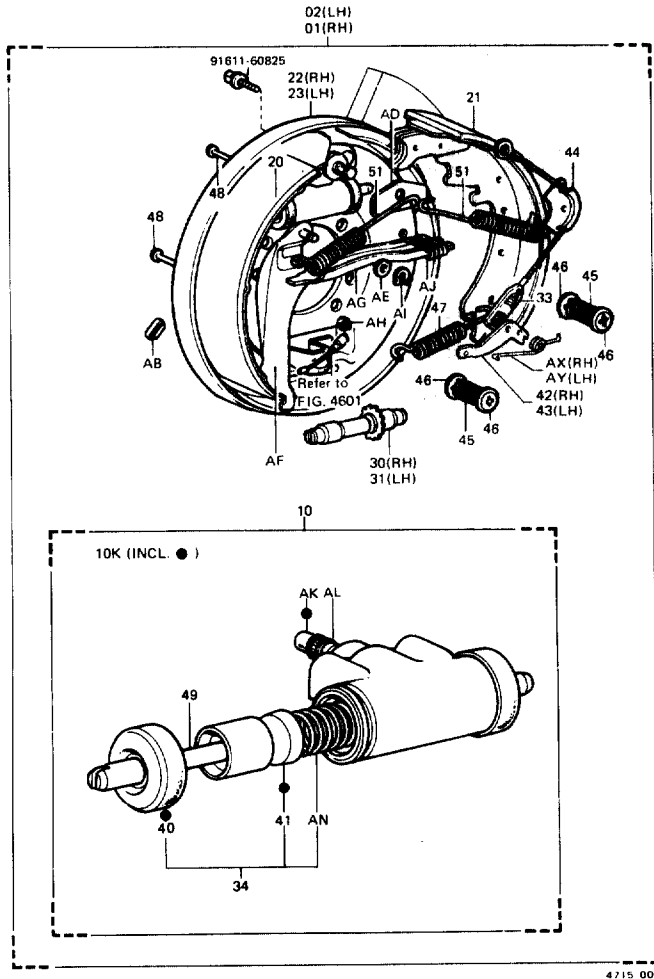

PART NAME CODE	PART NAME	QTY
4715-01	BRAKE ASSY, RH	1
4715-02	BRAKE ASSY, LH	1
4715-10	CYLINDER ASSY, WHEEL	2
4715-10K	CYLINDER O/H KIT, WHEEL	2
4715-20	SHOE SUB-ASSY (FOR FRONT OR UPPER)	2
4715-21	SHOE SUB-ASSY (FOR REAR OR LOWER)	1
4715-22	PLATE SUB-ASSY, BACKING, RH	1
4715-23	PLATE SUB-ASSY, BACKING, LH	1
4715-30	SCREW SUB-ASSY, ADJUSTING, RH	1
4715-31	SCREW SUB-ASSY, ADJUSTING, LH	1
4715-33	CABLE & FITTING SUB-ASSY	2
4715-34	CUP SUB-ASSY, PISTON	2
4715-40	BOOT, WHEEL CYLINDER	4
4715-41	CUP, WHEEL CYLINDER PISTON	4
4715-42	LEVER, AUTOMATIC ADJUSTMENT, RH	1
4715-43	LEVER, AUTOMATIC ADJUSTMENT, LH	1
4715-44	GUIDE, CABLE	2
4715-45	SPRING, SHOE HOLD DOWN	4
4715-46	CUP, SHOE HOLD DOWN	8
4715-47	SPRING, ADJUSTER	2
4715-48	PIN, SHOE HOLD DOWN	4
4715-49	ROD, PUSH	4
4715-51	SPRING, ANCHOR TO SHOE	4
4715-AB	COVER, HOLE	2
4715-AD	PLATE, SHOE GUIDE	2
4715-AE	WASHER, SPRING	2
4715-AF	LEVER SUB-ASSY, PARKING	1
4715-AG	STRUT, LEVER	1
4715-AH	RING, SNAP	2
4715-AI	RETAINER	1
4715-AJ	SPRING, STRUT TO SHOE	2
4715-AK	CAP, BLEEDER SCREW	2
4715-AL	SCREW, BLEEDER	2
4715-AN	SPRING, WHEEL CYLINDER	2
4715-AX	SPRING, LEVER RETURN, RH	1
4715-AY	SPRING, LEVER RETURN, LH	1

             ATM

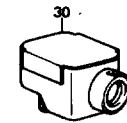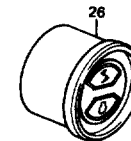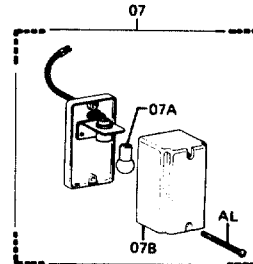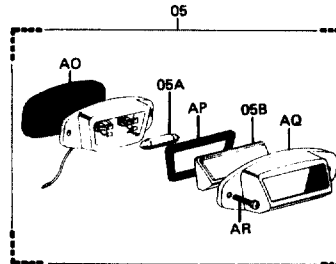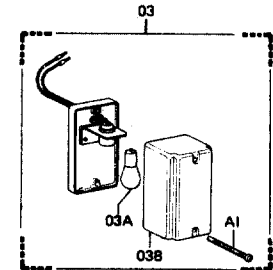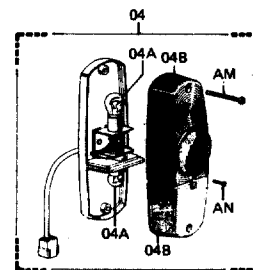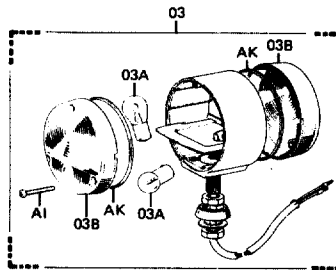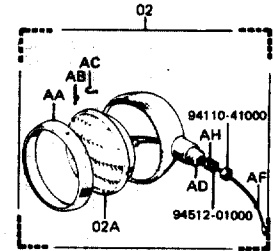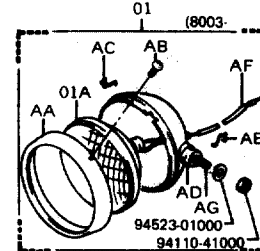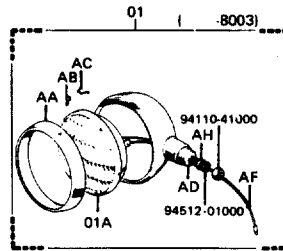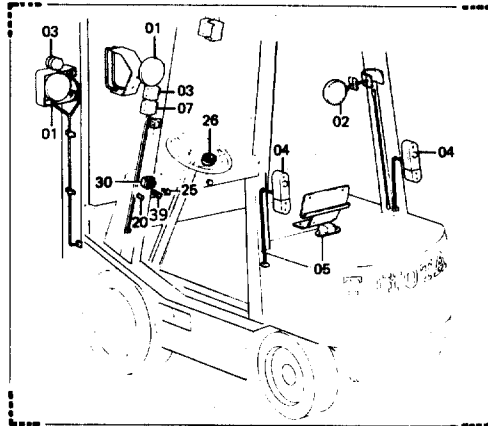

5611-002C

G107-001


FIG. 6302  
CHAIN & CHAIN WHEEL

6302

FSV

85/09

 FSV

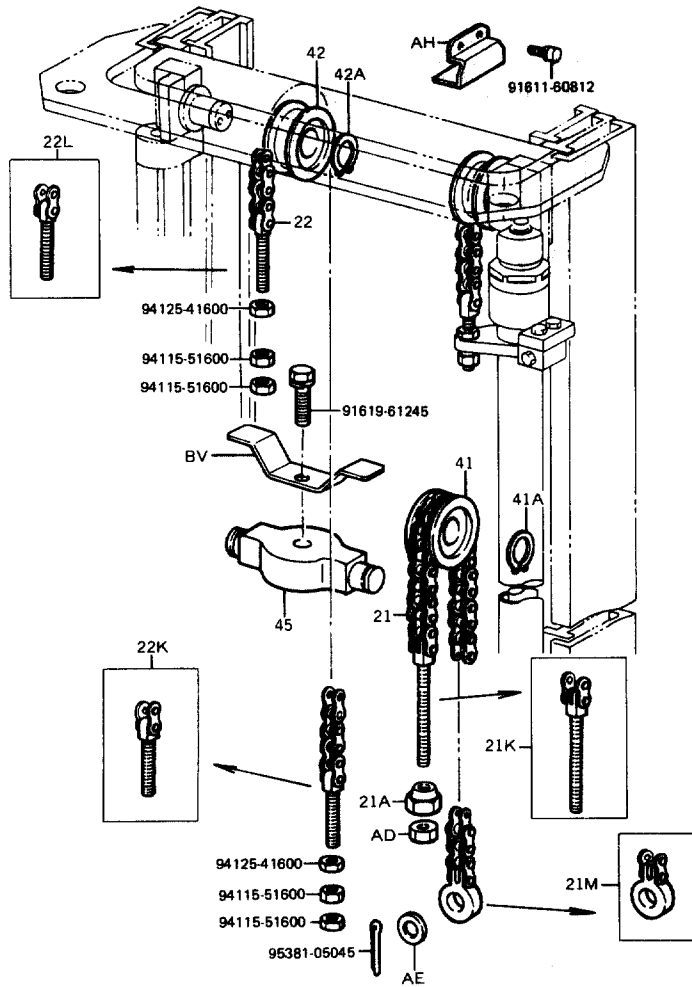

PART NAME	PART NAME	QTY
CODE		
6302-21	CHAIN SUB-ASSY (FRONT)	2
6302-21A	NUT, CHAIN ADJUST (FRONT)	2
6302-21K	BOLT KIT, CHAIN ANCHDR, NO.1 (FRONT)	2
6302-21M	BOLT KIT, CHAIN EYE (FRONT)	2
6302-22	CHAIN SUB-ASSY (REAR)	2
6302-22K	BOLT KIT, CHAIN ANCHDR, NO.1 (REAR)	2
6302-22L	BOLT KIT, CHAIN ANCHDR, NO.2 (REAR)	2
6302-41	WHEEL, CHAIN (FRONT)	2
6302-41A	RING, SHAFT SNAP (FOR FRONT CHAIN WHEEL)	2
6302-42	WHEEL, CHAIN (REAR)	4
6302-42A	RING, SHAFT SNAP (FOR CHAIN WHEEL)	4
6302-45	SUPPORT, CHAIN WHEEL	1
6302-AD	NUT, HEXAGON	2
6302-AE	WASHER, CHAIN SPECIAL	2
6302-AH	COVER, CHAIN WHEEL	2

G107-001E


FIG. 6709  
DIL CONTROL VALVE LINK

6709

FSV

85/01

 FSV (4-WAY)

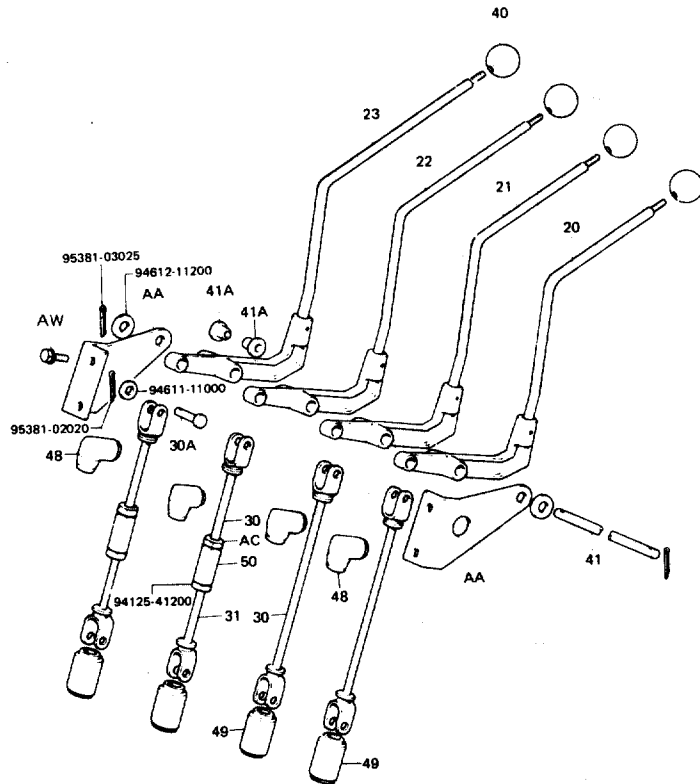

6709-003A

PART NAME	PART NAME	QTY
CODE		
6709-20	LEVER SUB-ASSY, CONTROL VALVE, NO.1	1
6709-21	LEVER SUB-ASSY, CONTROL VALVE, NO.2	1
6709-22	LEVER SUB-ASSY, CONTROL VALVE, NO.3	1
6709-23	LEVER SUB-ASSY, CONTROL VALVE, NO.4	1
6709-30	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.1	1
6709-30A	PIN (FOR CONTROL VALVE LEVER ROD)	4
6709-31	ROD SUB-ASSY, CONTROL VALVE LEVER, NO.2	1
6709-40	KNOB, OIL CONTROL VALVE LEVER	2
6709-41	PIN, OIL CONTROL VALVE LEVER	1
6709-41A	BUSH (FOR LEVER PIN)	4
6709-48	BOOT, CONTROL VALVE LINK, NO.1	2
6709-49	BOOT, CONTROL VALVE LINK, NO.2	2
6709-50	TURNBUCKLE	1
6709-AA	BRACKET SUB-ASSY	1
6709-AC	NUT	1
6709-AW	BOLT	4


FIG. 6701  
OIL PUMP

6701

FV

85/01

 FV

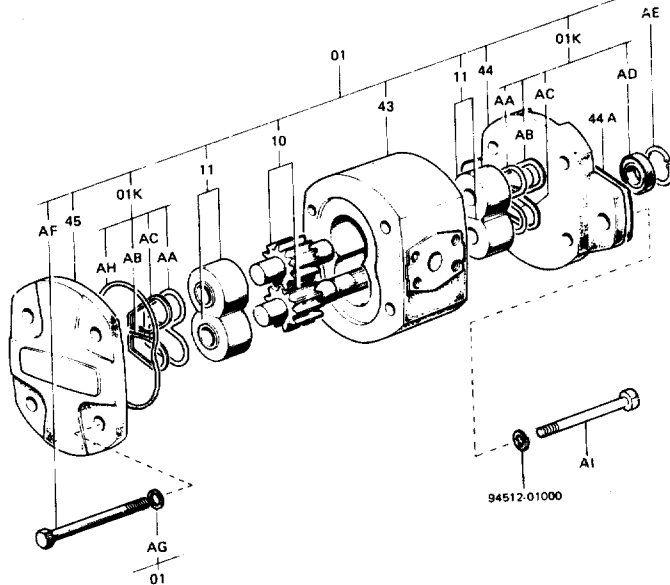

6701-005A

PART NAME CODE	PART NAME	QTY
6701-01	PUMP ASSY, OIL	1
6701-01K	PUMP O/H KIT, OIL	1
6701-10	GEAR SET	1
6701-11	BUSH SET, NO.1	2
6701-43	BODY	1
6701-44	FLANGE, MOUNTING	1
6701-44A	PACKING, OIL PUMP	1
6701-45	COVER	1
6701-AA	SEAL, BUSHING	2
6701-AB	RING, BACKING, RH	2
6701-AC	RING, BACKING, LH	2
6701-AD	SEAL, OIL	1
6701-AE	RING, SNAP	1
6701-AF	BOLT	4
6701-AG	WASHER, SPRING	4
6701-AH	SEAL, BODY	2
6701-AI	BOLT	2


FIG. 6101  
MAST

6101

M

85/01

 M

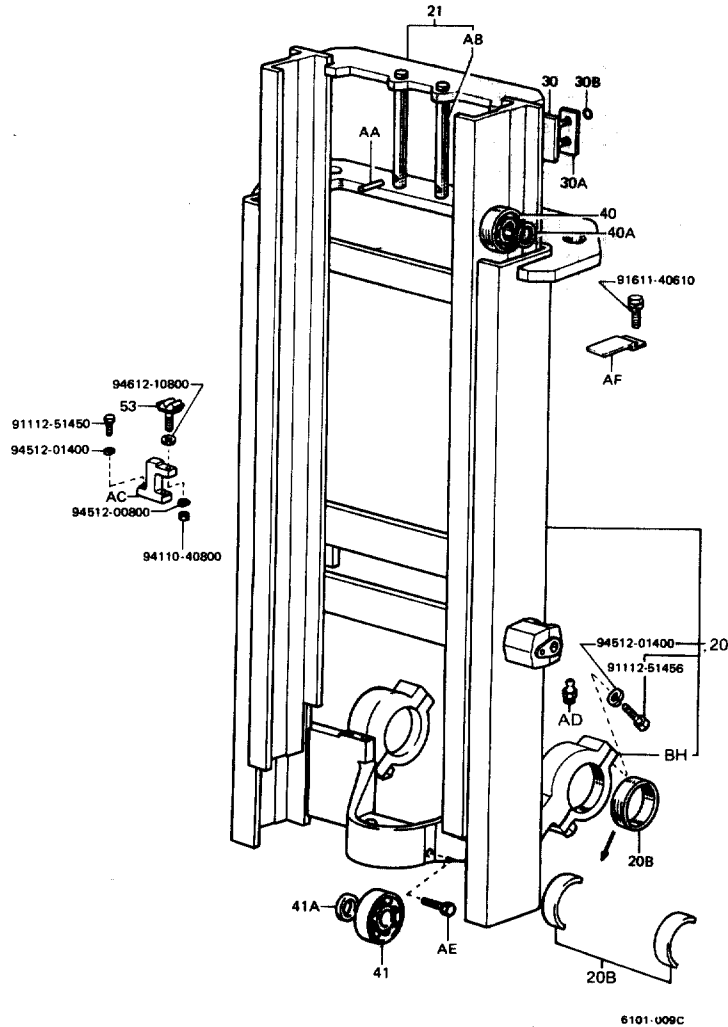

PART NAME CODE	PART NAME	QTY
6101-20	MAST SUB-ASSY, OUTER	1
6101-20B	BUSH, MAST SUPPORT	1
6101-21	MAST SUB-ASSY, INNER	1
6101-30	STRIP SUB-ASSY, OUTER MAST	2
6101-30A	SHIM, OUTER MAST STRIP	99
6101-40	ROLLER, LIFT (FOR OUTER MAST)	2
6101-40A	SHIM, LIFT ROLLER (FOR OUTER MAST)	99
6101-41	ROLLER, LIFT (FOR INNER MAST)	2
6101-41A	SHIM, LIFT ROLLER (FOR INNER MAST)	99
6101-53	CUSHION, MAST (FOR INNER MAST)	2
6101-AA	PIN, SPRING	2
6101-AB	GUIDE, CHAIN WHEEL SUPPORT	2
6101-AC	STOPPER, INNER MAST	2
6101-AD	FITTING, GREASE	2
6101-AE	BOLT, STOPPER	1
6101-AF	COVER, ROLLER	2
6101-BH	CAP, MAST SUPPORT	2

FIG. 6709  
OIL CONTROL VALVE LINK

 
6709

M

85/01

M

M (3-WAY)

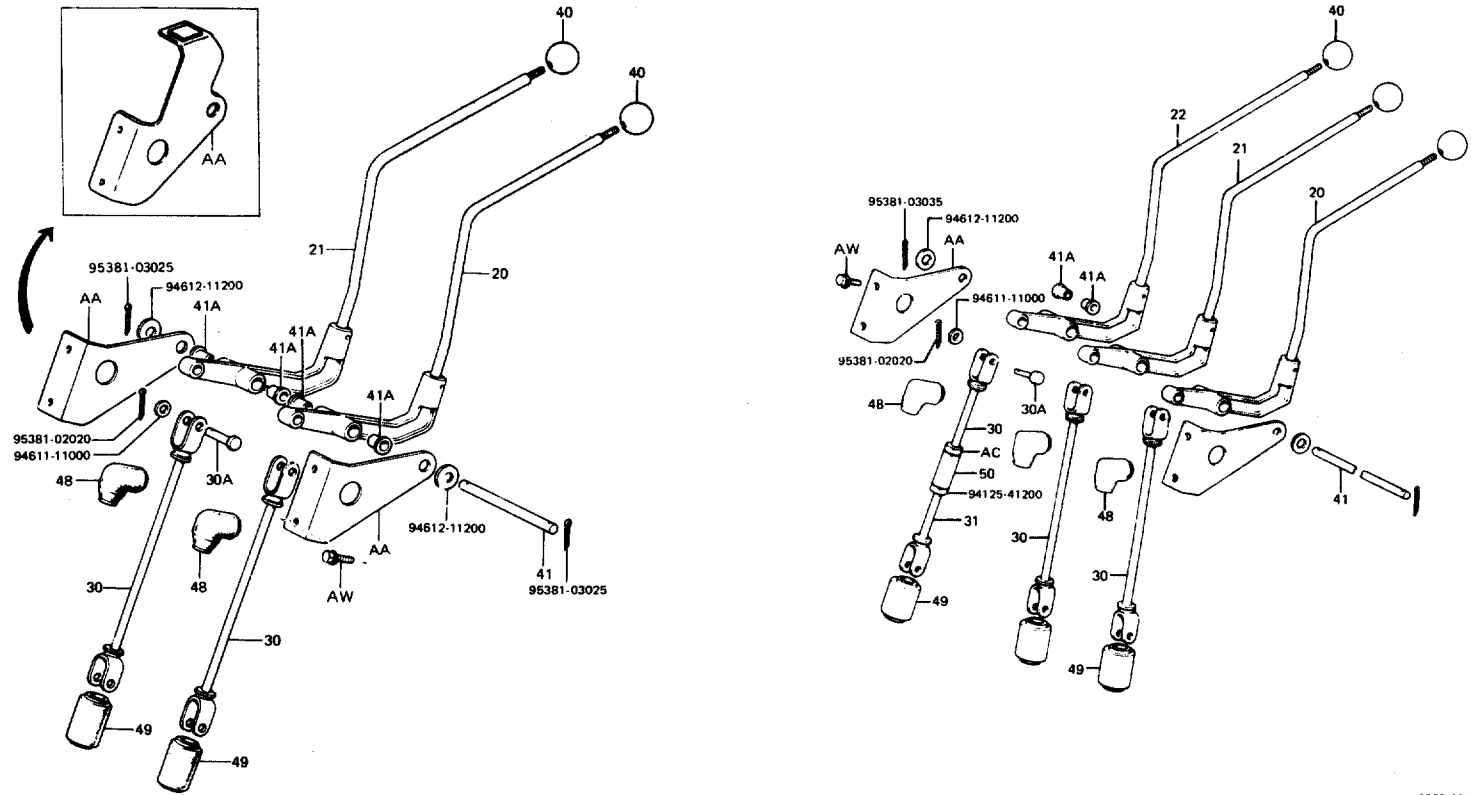

6709-004A

6709-001B

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL