



REPAIR TIME SCHEDULE

CHALLENGER MT945B/MT955B/MT965B/MT975B Repair Time Schedule

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL




GENERAL INFORMATION

G. DEFECT CODE LIST

Code	Definition
10	Leakage
14	Misted up, Foggy
15	Sticks
16	Slipping
17	Noisy
18	Surface rust, Oxidation
19	Improper finish application
20	Weathered
22	Missing
23	Incorrect torque
24	Incorrect timing
25	Loose
26	Incorrect assembly
30	Circuit fault, Signal
31	Short circuit, Earth short
33	Incorrectly programmed
34	Ambient temperature sensitive
45	Inadequate performance
46	Oil consumption
47	Fuel consumption
48	Bulge damage
60	Improper display contrast
61	Character missing in display
65	Cavitation
70	Fractured, Broken
71	Bent
72	Burst, Split
73	Seized
74	Worn
75	Burnt, Charred
76	Corroded, pitting
95	Modification campaign
99	Service contract






ENGINE INSTALLATION ARRANGEMENT

				COMPRESSOR GP-AIR,MT900
6	58 65 80	0.5		HYDRAULIC FITTING ELBOW
8	58 65 63	0.7		HYDRAULIC FITTING ELBOW
27	58 65 62	0.5		CLAMP-HOSE
28	58 65 64	0.8		HYDRAULIC FITTING UNION
30	58 65 55	1.0		TUBE AS.
31	58 65 84	2.5		TUBE AS.
33	58 65 81	1.8		HOSE AS. (FOR
35	58 65 78	2.0		TUBE AS.
36	58 65 75	1.2		SEAL-PRESS IN PLACE
37	58 65 56	3.0		HOSE - AIR INLET
38	58 65 78	2.0		HOSE AS-15.9 ID CMS 5758A
53	58 65 64	0.8		HYDRAULIC FITTING UNION
54	58 65 64	0.8		HYDRAULIC FITTING UNION






ENGINE INSTALLATION ARRANGEMENT

				LINES GP- COUPLER,MT900
2	22 06 25	1.0		TUBE ASM-AIR COUPLER
3	22 19 49	1.5		AIR HOSE CONNECTOR
5	22 19 46	0.5		AIR HOSE CONNECTOR
6	22 06 23	0.4		COUPLING-QUICK PNUE 3/8NPTF




AIR INLET AND EXHAUST SYSTEM



				CLEANER GP-AIR
1	58 15 17	6.0		BRACKET AS
2	58 15 17	6.0		BRACKET AS
9	58 15 00	5.0		AIR CLEANER AS.
10	58 64 01	3.0		SEAL
12	58 29 00	5.0		DUCT - INTAKE






COOLING SYSTEM

				TANK GP EXP & COOLANT
1	59 02 05	0.5		RADIATOR CAP
3	59 02 10	3.0		EXPANSION TANK
15	59 02 40	0.7		ADAPTER
16	59 02 47	1.5		OVERFLOW HOSE
17	59 02 45	1.5		OVERFLOW TUBE
24	59 04 06	2.0		HOSE
25	59 04 06	2.0		HOSE




COOLING SYSTEM



				CORE GP-ASM
17	59 02 36	14.0		BRACE
21	22 19 37	18.0		OIL COOLER TUBE
22	59 02 37	20.0		BRACKET






COOLING SYSTEM

				GUARD GP-FAN BLAST
1	59 06 20	2.0		SHIELD - FAN BLAST




FUEL SYSTEM



				LINES GP-FUEL
8	57 17 27	0.8		FUEL HOSE CONNECTOR
9	57 80 45	1.0		FUEL VALVE



ELECTRICAL AND STARTING SYSTEM

				LIGHT GP-EXTREMITY ARM, LEFT
1	14 01 29	0.5		LAMP AS - TURN
3	14 00 35	1.0		SPRING-COMP,1.52IDX,157X2.13LG
15	14 00 33	0.8		PIVOT MOUNT R/B 512645D3
16	14 16 24	1.0		TUBE WELD-LIGHT BAR
17	14 16 25	1.3		TUBE-WELD




ELECTRICAL AND STARTING SYSTEM



				ALTERNATOR - 12 VOLTS 185 AMPS
REF	14 01 02	2.0		GUARD - ALTERNATOR






ELECTRICAL AND STARTING SYSTEM

				LIGHTING GP (STANDARD)
4	14 02 87	1.2		LAMP GP-PORCH
5	14 16 19	1.0		LIGHT-ASM, WORK REAR
6	14 16 19	1.0		LIGHT-ASM,WORK REAR
9	14 02 59	0.7		SWITCH AS.-ROCKER LIGHTS






ELECTRICAL AND STARTING SYSTEM

				LIGHTING GP (HID)
12	14 02 87	1.2		LAMP GP-PORCH
13	14 02 59	0.7		SWITCH AS.-ROCKER LIGHT
16	14 16 19	1.0		LIGHT-ASM,WORK REAR
17	14 16 19	1.0		LIGHT-ASM, WORK REAR
18	14 16 20	2.0		BALLAST, HID, LIGHT
19	14 16 21	3.5		PLATE, HID BALLAST
20	14 16 23	4.0		LIGHT-WORK, HID, REAR
21	14 16 23	4.0		LIGHT-WORK, HID, REAR
22	28 11 04	2.0		ADAPTER, HELLA LIGHT






ELECTRICAL AND STARTING SYSTEM

				BATTERY GP
10	14 01 13	1.0		BATT MAINT FR WET
19	13 04 10	2.0		CABLE AS. -NEG BATTERY
20	13 04 10	2.0		CABLE AS. -NEG BATTERY
21	14 16 01	0.8		CABLE AS-NEG ALTERNATOR
22	13 04 11	5.5		CABLE AS. - POS BATTERY
32	13 04 12	4.5		MOUNTING GP - BATTERY




ELECTRICAL AND STARTING SYSTEM



				BATTERY GP
21	14 16 09	0.7		CABLE AS. - NEG
48	13 04 14	3.0		SWITCH AS - MASTER



ELECTRICAL AND STARTING SYSTEM

				HEATER GP-JACKET WATER,240V
1	14 02 85	2.0		ELEMENT AS-HEATER
2	14 02 91	1.0		CORD AS

ELECTRICAL AND STARTING SYSTEM



				<p>FENDER LIGHT GROUP - HID</p>
1	14 18 87	1.0		LIGHT-WORK, FENDER



ELECTRICAL AND STARTING SYSTEM




				WIRING GP - (ISO READY)
REF	60 30 00	2.0		ELECTRONIC DIAGNOSIS (not illustrated)
1	60 31 50	3.5		HARNES AS. AUTOGUIDE




TABLE OF CONTENTS

POWER TRAIN

Transmission Gp Intermediate Shaft 2 of 4	6-52
Transmission Gp Intermediate Shaft 3 of 4	6-53
Transmission Gp Intermediate Shaft 4 of 4	6-54
Transmission Gp Drop Shaft	6-55
YOKE GP	6-56






POWER TRAIN

				AXLE GP-REAR
2	27 03 78	8.0		BOLT- M30X3.5X310 ZNDI HDD
5	22 15 84	0.5		HYDRAULIC FITTING UNION
6	19 26 09	3.0		YOKE, AXLE INPUT
7	25 18 00	12.0		AXLE
8	22 15 84	0.5		HYDRAULIC FITTING UNION
9	22 15 83	0.5		HYDRAULIC FITTING ELBOW
10	22 15 83	0.5		HYDRAULIC FITTING TEE






POWER TRAIN

				TRUMPET ASSY
25	25 01 82	25.0		OUTER PLANETARY RETENTION BOLT
42	25 02 32	20.0		BRAKE PISTON SPRING
55	25 02 33	25.0		PLANETARY RETENTION SNAP RING






POWER TRAIN

				DIFF ASSY-REAR
1	25 02 28	50.0		POWERTRAIN CLEAN AND FLUSH
3	25 02 31	5.0		REMOVE/INSTALL DUALS
9	27 01 09	20.0		BEARING ASSY 32315
15	27 01 58	22.0		SCREW HEX SOCKET M12 X 55
51	25 02 35	23.0		TUBE LUBE DIFF
68	25 02 36	20.0		BEVEL PINION TUBE LUBE



POWER TRAIN

				PARK BRAKE ASSY-WITH
4	26 02 53	18.0		O RING
5	26 02 53	18.0		O RING
6	26 02 53	18.0		O RING
8	26 02 48	18.0		PARK BRAKE DISC
9	26 02 49	18.0		COUNTERPLATE
17	26 02 47	18.0		KIT, WASHER SPRING
18	26 02 46	18.0		PISTON CHAMBER
19	26 02 44	18.0		PARK BRAKE PISTON
22	26 02 53	18.0		RING
23	26 02 53	18.0		RING




POWER TRAIN



				DRIVESHAFT ASM-ENG/TRANS
1	19 25 02	6.0		Shaft






POWER TRAIN

				LINES GP-AXLE LUBE
6	22 15 90	3.0		HOSE AS-AXLE LUBE RELIEF
7	22 15 87	3.0		HOSE AS-AXLE LUBE RETURN FRONT
9	22 15 89	3.5		TUBE AS-AXLE LUBE SUCTION
10	22 15 85	5.0		HOSE AS-AXLE LUBE FRONT
11	22 15 86	8.0		HOSE AS-AXLE LUBE REAR




POWER TRAIN

				CASE & PARTS GP-PLANETARY
2	19 26 72	50.0		Bearing Cup
12	19 26 14	50.0		SHIM PACK
16	19 26 07	4.0		Input Seal
17	19 26 01	50.0		CASE AS-FRONT
18	19 26 02	50.0		CASE AS-REAR
26	19 26 73	3.0		COVER
30	19 26 74	3.0		Hydraulic Connector






POWER TRAIN

				Transmission Gp
REF	19 26 78	50.0		Powertrain Clean and Flush






POWER TRAIN

				Transmission Gp Reverse Shaft 2 of 3
11	19 26 22	50.0		Clutch Friction Disc
12	19 26 23	50.0		Clutch Steel Plate
14	19 26 26	50.0		Spring
15	19 26 17	50.0		Disc
16	19 26 25	50.0		Seal Assembly
19	19 26 17	50.0		Disc
43	19 26 28	50.0		Piston Seal
53	19 26 28	50.0		Piston Seal
54	19 26 27	50.0		Clutch Piston
62	19 26 28	50.0		Piston Seal
66	19 26 28	50.0		Piston Seal
68	19 26 28	50.0		Piston Seal



POWER TRAIN

				Transmission Gp Output Shaft 4 of 4
4	19 26 31	50.0		Hub Bearings
7	19 26 20	50.0		Retaining Ring
19	19 26 17	50.0		Disc
36	19 26 46	50.0		Sun Gear
37	19 26 45	50.0		Planetary Carrier
39	19 26 47	50.0		Drive Tube
41	19 26 80	50.0		Thrust Washer
46	19 26 21	50.0		End Plate
51	19 26 32	50.0		Clutch Hub (40T)




POWER TRAIN



				Transmission Gp Drop Shaft
2	19 26 16	50.0		Bearing






POWER TRAIN ATTACHING

				STANDPIPE GP-AXLE LUBE
3	45 32 15	3.0		O-RING-STANDPIPE
4	45 32 16	3.0		STANDPIPE ASM-AXLE LUBE






FRAME AND BODY

				COVER GP
2	28 10 33	1.0		LID AS.
3	28 10 32	2.0		PANEL AS
4	28 10 32	2.0		PANEL AS
5	28 10 31	1.5		PANEL AS. (TOP)
6	28 10 51	0.5		HINGE
7	28 10 52	1.0		BRACKET
8	28 10 52	1.0		BRACKET
9	28 10 36	0.5		LATCH AS.






FRAME AND BODY

				FENDER GP-REAR, LH
7	28 04 49	1.5		HANDRAIL-FENDER, REAR
8	28 10 87	5.0		CHANNEL-MT, FENDER, REAR
9	28 10 87	5.0		CHANNEL-MT, FENDER, REAR
10	28 10 87	5.0		CHANNEL-MT, FENDER, REAR
11	28 02 46	6.0		FRAME WA-FENDER, REAR
12	28 10 53	2.0		SHIELD-LAMP
13	28 05 15	5.0		FENDER ASM-REAR




FRAME AND BODY



				GRILL AS
10	28 02 78	5.0		GRILL FRAME




FRAME AND BODY



				WARNING GP,SMV
1	14 01 63	0.3		SIGN-SLOW MOVING VEHICLE
6	14 01 62	0.5		BRACKET-SMV






FRAME AND BODY

				FRAME GP-REAR
REF	57 80 77	0.8		FUEL CAP SERVICE (not illustrated)
1	28 17 11	0.2		PIN-CLEVIS,1 X 2 3/4
7	57 80 72	1.0		VALVE - NEEDLE -8 MSTOR
8	57 80 02	0.3		CAP-FUEL
9	28 17 15	35.0		FRAME-REAR WLDMT ASM
10	28 17 12	0.7		INSERT-FUEL CAP RETAINER
11	28 17 13	0.5		BRACKET-HOSE,ASM
14	28 17 14	0.2		PIN AS-LINCH .188 DIA STL
16	57 80 80	1.2		ELBOW-90° -STRAIGHT THD

FRAME AND BODY



				COUNTERWEIGHT GP-FRONT
1	34 12 02	5.0		BRACKET

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below






- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL






FRAME AND BODY

				ENCLOSURE GP
2	28 15 38	1.5		BRACKET
5	59 06 10	1.0		GUARD AS.-FAN
8	28 15 39	2.0		BRACKET
9	28 15 39	2.0		BRACKET
10	28 15 39	2.0		BRACKET
23	28 15 40	1.0		INSULATION-SIDE PANEL
24	28 15 40	1.0		INSULATION-SIDE PANEL






FRAME AND BODY

				COUNTERWEIGHT GP-WHEEL,SPL APP
1	25 07 19	2.0		BOLT
2	25 07 19	2.0		BOLT
4	25 07 34	4.0		INNER COUNTERWEIGHT-WHEEL, 363 KG






STEERING SYSTEM

				CYLINDER GP-STEERING
2	17 01 43	0.3		GREASE FITTING
10	17 01 44	3.0		STEER PIN AS
11	33 02 01	2.5		CYLINDER-HYD STEER
12	17 01 45	3.0		YOKE ASM-STEERING CYLINDER
13	17 01 46	0.8		HOSE AS-FRONT GREASE
14	17 01 47	1.2		HOSE AS-REAR GREASE
15	17 01 48	2.0		PIN AS STEER CYL
16	17 01 48	2.0		PIN AS STEER CYL
18	22 20 76	1.0		HYDRAULIC FITTING ELBOW
20	17 01 43	0.3		GREASE FITTING






STEERING SYSTEM

				LINES GP-HYD STEERING VALVE
9	22 14 40	2.5		HOSE AS-STEERING PILOT
10	17 01 54	1.0		BRACKET ASM-HOSE SUPPORT
11	17 01 54	1.0		BRACKET ASM-HOSE SUPPORT
12	17 01 55	2.5		TUBE AS-STEERING ORBITAL
13	17 01 55	2.5		TUBE AS-STEERING ORBITAL
14	17 01 55	2.5		TUBE AS-STEERING ORBITAL
15	17 01 55	2.5		TUBE AS-STEERING ORBITAL






BRAKING SYSTEM

				BRAKE GP-SERVICE HYD
REF	22 08 13	2.0		CHARGE NITROGEN ACCUMULATOR
1	26 02 62	2.0		SERVICE BRAKE ACCUMULATOR AS.
13	22 03 82	2.3		HYDRAULIC FITTING UNION
15	26 02 81	2.0		SERVICE BRAKE CONTROL CABLE
23	22 03 84	2.0		HYDRAULIC FITTING TEE
24	14 16 48	2.0		BRAKE ACCUMULATOR PRESSURE SWITCH






BRAKING SYSTEM

				CONTROL ASM-SERVICE BRAKE
1	26 02 80	2.5		STEM
2	26 02 83	3.0		LEVER
3	26 02 86	2.5		BRAKE CONTROL VALVE
5	26 02 82	2.5		ROD END-YOKE
7	22 19 30	3.0		HYDRAULIC FITTING UNION
8	26 00 90	3.0		VALVE AS-BRAKE RETURN CHECK
9	26 02 84	6.0		BRACKET WLDMT-BRAKE VALVE
10	22 19 31	1.0		HYDRAULIC FITTING TEE
11	26 02 79	2.5		BRAKE PIVOT PIN
13	26 02 85	2.5		CONTROL SUPPORT BEARING
14	26 02 87	2.0		RING-RETAINING EXT 17.81DX1.07
15	26 02 82	2.5		ROD END-YOKE
17	26 02 89	2.5		SEAL-LIP 19.05 DIA SHAFT
19	26 02 78	2.5		PIN AS-9.4 OD SPRING RETAINER






BRAKING SYSTEM

				BRAKE GP-HYD TRAILER
13	22 04 15	6.0		HOSE AS-HYD TRAILER BRAKE
14	22 19 71	3.0		HOSE AS-HYD TRAILER BRAKE DRAIN
15	22 19 67	3.0		HOSE AS-HYD TRAILER BRAKE SIG
21	22 19 55	2.0		HYDRAULIC FITTING UNION
26	22 04 40	0.8		TEE-SWIVEL 3X -8 ORFS
28	22 04 30	0.2		TRAILER BRAKE COUPLER






BRAKING SYSTEM

				LINES GP-BRAKES
14	22 03 85	0.7		HYDRAULIC FITTING UNION
16	22 13 92	1.0		TUBE ASM-BRAKE CHARGE SUPPLY
18	26 03 22	2.0		HOSE ASM-BRAKE CHARGE RETURN
19	26 03 24	1.5		TUBE AS-BRAKE SUPPLY
20	22 19 26	2.5		HOSE ASM-PARK BRAKE SUPPLY
21	26 03 12	2.0		HOSE ASM-PARK BRAKE RETURN
22	22 01 55	1.5		TUBE ASM-BRAKE SUCTION
23	22 04 59	2.0		HOSE ASM-BRAKE RETURN
25	22 19 25	1.0		BRACKET ASM-HOSE SUP,BRAKES
26	22 13 93	1.5		HOSE ASM-TOW OVERRIDE PILOT
27	26 03 10	1.5		HOSE ASM-PARK BRAKE RETURN
28	22 19 22	2.5		HOSE AS-ACCUMULATOR
30	22 19 01	2.0		HOSE AS-SERVICE BRAKE
31	22 19 02	2.5		HOSE AS-SERVICE BRAKE
32	22 19 01	2.0		HOSE AS-SERVICE BRAKE
33	22 19 23	6.0		HOSE AS-REAR SERVICE BRAKE
36	22 03 84	2.0		HYDRAULIC FITTING TEE






HYDRAULIC SYSTEM

				VALVE GP-FCONT-E
REF	22 05 03	2.0		High Pressure Testing/Adjusting
1	21 27 31	0.6		Load Sense Drain Valve
2	21 27 29	0.6		Load Sense Relief Valve
3	21 27 30	0.6		Load Sense Check Valve






HYDRAULIC SYSTEM

				LINES GP-IMP PUMP
2	22 19 89	2.5		FLANGE
24	22 06 42	4.0		HOSE AS-IMPLEMENT GEAR PUMP CHARGE
25	22 19 96	6.0		HOSE AS-IMP VALVE RETURN
27	21 26 63	2.5		TUBE AS-CHARGE INLET
28	22 06 42	4.0		TUBE AS-PUMP INLET
29	21 26 63	2.5		HOSE-CHARGE SUCTION
30	22 06 42	4.0		IMP PUMP SUCTION HOSE
31	60 31 60	2.0		VALVE ASM-LS BLOCKING
32	22 19 39	1.0		TUBE AS-SOL VALVE
33	22 19 92	4.0		IMP PUMP DISCHARGE TUBE
34	22 19 91	2.5		IMP PUMP DISCHARGE HOSE
35	22 06 49	6.0		LOAD SENSE HOSE
37	22 19 95	5.0		HOSE AS-IMP FILTER RETURN
38	22 19 97	6.0		HOSE AS-IMP VALVE SUPPLY
39	22 06 42	4.0		HOSE AS-PRIORITY/STEER RETURN
40	22 19 80	3.0		LIFD HOSE
46	22 19 89	2.5		FLANGE
49	22 19 89	2.5		FLANGE




HYDRAULIC SYSTEM



				VALVE GP-BANK-4
REF	22 02 05	2.0		REPLACE COMPLETE VALVE STACK (not illustrated)




HYDRAULIC SYSTEM



				HYDRAULIC KIT - POWER BEYOND
1	22 19 39	1.0		HYDRAULIC FITTING ELBOW
8	22 03 36	0.4		LOAD SENSE POWER BEYOND COUPLER
9	22 19 40	1.0		HYDRAULIC FITTING UNION
10	22 03 35	0.4		POWER BEYOND COUPLER






HYDRAULIC SYSTEM

				FILTER GP-OIL MT900
REF	19 26 15	2.0		HYDRAULIC PRESSURE TESTING
10	22 06 95	2.0		HYDRAULIC FITTING PLUG
13	22 01 07	0.4		TRANSMISSION FILTER BYPASS SWITCH
14	22 06 93	0.4		IMP/STEERING FILTER BYPASS SWITCH
15	22 06 94	0.3		IMP/STEERING FILTER




HYDRAULIC SYSTEM



				CASE DRAIN GP-PIONEER
2	22 19 41	0.5		HYDRAULIC FITTING UNION
3	22 19 42	0.5		SNAP RING EXT
4	22 19 44	1.0		HYDRAULIC FITTING ELBOW
5	22 06 21	0.6		IMP CASE DRAIN COUPLER AS
6	22 06 17	5.0		HOSE ASM-IMP CASE DRAIN

HYDRAULIC SYSTEM



				LINES GP-ECOLOGY
1	22 12 26	0.5		COUPLER DRAIN BOTTLE BRACKET

TRIM GP	14-52
TRIM GP	14-53
CONTROL GP-AIR & TEMP	14-54
CONTROL GP-IMPLEMENT	14-55
WIPER GP-BASIC	14-56
RADIO GP - AUTOGUIDE	14-57
ANTENNA AS. -FREEWAVE	14-58
RECEIVER GP-TRANSMITTER &	14-59
RECEIVER GP-TRANSMITTER &	14-60
KIT-SEAT SUSP AS.	14-61
CONTROL GP-HITCH	14-62
CONDITIONER GP-AIR (DELUXE)	14-63
CONDITIONER GP-AIR (DELUXE)	14-64
ANTENNA GP-SATELLITE READY	14-65
ANTENNA GP-SATELLITE READY	14-66
VISOR GP -CAB	14-67
CONTROL GP-DECELERATOR	14-68
ANTENNA GP-RADIO	14-69
ANTENNA GP-RADIO	14-70
LINES GP-HEATER	14-71
ANTENNA GP-RADIO	14-72
LINER GP-OPERATOR	14-73
MIRROR GP-ELECTRIC	14-74
MIRROR GP-ELECTRIC	14-75
VISOR GP - CAB	14-76
SPEAKER GP-RADIO	14-77




OPERATOR STATION



				HANDLE AS.-INTERIOR
2	28 12 75	1.0		CAB DOOR GRAB HANDLE




OPERATOR STATION



				MOUNT ASM-LATCH
8	28 05 64	1.0		Cab Door Latch Assembly






OPERATOR STATION

				CONSOLE GP-OPERATOR (A)
15	28 07 43	0.5		Armrest Decal
16	28 07 43	0.5		Armrest Decal
17	28 07 40	0.5		Adjustment Knob
18	28 07 45	0.5		MIDS Control Knob
19	28 07 44	0.5		MIDS Button
20	28 07 44	0.5		MIDS Button
22	28 07 48	6.0		Armrest Plate



OPERATOR STATION

				WIRING GP - CAB
2	14 02 00	4.0		CONTROL GP - ELECTRONIC (DASH)
11	14 02 10	0.4		SWITCH AS. - ROCKER HAZARD LIGHTS
17	14 16 03	5.0		CABLE AS. - CAB POWER
22	14 02 59	0.7		SWITCH AS. - ROCKER FLOOD LIGHT
41	14 18 16	4.0		FLASHER-MODULE




OPERATOR STATION



	An icon of a mechanical adapter with a lightning bolt symbol, indicating a specific part or function.	An icon of a pocket watch, representing time or duration.	An icon of an open-end wrench, representing a tool or maintenance action.	ADAPTER AS.-LH
2	28 12 86	7.0		DUCT






OPERATOR STATION

				CONTROL GP
1	22 03 50	4.5		SUPPORT PLATE
5	22 03 49	4.5		SPOOL CONTROL MECHANISM



OPERATOR STATION

				SEAT GP-TRAINING
1	28 06 05	3.0		PASSENGER SEAT
2	28 06 07	1.0		SEAT BELT






OPERATOR STATION

				RADIO GP-CD (XM)
2	28 02 32	2.5		RADIO




OPERATOR STATION



				WIPER GP (DELUXE)
16	28 02 36	0.3		Wiper Blade
26	28 03 84	1.0		Wiper Jumper Harness
27	28 02 27	4.0		Washer Hose






OPERATOR STATION

				CONTROL GP-MTG & STEERING
4	21 27 01	6.0		Steering Shaft
5	21 27 05	6.0		Steering Shaft Mount
6	21 27 00	6.0		Bearing
7	21 27 06	6.0		Steering Shaft Joint






OPERATOR STATION

				CONTROL GP-IMPLEMENT
2	60 31 73	4.0		SPOOL VALVE SENSOR






OPERATOR STATION

				RECEIVER GP-TRANSMITTER &
3	60 31 44	0.5		AUTOGUIDE ANTENNA
4	60 31 93	1.3		AUTOGUIDE CABLE






OPERATOR STATION

				ANTENNA GP-SATELLITE READY
1	28 05 08	2.5		Cab Roof
3	28 02 58	2.0		Radio Antenna




OPERATOR STATION



				ANTENNA GP-RADIO
2	28 02 58	2.0		Antenna Cable






OPERATOR STATION

				MIRROR GP-ELECTRIC
12	14 00 21	0.2		Relay






MARKINGS

				FILM GP-CHALLENGER, MT900
1	28 00 47	0.50		CHASSIS DECAL
2	28 00 47	0.50		CHASSIS DECAL
7	28 00 47	0.50		CHASSIS DECAL




MARKINGS



				FILM GP-MT945B
1	28 02 21	0.25		CAB DECAL



MARKINGS

				FILM & PAINT GP - DECALS (NA)
2	28 00 47	0.50		CHASSIS DECAL
9	28 00 47	0.50		CHASSIS DECAL
18	28 00 47	0.50		CHASSIS DECAL
22	28 00 47	0.50		CHASSIS DECAL
26	28 00 47	0.50		CHASSIS DECAL
28	28 00 47	0.50		CHASSIS DECAL
38	28 00 47	0.50		CHASSIS DECAL
42	28 00 47	0.50		CHASSIS DECAL
43	28 00 47	0.50		CHASSIS DECAL
44	28 00 47	0.50		DECAL-LIFT



FAILURE CODE INDEX

CODE	DESCRIPTION	PAGES
14 16 13	ELEMENT AS	5-47, 5-48
15 01 09	COIL-CONDENSOR	1-4, 10-2
15 01 11	RECEIVER DEHYDRATOR	10-2
14 16 14	CORD	5-47, 5-48
14 16 15	BRACKET-HEADLIGHT	5-15
15 01 23	REFRIGERANT R134A	10-1, 10-2, 10-3, 10-4
14 16 16	PANEL (HEADLIGHT)	5-15
15 01 23	RECHARGING A/C SYSTEM (NOT ILLUSTRATED) [NOT SHOWN IN ILLUSTRATION]	10-1, 10-2, 10-3, 10-4
15 01 23	RECHARGING A/C SYSTEM (NOT ILLUSTRATED)	10-1, 10-2, 10-3, 10-4
14 16 17	BRACKET-HEADLIGHT	5-15
15 02 01	HOUSING-ASM FILTER	10-3
14 16 18	WORK LIGHT	5-38, 5-46
15 02 03	HVAC UNIT	10-3
14 16 18	LIGHT-WORK,HID	5-38, 5-46
14 16 19	LIGHT-ASM,WORK REAR	5-14, 5-17, 5-19
15 02 05	HARNES/WIRE ASM ATC [NOT SHOWN IN ILLUSTRATION]	10-4
14 16 19	LIGHT-ASM, WORK REAR	5-14, 5-17, 5-19
15 02 07	MOTOR/BLOWER	10-4
14 16 20	BALLAST, HID, LIGHT	5-18, 5-19
15 02 07	MOTOR BLOWER ASM PRESSURE	10-4
14 16 20	BALLAST AS.-HID	5-18, 5-19
15 02 10	CORE/EVAPORATOR-R4460	10-4
15 02 11	VALVE-EXPANSION	10-4
14 16 21	PLATE, HID BALLAST	5-19
14 16 22	HARNES AS.-HID	5-18
15 02 12	CORE/HEATER R4460	10-4
15 02 15	TUBE-HEATER,OUTLET	10-4, 10-5
14 16 23	LIGHT-WORK, HID, REAR	5-19
15 02 15	TUBE-HEATER,INLET	10-4, 10-5
14 16 24	TUBE WELD-LIGHT BAR	5-3, 5-4
15 02 16	HOSE 0.62 1BRD EPDM	1-12
14 16 25	TUBE-WELD	5-3, 5-4
15 02 17	VALVE/WATER ELECTRONIC	10-4
14 16 28	ATOMIZER AS	1-7
15 02 25	HOSE ASM A/C -6X30 FORS/FORS90	10-2
14 16 29	MOUNTING GP - ETHER	1-7
14 16 30	VALVE GP-ETHER	1-7
15 02 25	HOSE ASM A/C-8X48.50FORS/FOR90	10-2
14 16 36	HARNES AS.-FLASHER	14-17
15 02 25	HOSE ASM A/C -12X112MORS/FOR90	10-2
14 16 37	DAMPER AS.(ALARM)	14-17
15 02 25	HOSE ASM A/C -6X155MORS/FORS90	10-2
15 02 58	CONTROL AS.	10-4
14 16 38	Switch- Limit Cab Door	14-17, 14-53
16 02 06	BOLT-.88-14X2.75,G8,HHD,BLK	14-2
14 16 38	SWITCH AS. - LIMIT CAB DOOR	14-17, 14-53
14 16 40	HARNES AS. - FENDER	5-12
16 02 23	GUARD-MUD,REAR	13-4
14 16 42	HARNES AS. - CHASSIS	5-10



FAILURE CODE INDEX

CODE	DESCRIPTION	PAGES
22 01 65	HYDRAULIC TRAILER BRAKE VALVE	11-2, 11-7, 11-12
22 02 05	REPLACE COMPLETE VALVE STACK (not illustrated)	12-12, 12-16, 12-18
28 02 41	MOTOR-WIPER,1IN	9-21
28 02 42	KIT-PANTOGRAPH	9-21
22 02 16	CONNECTOR AS-STR-8STOR-6ORFS	9-6
22 02 30	IMPLEMENT VALVE	12-1, 12-4, 12-11, 12-15, 12-18
28 02 43	WIPER BLADE ASM	9-21
22 02 36	Load Sense Power Beyond Coupler	12-10
28 02 53	WINDSHIELD WASHER	9-21
28 02 57	HARNESS-RADIO,SC	9-28
22 02 97	VALVE GP-CHECK	12-13
22 03 35	POWER BEYOND COUPLER	12-10, 12-17
28 02 58	ANTENNA-RADIO,SC	9-28
22 03 36	LOAD SENSE POWER BEYOND COUPLER	12-17
28 02 62	BRACKET-HEADLIGHT,SIDE,RH	13-2
22 03 47	DECAL	14-31, 14-54, 14-62
28 02 62	BRACKET-HEADLIGHT,SIDE,LH	13-2
22 03 48	SPOOL VALVE LEVER	5-8, 14-29
28 02 64	PLUG-BLK,HOLE,3.375,POLY	9-6
22 03 48	HANDLE AS.	5-8, 14-29
28 02 64	PLUG-BLK,HOLE,1.125,POLY	9-6
28 03 02	UPHOLSTERY-REAR	9-18
22 03 49	SPOOL CONTROL MECHANISM	14-30, 14-31
28 03 03	DOOR-ACCESS,RH	9-19
22 03 50	SUPPORT PLATE AS.	14-29, 14-30, 14-31
28 03 18	FLOORMAT-REAR,COMMON	9-23
22 03 50	SUPPORT PLATE	14-29, 14-30, 14-31
28 03 18	FLOORMAT-FRONT,TG	9-23
22 03 51	SPRING-TORSION RH 1729 N/MM	5-8
28 03 31	PLATE-FLOOR COVER	9-19
22 03 65	HYDRAULIC FITTING UNION	11-7
28 03 91	STRIKER-BOLT,FEMALE	9-16
22 03 69	HYDRAULIC FITTING UNION	11-8
28 03 92	DOOR-REAR,RH	9-19
22 03 71	HYDRAULIC FITTING ELBOW	11-7
22 03 72	HYDRAULIC FITTING TEE	11-7
28 03 92	DOOR-REAR,LH	9-19
28 04 07	STEP WLDMT-ENTRANCE, TOP	5-5
22 03 75	TUBE AS-SERVICE BRAKE REAR	11-14
28 04 18	RISER-STEP,RH	5-6
22 03 78	HYDRAULIC FITTING ELBOW	11-8
28 04 18	RISER-STEP,LH	5-6
22 03 82	HYDRAULIC FITTING UNION	11-1
22 03 84	HYDRAULIC FITTING TEE	11-1, 11-15, 11-16
28 04 29	MOUNT WLDMT-LAMP,ROTATING	12-6, 12-7
22 03 85	HYDRAULIC FITTING UNION	11-16
28 04 29	BRKT WLDMT-LIGHT,SIDE MOUNT	12-6, 12-7
28 04 43	CLAMP TUBE 1.00 BLK ZN (514741	13-3
22 04 01	OIL COOLER	3-5
22 04 02	TUBE AS-STEERING CYLINDERS	9-3



FAILURE CODE INDEX

CODE	DESCRIPTION	PAGES
27 09 13	SCREEN	6-34
28 00 47	DECAL-HYDRAULIC FILL	15-2, 15-3, 15-4, 15-5, 15-6, 15-8, 15-9, 15-10, 15-11, 15-12, 15-13, 15-14, 15-15
28 00 47	DECAL-LIFT	15-2, 15-3, 15-4, 15-5, 15-6, 15-8, 15-9, 15-10, 15-11, 15-12, 15-13, 15-14, 15-15
28 00 47	DECAL-TIEDOWN	15-2, 15-3, 15-4, 15-5, 15-6, 15-8, 15-9, 15-10, 15-11, 15-12, 15-13, 15-14, 15-15
28 00 47	DECAL-GREASE POINT	15-2, 15-3, 15-4, 15-5, 15-6, 15-8, 15-9, 15-10, 15-11, 15-12, 15-13, 15-14, 15-15
28 00 47	CHASSID DECAL	15-2, 15-3, 15-4, 15-5, 15-6, 15-8, 15-9, 15-10, 15-11, 15-12, 15-13, 15-14, 15-15
28 00 47	CHASSIS DECAL	15-2, 15-3, 15-4, 15-5, 15-6, 15-8, 15-9, 15-10, 15-11, 15-12, 15-13, 15-14, 15-15
28 00 47	DECAL-DOOR HANDLE	15-2, 15-3, 15-4, 15-5, 15-6, 15-8, 15-9, 15-10, 15-11, 15-12, 15-13, 15-14, 15-15
28 00 74	BRACKET AS	8-14
28 00 75	SUPPORT	8-14
28 00 76	INSULATION-REAR ENGINE	8-14
28 00 77	TUBE AS. - CMPNT	8-14
28 00 78	PLATE AS.	8-14
28 00 79	TUBE AS (SIDE)	8-14
28 00 80	SEAL-HOOD	5-13, 5-16, 5-18
28 00 83	DOOR WA-CABINET	8-15
28 00 88	FRAME WA-CABINET	8-15
28 00 90	PANEL-CABINET	8-15
28 00 99	LATCH AS	8-15
28 01 01	HINGE-LIFT OFF	8-15
28 01 02	EXTENSION-FLEXIBLE,LOWER STEP	8-9
28 01 04	PLATE-BACK	8-9
28 01 13	SUPPORT WA-FENDER, RH	8-6, 8-11
28 01 13	SUPPORT WA-FENDER	8-6, 8-11
28 01 14	SHIELD WA-FENDER	8-6, 8-11
28 01 64	X-BAR AS.	8-12
28 02 01	GRILL AS.	8-1, 8-4, 8-12
28 02 01	GRILL	8-1, 8-4, 8-12
28 02 04	HOOD AS.	8-1
28 02 05	PLATE AS. (LH)	8-1, 8-2
28 02 05	PANEL AS. LH	8-1, 8-2
28 02 10	PLATE AS. (RH)	8-2
28 02 10	PANEL AS.-RH	8-2
28 02 13	BRACKET-BALLAST	5-18
28 02 21	CAB DECAL	15-1, 15-7
28 02 21	ARMREST DECAL	15-1, 15-7
28 02 27	Washer Hose	14-45, 14-48
28 02 30	Speaker	14-44
28 02 32	RADIO	14-40
28 02 34	Washer Tank	14-48, 14-49
28 02 35	Wiper Arm	14-46, 14-56
28 02 36	WIPER BLADE	14-45, 14-46, 14-56
28 02 46	FRAME WA-FENDER, REAR	8-6, 8-7, 8-8
28 02 46	FENDER ASM-FRONT	8-6, 8-7, 8-8
28 02 50	Cab Sun Visor	14-67, 14-76
28 02 58	Radio Antenna	14-65, 14-69, 14-70, 14-72

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL