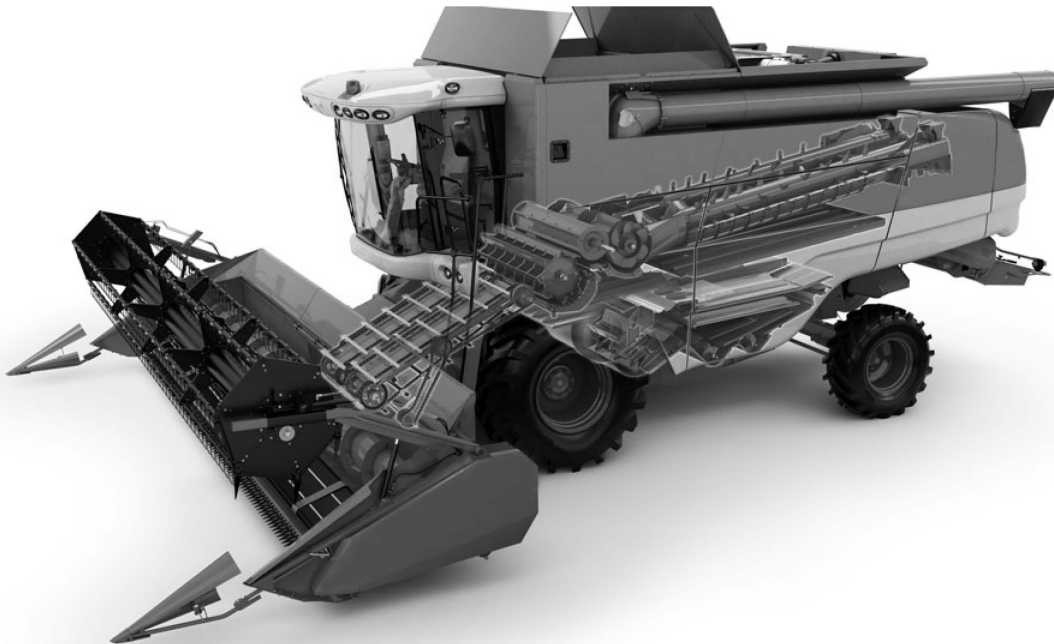 


# Repair Time Schedule for Fendt 9470x Combine Series

- 0. Introduction and warranty**
- 3. Main crop elevator**
- 4. Concave, cylinder and rear beater**
- 5. Rotor**
- 6. Shaker Shoe and Fanning Mill**
- 7. Elevators**
- 8. Engine**
- 9. Grain Tank and Guards**
- 10. Drive Unit**
- 11. Transmissions**
- 12. Chassis**
- 13. Operator Platform**
- 14. Hydraulics**
- 15. Machine Housing and Guards**
- 16. Tools and Electrical System**
- 17. Straw Chopper**
- 18. Failure Code Index**



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

# Introduction and warranty - 0

## REQUEST FOR REVIEW OF TIME SCHEDULE

Distributor Name.....

Date .....

Address.....

RTS Publication No. ....

Failure Code No. ....

Combine Model .....

Serial No.....

We wish to query your time allowance against the above failure code number and confirm that we have observed and accurately timed this operation as carried out by a trained mechanic using recommended procedures and special tools, our findings are detailed below:

<i>Analysis of Time</i>			
<i>Work Performed</i>	<i>Time</i>		<i>Remarks</i>
Remove component			
Dismantle			
Clean and inspect			
Obtain parts and tools			
Reassemble			
Reinstall			
Adjust and test			
TOTAL OF TIME			
Number of mechanics used on job			

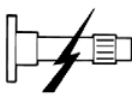


Signed.....

Name .....




**Post to:**

AGCO Limited,  
 Product Reliability Department,  
 Abbey Park Stoneleigh,  
 Kenilworth  
 England CV8 2TQ




## Main crop elevator - 3

  			<b>03 04: ELEVATOR FRONT SHAFT</b>	<b>FIG. NO.</b>
24 01 39	2,50		MAIN CROP ELEVATOR ASSEMBLY	03 04 001
24 01 44	2,00		SHAFT SUPPORT ARM	03 04 006
24 01 46	0,50		SUPPORT ARM SPRING	03 04 007
24 01 45	0,25		SUPPORT ARM SPACER	03 04 009
24 01 47	0,50		TENSIONER SPRING BRACKET	03 04 015
24 01 48	0,25		TENSIONER SPRING	03 04 017
24 01 50	0,25		CHAIN GUARD, OUTER	03 04 021
24 01 40	2,00		ELEVATOR FRONT SHAFT TUBE	03 04 025
24 01 43	2,25		ELEVATOR FRONT SHAFT BEARING	03 04 029
24 01 41	2,25		ELEVATOR FRONT SHAFT CHAIN GUIDE	03 04 030
24 01 42	2,00		ELEVATOR FRONT SHAFT	03 04 031
22 30 06	0,25		MULTI-COUPLER, MALE	03 04 055
22 30 05	0,50		MULTI-COUPLER, FEMALE	03 04 057




## Concave, cylinder and rear beater - 4

			<b>04 01: CONCAVE</b>	<b>FIG. NO.</b>
31 01 11	6,00		CONCAVE	04 01 001
31 01 16	1,00		CONCAVE EXTENSION, REAR	04 01 004
31 01 17	1,00		DEFLECTOR CURTAIN	04 01 007
31 01 18	3,00		CONCAVE LEAD-IN PLATE	04 01 009
31 01 19	0,50		ONE DUST PLATE	04 01 014
31 01 20	1,00		CONCAVE JOURNAL	04 01 017

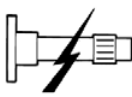


## Concave, cylinder and rear beater - 4

			<b>04 06: ROTOR FEEDER</b>	<b>FIG. NO.</b>
31 03 00	19,00		ROTOR FEEDER	04 06 001
31 03 03	5,00		ROTOR FEEDER SHAFT	04 06 002
31 03 04	2,00		ROTOR FEEDER BEARING	04 06 004
31 03 02	8,50		BRACKET, CONCAVE	04 06 007
31 03 01	3,00		ROTOR FEEDER CONCAVE	04 06 008
31 03 05	—		INTERMEDIATE PLATE	04 06 009




## Rotor - 5

			<b>05 04: ROTOR AND ANGLE GEAR</b>	<b>FIG. NO.</b>
31 03 23	0,75		CONNECTING SHAFT, GEARBOX	05 04 001
31 03 24	1,50		COUPLING SLEEVE, ROTOR VARIATOR	05 04 002
31 03 25	1,50		ROTOR ANGLE GEAR - LH	05 04 003
31 03 26	1,50		ROTOR ANGLE GEAR - RH	05 04 004
31 03 27	4,00		ROTOR BEARING HOUSING	05 04 007
31 03 28	4,00		ROTOR BEARING - FRONT	05 04 008
31 03 29	3,00		ROTOR ASSY.	05 04 010
31 03 30	4,00		WEAR PLATE, ROTOR	05 04 022
31 03 31	3,00		ONE SEPARATION FINGER	05 04 024
31 03 32	0,10		SEPARATION FINGER, EACH ADDITIONAL	05 04 024
31 03 33	2,00		BUSH, ROTOR DRIVE	05 04 029

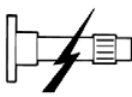


## Shaker Shoe and Fanning Mill - 6

  	<b>06 04: FAN BLADE AND BOTTOM AUGER</b>		<b>FIG. NR.</b>	
24 07 09	1,00		SPROCKET, BOTTOM AUGER	06 04 010
35 03 01	1,50		BOTTOM RETURNS AUGER, RETURNS ELEVATOR	06 04 011
35 02 01	1,50		BOTTOM GOOD GRAIN AUGER, FILLING ELEVATOR	06 04 012
31 15 07	3,00		BEARING ON FAN SHAFT, MIDDLE	06 04 026
31 15 06	1,00		BEARING ON FAN SHAFT, OUTER	06 04 031
31 15 08	4,50		FAN SHAFT	06 04 037
31 15 02	4,50		FAN ASSEMBLY	06 04 038
31 15 04	2,00		ONE FAN BLADE	06 04 039
31 15 05	0,25		FAN BLADE, EACH ADDITIONAL	06 04 039
35 03 03	1,00		BEARING, BOTTOM AUGER	06 04 044
23 07 43	0,75		FAN PULLEY	06 04 055
14 07 03	0,50		RPM TRANSMITTER	06 04 064
14 07 04	0,50		RPM SENSOR	06 04 065




## Shaker Shoe and Fanning Mill - 6

			<b>06 09: BOTTOM SHAKER SHOE AND SIEVES</b>	<b>FIG. NR.</b>
31 14 50	10,00		SIDE SEAL, BOTTOM SHAKER SHOE	06 09 002
31 14 51	1,50		SIDE GUIDE, BOTTOM SHAKER SHOE	06 09 007
31 14 52	1,00		STEPPED PLATE, BOTTOM SHAKER SHOE	06 09 010
31 14 53	0,50		BOTTOM SIEVE	06 09 022




## Shaker Shoe and Fanning Mill - 6

			<b>06 15: CHAFF SPREADER - REKORD</b>	<b>FIG. NR.</b>
31 14 86	0,75		CHAFF SPREADER ASSEMBLY	06 15 001
22 09 15	1,00		HYDRAULIC MOTOR, CHAFF SPREADER	06 15 005
31 14 87	0,50		SPREADER ROTOR, CHAFF SPREADER	06 15 018
31 14 89	1,00		SUPPORT BEARING, SPREADER ROTOR	06 15 031
22 09 14	1,00		FLOWDIVIDER, CHAFF SPREADER	06 15 033
31 14 88	2,00		DEFLECTOR PLATE, CHAFF SPREADER	06 15 034
34 25 03	0,50		GAS STRUT, DEFLECTOR PLATE	06 15 036

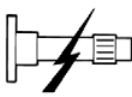


## Elevators - 7

			<b>07 02: TRANSMISSION, FILLING AND RETURNS ELEVATORS</b>	<b>FIG. NR.</b>
24 03 29	0,75		FILLING AUGER SPROCKET	07 02 001
24 03 30	1,00		DOUBLE SPROCKET, INTERMEDIATE SHAFT	07 02 002
24 04 27	0,50		DRIVE CHAIN, FILLING ELEVATOR	07 02 003
24 04 02	0,50		DRIVE CHAIN, FILLING AUGER	07 02 005
24 03 31	1,50		INTERMEDIATE SHAFT BRACKET, OUTER	07 02 009
24 03 32	2,00		SPROCKET, INTERMEDIATE SHAFT	07 02 010
24 03 03	3,00		INTERMEDIATE SHAFT, ELEVATOR DRIVE	07 02 011
24 03 33	1,00		SPROCKET, INTERMEDIATE SHAFT	07 02 012
24 03 34	0,25		TENSIONER SPROCKET	07 02 017
24 03 35	1,50		SPROCKET, RETURNS THRESHER	07 02 018
24 03 36	2,00		BRACKET, TENSIONER PULLEY	07 02 020
24 03 37	2,50		TENSIONER PULLEY BRACKET, DUST ASPIRATOR	07 02 021
24 03 38	2,50		BRACKET, INTERMEDIATE SHAFT	07 02 022
24 03 39	2,00		TENSIONER PULLEY	07 02 024
24 03 40	3,00		INNER PULLEY, INTERMEDIATE SHAFT	07 02 025
24 04 03	0,50		DRIVE CHAIN, RETURNS THRESHER	07 02 027
24 03 42	1,50		INTERMEDIATE SHAFT BEARING	07 02 028
24 03 43	1,00		TENSIONER PULLEY, DUST ASPIRATOR	07 02 042
24 03 44	1,00		SPROCKET, FILLING ELEVATOR	07 02 045

## Engine - 8

			<b>08 02: CYLINDER BLOCK</b>	<b>FIG. NO.</b>
71 06 02	65,00		CYLINDER BLOCK	08 02 001
75 21 00	33,00		BEARING BUSH, CAMSHAFT	08 02 002
71 04 00	10,50		MAIN BEARING COVER	08 02 003
71 04 00	10,50		MAIN BEARING COVER	08 02 005
75 21 00	33,00		BEARING BUSH, CAMSHAFT	08 02 008
75 21 00	33,00		BEARING BUSH, CAMSHAFT	08 02 009
75 21 00	33,00		BEARING BUSH, CAMSHAFT	08 02 010
71 09 05	1,25		PLUG, CAMSHAFT	08 02 013
71 20 00	9,75		COOLING NOZZLE	08 02 017

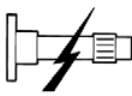


## Engine - 8

			<b>08 14: VALVE MECHANISM AND CAMSHAFT - 645 ENGINE</b>	<b>FIG. NO.</b>
72 07 00	7,00	#	ROCKER ARM	08 14 002
72 07 01	0,25		ADDITIONAL ROCKER ARM	08 14 002
72 24 00	7,00	#	BRACKET, ROCKER ARM	08 14 005
72 24 01	0,25		ADDITIONAL BRACKET, ROCKER ARM	08 14 005
72 10 00	7,00	#	SHAFT, ROCKER ARM	08 14 007
75 05 00	30,00		CAMSHAFT	08 14 011
72 16 00	5,25	#	VALVE LOCK	08 14 012
72 16 01	0,25		ADDITIONAL VALVE LOCK	08 14 012
72 16 00	5,25	#	VALVE LOCK	08 14 013
72 16 01	0,25		ADDITIONAL VALVE LOCK	08 14 013
72 14 00	5,25	#	VALVE SPRING	08 14 014
72 14 01	0,25		ADDITIONAL VALVE SPRING	08 14 014
72 12 00	11,25		INTAKE VALVE	08 14 015
72 12 01	12,50		INTAKE VALVE, ADJUSTMENT	08 14 015
72 27 00	11,25		EXHAUST VALVE	08 14 016
72 27 01	12,25		EXHAUST VALVE, ADJUSTMENT	08 14 016
75 06 00	30,00		CAMSHAFT, GEARWHEEL	08 14 017
75 10 00	33,50		TAPPET	08 14 019
75 09 00	8,00	#	VALVE PUSH ROD	08 14 020
75 09 01	8,00		RODS, COMPLETE KIT	
	1,00	#	EXTRA FOR 2 CYLINDER HEADS	

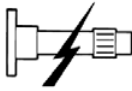


## Engine - 8

			<b>08 25: WATER PUMP</b>	<b>FIG. NO.</b>
79 19 10	3,50		WATER PUMP ASSEMBLY	
79 19 13	4,50		PUMP HOUSING	08 25 002
79 19 12	2,50		PUMP HOUSING	08 25 003
79 19 22	2,50		SEAL	08 25 005
79 19 16	4,50		SEAL, SHAFT	08 25 008
79 19 14	4,50		IMPELLER	08 25 009
79 19 16	4,50		SEAL, SHAFT	08 25 010
79 19 17	4,50		SEAL, BEARING	08 25 011
79 19 20	3,50		SEAL RING	08 25 012
79 19 18	4,50		LOCKING RING	08 25 013
79 19 17	4,50		SEAL, BEARING	08 25 014
49 19 19	4,50		GEARWHEEL	08 25 015
79 19 21	1,75		SEAL RING	08 25 021
79 19 24	2,50		SEAL RING	08 25 023
79 17 05	1,25		THERMOSTAT HOUSING	08 25 029
79 17 06	1,25		SEAL	08 25 032
79 17 07	1,75		LARGE THERMOSTAT	08 25 033
79 17 08	1,75		SMALL THERMOSTAT	08 25 034
79 17 09	2,25		THERMOSTAT HOUSING	08 25 035
79 17 12	1,75		SEAL	08 25 037
79 17 14	1,75		PIPE	08 25 047
79 17 13	1,25		PIPE	08 25 049

## Engine - 8

			<b>08 37: FUEL PREFILTER</b>	<b>FIG. NO.</b>
77 17 00	0,50		FUEL FILTER ASSEMBLY	08 37 001
77 17 05	0,25		FILTER ELEMENT	08 37 002
57 17 66	0,25		SEPARATOR	08 37 003
77 17 00	0,50		FUEL FILTER ASSEMBLY	08 37 007
57 17 67	0,25		SEPARATOR	08 37 011
58 06 20	0,25		SCREW CONNECTION	08 37 014

## Engine - 8

			<b>08 49: ELECTRONIC ENGINE MANAGEMENT</b>	<b>FIG. NO.</b>
59 23 01	0,75		ENGINE ECU	08 49 001
59 23 18	0,50		SENSOR, COOLANT TEMPERATURE	08 49 002
59 23 02	0,25		OIL PRESSURE SENSOR	08 49 003
59 23 03	0,25		ENGINE REVOLUTION SENSOR	08 49 005
59 23 08	0,25		SENSOR, INTAKE TEMPERATURE	08 49 008
59 23 20	0,25		PREHEATER CABLE	08 49 014
59 23 19	1,50		WIRING HARNESS, ENGINE	08 49 019

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



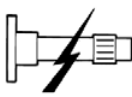


- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

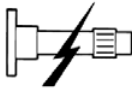


## Grain Tank and Guards - 9

			<b>09 06: TRANSMISSION - UNLOADING AUGER</b>	<b>FIG. NO.</b>
14 07 03	0,50		RPM TRANSMITTER	09 06 009
23 07 06	1,00		TENSIONER PULLEY	09 06 010
24 02 13	1,50		TENSIONER PULLEY ARM	09 06 011
24 02 31	0,75		TENSION BOLT, TENSIONER PULLEY	09 06 013
24 02 14	2,50		SHAFT SUSPENSION, RH	09 06 020
24 02 15	4,50		SHAFT SUSPENSION, LH	09 06 021
24 02 16	4,00		INTERMEDIATE SHAFT, UNLOADING AUGER	09 06 023
24 02 17	1,50		SHAFT BEARING, LH	09 06 024
24 02 18	3,50		SHAFT BEARING, RH	09 06 025
24 02 19	1,00		BRACKET, TENSIONER PULLEY	09 06 026
23 07 07	1,00		PULLEY, BELT FOR ENGINE	09 06 029
23 07 08	4,50		PULLEY, BELT FOR DUST ASPIRATOR	09 06 030
24 02 22	2,50		SHAFT SUSPENSION, LH OUTER	09 06 033
24 02 23	1,00		MAGNETIC CLUTCH ASSEMBLY	09 06 034
24 02 24	2,00		MAGNETIC CLUTCH, OVERHAUL	09 06 034
23 07 09	2,00		PULLEY, BELT FOR UNLOADING AUGER	09 06 035
24 02 26	0,50		COMMUTATOR FOR MAGNETIC CLUTCH	09 06 040
24 02 43	0,50		BELT, UNLOADING AUGER SHAFT/UNLOADING AUGER	09 06 041
24 02 27	1,50		CLUTCH DISK	09 06 042
14 07 04	0,50		RPM SENSOR	09 06 048
24 02 28	1,50		TENSIONER PULLEY ARM	09 06 063
23 07 10	1,00		TENSIONER PULLEY	09 06 064
24 02 30	0,75		TENSION BOLT, TENSIONER PULLEY	09 06 073

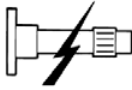


## Drive Unit - 10

  	<b>10 01: AIR INTAKE AND HYDRAULIC OIL COOLER</b>		<b>FIG. NO.</b>	
59 01 00	4,00		RADIATOR	10 01 001
59 11 03	3,00		AC CONDENSER	10 01 086
59 14 00	4,00		HYDRAULIC OIL COOLER	10 01 095
59 11 07	1,50		BEARING, ROTARY SCREEN DRIVE	10 01 098
23 07 25	1,50		PULLEY, ROTARY SCREEN DRIVE	10 01 100
59 11 04	1,50		BEARING BRACKET, ROTARY SCREEN DRIVE	10 01 101
59 11 05	1,50		CLUTCH SHAFT, ROTARY SCREEN DRIVE	10 01 102
59 11 08	0,25		TENSIONER PULLEY ARM, ROTARY SCREEN DRIVE	10 01 104
59 11 09	0,25		TENSIONER PULLEY, ROTARY SCREEN DRIVE	10 01 107
23 07 47	0,50		BELT, UNLOADING AUGER SHAFT/ROTARY SCREEN CLUTCH	10 01 --
59 11 03	1,50		BEARING, FAN BLADE	10 01 120
59 11 02	1,00		FAN BLADE, AIR INTAKE	10 01 122
15 03 01	2,00		AC RECEIVER-DRYER	10 01 156
15 03 02	0,25		AC HIGH-PRESSURE PRESSOSTAT	10 01 157
15 03 03	0,25		AC LOW-PRESSURE PRESSOSTAT	10 01 158


## Drive Unit - 10

			<b>10 06: POWER TAKE-OFF AND ENGINE ACCESSORIES</b>	<b>FIG. NO.</b>
15 05 08	1,50		EVACUATION AND RECHARGING OF REFRIGERANT	10 06 000
51 06 00	14,00		ENGINE ASSEMBLY	10 06 001
58 39 03	2,00		ENGINE SUSPENSION BRACKET	10 06 005
59 02 17	0,50		DRAIN TAP, COOLANT	10 06 010
14 07 24	0,25		SENSOR, WATER TEMPERATURE	10 06 015
15 01 43	300		AC COMPRESSOR INCL. EVACUATION AND RECHARGING	10 06 016
15 01 18	0,50		BELT FOR AC COMPRESSOR	10 06 --
58 39 22	1,50		HOSE, OIL DRAINING	10 06 029
56 12 00	0,75		PLUG, OIL DRAINING	10 06 030
23 07 16	0,50		TENSIONER PULLEY, COUNTERSHAFT	10 06 032
36 02 09	0,50		BEARING, TENSIONER PULLEY	10 06 033
36 02 15	0,50		BELT GUIDE, ENGINE BELT PULLEY	10 06 041
36 02 11	1,00		BEARING, TENSIONER PULLEY	10 06 044
36 02 10	1,00		TENSIONER PULLEY ARM	10 06 046
13 12 04	0,50		ELECTRIC ACTUATOR, THRESHING UNIT ENGAGEMENT	10 06 066
36 02 14	0,50		TENSION BOLT FOR ACTUATOR	10 06 067
58 39 23	2,00		BRACKET, ELECTRIC CYLINDER	10 06 074
58 39 24	1,50		SUPPORTING BRACKET	10 06 075
58 49 02	0,25		ENGINE OIL FILTER	10 06 079
57 17 00	0,50		FUEL FILTER	10 06 080
	2,00		EXTRA FOR REAR SUSPENSION, RH	




## Drive Unit - 10

			<b>10 11: ADBLUE TANK</b>	<b>FIG. NO.</b>
57 18 13	0,75		ADBLUE HOSE	10 11 001
57 17 90	1,00		ADBLUE TANK	10 11 002
57 17 89	0,25		ADBLUE TANK SENSOR	10 11 007
59 23 45	1,00		ADBLUE SUPPLY MODULE	10 11 013
59 23 47	0,25		ADBLUE DOSING MODULE	10 11 016
59 23 48	0,75		CONVERTER	10 11 017



# Transmissions - 11

  	<b>11 04: COUNTER DRIVE, ROTORS</b>		<b>FIG. NO.</b>	
23 09 01	3,00		HYDRAULIC CYLINDER VARIATOR ASSEMBLY	11 04 000
23 09 21	4,00		HYDRAULIC CYLINDER VARIATOR, OVERHAUL	11 04 000
23 09 24	1,00		BUSH FOR HYDRAULIC CONNECTION	11 04 001
23 09 25	4,00		SEAL RINGS FOR VARIATOR, SET	11 04 002
23 09 30	3,00		SPRING-LOADED CYLINDER VARIATOR ASSEMBLY	11 04 020
23 09 31	3,50		SPRING-LOADED CYLINDER VARIATOR, OVERHAUL	11 04 020
23 09 26	1,00		PULLEY HALF	11 04 029
23 09 07	3,50		VARIATOR SPRING	11 04 035
31 03 39	3,00		VARIATOR SHAFT	11 04 036
31 03 38	3,00		VARIATOR HUB	11 04 037
23 05 23	0,75		VARIATOR BELT	11 04 043
23 09 27	1,00		BEARING BRACKET	11 04 045
23 09 28	0,75		SUPPORT BEARING	11 04 047
31 03 40	3,00		COUNTERSHAFT, ROTORS	11 04 066
31 03 41	2,00		BEARING, COUNTERSHAFT	11 04 067
31 06 17	2,50		MAGNET, MAGNETIC CLUTCH	11 04 070
31 06 18	2,00		HUB, MAGNETIC CLUTCH	11 04 071
31 06 16	2,50		CLUTCH DISK, MAGNETIC CLUTCH	11 04 074
31 06 14	1,00		MAGNETIC CLUTCH ASSEMBLY	11 04 076
31 06 15	5,00		MAGNETIC CLUTCH, OVERHAUL	11 04 076
31 06 12	0,25		COMMUTATOR FOR MAGNETIC CLUTCH	11 04 085




## Chassis - 12

			<b>12 02: TRACTION WHEELS AND FINAL DRIVES, AUTO LEVEL</b>	<b>FIG. NR.</b>
25 30 11	7,50		BUSH FOR AUTO LEVEL SUPPORT	12 02 003
25 30 12	5,00		FINAL DRIVE ASSEMBLY, AUTO LEVEL	12 02 005
25 30 13	5,00		FINAL DRIVE SUPPORT, AUTO LEVEL	12 02 007
25 30 14	0,50		PIN FOR AUTO LEVEL HYDRAULIC RAM	12 02 008
25 30 15	5,00		STUFFING BOX FOR BRAKE INPUT SHAFT, AUTO LEVEL	12 02 009
25 30 16	5,00		SPACER RING, AUTO LEVEL SUPPORT	12 02 010
25 30 17	16,00		FRONT AXLE BEAM ASSEMBLY, AUTO LEVEL	12 02 016
22 30 13	1,00		AUTO LEVEL CYLINDER	12 02 026
25 30 19	3,00		BEARING SUPPORT PLATE	12 02 032
25 30 04	2,00		BRAKE SHAFT, OUTER	12 02 044
25 30 07	3,00		BRAKE SHAFT, INNER	12 02 045
25 30 03	3,00		SPLINED CONNECTOR	12 02 046
25 30 05	3,00		BRAKE SHAFT HUB	12 02 048

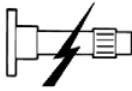


## Chassis - 12

			<b>12 09: PRESSURE LUBRICATION AND PARKING BRAKE</b>	<b>FIG. NR.</b>
25 30 41	0,50		STRAINER, LUBRICATION PUMP	12 09 006
25 30 40	1,50		LUBRICATION PUMP, GEARBOX	12 09 011
25 30 35	1,00		HANDBRAKE DRUM	12 09 030
25 30 37	1,00		HANDBRAKE ANCHOR PLATE	12 09 032
25 30 36	1,00		HANDBRAKE SHOES, SET	12 09 033
25 30 38	1,00		HANDBRAKE SHOE SPRING	12 09 034
25 30 39	1,00		HANDBRAKE ARM	12 09 036
25 30 42	3,00		GEARBOX COVER	12 09 038
25 30 43	3,50		FLANGE, OIL MOTOR	12 09 045

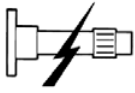


## Chassis - 12

			<b>12 27: WHEELS AND TYRES</b>	<b>FIG. NR.</b>
16 03 01	1,00		TYRE/TUBE, REAR WHEELS	12 27 002
16 02 01	1,00		RIM, REAR WHEELS	12 27 003
25 30 10	1,50		TYRE/TUBE, TRACTION WHEELS	12 27 026
25 30 09	1,50		RIM, TRACTION WHEELS	12 27 027

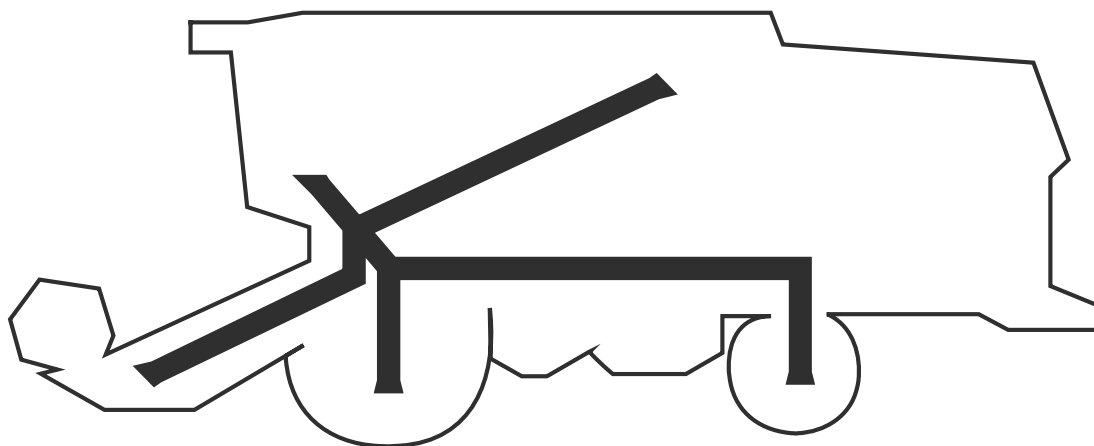 
## Operator Platform - 13

  	<b>13 04: ELECTRICAL MULTIFUNCTION LEVER</b>		<b>FIG. NO.</b>	
34 25 37	1,00		HANDLE WITH CONTROL PANEL ASSEMBLY	13 04 001
34 25 34	1,50		MULTIFUNCTION LEVER	13 04 002
34 25 36	2,00		BRACKET FOR MULTIFUNCTION LEVER	13 04 003
34 25 22	1,50		CLEVIS FOR MULTIFUNCTION LEVER	13 04 004
34 25 35	1,00		BRACKET FOR ARM SUPPORT	13 04 007
34 25 21	1,50		ECCENTRIC SHEAVE INCL. FRICTION DISK	13 04 016
34 25 23	1,00		BALL JOINT FOR ECCENTRIC SHEAVE	13 04 020
13 08 18	1,00		SWITCH FOR MULTIFUNCTION LEVER NEUTRAL	13 04 022

## Operator Platform - 13

			<b>13 09: CAB ROOF AND AIR-CONDITIONING</b>	<b>FIG. NO.</b>
15 03 06	3,00		AIR-CONDITIONING ASSEMBLY IN ROOF - EXCL. DRAINING/RECHARGING	13 09 004
15 02 25	2,00		REFRIGERANT HOSE	13 09 011
15 02 14	1,00		HEATER HOSE	13 09 012
15 02 17	1,00		ADJUSTING COCK FOR HEATER	13 09 014
15 02 14	1,00		HEATER HOSE	13 09 015
34 25 27	3,00		OUTER ROOF, GLASS FIBRE	13 09 022
13 08 21	1,00		ROTATING YELLOW BEACON	13 09 030
14 01 15	1,00		WIPER MOTOR	13 09 064
28 02 95	1,00		WIPER MECHANISM	13 09 069
28 02 35	0,50		WIPER ARM	13 09 073
13 08 19	0,50		WORK LIGHT, ROOF	13 09 124

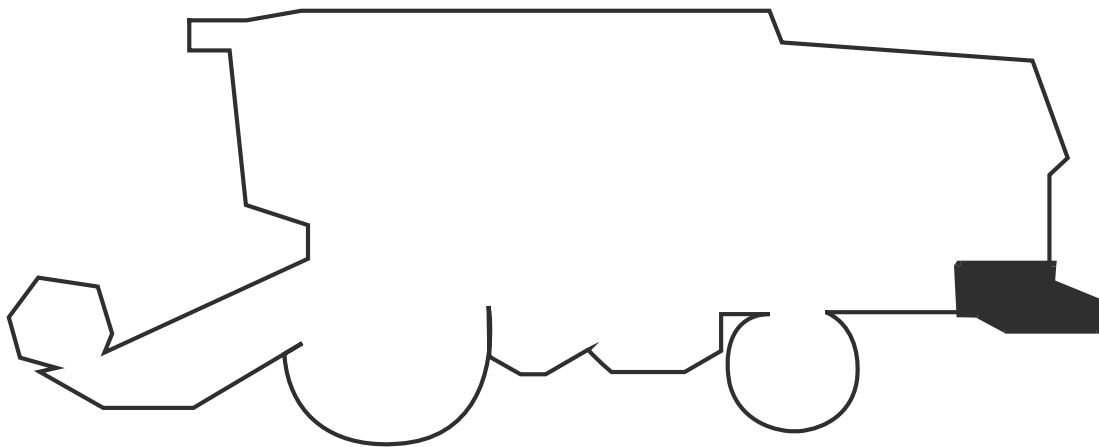 
## 14. Hydraulics



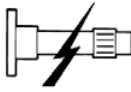


## Straw Chopper - 17

---

### 17. Straw Chopper



## Straw Chopper - 17

			<b>17 11: STRAW CHOPPER CLUTCH, REKORD</b>	<b>FIG. NR.</b>
34 16 74	1,50		STRAW CHOPPER CLUTCH, OVERHAUL	17 11 000
34 16 63	1,00		STRAW CHOPPER CLUTCH ASSEMBLY	17 11 001

## Failure Code Index - 18

<i>CODE</i>	<i>DESCRIPTION</i>	<i>TIME</i>	<i>SEC- TION/FIG</i>
24 01 17	BEARING GREASE TUBE	0,75	03 10 035
24 01 18	ELEVATOR TOP SHAFT	4,00	03 01 013
24 01 18	ELEVATOR TOP SHAFT	4,00	03 10 044
24 01 19	ELEVATOR TOP SHAFT SPROCKET	4,50	03 01 010
24 01 19	ELEVATOR TOP SHAFT SPROCKET	4,50	03 10 052
24 01 20	INTERMEDIATE PLATE	6,00	03 02 005
24 01 20	INTERMEDIATE PLATE	6,00	03 11 001
24 01 21	SLIDE RAIL	0,75	03 02 004
24 01 21	ELEVATOR CHAIN GUIDE	0,75	03 11 002
24 01 22	ANTI-WRAP PLATE	0,50	03 02 009
24 01 22	ANTI-WRAP PLATE	0,50	03 11 005
24 01 23	DRIVE CHAIN GUIDE	0,50	03 05 018
24 01 23	DRIVE CHAIN GUIDE	0,50	03 11 015
24 01 23	CROP ELEVATOR TOP SHAFT - IDLER WHEEL	5,00	11 05 008
24 01 23	IDLER WHEEL - CROP ELEVATOR INTERMEDIATE SHAFT	5,00	11 05 009
24 01 24	CHAIN GUIDE SUPPORT	0,75	03 05 019
24 01 24	CHAIN GUIDE SUPPORT	0,75	03 11 016
24 01 25	ELEVATOR CHAIN LINK	0,50	03 02 001
24 01 25	ELEVATOR CHAIN LINK	0,50	03 11 026
24 01 26	ELEVATOR TOP PULLEY	3,00	03 01 028
24 01 26	ELEVATOR TOP PULLEY	3,00	03 11 006
24 01 27	DRIVE CHAIN TOP SPROCKET	2,50	03 01 037
24 01 27	DRIVE CHAIN TOP SPROCKET	2,50	03 12 008
24 01 28	SLIP CLUTCH HUB	3,00	03 01 024
24 01 28	SLIP CLUTCH HUB	3,00	03 12 011
24 01 29	SLIP CLUTCH BACKPLATE	1,00	03 01 023
24 01 29	SLIP CLUTCH BACKPLATE	1,00	03 12 013
24 01 30	SLIP CLUTCH FRICTION DISK (TWO)	3,00	03 01 021
24 01 30	SLIP CLUTCH FRICTION DISK (TWO)	3,00	03 12 023
24 01 31	DRIVE CHAIN	0,50	03 05 009
24 01 31	DRIVE CHAIN	0,50	03 12 028
24 01 32	CHAIN GUARD SUPPORT	0,50	03 12 034
24 01 33	PULLEY GUARD	0,50	03 12 047
24 01 33	PULLEY GUARD	0,50	03 12 048

## Failure Code Index - 18

<i>CODE</i>	<i>DESCRIPTION</i>	<i>TIME</i>	<i>SEC- TION/FIG</i>
31 01 18	CONCAVE LEAD-IN PLATE	3,00	04 01 009
31 01 19	ONE DUST PLATE	0,50	04 01 014
31 01 20	CONCAVE JOURNAL	1,00	04 01 017
31 01 21	SHAFT, CONCAVE ADJUSTMENT	5,00	04 02 001
31 01 22	CONNECTING ROD, CONCAVE SUSPENSION	0,75	04 02 006
31 01 23	PIN, CONCAVE SUSPENSION	0,75	04 02 009
31 01 24	TIE ROD, CONCAVE ADJUSTMENT	0,75	04 02 012
31 01 26	FRONT PLATE, MACHINE HOUSING	5,00	04 02 026
31 01 27	REINFORCEMENT, MACHINE HOUSING	1,00	04 02 034
31 01 28	BRUSH SEAL	0,50	04 02 038
31 01 29	CRANK ARM, CONCAVE SUSPENSION	3,50	04 02 039
31 01 30	GIB KEY FOR CYLINDER SPIDER	2,50	04 03 002
31 01 31	RASP BARS, SET OF TWO	3,00	04 03 006
31 01 32	BACKING BAR FOR RASP BARS, SET OF TWO	3,00	04 03 007
31 01 33	CONCAVE COVER	0,75	04 03 016
31 01 34	CYLINDER COVER/BEARING BRACKET	2,00	04 03 017
31 01 35	CYLINDER BEARING, LH	1,50	04 03 018
31 01 36	CYLINDER SPIDER	8,00	04 03 003
31 03 00	ROTOR FEEDER		04 06 001
31 03 02	BRACKET, CONCAVE		04 06 007
31 03 03	ROTOR FEEDER SHAFT		04 06 002
31 03 04	ROTOR FEEDER BEARING		04 06 004
31 03 05	INTERMEDIATE PLATE		04 06 009
31 03 06	DISCHARGE, GUIDE PLATE		05 01 019
31 03 07	DISCHARGE, COVER PLATE - TOP		05 01 020
31 03 08	CUT OFF STRIP - DISCHARGE		05 01 022
31 03 09	DEFLECTOR PLATE TOWARDS STRAW CHOPPER		05 01 024
31 03 10	GUARD - DISCHARGE		05 01 026
31 03 11	BRACKET		05 01 029
31 03 12	DEFLECTOR PLATE		05 01 035
31 03 13	ROTOR DISCHARGE HOUSING		05 01 038
31 03 14	CURVED PLATE		05 01 040
31 03 15	DISCHARGE, COVER PLATE - BOTTOM		05 01 041
31 03 16	DEFLECTOR PLATE AT DISCHARGE		05 01 042

## Failure Code Index - 18

<i>CODE</i>	<i>DESCRIPTION</i>	<i>TIME</i>	<i>SEC- TION/FIG</i>
40 01 59	TABLE AUGER - BELT ROLLERS	0,50	11 05 017
40 01 60	TABLE AUGER - TABLE COUNTERSHAFT	0,50	11 05 018
49 19 19	GEARWHEEL	4,50	08 24 015
51 06 00	ENGINE ASSEMBLY	14,00	10 06 001
52 05 13	INTAKE PIPE	1,50	08 34 011
52 05 14	MAGNET COIL	1,00	08 34 029
52 26 01	SEAL, CYLINDER HEAD	1,75	08 17 009
55 17 03	TENSIONER PULLEY, FAN BELT	0,50	08 42 027
56 02 00	DIPSTICK	0,25	08 20 008
56 02 01	PIPE, DIPSTICK	0,75	08 20 018
56 02 02	UNION, DIPSTICK	1,00	08 20 019
56 12 00	PLUG, OIL DRAINING	0,75	10 06 030
57 01 03	SEAL RING, PUMP	4,75	08 27 002
57 16 06	ELECTRIC FUEL PUMP	0,50	08 36 001
57 17 00	FUEL FILTER	0,50	10 06 080
57 17 08	PUMP PIPE	5,00	08 36 009
57 17 18	FUEL SEDIMENT BOWL ASSEMBLY	1,00	10 10 011
57 17 19	FUEL FILTER ELEMENT	0,50	10 10 012
57 17 20	FUEL COCK	0,50	10 10 015
57 17 66	SEPARATOR	0,25	08 36 003
57 17 66	SEPARATOR	0,25	08 37 003
57 17 67	SEPARATOR	0,25	08 37 011
57 17 89	ADBLUE TANK SENSOR		10 11 007
57 17 90	ADBLUE TANK		10 11 002
57 18 13	ADBLUE HOSE		10 11 001
57 21 00	PIPE, INJECTION NOZZLE	0,75	08 27 008
57 21 01	INJECTION NOZZLE	2,00	08 27 008
57 22 14	HIGH-PRESSURE MANIFOLD	2,50	08 27 029
57 80 00	FUEL TANK	2,50	10 10 001
57 80 41	BRACKET FOR FUEL TANK	3,50	10 10 002
57 80 43	TANK GAUGE	1,00	10 10 006
58 06 09	ADAPTER	2,50	08 28 009
58 06 11	CENTRIFUGAL OIL FILTER	0,25	08 28 002
58 06 13	PIPE	0,75	08 28 013

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL