

Acer DynaVivid Graphics Dock

Service Guide

Service guide files and updates are available on the ACER/CSD web; for more information, please refer to <http://csd.acer.com.tw>

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.


CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

No.	Icon	Item	Description
2		Ventilation Slots	Air flow grill.

CAUTION: Always ensure that the ventilation slots are uncovered and air can freely flow through the grill.


Base View

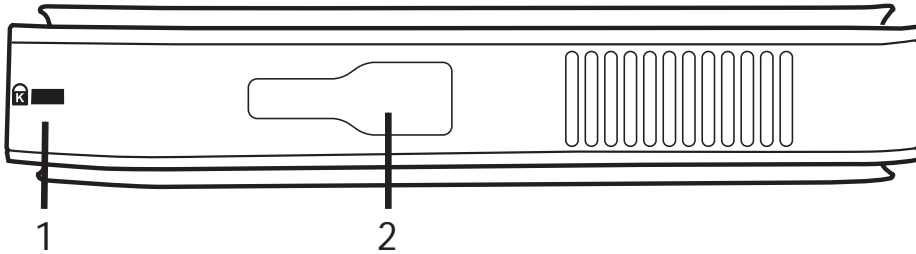

No.	Icon	Item	Description
1		Kensington lock slot	Connects to a Kensington-compatible computer security lock.
2		Lock hole	Secures the device to the stand.


Removing the I/O Board

1. See "Removing the Upper Cover" on page 13.
2. Remove the I/O cable.

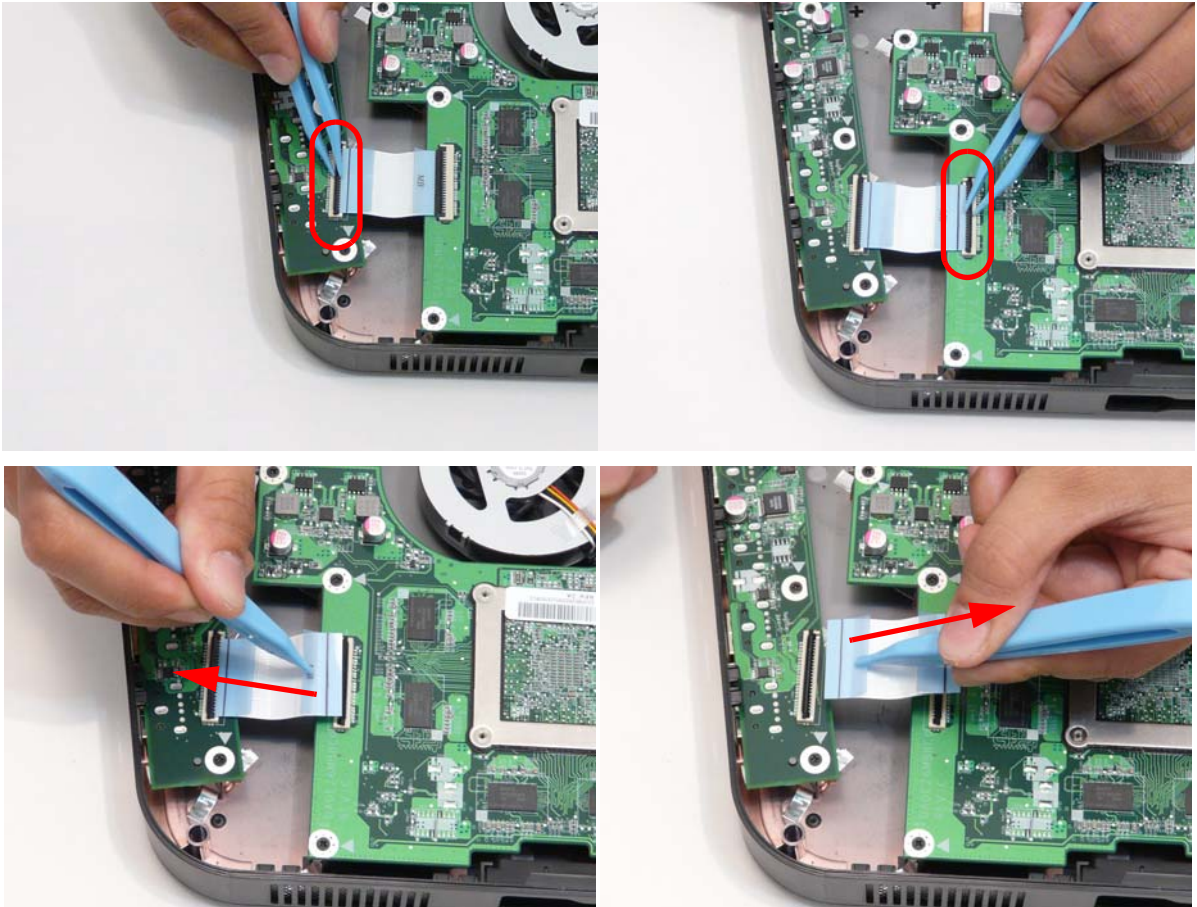
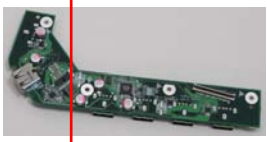



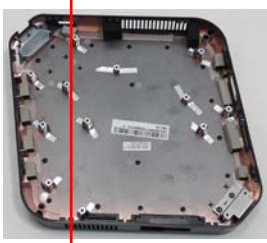



3. Remove the four (4) screws.



Step	Size	Quantity	Screw Type
Removing the IO board.	M2*6	4	

FRU List

CATEGORY	PARTNAME	ACERPARTNO.
ADAPTER		
		AP.06501.026
		AP.06503.024
		AP.0650A.012
BOARD		
		
CABLE		
	POWER CORD US 3PIN ROHS	27.TAXV7.001
		
		
CASE/COVER/BACKET ASSEMBLY		
		
		

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL