

# Service Manual



DV-500K-S

ORDER NO.  
**RRV3591**

DVD PLAYER

# DV-500K-S

**THIS MANUAL IS APPLICABLE TO THE FOLLOWING MODEL(S) AND TYPE(S).**

Model	Type	Power Requirement	Region No.	Remarks
DV-500K-S	TLXZT	AC 110 V to 240 V	3	
DV-500K-S	TLXZT3	AC 110 V to 240V	3	



For details, refer to "Important Check Points for Good Servicing" .

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

## 2.4 PANEL FACILITIES

### 2.4.1 FRONT PANEL SECTION

#### Front panel

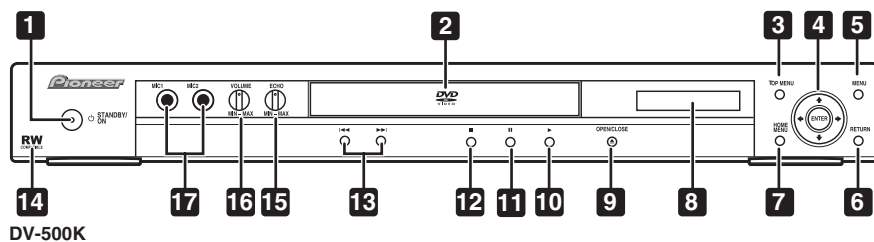

#### 1 **STANDBY/ON**

Press to switch the player on or into standby.

#### 2 **Disc tray**

#### 3 **TOP MENU**

Displays the 'top menu' of a DVD disc—this varies with the disc.

#### 4 **ENTER & cursor buttons**

Selects the current menu option.

#### 5 **MENU**

Displays a DVD disc menu—this varies with the disc and may be the same as the 'top menu'.

#### 6 **RETURN**

Returns to the previously displayed menu screen.

#### 7 **HOME MENU**

#### 8 **Display**

Description of the display.

#### 9 **OPEN/CLOSE**

Press to open or close the disc tray.

#### 10 **▶**

Press to start or resume playback.

#### 11 **||**

Press to pause playback. Press again to restart.

#### 12 **■**

Press to stop the disc (you can resume playback by pressing (play)).

#### 13 and **◀▶**

- Press and hold for fast reverse/forward scanning.
- Press to jump to the previous/next chapter or track.

#### 14 **RW COMPATIBLE**

This mark indicates compatibility with DVD-RW discs recorded on a DVD recorder in Video Recording mode.

#### 15 **ECHO control**

Adjust the amount of echo effect added to the vocals

#### 16 **VOLUME control**

Controls only the level of the microphone(s).

#### 17 **MIC 1/MIC2 input jacks**



## 6.4 FUNCTIONAL SPECIFICATION OF THE SHORTCUT KEY

Only during normal playback, the following shortcut keys can be assigned by pressing a required key after pressing the ESC key of the remote control unit. To quit, press the ESC key

Command Contents	Conditions	Remote Control Key Name	Remote Control Code
Memory clear and region / revision indication		CLEAR (*1)	A8-45
Average value measurement of DVD error rate		5 (*1)	A8-05
CD error rate measurement		5 (*1)	A8-05
Scart terminal output : VIDEO	WY, models equipped with Scart terminal	AUDIO	AF-BE
Scart terminal output : S-VIDEO		SUBTITLE	AF-36
Scart terminal output : RGB		ANGLE	AF-B5
Progressive OFF	Only for progressive models	R_SKIP	A3-9D
Progressive ON		F_SKIP	A3-9C
ZOOM ON (X2 -> X4 -> x1)		ZOOM	AF-37
Service mode indication (error rate indication, etc.)		CHP/TIM (*1)	A8-13
Model information indication		CHAP (*1)	A8-40
Title search Input mode IN Title No. input Search execution		SIDE A (*1) Numbers (*1) PLAY (*1)	A8-4D A8-00 to A8-09 A8-17
Region confirmation mode		A.MON (*1) Numbers (*1)	A8-1E A8-01 to A8-08

\*1 : Service mode remote control unit

### • Service mode indication (ESC + CHP/TIM keys)

ID Address

The error rate is always displayed in exponential notation, e.g., \*.\* \* e - \*, for both DVDs and CDs.  
EDC/ID/AV 1 error history (ID Address, EDC/ID Error, last eight errors)

### • Calculation of the average error rate (ESC + "5" [Service mode remote control unit] keys)

The average of the last eight error rates is calculated and indicated in exponential notation. After the calculation is completed, "OK" or "NG" is displayed. If "NG" is displayed, the disc tray will open (for both DVDs and CDs)  
For DVDs: OK with 5.0e-4 or less, for CDs: OK with 7.6e-3 or less

### • Indication of model information (ESC + CHAP keys)

The items from 12 to 15 of the SERVICE MODE Indications are displayed. However, in the indications, S in the standard test mode is changed to CHIP VERSION, and M is changed to FL VERSION.

### • Region confirmation mode (ESC + A.MON [Service mode remote control unit] + "1"- "8" [Service mode remote control unit] keys)

After you press the A.MON key while holding the ESC key pressed and then input the region number, if the number is different from that set in the unit, an error message is displayed, and the tray opens.

■

5

■

6

■

7

■

8

■

A

■

B

■

C

■

D

■

E

■

F

■

5

■

6

DV-500K-S

■

7

■

8

■

A



B

C

D

E

F

A

B

C

D

E

F

①

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL