

Deutz diesel engine F4L 912
John Deere diesel engine 4239 DF

SPARE PARTS CATALOGUE

CC 21

Series 2

VIBRATORY ROLLER

S-10205-2

P/N 11 15 40

DYNAPAC

Dynapac Heavy Equipment AB

PO Box 504·S-371 23 KARLSKRONA·SWEDEN

Tel. 0455-229 30·Telex 43041 dynkar

Telecopier 0455-295 39

We reserve the right to change specifications without notice

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

0010

 
Utgåva Issue	Bildnr Picture No	RAMAR		FRAMES		Grupp Group	Sida Page			
1989-06	14893					10	4			
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21									
0020	1	1			34 73 94	Främre ram	Front frame			SE SIDA 006 , 1B07
0040	2	1			34 76 05	Bakre ram	Rear frame			
0060	3	1				Styrljed	Steering hitch			
0080	4	1			34 78 69	Skyddsplåt	Cover plate			
0100	5	4			50 00 43	Skruv	Screw			
0120	6	4			61 50 44	Bricka	Washer			
0140	7	1			81 52 15	Säkerhetslänk	Safety link			
0160	8	1			34 37 75	Wire	Wire			
0180	9	1			50 20 31	Skruv	Screw			
0200	10	1			61 50 61	Bricka	Washer			
0220	11	1			50 02 17	Skruv	Screw			
0240	12	1			58 60 22	Mutter	Nut			
0260	13	1			63 50 19	Sprint	Pin			

Utgåva Issue		Bildnr Picture No		SPRINKLERSYSTEM -476 345		SPRINKEL SYSTEM -476 345		Grupp Group		Sida Page	
1989-06		14897						10		14	
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes		
	CC 21										
0020	1	8		50 00 70	Skruv	Screw					
0040	2	8		58 60 21	Mutter	Nut					
0060	3	8		60 00 11	Bricka	Washer					
0080	4	1		34 77 00	Tvärbalk	Water bucket					
0100	5	3		92 69 90	Låsdon	Holder					
0120	6	1		34 84 34	Vattentank	Water tank					
0140	7	1		33 32 28	Tanklock	Cap	D	3			
0160	8	1		84 26 64	Vattensil	Water strainer	D	3			
0180	9	1		80 19 98	Nivåmätare	Gauge	D	4			
0200	10	1		92 14 27	Packning	Gasket	D	4			
0220	11	4		53 30 38	Skruv	Screw					
0240	12	3		92 49 96	Adapter	Adapter					
0260	13	1		92 36 90	Vattenpump	Water pump	D	3			
0261					.det se sida 022 , 1b23comp page 022 , 1b23					
0280	14	1		92 80 12	Plugg	Plug	D	3			
0300	15	8		50 00 13	Skruv	Screw					
0320	16	8		61 50 42	Bricka	Washer					
0330		8		92 83 81	Bricka	Washer					
0340	17	4		92 37 34	Adapter	Adapter					
0360	18	1		16 01 22	O-ring	O-ring	D	3			
0380	19	2		92 39 84	Rörklammer	Pipe clamp					
0400	20	1		92 49 86	Kulventil	Ball valve					
0420	21	4		61 50 42	Bricka	Washer					
0440	22	6		31 30 02	Slangklämma	Hose clamp					
0460	23	1XL		24 40 54	Slang	Hose			L=75MM		
0480	24	1XL		24 40 54	Slang	Hose			L=200MM		
0500	25	1XL		24 40 54	Slang	Hose			L=1230MM		
0520	26	1		34 76 94	Lucka	Cover					
0540	27	6		92 70 18	Vridtapp	Knob					
0560	28	6		92 52 39	Fästring	Washer					
0580	29	3		84 27 70	Fäste	Bracket					
0600	30	3		50 00 28	Skruv	Screw					
0620	31	3		61 50 44	Bricka	Washer					
0640	32	3		82 16 02	Fäste	Bracket					
0660	33	3		84 28 16	Mellanlägg	Rubber strip					
0680	34	6		50 00 13	Skruv	Screw					
0700	35	6		61 50 44	Bricka	Washer					
0720	36	3		92 38 76	Klämma	Clamp					
0740	37	3		92 38 59	Täckplåt	Cover plate					
0760	38	6		50 00 79	Skruv	Screw					
0780	39	6		60 00 04	Bricka	Washer					
0800	40	6		57 00 04	Mutter	Nut					
0820	41	1		34 38 87	Sprinklerrör	Sprinkler tube	D	3			
0840	42	2		92 36 83	Plugg	Plug					
0860	43	2		34 77 42	Vindavvisare	Wind deflector					
0880	44	1		92 45 44	Adapter	Adapter					
0900	45	4		92 36 80	Hållare	Bracket					
0920	46	4		92 36 79	Munstycke	Nozzle	D	3			
0940	47	4		92 36 82	Packning	Gasket	D	3			
0960	48	4		92 36 81	Snabbmutter	Quickjet cap	D	3			
0980	49	4		49 94 44	Sil	Strainer	D	3			

DYNAPAC

DRUM

VALS

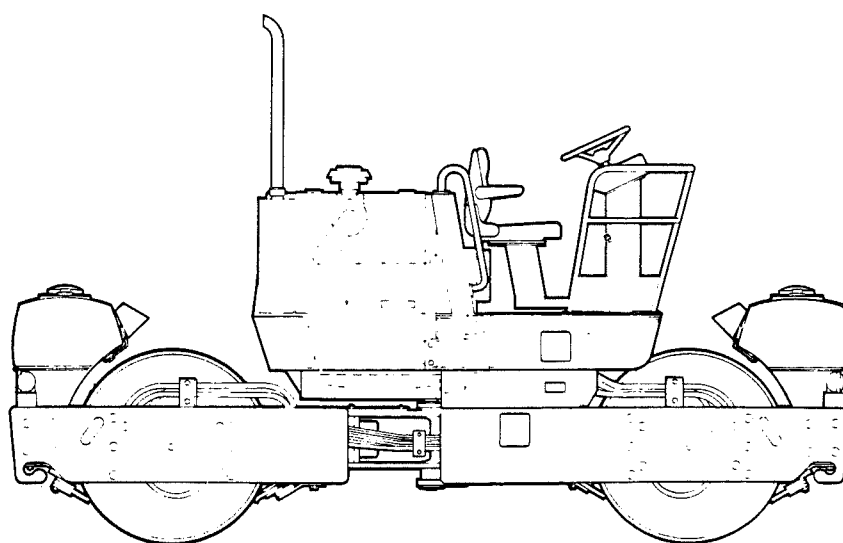


0030

Utgåva Issue		Bildnr Picture No		VALSVÄXEL -476 325 VALSNR. -871015		DRUM GEAR BOX -476 325 DRUMNO. -871015		Grupp Group		Sida Page	
1989-06		13862-2						20		12	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes	
	CC 21										
1040	52	4			42 31 31	.SkruvScrew				
1060	53	2			42 31 32	.O-ringO-ring	D	3		
1080	54	1			42 31 15	.RingdrevRing gear				
1100	55	2			42 31 08	.AxiallagerThrust bearing	D	3		
1120	56	1			42 35 48	.KugghjulGear	D	4		
1140	57	1			42 35 52	.TryckbrickaThrust washer				
1160	58	1			34 88 59	Adapter	Adapter			476 178-	
1180	59	1			92 94 67	Luftnippel	Air vent	D	3	476 178-	

DYNAPAC

ENGINE

 MOTOR

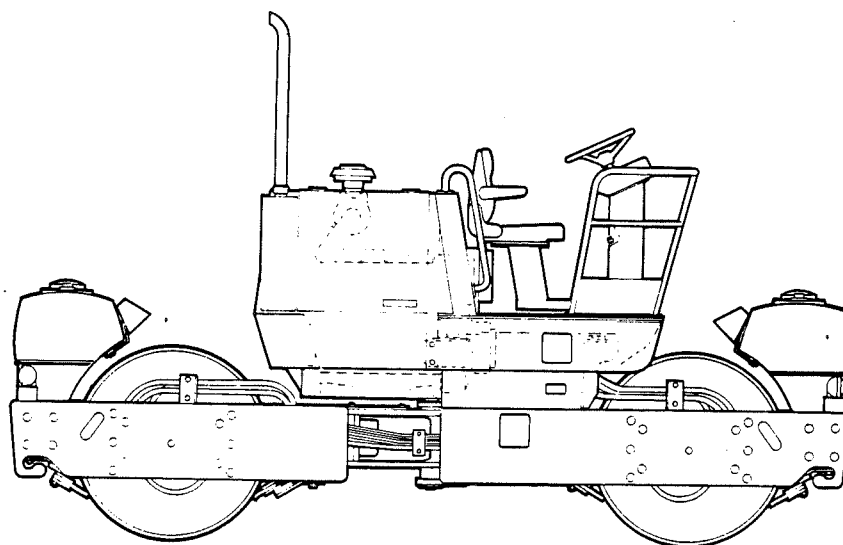


0050

Utgåva Issue		Bildnr Picture No		BRÄNSLETANK TILLBEHÖR		FUEL TANK ACCESSORIES		Grupp Group	Sida Page	
1989-06		14907						30	12	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21									
0020	1	1			34 76 32	Tanklock	Tank cover			
0040	2	1			34 77 88	Batteriplt	Battery plate			
0060	3	1			92 70 90	Glidskenor	Slide bars			
0080	4	1			92 70 91	Låsanordning	Fastener			
0100	5	1			92 70 92	Fäste	Bracket			
0120	6	1			92 70 93	Bricka	Washer			
0140	7	2			50 00 12	Skruv	Screw			
0160	8	6			61 50 42	Bricka	Washer			
0180	9	12			53 50 04	Skruv	Screw			
0200	10	12			60 00 02	Bricka	Washer			
0220	11	12			92 39 76	Mutter	Nut			
0240	12	4			53 50 14	Skruv	Screw			
0260	13	4			58 60 02	Mutter	Nut			
0280	14	1			34 76 36	Packning	Gasket			
0300	15	1			92 36 57	Tanklock	Filler cup	D	3	
0320	16	1			81 33 14	Bränslenivågivare	Fuel level sender	D	3	
0340	17	1			81 35 15	Packning	Gasket			
0360	18	5			50 00 06	Skruv	Screw			
0380	19	5			61 50 41	Bricka	Washer			
0400	20	14			50 00 30	Skruv	Screw			
0420	21	14			61 50 44	Bricka	Washer			
0440	22	1			33 21 54	Plugg	Plug	D	3	

DYNAPAC

HYDRAULIC SYSTEM

 HYDRAULSYSTEM

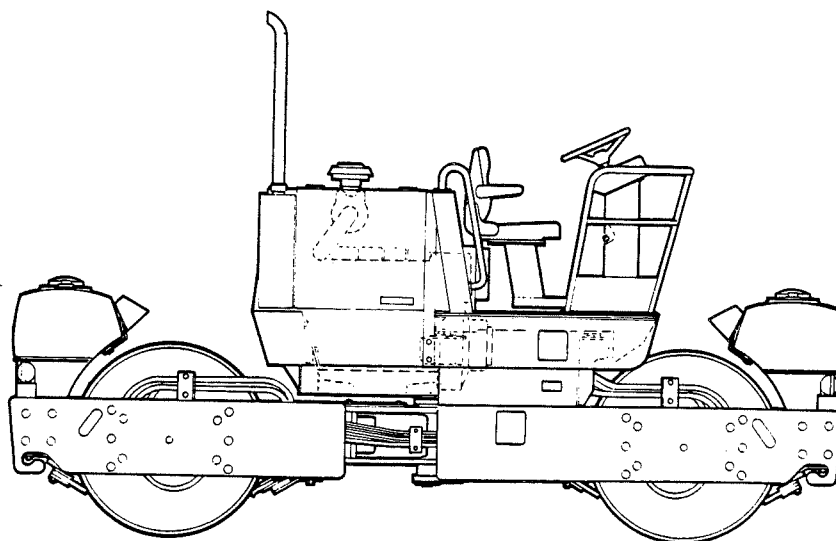

0030

Utgåva Issue		Bildnr Picture No		HYDRAULPUMP FRAMDRIVNING		HYDRAULIC PUMP PROPULSION		Grupp Group	Sida Page
1989-06		14914						50	12
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21								
1020	51	1		81 36 16	..O-ring.....	..O-ring.....			
1040	52	1		81 36 12	..O-ring.....	..O-ring.....			
1060	53	1		81 36 21	..Låsring.....	..Retaining ring.....			
1080	54	2		48 03 18	..Rullager.....	..Roller bearing.....			
1100	55	2		81 38 19	..O-ring.....	..O-ring.....			
1120	56	N		81 38 58	..Mellanlägg.....	..Shim.....			
1140	57	2		81 38 57	..Lagertapp.....	..Bearing journal.....			
1160	58	6		81 38 45	..Bricka.....	..Washer.....			
1180	59	6		81 38 35	..Skruv.....	..Screw.....			
1200	60	4		81 38 40	..Skruv.....	..Screw.....			
1220	61	2		81 38 50	..Hylsfäste.....	..Sleeve retainer.....			
1240	62	2		92 71 36	..Servo cylinder kpl.....	..Servo cylinder cpl.....			
1260	63	2		81 38 18	..O-ring.....	..O-ring.....			
1280	64	2		81 38 17	..O-ring.....	..O-ring.....			
1300	65	2		48 02 90	..Skruv.....	..Screw.....			
1320	66	2		48 02 92	..Bricka.....	..Washer.....			
1340	67	2		81 38 60	..Fjäderstyrning.....	..Spring guide.....			
1360	68	2		48 03 08	..Fjäder.....	..Spring.....			
1380	69	2		48 03 03	..Servo kolv.....	..Servo piston.....			
1400	70	2		81 38 24	..Pinne.....	..Pin.....			
1420	71	4		81 38 31	..Låsbricka.....	..Retaining ring.....			
1440	72	1		81 36 34	..Packning.....	..Gasket.....			
1460	73	3		81 36 13	..O-ring.....	..O-ring.....			
1480	74	1		81 36 28	..Strypplugg.....	..Orifice plug.....			
1500	75	1		81 36 32	..Manöverventil, servo.....	..Control valve, servo.....			
1501					..det se sida 016, 1e15.....	..comp page 016, 1e15.....			
1520	76	9		81 38 44	..Bricka.....	..Washer.....			
1540	77	9		81 38 33	..Skruv.....	..Screw.....			
1560	78	1		81 38 88	..Distansring.....	..Spacer ring.....			
1580	79	1		81 38 87	..Manöverarm.....	..Control level.....			
1600	80	1		81 38 47	..Bricka.....	..Washer.....			
1620	81	1		81 38 16	..Mutter.....	..Nut.....			

0080

Utgåva Issue	Bildnr Picture No	HYDRAULMOTOR FRAMDRIVNING BAK	HYDRAULIC MOTOR PROPULSION REAR	Grupp Group	Sida Page					
1989-06	14919			50	22					
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21									
0020	1	1			48 15 66	Hydraulmotor, kpl.....	Hydraulic motor, cpl.....		C 3	
0040	2	1			92 78 55	.PackningssatsSeal kit		D 3	78)
0060	3	1			48 16 16	.Axeltätning kplShaftseal cpl			
0080	4	1			81 36 21	..LåsringRetaining ring			
0100	5	1			81 36 12	..O-ringO-ring			
0120	6	1			81 36 16	..O-ringO-ring			
0140	7	1			48 12 11	.MotordrivhusMotor housing			
0160	8	1			81 38 25	.PluggPlug			
0180	9	1			81 38 21	.PinnePin			
0200	10	1			48 11 32	.PluggPlug			
0220	11	1			81 36 18	..O-ringO-ring			
0240	12	2			81 38 22	.PinnePin			
0260	13	1			81 38 15	.RullagerRoller bearing			
0280	14	1			48 12 17	.FlödesplattaSwash plate			
0300	15	1			92 78 54	.DrivaxelDrive shaft			
0320	16	1			48 12 27	.Cyl. block sats kpl.Cyl. block kit cpl.			
0340	17	9			92 78 53	..Kolv, kplPiston, cpl			
0360	18	1			48 12 15	..KolvmedbringarePiston retainer			
0380	19	1			48 12 14	..StyrhylsaGuide sleeve			
0400	20	6			48 12 26	..FjäderSpring			
0420	21	1			92 78 52	..Cylinder blockCylinder block			
0440	22	1			48 12 09	..FjäderhållareSpring holder			
0460	23	1			48 12 24	..FjäderSpring			
0480	24	1			48 12 10	..FjäderstyrningSpring guide			
0500	25	1			48 12 19	..FjäderhållareSpring holder			
0520	26	1			48 12 07	..LåsringRetaining ring			
0540	27	1			48 12 16	..StyrningGuide ring			
0560	28	1			48 12 18	..LagerplattaBearing plate			
0580	29	1			81 38 51	.PinnePin			
0600	30	1			48 12 06	.PinnePin			
0620	31	1			92 09 61	.RullagerRoller bearing			
0640	32	1			92 28 40	.PackningGasket			
0660	33	N			48 12 20	..MellanläggShim			
0680	34	1			48 12 21	..VentilplattaValve plate			
0700	35	1			48 12 22	..Lock, bakreCover, rear			
0720	36	8			81 38 46	.BrickaWasher			
0740	37	4			81 38 39	.SkruvScrew			
0760	38	3			81 38 38	.SkruvScrew			
0780	39	1			92 78 51	..MellanplattaConnection plate			
0800	40	2			92 78 50	.SkruvScrew			
0820	41	2			81 38 45	.BrickaWasher			
0840	42	2			81 36 15	..O-ringO-ring			
0860	43	1			81 36 11	..O-ringO-ring			
0880	44	2			81 36 20	..StödtringBack-up ring			
0900	45	1			33 30 83	.KortslutningsventilBy pass valve		D 3	
0920	46	2			81 36 15	..O-ringO-ring			
0940	47	2			81 36 20	..StödtringBack-up ring			
0960	48	4			92 79 36	.SkruvScrew			

78) Innehåller pos:5,6,11 och 32 Includes ref:5,6,11 and 32

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

0100

Utgåva Issue		Bildnr Picture No			HYDRAULSYSTEM VIBRATION JOHN DEERE		HYDRAULIC SYSTEM VIBRATION JOHN DEERE		Grupp Group	Sida Page
1989-06		14921							50	32
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21									
0980	49	1			33 41 32	Adapter	Adapter			
1000	50	2			91 01 62	Mät nipple	Measure nipple	D	3	
1020	51	N			31 31 02	Buntband	Cable tie			
1040	52	1			23 46 20	Adapter	Adapter			
1060	53	1			34 75 72	Manöverventil	Control valve	C	3	
1061						.det se sida 038 , 1f13comp page 038 , 1f13			
1080	54	4			50 00 96	Skruv	Screw			
1100	55	4			61 50 43	Bricka	Washer			
1120	56	1			33 42 48	Adapter	Adapter			
1140	57	3			33 41 38	Adapter	Adapter			
1160	58	3			33 46 04	Adapter	Adapter			
1180	59	1			57 00 05	Mutter	Nut			
1200	60	1			23 41 31	Adapter	Adapter			
1220	61	1			33 41 64	Adapter	Adapter			
1240	62	1			48 26 01	Slang	Hose	D	3	
1260	63	1			48 23 54	Slang	Hose	D	3	
1280	64	1			48 25 77	Slang	Hose	D	3	
1300	65	1			48 25 79	Slang	Hose	D	3	
1320	66	1			81 34 99	Adapter	Adapter			
1340	67	2			92 11 19	Klamma	Clamp			
1360	68	2			33 41 55	Adapter	Adapter			
1380	69	1			34 76 14	Adapter	Adapter			
1400	70	2			23 42 43	Adapter	Adapter			
1420	71	1			50 00 21	Skruv	Screw			
1440	72	1			57 00 05	Mutter	Nut			

Utgåva Issue		Bildnr Picture No		HYDRAULSYSTEM STYRNING		HYDRAULIC SYSTEM STEERING		Grupp Group	Sida Page
1989-06		14926						50	42
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21								
0020	1	1		34 71 10	Cylinder	Cylinder			
0021					.det se sida 046 , 1f21comp page 046 , 1f21			
0040	2	2		81 34 35	Adapter	Adapter			
0060	3	1		23 43 41	Adapter	Adapter			
0080	4	1		48 22 47	Slang	Hose	D	3	
0100	5	1		48 22 47	Slang	Hose	D	3	
0120	6	1		34 78 02	Fäste	Bracket			
0140	7	1		33 04 35	Adapter	Adapter			
0160	8	1		333830400	Nippel	Nipple			
0180	9	1		91 01 61	Mät nipple	Measure nipple			
0200	10	1		48 21 00	Slang	Hose	D	3	
0220	11	1		23 43 83	Adapter	Adapter			
0240	12	1		33 41 94	Reducering	Reducer			
0260	13	1		48 24 47	Slang	Hose	D	3	
0280	14	1		81 34 44	Adapter	Adapter			-476 061
0290		1		23 46 78	Adapter	Adapter			476 062-
0300	15	1		48 22 61	Slang	Hose	D	3	-476 061
0310		1		48 22 40	Slang	Hose			
0320	16	1		48 20 84	Slang	Hose	D	3	
0340	17	1		33 75 36	Filter	Filter			
0360	18	1		21 21 08	.FilterelementFilter element			
0380	19	2		33 44 10	Adapter	Adapter			-476 061
0390		1		33 44 10	Adapter	Adapter			476 062-
0400	20	2		81 34 49	Bussning	Bushing			
0420	21	4		50 20 16	Skruv	Screw			
0440	22	4		61 50 43	Bricka	Washer			
0460	23	4		92 57 23	Adapter	Adapter			
0480	24	1		308001605	Smörjslang	Grease hose	D	3	
0500	25	1		31 00 22	Smörjnippel	Grease nipple			
0520	26	1		23 43 58	Adapter	Adapter			
0540	27	4		50 00 30	Skruv	Screw			
0560	28	4		60 00 08	Bricka	Washer			
0580	29	1		48 12 64	Styrventil	Steering valve			
0581					.det se sida 044 , 1f19comp page 044 , 1f19			
0600	30	1		91 14 99	Ventilblock	Valve block	C	3	
0620	31	1		92 03 63	.PackningssatsGasket set	D	3	
0640	32	2		48 09 23	..SkruvScrew			
0660	33	1		23 21 24	Plugg	Plug			
0680	34	1		23 47 18	Adapter	Adapter			476 062-

0010

Utgåva Issue		Bildnr Picture No		ELUTRUSTNING DEUTZ		ELECTRICAL EQUIPMENT DEUTZ		Grupp Group		Sida Page	
1989-06		14928						60		4	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes	
	CC 21										
0020	1	1			34 77 70	Kabelhärva	Wire harness				
0040	2	1			34 77 71	Kabelhärva	Wire harness				
0060	3	1			34 80 79	Kabelhärva	Wire harness				
0080	4	1			34 73 54	Kabelhärva	Wire harness				
0100	5	1			34 80 80	Kabelhärva	Wire harness				
0120	6	1			34 73 02	Kabelhärva	Wire harness				
0140	7	1			47 00 20	Batteri	Battery				
0160	8	1			34 38 37	Batterihållare	Battery bracket				
0170	8A	1			92 80 21	.VredKey	D	4		
0180	9	2			81 33 30	Skruv	Screw				
0200	10	1			34 27 74	Gummimatta	Rubber sheet				
0220	11	1			93 01 50	Batterifrånskiljare	Battery switch				
0240	12	2			53 30 38	Skruv	Screw				
0260	13	2			58 60 02	Mutter	Nut				
0280	14	2			60 00 04	Bricka	Washer				
0300	15	1			34 42 90	Fäste	Bracket				
0320	16	2			50 00 28	Skruv	Screw				
0340	17	2			58 60 18	Mutter	Nut				
0360	18	6			92 10 36	Klamma	Clamp				
0380	19	1			34 76 58	Jordkabel	Ground cable				
0400	20	1			34 78 10	Jordkabel	Ground cable				
0420	21	1			34 76 59	Kabel	Cable				
0440	22	1			34 57 28	Jordkabel	Ground cable				
0460	23	1			97 50 65	Startrelä	Starter relay	D	3		
0480	24	9			50 00 12	Skruv	Screw				
0500	25	8			61 50 42	Bricka	Washer				
0520	26	1			34 58 69	Motstånd	Resistance				
0540	27	2			99 90 23	Signalhorn	Horn			-476296 (USE 999027)	
0550		2			99 90 27	Signalhorn m. fäste	Horn w. bracket	D	3	476297-	
0560	28	2			99 90 24	Fäste	Bracket			-476296 (USE 999027)	
0580	29	2			99 90 25	Mutter	Nut			-476296	
0590		2			58 60 03	Mutter	Nut			476297-	
0600	30	2			50 00 53	Skruv	Screw				
0620	31	2			61 50 43	Bricka	Washer				
0640	32	1			92 29 16	Kopplingsplint	Terminal				
0660	33	2			53 30 12	Skruv	Screw				
0680	34	4			98 50 66	Strålkastare	Headlamp				
0700	35	4			98 50 87	Glödlampa	Bulb				
0720	36	2			98 50 50	Baklykta	Rear lamp				
0740	37	2			98 50 13	Glödlampa	Bulb				
0760	38	4			90 91 53	Genomföring	Grommet				
0780	39	1			80 16 67	Givare	Sensor	D	3		
0800	40	2			34 92 45	Lamphållare	Lampholder	D	3	476346-	
0820	41	3			80 16 69	Tätmutter	Sealnut				
0840	42	2			80 17 05	Givare	Sensor				
0860	43	4			50 00 53	Skruv	Screw			476346-	
0880	44	8			61 50 43	Bricka	Washer			476346-	
0900	45	4			57 00 05	Mutter	Nut			476346-	
0920	46	1			92 10 47	Klämma	Clamp				
0940	47	N			31 30 68	Buntband	Cable tie			L=92MM	
0960	48	N			31 30 41	Buntband	Cable tie			L=186MM	

0050

Utgåva Issue		Bildnr Picture No		INSTRUMENT PANEL VÄNSTER		CONTROL PANEL LEFT		Grupp Group	Sida Page
1989-06		14932						60	14
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21								
0020	1	6		55 01 31	Skruv	Screw.....			
0040	2	N		31 30 41	Buntband	Cable tie			
0060	3	1		34 84 93	Plåt	Plate			
0080	4	1		34 77 64	Varv/timräknare.....	Tach/hourmeter.....	D 3		
0100	5	1		80 22 56	Oljetemp.mätare.....	Oiltemp.gauge	D 3		DEUTZ ENGINE
0120		1		98 90 76	Vattentemp.mätare	Watertemp.gauge.....	D 3		JOHN DEERE ENGINE
0140	6	1		98 91 49	Hydr.oil temp.mätare	Hydr.oil.temp.gauge	D 3		
0160	7	1		80 21 52	Voltmätare	Voltmeter	D 3		
0180	8	1		98 90 79	Bränslemätare	Fuelgauge	D 3		
0200	9	1		93 20 36	Nödstoppsknapp	Emergency stop button....	D 3		
0220	10	1		93 20 60	Kontaktblock	Contact block	D 3		
0240	11	1		93 01 63	Kontaktblock	Contact block	D 3		
0260	12	1		34 86 17	Omb.sats startvred	Rebild kit startersw.	D 3		-476 071
0280	12A	1		93 01 92	.VredSelector	D 3		476 072-
0300	13	1		93 01 95	.KontaktblockContact block	D 3		476 071-
0320	14	1		93 01 54	.KontaktblockContact block	D 3		
0340	14	1		92 89 28	.StartknappStarterswitch	D 3		476 072-
0360	15	1		93 01 52	Strömställare.....	Switch	D 3		
0380	16	1		93 20 57	Vred	Selector	D 3		
0400	17	1		93 01 98	Kontaktblock	Contact block	D 3		
0420	18	4		98 50 12	Glödlampa	Bulb.....			
0440	19	3		98 51 46	Signallampa	Controllamp	D 3		
0460	20	3		91 14 56	Plugg	Plug.....			
0480	21	2		93 01 51	Strömställare.....	Switch	D 3		
0500	22	1		93 20 32	Signalhornsknapp	Horn button	D 3		
0520	23	1		34 73 11	Kabelhärva	Cable harness			
0540	24	1		34 73 26	Kabelhärva	Cable harness			


0025

Utgåva Issue		Bildnr Picture No		VRIDBAR PANEL 476 391-		SVIVEL SEAT 476 391-		Grupp Group	Sida Page
1989-06		14935						70	10
Pos. Fig.	Antal/Quantity			Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC								
0020	1	1		34 74 54	Styrpanel	Console			
0040	2	1		34 54 52	Instrumentlåda	Instrument box	D	3	SEE GROUP 60
0060	3	8		50 00 53	Skruv	Screw			
0080	4	8		58 60 03	Mutter	Nut			
0100	5	8		60 00 06	Bricka	Washer			
0120	6	1		34 74 79	Mittkonsol	Centerbracket			
0140	7	2		55 01 32	Skruv	Screw			
0160	8	1		34 83 36	Lock	Cover			
0180	9	3		92 65 51	Glidlager	Plain bearing			
0200	10	5		50 00 28	Skruv	Screw			
0220	11	2		61 50 44	Bricka	Washer			
0240	12	2		34 83 38	Tapp	Stud			
0260	13	1		34 74 66	Axel	Shaft			
0280	14	1		92 69 63	Rattmutter	Wheel nut	D	3	
0300	15	1		34 37 82	Ratt	Steering wheel	D	3	
0320	16	1		27 11 29	Rattmärke	Steering wheel sign	D	3	
0340	17	1		31 20 82	Rattknopp	Knob	D	3	
0360	18	2		34 83 37	Låspinne	Lock pin			
0380	19	2		35 00 09	Kil	Key			
0400	20	1		34 74 62	Länkaxel	Cardan shaft			
0420	21	1		34 74 63	Axel	Shaft			
0440	22	1		34 74 67	Fäste	Bracket			
0460	23	1		34 74 70	Ring	Ring			
0480	24	1		34 91 13	Fläns	Flange			
0500	25	3		50 00 31	Skruv	Screw			
0520	26	6		60 00 08	Bricka	Washer			
0540	27	1		34 76 15	Lock	Cover			
0560	28	19		50 01 85	Skruv	Screw			
0580	29	19		61 50 42	Bricka	Washer			
0600	30	2		34 36 61	Fäste	Bracket			
0620	31	2		34 36 60	Lucka	Cover			
0640	32	1		34 76 69	Adapter	Adapter			
0660	33	2		92 65 52	Lager	Bearing			
0680	34	1		30 02 34	Fjäder	Spring			
0700	35	1		61 50 25	Bricka	Washer			
0720	36	1		34 76 68	Stång	Rod			
0740	37	1		31 20 61	Kula	Knob			
0760	38	1		34 76 19	Stopplack	Stop lug			
0780	39	1		34 43 74	Förarstol	Driver seat	D	4	
0785		1		21 21 15	Armstöd vänster	Arm rest left	D	4	
0790		1		21 21 14	Armstöd höger	Arm rest right	D	4	
0800	40	1		92 62 14	Smörjnippel	Grease fitting			
0820	41	2		58 60 02	Mutter	Nut			
0840	42	2		57 00 06	Mutter	Nut			
0860	43	1		34 83 31	Stolskydd	Seat cover			

DYNAPAC

DECALS

 
DEKALER

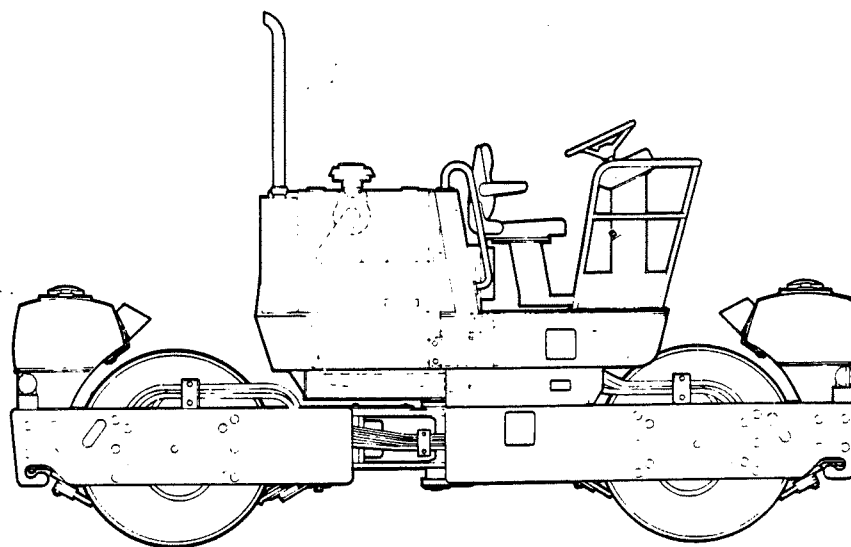

DYNAPAC

OPTIONAL EQUIPMENT

 EXTRA UTRUSTNING

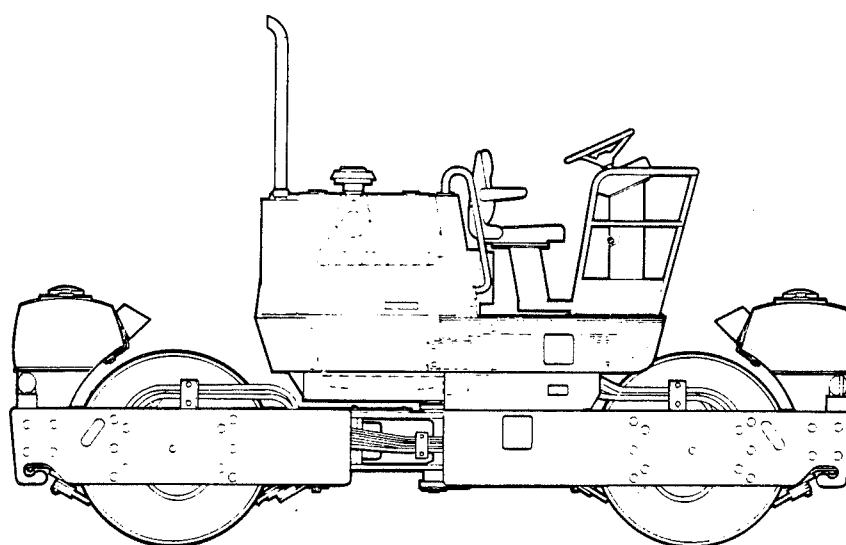

0050

Utgåva Issue		Bildnr Picture No				DELAD VALS VALS		SPLIT DRUM DRUM		Grupp Group		Sida Page	
1989-06		14994								91		12	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes			
	CC 21												
0020		2				Delad vals, kpl.	Split drum, cpl.						
0040	1	1			34 79 87	.Vals, drivsidaDrum, drive side						
0060	2	1			34 79 89	.Vals, vibr.sidaDrum, vibr. side						
0080	3	1			34 79 91	.LagerhusBearing housing						
0100	4	1			34 79 92	.LockCover						
0120	5	8			50 00 93	.SkruvScrew						
0140	6	8			61 50 46	.BrickaWasher						
0160	7	6			50 00 28	.SkruvScrew						
0180	8	6			61 50 44	.BrickaWasher						
0200	9	1			16 00 40	.O-ringO-ring						
0220	10	1			33 42 03	.AdapterAdapter						
0240	11	1			34 80 12	.SmörjrörGrease tube						
0260	12	1			31 00 22	.SmörjnippelGrease nipple						
0280	13	1			92 10 58	.KlammaClamp						
0300	14	1			50 00 04	.SkruvScrew						
0320	15	1			23 22 10	.PluggPlug						
0340	16	1			16 20 17	.BricktätningWasher sealing						
0360	17	1			16 01 07	.O-ringO-ring						
0380	18	2			11 40 89	.LagerBearing						
0400	19	2			34 79 93	.LockCover						
0420	20	12			50 00 08	.SkruvScrew						
0440	21	12			61 50 41	.BrickaWasher						
0460	22	1			34 77 32	.LagerBearing						
0480	23	28			34 77 33	.DistansSpacer						
0500	24	28			58 60 21	.MutterNut						
0520	25	28			50 00 94	.SkruvScrew						
0540	26	28			60 00 11	.BrickaWasher						
0560	27	1			34 79 94	.ExenteraxelExentric shaft						
0580	28	1			34 80 01	.CylinderCylinder						
0581						.det se sida 016 , 1j17comp page 016 , 1j17						
0600	29	N			34 80 09	.MellanläggShim					T=1,0MM	
0620	30	N			34 80 10	.MellanläggShim					T=0.35MM	
0640	31	2			50 00 37	.SkruvScrew						
0660	32	2			61 50 45	.BrickaWasher						
0680	33	1			48 21 03	.SlangHose						
0700	34	2			23 42 33	.AdapterAdapter						
0720	35	9			45 01 22	.GummielementShockabsorber						
0740	36	36			50 00 37	.SkruvScrew						
0760	37	36			58 60 19	.MutterNut						
0780	38	52			60 00 09	.BrickaWasher						
0800	39	16			50 01 94	.SkruvScrew						
0820	40	1			34 80 00	.FästplåtShock mount						
0840	41	1			34 79 97	.LagerhusBearinghousing						
0860	42	1			16 01 20	.O-ringO-ring						
0880	43	1			31 00 22	.SmörjnippelGrease nipple						
0900	44	1			34 80 11	.BlockBlock						
0920	45	4			50 80 18	.SkruvScrew						
0940	46	2			92 69 99	.O-ringO-ring	D 3					
0960	47	8			50 00 93	.SkruvScrew						
0980	48	8			61 50 46	.BrickaWasher						
1000	49	1			92 78 47	.TätningSealing	D 3					

0090

Utgåva Issue	Bildnr Picture No	HYTT OCH STÖRT- BÅGESATS		EROPS KIT		Grupp Group	Sida Page
1989-06	347919					91	22

0020
0021
0040
0041
0060
0061

Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21									
	1				34 79 19	Hytt och stört- Bågesats kpl.	Erops kit cpl.			
	1				34 79 22	.Hytt sats Det. SidanCab kit Comps. Page			
	1				34 79 17	.Störtbåge Det. SidanRops Comps page			

0130

Utgåva Issue		Bildnr Picture No		STÄLLBAR STYRLLED ADJUSTABLE STEERING HITCH		Grupp Group		Sida Page		
1989-06		15001				91		32		
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
	CC 21									
0020	1	1			34 80 32	Styrljed	Steering hitch			
0040	2	1			34 80 59	Styrljed	Steering hitch			
0060	3	1			34 80 61	Fäste	Bracket			
0080	4	1			92 79 77	Hydraulcylinder	Hydraulic cylinder			
0100		1			92 82 40	Packningssats	Seal kit			
0120	5	1			51 60 32	Stoppskruv	Stop screw			
0140	6	1			92 79 79	Bälg	Bellow			
0160	7	1			31 30 04	Slangklämma	Hose clamp			
0180	8	1			11 00 17	Länkhuvud	Rod end			
0200	9	1			57 00 06	Mutter	Nut			
0220	10	1			92 79 78	Pinne	Pin			
0240	11	1			34 80 69	Dubb	Pivot			
0260	12	1			34 80 67	Tätningbricka	Sealing washer			
0280	13	1			34 80 66	Bussning	Bushing			
0300	14	1			34 80 65	Lock	Cap			
0320	15	2			34 80 62	Bult	Stud			
0340	16	2			13 50 27	Mutter	Nut			
0360	17	2			13 60 25	Bricka	Washer			
0380	18	2			34 80 68	Distansring	Spacer			
0400	19	6			13 30 21	Lager	Bearing			
0420	20	1			34 80 64	Styrlänksbult	Steering link pin			
0440	21	1			82 10 30	Distansring	Spacer			
0460	22	1			34 80 63	Fäste	Bracket			
0480	23	4			31 00 34	Smörjnippel	Grease nipple			
0500	24	1			82 10 27	Styrlänksbult	Steering link pin			
0520	25	1			82 10 29	Distansring	Spacer			
0540	26	2			16 01 19	O-ring	O-ring			
0560	27	18			50 00 22	Skruv	Screw			
0580	28	18			61 50 43	Bricka	Washer			
0600	29	4			50 00 82	Skruv	Screw			
0620	30	4			61 50 46	Bricka	Washer			
0640	31	2			62 80 22	Pinne	Pin			

0180

Utgåva Issue		Bildnr Picture No		PACKNINGSMÄTARE OCH SKRIVARE		COMPACTION METER AND PRINTER		Grupp Group	Sida Page	
1989-06		14877						91	42	
Pos. Fig.	Antal/Quantity				Art nr Part No	Benämning	Description	Sats Kit	L S	Anmärkning Notes
0020	1	1			34 82 22	Processor	Processor			
0040	2	1			34 82 13	Sensor m. kabel.....	Sensor w. cable.....			
0060	3	1			34 84 28	Instrument	Instrument			
0080	4	1			92 10 28	Klamma	Clamp			
0100	5	1			50 00 13	Skruv	Screw			
0120	6	3			58 60 02	Mutter.....	Nut			
0140	7	3			60 00 04	Bricka	Washer			
0160	8	2			50 00 79	Skruv	Screw			
0180	9	N			31 30 41	Buntband	Cable tie			L=186MM
0200	10	N			31 30 02	Buntband	Cable tie			L=388MM
0220	11	1			34 82 49	Kabel	Cable			
0240	12	4			92 88 15	Hatt	Boot			
0260	13	1			34 32 56	Fäste	Bracket			
0280	14	1			34 32 62	Skrivare	Printer			
0300		1			92 15 28	.PappersrullePaper roll			
0320		1			92 15 29	.PennaPen			
0340	15	1			34 83 34	Kabel	Cable			
0360	16	1			34 84 48	Fästplåt.....	Mounting plate			
0380	17	1			92 88 59	Dammskydd	Boot			
0400	18	8			53 30 02	Skruv	Screw			
0420	19	8			57 00 01	Mutter.....	Nut			
0440	20	8			60 00 01	Bricka	Washer			

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL