



ERSATZTEILE

SPARE PARTS

PIÈCES DETACHEES



000 001 032 01 H - 11/06/2015

BIG M I

ab Masch.-Nr.
from mach.-no.
à partir de mach.-no

463 490 - 493 999

/ 000 001 032 01 H /

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Zentralgetriebe Central gearbox Carter central						463490 - 493999	B L G M I						000 001 032 01	
													448 833 0	39.0
Pos.	ID-Nr.	Benennung	Description	Description	Masch.-Nr-								Bemerkung/Remarks/Remarque	
1	00 925 200 2	Verschlussdeckel	Sealing cap	Couvercle de fermeture		x							Rd. 90	
2	00 911 680 0	Sicherungsring	Circlip	Circlip		x							90 X 3	
3	00 911 545 0	Sicherungsring	Circlip	Circlip		x							A 40 X 1,75	
4	00 931 951 1	Pendelrollenlager	Pendular roller bearing	Roulement à galets rouleaux		x							22308	
5	00 911 553 0	Sicherungsring	Circlip	pendulaire Circlip		x							A 50 X 2,0	
7	00 277 227 0	Buchse	Bushing	Douille		x							Lg.= 17 mm	
8	00 936 198 0	Radial-Wellendichtring	Radial-shaft sealing ring	Radial-bague d'étanchéité		x							55 X 90 X 13	
9	00 229 114 0	Dichthülse	Sealing bush	Douille d'étachéité		x							Lg.= 11	
10	00 937 552 0	O-Ring	O-ring	Joint torique		x							40 X 2	
11	00 908 536 4	6kt-Mutter	Hex nut	Écrou hex		2							M 27 X 1,5	
12	00 937 523 1	O-Ring	O-ring	Joint torique		2							28 X 3	
13	00 231 104 0	Schrägstimrad	Helical gear	Roue helicoidale		x							Z= 53	
14	00 231 103 0	Schrägstimrad	Helical gear	Roue helicoidale		x							Z= 29	
15	00 231 127 0	Schrägstimrad	Helical gear	Roue helicoidale		x							Z= 26	
16	00 231 042 0	Distanzhülse	Spacer bushing	Douille entretoise		x							Lg.= 70	
17	00 229 101 3	Gehäuse	Housing	Carter		x								
18	00 937 505 0	O-Ring	O-ring	Joint torique		2							34 X 3	
19	00 231 118 0	Lagerbolzen	Bearing bolt	Boulon d'appui		x							Rd. 50 X 312	
20	00 915 014 0	Passfeder	Fit-in key	Clavette		x							B 16 X 10 X 36	
21	00 231 108 0	Welle	Shaft	Arbre		x							Lg.= 337	
22	00 915 007 0	Passfeder	Fit-in key	Clavette		x							B 14 X 9 X 40	
23	00 231 107 0	Welle	Shaft	Arbre		x							Lg.= 152	
24	00 231 106 0	Welle	Shaft	Arbre		x							Lg.= 109	
25	00 936 197 0	Radial-Wellendichtring	Radial-shaft sealing ring	Radial-bague d'étanchéité		x							A 70 X 110 X 8	
26	00 911 691 0	Sicherungsring	Circlip	Circlip		x							110 X 4,0	
27	00 931 914 0	Pendelrollenlager	Pendular roller bearing	Roulement à galets rouleaux pendulaire		x							22212 ES	
28	00 231 041 0	Distanzring	Spacer ring	Bague d'écartement		x							Lg.= 17	
29	00 231 109 0	Welle	Shaft	Arbre		x							Lg.= 235,5	
30	00 937 727 0	Dichtring	Gasket ring	Bague d'étanchéité		x							A 18 X 24	
31	00 906 010 1	Verschlusschraube	Screw plug	Bouchon fileté		x							M 18 X 1,5	
32	00 925 208 0	Verschlussdeckel	Sealing cap	Couvercle de fermeture		x							Rd. 100	
33	00 911 686 0	Sicherungsring	Circlip	Circlip		x							100 X 3,0	
34	00 931 913 0	Pendelrollenlager	Pendular roller bearing	Roulement à galets rouleaux pendulaire		x							222 11	
36	00 231 205 0	Ritzelwelle	Pinion shaft	Arbre de pignon		x							Z= 17	
38	00 938 520 0	Ölauge	Oil sight glass	Regard niveau d'huile		x								

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

ID-NR. ID-NO.	TAFEL DIAG.	POS. POS.	ID-NR. ID-NO.	TAFEL DIAG.	POS. POS.	ID-NR. ID-NO.	TAFEL DIAG.	POS. POS.	ID-NR. ID-NO.	TAFEL DIAG.	POS. POS.	ID-NR. ID-NO.	TAFEL DIAG.	POS. POS.
00 904 751 2	168.0	18	00 905 231 1	74.0	25	00 908 006 1	94.0	15	00 908 212 0	71.0	8	00 908 701 0	5.0	12
00 904 751 2	169.0	18	00 905 232 0	73.0	13	00 908 006 1	94.0	24	00 908 212 0	72.0	8	00 908 701 0	6.0	4
00 904 751 2	174.0	16	00 905 235 1	43.0	11	00 908 019 1	17.0	3	00 908 212 0	73.0	6	00 908 701 0	7.0	3
00 904 751 2	175.0	20	00 905 235 1	44.0	11	00 908 019 1	27.0	3	00 908 212 0	87.0	13	00 908 701 0	18.0	8
00 904 754 1	12.0	15	00 905 336 0	123.0	8	00 908 019 1	165.0	11	00 908 212 0	102.0	20	00 908 701 0	26.0	6
00 904 754 1	13.0	30	00 905 337 0	59.0	18	00 908 019 1	170.0	3	00 908 212 0	106.0	17	00 908 701 0	28.0	8
00 904 754 1	14.0	23	00 905 339 0	117.0	8	00 908 033 0	154.0	43	00 908 215 0	40.0	28	00 908 701 0	32.0	14
00 904 754 1	22.0	30	00 905 558 1	55.0	4	00 908 207 1	27.0	19	00 908 215 0	42.0	8	00 908 701 0	33.0	31
00 904 754 1	23.0	23	00 905 700 1	8.0	33	00 908 207 1	36.0	20	00 908 215 0	45.0	23	00 908 701 0	35.0	5
00 904 754 1	167.0	11	00 905 745 0	108.0	9	00 908 207 1	80.0	4	00 908 215 0	46.0	23	00 908 701 0	42.0	4
00 904 850 1	3.0	4	00 905 900 0	103.0	16	00 908 207 1	94.0	22	00 908 215 0	59.0	31	00 908 701 0	47.0	19
00 904 850 1	13.0	7	00 905 922 1	18.0	9	00 908 207 1	110.0	9	00 908 215 0	70.0	4	00 908 701 0	50.0	10
00 904 850 1	14.0	7	00 905 922 1	28.0	9	00 908 207 1	110.0	13	00 908 215 0	71.0	11	00 908 701 0	52.0	11
00 904 850 1	19.0	19	00 905 922 1	50.0	21	00 908 207 1	110.0	21	00 908 215 0	110.0	3	00 908 701 0	53.0	15
00 904 850 1	20.0	19	00 905 922 1	165.0	20	00 908 207 1	165.0	52	00 908 215 0	165.0	39	00 908 701 0	55.0	2
00 904 850 1	21.0	9	00 905 922 1	172.0	9	00 908 208 0	68.0	11	00 908 220 0	26.0	19	00 908 701 0	59.0	39
00 904 850 1	22.0	7	00 905 933 1	55.0	17	00 908 208 0	82.0	7	00 908 225 0	87.0	36	00 908 701 0	60.0	17
00 904 850 1	23.0	7	00 906 007 1	1.0	44	00 908 208 0	90.0	3	00 908 225 0	89.0	16	00 908 701 0	67.0	16
00 904 850 1	29.0	19	00 906 010 1	1.0	31	00 908 208 0	108.0	25	00 908 500 0	106.0	20	00 908 701 0	100.0	6
00 904 850 1	30.0	19	00 906 010 1	39.0	31	00 908 208 0	109.0	21	00 908 501 0	136.0	13	00 908 701 0	104.0	5
00 904 850 1	31.0	9	00 906 040 1	10.0	3	00 908 208 0	110.0	16	00 908 515 0	43.0	17	00 908 701 0	112.0	12
00 904 850 1	173.0	5	00 906 132 0	60.0	13	00 908 208 0	111.0	9	00 908 515 0	44.0	17	00 908 701 0	114.0	5
00 904 850 1	174.0	19	00 906 439 1	1.0	35	00 908 208 0	154.0	35	00 908 515 0	165.0	38	00 908 701 0	158.0	3
00 904 850 1	175.0	9	00 906 803 0	153.0	3	00 908 210 0	59.0	35	00 908 524 2	113.0	12	00 908 701 0	165.0	42
00 904 884 2	13.0	24	00 906 805 0	84.0	14	00 908 210 0	60.0	11	00 908 524 2	115.0	15	00 908 701 0	172.0	7
00 904 884 2	14.0	24	00 906 805 0	87.0	9	00 908 210 0	67.0	6	00 908 524 2	118.0	19	00 908 701 0	173.0	2
00 904 884 2	22.0	24	00 906 805 0	154.0	38	00 908 210 0	73.0	9	00 908 524 2	119.0	44	00 908 702 0	111.0	46
00 904 884 2	23.0	24	00 906 808 0	77.0	21	00 908 210 0	74.0	29	00 908 524 2	125.0	20	00 908 704 1	17.0	12
00 904 884 2	167.0	2	00 906 811 0	77.0	13	00 908 210 0	87.0	35	00 908 524 2	138.0	19	00 908 704 1	19.0	14
00 904 951 2	166.0	15	00 906 811 0	78.0	11	00 908 210 0	104.0	34	00 908 525 1	15.0	12	00 908 704 1	27.0	16
00 904 983 1	173.0	25	00 906 811 0	78.0	15	00 908 210 0	117.0	9	00 908 525 1	40.0	3	00 908 704 1	29.0	14
00 905 111 2	74.0	36	00 906 811 0	84.0	12	00 908 210 0	123.0	9	00 908 534 1	26.0	15	00 908 704 1	45.0	49
00 905 210 1	68.0	18	00 906 811 0	103.0	37	00 908 210 0	154.0	26	00 908 536 4	1.0	32	00 908 704 1	48.0	31
00 905 210 1	74.0	16	00 906 812 0	77.0	4	00 908 212 0	8.0	32	00 908 536 4	39.0	11	00 908 704 1	53.0	35
00 905 210 1	153.0	4	00 906 813 0	77.0	16	00 908 212 0	11.0	11	00 908 541 0	40.0	23	00 908 704 1	64.0	14
00 905 210 1	166.0	18	00 906 948 0	3.0	1	00 908 212 0	36.0	16	00 908 541 1	45.0	20	00 908 704 1	65.0	8
00 905 211 1	68.0	22	00 906 948 0	4.0	9	00 908 212 0	40.0	13	00 908 541 1	46.0	20	00 908 704 1	68.0	9
00 905 215 0	68.0	13	00 906 948 0	96.0	8	00 908 212 0	42.0	1	00 908 701 0	1.0	22	00 908 704 1	72.0	12
00 905 230 1	36.0	8	00 906 948 0	103.0	29	00 908 212 0	60.0	23	00 908 701 0	3.0	13	00 908 704 1	73.0	17
00 905 231 1	67.0	4	00 908 006 1	12.0	6	00 908 212 0	65.0	40	00 908 701 0	4.0	12	00 908 704 1	74.0	18

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL