

Anbauanleitung
Fitting Instructions
Notice de montage

CLAAS

Elektrische Streublechverstellung
Electric deflector adjustment
system
Réglage électrique de la tôle
d'éparpillage

MEDION 340/330/310

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

14	012 934.0	Kabelsatz			1
15	237 465.0	Sechskantschraube	M 6 x 16	933-8.8	4
	239 392.0	Contact-Scheibe	B 6		4
16	010 685.0	Haube	1,5 x 293 x 308		1
17	215 079.0	Rohrschelle	Rsgu 1.38/25		2
18	237 871.0	Kabelbinder	4,7 x188		10
19	215 404.0	Rohrschelle	Rs 1.16/20		10
20	012 938.0	Sollwertgeber	4,7 kohm, D 26		1
21	515 479.0	Aufkleber			1
22	546 298.0	Drehknopf			1
23	625 924.0	Einleger	D 26		1

(Abb. 1)

1 Introduction

INTRODUCTION

These instructions describe the safe and timesaving work sequence for retrofitting an electric deflector adjustment system.


Retrofitting of the MEDION 340/330/310 combine harvester, with the supplementary kit part no. 299 235.0, is possible from the following machine number ranges: 9320011 and 9340011.

The standard mounting time is approx. 2 man hours.

See page 4.1 for the shipping package.

Observe the »Safety Rules« in the applicable operator's manual.

Your CLAAS Service Department

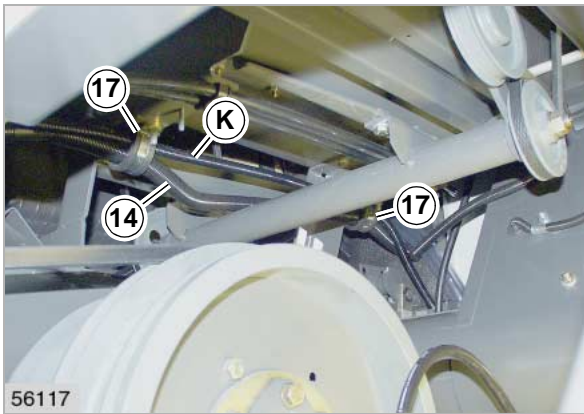


12

Open the right side door.

Remove the existing pipe clamps and replace them with two pipe clamps (17).

Attach the wiring loom (14) and the existing wires (K) with pipe clamps (17).

(fig. 12)

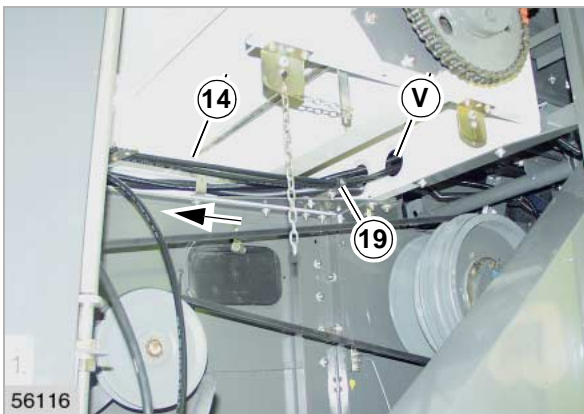

13

Lay the wiring loom (14) through the opening (V) and along the side panel to the rear hood (see arrow).

Fasten the wiring loom (14) to the existing wires with cable band (18).

Screw the wiring loom (14) to the side panel with a pipe clamp (19) and existing screws.

(fig. 13)



14

Lay the wiring loom (14) through the opening (K) into the rear hood.

(fig. 14)



15

Unscrew the cover (H) in the rear hood.

(fig. 15)

3 Conseils généraux

IMPORTANT

Afin d'éviter les accidents, ce manuel et surtout les remarques, doivent être lus par toutes les personnes qui utilisent la machine, qui s'occupent de la maintenance, de l'entretien ou du contrôle. Il convient en particulier de porter une attention soutenue au chapitre «Conseils de sécurité» de votre notice d'utilisation et de respecter les consignes de prévention dans votre pays.

Avant de commencer le travail vérifier d'abord que tous les outils et moyens nécessaires sont complets. Comparer le type de machine / le type d'outil frontal avec la nomenclature du paragraphe «Liste des pièces fournies» et le kit des pièces fournies.

La spécification des pièces, par ex. pour les vis est mentionnée dans la « Liste des pièces fournies ». Dans cette liste chaque composant est muni d'un numéro de position (no. de pos.). Les pièces telles que les écrous et les rondelles contact n'ont pas de numéro de position. Ces pièces font partie du numéro de position de la vis avec laquelle elles sont montées. En plus y sont indiqués le numéro de pièce détachée, la désignation, la dimension, DIN et le nombre.

Pour une meilleure orientation, dans les instructions de montage, les pièces déjà existantes sont munies des lettres et les pièces neuves sont munies des chiffres (numéro de position).

Les textes et les tableaux sont établis neutres, autant que possible. Les différences entre les modèles sont mises en évidence par des renvois dans le texte.

Les données techniques, poids et mesures sont sans engagement. Sous réserve d'erreur et de modifications techniques dans le cadre du développement technique.

Les termes avant, arrière, droite et gauche s'entendent toujours dans le sens d'avancement.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL