AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

PB1000486-01 HYDRAULIC PRESSURE GENERATING SYSTEM
PC1000400-01 OUTRIGGER SYSTEM
PD1000433-01 SWING SYSTEM
PE1000436-01 ELEVATING SYSTEM
PG1000387-01 TELESCOPING SYSTEM
PH1000392-01 SAFETY DEVICES
PJ3000109-01 BUCKET SYSTEM
PK1000448-00 FRAME
PL1000459-01 CONTROL DEVICES
PN1000336-01 ELECTRIC EQUIPMENT
PO1000131-03 INDICATION PLATES
PW1000118-00 ACCESSORIES & TOOLS
PX1000475-01 MOUNTING PARTS
PY1000402-01 OPTIONS
ASSEMBLY

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Re
1		(**********)	BOOM	1					
2		(**********)	JIB	1					
3		(**********)	CYLINDER,TELESCOPING (MOUNT)	1					


AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	R
1		(**********)	ELEC.ASSY	1					
2		(**********)	ELEC.ASSY (JIB)	1					
3		(**********)	ELEC.ASSY (POWER CABLE,BOOM)	1					
4		(**********)	ELEC.ASSY (SWING FRAME)	1					
5		(**********)	ELEC.ASSY (FRAME)	1					
6		(**********)	ELEC.ASSY (SIGNAL CABLE,BOOM)	1					
7		(**********)	ELEC.ASSY (EMERGENCY PUMP)	1					
8		(**********)	ELEC.ASSY (BUCKET)	1					
9		(**********)	ELEC.ASSY (POWER SOURCE)	1					


AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

PJ3020001-00 FRAME (BUCKET OR BASKET)
PJ3040014-01 OPE.ASSY
PJ3100101-00 PIPING,BOOM
PK1010637-01 FRAME
PK1100297-00 SWING FRAME
PK1200337-00 COVER,SWING FRAME
PL1010679-01 OPE.ASSY,CONT.VALVE
PL1030796-00 OPE.ASSY,ACCELERATOR
PL1100180-03 BOX,OPERATION (BUCKET)
PN1012330-01 ELEC.ASSY (JIB)
PN1012331-01 ELEC.ASSY (POWER CABLE,BOOM)
PN1012334-02 ELEC.ASSY (SWING FRAME)
PN1012335-02 ELEC.ASSY (FRAME)
PN1012342-01 ELEC.ASSY (SIGNAL CABLE,BOOM)
PN1012359-01 ELEC.ASSY (EMERGENCY PUMP)
PN1012507-01 ELEC.ASSY (BUCKET)
PN1012508-00 ELEC.ASSY (POWER SOURCE)
PN1012647-00 ELEC.ASSY
PN1110204-02 RELAY
PO1012933-02 PLATE ASSY.NAME (OPERATION BOX)
PO1013188-01 PLATE ASSY.NAME (WHOLE VEHICLE)
PO1013189-01 PLATE ASSY.NAME(BUCKET&PERFOMANCE DATE)
PO1013318-00 PLATE ASSY,NAME
PP5450003-00 PUMP,GREASE (240CC)
PS5530450-00 SWITCH ASSY
PV1020160-00 VALVE,REMOTE CONTROL
PW1010259-01 ACCESSORIES
PW1030049-01 TOOLS
PW1050018-01 WEDGE (STOPPER FOR TIRE/JUSTIN)
PW5110002-00 WEDGE (STOPPER FOR TIRE/WAZUMI)
PW5110003-00 WEDGE (STOPPER FOR TIRE/NAKAMURA KIKI)
PX1030409-00 FENDER
PX1100236-01 TANK SUPPORT INSTALLATION
PX1120398-00 BOOM REST
PX1170413-00 ATTACHMENT PARTS, CRANE FRAME
PX1200392-00 GUARD,SIDE
PX1220202-00 PUMP INSTALLATION (EMERGENCY)
PX1220362-00 PUMP INSTALLATION
PX1310116-00 MOUNT,LAMP (TAIL)
PX1390493-01 PARTS,MODIFICATION
PX1410183-00 MOUNT,TIRE
PX1810063-00 MOUNT,SUPPORT (SHIPMENT)
PY1090001-00 BELT,SAFETY
PY1180271-00 LAMP (WORKING LAMP)
PY1180294-01 LAMP (YELLOW FLICKER)
PY1890000-01 COVER,CYLINDER (ELEVATING)

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PB1300242-00 JOINT,ROTARY

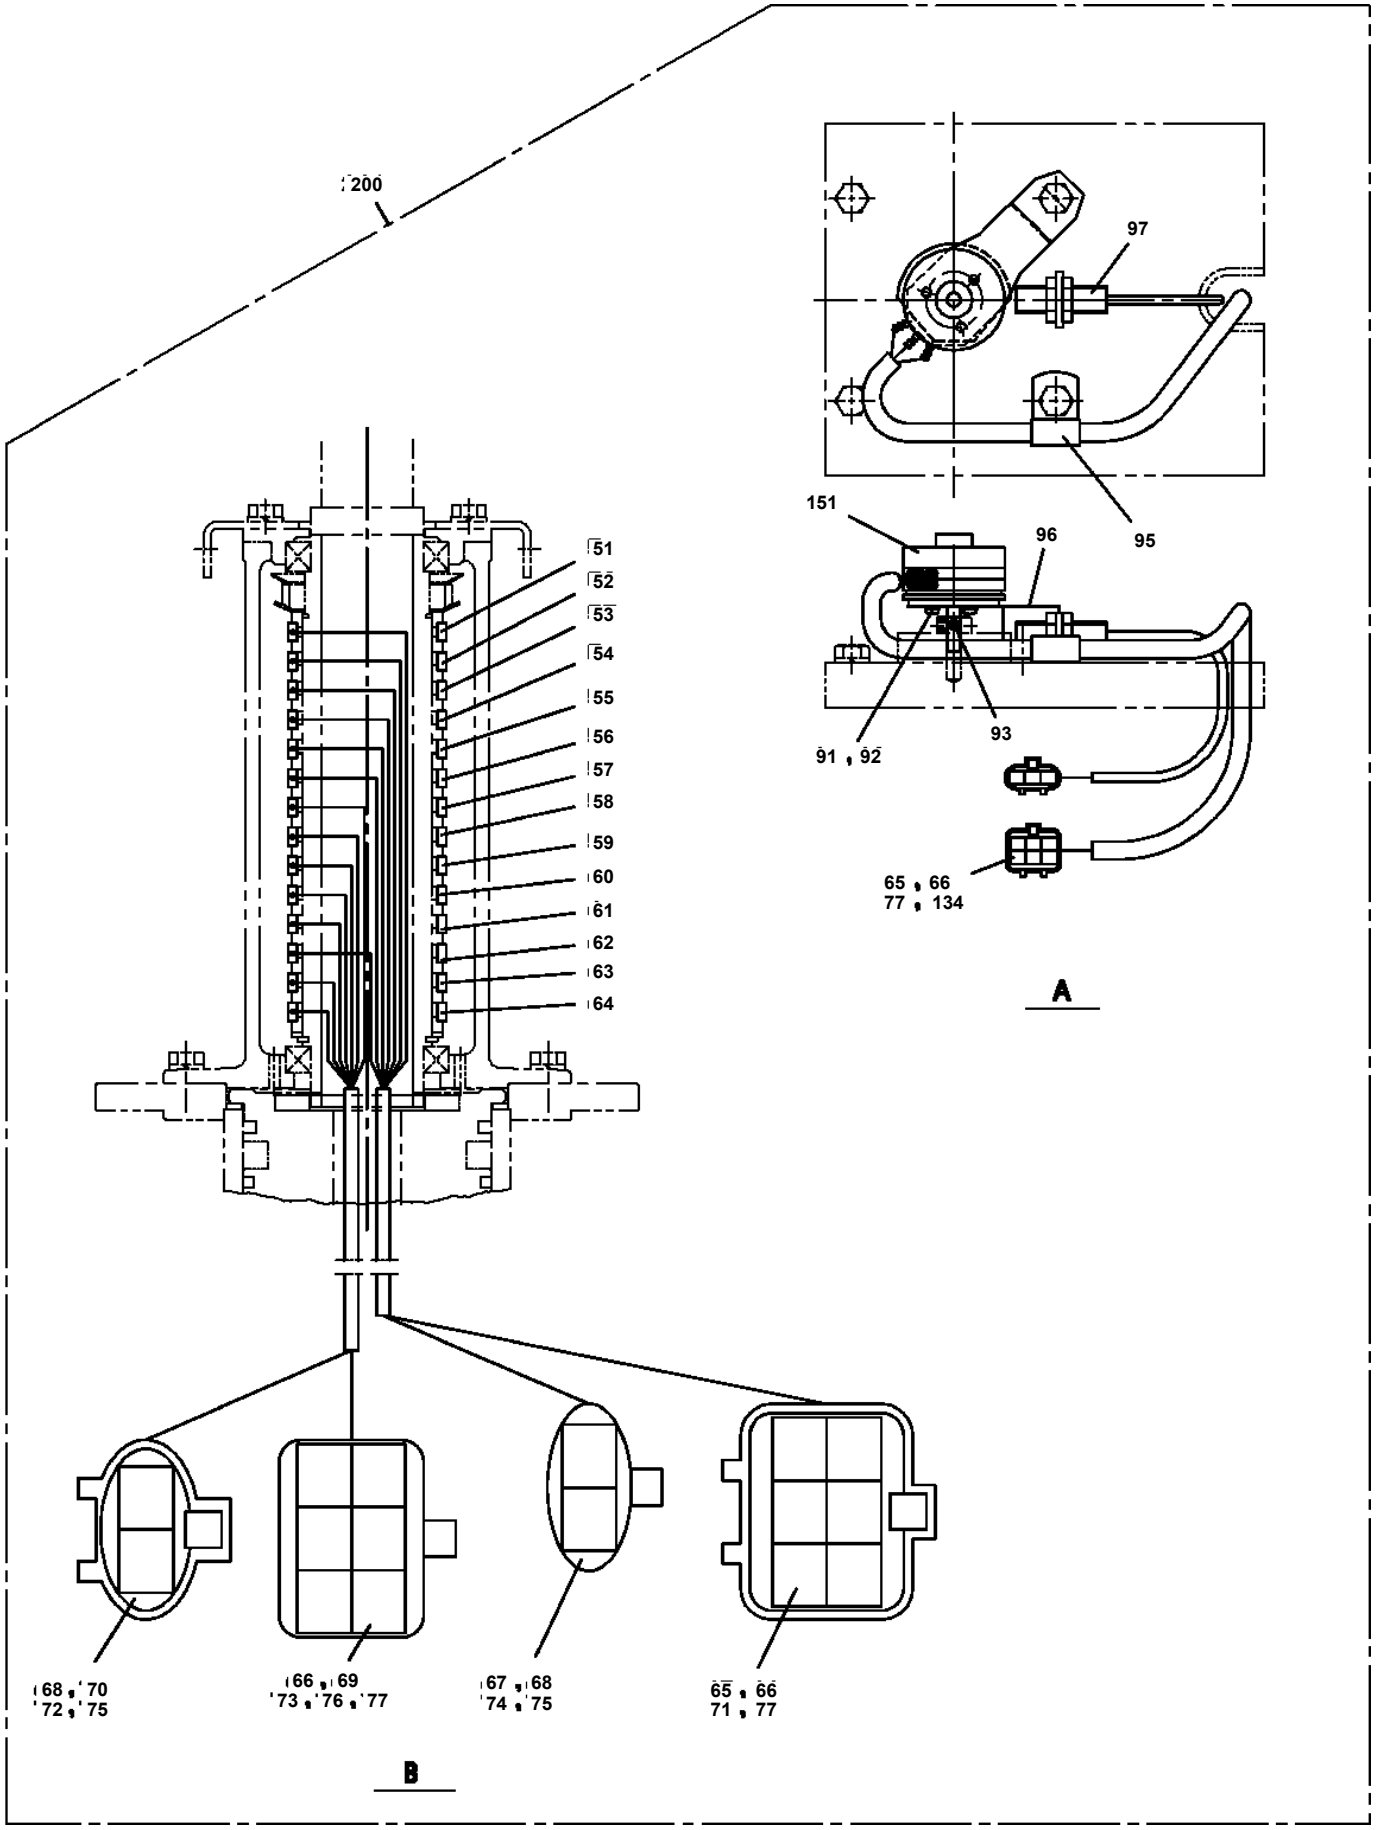

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PB1400301-01 PIPING,UPPER

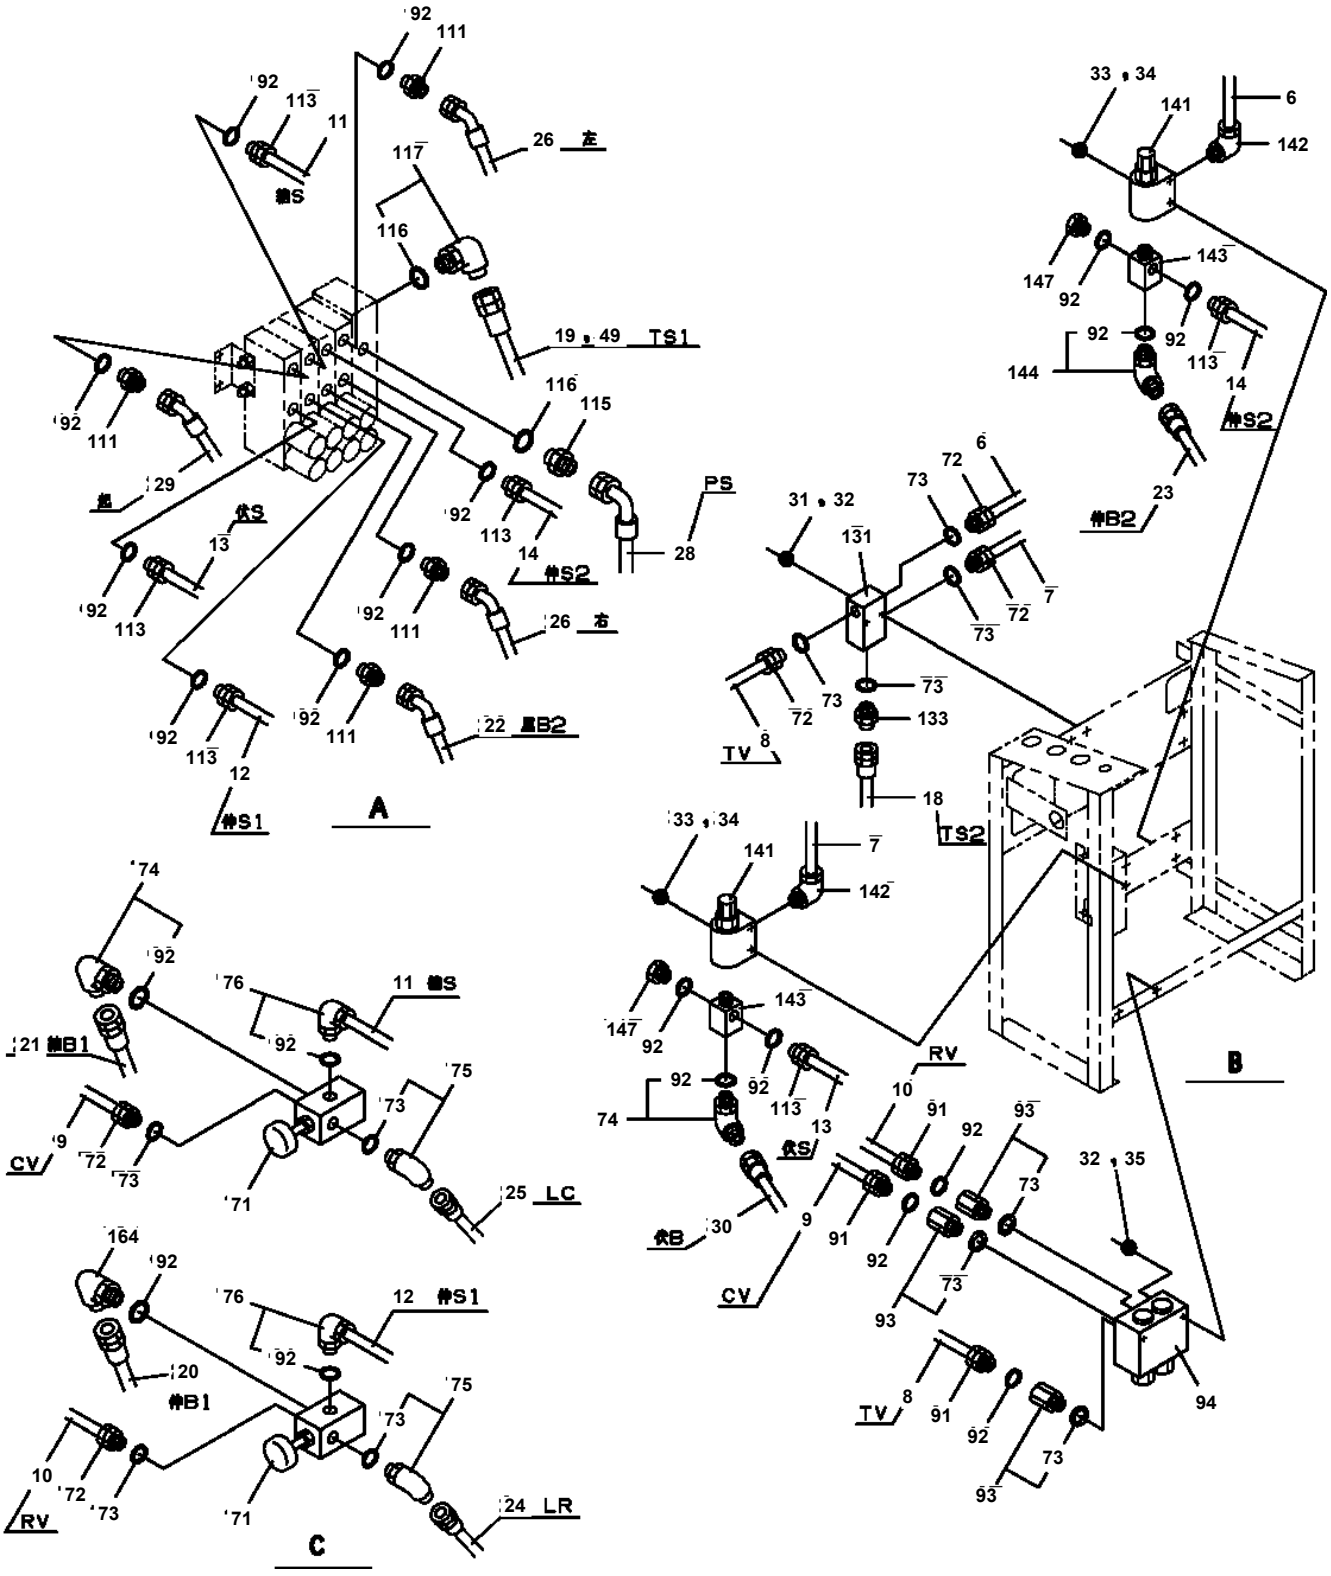

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Re
1		42613122000	CASE,INNER (FRONT)	1					
2		42613121100	CASE,INNER	1					
3		90302040801	WASHER,SPRING	1		8			
5		36034680000	CYLINDER,JACK	1					
6		42612131300	FLOAT ASSY	1					
7		31201770100	PLATE,SLIDE	8		T=3.0			
8		37000138750	PIN	1		18			
9		80601110250	RING,RITAINING	4		S25			
10		42730072000	COVER	1					
11		90101206012	BOLT	6		M6X12			
12		90302040601	WASHER,SPRING	7		6			
13		37000169010	PIN	1		30			
14		80601110300	RING,RITAINING	2		S30			
15		80601110120	RING,RITAINING	2		S12			
16		37000112320	PIN	1					
17		37000171720	PIN	1					
19		36623930000	VALVE,PILOT CHECK	1					
20		90172110035	BOLT,HEXAGON SOCKET	2		M10X35			
21		90101206016	BOLT	1		M6X16			
22		90201200600	NUT	1		M6			
23		82100002005	CLAMP	1		WRC8			
24		90101208010	BOLT	1		M8X10			
25		91002801000	O-RING	2		1B P10			
26		80400160127	JOINT	2					
27		91002801100	O-RING	2		1B P11			
28		80136332036	PIN,SPLIT	2		3.2X36			
29		37000171790	PIN	1					
30		42612060010	CHOKE	1					
31		37000562700	PLATE	2		T=2.3			
32		37000555650	PLATE	2		T=3.2			
61		36042690000	CYLINDER,EXTENSION (FRONT)	1					
62		42612771600	HARNESS	1					
63		37002449380	HOSE	1		L=1800			
64		91810130240	FASTENER	18					
65		80400160127	JOINT	2					
66		91002801100	O-RING	2		1B P11			
83		42612131500	TRUNNION	1					
91		82100002034	CLAMP	1		WEC6			
92		90101208010	BOLT	1		M8X10			
93		90302040801	WASHER,SPRING	3		8			
94		90101208014	BOLT	2		M8X14			
95		42950011010	PLATE	1					
96		42950203010	BOLT	1		M6X18			
97		90201200600	NUT	1		M6			
98		82104502010	SWITCH,LIMIT	1					
99		90101204030	BOLT	2		M4X30			
100		90302040401	WASHER,SPRING	2		4			
101		42611483300	PLATE	1		T=3			
102		42611483200	PLATE	1		T=3			
200		42613121000	OUTRIGGER (INNER,FRONT)	1					

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (
1		36634190000	VALVE,MANUAL CONTROL (OUTRIGGER)	1				
2		90101208025	BOLT	3		M8X25		
3		90302040801	WASHER,SPRING	7		8		
4		37000105610	PIN	20		L=18		
6		80136320010	PIN,SPLIT	20		2X10		
7		42700010010	LINK	5				
8		42700010050	LINK	5				
9		31320020020	KNOB (RED)	1				
10		31320020010	KNOB (BLACK)	4				
11		90101208016	BOLT	4		M8X16		
12		32700007500	LEVEL	1				
13		42700611000	LEVER ASSY	1				
16		80456950401	JOINT,SELF SEALING (COUPLER)	1				
41		90101208012	BOLT	1		M8X12		
42		90302040801	WASHER,SPRING	1		8		
43		37000176740	PIN	1				
44		42700010301	SUPPORT	1				
45		42700010100	LEVER	1				
46		42700010150	LEVER	1				
47		42700010180	LEVER	1				
48		42700010210	LEVER	1				
49		42700010240	LEVER	1				
50		42700010360	SPACER	1		L=46		


AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End
2		36080900000	REDUCER,SWING SPEED	1				
3		90101516065	BOLT	3		M16X65		
4		90303071601	WASHER,PLAIN	3		16		
5		90201701600	NUT	3		M16		
6		90302041601	WASHER,SPRING	3		16		
7		90710012400	SCREW,SET	2		M12X40		
8		90203201200	NUT	2		M12		
9		90131512035	BOLT,HEXAGON SOCKET	2		M12X35		
10		36662590000	MOTOR,HYDRAULIC (SWING)	1				
11		90302041201	WASHER,SPRING	2		12		
21		37002302450	BEARING,SWING (NSK)	1				
22		37002303560	BEARING,SWING (NIHON MONORACE)	1				
23		37002304750	BEARING,SWING (KOYO)	1				
31		37002399010	SEAL (UP,DOWN-SIDE SET)	1				
32		82456201000	NIPPLE,GREASE	6		A-TYPE PT1/8		

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remarks	Pa
1		36020655070	CYLINDER ASSY	1						
2		36020655080	ROD ASSY	1						
3		36020655030	PISTON	1						
4		91001101800	O-RING	1		1A P18				
5		91300006500	BEARING,PLAIN	1						
6		91684006500	PACKING	2						
7		91411205501	RING,BACKUP	2						
8		90302042001	WASHER,SPRING	1		20				
9		90209702001	NUT	1		M20X2				
10		80612110400	RING,RITAINING	1		AR40				
12		91002906500	O-RING	1		1B G65				
13		91411106500	RING,BACKUP	1		G-65				
14		36020655090	COVER,ROD	1						
15		91694003500	PACKING	1						
16		91410203501	RING,BACKUP	1						
17		91001207000	O-RING	1		1A G70				
18		91660003500	SEAL,DUST	1						
19		80622000350	RING,RITAINING	1		SP35				
20		82456101000	NIPPLE,GREASE	2		A-PT1/8				
21		80820003020	BEARING,PLAIN	2						
23		59457138000	PLUG ASSY	1						
24		36020615050	BEARING,SPHERICAL	1						
50		36020650000	CYLINDER,LEVELING	1						
60		36020619900	PACKING SET	1						

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PG1010625-01 BOOM

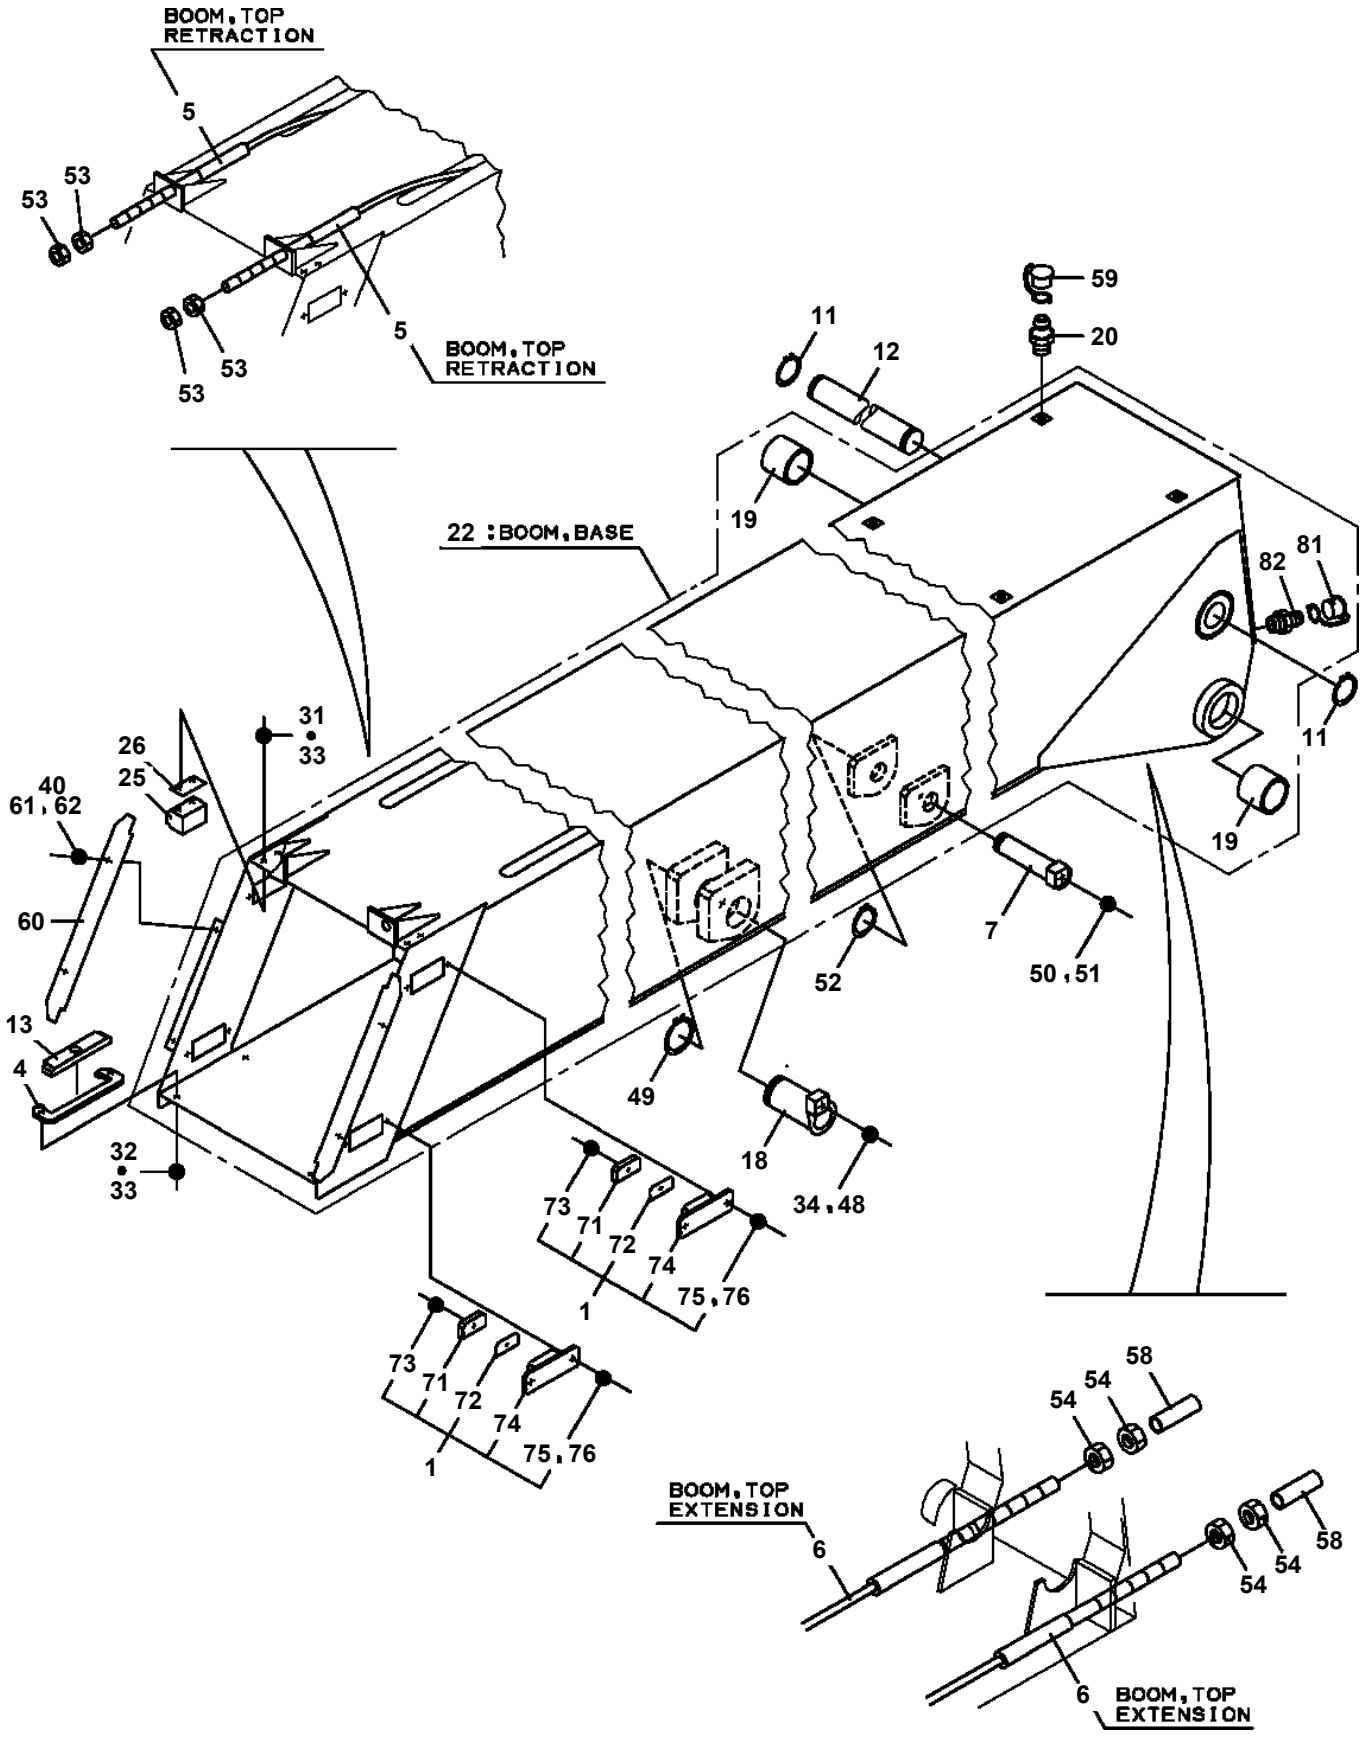

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	R
1		36130235010	PLATE (BASE)	1					
2		36130235020	CASE	1					
3		36130235030	DRUM ASSY	1					
4		36131345010	COVER	1					
5		31370105030	PACKING	1					
6		31370005030	PACKING	1					
7		36130235090	WASHER,SEAL	1					
8		36130235050	BRACKET	1					
9		82100001155	CONNECTOR	1					
10		36131195030	POTENTIOMETER	1					
11		36130235100	CLAMP (CORD)	1					
12		36130045090	CLIP (NYLON)	1					
13		32360005150	CLIP (NYLON)	1					
14		36130235070	GEAR (A)	1					
15		36130235080	GEAR (B)	1					
18		36130235110	CABLE ASSY (WITH CONNECTOR)	1		L=710			
19		31370005080	GUIDE (CORD)	1					
20		31370005050	RING ASSY (CONTACT)	1					
23		32360005240	LOCK (CORD)	1					
25		82100000080	CORD (1-LINE)	7	M				
60		36130230000	DETECTOR,BOOM LENGTH	1					

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remarks	Pages
10		42613131110	HARNESS	1						

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remarks	Pages
100		42351610112	HARNESS	1						

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remarks	Pages
100		42800040030	HARNESS	1						


AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remarks	Pages
1		36620650000	VALVE,CHECK	1						
2		36620030050	PLUG	1						
4		91002801000	O-RING	1		1B P10				
5		52255101000	SPRING	1						
7		91002801400	O-RING	2		1B P14				
8		36620030010	PLUG	1		PF3/8				
9		91002801200	O-RING	2		1B P12				

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR


Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remark
1		90172108014	BOLT,HEXAGON SOCKET	4		M8X14			
2		36602110101	COVER	1					
3		91001203500	O-RING	1		1A G35			
5		36600070020	SPRING	1					
8		91002801600	O-RING	1		1B P16			
10		36600070070	SPRING	1					
11		80316090020	PLUG	1		KKT PT1/8			
12		36602100300	PLUG	1					
13		91001101200	O-RING	2		1A P12			
14		91002801800	O-RING	1		1B P18			
50		36604630000	VALVE,COUNTERBALANCE	1					

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PJ3020001-00 FRAME (BUCKET OR BASKET)

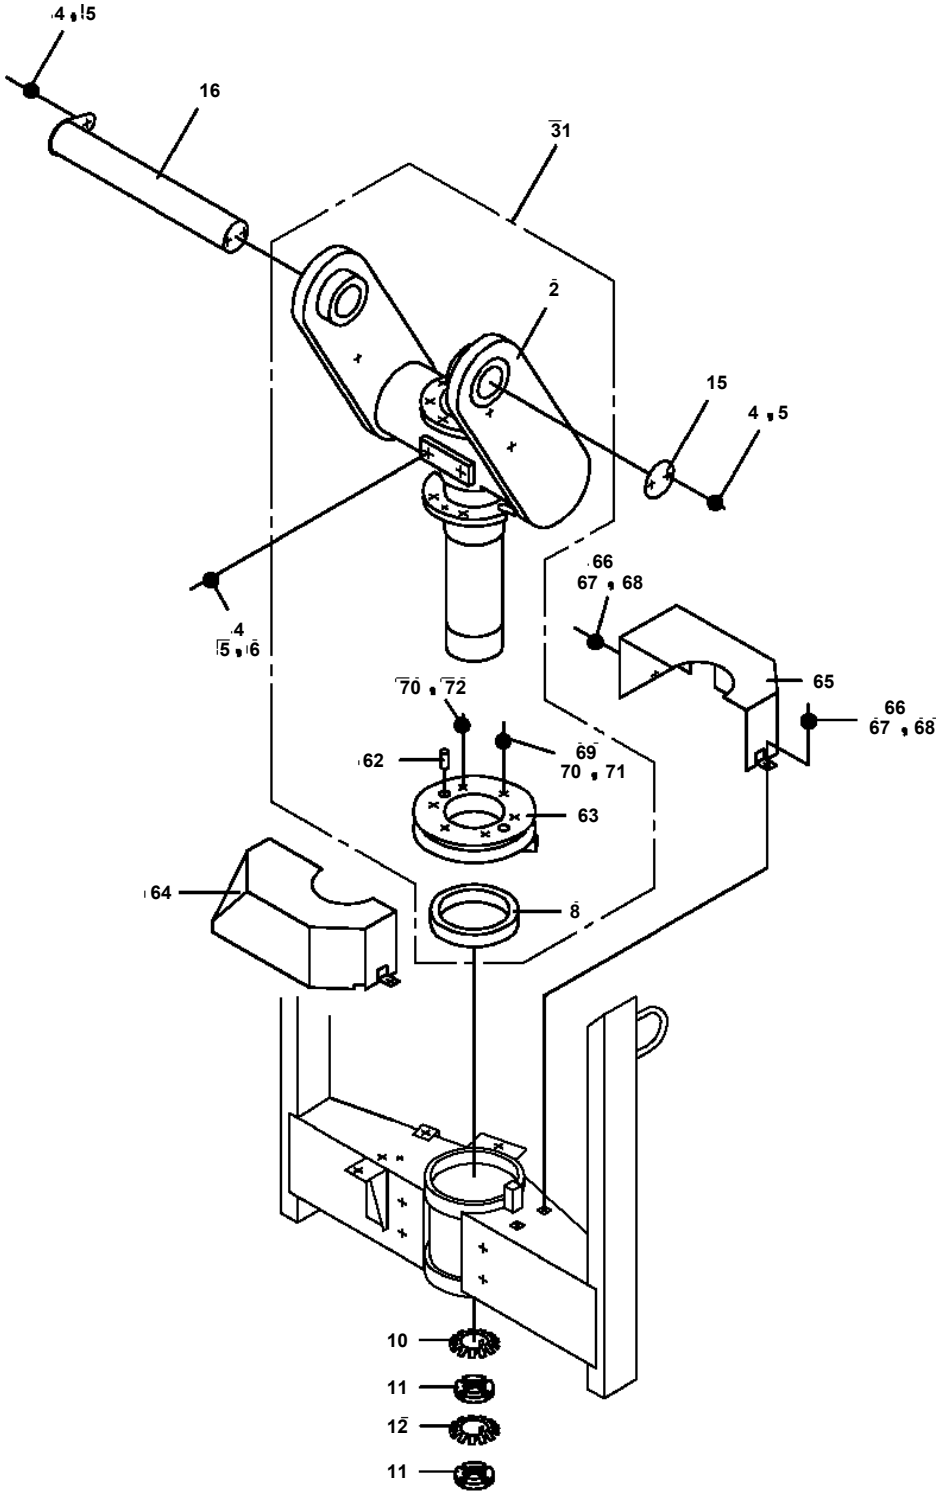


A

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PK1200337-00 COVER,SWING FRAME

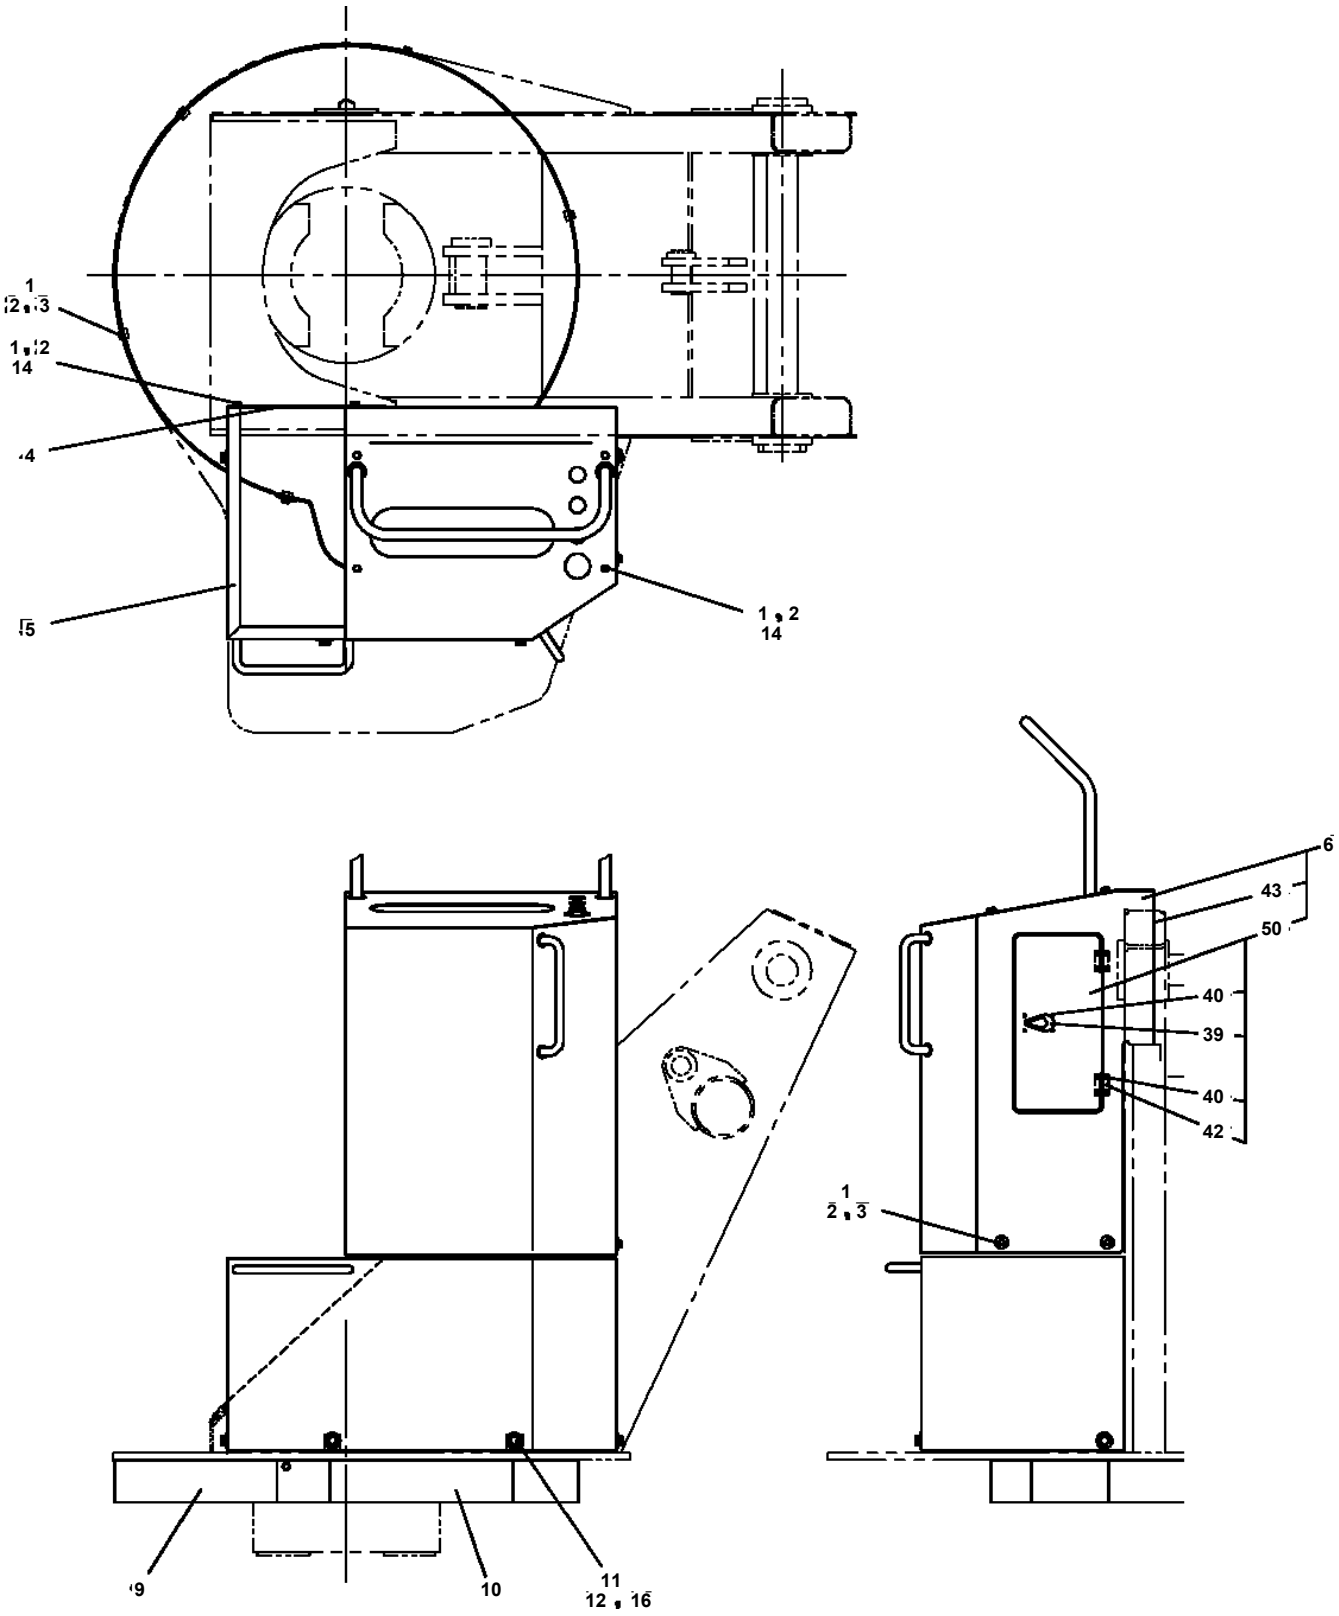

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PN1012330-01 ELEC.ASSY (JIB)

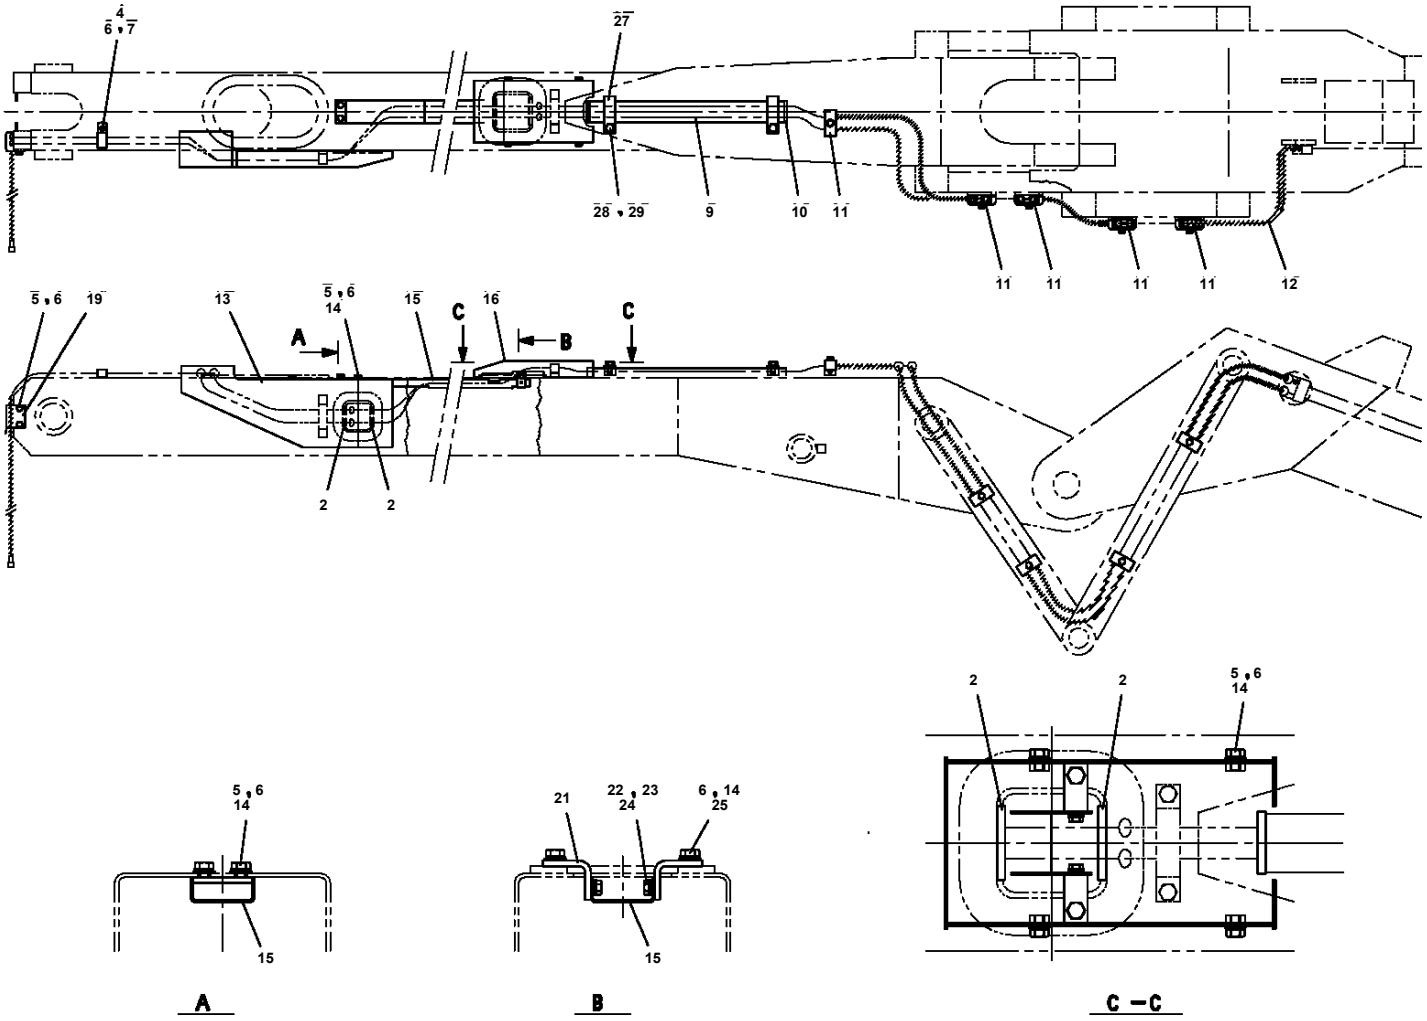

A


B


C – C


AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR


Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No
1		42651690100	HARNESS	1				
2		42651690200	HARNESS	1				
4		42651643001	RELAY	1				
5		82100002006	CLAMP	7		WR10		
6		42651690500	COVER	1				
8		82104503104	SWITCH,LIMIT	1				
9		90172105020	BOLT,HEXAGON SOCKET	2		M5X20		
10		82100002016	CLAMP	3		WR25		
11		90201200800	NUT	11		M8		
12		90302040801	WASHER,SPRING	17		8		
13		82100002010	CLAMP	7		WR15		
14		90201200600	NUT	27		M6		
15		90302040601	WASHER,SPRING	29		6		
16		90303070801	WASHER,PLAIN	1		8		
17		82100002019	CLAMP	2		WR40		
18		91810130240	FASTENER	15				
19		82100002004	CLAMP	6		WR8		
20		82100002012	CLAMP	1		WR18		
21		90101206012	BOLT	2		M6X12		
22		82100002035	CLAMP	2		WE8		
23		82100002040	CLAMP	3		WE15		
24		82100002014	CLAMP	4		WR20		
25		82104501250	SWITCH,LIMIT (2 PCS/SET,WITH HARNESS)	1				
27		42651644000	SWITCH ASSY	1				
28		37000571980	PLATE	1				
29		90101208014	BOLT	6		M8X14		
31		82100001803	TUBE,CORRUGATE	2	M	13		
32		82100002042	CLAMP	2		WE20		
33		44430680200	BUZZER ASSY (WITH HARNESS)	1				
41		82104501240	SWITCH,LIMIT (2 PCS/SET,WITH HARNESS)	2				
42		42950421200	COVER	3				
43		42950421100	SUPPORT	4				
44		80182308012	SCREW,MACHINE	18		M8X12		
45		90302040801	WASHER,SPRING	26		8		
46		90303070801	WASHER,PLAIN	8		8		
47		90101204030	BOLT	16		M4X30		
48		90201200400	NUT	16		M4		
49		90302040401	WASHER,SPRING	16		4		
50		90303070401	WASHER,PLAIN	32		4		
51		90101208012	BOLT	8		M8X12		
61		82104501250	SWITCH,LIMIT (2 PCS/SET,WITH HARNESS)	4				
62		42950433101	COVER	1				
82		42651122010	HARNESS (WITH SWITCH)	1				
83		42350250070	PLUG (2 POLES,MALE)	1				
84		42803982300	HOLDER ASSY	2				
85		91810130230	FASTENER	1				
86		42650551130	LAMP ASSY (GREEN)	1				
87		42651124100	SUPPORT	1				
113		82105220183	SWITCH,TOGGLE	1				
123		82105220112	SWITCH,TOGGLE	1				
131		82100001161	HOLDER (F)	2				
132		82100001348	FUSE	2		15A,6.5X30		
151		82100005005	LENS (GREEN)	1				

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PN1012647-00 ELEC.ASSY

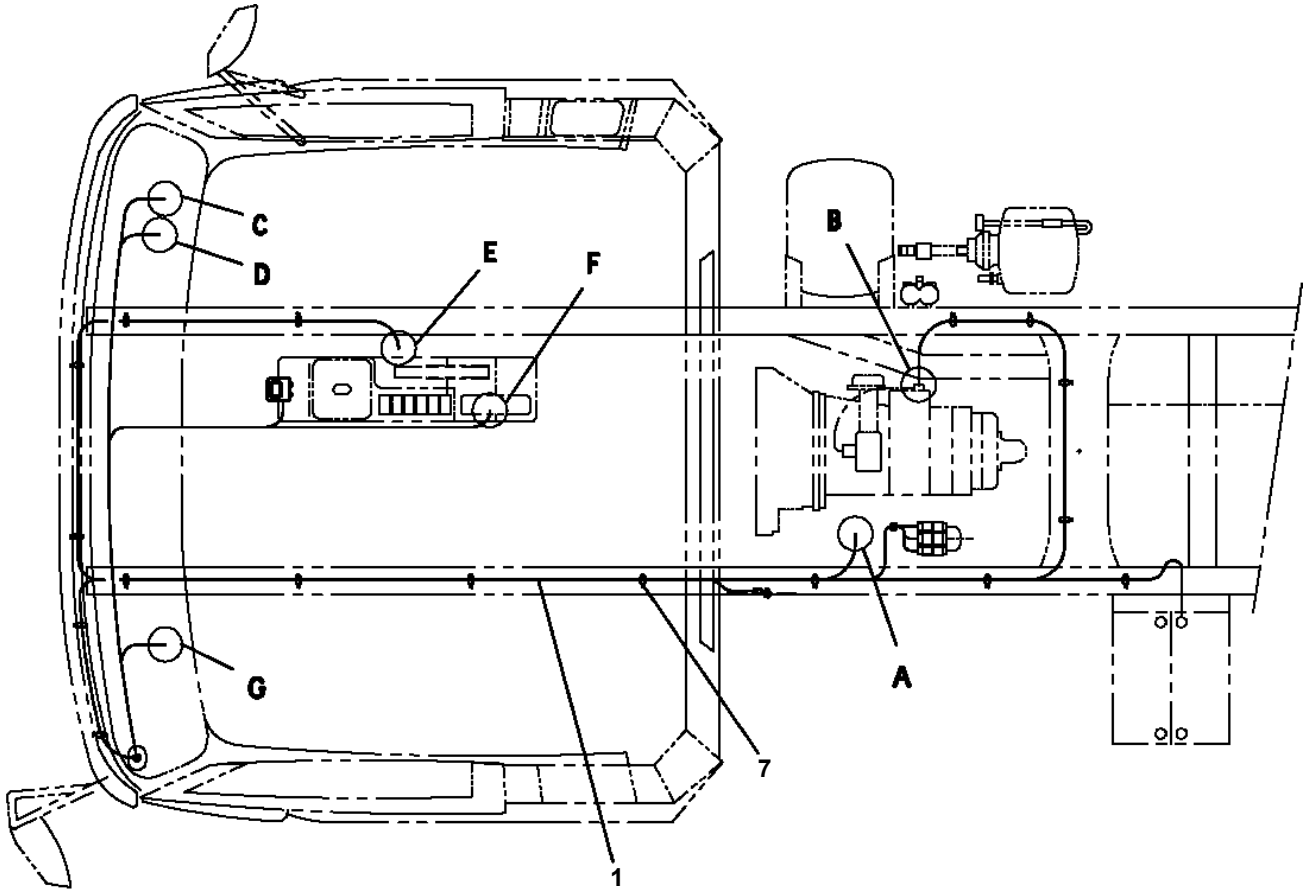

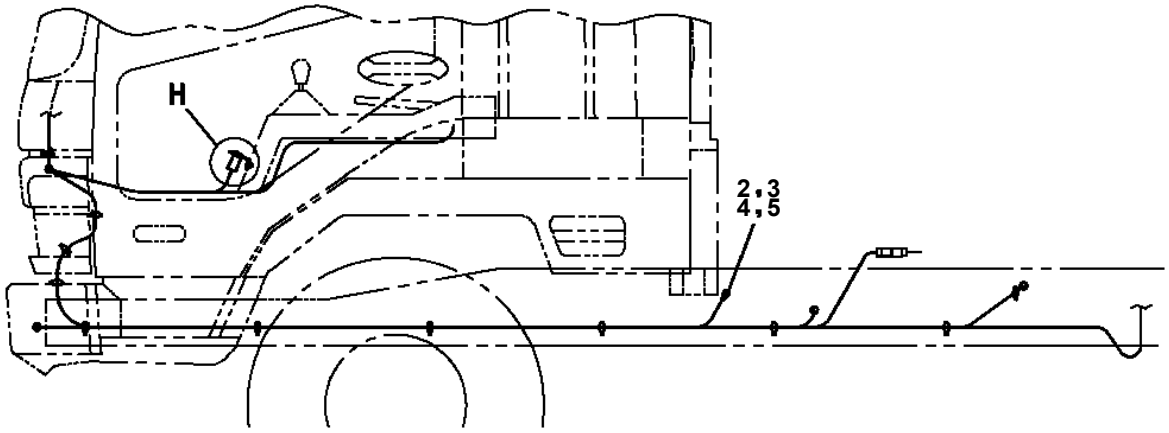

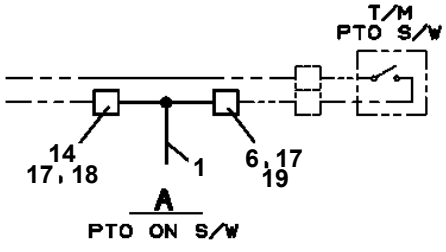


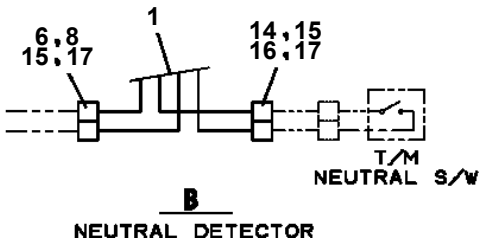

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	S
1		42940300010	PLATE,NAME (DO NOT SPATTER WATER)	4				
2		42394241010	PLATE,NAME (FUSE)	1				
3		42394241020	PLATE,NAME (AWL PRE-OPERATION)	1				
4		42390020180	PLATE,CAUTION (AWL)	1				
5		42394241030	PLATE,NAME (AUTO AWING STOP)	1				
6		42394122140	PLATE,NAME (HOW TO USE EMERGENCY PUMP)	1				
7		42394241040	PLATE,CAUTION (CAUTION)	1				
8		42394241620	PLATE,NAME (STOW.)	1				
9		42394122050	PLATE,NAME (SWITCH)	1				
10		42394091060	PLATE,NAME (STOP)	1				
11		42394122030	PLATE,NAME (SWING)	1				
12		42394241050	PLATE,NAME (ARTICULATE)	1				
13		42394122040	PLATE,NAME (TELESCOPING)	1				
14		42394122020	PLATE,NAME (ELEVATING)	1				
15		42394122150	PLATE,NAME (SWITCH)	1				
16		42394122100	PLATE,CAUTION (WARNING)	1				
17		42394241060	PLATE,CAUTION (WARNING)	1				
18		42394651010	PLATE,NAME (BUCKET/LEVEL ADJ)	1				
19		37002209560	PLATE,NAME (TADANO)	1				
20		42390020010	PLATE,NAME (AT-185CG)	2				
21		37002212700	PLATE,NAME	1				
23		90451700100	SCREW,TAPPING	4		M4X6.4		
24		42394090120	PLATE,NAME (CHECK WHEN CARRIER)	1				
25		42394241070	PLATE,CAUTION (WARNING)	1				
26		42394090240	PLATE,CAUTION (WARNING/RULES FOR)	2				
27		42394241080	PLATE,CAUTION (WARNING)	1				
28		42391180100	PLATE	1				
29		14137207000	PLATE,NAME (GREASE)	18				
30		42394651020	PLATE,NAME (FUSE)	1				
31		42394241100	PLATE,CAUTION (WARNING)	2				
32		37002209500	PLATE,NAME (TADANO)	2				
34		42940010070	REFLECTOR (RED)	2				
36		42940300060	PLATE,NAME (HYDRAULIC OIL)	1				
37		37002219500	PLATE,CAUTION (OIL/FOR EXP.)	1				
38		42391161160	REFLECTOR (YELLOW)	2				
39		37002202120	PLATE,NAME (HIGH/LOW)	1				
40		42941990020	PLATE,NAME (JACK,INDICATOR)	1				
41		42394090180	PLATE,NAME (FUSE)	1				
42		42394124010	PLATE,NAME (SWITCH)	1				
43		42394124020	PLATE,NAME (SWITCH)	1				
44		42940100030	PLATE,NAME (PLUG)	2				
45		42940180080	PLATE,NAME (L,R)	1				
46		42940180090	PLATE,NAME (L,F)	1				
47		42940180100	PLATE,NAME (R,F)	1				
48		42940180110	PLATE,NAME (R,R)	1				
49		42940180120	PLATE,NAME (FOR OUTRIGGER)	1				
50		(**********)	PLATE ASSY.NAME (OPERATION BOX)	1				
51		42394124030	PLATE,CAUTION (WARNING/OUTRIGGER)	1				
52		42394124040	PLATE,CAUTION (WARNING)	1				
53		42390960190	REFLECTOR (WHITE/RED)	2				
54		42391670050	REFLECTOR (WHITE/RED)	1				
55		42394090220	PLATE,CAUTION (WARNING)	1				
56		42394651030	PLATE,NAME(EMERGENCY OPERATION METHOD)	1				
58		42394651040	PLATE,CAUTION (CAUTION FOR OPERAT)	1				
71		42391670040	PLATE,NAME	1				
81		42394271100	PLATE (NON-SLIP)	2				
82		34393926530	PLATE (NON-SLIP)	6				
83		34393926540	PLATE (NON-SLIP)	3				

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR
PV1020160-00 VALVE,REMOTE CONTROL

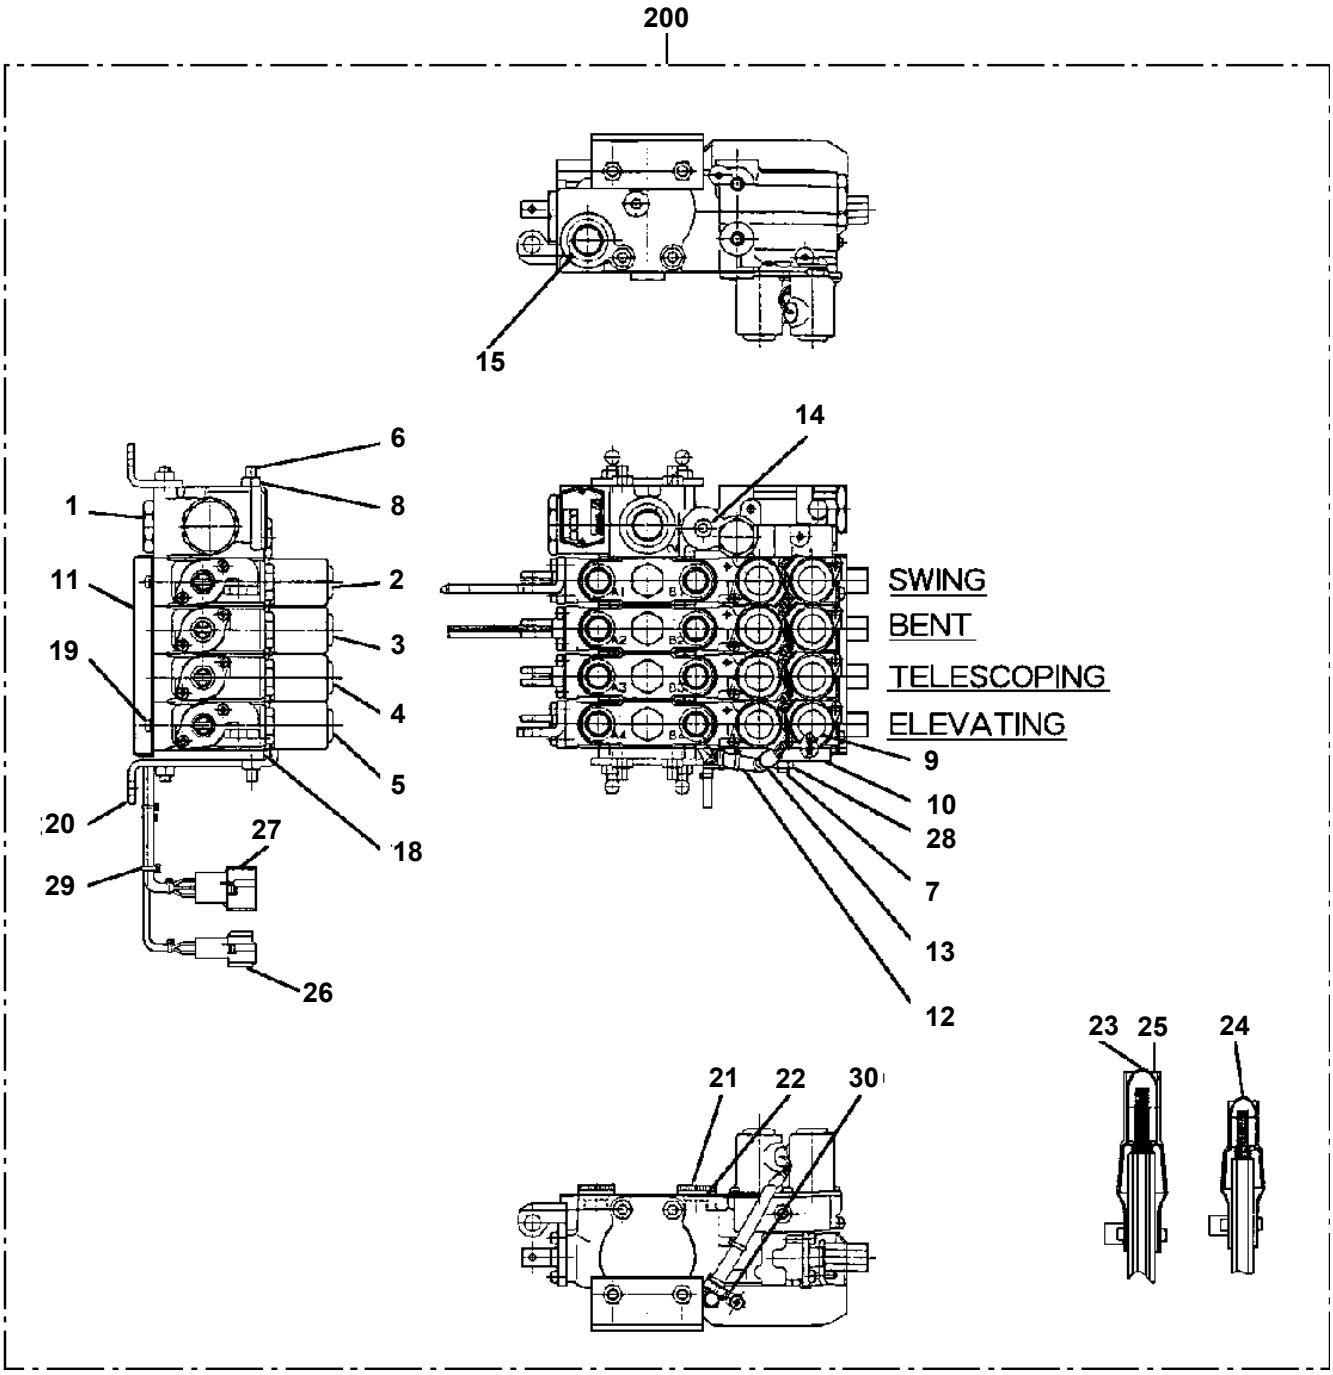

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End
1		42460012550	WEDGE (STOPPER FOR TIRE/JUSTIN)	1				

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remarks	Pages
1		42873841000	SUPPORT	1						
2		90171114030	BOLT	4		M14X30				
3		90302041401	WASHER,SPRING	4		14				
4		42873170010	PLATE	6		T=1.0				
5		42873083000	CUSHION	1						
6		42873150200	CUSHION	2						
7		80182308016	SCREW,MACHINE	4		M8X16				
8		90302040801	WASHER,SPRING	8		8				
9		90101208025	BOLT	4		M8X25				
10		37000572420	PLATE	4		T=0.5				
11		37000572430	PLATE	4		T=1.0				
12		37000572440	PLATE	2		T=3.0				

AT-185-2 42004220404 UPPER,LOWER,MITSUBISHI FK615GAR

Pos No.		Parts No	Parts Name	Qty	Unit	Technical Data	Serial No (Start)	Serial No (End)	Remarks	Pages
1		91810132530	FASTENER	10						
2		90101206016	BOLT	6		M6X16				
3		90302040601	WASHER,SPRING	6		6				
4		42621013110	BRACKET	1						
5		42807710100	SUPPORT	1						
6		42807710200	SUPPORT	1						
7		42807710300	SUPPORT	1						

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL