
Challenger MT600B

RTS

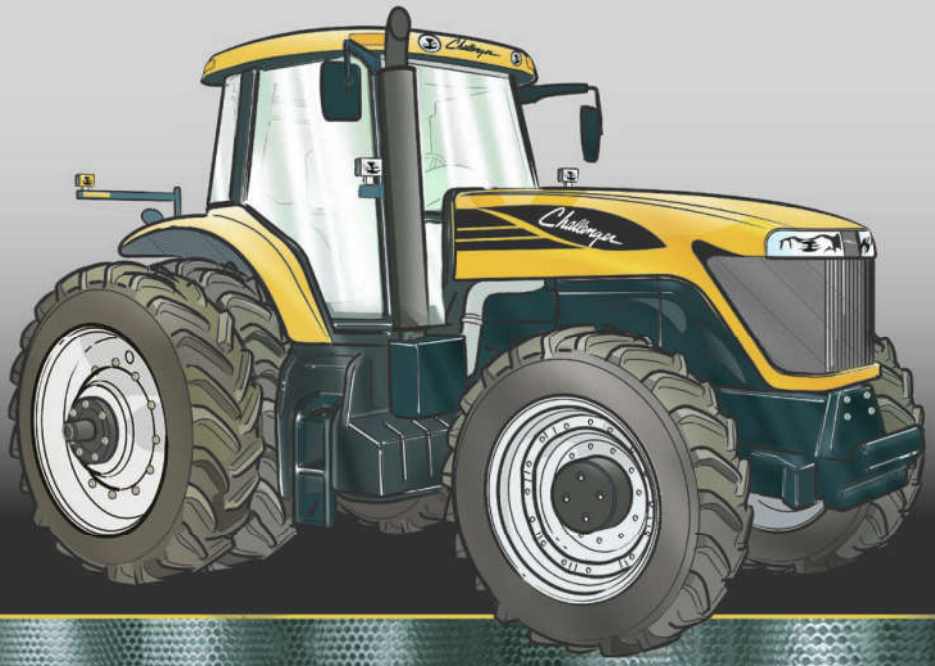

AGCO - SA - Beauvais - France - RCB562104539
Challenger is a wholly owned subsidiary of AGCOCorporation

November 2007 Issue 2
3378770 M2 English

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

Time amendment request

Name of distributor ..... Date.....

Address .....

.....

RTS publication no. ..... Failure code no.....

Machine model ..... Serial no.....

We wish to dispute the time allocated for the failure code no. above and confirm that we have closely monitored and timed the operation, which has been carried out by a qualified technician, using the special tools and procedures recommended; our comments are detailed below:

Analysis of repair time			
Work carried out	Time		Comments
Removal of component			
Disassembly			
Cleaning and inspection			
Obtaining parts and tools			
Reassembly			
Refitting			
Adjusting and testing			
TOTAL TIME			
Number of mechanics used for this work			


Signature ..... Name.....

Send to:

AGCO S.A.
Service Documentation Technique
Avenue Blaise Pascal
BP60307
60026 BEAUVAIS CEDEX
FRANCE

ALTERNATOR & BRACKET

1-WA10-013-A

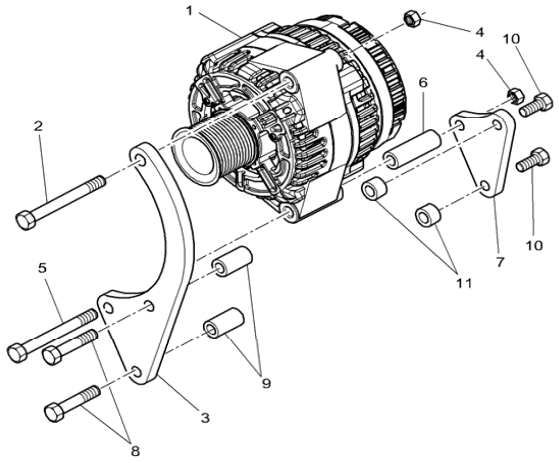


35 45	55 65		Code		Description
•	•	1	14 01 02	0,50	Alternator
•	•	3	14 01 03	0,50	Alternator support

1-WA10-013-A / 1-WA10-010-A / 1-WA10-014-A / 1-WC35-005-C / 1-WC35-005-B

MT600B

CRANKSHAFT, PISTONS AND CONNECTING RODS

1-WH02-005-A

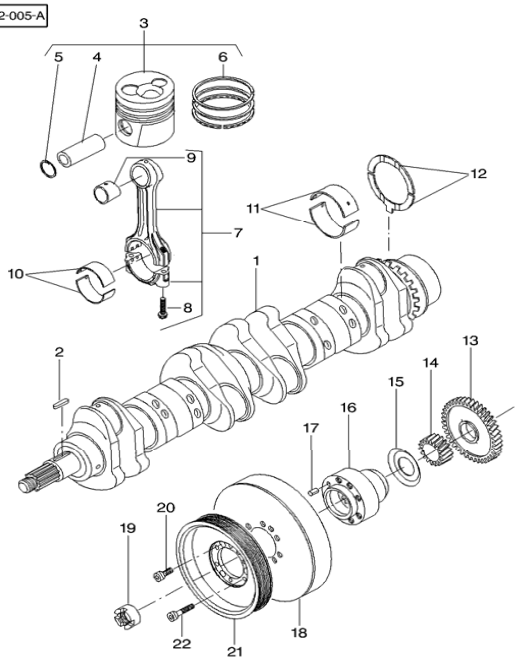


35 45	55 65		Code		Description
•		1	74 01 00	38,00	Crankshaft
•		3	73 08 00	19,50	Piston
•			73 08 01	1,50	Additional piston
•		4	73 07 00	19,50	Gudgeon pin
•			73 07 01	1,50	Additional gudgeon pin
•		5	73 12 00	19,50	Gudgeon pin circlip
•			73 12 01	1,50	Additional gudgeon pin circlip
•		6	73 09 00	19,50	Piston ring kit
•			73 09 01	1,50	Additional set of rings
•		7	73 01 00	19,00	Connecting rod
•			73 01 01	1,25	Additional connecting rod
•		9	73 04 00	19,50	Connecting rod small end bush
•			73 04 01	1,50	Additional connecting rod small end bush
•		10	73 05 00	11,00	Connecting rod big end shells
•		11	74 07 00	11,50	Main bearing shells
•		12	74 09 00	38,00	Thrust washer
•		13	74 17 00	31,00	Oil pump gear
•		14	75 11 00	20,00	Crankshaft gear
•		15	74 01 04	20,00	Oil deflector
•		16	74 01 02	16,00	Splined hub
•		18	74 06 00	15,50	Damper
•		19	74 01 01	1,50	Crankshaft nut
•		20	74 11 00	0,50	Crankshaft pulley screw
•		21	74 08 00	15,50	Crankshaft pulley
•		22	74 11 00	0,50	Crankshaft pulley screw
				3,00	Addition for 3,5 T front linkage
				4,00	Addition for 5 T front linkage
				1,50	Addition for centre weight

1-WH02-005-A

MT600B

CYLINDER HEAD

1-WH03-006-A

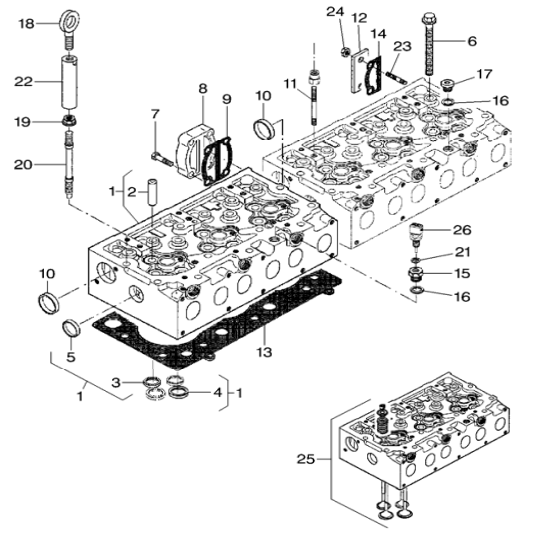


35 45	55 65		Code		Description
•	•	**1**	72 03 00	10,75 / 13,75	Cylinder head
•	•		72 03 01	13,00 / 16,00	Cylinder head overhaul
•	•	**2**	72 15 00	11,25	Valve guide
•	•		72 15 01	0,25	Additional valve guide
•	•	**3**	72 13 00	12,50	Valve seat
•	•		72 13 01	1,25	Additional valve seat
•	•	**4**	72 13 00	12,50	Valve seat
•	•		72 13 01	1,25	Additional valve seat
•	•	**6**	71 14 00	10,75	Cylinder head screw
•	•		71 14 02	5,50	Cylinder head screw (rocker arm cover)
•	•		71 14 01	0,25	Additional cylinder head screw
•	•	**8**	72 26 00	1,75	Cylinder head end cover
•	•	**9**	52 26 01	1,75	Cylinder head gasket
•	•	**10**	72 02 01	8,50	Rear cylinder head blastcleaning disc
•	•		72 02 00	2,75	Front cylinder head plug
•	•	**13**	72 04 00	10,75 / 13,75	Cylinder head gasket
•	•	**14**	72 62 00	1,75	Cylinder head gasket
•	•	**26**	59 23 06	0,50	Water temperature sensor
				x,xx / x,xx	1 cylinder-head / 2 cylinder-heads

1-WH03-006-A / 1-WH03-007-A

MT600B

FUEL INJECTION EQUIPMENT

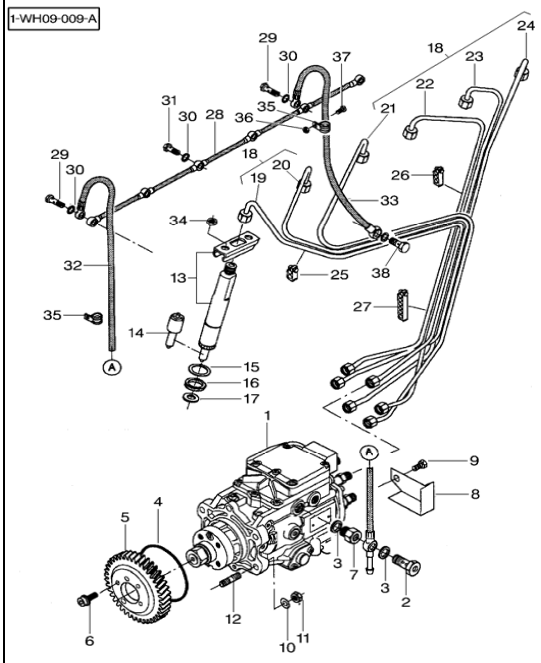


1-WH09-009-A

35	45	55	65		Code		Description
•				**1**	77 01 03	3,00	Injection pump
•					77 01 01	0,50	Injection pump timing
•				**2**	57 01 09	0,50	Injection pump valve
•				**4**	57 01 03	3,00	Injection pump O'ring
•				**5**	75 12 00	1,00	Injection pump gear
•				**13**	57 21 00	0,75	Fuel injector
•					57 21 01	2,00	Injector assembly
•				**14**	77 07 00	1,25	Injector nozzle
•					77 07 01	3,50	Injector nozzle assembly
•				**15**	77 07 02	0,75	Injector seals
•				**16**	77 07 02	0,75	Injector seals
•				**17**	77 07 02	1,00	Injector seals
•				**18**	77 03 01	1,50	High pressure pipe assembly
•				**28**	77 16 00	1,50	Fuel discharge pipe
•				**32**	77 16 02	0,50	Injector return pipe
•				**33**	57 01 10	0,50	Injection pump pipe

MT600B

LOW PRESSURE FUEL SYSTEM

1-WH14-007-C

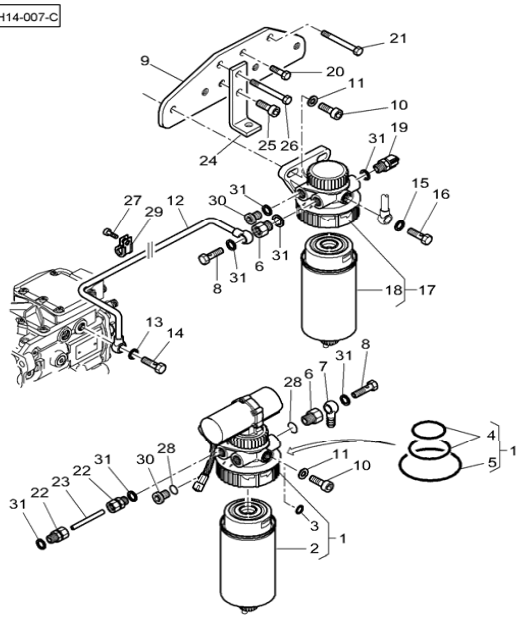


35 45	55 65		Code		Description
•	•	**1**	57 16 06	0,50	Electric fuel lift pump
•	•	**2**	77 17 05	0,25	Filter cartridge
•	•	**9**	57 17 24	0,75	Fuel filter support
•	•	**12**	77 04 02	0,50	Injection pump feed pipe
•	•	**17**	77 17 00	0,50	Fuel filter assembly
•	•	**18**	77 17 05	0,25	Filter cartridge
•	•	**19**	59 23 05	0,25	Fuel pressure sensor
•	•	**23**	57 17 08	0,50	Fuel pump pipe

1-WH14-007-C

35 45	55 65		Code		Description
TURBOCHARGER PIPES					
	•	**1**	78 26 00	2,00	Turbocharger
	•	**2**	78 64 03	2,00	Seals
	•	**3**	78 64 01	0,25	Seal
	•	**5**	78 64 03	2,00	Seals
	•	**7**	78 27 00	0,50	Lubricating pipe
	•	**9**	78 28 00	0,50	Oil return pipe
	•	**18**	72 06 05	0,25	Hose
	•	**21**	78 64 02	1,00	Seal
	•	**22**	58 64 11	2,00	Flange

1-WH24-003-A

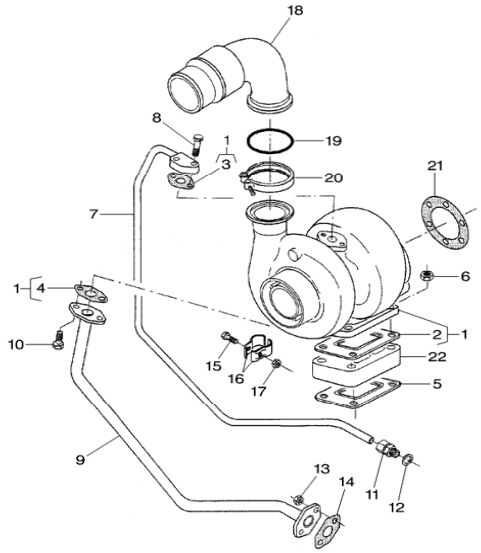


1-WH24-003-A / 1-WH24-006-A

MT600B

AIR COOLER

1-WC65-002-B

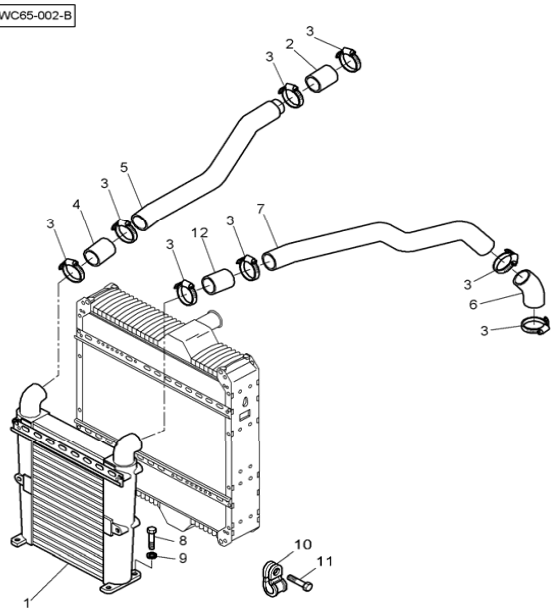


35 45	55 65		Code		Description
•	•	**1**	72 06 01	2,50	Air cooler
•	•	**2**	72 06 05	0,50	Hose
•	•	**4**	72 06 03	0,75	Hose
•	•	**5**	72 06 04	0,50	Pipe
•	•	**6**	72 06 07	0,25	Hose
•	•	**7**	72 06 06	0,75	Pipe
•	•	**12**	72 06 03	0,75	Hose

1-WC65-002-B / 1-WC65-002-C

MT600B

VERTICAL EXHAUST ON THE SIDE

1-WC11-009-E

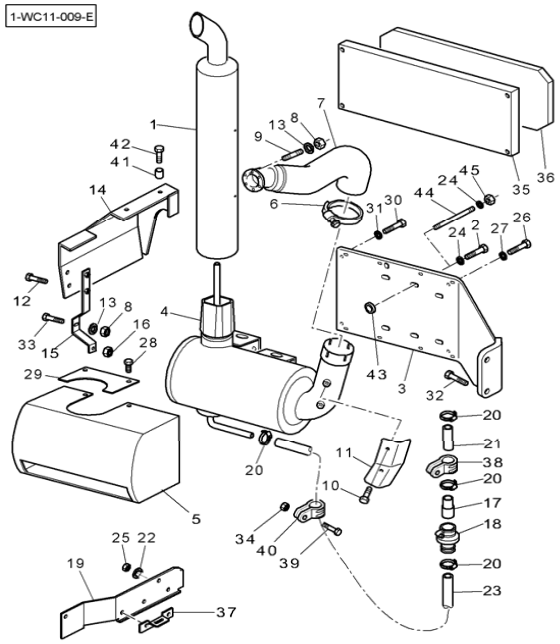


35 45	55 65		Code		Description
•	•	**1**	58 56 11	0,50	Exhaust pipe
•	•	**3**	58 56 05	1,50	Support
•	•	**4**	58 56 08	1,50	Exhaust elbow
•	•	**5**	78 56 09	1,25	Shield
•	•	**7**	78 56 01	1,50	Elbow union
•	•	**11**	58 56 40	0,25	Shield
•	•	**14**	58 56 30	0,25	Shield
•	•	**18**	58 56 10	0,25	Non-return valve
•	•	**21**	58 56 32	0,25	Hose
•	•	**23**	58 56 09	0,25	Suction hose
•	•	**35**	58 56 51	1,25	Shield
•	•	**36**	58 56 52	1,25	Heat shield

1-WC11-009-E / 1-WC11-009-D

MT600B

CLUTCH CONTROL

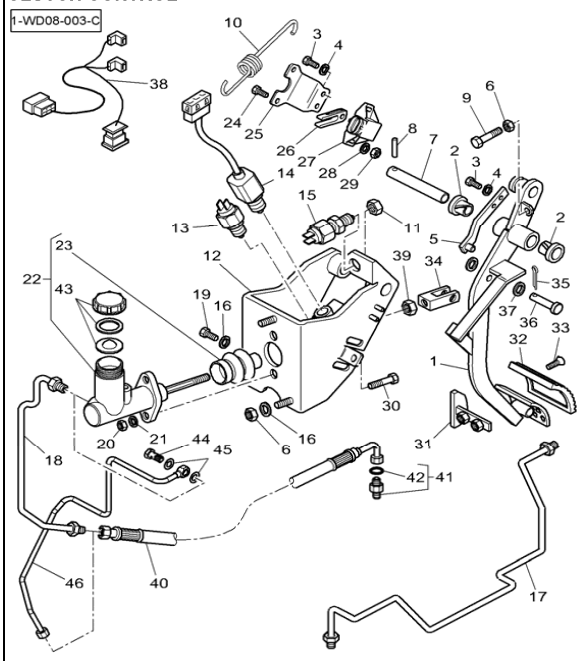


1-WD08-003-C / 1-WD08-003-A

35 45	55 65		Code		Description
•	•	**1**	21 01 01	1,25	Clutch pedal
•	•	**2**	21 01 24	1,00	Clutch pedal rings
•	•	**5**	21 00 10	0,50	Clutch pedal lug
•	•	**7**	21 01 23	1,00	Clutch pedal pin
•	•	**10**	21 01 92	0,50	Spring
•	•	**12**	21 01 91	2,00	Support
•	•	**13**	21 01 03	1,00	Switch
•	•	**14**	21 01 93	1,00	BOC switch
•	•	**15**	21 01 94	0,50	TOC switch
•	•	**17**	21 01 99	1,50	Clutch bleed pipe
•	•	**18**	21 01 06	1,00	Pipe
•	•	**22**	21 01 04	1,75	Master cylinder
•	•	**26**	21 00 11	0,50	Clutch pedal fork
•	•	**27**	21 00 12	1,00	Clutch pedal sensor
•	•	**30**	21 01 78	0,50	Clutch stop adjustment screw
•	•	**31**	21 01 29	0,25	Stop
•	•	**38**	21 01 95	0,75	Harness
•	•	**40**	21 01 02	1,50	Clutch valve control hose
•	•	**46**	21 01 06	1,00	Pipe

MT600B

TRANSMISSION CONTROL EMERGENCY CONTROL - RANGE

1-WG76-004-A

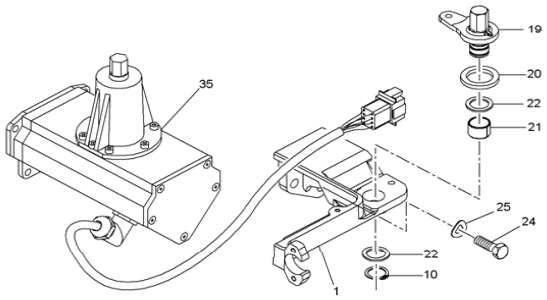


35	55		Code		Description
45	65				
•	•	**1**	27 05 02	1,50	Gear shift support
•	•	**19**	27 05 01	0,75	Gear shift lever
•	•	**35**	27 05 04	1,75	Transmission control module

1-WG76-004-A

MT600B

HANDBRAKE

1-WG28-011-A

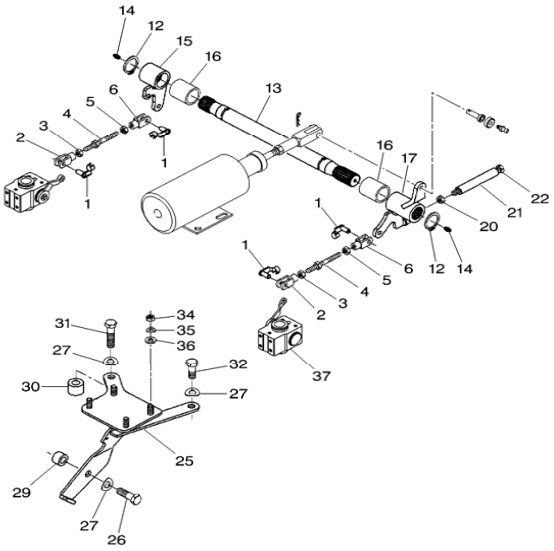


35 45	55 65		Code		Description
•	•	**4**	26 09 08	0,50	Threaded rod
•	•	**12**	26 09 09	0,25	Circlip
•	•	**13**	26 09 10	2,50	Shaft
•	•	**15**	26 09 11	0,50	Lever
•	•	**16**	26 09 12	3,00	Bush
•	•	**17**	26 09 13	1,50	Lever
•	•	**21**	26 09 14	0,25	Hose
•	•	**25**	26 09 15	3,00	Plate
•	•	**37**	26 01 97	0,25	Left-hand wheel braking cylinder

1-WG28-011-A

MT600B

ANGLE SENSOR

1-WQ20-002-A

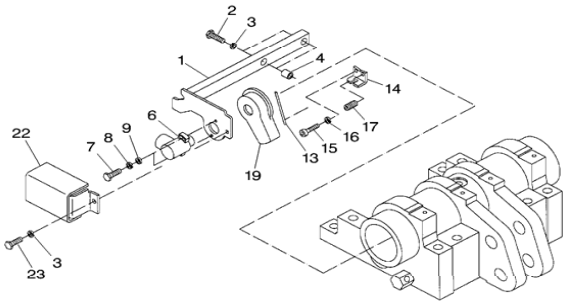


35 45	55 65		Code		Description
•	•	**6**	60 40 05	1,25	Position sensor
•	•	**13**	60 40 99	1,00	Angle sensor spring wire

1-WQ20-002-A

MT600B

TUBE STABILIZERS

1-WQ16-010-A

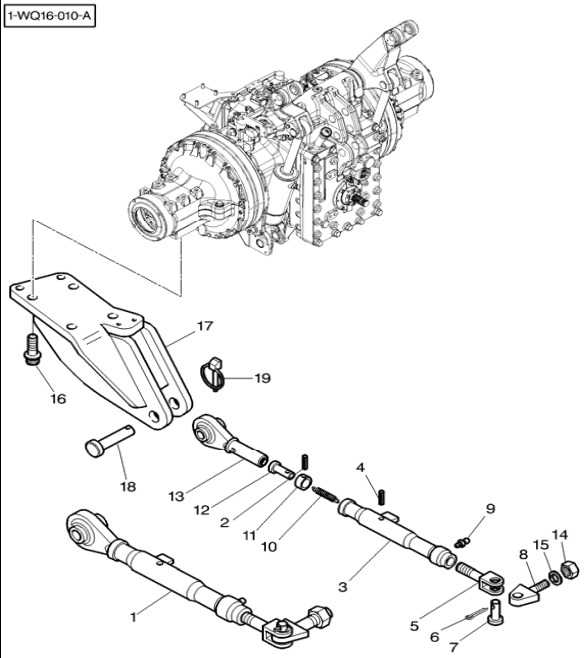


1-WQ16-010-A

35 45	55 65		Code		Description
•	•	**1**	32 01 88	0,75	Stabiliser
•	•	**3**	32 01 16	0,50	Adjustable sleeve
•	•	**5**	32 01 17	0,25	Clevis
•	•	**8**	32 01 18	0,25	Attachment / pin
•	•	**10**	32 01 15	0,75	Spring
•	•	**13**	32 01 14	0,25	Rod with ball joint
•	•	**17**	32 01 11	0,50	Kit lock
•	•	**18**	32 01 48	0,50	Pin

MT600B

SWINGING DRAWBAR


1-WQ12-036-A

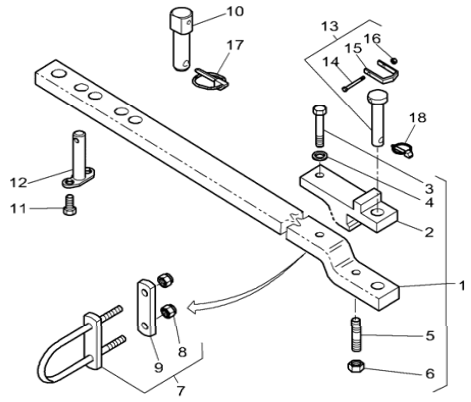

35	55		Code		Description
45	65				
•	•	**1**	32 02 02	0,50	Swinging drawbar
•	•	**2**	32 02 18	0,50	Clevis
•	•	**7**	32 02 25	0,25	Shackle
•	•	**10**	32 02 14	0,25	Pin
•	•	**12**	32 02 14	0,25	Pin
•	•	**13**	32 02 09	0,25	Pin

1-WQ12-036-A

MT600B	35 45	55 65		Code		Description
AUTOMATIC HITCH WITH REMOTE CONTROL						
1-WQ21-005-B	•	•	**3**	34 08 01	1,00	Auto-hitch cable

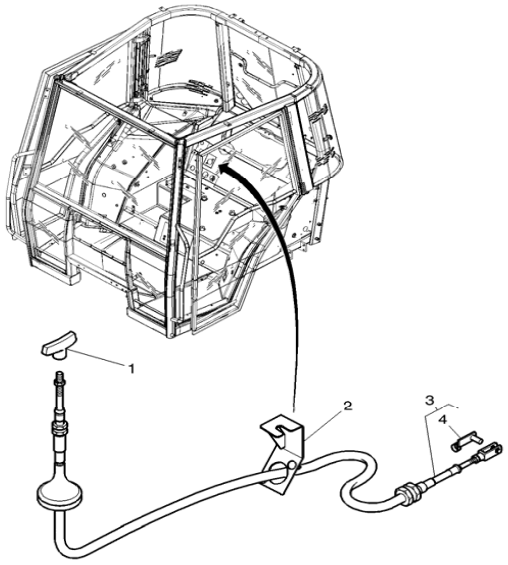

1-WQ21-005-B




50

MT600B

WEIGHT FRAME AND TOW PIN

1-WX15-004-B

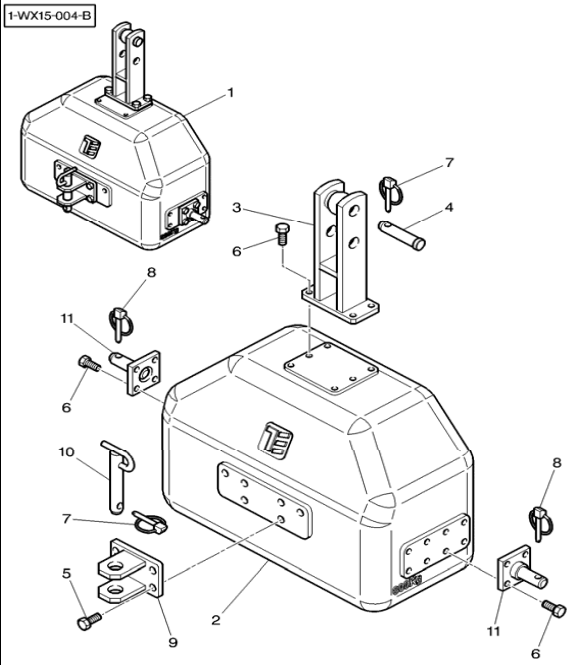


35 45	55 65		Code		Description
	•	**2**	34 12 23	1,25	Front weight
	•	**3**	34 12 25	0,25	Front weight top hitch point
	•	**11**	34 12 24	0,25	Front weight side hitch point

1-WX15-004-B

MT600B

FRONT AXLE 4 WHEEL DRIVE

1-WK01-006-B

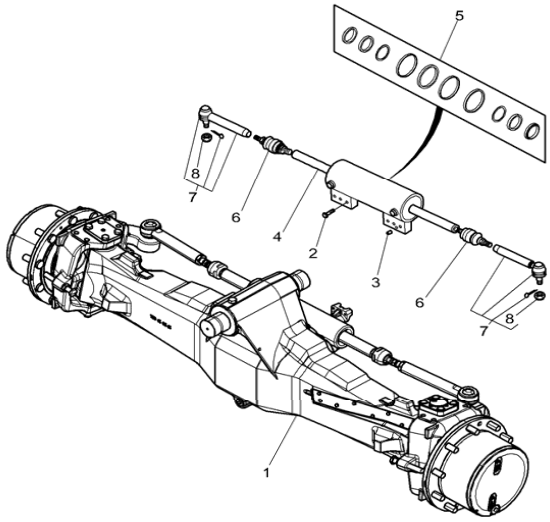


35 45	55 65		Code		Description
	•	1	25 18 00	5,50	Front axle assembly
	•	4	25 18 29	1,50	Steering ram
	•	5	25 18 46	3,50	Seals and rings
	•	6	25 18 31	1,75	Sleeve
	•	7	25 18 30	1,50	Steering ball joint
				3,00	Addition for 3,5 T front linkage
				4,00	Addition for 5 T front linkage

1-WK01-006-B

MT600B

FRONT AXLE 4 WHEEL DRIVE DIFFERENTIAL

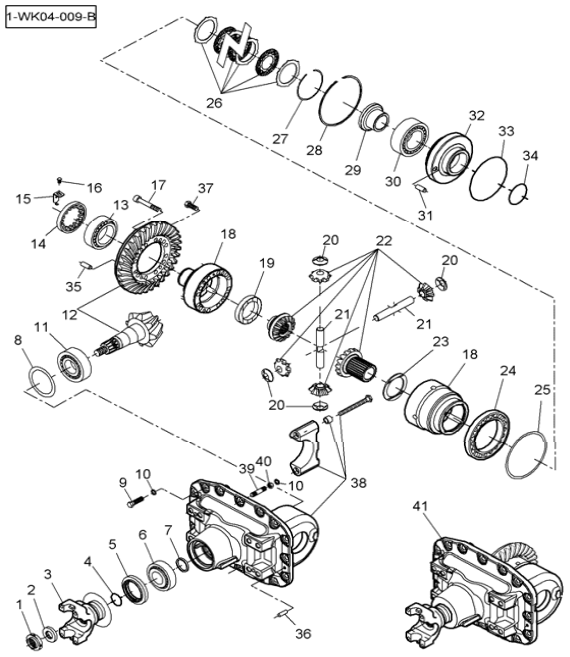

35 45	55 65		Code		Description
•		1	25 21 79	2,00	Nut
•		2	25 21 77	2,00	Washer
•		3	25 21 78	2,00	Coupling
•		4	25 21 85	2,00	O'ring
•		5	25 21 80	2,00	Cassette seal
•		6	25 21 76	13,25	Bearing
•		7	25 21 74	2,00	Spacer
•		8	25 18 73	13,25	Washer / spacer
•		11	25 21 68	13,25	Bearing
•		12	25 21 83	13,25	Crownwheel / pinion assembly
•		13	25 21 62	13,25	Bearing
•		14	25 21 63	10,50	Castellated nut
•		15	25 21 64	10,50	Retainer
•		18	25 21 61	13,25	Differential housing
•		19	25 21 60	11,00	Washer
•		20	25 21 59	11,75	Washer
•		21	25 21 56	11,75	Pin
•		22	25 21 54	11,75	Sun gear
•			25 21 58	11,75	Differential gear
•		23	25 21 60	11,75	Washer
•		24	25 21 87	11,75	Bearing
•		25	25 21 88	11,75	Shim
•		26	25 21 53	11,75	Clutch disc
•		27	25 21 90	11,75	Snap ring
•		28	25 21 92	11,75	Snap ring
•		29	25 21 89	11,75	Flange
•		30	25 21 91	11,75	Bearing
•		32	25 21 50	11,75	Differential lock piston
•		33	25 21 93	11,75	O'ring
•		34	25 21 94	11,75	O'ring
•		38	25 21 73	13,25	Differential support
•		41	25 18 74	10,25	Differential assembly
				1,50	Addition for 5 T front linkage

1-WK04-009-B

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

MT600B

FRONT AXLE 4 WHEEL DRIVE CLUTCH

1-WK15-011-A

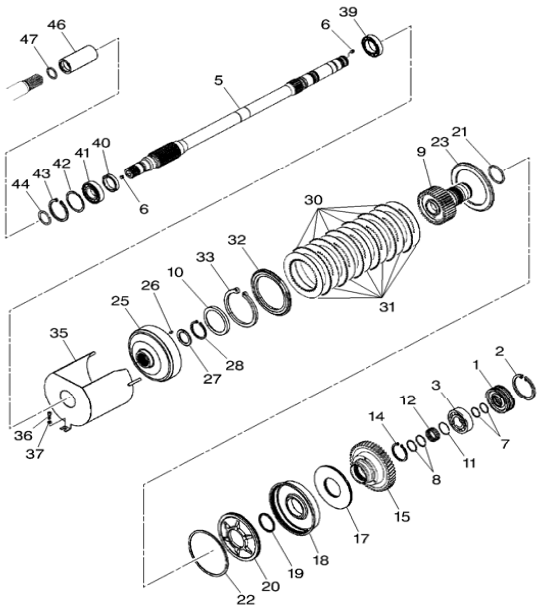


35 45	55 65		Code		Description
•	•	**5**	29 05 10	43,50	4WD shaft
•	•	**9**	29 05 06	45,50	Hub
•	•	**15**	29 05 99	45,50	4WD pinion
•	•	**17**	29 05 04	45,50	Belleville washer
•	•	**18**	29 05 21	45,50	Bell housing
•	•	**19**	29 05 07	45,50	O'rings
•	•	**20**	29 05 08	45,50	Cover
•	•	**22**	29 05 07	45,50	O'rings
•	•	**23**	29 05 47	45,50	Plate
•	•	**25**	29 05 11	45,50	Bell gear
•	•	**30**	29 05 02	45,50	Plates
•	•	**31**	29 05 03	45,50	Discs
•	•	**33**	29 05 48	45,50	Circlip
•	•	**39**	29 05 49	45,50	Bearing
•	•	**41**	29 05 50	35,00	Bearing
•	•	**43**	29 05 51	35,00	Circlip
•	•	**46**	29 07 01	31,50	Bush
				1,50	Addition for 5 T front linkage

1-WK15-011-A

MT600B

STEERING HYDRAULIC LINES

1-WN06-042-A

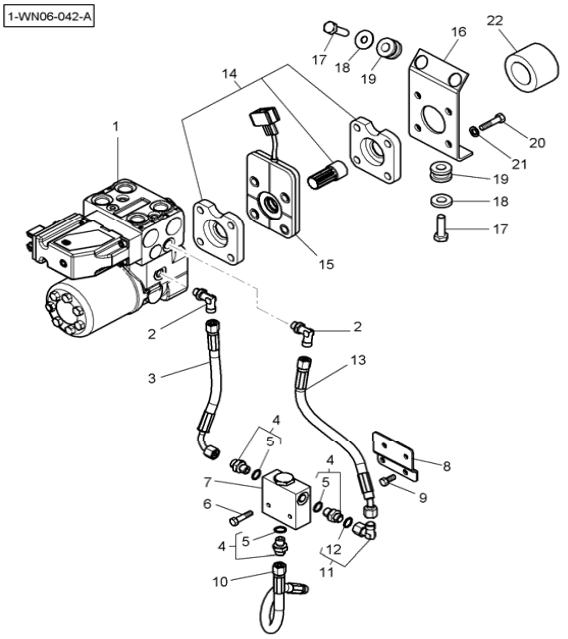


35 45	55 65		Code		Description
•	•	**1**	17 01 18	3,75	Hydrostatic steering unit
•	•	**2**	22 14 56	0,75	Union
•	•	**3**	22 04 55	1,00	XLS line - steering
•	•	**7**	22 14 89	1,75	Priority valve
•	•	**10**	22 14 90	2,00	Hose
•	•	**13**	22 14 91	2,00	Hose
•	•	**14**	22 14 92	3,50	Control pin
•	•	**15**	22 14 93	3,50	Sensor
•	•	**16**	22 14 94	3,50	Support
•	•	**22**	22 14 95	3,50	Sleeve

1-WN06-042-A

FEED PUMP SYSTEM COMFORT

1-WG92-001-A

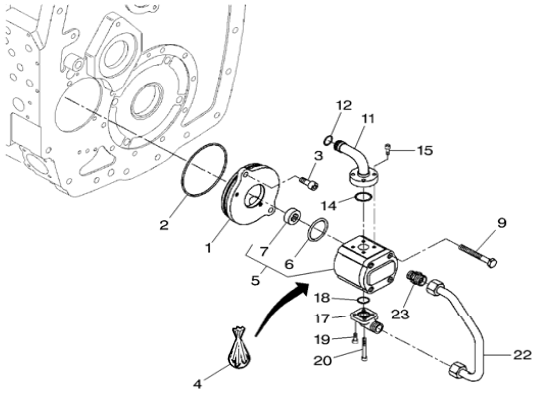


35 45	55 65		Code		Description
•	•	**1**	21 26 61	13,75	Cover
•	•	**2**	21 26 62	13,75	O'ring
•	•	**4**	22 01 04	14,00	Hydraulic pump overhaul
•	•	**5**	22 01 03	13,25	Hydraulic pump
•	•	**11**	21 26 63	13,00	Union
•	•	**22**	21 26 64	9,50	Pipe

1-WG92-001-A

MT600B

HYDRAULIQUE MANIFOLD

1-WP25-003-B

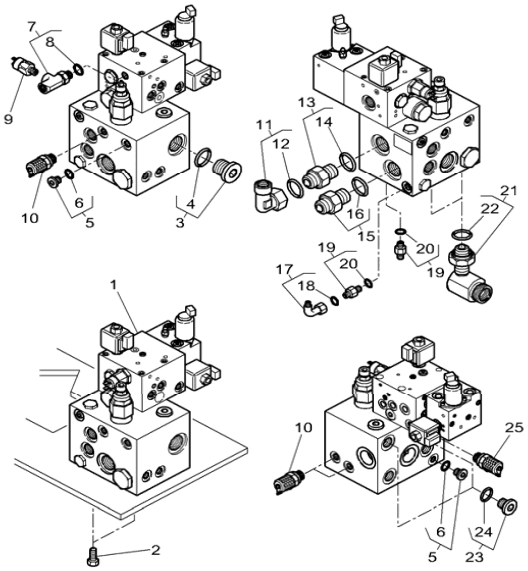


35 45	55 65		Code		Description
•	•	1	21 26 36	9,50	Hydraulic distribution valve block
•	•	9	60 30 87	0,50	Pressure switch

1-WP25-003-B

MT600B

AUXILIARY HYDRAULICS

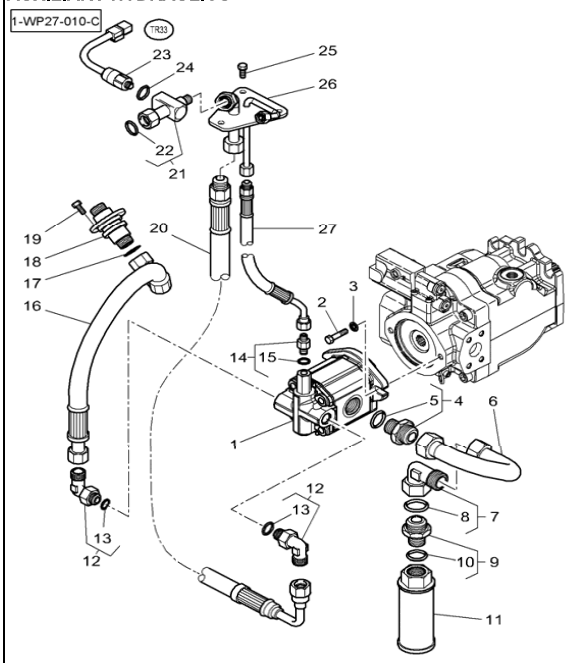


1-WP27-010-C

35	45	55	65		Code		Description
•	•	•	•	**1**	22 14 79	10,50	Gear pump
•	•	•	•	**6**	22 14 80	10,25	Pipe
•	•	•	•	**11**	22 14 81	10,25	Strainer
•	•	•	•	**16**	22 14 82	10,25	Hose
•	•	•	•	**20**	22 14 83	10,75	Hose
•	•	•	•	**21**	22 14 84	1,50	Union
•	•	•	•	**23**	60 30 86	1,50	High pressure sensor
•	•	•	•	**26**	22 14 85	10,75	Pipe
•	•	•	•	**27**	22 14 86	9,75	Hose

MT600B

HYDRAULIC COUPLING

1-WP40-021-B

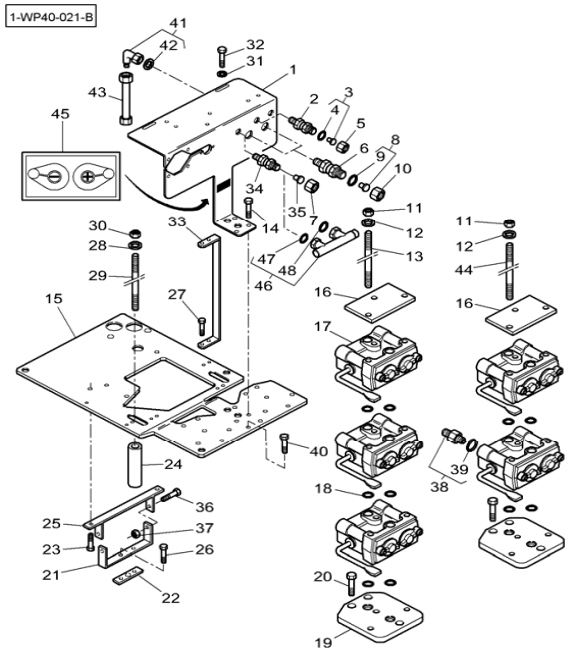


35 45	55 65		Code		Description
•	•	**1**	22 02 73	1,50	Spool valve support
•	•	**13**	22 12 31	0,25	Stud
•	•	**15**	22 02 74	8,50	Spool valve support
•	•	**16**	22 12 25	0,25	Plate
•	•	**17**	22 12 18	2,00	Quick coupler assembly
•	•	**19**	22 12 26	2,25	Support
•	•	**29**	22 12 31	0,25	Stud
•	•	**43**	22 12 64	1,00	Pipe
•	•	**44**	22 12 31	0,25	Stud
•	•	**46**	22 12 68	0,50	Union

1-WP40-021-B / 1-WP40-027-B

MT600B


35 45	55 65		Code		Description
EXTERNAL CONTROLS FITTED ON THE REAR FENDERS					
•	•	**1**	60 40 02	0,50	Remote control button
•	•	**3**	60 40 02	0,50	Remote control button
•	•	**4**	60 40 49	0,50	PTO stop shunt
•	•	**5**	60 40 02	0,50	Remote control button
•	•	**6**	60 40 02	0,50	Remote control button
			14 01 00	0,75	Electrical fault diagnostics

1-WU22-001-C

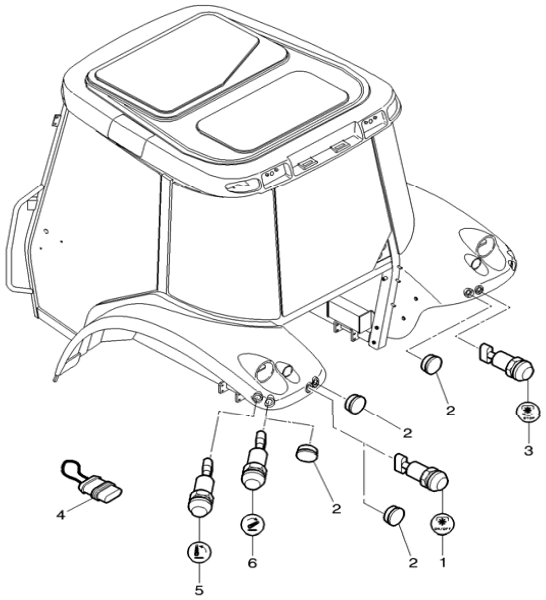

1-WU22-001-C / 1-WU22-006-A


MT600B	35 45	55 65		Code		Description
FRONT LIGHTNING HARNESS						
1-WW44-003-B	•	•	**1**	14 00 61	2,50	Harness
				14 01 00	0,75	Electrical fault diagnostics

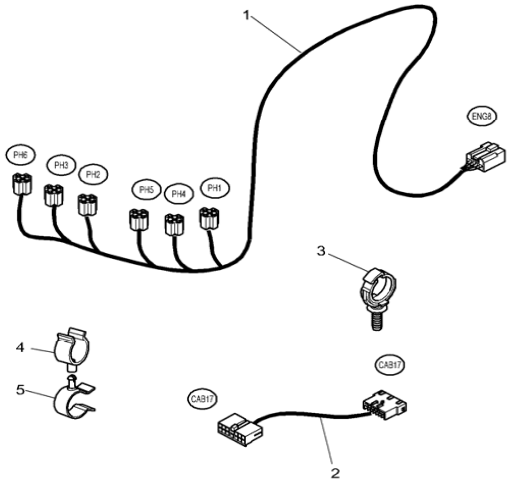

1-WW44-003-B

MT600B

	35 45	55 65		Code		Description
ELECTRONIC LIFT MAIN HARNESS						
1-WP33-016-A	•	•	**1**	60 40 96	2,25	Dual Control linkage harness
				14 01 00	0,75	Electrical fault diagnostics

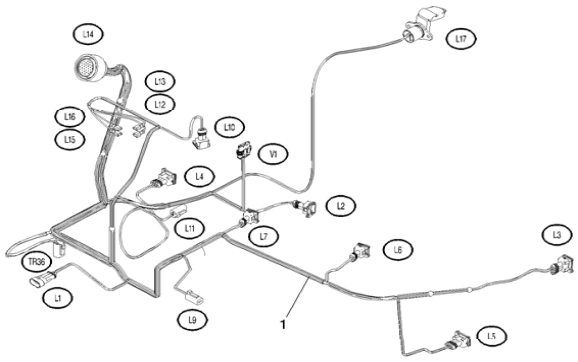


1-WP33-016-A / 1-WP33-038-A

MT600B

CONTROL BOX CAB

1-WU36-010-A

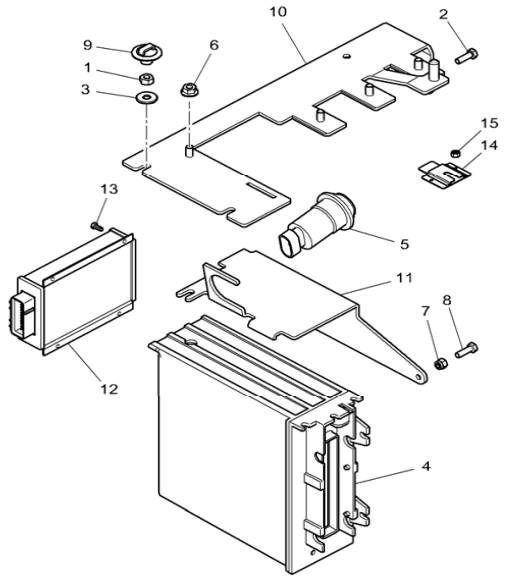


35 45	55 65		Code		Description
•	•	**4**	60 30 01	0,50	Autotronic unit
•	•	**5**	27 05 06	0,75	Pressure switch
•	•	**12**	60 60 27	0,50	Autotronic 5

1-WU36-010-A

MT600B

SHEET METAL GRILLE

1-WR02-013-B

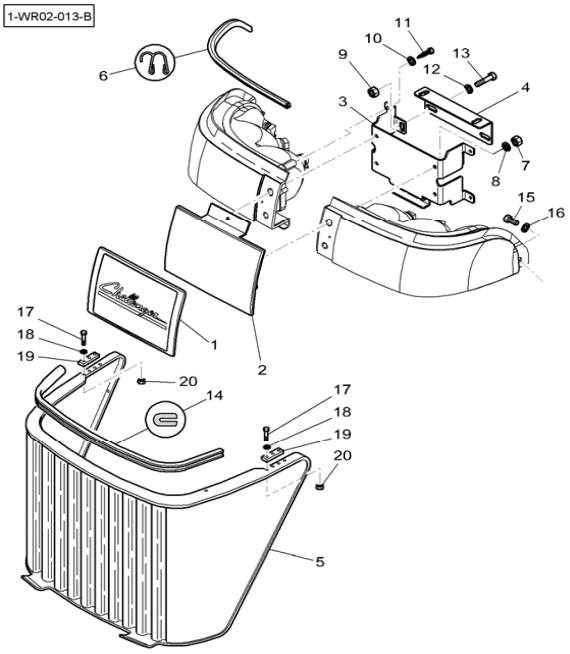


35	55		Code		Description
45	65				
•	•	**2**	28 02 22		Bonnet emblem
•	•	**5**	28 02 01		Grille

1-WR02-013-B

MT600B

SUSPENDED CAB CONTROL UNIT

1-WU46-005-A

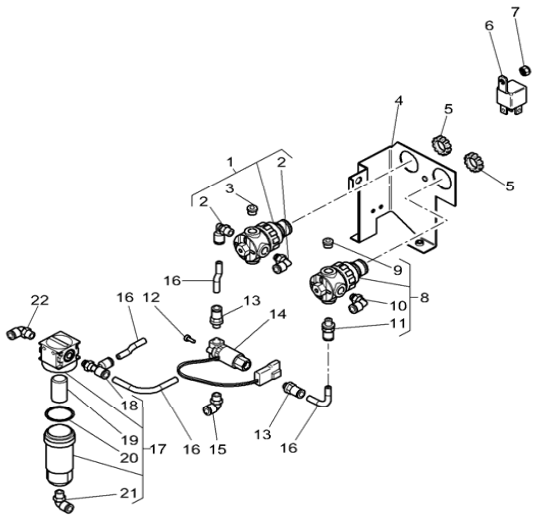


35 45	55 65		Code		Description
•	•	**1**	28 12 67	2,75	Cab suspension pressure regulator
•	•	**6**	28 12 68	2,75	Cab suspension relay
•	•	**8**	28 12 69	2,75	Cab suspension pressure regulator
•	•	**14**	28 12 70	2,75	Cab suspension solenoid valve
•	•	**17**	28 12 71	3,00	Cab suspension filter

1-WU46-005-A

MT600B

TRACTOR CAB CLADDING

1-WU19-016-A

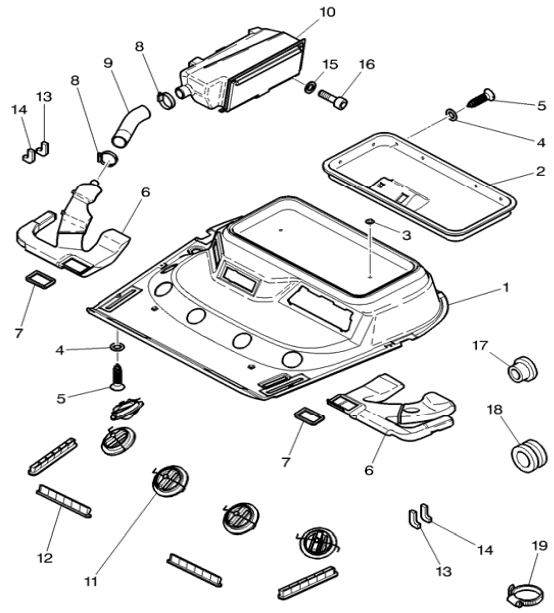


1-WU19-016-A

35 45	55 65		Code		Description
•	•	**1**	28 03 20	2,50	Top-of roof cladding
•	•	**2**	28 03 22	0,75	Roof access cover cladding
•	•	**6**	28 03 33	1,00	Air manifold
•	•	**10**	28 03 35	1,00	Toolbox
•	•	**11**	28 06 09	0,25	Air vent
•	•	**12**	28 03 37	0,25	Diffuser

MT600B

AIR CONDITIONER HOSE

1-WU45-011-A

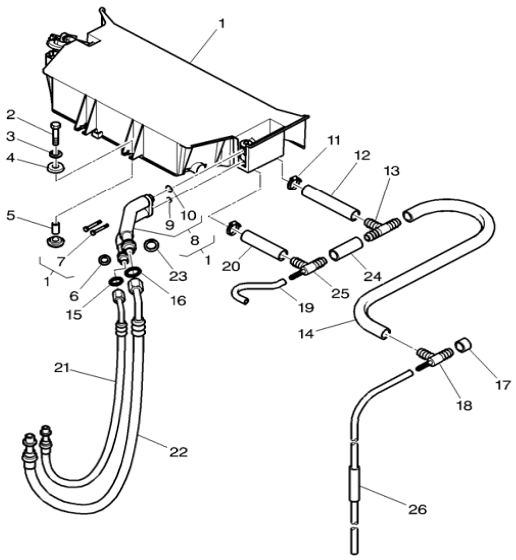


35 45	55 65		Code		Description
•	•	**1**	15 02 03	5,50	Air conditioning unit
•	•	**8**	15 01 43	2,00	Pipe assembly
•	•	**12**	15 01 44	0,25	Air conditioning hose
•	•	**13**	15 01 45	0,50	Air conditioning tee union
•	•	**14**	15 01 51	1,25	Air conditioning hose
•	•	**18**	15 01 46	0,50	Air conditioning tee union
•	•	**19**	15 01 49	0,50	Air conditioning hose
•	•	**20**	15 01 44	0,25	Air conditioning hose
•	•	**21**	15 01 26	2,50	Air conditioning hose
•	•	**22**	15 01 24	2,50	Air conditioning hose
•	•	**24**	15 01 48	0,50	Air conditioning hose
•	•	**26**	15 01 47	0,50	Air conditioning hose

1-WU45-011-A

MT600B

RADIO INSTALLATION

1-WU26-004-C

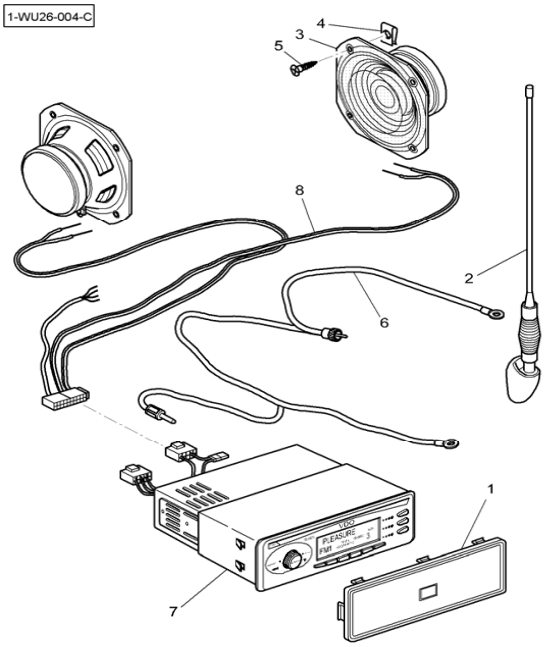


35 45	55 65		Code		Description
•	•	**2**	28 02 58	0,75	Aerial
•	•	**3**	28 02 30	0,25	Loudspeaker
•	•	**6**	14 18 28	1,50	Harness
•	•	**7**	28 02 32	0,50	Radio
•	•	**8**	28 02 57	1,00	Loudspeaker cables

1-WU26-004-C / 1-WU26-011-A

MT600B


SEAT GRAMMER

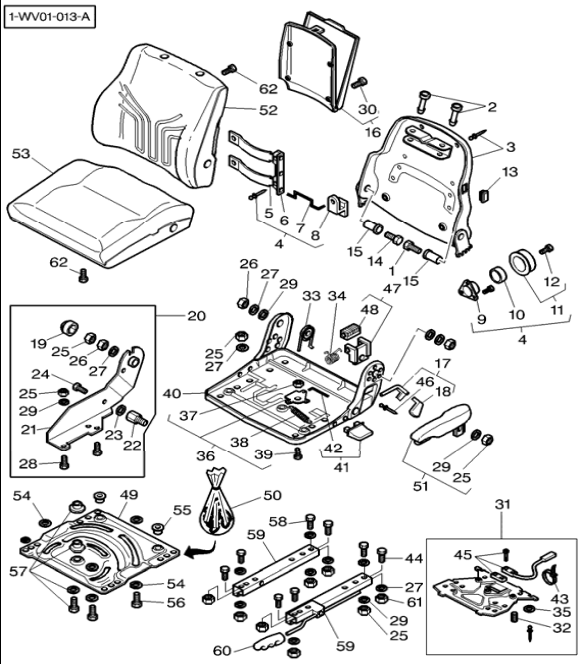

1-WV01-013-A

35 45	55 65		Code		Description
•	•	**3**	28 06 21	2,00	Seatback frame
•	•	**4**	28 06 21	2,00	Seatback frame
•	•	**16**	28 06 46	0,25	Seat pocket
•	•	**17**	28 06 47	1,75	Lever
•	•	**20**	28 06 23	1,50	Seat support
•	•	**31**	28 06 48	3,00	Seat adjustment system
•	•	**36**	28 06 49	1,75	Lever
•	•	**40**	28 06 20	3,00	Cushion frame
•	•	**41**	28 06 50	2,50	Handle
•	•	**49**	28 06 22	3,00	Plate
•	•	**51**	28 06 01	0,50	Armrest
•	•	**52**	28 06 02	0,50	Backrest
•	•	**53**	28 06 03	1,50	Cushion
•	•	**59**	28 06 17	2,50	Mechanism

MT600B	35 45	55 65		Code		Description
LIGHTING EQUIPMENT FRONT						
1-WW02-006-A	•	•	**1**	14 01 60	0,50	Front direction indicator light

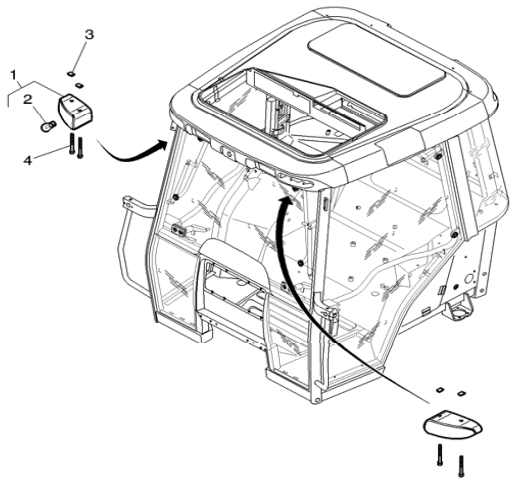


1-WW02-006-A

MT600B

FRONT AXLE 4 WHEEL DRIVE MUDGUARDS AND SUPPORTS

1-WK14-003-B

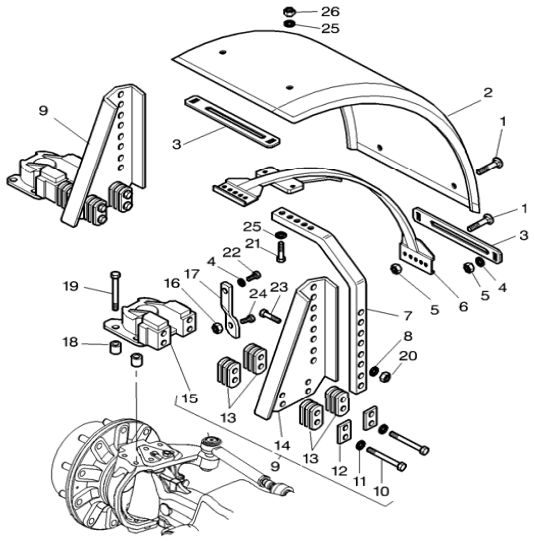


35 45	55 65		Code		Description
•	•	**2**	16 02 22	0,50	Fender assembly
•	•		16 02 23	0,50	Fender
•	•	**3**	16 02 35	0,50	Plate
•	•	**6**	16 02 34	0,50	Arch
•	•	**7**	16 02 42	0,50	Support
•	•	**13**	16 02 40	0,50	Spacers
•	•	**14**	16 02 41	0,50	Plate
•	•	**15**	16 02 37	1,00	Pivot
•	•	**17**	16 02 43	0,50	Lug
•	•	**18**	16 02 44	0,50	Spacers

1-WK14-003-B

MT600B

WHEEL WEIGHTS

1-WX17-002-A

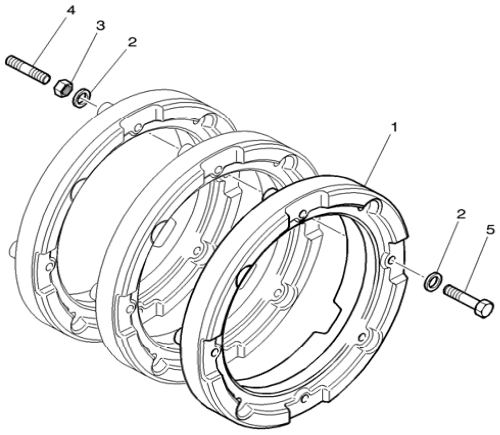

1-WX17-002-A

35 45	55 65		Code		Description
•	•	1	25 07 20	1,00	Wheel weight
•	•	4	25 07 19	1,00	Wheel weight stud
			25 07 99	0,50	Touch-up (paint)

Code	Description	Page
21 26 65	Pipe	70-19
21 26 66	Pipe	70-19
21 26 67	Pipe	70-19
21 26 68	Pipe	70-19
21 26 69	Pipe	70-19
21 26 70	Hose	70-19
21 26 71	Pipe	70-20
21 26 72	Pipe	70-20
21 26 73	Pipe	70-20
21 26 74	Hose	70-20
21 26 75	Injector nozzle	70-20
21 26 77	Hose	70-21
21 26 78	Hose	70-21
21 26 79	Pipe	70-21
21 26 80	Pipe	70-21
21 26 81	Hose	70-21
21 26 82	Hose	70-22
21 26 83	Pipe	70-22
21 26 84	Hose	70-22
21 26 85	Pipe	70-22
21 26 86	Hose	70-22
21 26 87	Piston	70-23
21 26 88	Spring	70-23
21 26 89	Spring	70-25
21 26 90	Piston	70-25
21 26 91	Front brake control valve	70-25
21 26 92	Pipe	70-26
21 26 93	Pipe	70-26
21 26 94	Pipe	70-26
21 26 95	Pipe	70-26
21 26 96	Pipe	70-26
21 26 97	Pipe	70-26
21 26 98	Pipe	70-26
21 26 99	Pipe	70-26
21 29 02	Seal set	70-25
21 29 03	Seal set	70-29, 70-31
21 29 04	Seal set	70-29
22 00 43	Piston pump	70-37
22 01 03	Hydraulic pump	70-18



Code	Description	Page
26 09 12	Bush	30-4
26 09 13	Lever	30-4
26 09 14	Hose	30-4
26 09 15	Plate	30-4
26 09 16	Lever	30-2
26 09 17	Valve	30-2, 30-3
26 09 18	Set of parts	30-2, 30-3
26 09 19	Seal set	30-2, 30-3
27 00 12	Breather pipe	20-4
27 00 29	Differential bearing flange	30-7
27 00 31	Differential ring	30-7
27 00 32	Differential piston	30-7
27 00 33	Differential internal disc	30-7
27 00 34	Differential external disc	30-7
27 00 40	Adjustment shim	30-7
27 00 41	Disc	30-7
27 00 42	Ring	30-7
27 00 43	Ring	30-7
27 00 58	Washer	30-8
27 00 59	Circlip	30-8
27 00 60	Ring	30-8
27 00 61	Ring	30-8
27 00 62	Washer	30-8
27 00 63	Deflector	30-8
27 00 64	Circlip	30-8
27 00 65	Deflector	30-8
27 00 66	Washer	30-8
27 01 00	Centre housing assembly	30-5
27 01 01	Drive pinion / ring gear assembly	30-7, 30-8, 30-9, 60-34
27 01 05	Sun gears	30-7
27 01 06	Friction washer	30-7
27 01 07	Pinion gears	30-7
27 01 09	Drive pinion rear bearing	30-8
27 01 10	Drive pinion front bearing	30-8
27 01 13	Left-hand differential unit	30-7
27 01 15	Differential bearing	30-7
27 01 27	Dipstick and tube	30-6
27 01 33	4 WD drive pinion	30-8, 60-34
27 01 72	Rings / O'rings	30-7
27 01 81	Shafts	30-7



Code	Description	Page
29 05 47	Plate	60-33
29 05 48	Circlip	60-33
29 05 49	Bearing	60-33
29 05 50	Bearing	60-33
29 05 51	Circlip	60-33
29 05 99	4WD pinion	60-33, 60-34
29 06 00	4WD shaft notched wheel	60-34
29 07 01	Bush	60-33
30 01 03	Hitch	40-26, 40-27, 40-28
30 01 06	Latch	40-28
30 01 16	Pin	40-26, 40-27
32 01 00	Top bar assembly	40-4, 40-5
32 01 10	Hitch lower link	40-11
32 01 11	Kit lock	40-9, 40-10, 40-14
32 01 14	Rod with ball joint	40-9
32 01 15	Spring	40-9, 40-10
32 01 16	Adjustable sleeve	40-9
32 01 17	Clevis	40-9, 40-10
32 01 18	Attachment / pin	40-9, 40-10
32 01 19	Hook lower link	40-12
32 01 22	Ball joint / pin	40-12
32 01 23	Ball joint	40-11, 40-12
32 01 24	Ball joint	40-4
32 01 26	Handle	40-4, 40-5
32 01 29	Hooked rod	40-4, 40-5
32 01 33	Ball end lift rod	40-6
32 01 35	Lift rod ball end	40-6
32 01 36	Pipe and handle	40-6
32 01 37	Threaded rod	40-6
32 01 38	Clevis	40-6
32 01 40	Hole drawbar	40-13
32 01 41	Pin	40-13
32 01 47	Pin	40-4
32 01 48	Pin	40-9, 40-10
32 01 49	Stabiliser block	40-14
32 01 50	Stabiliser blocks	40-23
32 01 58	Lower link spacer / spring / rod	40-14
32 01 59	Pin	40-6

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL