KramerAllrad

Baggerlader
616 S



Ersatzteilliste

Ausgabe 1.3

Teil-Nummer 0 64 003 00 90

Gültig ab Fahrgestell-Nr. 616 65 0001

Kramer Werke GmbH
Bereich Baumaschinen
Postfach 10 15 63
D-88 645 Überlingen
Telefon-Nr. 07551 - 802 - 450
Telefax-Nr. 07551 - 802 - 138

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below

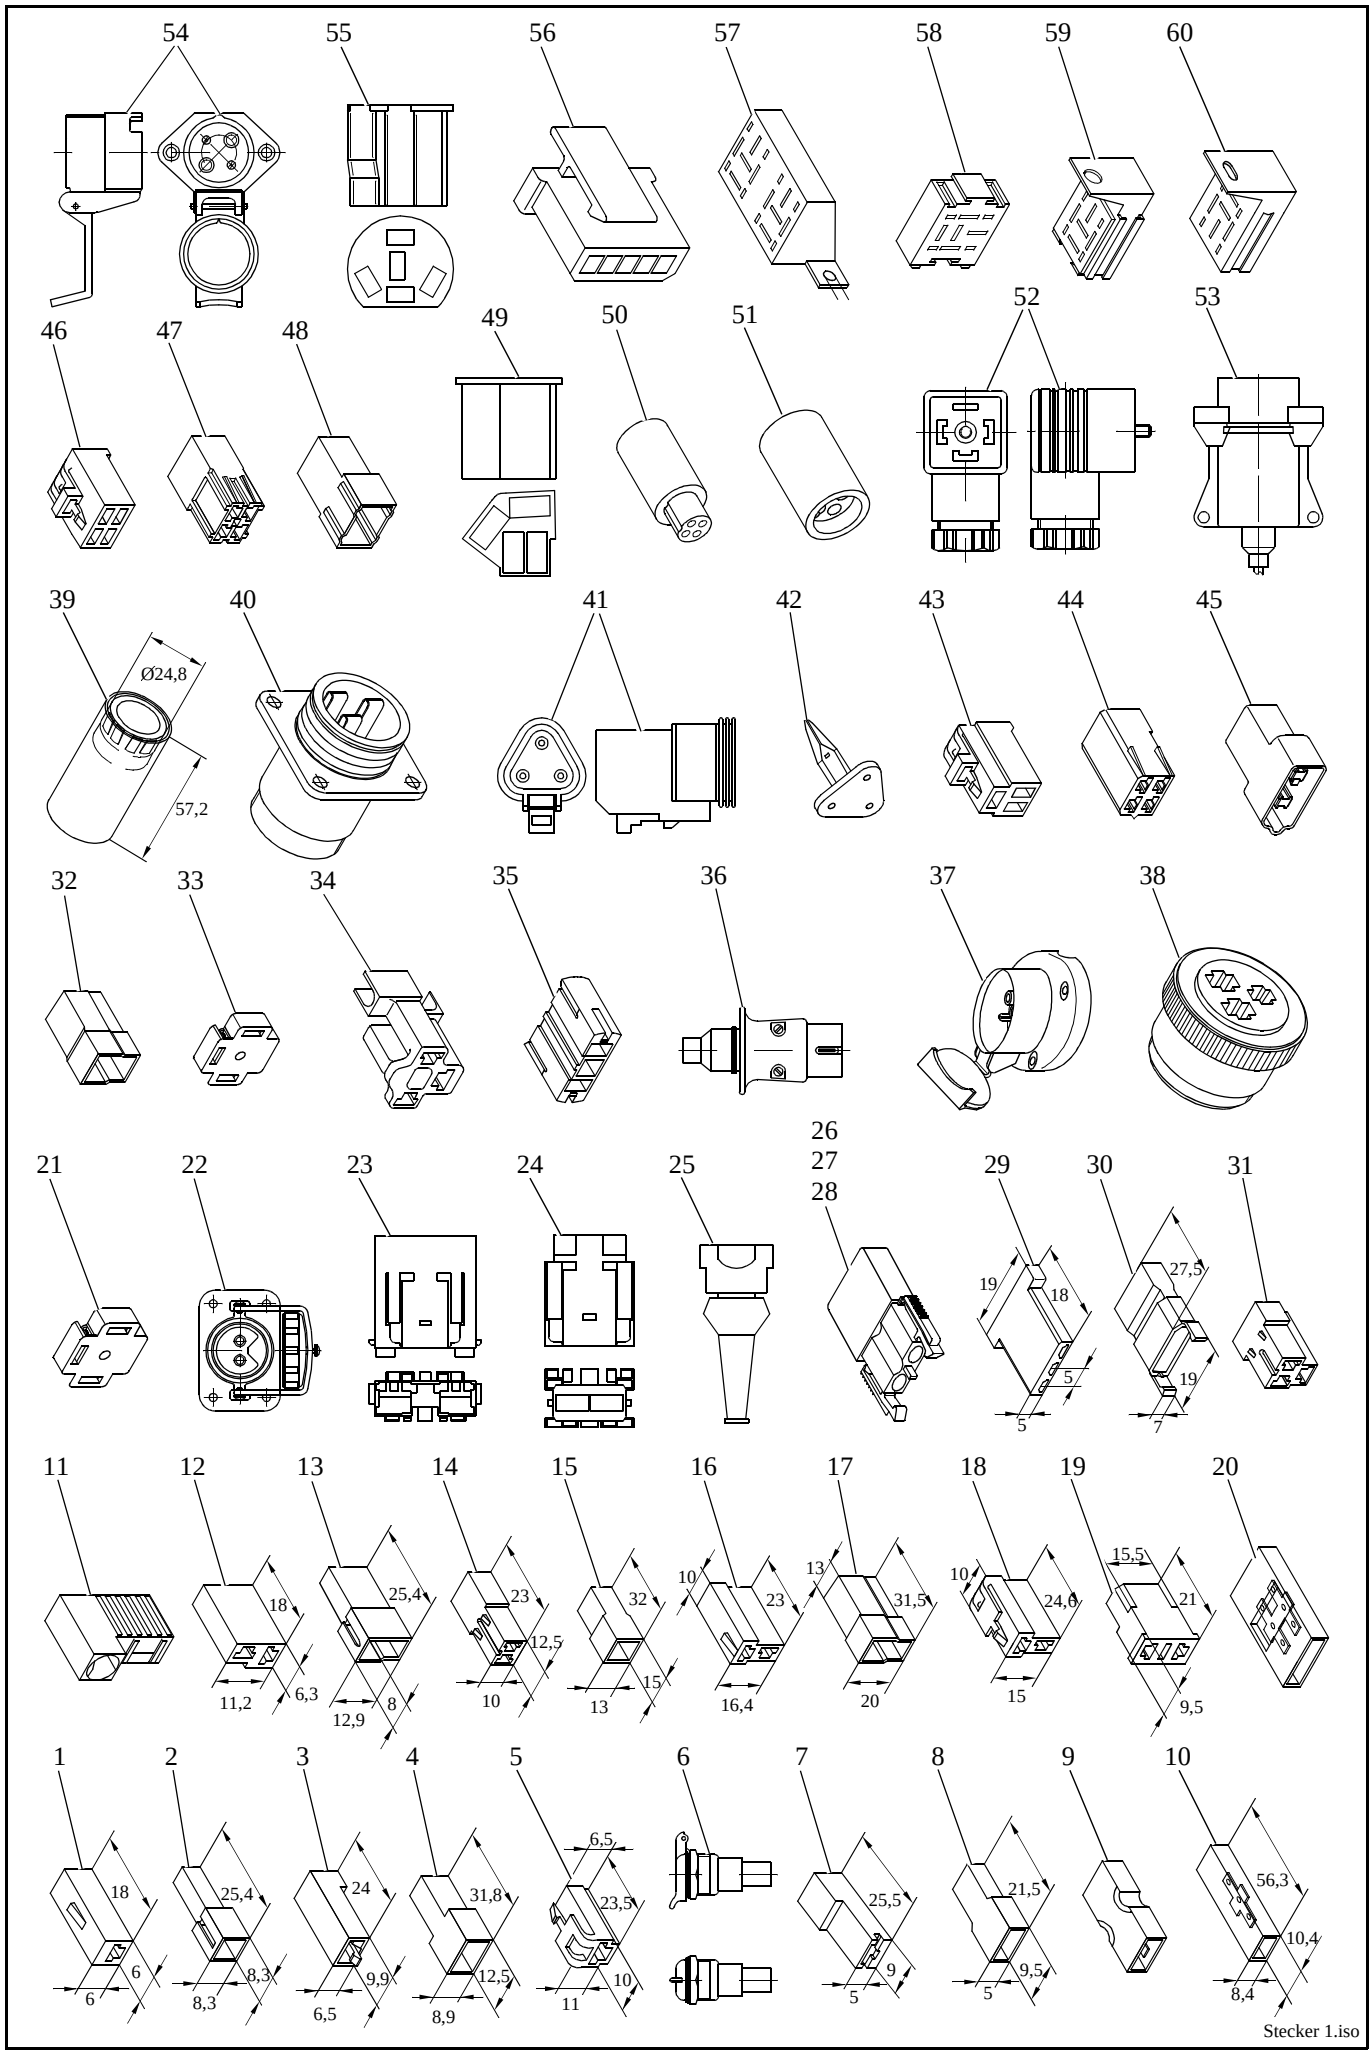


- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

Hauptgruppe 00

Wartungs- und Dichtsätze
Elektrische Steckverbindungen

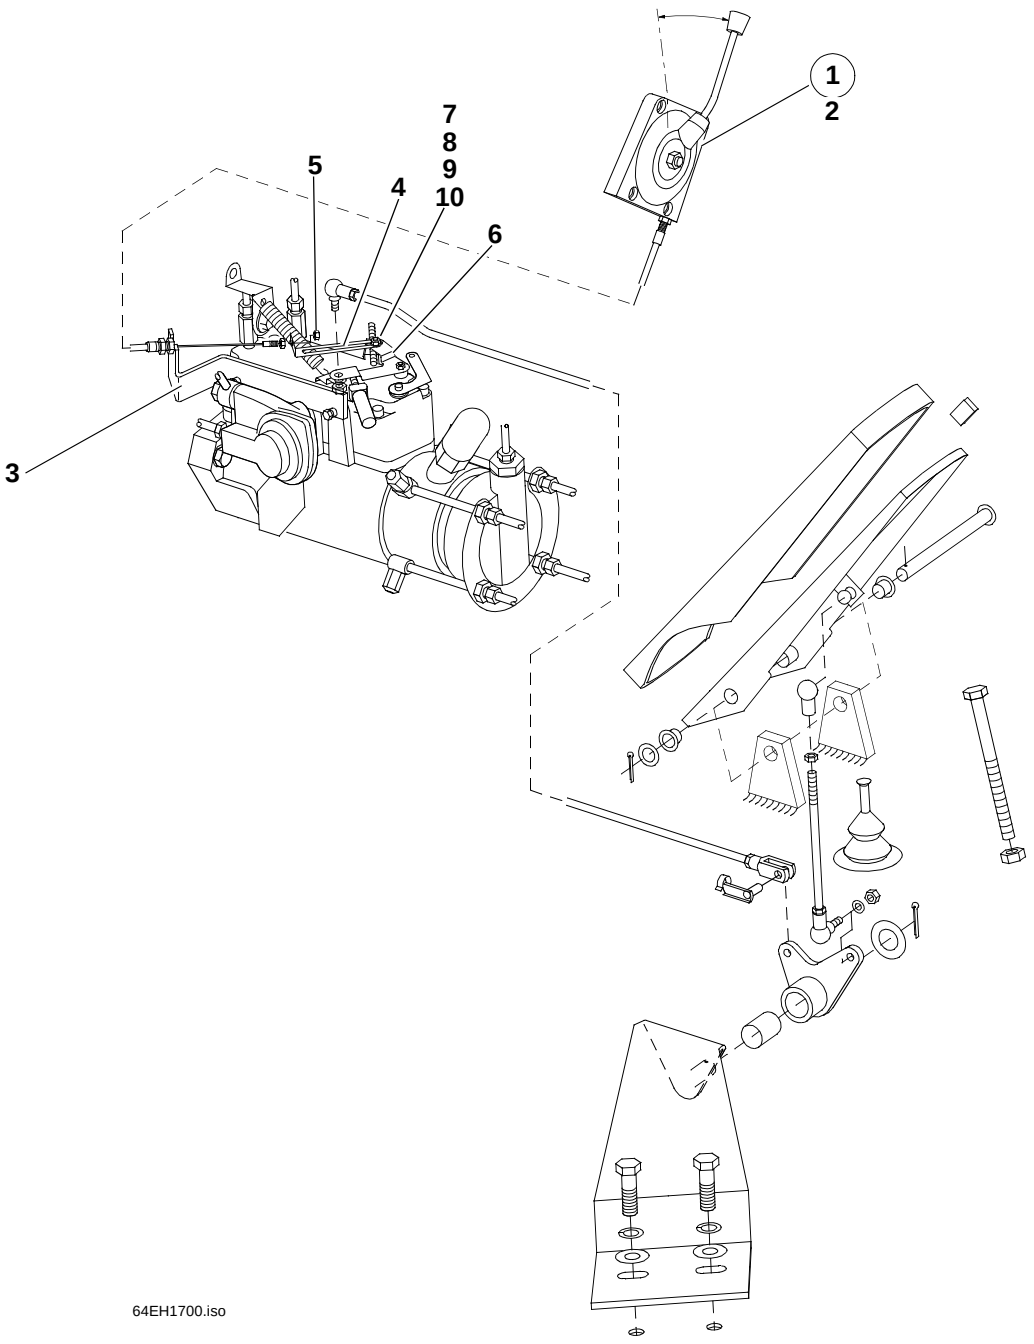

54
55
56
57
58
59
60
46
47
48
49
50
51
52
53
39
Ø24,8
57,2
40
41
42
43
44
45
32
33
34
35
36
37
38
26
27
28
21
22
23
24
25
29
19
18
5
5
30
27,5
19
7
31
11
12
18
11,2
6,3
13
25,4
12,9
8
14
23
12,5
10
15
32
15
13
16
10
23
16,4
17
13
31,5
20
18
10
24,6
15
19
15,5
21
9,5
20
1
18
6
6
2
25,4
8,3
8,3
3
24
9,9
6,5
4
31,8
12,5
8,9
5
6,5
23,5
10
11
6
7
25,5
9
5
8
21,5
9,5
5
9
10
56,3
10,4
8,4
Stecker 1.iso

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
	Motorenersatzteile - siehe Motorenersatzteilliste Perkins Typ 1004-4T			
1	0 64 010 01 03	Perkins - Dieselmotor 1004-4T 75 KW	1	
2	1 64 150 01 43	Zsb. Lagerbock kpl. (Lüfterlagerung)	1	
3	7 252 677 093	Zylinderschraube	1	M 10 x 80 DIN 912
4	0 00 992 52 28	Federring	1	ø 10
5	0 64 151 00 72	Lüfterrad	1	
6	0 64 151 00 96	Zwischenstück	1	→I 616 65 0161 38,1 mm
7	0 63 011 01 06	Lüfterriemenscheibe	1	→I 616 65 0161
8	7 234 677 091	Sechskantschraube	4	→I 616 65 0161 M 8 x 75
9	7 451 680 111	Scheibe	4	→I 616 65 0161 ø 8,4
10	0 00 080 37 47	Zwischenstück	1	I→ 616 65 0162 63,5 mm
11	0 00 080 37 45	Lüfterriemenscheibe	1	I→ 616 65 0162
12	0 00 080 37 41	Gewindestift	4	I→ 616 65 0162
13	0 00 080 37 42	Sicherungsmutter	4	I→ 616 65 0162
14	0 00 996 56 04	Keilriemen	1	
15	0 00 080 27 96	Ventildeckel kpl.	1	
16	0 00 080 00 27	Ventildeckeldichtung	1	
17	0 00 080 12 07	Dichtring (am Ventildeckel)	3	
18	0 00 080 12 08	Scheibe (am Ventildeckel)	3	
19	0 00 080 11 98	Verschlußdeckel-Öleinfüller	1	
20	0 00 080 12 02	Dichtring	1	
21	0 00 080 12 09	Zahn-Schraube (Bef. Riemenscheibe)	3	115 Nm 242
22	0 00 080 00 23	Radialdichtring (an der Keilriemenscheibe)	1	
23	0 00 080 00 21	Kraftstofförderpumpe	1	
24	0 00 080 15 72	Dichtung f. Kraftstofförderpumpe	1	
25	0 00 080 12 03	Reparatursatz f. Kraftstofförderpumpe	1	
26	0 00 080 00 19	Turbolader	1	
27	0 00 080 28 45	Dichtung	1	
28	0 00 080 00 11	Flamm-Glühkerze	1	
29	0 00 080 09 09	Dieselleitung zur Flamm-Glühkerze	1	
30	0 00 080 12 44	Messingnippel	1	
31	0 00 080 12 45	Mutter zu Nippel	1	
32	0 00 080 00 16	Wasserpumpe	1	
33	0 00 080 00 17	Reparatursatz für Wasserpumpe	1	
34	0 00 080 12 00	Verschraubung (für Heizungsanschluß)	2	
35	0 00 011 01 91	Ölablaßschraube	1	3/4“x16UNF
36	0 00 080 08 99	O-Ring f. Ölablaßschraube	1	
37	0 00 363 40 62	Ölablaßkupplung	1	
38	0 00 080 00 29	Lichtmaschine	1	12V-65A
39	0 00 080 22 44	Keilriemenscheibe	1	

Hauptgruppe 08

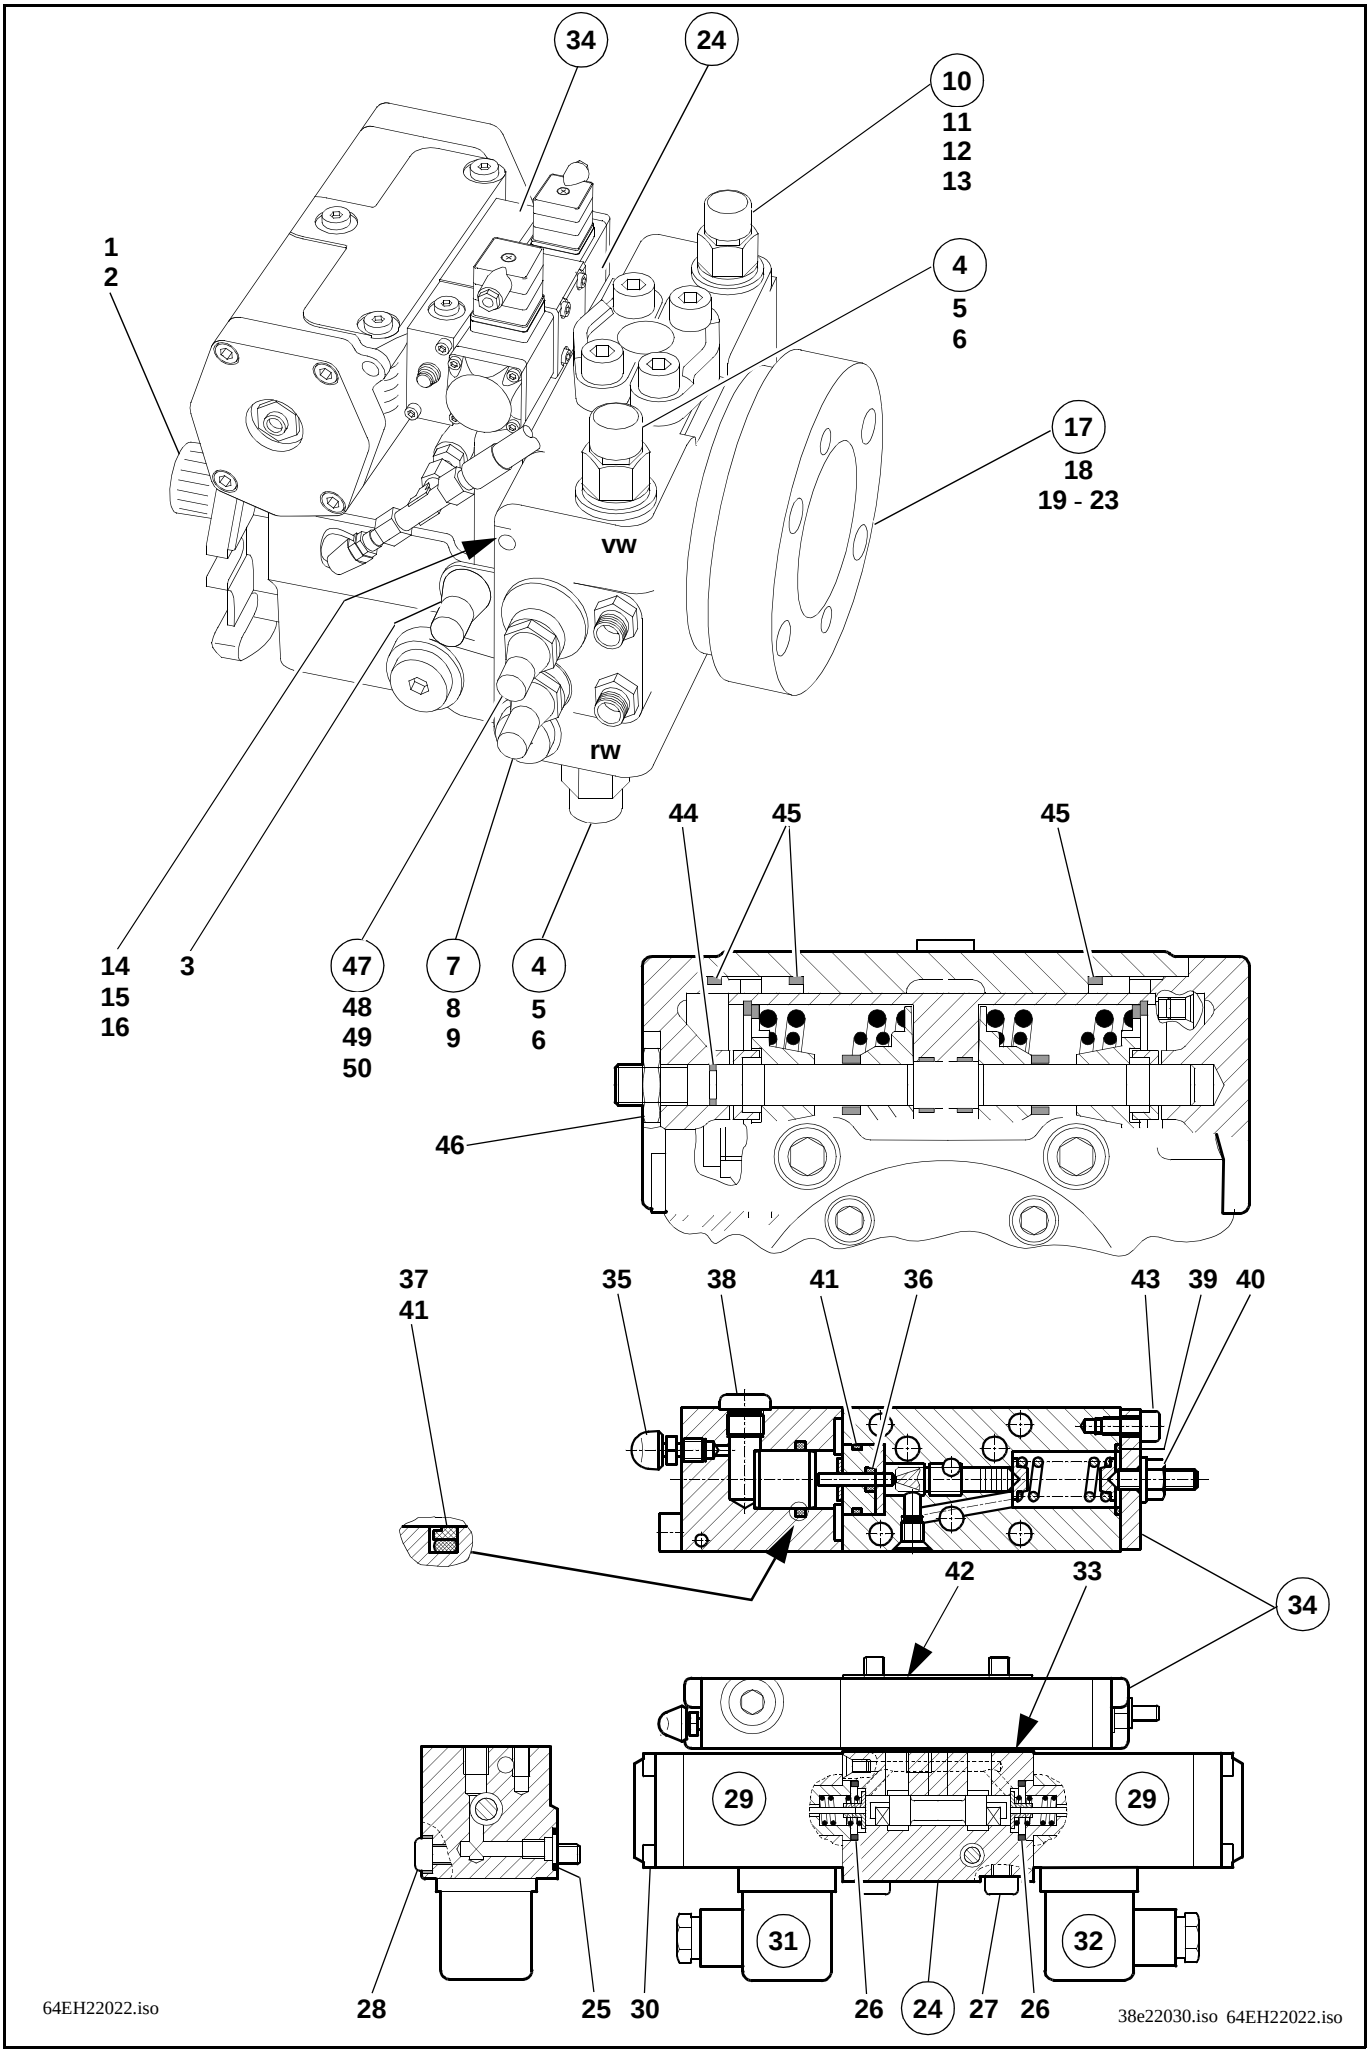
Kraftstoffleitungen

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
	Doppel - Luftfilter für staubigen Arbeitseinsatz SO 1228/6			
1	0 00 993 72 01	Ölbadluftfilter kpl.	1	
2	0 00 993 14 02	Vorabscheider	1	
3	0 63 101 03 40	Halter für Ölbadluftfilter	1	
4	7 236 677 924	Sechskantschraube	2	M 10 x 25 ISO 4017
5	7 405 677 007	Sechskantmutter	2	M 10 DIN 985
6	7 462 680 013	Scheibe	2	A 10,5 DIN 9021
7	1 63 100 00 40	Zsb. Halter	1	
8	1 63 100 00 54	Zsb. Rohr	1	Ölbadluftfilter-Trockenluftfilter
9	7 236 677 129	Sechskantschraube	5	M 8 x 16 ISO 4017
10	0 00 992 43 28	Federring	5	ø 8
11	1 00 996 51 55	Gummimuffe	1	ø 80 x 5 x 75 lg.
	7 603 708 020	Meterware		
12	1 00 993 52 55	Gummimuffe	1	ø 70 x 5 x 35 lg.
	7 603 708 076	Gummischlauch - Meterware		
13	0 00 993 73 28	Schelle	2	ø 90 x 110
14	0 00 993 56 57	Faltenschlauch (90° Bogen)	1	
15	0 00 993 72 28	Schelle	2	ø 68 x 85
16	0 00 993 73 01	Trockenluftfilter kpl.	1	
17	0 00 993 07 06	Filterpatrone	1	
18	0 90 101 00 91	Bundmutter	1	M 8 selbstsichernd
19	0 00 080 12 89	Filtertopf mit Verschlußklammer	1	
20	0 00 993 02 04	Unterdruckanzeiger	1	500 mm WS
21	7 593 641 016	Dichtring	1	A 10 x 16 DIN 7603-Cu
22	1 00 993 68 11	Spannband	2	
23	7 250 671 625	Zylinderschraube	2	AM 6 x 50 DIN 84
24	0 00 990 00 15	Bolzen mit Gewinde	2	
25	0 00 990 01 15	Bolzen ohne Gewinde	2	
26	1 64 201 20 12	Halter f. Luftfilter	1	am Rahmen angeschweißt
27	0 00 993 78 99	Faltenschlauch	1	
28	0 00 993 71 28	Schlauchschelle	1	ø 50-70
29	1 64 100 01 55	Zsb. Rohrbogen	1	
30	1 63 101 01 40	Halterung	1	
31	7 236 677 922	Sechskantschraube	1	M 10 x 18 ISO 4017
32	7 451 680 112	Scheibe	2	ø 10,5 DIN 125
33	7 403 678 813	Sechskantmutter	1	M 10 ISO 4032
34	7 236 677 924	Sechskantschraube	1	M 10 x 25 ISO 4017
35	0 00 992 35 28	Federring	1	ø 10
36	7 451 680 112	Scheibe	1	ø 10,5 DIN 125
37	0 00 996 39 55	Gummimuffe	1	ø 70 x 80 x 70 lg.
38	0 00 993 72 28	Schlauchschelle	3	ø 68-85
	1 63 006 05 59	Nacharbeit Lagerbock		
(39)	0 00 993 54 01	Naßluftfilter	1	
(40)	1 00 993 00 09	Adapter	1	
(41)	0 00 993 30 28	Schlauchklemme	1	


1
2
7
8
9
10
5
4
6
3
64EH1700.iso

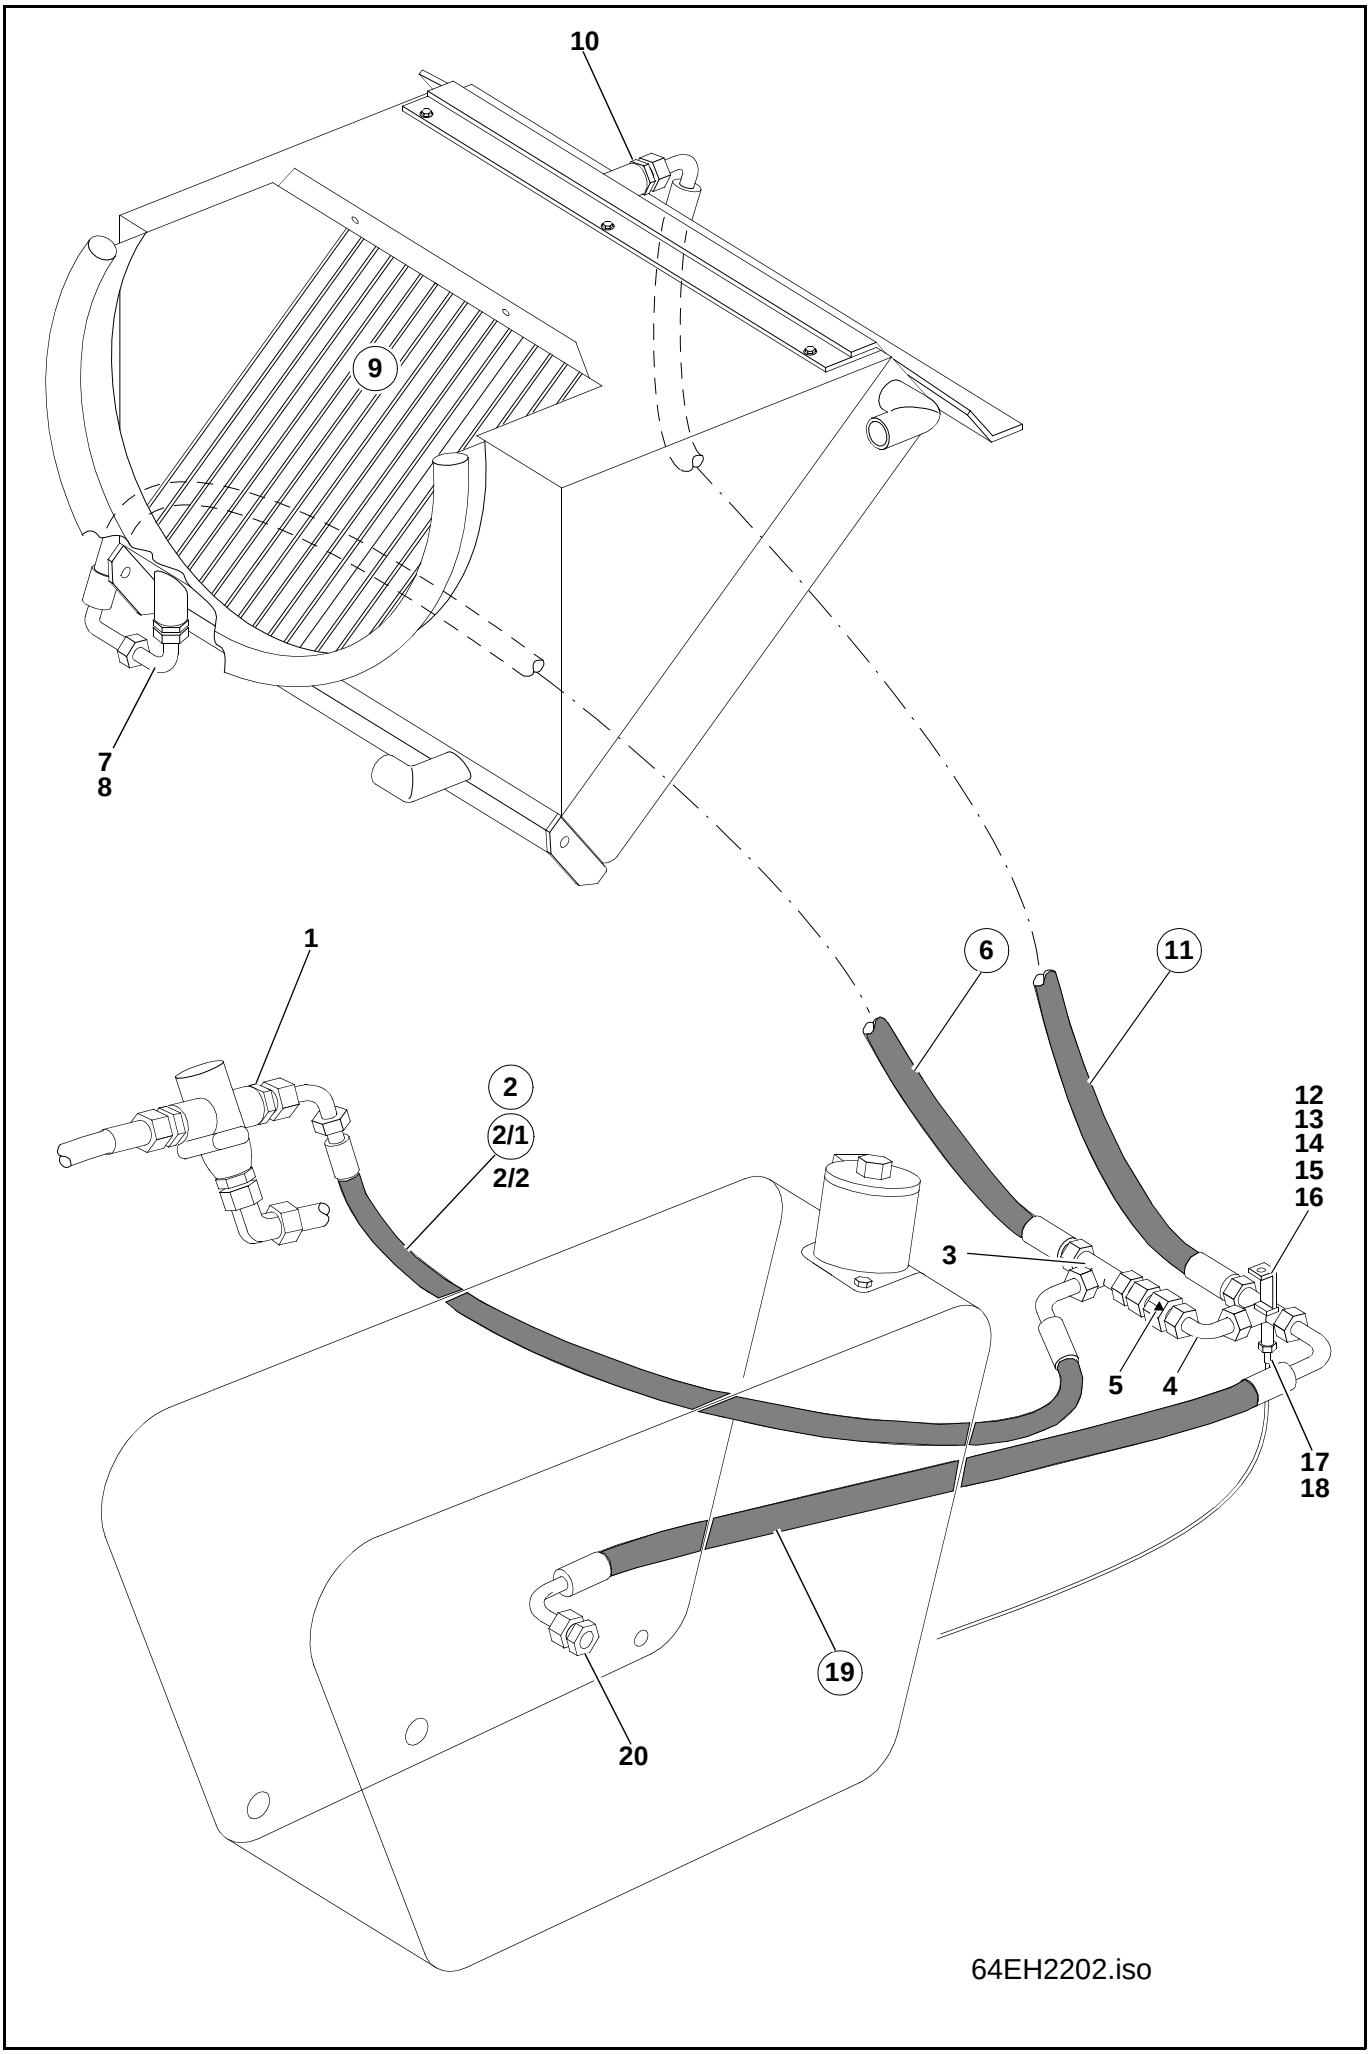
Hauptgruppe 22

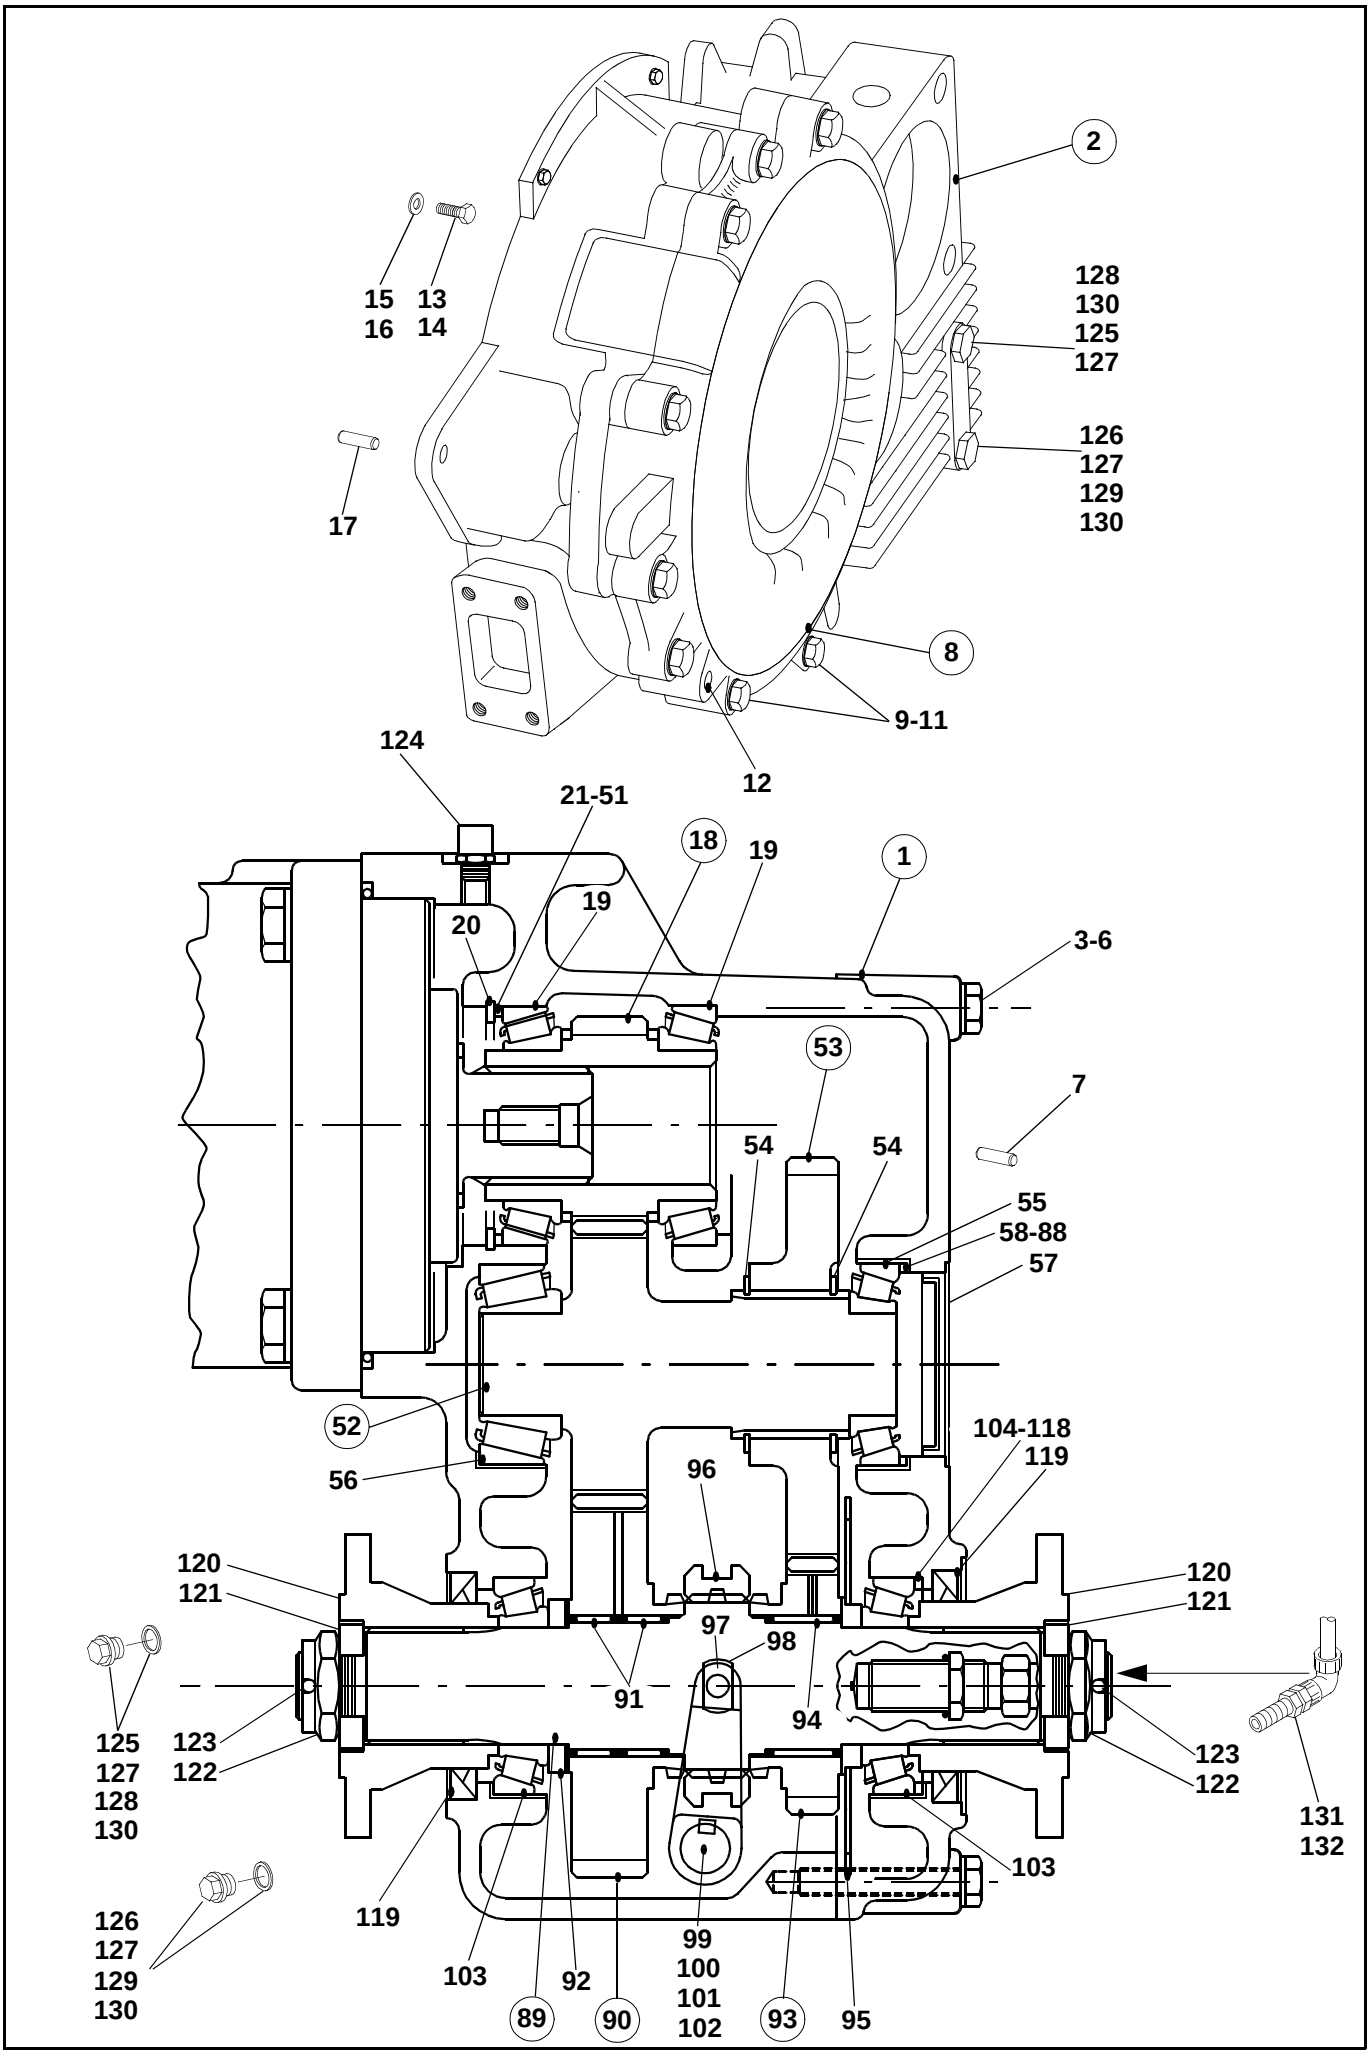
Hydrostat. Fahrantrieb



64EH22022.iso

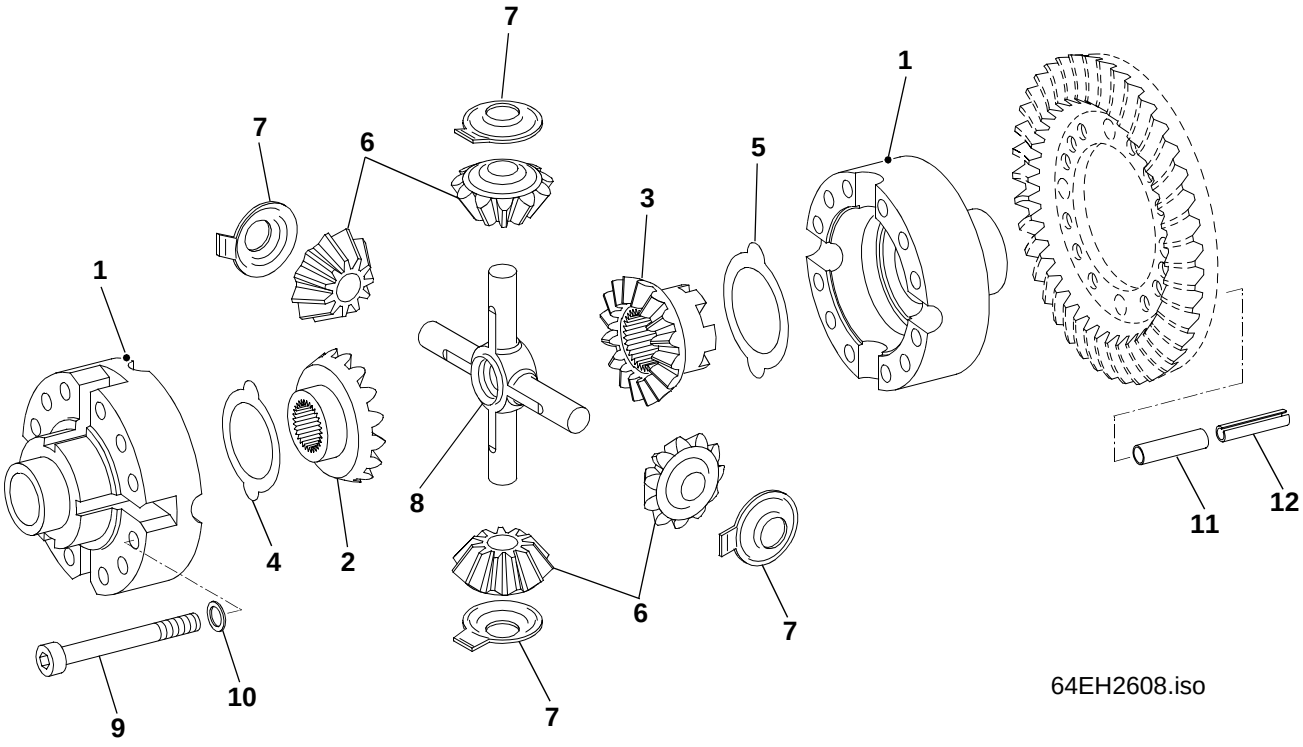
38e22030.iso 64EH22022.iso

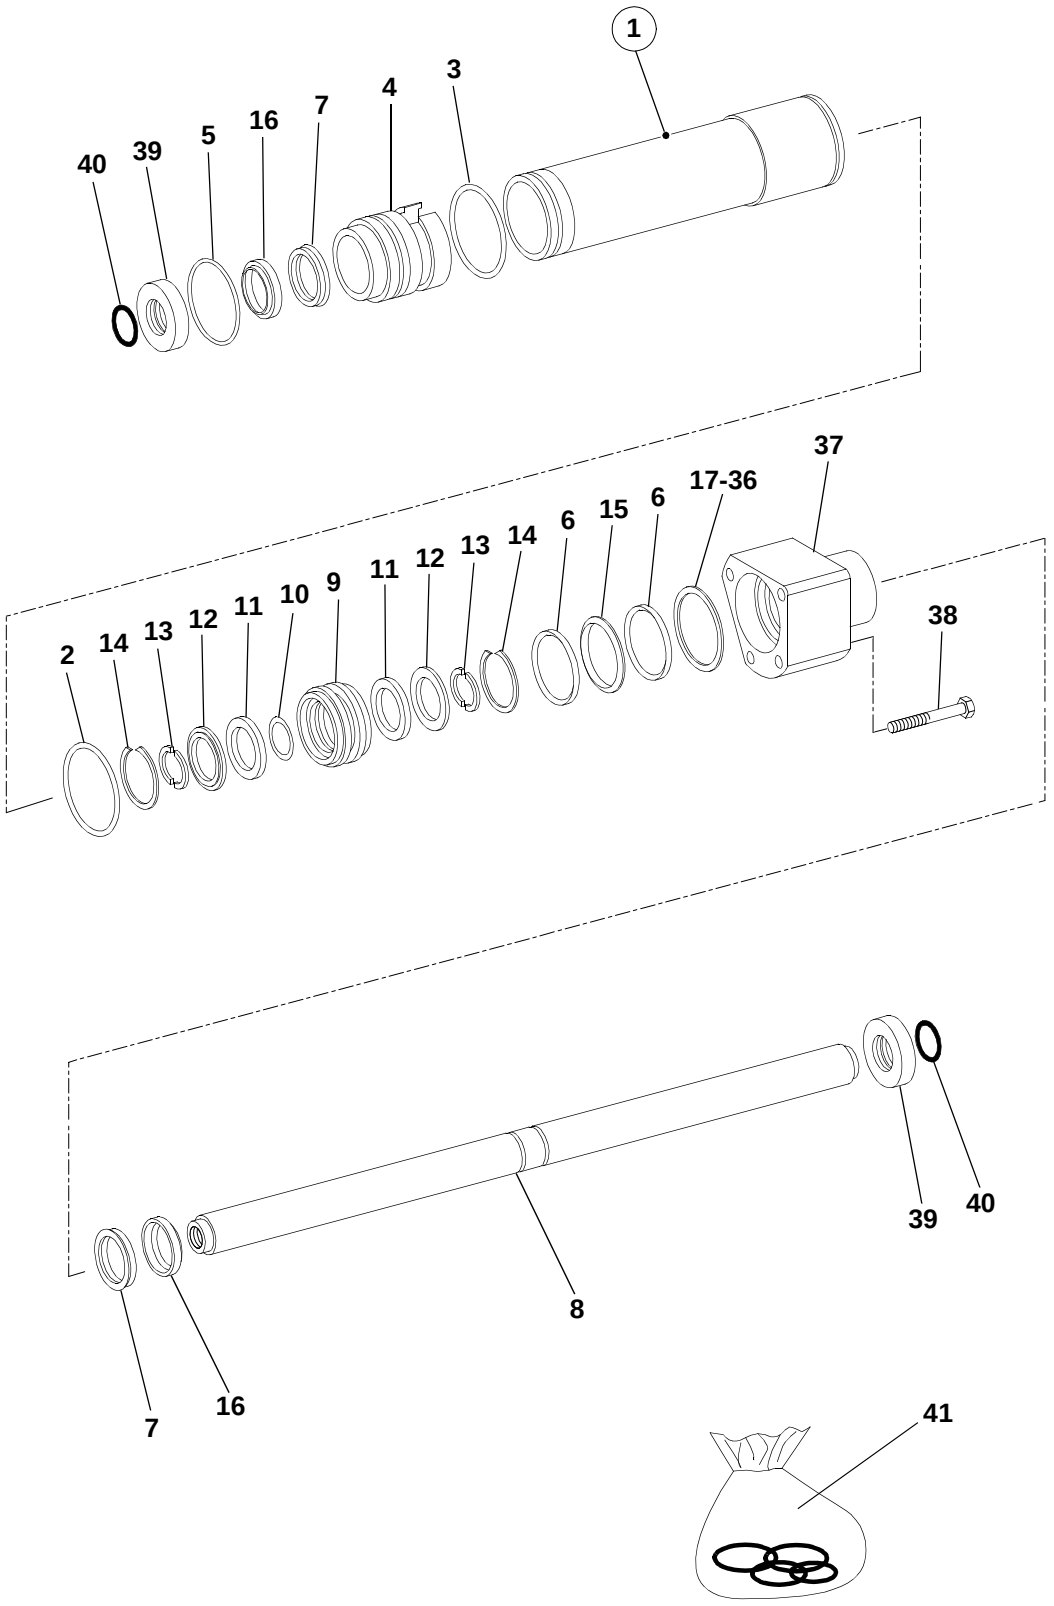

10
9
7
8
1
6
11
2
2/1
2/2
12
13
14
15
16
3
5
4
17
18
19
20
64EH2202.iso

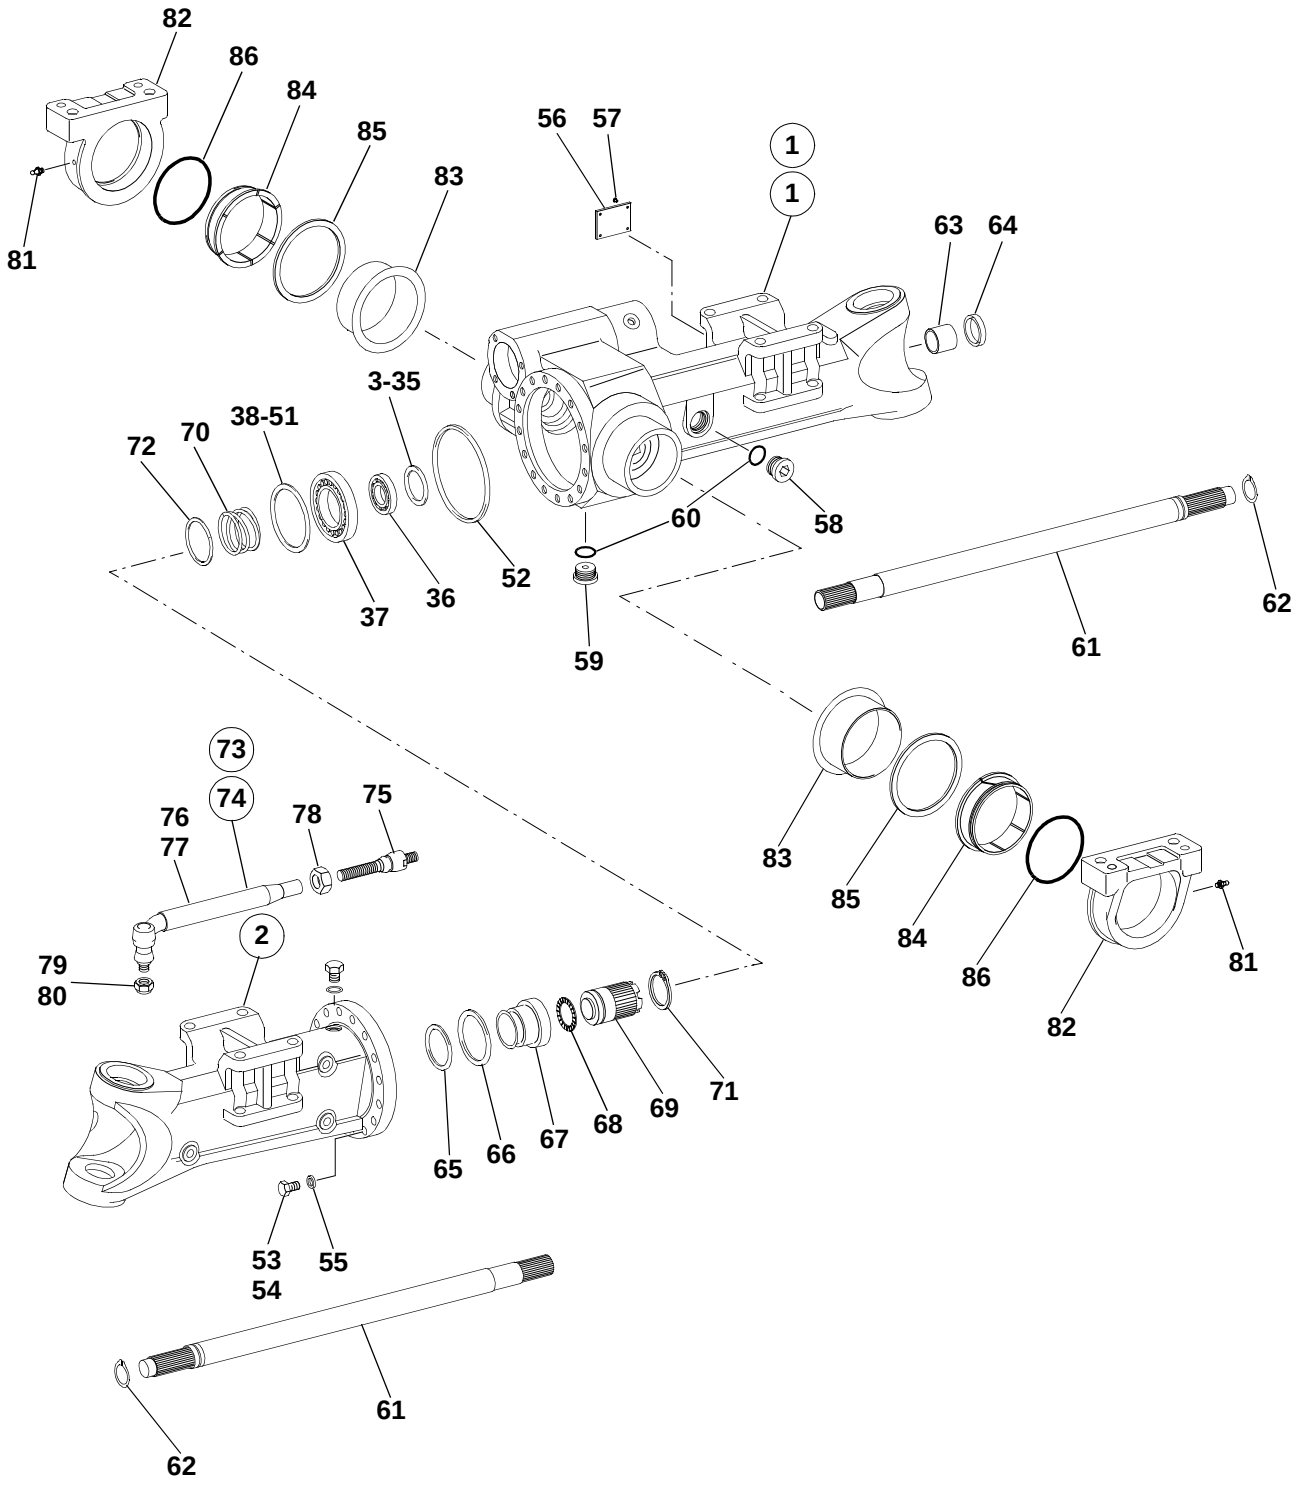

2
15
16
13
14
128
130
125
127
126
127
129
130
17
8
9-11
12
124
21-51
18
19
1
19
20
3-6
53
7
54
54
55
58-88
57
52
56
104-118
119
96
120
121
120
121
97
98
91
94
125
127
128
130
123
122
123
122
131
132
103
119
126
127
129
130
99
100
101
102
103
92
89
90
93
95

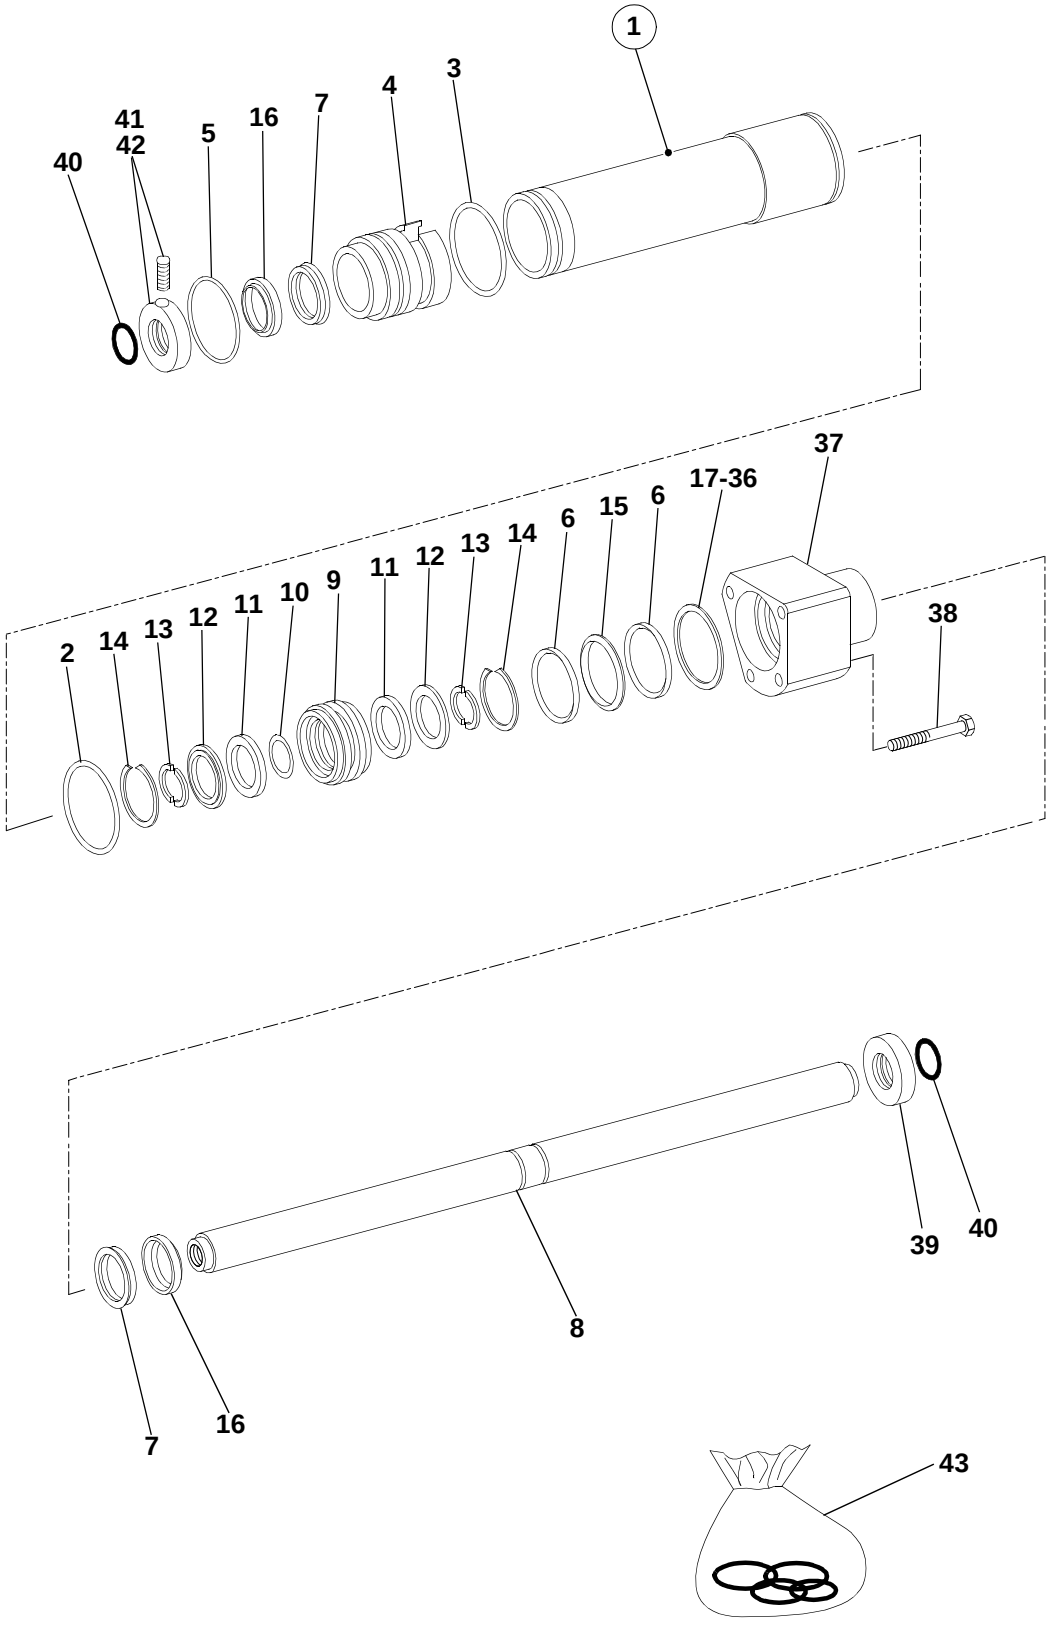
Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
1	1 64 240 01 16	Zsb. Pedal	1	
2	0 20 243 00 63	Pedalbezug	1	
3	0 00 994 07 06	Lagerbuchse	2	
4	7 464 680 304	Einstellscheibe	1-3	ø 20 x 28 x 0,5 stark
5	7 464 680 305	Einstellscheibe	1-3	ø 20 x 28 x 1 stark
6	1 43 243 01 94	Bolzen	1	
7	7 530 680 065	Splint	1	5 x 35 DIN 94
8	0 00 992 81 03	Zugfeder	1	
9	7 821 104 210	Gabelkopf	1	G 10 x 40 DIN 71752
10	0 00 990 11 15	ES-Bolzen	1	
11	7 404 677 207	Sechskantmutter	2	M 10 DIN 936
12	1 43 243 00 88	Druckstück	1	
13	0 00 333 78 08	Druckschalter	1	(Handbremse)
14	0 00 996 55 50	Faltenbalg	1	
15	0 00 993 77 28	Schlauchschelle	1	SNP 2
16	0 00 993 28 28	Schlauchschelle	1	SNP 12
17	0 64 240 00 60	Seilzug	1	
18	0 00 996 55 50	Faltenbalg	1	
19	0 00 993 77 28	Schlauchschelle	1	SNP 2
20	0 00 993 92 28	Schlauchschelle	1	SNP 10
21	0 22 241 01 91	Kugelmutter	1	M 10
22	7 403 677 813	Sechskantmutter	1	M 10 ISO 4032
23	1 64 243 01 40	Halter	1	
24	0 00 992 17 02	Zugfeder	1	
25	7 341 671 833	Augenschraube	1	LB M 8 x 60 DIN 444
26	7 403 677 709	Sechskantmutter	2	M 8 ISO 4032
27	1 63 243 00 44	Klinke	1	bis Fgst-Nr. 616 65 0067
28	1 63 243 01 44	Klinke	1	ab Fgst-Nr. 616 65 0068
29	7 451 680 115	Scheibe	2	ø 15 DIN 125
30	7 464 680 303	Einstellscheibe	1-2	ø 16 x 22 x 1 stark
31	7 530 680 052	Splint	1	4 x 25 DIN 94
32	0 00 992 40 03	Feder	1	
33	0 00 996 57 30	Knopfgriff	1	
34	1 63 243 02 48	Gestänge	1	ø 8 x 105 lg.
35	7 403 677 709	Sechskantmutter	2	M 8 ISO 4032
	Befestigung Handbremsseilzug			
	1 52 243 00 40	Halter	1	am Getriebe angeschraubt
	0 00 993 17 51	Schelle	1	ø 22
	7 236 677 133	Sechskantschraube	1	M 8 x 25 ISO 4017
	7 403 677 709	Sechskantmutter	1	M 8 ISO 4032
	0 00 992 43 28	Federring	1	8
	7 462 680 011	Scheibe	1	A 8,4 DIN 9021

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
	Druckleitung Handbremsventil - Bremspedal			
1	0 64 240 02 16	Handbremsventil	1	
2	0 00 363 16 63	Verschraubung	1	GE 8-LM M 16 x 1,5
3	7 286 671 502	Linsenschraube	2	M 8 x 20 DIN 7985
4	0 00 333 75 08	Druckschalter hydr.	1	
5	1 64 240 00 12	Zsb. Rohrleitung	1	ø 8 x 1 x 330 lg.
6	0 00 363 34 17	Verschraubung	1	SV 8-L
7	0 00 990 30 23	Gegenmutter	1	M 14 x 1,5
8	0 00 365 06 02	Hochdruckleitung	1	NW 8 x 1870 lg. (vom Druckspeicher zum Handbremsventil)
9	0 00 993 60 31	Doppelschelle	1	ø 15/15
10	7 236 677 086	Sechskantschraube	1	M 6 x 35 ISO 4017
11	7 462 680 008	Scheibe	1	A 6,4 DIN 9021
	Druckleitung Doppelrückschlagventil - Handbremsventil			
12	0 00 365 41 01	Hochdruckleitung	1	NW 8 x 1690 lg.
13	0 00 993 67 31	Schelle	1	ø 35
14	0 00 993 89 28	Schelle	1	ø 38
15	1 00 993 93 28	Schelle	1	
16	7 236 677 129	Sechskantschraube	2	M 8 x 16 ISO 4017
17	0 00 992 43 28	Federring	2	8
18	0 00 363 34 17	Verschraubung	1	SV 8-L
19	0 00 990 30 23	Gegenmutter	1	M 14 x 1,5
20	1 64 240 01 12	Zsb. Rohrleitung	1	ø 8 x 1 x 220 lg.
21	0 00 363 16 63	Verschraubung	1	GE 8-LM M 16 x 1,5


7
7
6
1
5
3
1
8
4
2
6
7
10
9
7
11
12
64EH2608.iso


1
3
4
7
16
5
39
40
37
17-36
6
15
6
14
13
12
11
9
10
11
12
13
14
2
38
40
39
8
16
7
41


82
86
84
85
83
81
56
57
1
1
63
64
3-35
38-51
72
70
60
58
52
36
37
59
62
61
73
74
76
77
78
75
79
80
2
65
66
67
68
69
71
53
54
55
61
62
83
85
84
86
82
81


1
3
4
7
16
5
41
42
40
37
17-36
6
15
6
14
13
12
11
9
10
11
12
13
14
2
38
40
39
8
16
7
43

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
	Druckleitung Lenkungspumpe - Abschaltventil - Lenkung			
1	0 00 363 48 15	Winkel-Flanschverschraubung	1	
2	0 00 996 68 05	O-Ring	1	17 x 2,5
3	7 252 678 033	Zylinderschraube	2	M 6 x 22 DIN 912-10.9
4	7 252 678 036	Zylinderschraube	2	M 6 x 35 DIN 912-10.9
5	0 00 992 49 28	Federring	4	ø 6 DIN 7980
6	0 00 365 97 01	Hochdruckleitung	1	NW 12 x 1670 lg.
7	0 00 363 64 17	Minimeßverschraubung	1	
8	0 00 363 88 17	Anschlußstück	1	
9	0 00 363 03 62	Verschraubung	1	EVGE 15-LMED
10	0 00 361 43 84	Abschaltventil(mit eingebautem Stromteiler)	1	
11	1 00 993 96 73	Distanzrohr	2	ø 15 x 2 x 28 lg.
12	7 234 677 096	Sechskantschraube	2	M 8 x 100 ISO 4014
13	0 00 992 43 28	Federring	2	ø 8
14	0 00 363 03 15	Verschraubung	1	GE 15-LM
15	0 00 365 96 01	Hochdruckleitung	1	NW 12 x 1600 lg.
	0 00 996 58 08	O-Ring	2	13 x 2
16	0 00 363 03 15	Verschraubung	1	GE 15-LM
17	0 00 993 42 31	Doppelschelle (Pumpe-Abschaltventil)	3	ø 22/18
18	7 236 677 087	Sechskantschraube	3	M 6 x 40 ISO 4017
19	7 451 680 109	Scheibe	3	ø 6,4 DIN 125
20	1 20 363 08 40	Halteleiste	1	
21	7 236 677 131	Sechskantschraube	2	M 8 x 20 ISO 4017
22	0 00 992 43 28	Federring	2	ø 8
23	7 451 680 111	Scheibe	2	ø 8,4 DIN 125

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
	Einzelteile für Sperrventil			
1	0 00 361 50 87	Sperrventil	1	
2	0 00 992 10 01	Druckfeder	2	
3	0 00 994 11 80	Kugel	2	
4	0 00 992 09 01	Druckfeder	1	
(5)	0 00 996 82 14	Dichtsatz kpl.	1	
6	0 00 996 80 09	O-Ring	1	
7	0 00 992 82 28	USIT-Ring	1	
8	0 00 996 79 09	O-Ring	1	
9	0 00 996 77 09	O-Ring	1	
10	0 00 996 78 09	O-Ring	1	
11	0 00 361 05 87	Druckbegrenzungsventil	1-2	
12	0 00 992 08 01	Druckfeder	1-2	
13	0 00 996 83 14	Dichtsatz (f. Begrenzungsventil)	1-2	
	Einzelteile für Magnetventil 0 00 361 46 87 (Umschaltventil 4/2)			
14	0 00 080 13 10	Magnetspule	1	
15	0 00 080 13 11	Überwurfmutter	1	
16	0 00 080 13 09	Druckfeder	1	
17	0 00 080 13 12	Dichtsatz kpl.	1	

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

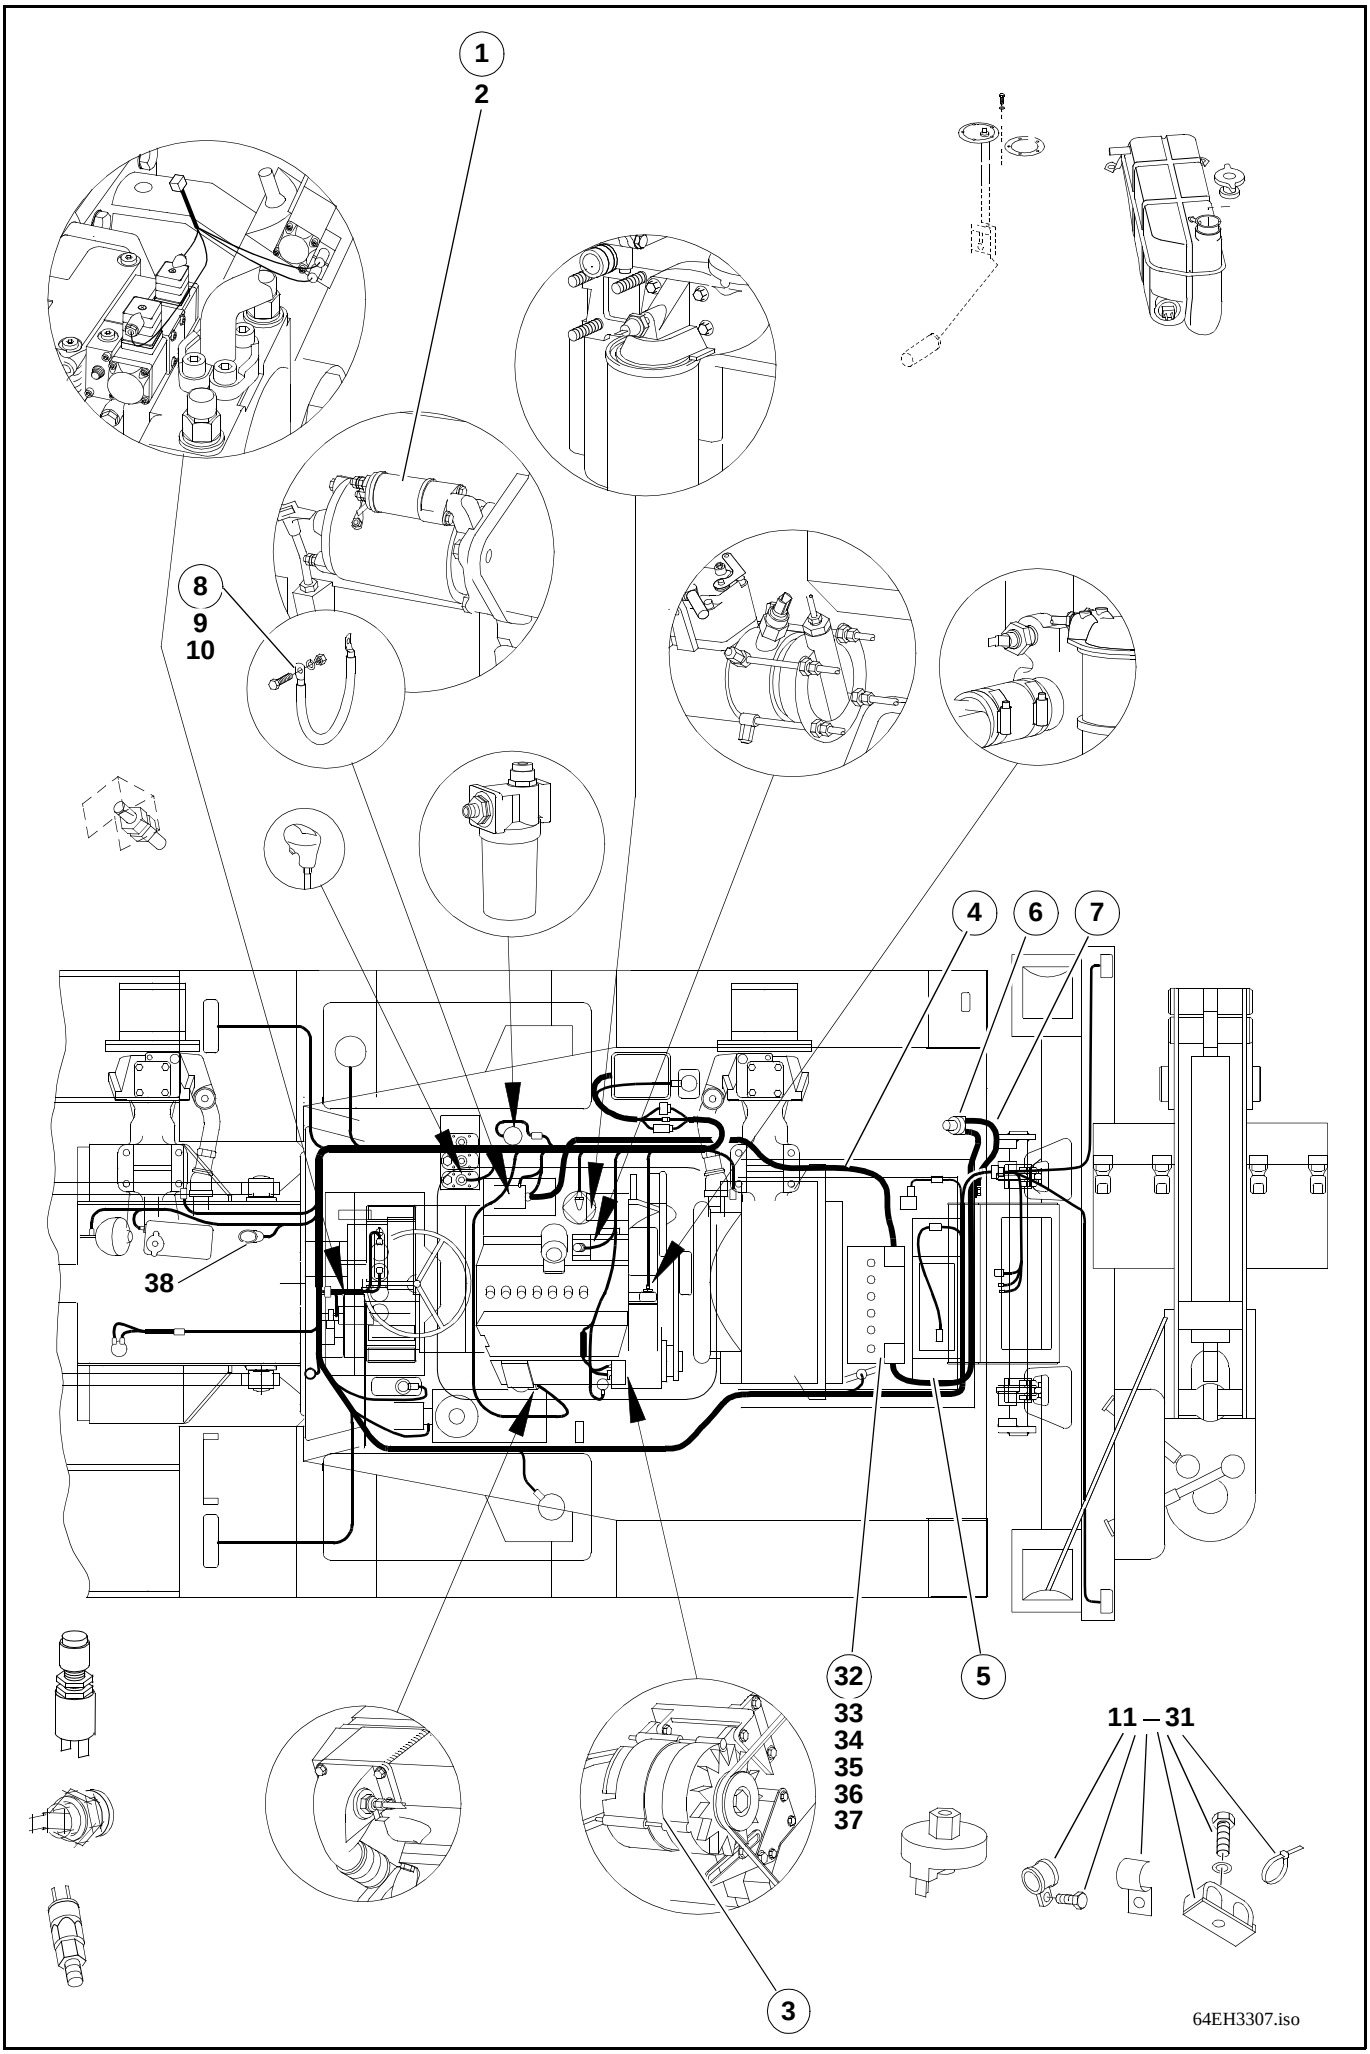
CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

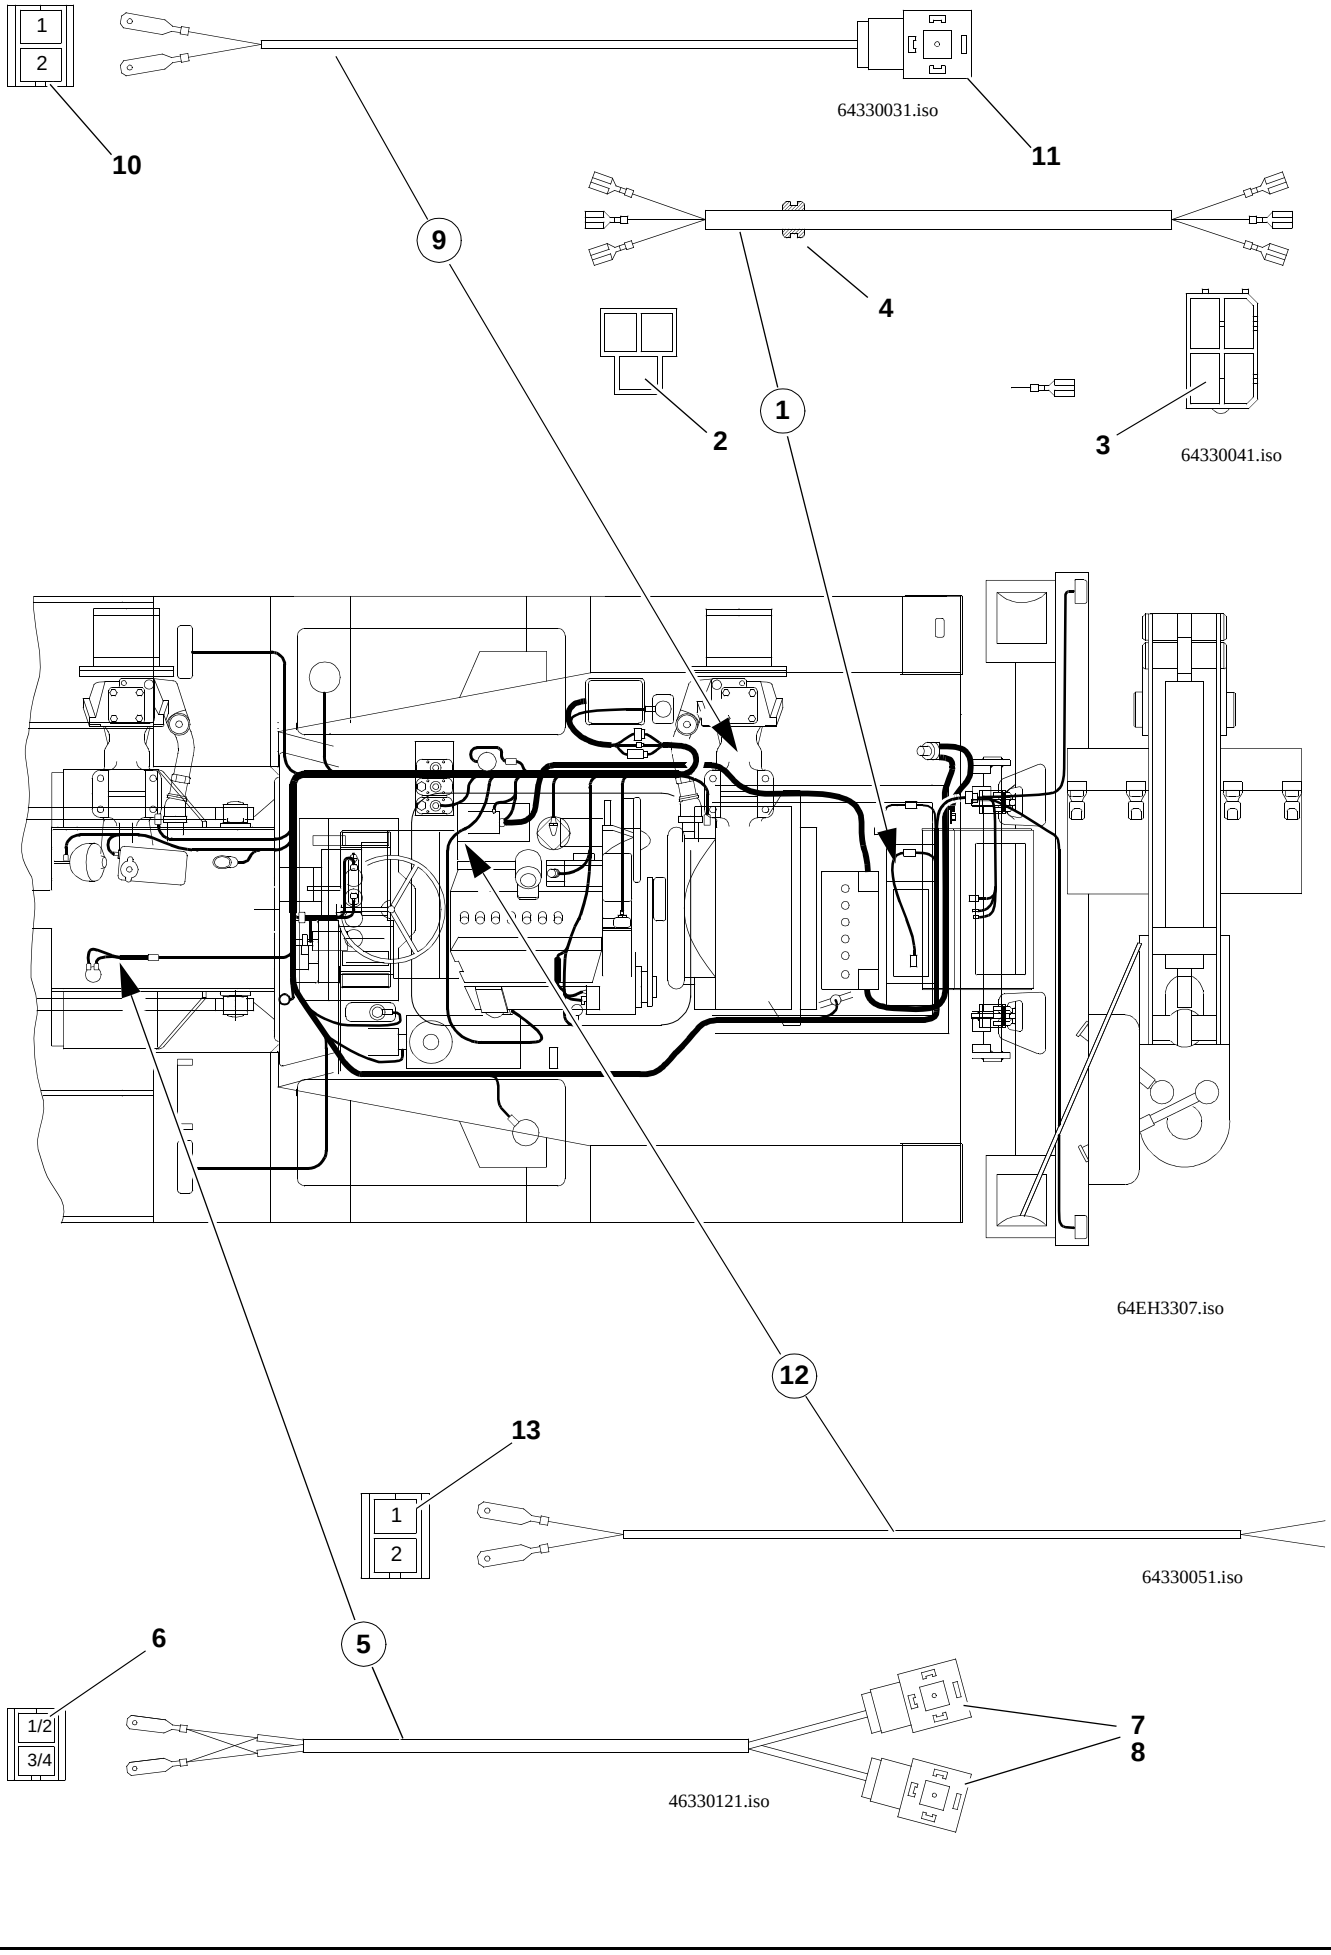
Hauptgruppe 31

Bereifung - Schneeketten

Hauptgruppe 33

Elektrische Anlage


1
2
8
9
10
4
6
7
38
32
33
34
35
36
37
5
11 – 31
3
64EH3307.iso


1
2
10
64330031.iso
11
9
4
2
1
3
64330041.iso
64EH3307.iso
12
13
1
2
64330051.iso
6
5
1/2
3/4
7
8
46330121.iso

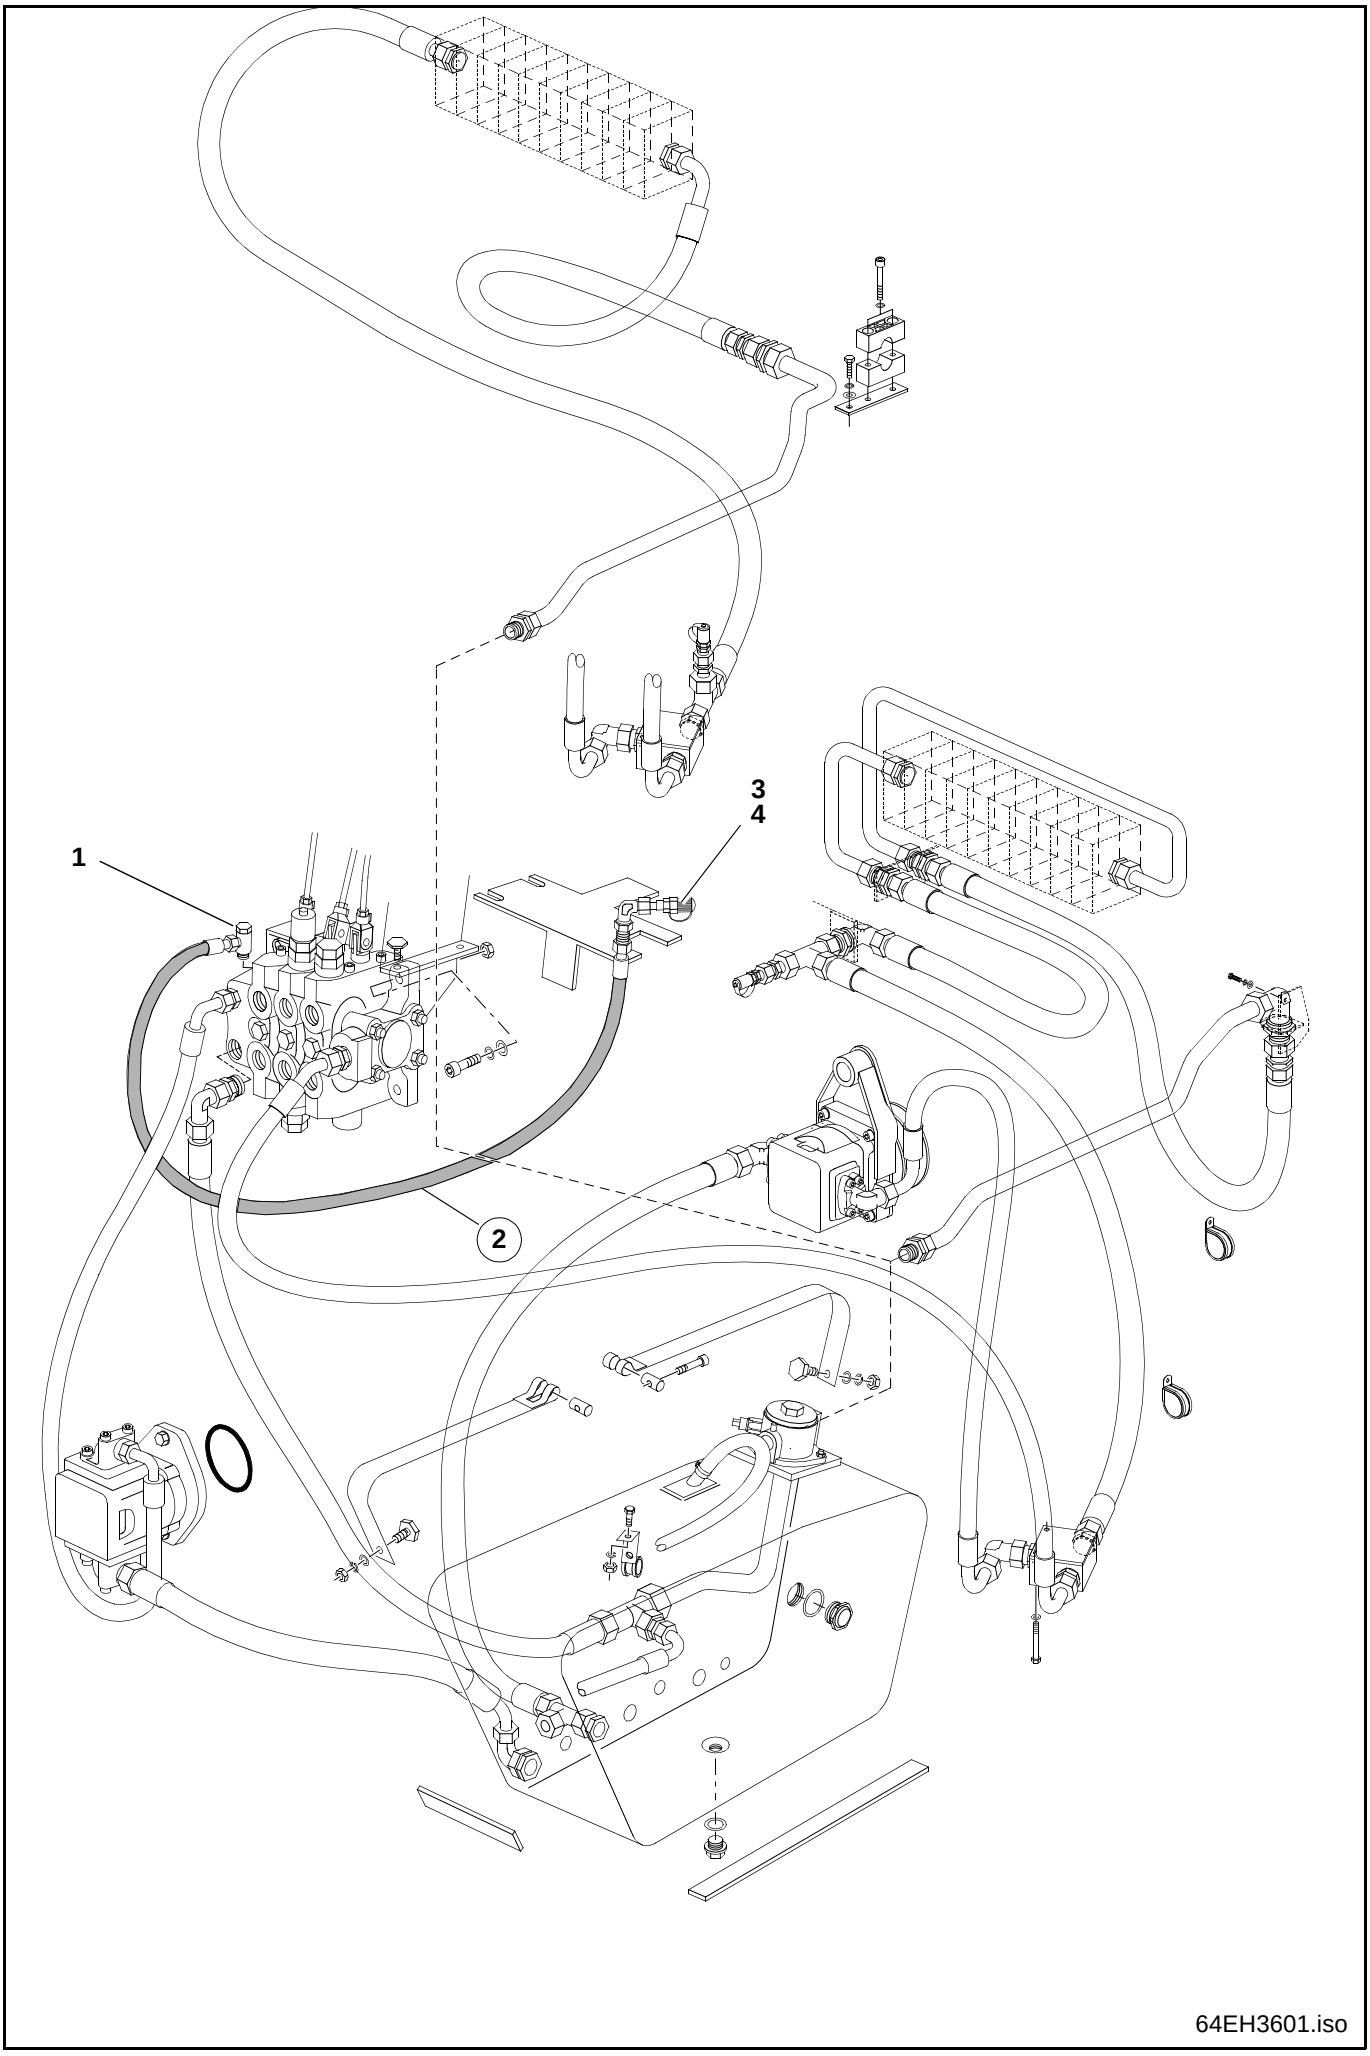
Hauptgruppe 34

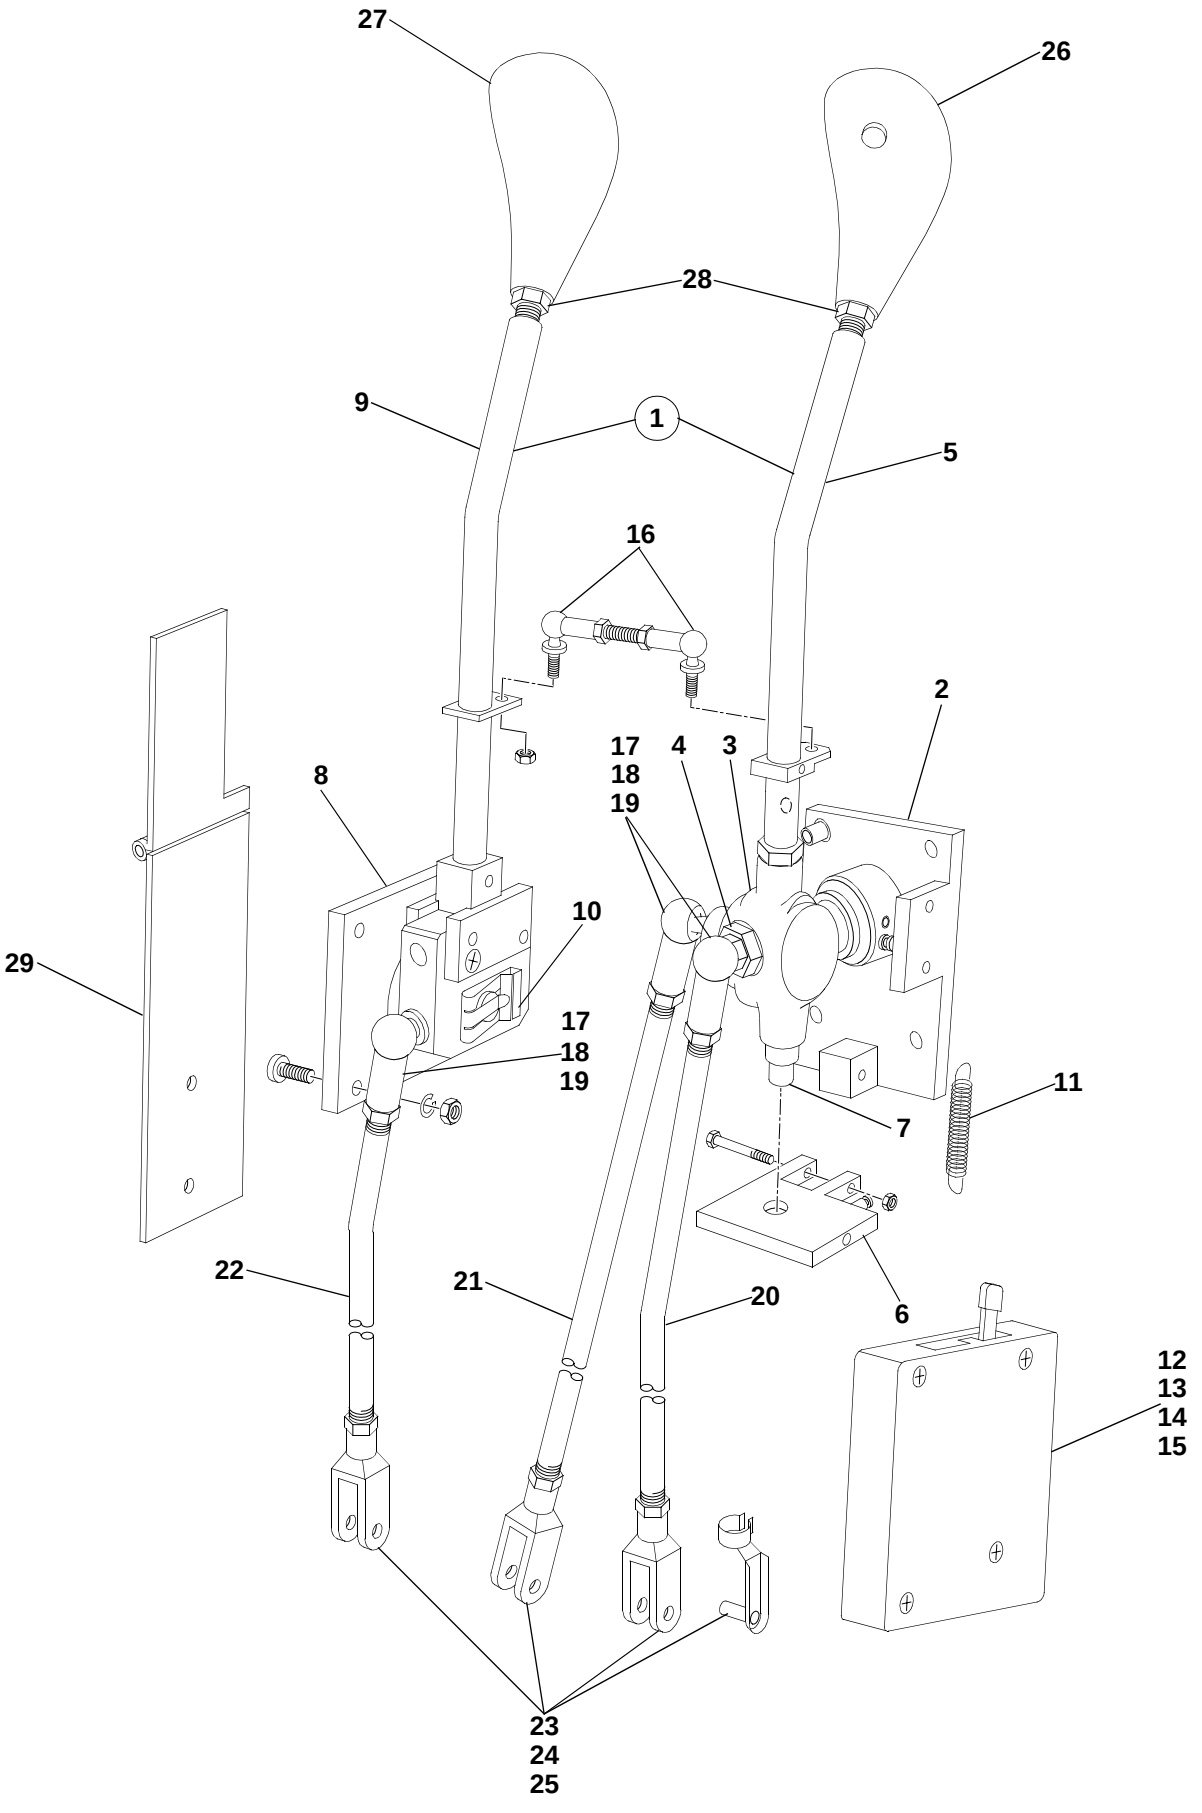
Fahrerhaus

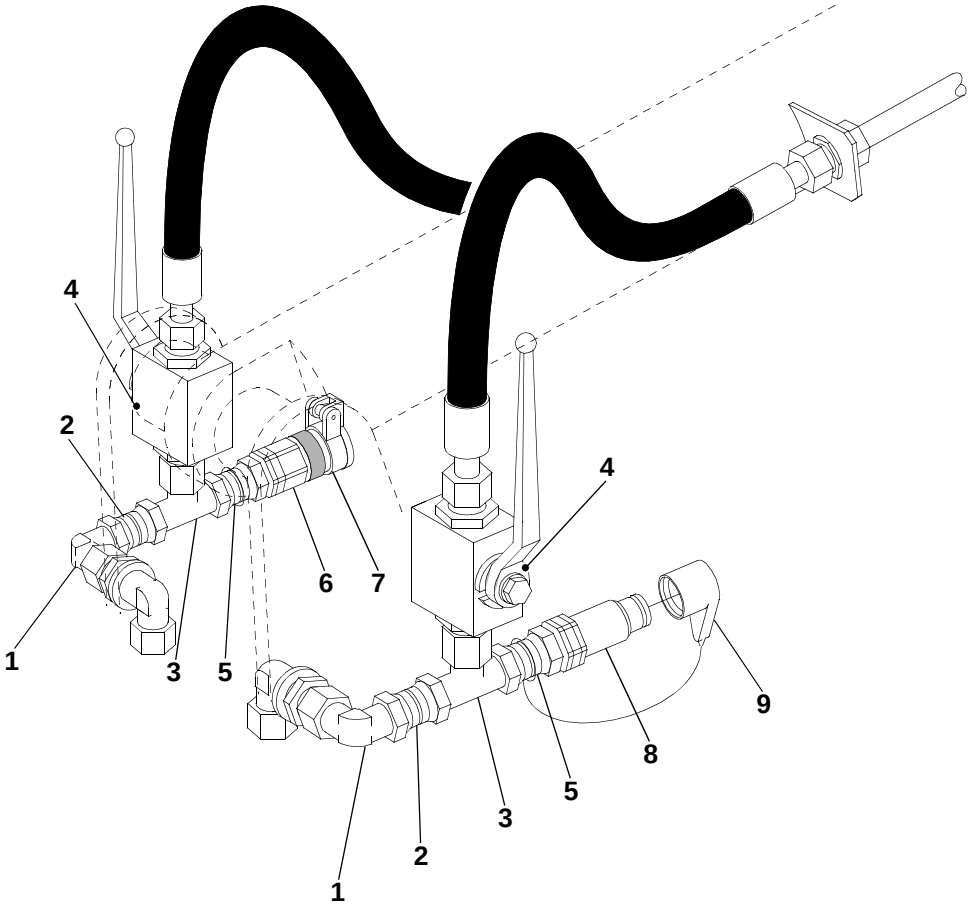
Fahrerhausteile

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
1	0 00 433 09 28	Sonnenblende	1	
2	7 318 680 647	Linsensenk-Blechschraube	3	B 4,8 x 25 DIN 7983
3	0 00 332 15 04	Innenleuchte	1	
4	7 734 000 602	Glühlampe	1	L 12V - 5W
5	7 316 680 301	Linsenblechschraube	2	B 3,9 x 16 DIN 7981
	0 00 433 30 27	Innenspiegel	1	
	7 318 680 647	Linsensenk-Blechschraube	2	B 4,8 x 25 DIN 7983
	0 00 341 49 41	Garderobenhaken	1	
6	0 46 341 01 93	Tasche	1	
7	7 316 680 301	Linsenblechschraube	8	B 3,9 x 16 DIN 7981
8	0 00 414 21 98	Defrosterdüse vorne	2-4	
9	7 316 680 506	Blechschraube	4-8	B 4,9 x 9,5 DIN 7981
10	0 00 414 14 98	Spindeldüse	2	
11	7 317 680 277	Senk-Blechschraube	4	B 3,9 x 9,5 DIN 7981
12	0 64 414 00 98	Runddüse hinten	1	
13	0 64 331 00 08	Mittelkonsole	1	
14	0 00 995 30 68	Blechschraube	4	B 5,5 x 16 DIN 7981
15	1 00 993 26 93	Köderband	1	900 lg.
	0 00 993 13 93	Meterware		
16	0 00 990 49 23	Spreitzmutter	10	M 4
	0 00 993 10 94	Blechmutter	10	
17	7 286 671 512	Linsenschraube	10	M 4 x 18 DIN 7985
	0 00 995 54 68	Blechschraube	10	4,2 x 13
18	0 64 331 02 21	Verkleidung links	1	
19	0 64 330 00 28	Verkleidung rechts	1	
20	0 00 995 30 68	Blechschraube	3	B 5,5 x 16 DIN 7981
21	7 316 680 507	Linsen-Blechschraube	4	B 5,5 x 38 DIN 7981
22	1 64 335 01 40	Halter	1	Relaisbefestigung in Frontarmatur
23	0 00 995 30 68	Blechschraube	4	B 5,5 x 16 DIN 7981
24	1 64 331 01 39	Abdeckblech	1	
25	0 64 331 00 21	Armaturenverkleidung oben	1	für Seitenkonsole
26	0 64 331 01 21	Armaturenverkleidung unten	1	für Seitenkonsole
27	0 00 990 00 23	Blechmutter	7	M 5
	0 00 990 39 23	Clips	7	
28	7 286 671 504	Linsenschraube	7	AM 5 x 12 DIN 7985
	0 00 995 30 68	Blechschraube	7	5,5 x 16
29	1 64 270 02 43	Zsb. Lagerung	1	für die Lenkung und Armaturenbrett
30	7 236 677 133	Sechskantschraube	6	M 8 x 25 ISO 4017
31	7 462 680 011	Scheibe	6	ø 8,5 DIN 9021
32	1 64 270 00 40	Zsb. Halterung	1	
33	0 00 995 31 68	Paßschraube	2	M 10
34	0 00 993 04 63	Scheibe	4	ø 10
35	7 453 680 115	Scheibe	2	ø 13
36	0 00 273 00 26	Feststellgriff	1	
37	7 462 680 014	Scheibe	1	ø 10,5 DIN 9021
38	7 451 680 112	Scheibe	1	B 10,5 DIN 125
39	1 64 272 00 52	Distanzrohr	1	ø 15 x 2 x 25 lg.

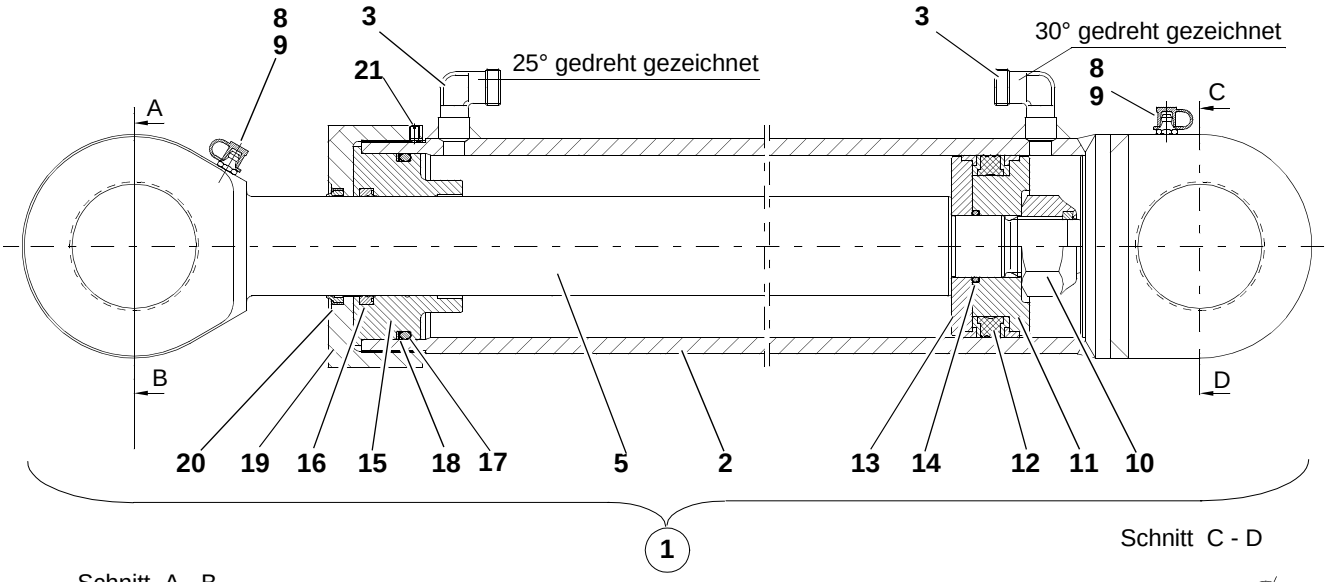
Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
	Innenverkleidungen			
1	0 43 341 98 88	Dämmatte	1	für Dach mit Dachluke
2	0 43 341 39 89	Dämmatte	1	für Dachluke
3	0 43 341 08 89	Dämmatte	1	Holm unten links
4	0 43 341 09 89	Dämmatte	1	Holm unten rechts
5	0 43 341 19 89	Dämmatte	1	Türholm links
6	0 43 341 20 89	Dämmatte	1	Türholm rechts
7	0 64 341 07 88	Dämmatte	2	Seite
8	0 64 341 08 88	Dämmatte	2	Seite
9	0 43 341 34 89	Dämmatte	1	Seite oben links
10	0 43 341 35 89	Dämmatte	1	Seite oben rechts
11	0 43 341 26 89	Dämmatte	1	Holm links
12	0 43 341 27 89	Dämmatte	1	Holm rechts
13	0 43 341 30 89	Dämmatte	1	Rückwand links
14	0 43 341 31 89	Dämmatte	1	Rückwand rechts
15	0 64 341 16 88	Dämmatte	1	Seite unten links
16	0 64 341 17 88	Dämmatte	1	Seite unten rechts
17	0 64 341 18 88	Dämmatte	1	Rückwand oben
18	0 43 341 02 89	Schall-Isoliermatte	2	hinten links und rechts
	am Fahrerhaus hinten - Baggerpult und Fußraum			
19	1 00 996 19 86	Profil links oben	1	288 lg , mit Sikaflex 255 verklebt
20	1 00 996 20 86	Profil rechts oben	1	288 lg
21	1 00 996 21 86	Profil links unten	1	240 lg.
22	1 00 996 22 86	Profil rechts unten	1	240 lg.
23	0 43 341 29 09	Verkleidung	1	
24	0 43 341 30 09	Verkleidung	1	
25	0 43 341 31 09	Verkleidung	1	
26	0 43 341 32 09	Verkleidung	1	
27	7 318 680 608	Linsensenkblechschraube	11	C 4,2 x 16 DIN 7983
28	0 00 993 95 64	Unterlegscheibe	11	


1
2
3
4
64EH3601.iso


27
26
28
9
1
5
16
2
17
18
19
4
3
8
10
29
17
18
19
11
7
22
21
20
6
12
13
14
15
23
24
25
63EH3601.iso



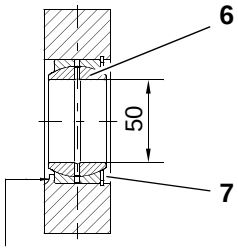
63EH3607.iso



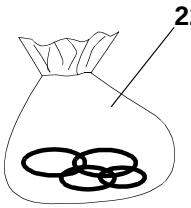
1

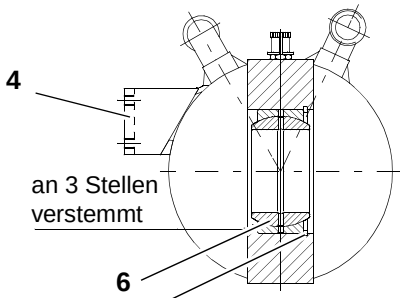
Schnitt C - D

Schnitt A - B

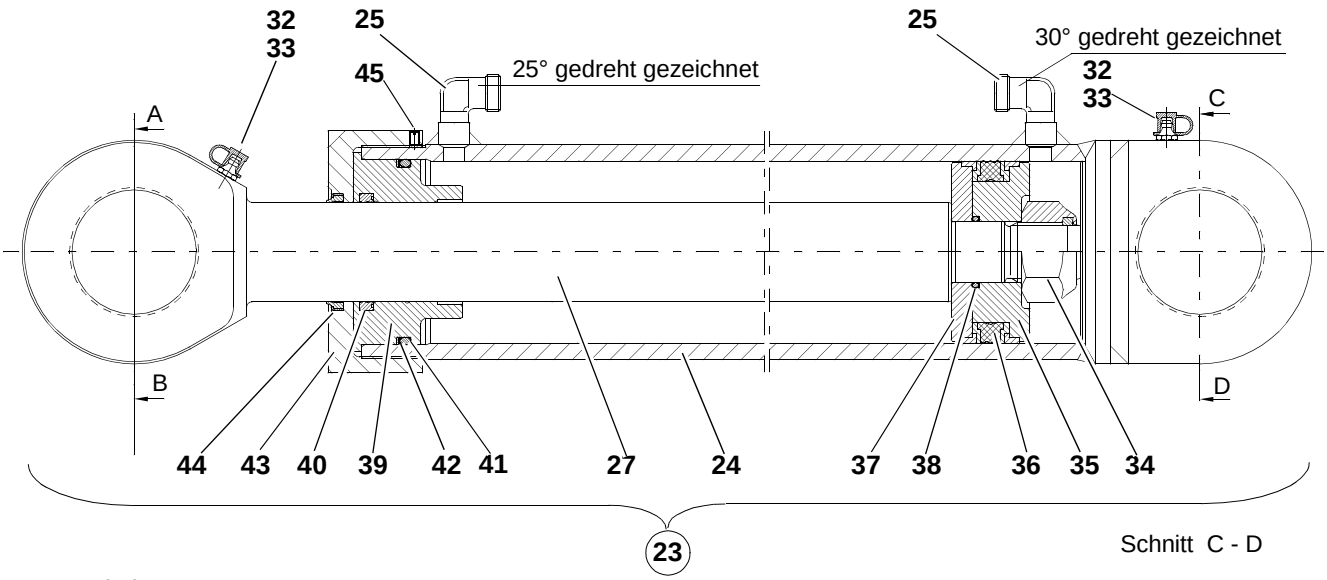


an 3 Stellen
verstemmt





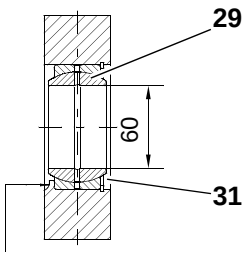
an 3 Stellen
verstemmt



23

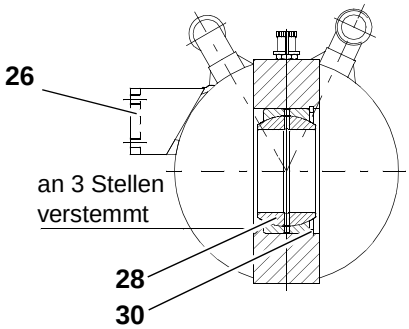
Schnitt C - D

Schnitt A - B



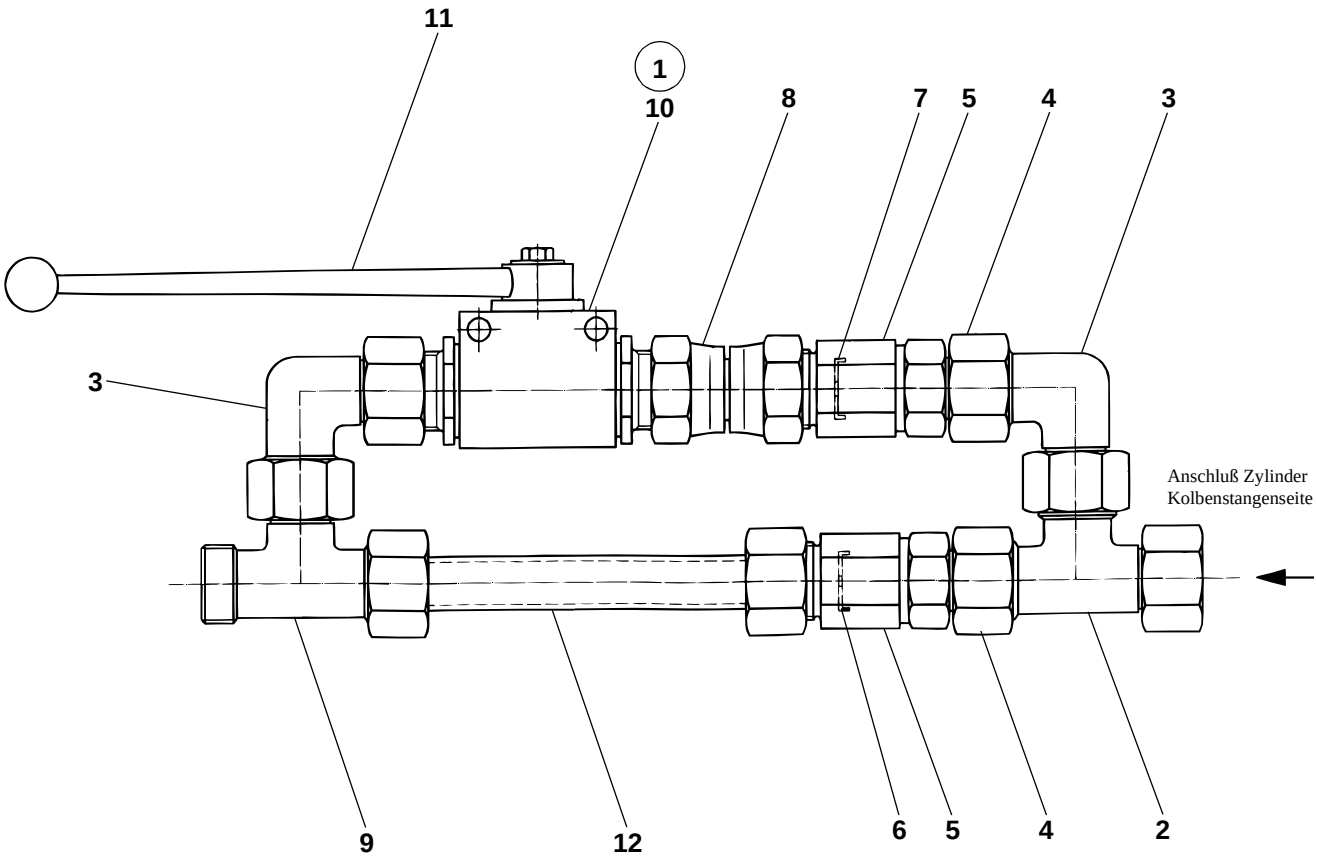
an 3 Stellen
verstemmt





an 3 Stellen
verstemmt

63EK36Z2.iso

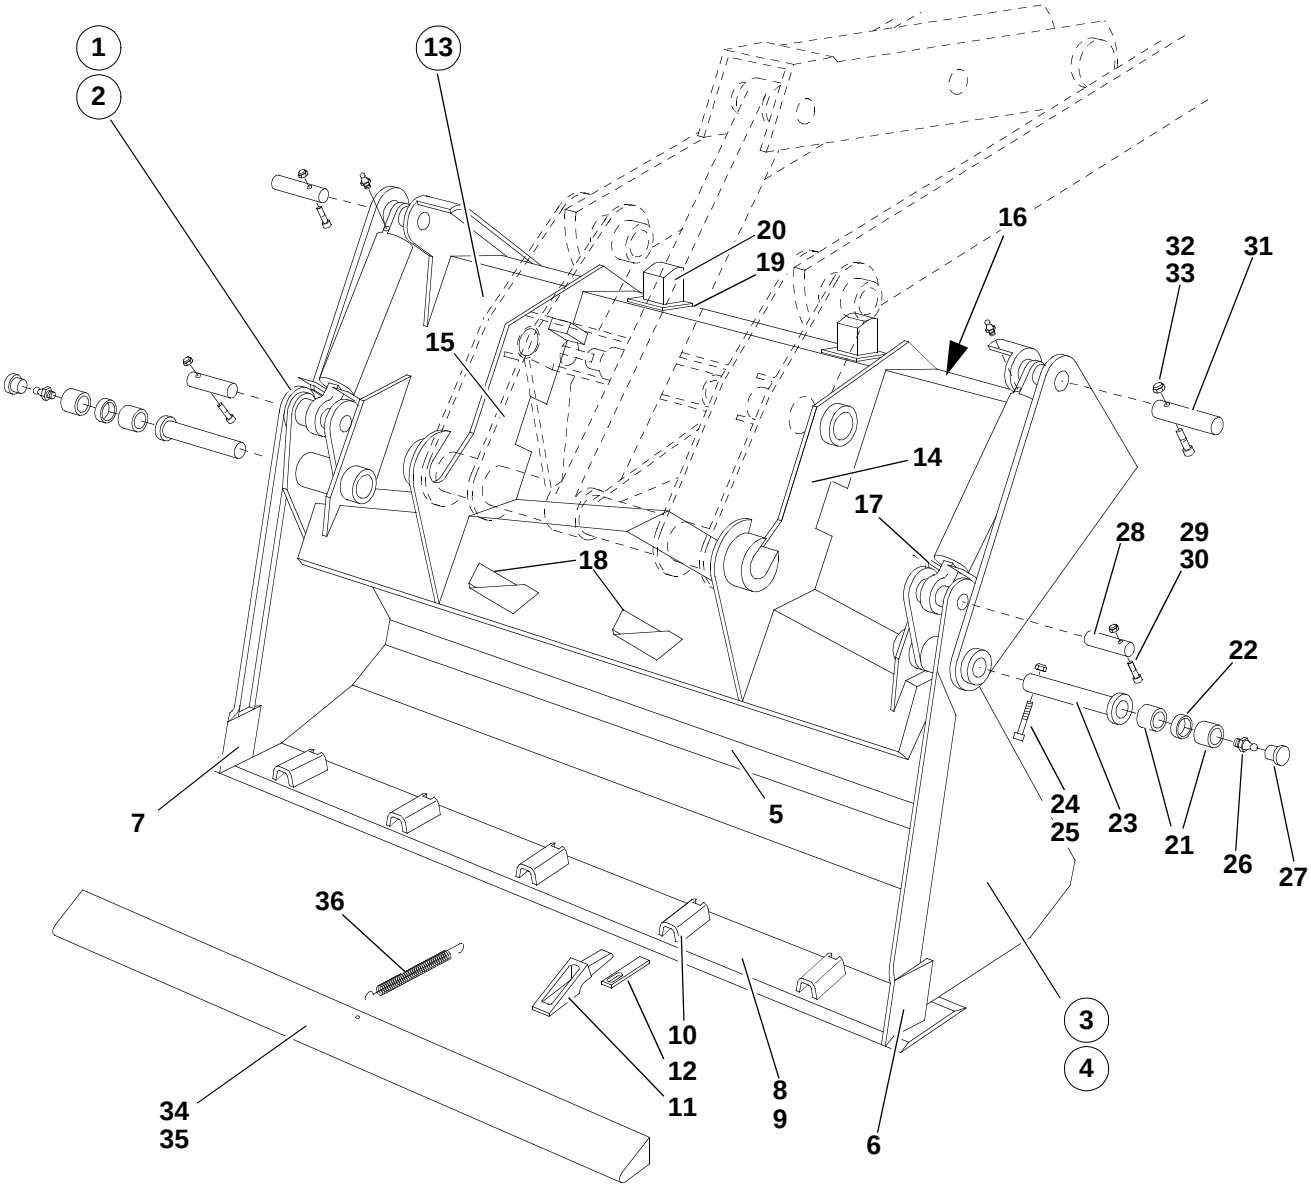

11
1
10
8
7
5
4
3
3
Anschluß Zylinder
Kolbenstangenseite
9
12
6
5
4
2

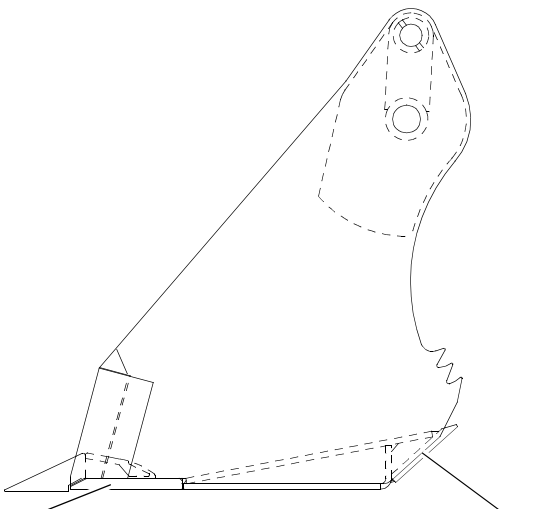
SO138800.ai

Hauptgruppe 41

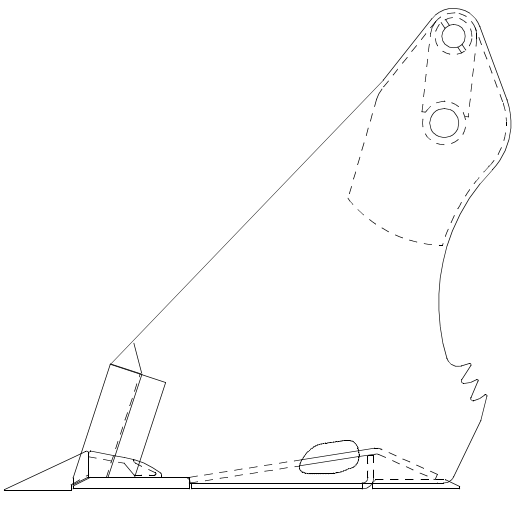
Fahrerhausheizung

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
35	0 64 414 00 98	Runddüse	1	
36	7 317 680 277	Senkblechschraube	4	B 3,9 x 9,5 DIN 7982
37	0 00 414 21 98	Defrosterdüse vorne	4	
38	7 316 680 506	Blechschraube	8	B 4,9 x 9,5 DIN 7981
39	0 00 414 14 98	Spindeldüse	2	für Scheibenheizung hinten
40	7 317 680 277	Senk-Blechschraube	4	B 3,9 x 9,5 DIN 7981
41	1 64 410 02 54	Zsb. Luftführungsblech	1	
42	7 236 677 129	Sechskantschraube	4	M 8 x 16 ISO 4017
43	7 462 680 011	Scheibe	4	8,4 DIN 9021
44	0 64 341 34 88	Dämmatte	1	
45	1 64 410 02 61	Zsb. Luftführungskasten kpl.	1	
46	7 316 680 149	Zylinderblechschraube	4	B 4,2 x 16 DIN 7981
47	1 00 996 61 91	Dichtungsband	1	400 lg.
	0 00 996 74 91	Meterware		



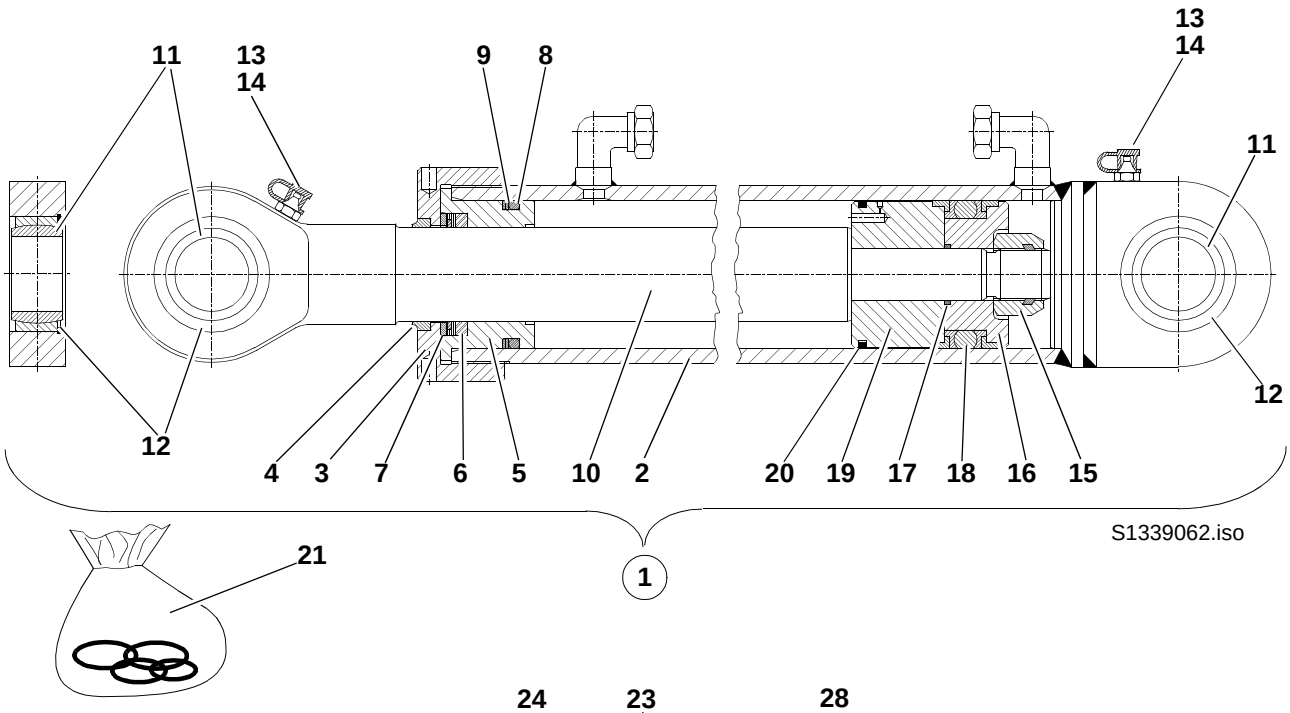


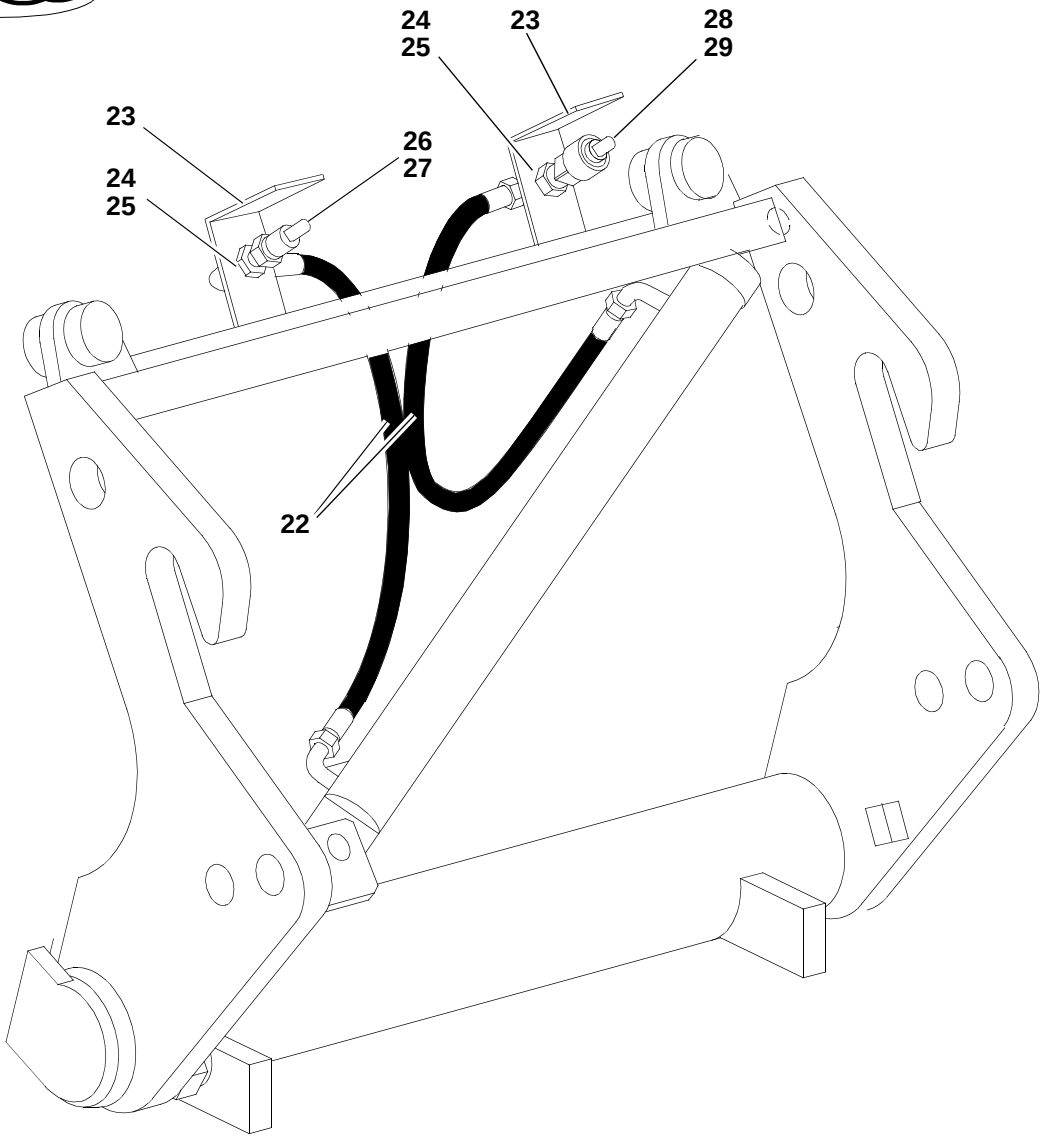
Gerade Ausführung (Ausführung 1)



Gekröpfte Ausführung (Ausführung 2)

S1339030.iso

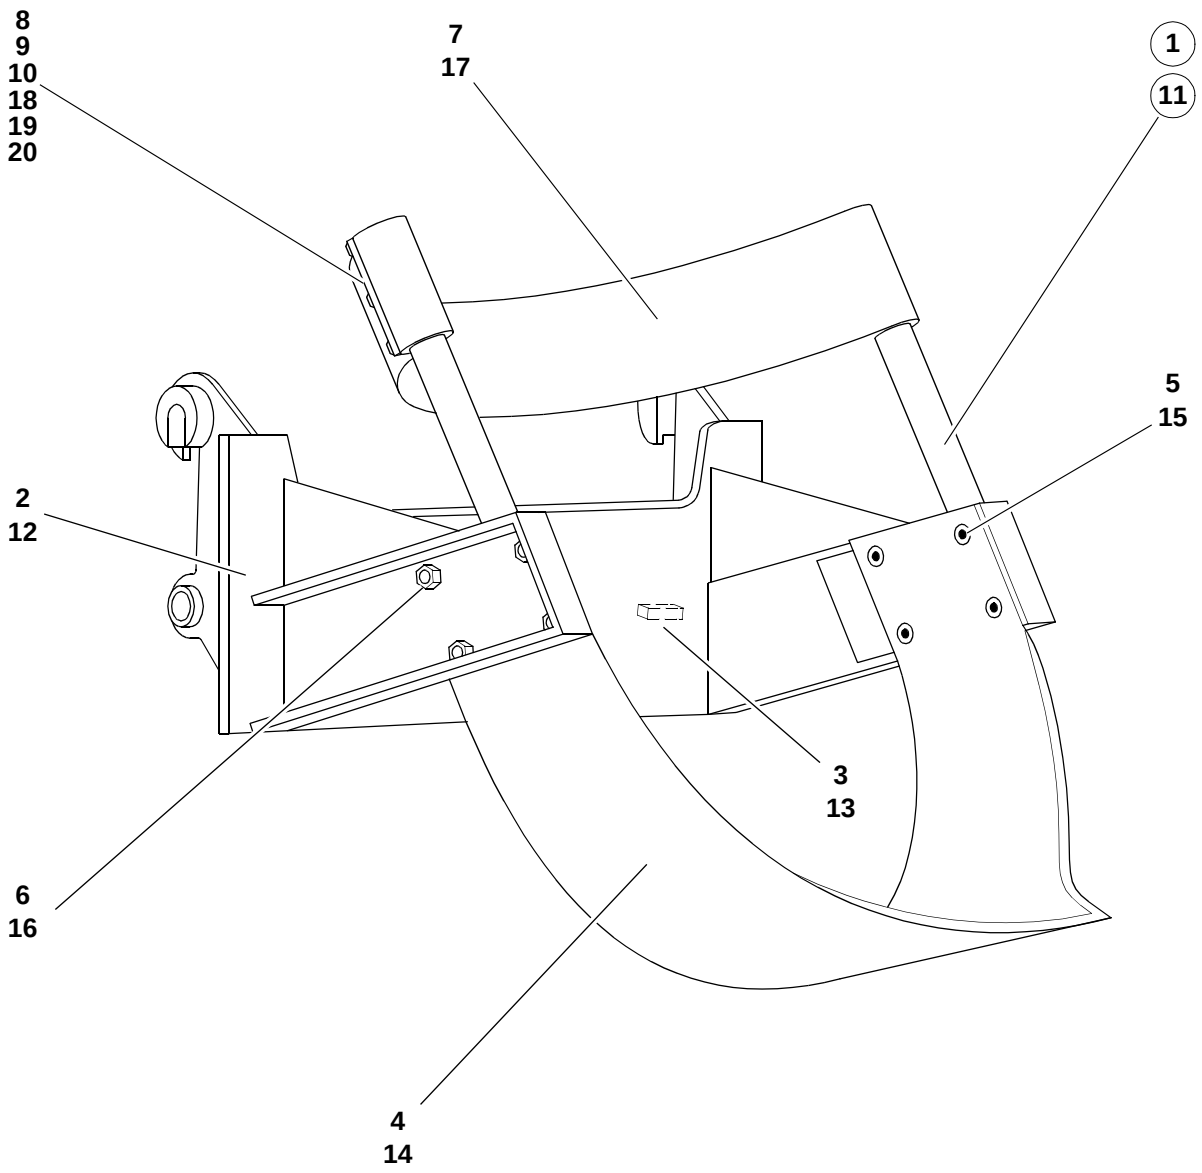

11
13
14
9
8
13
14
11
12
12
4
3
7
6
5
10
2
20
19
17
18
16
15
S1339062.iso
1
21


24
25
23
28
29
23
26
27
24
25
22

Hauptgruppe 41/4

Hebegeräte für Schnellwechseleinrichtung

Stapeleinrichtung SO 1339/9/12
Teleskopschwenkkran SO 1055/14


8
9
10
18
19
20
7
17
1
11
5
15
2
12
3
13
6
16
4
14

Pos.	Teil-Nummer	Bezeichnung	Stück	Bemerkung
	0 00 430 07 74	**Werkzeugsatz kpl.**	1	Bild-Nr. **1** bis **25**
1	0 00 432 00 15	Werkzeugtasche	1	
2	0 00 432 00 09	Drehstift konisch	1	ø 14 x 400 lg.
3	0 00 432 01 09	Drehstift	1	ø 16 x 400 lg.
4	0 00 432 01 02	Hammer	1	1000 gr.
5	4 063 800 053	Schraubenzieher	1	Größe 4
	0 00 432 00 14	Rollgabelschlüssel	1	
	0 00 432 00 11	Durchschlag	1	
6	0 00 432 00 12	Schraubenzieher	1	
7	0 00 432 00 13	Kombinationszange	1	
8	4 061 200 012	Steckschlüssel	1	21
9	4 061 400 010	Steckschlüssel	1	27 DIN 3112
10	4 060 200 004	Doppelmaulschlüssel	1	8 x 10
11	4 060 200 009	Doppelmaulschlüssel	1	12 x 14
12	4 060 200 031	Doppelmaulschlüssel	1	13 x 17
13	4 060 200 014	Doppelmaulschlüssel	1	19 x 22
14	4 060 200 019	Doppelmaulschlüssel	1	24 x 30
15	4 060 200 020	Doppelmaulschlüssel	1	27 x 32
16	4 060 200 024	Doppelmaulschlüssel	1	36 x 41
17	4 061 300 087	Sechskantsteckschlüssel	1	B 13 x 17
18	4 061 300 066	Sechskantsteckschlüssel	1	B 19 x 22
19	4 062 200 003	Sechskantstiftschlüssel	1	5
20	4 062 200 004	Sechskantstiftschlüssel	1	6
21	4 062 200 005	Sechskantstiftschlüssel	1	8
22	4 062 200 006	Sechskantstiftschlüssel	1	10
23	4 062 200 008	Sechskantstiftschlüssel	1	14
24	4 062 200 009	Sechskantstiftschlüssel	1	17
25	0 00 432 01 13	Seegerringzange	1	
	0 00 432 01 32	Vierkantschlüssel	1	
26	0 00 432 02 05	Fettpresse	1	
	0 00 432 02 06	Verlängerungsrohr zu Fettpresse	1	Kopf ø 13 x 140 lg.
27	0 00 441 20 10	Fettpatrone	1	
	0 00 363 40 62	Ölablaßkupplung (Motorenöl)	1	
	0 00 365 76 05	PVC-Schlauch	1	480 mm
28	0 00 433 15 40	Halter für Verbandskasten	1	
29	7 708 680 009	Unterlegkeil	2	F 46
	0 00 430 00 37	Zsb. Sicherungsfeder	2	
	Schlüssel (bei Ersatzbedarf Schlüssel-Nr. beachten)			
	0 00 333 07 33	Schlüssel Fahrerkabine u. Anlaßschalter	1	Nr. 14603 - Merit
	0 00 161 00 92	Schlüssel Tankdeckel	1	Nr. 510 - Blau
	0 64 003 00 90	Ersatzteiliste Ausgabe		
	0 64 003 01 90	Ersatzteiliste Mikrofiche		
	0 64 003 00 91	Bedienungsanleitung		

ET-Nummer	Seite	Pos.	ET-Nummer	Seite	Pos.	ET-Nummer	Seite	Pos.
0 00 332 20 17	41-12	6	0 00 333 07 65	00-8	27	0 00 333 25 65	00-6	35
0 00 332 21 05	33-10	38	0 00 333 07 65	33-18		0 00 333 25 66	00-12	29
0 00 332 27 46	33-26	9	0 00 333 07 66	00-6	40	0 00 333 26 65	00-6	34
0 00 332 31 17	33-4	33	0 00 333 08 11	00-8	16	0 00 333 26 66	00-12	30
0 00 332 31 17	33-6	19	0 00 333 08 11	33-14	4	0 00 333 27 13	33-24	7
0 00 332 31 17	33-6	35	0 00 333 08 11	33-16	4	0 00 333 27 65	00-10	48
0 00 332 45 12	33-6	12	0 00 333 08 11	33-18	8	0 00 333 27 65	33-14	10
0 00 332 48 15	33-8	29	0 00 333 08 11	41-14		0 00 333 27 66	00-14	31
0 00 332 49 15	33-8	25	0 00 333 08 65	00-8	28	0 00 333 28 07	33-2	29
0 00 332 51 15	33-8	7	0 00 333 08 65	33-18	19	0 00 333 28 20	33-6	23
0 00 332 52 15	33-8	8	0 00 333 10 07	33-6	8	0 00 333 28 65	00-10	47
0 00 332 53 01	33-26		0 00 333 10 10	00-12	9	0 00 333 28 65	33-18	3
0 00 332 54 52	33-26	8	0 00 333 10 27	41-12	4	0 00 333 28 65	33-26	
0 00 332 59 52	33-8	30	0 00 333 10 65	00-10	45	0 00 333 28 66	00-14	32
0 00 332 66 01	33-8	19	0 00 333 11 65	00-8	9	0 00 333 29 14	33-24	5
0 00 332 68 01	33-8	1	0 00 333 12 65	00-10	44	0 00 333 29 20	33-16	11
0 00 333 00 22	41-14	51	0 00 333 12 65	33-20	3	0 00 333 29 20	33-2	6
0 00 333 01 11	33-22		0 00 333 13 06	33-6	27	0 00 333 29 65	00-6	15
0 00 333 01 11	33-22		0 00 333 13 65	00-6	41	0 00 333 29 65	33-26	
0 00 333 01 45	33-2	43	0 00 333 13 65	33-16	14	0 00 333 29 66	00-14	33
0 00 333 01 45	33-6	17	0 00 333 13 65	33-18	5	0 00 333 30 11	00-12	14
0 00 333 01 66	00-6	31	0 00 333 13 66	00-6	18	0 00 333 30 14	33-24	6
0 00 333 01 86	33-4	38	0 00 333 14 10	00-8	37	0 00 333 30 65	00-6	14
0 00 333 02 29	33-24	8	0 00 333 14 65	00-10	50	0 00 333 30 66	00-14	34
0 00 333 02 56	00-6	16	0 00 333 14 65	33-16	15	0 00 333 31 07	33-4	35
0 00 333 02 61	00-8	10	0 00 333 14 65	33-18	4	0 00 333 31 11	00-12	25
0 00 333 02 61	33-18	6	0 00 333 14 66	00-12	2	0 00 333 32 11	00-12	13
0 00 333 02 61	33-26	13	0 00 333 15 65	00-8	12	0 00 333 32 11	33-16	5
0 00 333 03 26	15-6	1	0 00 333 15 65	33-12		0 00 333 32 11	33-18	9
0 00 333 03 26	33-12	25	0 00 333 15 66	00-12	4	0 00 333 32 11	33-8	42
0 00 333 03 56	00-6	45	0 00 333 16 11	30-6		0 00 333 32 12	41-6	4
0 00 333 03 66	00-6	33	0 00 333 16 11	33-4	14	0 00 333 32 65	00-14	45
0 00 333 04 40	00-8	23	0 00 333 16 11	33-4	17	0 00 333 32 66	00-8	43
0 00 333 04 56	00-6	46	0 00 333 16 65	00-8	3	0 00 333 33 07	41-12	8
0 00 333 04 65	00-6	42	0 00 333 16 66	00-12	17	0 00 333 33 11	00-12	24
0 00 333 04 66	00-10	52	0 00 333 17 65	00-8	4	0 00 333 33 66	00-8	11
0 00 333 04 66	22-16	29	0 00 333 17 66	00-12	18	0 00 333 34 07	33-6	10
0 00 333 04 66	27-6	37	0 00 333 18 13	33-24	28	0 00 333 35 11	00-8	15
0 00 333 04 66	33-12	37	0 00 333 18 66	00-12	19	0 00 333 35 11	27-6	36
0 00 333 04 66	33-20	11	0 00 333 19 66	00-12	20	0 00 333 35 11	33-14	5
0 00 333 04 66	33-20	7	0 00 333 20 65	00-14	41	0 00 333 35 11	33-20	10
0 00 333 04 66	36-20	22	0 00 333 20 65	41-14		0 00 333 35 11	33-20	13
0 00 333 05 10	00-8	6	0 00 333 20 66	00-12	21	0 00 333 35 11	33-20	2
0 00 333 05 40	00-8	24	0 00 333 21 10	00-8	22	0 00 333 35 11	33-20	6
0 00 333 05 40	41-14	50	0 00 333 21 10	33-20		0 00 333 35 11	33-26	
0 00 333 05 56	00-6	47	0 00 333 21 66	00-12	22	0 00 333 35 11	36-20	21
0 00 333 05 61	00-8	20	0 00 333 22 10	00-14	44	0 00 333 35 11	41-14	
0 00 333 06 50	00-14	51	0 00 333 22 25	33-12	33	0 00 333 35 11	41-14	
0 00 333 06 65	00-8	26	0 00 333 22 25	33-16	19	0 00 333 35 11	41-14	
0 00 333 06 65	33-18		0 00 333 22 65	00-14	40	0 00 333 36 07	27-12	36
0 00 333 07 33	30-4	3	0 00 333 22 66	00-12	23	0 00 333 36 07	33-12	1
0 00 333 07 33	33-6	28	0 00 333 23 65	00-12	11	0 00 333 36 65	00-6	32
0 00 333 07 33	34-8	5	0 00 333 23 66	00-12	27	0 00 333 37 20	33-4	27
0 00 333 07 33	43-6		0 00 333 24 65	00-12	12	0 00 333 37 65	00-14	50
0 00 333 07 50	00-8	39	0 00 333 24 66	00-12	28	0 00 333 38 07	33-2	27
0 00 333 07 56	00-6	48	0 00 333 25 07	36-2	33	0 00 333 38 65	00-8	38

ET-Nummer	Seite	Pos.
0 00 996 41 71	00-4	
0 00 996 42 33	22-4	3
0 00 996 42 50	16-2	4
0 00 996 42 71	00-3	
0 00 996 42 81	34-12	
0 00 996 42 81	34-4	
0 00 996 43 07	22-10	26
0 00 996 43 07	22-12	39
0 00 996 43 07	22-4	28
0 00 996 43 07	22-6	39
0 00 996 43 07	22-8	16
0 00 996 43 14	00-2	
0 00 996 43 14	36-14	18
0 00 996 43 71	00-3	
0 00 996 44 29	36-36	18
0 00 996 44 29	36-36	42
0 00 996 45 51	33-24	13
0 00 996 45 70	26-12	89
0 00 996 45 70	26-2	8
0 00 996 45 70	26-20	8
0 00 996 45 70	26-30	86
0 00 996 46 15	36-44	10
0 00 996 46 15	36-44	25
0 00 996 46 80	34-4	
0 00 996 49 07	27-2	3
0 00 996 53 32	27-2	31
0 00 996 53 82	30-4	
0 00 996 54 83	29-2	10
0 00 996 55 08	00-3	
0 00 996 55 50	24-2	14
0 00 996 55 50	24-2	18
0 00 996 55 83	29-2	26
0 00 996 56 04	01-2	14
0 00 996 56 08	00-3	
0 00 996 56 15	36-38	15
0 00 996 56 15	36-38	36
0 00 996 56 50	24-6	3
0 00 996 57 04	36-8	11
0 00 996 57 08	00-3	
0 00 996 57 30	24-2	33
0 00 996 57 30	29-6	44
0 00 996 58 08	00-3	
0 00 996 58 08	27-4	
0 00 996 58 08	36-20	
0 00 996 58 08	36-20	
0 00 996 58 70	22-20	13
0 00 996 59 08	00-3	
0 00 996 59 08	36-4	
0 00 996 60 06	36-4	
0 00 996 60 06	36-4	
0 00 996 60 06	36-4	
0 00 996 60 08	00-3	
0 00 996 60 11	00-1	
0 00 996 60 11	00-1	
0 00 996 60 11	36-2	26
0 00 996 60 65	29-6	13
0 00 996 61 08	00-3	
0 00 996 61 08	27-2	
0 00 996 61 12	41/3-10	12
0 00 996 61 12	41/3-14	18
0 00 996 61 12	41/3-20	12
0 00 996 62 70	00-1	
0 00 996 62 70	00-1	
0 00 996 62 70	00-1	
0 00 996 62 70	22-26	118
0 00 996 62 70	22-32	130
0 00 996 62 90	34-6	
0 00 996 63 82	34-8	
0 00 996 65 13	41/3-10	18
0 00 996 65 13	41/3-20	18
0 00 996 65 15	00-2	
0 00 996 65 15	00-2	
0 00 996 65 15	36-14	11
0 00 996 65 15	36-14	7
0 00 996 65 65	36-44	13
0 00 996 65 65	36-44	28
0 00 996 66 65	36-44	22
0 00 996 66 65	36-44	7
0 00 996 67 05	27-2	26
0 00 996 67 13	41/4-6	17
0 00 996 67 65	36-44	23
0 00 996 67 65	36-44	8
0 00 996 68 05	27-4	2
0 00 996 68 13	41/3-14	6
0 00 996 68 51	22-24	54
0 00 996 68 51	22-30	57
0 00 996 70 50	29-4	32
0 00 996 72 15	22-32	132
0 00 996 72 15	30-6	24
0 00 996 72 15	33-4	19
0 00 996 72 70	22-12	41
0 00 996 72 70	22-6	41
0 00 996 73 30	34-4	34
0 00 996 73 70	22-10	12
0 00 996 73 70	22-4	15
0 00 996 74 08	36-8	22
0 00 996 74 91	34-16	
0 00 996 74 91	41-10	
0 00 996 75 08	22-16	6
0 00 996 75 08	36-8	19
0 00 996 75 11	00-2	
0 00 996 75 11	00-2	
0 00 996 75 11	41/3-10	26
0 00 996 75 11	41/3-20	26
0 00 996 75 90	34-12	
0 00 996 75 90	34-6	
0 00 996 75 90	34-8	
0 00 996 76 07	26-18	3
0 00 996 76 07	26-38	3
0 00 996 76 90	34-12	
0 00 996 77 09	27-14	9
0 00 996 77 28	36-40	19
0 00 996 77 28	41/3-14	4
0 00 996 77 65	36-44	12
0 00 996 77 65	36-44	27
0 00 996 78 09	27-14	10
0 00 996 78 27	36-2	21
0 00 996 78 28	41/3-10	22
0 00 996 78 28	41/3-20	22
0 00 996 78 28	41/4-4	25
0 00 996 78 30	34-14	21
0 00 996 78 65	24-4	42
0 00 996 78 65	24-4	55
0 00 996 78 70	22-10	22
0 00 996 78 70	22-4	24
0 00 996 79 08	22-16	12
0 00 996 79 09	27-14	8
0 00 996 80 09	27-14	6
0 00 996 80 50	17-2	20
0 00 996 80 70	22-14	8
0 00 996 81 28	36-36	20
0 00 996 81 28	36-36	44
0 00 996 81 70	22-8	20
0 00 996 82 14	00-2	
0 00 996 82 14	27-14	(5)
0 00 996 82 27	41/4-6	16
0 00 996 83 14	00-2	
0 00 996 83 14	27-14	13
0 00 996 83 27	41/4-6	19
0 00 996 83 70	22-10	15
0 00 996 83 70	22-12	44
0 00 996 83 70	22-4	18
0 00 996 83 70	22-6	43
0 00 996 83 70	22-8	10
0 00 996 83 84	30-4	
0 00 996 83 85	30-2	
0 00 996 84 70	22-12	36
0 00 996 84 70	22-6	36
0 00 996 85 15	00-2	
0 00 996 85 15	36-36	22
0 00 996 85 15	36-36	46
0 00 996 86 15	00-2	
0 00 996 86 15	36-38	21
0 00 996 86 70	22-10	13
0 00 996 86 70	22-4	16
0 00 996 88 06	26-14	8
0 00 996 88 06	26-32	8
0 00 996 88 07	36-2	29
0 00 996 88 15	00-2	
0 00 996 88 15	36-44	15
0 00 996 88 15	36-44	30
0 00 996 88 27	41/3-14	9
0 00 996 88 70	22-14	9
0 00 996 89 81	34-6	
0 00 996 89 81	34-8	
0 00 996 90 07	41/4-6	15
0 00 996 91 70	22-10	19
0 00 996 91 70	22-4	21

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO DOWNLOAD THE COMPLETE MANUAL