


CLAAS

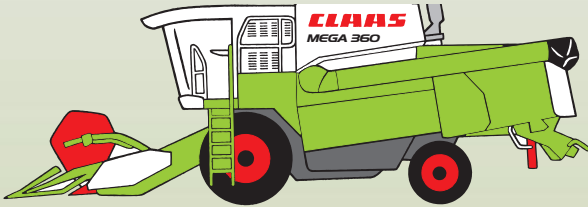

MEGA 370 - 350
DOMINATOR MEGA 218 - 204
MEDION 340 - 310
DOMINATOR 128 - 78

Anbauanleitung

Windreduzierung

Fitting Instructions

Fan Blast Reduction Kit

Notice de montage

Réduction de la ventilation

Руководство по

МОНТАЖУ

Уменьшение дутья

SERVICE & PARTS

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL



3

- Gebläseschutz (G) abbauen.

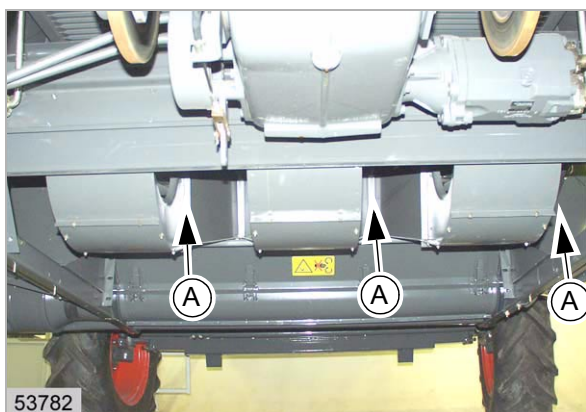

4

**Hinweis!**


- Bei Zweifachgebläsen sind nur zwei Turbinen abzudecken.

- Lager (1) bei (A) anschrauben.



5

- Die Lager (1) mit Schrauben (2) anschrauben.

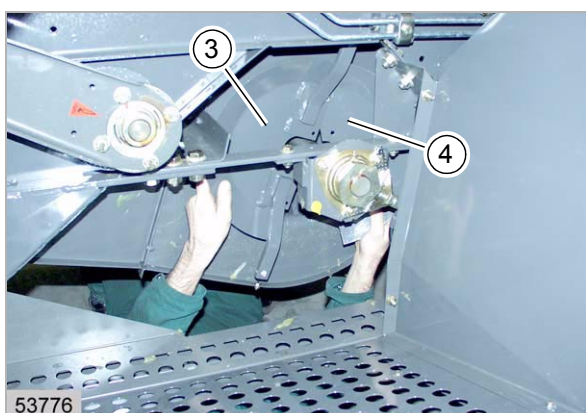

6

- Auf beiden Seiten der Turbinen die Tellerhälften (3) und (4) gegen die Ansaugöffnungen setzen.
- Die Tellerhälften (3) und (4) mit Schrauben (5) zusammenschrauben.

4 Mounting

4.1 Fan blast reduction kit

47735

4.1.1 Installing the fan blast reduction kit for turbo fan



Danger!

Moving machine components and / or unexpected machine movement.

Death or serious injury!


- Diesel engine OFF.
- Engage the parking brake.
- Remove the ignition key.
- Remove the key of the battery isolating switch.
- Wait until all rotating parts have stopped moving.
- Secure the machine with wheel chocks.

- Remove covers (L) and (M).



13861


1

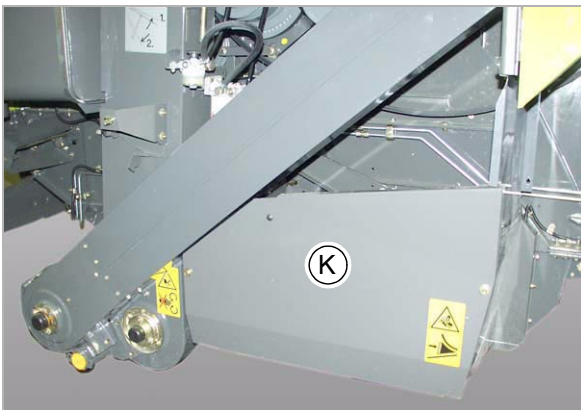

13863

2

- Remove cover (K).

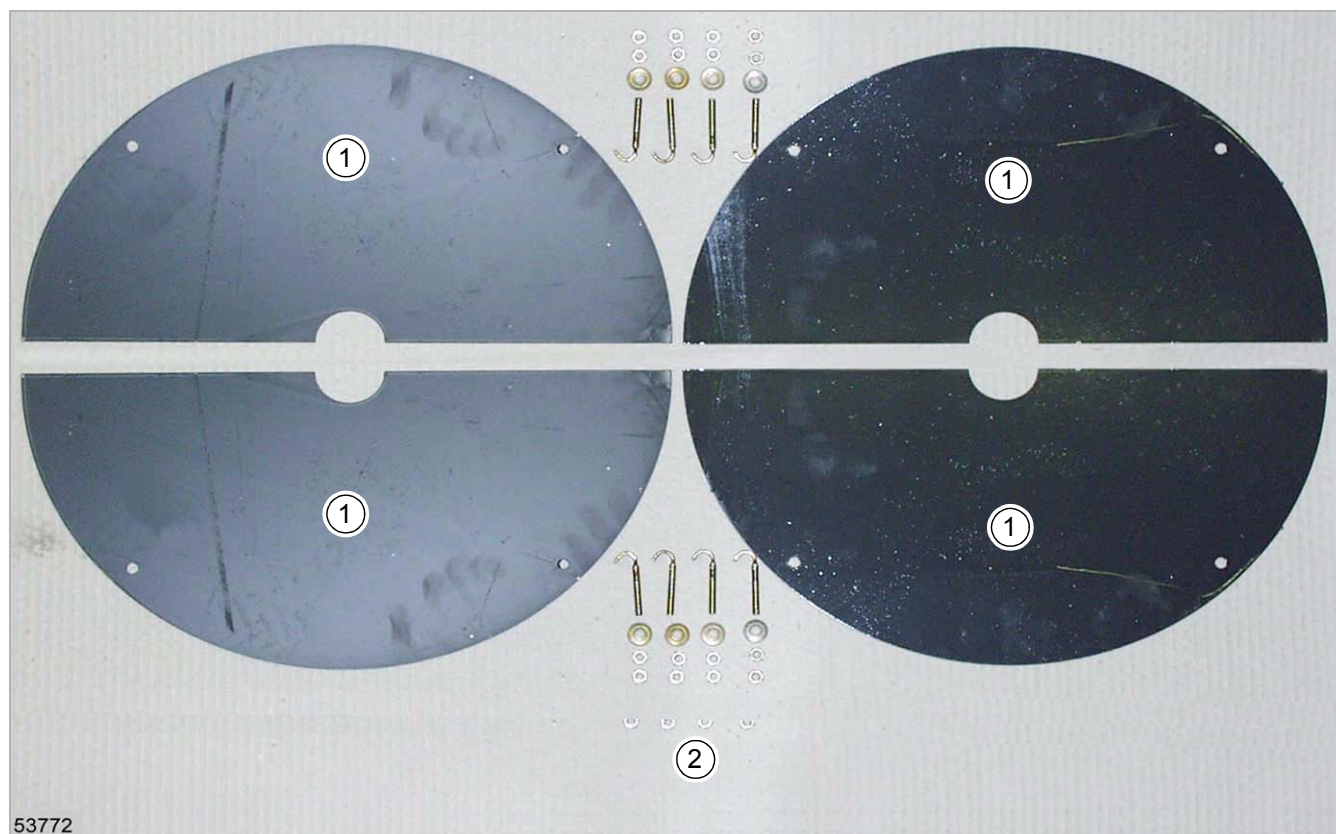3.3 Réduction de la ventilation pour ventilateur tonneau**3.3.1 Jeu de montage ultérieur 000 058 062 0**

53772

17243

2

N° Pos.	Désignation	Dimensions	Norme	Quantité
1	Segment			4
2	Vis à crochet	M 6 x 50		8
	Rondelle contact	A 6		8
	Ecrou six pans	M 6		16

№ поз.	Обозначение	Размеры	Стандарт	Кол-во
14	Установочное кольцо	M 6 x 10		6
	Установочный винт			6
15	Шайба	10,5 x 30		2

3.2 Уменьшение дутья для двойного турбовентиллятора

3.2.1 Комплект для дооснащения 000 304 988 2

№ поз.	Обозначение	Размеры	Стандарт	Кол-во
1	Подшипник			2
2	Винты с шестигранной головкой	M 6 x 16		4
	Контактная шайба	A 6		4
	Шестигранная гайка	M 6		4
3	Половинка тарелки			4
4	Половинка тарелки			4
5	Винт с шестигранной головкой	M 6 x 16		18
	Контактная шайба	A 6		18
	Шестигранная гайка	M 6		18
6	Тяговая штанга	D 10 H 9 x 1425		1
7	Тяговая штанга	D 10 H 9 x 1525		1
8	Опорный уголок			1
9	Винт с шестигранной головкой	M 10 x 20	ISO 4017-8.8	1
	Контактная шайба	A 10		1
	Шестигранная гайка	M 10		1
10	Сферическая кнопка			2
11	Шестигранная гайка	M 10		2
12	Винт с шестигранной головкой	M 8 x 25 RS		10
	Шестигранная гайка	M 8		10
13	Тяговая штанга	D 10 H 9 x 1220		2
14	Установочное кольцо	M 6 x 10		6
	Установочный винт			6
15	Шайба	10,5 x 30		2

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL