


DYNAPAC
CP271
SPARE PARTS
CATALOGUE
SCP271-3EN2

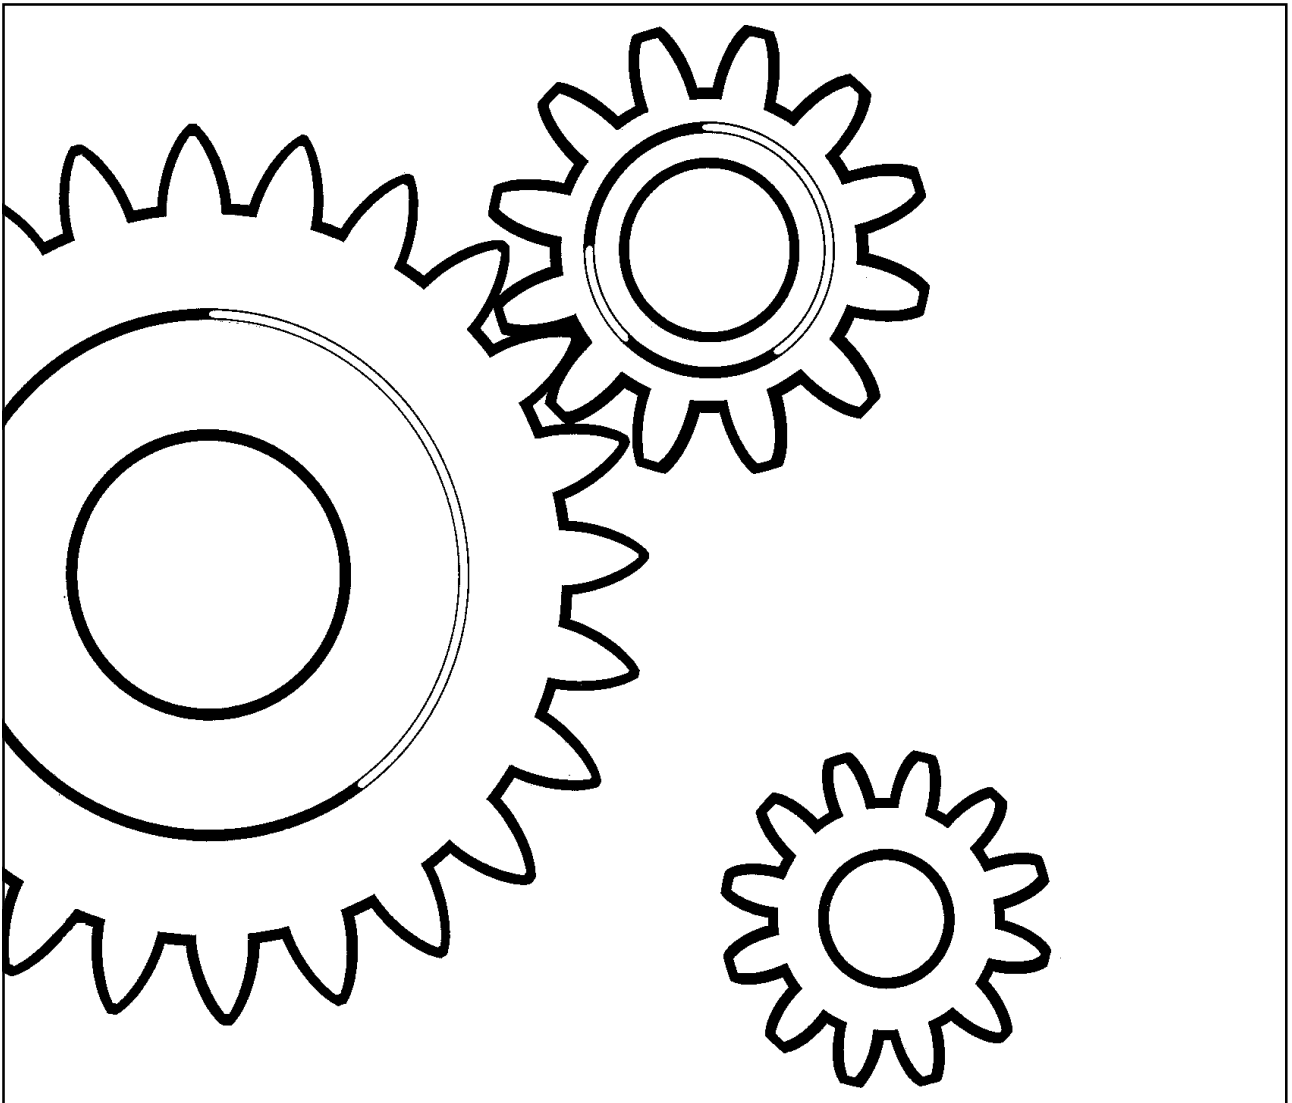

DYNAPAC

Box 504, SE-371 23 Karlskrona, Sweden
Phone: +46 455 30 60 00, Fax: +46 455 30 60 10
www.dynapac.com

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Rear cover

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	928511		16	Screw	
2	904229		14	Washer 8,4x16x1,5	
3	500022		7	Screw M8-1,25x30 8,8	
4	535044		8	Screw	
5	375061		1	Cover, left	
6	375060		1	Cover, right	
7	535048		2	Screw	
8	195613		1	Bracket	
9	904230		2	Washer 10,5x22x2	
10	570006		2	Nut M10	
11	192785		1	Rear cover, left	
12	192786		1	Rear cover, right	
13	586003		3	Lock nut M8	
14	570003		12	Nut M5	
15	615041		8	Washer 5,3x11	
16	450066		4	Door bumper	D
17	192939		2	Grommet	
18	630006		2	Cotter pin	
19	535008		8	Screw	
20	192940		1	Rod, right	
21	192941		1	Rod, left	
22	570003		2	Nut M5	
23	904281		4	Washer 5,3x10x1	
24	533025		4	Screw M5x12	
25	927210		2	Grab handle	

Sprinkler system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	904229		3	Washer 8,4x16x1,5	
2	500022		3	Screw M8-1,25x30 8,8	
3	333228		1	Cap	
4	358846		1	Strainer	D
6	248511		1	Spacer	
7	193103		1	Sprinkling tank	
8	904990		6	Screw M10x50	
10	373304		1	Cap	D
11	375567		1	Filling pipe	
12	904631		1	Hose clamp	
13	904059		1	Hose clamp	
14	193093		1	Filling pipe	
17	813732		4	Hose connection	
18	313004		10	Hose clamp	
19	244057		1	Hose	
20	901299		2	Adapter	
21	333041		1	Valve	D
22	244057		1	Hose	
23	331092		4	Plug	
24	813746		1	Sleeve	
25	258333		2	Clamp	
27	331015		3	Elbow 90	
28	259225		1	Tube	
29	259226		1	Tube	
30	230543		3	Elbow 45	
31	256860		1	Tube	
32	263614		3	Tube	
33	192442		4	Clamp	
34	813725		3	Hose connector	
35	331006		1	Connection	
36	242018		1	Clamp	
37	230469		2	T-pipe	
38	813744		9	Nozzle sprinkler	B
39	541703		2	Screw M6x16	
40	241753		2	Hose connector	
41	248491		2	Reducer	
42	248513		1	Water filter	A
43	925659		1	Solenoid valve	C
44	234317		1	Nipple	
45	244057	A	1	Hose	
46	500028		2	Screw M10-1,5x25 8,8	
47	383697		1	Water pump	
48	904230		2	Washer 10,5x22x2	
49	570006		2	Nut M10	
50	244057	B	1	Hose	
51	258340		1	Tube	
52	256860		1	Tube	
53	263615		1	Tube	
54	240154		1	Connector	
55	244057	C	1	Hose	
56	930151		1	Switch	D
57	930163		2	Contact piece	D
58	928722		1	Fuse	B
60	813422		2	Plug	
84	297018	L	1	Rubber strip	
85	202046	D	1	Rubber strip 25x10	

- A) L=5500 mm
 B) L=400 mm
 C) L=1000 mm
 D) L=2400 mm
 L) L=1450 mm

Front suspension

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	500051		4	Screw M12-1,75x25 8,8	
2	904231		4	Washer 13x24x2	
3	259211		2	Snap plate	
4	259349		4	Spacer	
5	255054		2	Shaft	
6	258729		2	Pin	
7	310037		1	Grease nipple	D
8	256158		2	Wheel hub	
9	754105		30	Screw	
10	116016		5	Bearing	B
11	163108		5	Seal ring	
12	255658		5	Ring	
13	503100		16	Screw	
14	259219		2	Brake (Page 32)	
15	902252		50	Washer	
16	754014		50	Nut	
17	502017		30	Screw	
18	904229		30	Washer 8,4x16x1,5	
19	255337		4	Bearing cover	
20	161023		4	Seal ring	
21	135011		5	Lock nut	
22	136011		5	Lock washer	
23	252668		5	Ring	
24	116009		5	Bearing	B
25	253745		2	Brake drum	
26	256159		3	Wheel hub	
27	256157		1	Bearing cover	
28	747097		20	Wheel stud	

Wheel

Ref. No.	Part No.	Rem.	Qty	Description	Code
51				Wheel with Bridgestone tyre (Page 42)	
52				Wheel with Michelin tyre (Page 44)	
53				Wheel with Firestone tyre (Page 46)	

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	266221		1	Manometer	D
	747583		1	Bulb	
	927025		1	Socket	
2	904627		1	Nut M6	
3	195814	A	1	Pipe, nylon	D
4	904626		1	Coupling	
5	230520		1	Locking sleeve R6	
6	247154	B	1	Pipe	
7	920783		1	Insert	
8	920787		1	Pipe connection	
9	192803		1	Connection	
10	920794		1	Nipple	
11	920784		6	Insert	
12	247151	C	1	Pipe 3/8"	
13	247151	D	1	Pipe 3/8"	
14	192804		1	Connection	
15	192804		1	Connection	
16	247152	E	1	Tube	D
17	508099		2	Screw	
18	920785		2	Insert	
19	920789		1	Brake connection	
20	813423		2	Hexagon plug	
21	374791		1	Directional valve	
22	570003		2	Nut M5	
23	904281		6	Washer 5,3x10x1	
24	920794		1	Nipple	
25	247151	F	1	Pipe 3/8"	
26	900524		1	Brake connection	
27	234729		2	Reducing nipple	
28	330333		6	Copper washer	D
29	570006		4	Nut M10	
30	904230		4	Washer 10,5x22x2	
31	194366		2	Clamp	
32	234729		1	Reducing nipple	
33	334603		1	Bushing	
34	333062		1	Safety valve	D
35	813465		3	Reducing	
36	235007		1	Tee-connector	
37	401106		1	Filler pipe	
38	384615		1	Air tank	
39	333053		1	Drain valve	D
40	194363		1	Nipple	
41	920786		2	Insert	
42	247153	G	1	Tube	
43	268920		1	Adapter	
44	912120		1	Check valve	D
45	240264		2	Adapter	
46	333067		1	Valve	D
47	814262		1	Tee-connector	
48	194365		2	Connection 90deg	
49	334603		1	Bushing	
50	920794		1	Nipple	
51	194367		2	Hose	

- A) L=0.15 m
- B) L=0.42 m
- C) L=1.8 m
- D) L=3.25 m
- E) L=3.4 m
- F) L=0.5 m
- G) L=0.7 m

Brake circuit

Ref. No.	Part No.	Rem.	Qty	Description	Code
54	194291		1	Brake line	
55	195838	I		Pipe, nylon	D
56	195838	J		Pipe, nylon	D
58	926625		4	Sleeve	
63	162019		2	Seal ring	D
64	232052		2	Plug	D
65	384614		2	Air tank	
66	195915		2	Male stud elbow	
67	195833		4	Sleeve insert	
68	256485		2	Adapter	
69	904659		2	Elbow 90	
70	195839	D		Pipe, nylon	
71	195839	M		Pipe, nylon	
73	194371		1	Bracket	
74	194372		2	Stud	
75	904230		22	Washer 10,5x22x2	
76	570006		14	Nut M10	
77	202028			Edge trim	
78	194366		2	Clamp	
79	500030		8	Screw M10-1,5x35H 8,8	
80	232143		6	Plug	
81	330330		6	Washer	
82	195814	O		Pipe, nylon	D
83	195814	K		Pipe, nylon	D
84	194401		2	Brake master cylinder	
85	195932		2	Male stud elbow	
86	904627		2	Nut M6	
87	230520		2	Locking sleeve R6	
88	255039		1	Brake line	
89	256926		2	Brake hose	
90	256925		2	Brake line	
91	262054		1	Brake hose	
92	256753		1	Brake line	
93	192343		1	Plug	

- D) L=880 mm
 I) L=4000 mm
 J) L=3600 mm
 K) L=900 mm
 M) L=850 mm
 O) L=1500 mm

Parking brake

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	384573		1	Bracket	
2	384572		2	Caliper disc brake (Page 72)	
3	904231		8	Washer 13x24x2	
4	947688		8	Screw	
5	938355		6	Screw	
6	938108		1	Disc	

Cooling system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	313108		2	Hose clamp	
2	313035		2	Hose clamp	
3	313010		2	Hose clamp	
4	374891		1	Hose	
5	246068	A	1	Hose	
6	246073	B	1	Hose	
7	191792		1	Radiator, cpl	
8	819179201		1	.Radiator	
9	249593		1	.Filler cap	D
10	819179202		1	.Cooling air cover	
11	600005		8	.Washer	
12	604003		8	.Washer	
13	500012		8	.Screw M6x12	
14	374984		1	Hose connector	
15	234365		1	Elbow 90	
16	603023		12	Washer M10	
17	500029		6	Screw M10-1,5x30 8,8	
18	334157		2	Straight connector	
19	615043		9	Washer 8,4x18x2	
20	500021		9	Screw M8-1,25x25 8,8	
21	313023		2	Hose clamp	
22	389651		1	Coolant hose	
23	191790		1	Hose	
24	191789		1	Hose	
25	334132		2	Elbow 45, O-ring	
26	242614		1	Hose connector	
28	240908		1	Clamp	
30	570005		5	Nut M8	
31	193109		2	Fan guard	
32	615042		2	Conical spring washer	
33	500012		2	Screw M6x12	
34	265909		1	Manometer	
35	904627		1	Nut M6	
36	230520		1	Locking sleeve R6	
37	926625		1	Sleeve	
38	195814	C	1	Pipe, nylon	D
39	904626		1	Coupling	
40	247154	D	1	Pipe	
41	920787		1	Pipe connection	
42	920783		1	Insert	
43	234867		1	Straight connector	
44	570006		6	Nut M10	

- A) L=0,6 m
 B) L=1,15 m
 C) L=0,15 m
 D) L=0,65 m

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Transmission

Ref. No.	Part No.	Rem.	Qty	Description	Code
15				Converter housing (Page 92)	
25				Case and rear cover (Page 94)	
35				Turbine shaft (Page 96)	
45				Drive plate (Page 98)	
55				Torque converter (Page 100)	
65				Gear (Page 102)	
75				Auxiliary pump drive (Page 104)	
85				Pump drive (Page 106)	
95				Forward shaft (Page 108)	
105				Reverse and 2nd shaft (Page 110)	
115				Reverse idler (Page 112)	
125				Low speed shaft (Page 114)	
135				Output and 3rd shaft (Page 116)	
145				Charging pump and filter (Page 118)	
155				Control valve (Page 120)	

Torque converter

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	938405		1	Torque converter	
2	240666		1	Bearing	
3	938439		1	Snap ring	
4	240584		1	Plug	
5	193677		1	O-ring	
6	240574		1	Retaining ring	
7	938406		2	Retaining ring	

Reverse and 2nd shaft

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	938426		1	Disc carrier	
2	938382		1	Clutch piston	
3	193686		1	.Seal ring, outer	
4	193687		1	.Seal ring, inner	
5	240642		1	Piston	
6	193686		1	.Seal ring, outer	
7	193687		1	.Seal ring, inner	
8	240650		8	Inner disc	
9	240650		6	Inner disc	
10	240600		8	Outer disc	
11	240600		6	Outer disc	
12	240651		1	Spacer	
13	240649		2	Support disc	
14	240601		2	Snap ring	
15	240639		1	Spring	
16	240638		1	Spring stop	
17	193685		1	Disc spring	
18	240626		1	Snap ring	
19	425738967		1	Bearing	
20	425738932		1	Bearing	
21	240602		2	Retaining ring	
22	240585		1	Bearing	
23	193684		1	Retaining ring	
24	240593		1	Snap ring	
25	193683		3	Piston ring	
26	240655		1	Snap ring	
27	938379		1	Hub	
28	240625		1	Retaining ring	
29	240596		1	Bearing	
30	938414		1	Spacer	

Control valve

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	240647		1	Control valve assembly (Page 122)	
2	240632		2	Spring	
3	240568		2	Ball	
4	193716		1	Gasket	
5	240562		9	Screw	
6	938435		9	Washer	

Cardan shaft, Albarus

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	195235		1	Cardan shaft	
2	195314		1	.Seal kit	
3			1	.Tube shaft	
4	927988		1	.Universal joint cross	D
5	310028		1	.Grease nipple	D
6	195315		1	.Slip yoke	
7	195749		1	.Universal joint cross	D

376060 Steering cylinder

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Steering cylinder, cpl	
2	936703		1	.Seal kit	D
3	936700		1	.Shear wiper	
4	936699		2	.Guide ring	
5	160033		1	.O-ring	D
6	936697		1	.Back-up ring	
7	903289		1	.Back-up ring	
8	160032		1	.O-ring	D
9	936696		1	.Piston rod sealing	
10	936695		1	.Snap ring	
11	926326		1	.Piston seal	
12	904141		2	.Back-up ring	
13	160013		1	.O-ring	
14	904142		1	.Lock nut	
15	904143		1	.Piston block	
16	936704		1	.Cylinder tube	
17	936698		1	.Guide	
18	936705		1	.Piston rod	
19	936702		1	.Link head	
20	901691		2	.Bushing	D

Lights

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	500004		1	Screw M5 0,8x12 8,8	
2	904281		1	Washer 5,3x10x1	
3	570003		1	Nut M5	
4	975068		1	Relay	D
5	985066		4	Head light	D
6	985087		4	Lamp	B
8	191541		4	Bracket	
9	900223		4	Lantern	D
10	500020		8	Screw M8-1,25x22 8,8	
11	533025		8	Screw M5x12	
12	904281		8	Washer 5,3x10x1	
13	247638		4	Lamp	B
14	570005		4	Nut M8	
15	960273		2	Terminal	
16	901766		1	Connector 2-POL	D
17	904229		8	Washer 8,4x16x1,5	
18	615043		8	Washer 8,4x18x2	
19	570003		8	Nut M5	
20	248271		1	Switch brake light	
21	192308		1	Cable harness	
22	904571		1	Connection-T	
23	904577		2	Connector	
24	902131		2	Adapter	

Forward and reverse control

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	192114		2	Control cable	D
2	570004		4	Nut M6	
3	921850		4	Yoke	
4	630003		4	Cotter pin	
5	550132		8	Screw	
6	312023		2	Ball knob M12, D= 32mm	
7	193006		4	Protection	
8	312023		2	Ball knob M12, D= 32mm	
9	192932		1	Shaft	
10	629075		2	Expanding pin	
11	192934		2	Bearing housing	
12	191999		4	Bushing	D
13	192936		1	Lever Forward and Reverse	
14	192937		1	Lever Gear	
15	192935		1	Lever	
16	500028		4	Screw M10-1,5x25 8,8	
17	904230		6	Washer 10,5x22x2	
18	586003		2	Lock nut M8	
19	904229		2	Washer 8,4x16x1,5	
20	500022		2	Screw M8-1,25x30 8,8	
21	500048		2	Screw M10-1,5x20 8,8	
22	192931		2	Cover	
23	530016		4	Clevis pin	
24	192026		1	Bracket	

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	936487	A	1	Dust seal ring	
2			1	Housing, spool and sleeve	
3	480468		1	Ball	
4	480446		1	Threaded bushing	D
5	908780	A	1	O-ring	
7	911620		1	Bearing	D
8	480449		1	Ring	
9	480447		1	Cross pin	
11	902861		1	Cardan shaft	
12	911618		1	Spring kit	D
13	936488	A	1	O-ring	
14	902862		1	Valve plate	
15	936489		1	Gear wheel set	
16	936490	A	2	O-ring	
17	480450		1	End cap	
18	936491	A	7	Washer	
20	936492		1	Screw with pin	
21	936493		6	Screw	
22	936494		1	Name plate	
24	929010		1	Relief valve 17,0-17,5MPa	D
25	936495		1	Spring wire	
26	929012		2	Shock valve 22,5-24,0 MPa	
27	929013		2	Ball	
29	929014		2	Rolled pin	
32	908782		1	Valve	
33	908783	B	1	Seal kit	D

- A) Included in kit, item 33
B) Not included in PN 375455

Decals

Ref. No.	Part No.	Rem.	Qty	Description	Code
20				Decals (Page 182)	

Tool equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	268964		1	Tool kit	
2	311016		1	.Grease gun	
3	268964016		1	.Wheel nut key	
4	928348		1	.Lever	
5	268964017		1	.Ball pan hammer	
6	485011		1	.Adjustable wrench	
7	485075		1	.Strap spanner	
8	268964001		1	.Screw driver 1/8" x 3"	
	268964002		1	.Screw driver 1/8" x 5"	
	268964003		1	.Screw driver 1/4" x 8"	
	268964004		1	.Screw driver 3/8" x 12"	
9	268964005		1	.Open end spanner 10x11	
	268964006		1	.Open end spanner 12x13	
	268964007		1	.Open end spanner 16x17	
	268964008		1	.Open end spanner 18x19	
	268964009		1	.Open end spanner 24x26	
	268965010		1	.Open end spanner 27x32	
10	277992		1	.Tool bag	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL