




Quality Parts

RRXTH

Electric Stand-Up Rider Truck
Effective Serial Number R_X0029004001 - UP

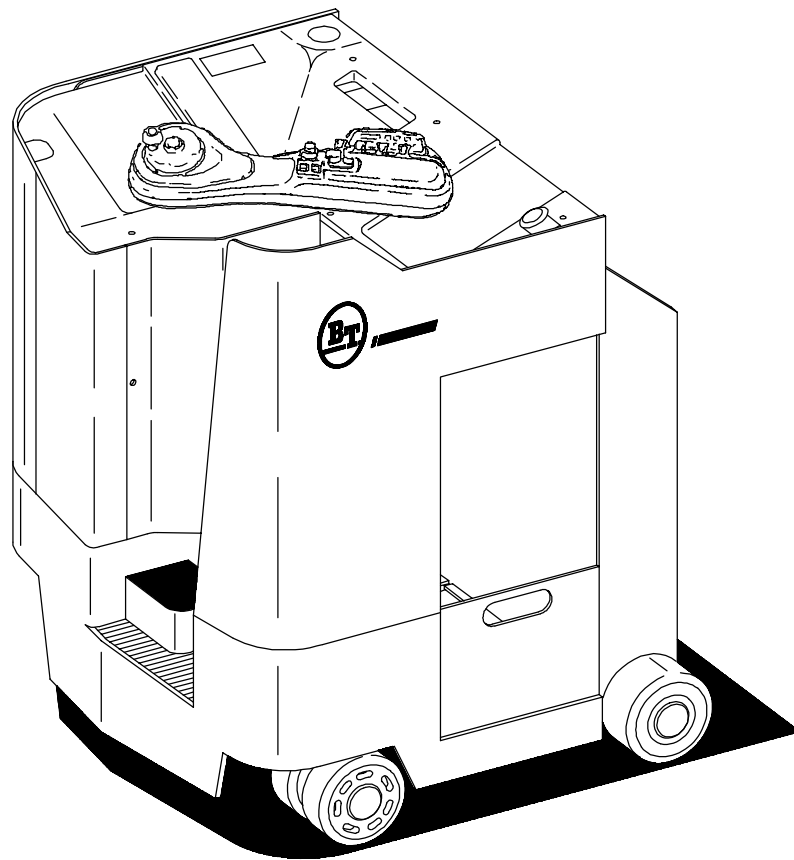

- Warning** Read and observe all warnings on this unit before operating it.
- Warning** **DO NOT** operate this equipment unless all factory installed guards and shields are properly secured in place.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below





- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

0341-000 Inspection covers

ITEM			# FOR	
#	PART #	NAME	ASSY.	UNITS
1	305370-000	Panel, left hand side Battery	1	
*	50018-02	Nut, flanged	3	
*	21935	Screw, cap	1	
2	305346-000	Panel, side	1	
*	301827-020	Screw	2	
3	307678-000	Grill, fan	1	
3	307758-000	Cover, "EE"	1	
4	25536	Screw	4	
*	21035	Washer	4	
*	11813-03	Grommet	1	
5	20335	Screw	1	
6	11857-04	Washer	1	
7	305584-000	Latch	1	
8	20348	Washer, flat	1	
9	20130	Nut	1	
10	305343-000	Door	1	
*	20904-01	Bumper	1	
11	307372-000	Panel, Right hand side Battery	1	
*	50018-02	Nut, flanged	3	
*	21935	Screw, cap	1	
*	20081	Nut	1	
12	305326-000	Dash	1	
13	306908-000	Plug, hole	2	
14	301971-002	Screw	7	
*	301990-000	Washer, wear	7	
*	301991-000	Receptacle	7	
*	301989-000	Bar, mount	7	
15	307413-000	Panel, electrical cover	1	
*	29984	Screw	2	
*	29680	Screw	2	
*	14851-04	Nut, clip	4	
16	305578-000	Mount, 45° operator console	1	45°
16	305578-000	Mount, FWD operator console	1	FWD
16	305581-000	Mount, Side operator console	1	Side
17	301827-020	Screw	4	
18	307368-000	Plate, electrical controller heat sink	1	

0850-000 Signs, warnings

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	147126	Decal, BT	1	
2	145422	Decal, hydraulic function	1	
3	145423	Decal, block	3	
4	306107-000 	Decal, WARNING	1	
5	52-00279-00	Paint, BT RED	As Req'd.	
5	52-00257-00	Spray, BT RED	As Req'd.	
5	52-00220-00	Paint, BT BLACK 	As Req'd.	
5	52-00224-00	Spray, BT BLACK	As Req'd.	
6	151843	Decal, Right BT LOGO	1	Right
7	151844	Decal, Left BT LOGO	1	Left
8	300771-001	Box, Manual	1	
9	NSS	Plate, UL	1	
10	NSS	Plate, DATA	1	
11	X42076-00	Decal, WARNING Tank weight	2	
12	49262-00	Decal, special oil (Cold Storage)	1	Cold Storage
13	306966-000	Decal, WARNING	1	

1760-000 Drive motor

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
*	305789-000	Motor assembly, drive	1	
1	307430-000	Screw	4	
2	307397-000	Band, head	1	
3	307509-000	Fan unit	1	
4	307406-000	Guard, fan	1	
5	307508-000	Package, field coil	1	
6	300193-000	Package, pole shoe screws	1	
7	307386-000	Endhead assembly, commutator	1	
8	307389-000	Plate assembly, brush	1	
9	307390-000	Set, brush	1	
10	307391-000	Set, spring	1	
11	307387-000	Bearing	1	
12	307388-000	Retainer	1	
13	307392-000	Package, retainer & seal	1	
14	307395-000	Package, terminal stud	2	
15	307513-000	Armature assembly	1	
16	307402-000	Key, woodruff	2	
17	307394-000	Endhead assembly, drive	1	
18	307433-000	Screw	4	
25	29539	Ring, seal	1	
26	21596	O ring	1	
27	308521-000	Sleeve	1	
28	25932	Bearing	1	
29	20009	Ring, retainer	1	
30	20041	Ring, retainer	1	

3371-000 Electromagnetic brake

ITEM			# FOR	
#	PART #	NAME	ASSY.	UNITS
1	305802-000	Brake assembly	1	
2	306948-000	Coil	1	
3	306950-000	Armature	1	
4	306951-000	Hub	1	
5	306952-000	Plate, friction	1	
6	306953-000	Plate, mounting	1	
7	306954-000	Spacer	3	
8	306955-000	Spring	12	
9	306956-000	Screw, socket head	3	
10	306957-000	Washer	2	
11	306958-000	Screw, socket head	2	
12	21141	Screw	4	

3561-000 Caster wheel

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	305620-000	Wheel, caster	1	

5161-000 Horn

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	307399-000	Horn	1	
2	301827-020	Screw	1	
3	307022-000	Switch, horn push button	1	
4	29310	Capacitor	1	

5311-000 Start / stop switch

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	307033-000	Key switch assembly	1	
2	307982-000	Key, set	1	
3	11880-09	Screw, machine	2	
4	20323-00	Switch, brake	1	
5	14986-03	Nut, twin	1	
6	307618-000	Actuator, emergency stop	1	
7	307619-000	Contact block, emergency stop	1	
7	307619-000	Contact block, emergency stop (Cold Storage)	2	

5441-000 Direction contactors

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	305654-000	Contactors assembly, Forward/Rearward	1	
2	23006	Screw	2	
3	306720-000	Contactors	2	
4	NSS	Base	1	
5	306719-000	Kit, service	2 Kits	

6000
HYDRAULIC SYSTEM

7400-000 Clamp assembly

ITEM #	PART #	NAME	# FOR ASSY.	UNITS
1	11869-05	Pin, cotter	2	
2	X41936-00	Pin	1	
3	11016-06	Washer, flat	2	
4	49929-03	Bushing	2	
5	X41926-00	Clamp	1	
6	11837-10	Nut, jam-grip	2	
7	11016-05	Washer, flat	2	
8	-----	Cylinder assembly (See Figure 6670-000)	1	
9	X11873-00	Bolt, shoulder	2	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.


CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

0391-000

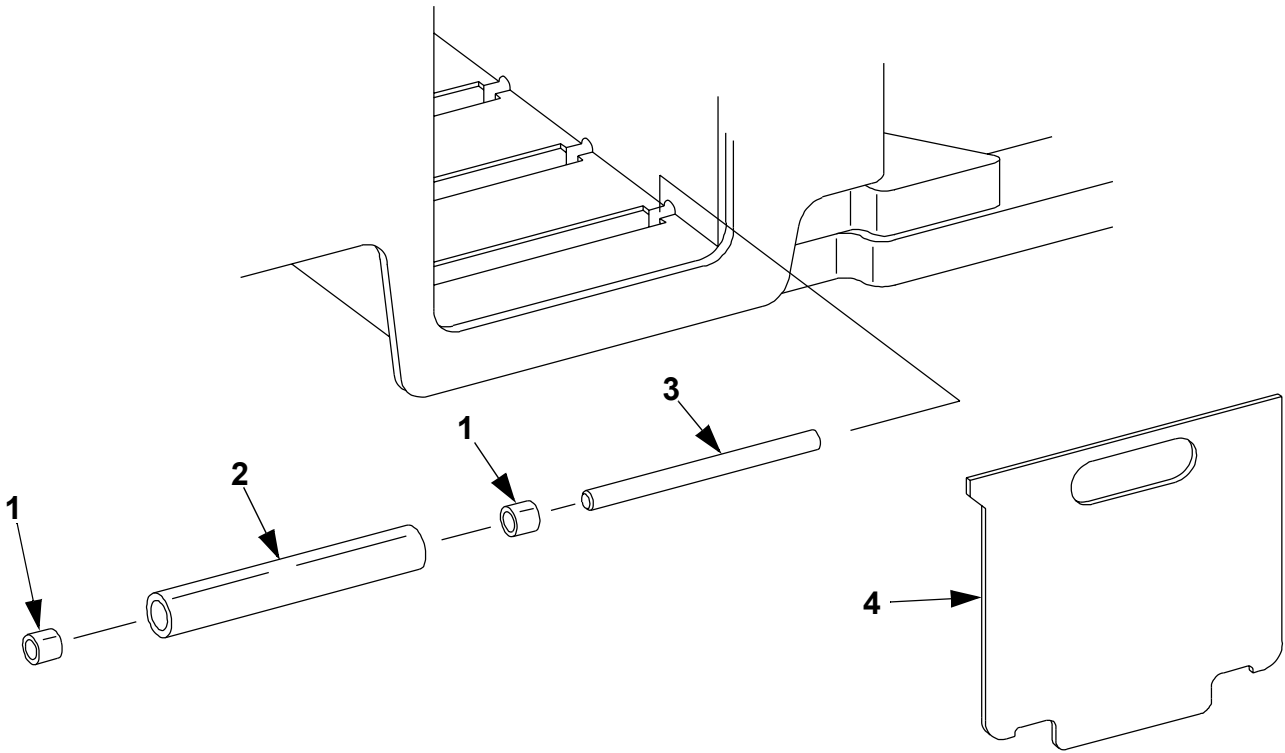


0850-000


0850-000

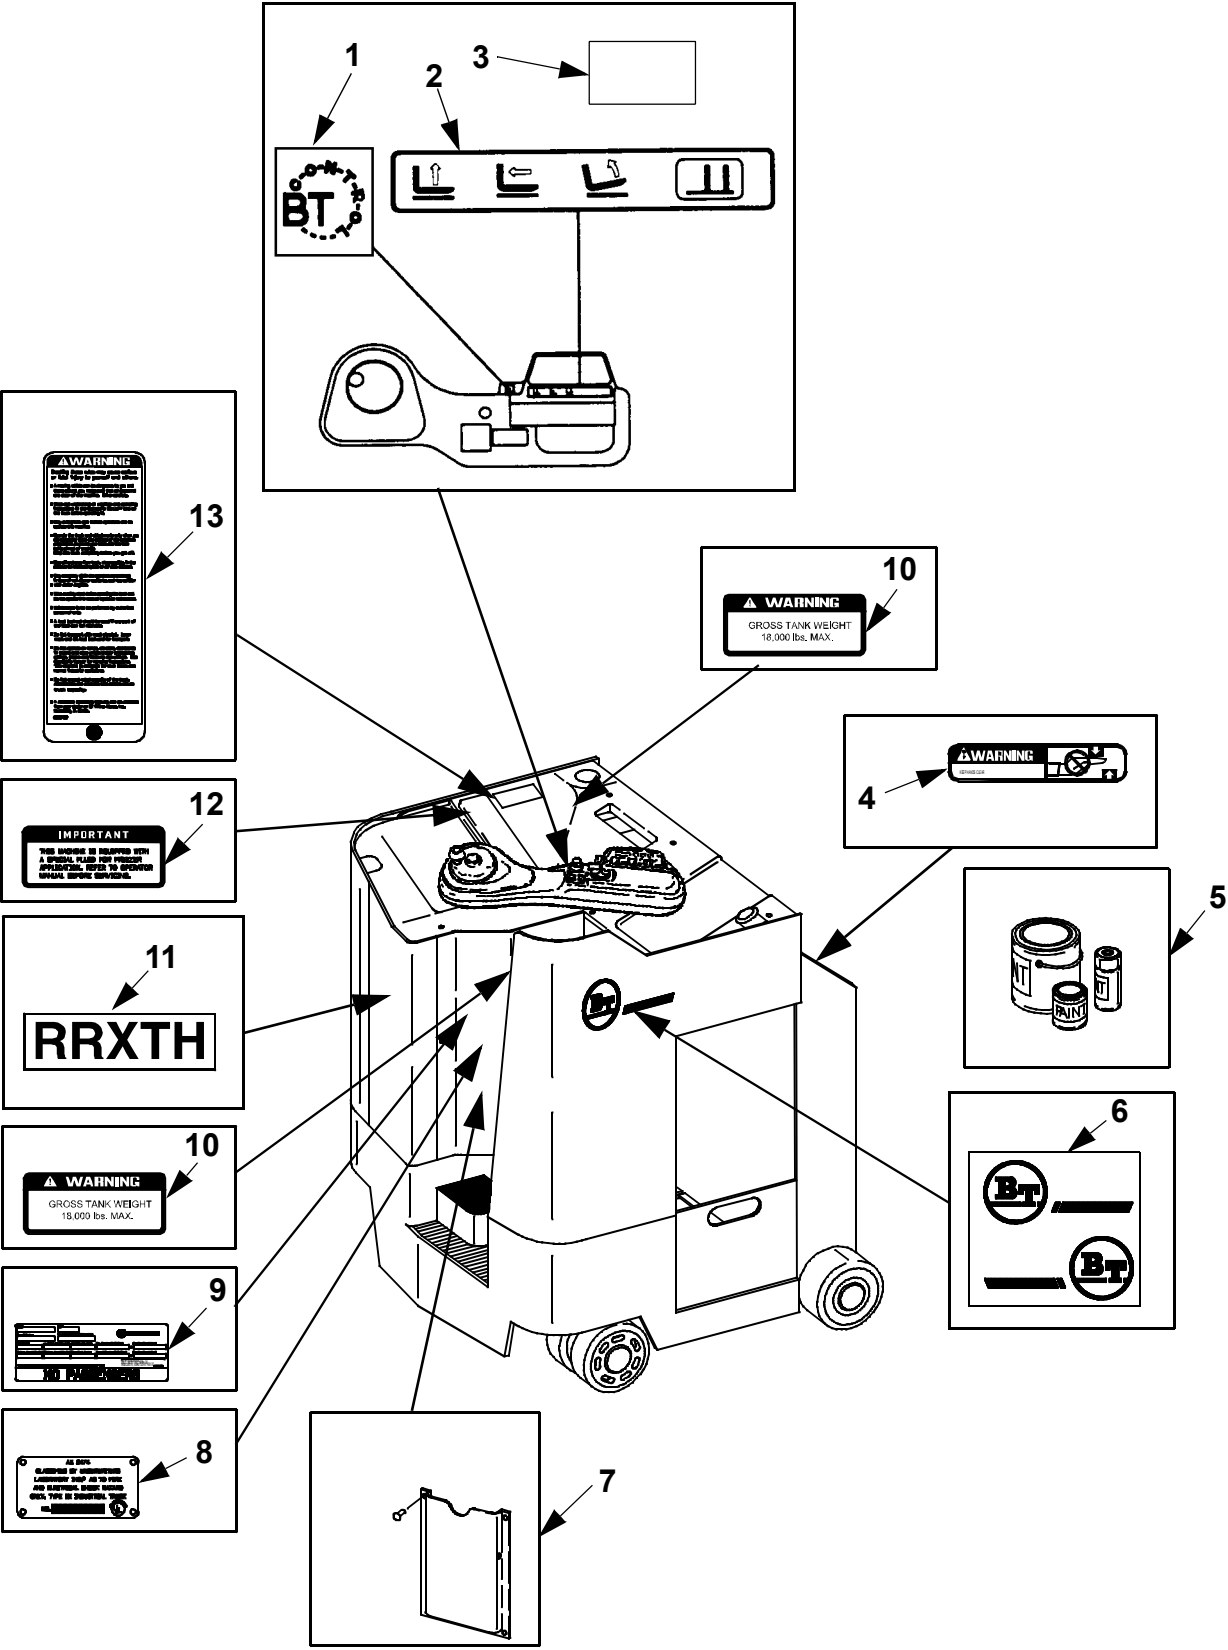


1760-000

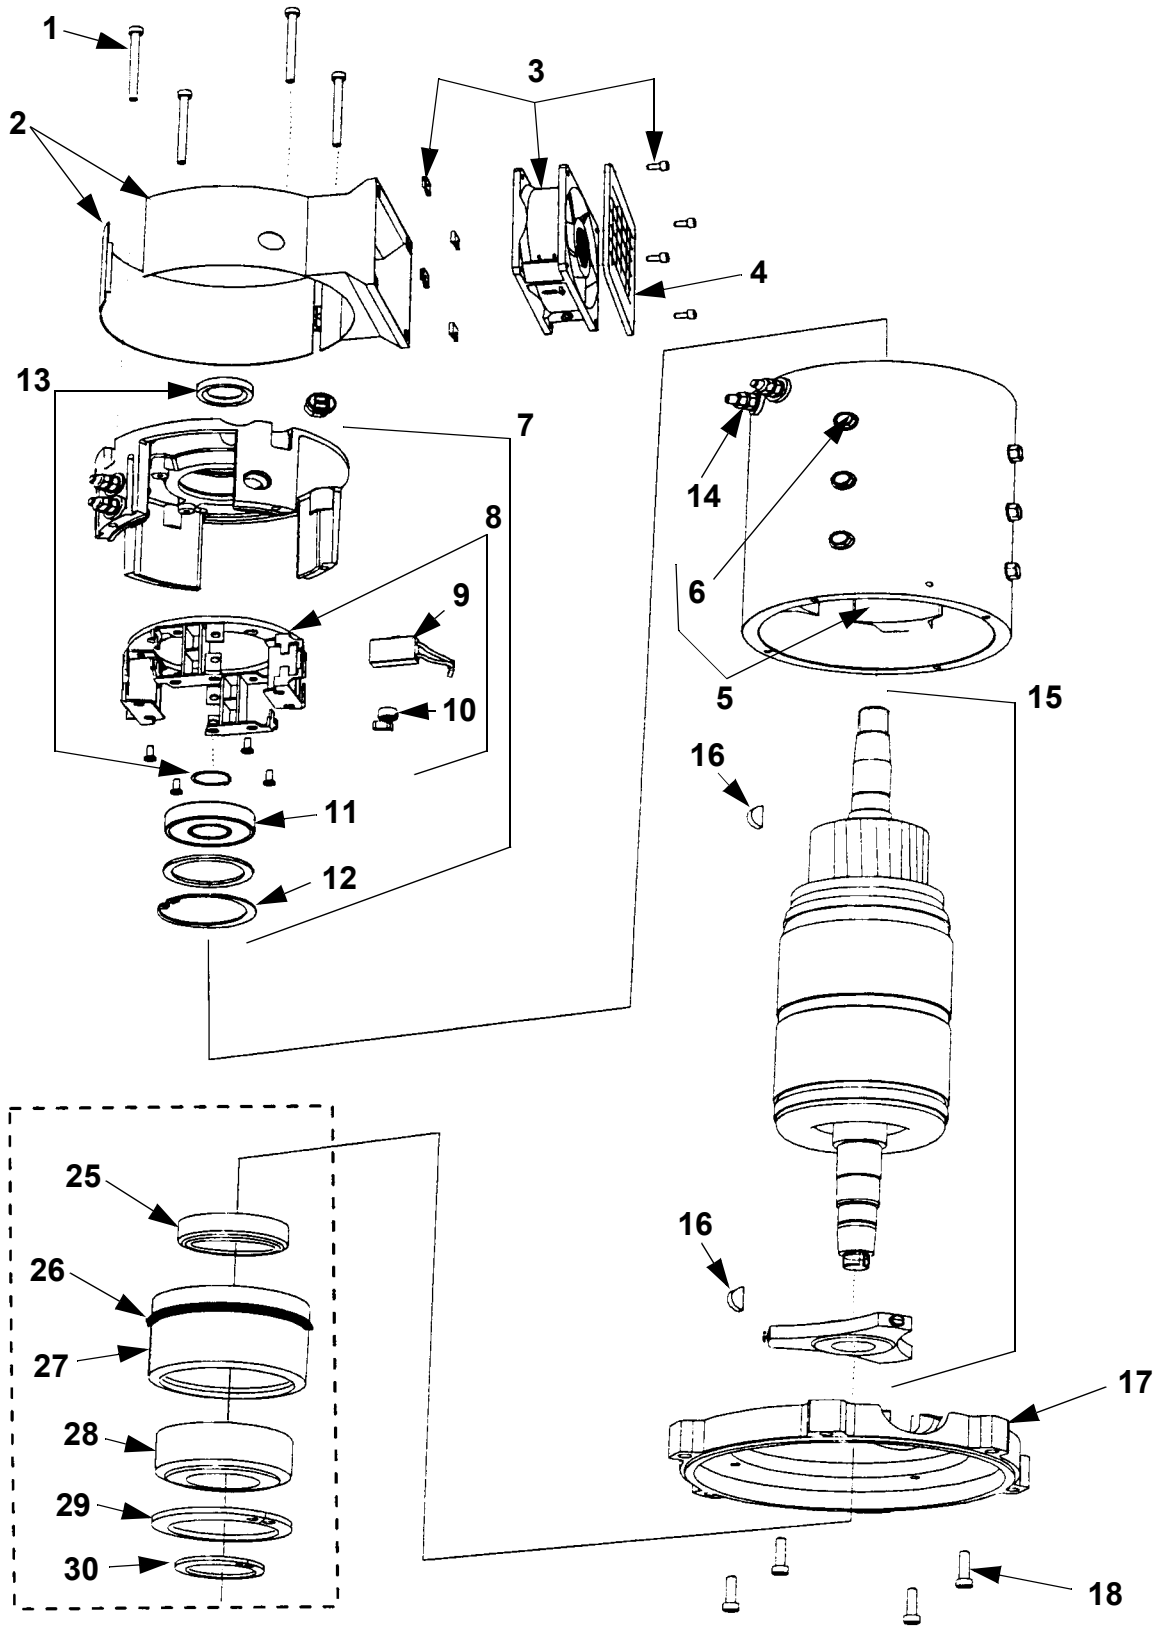

3371-000


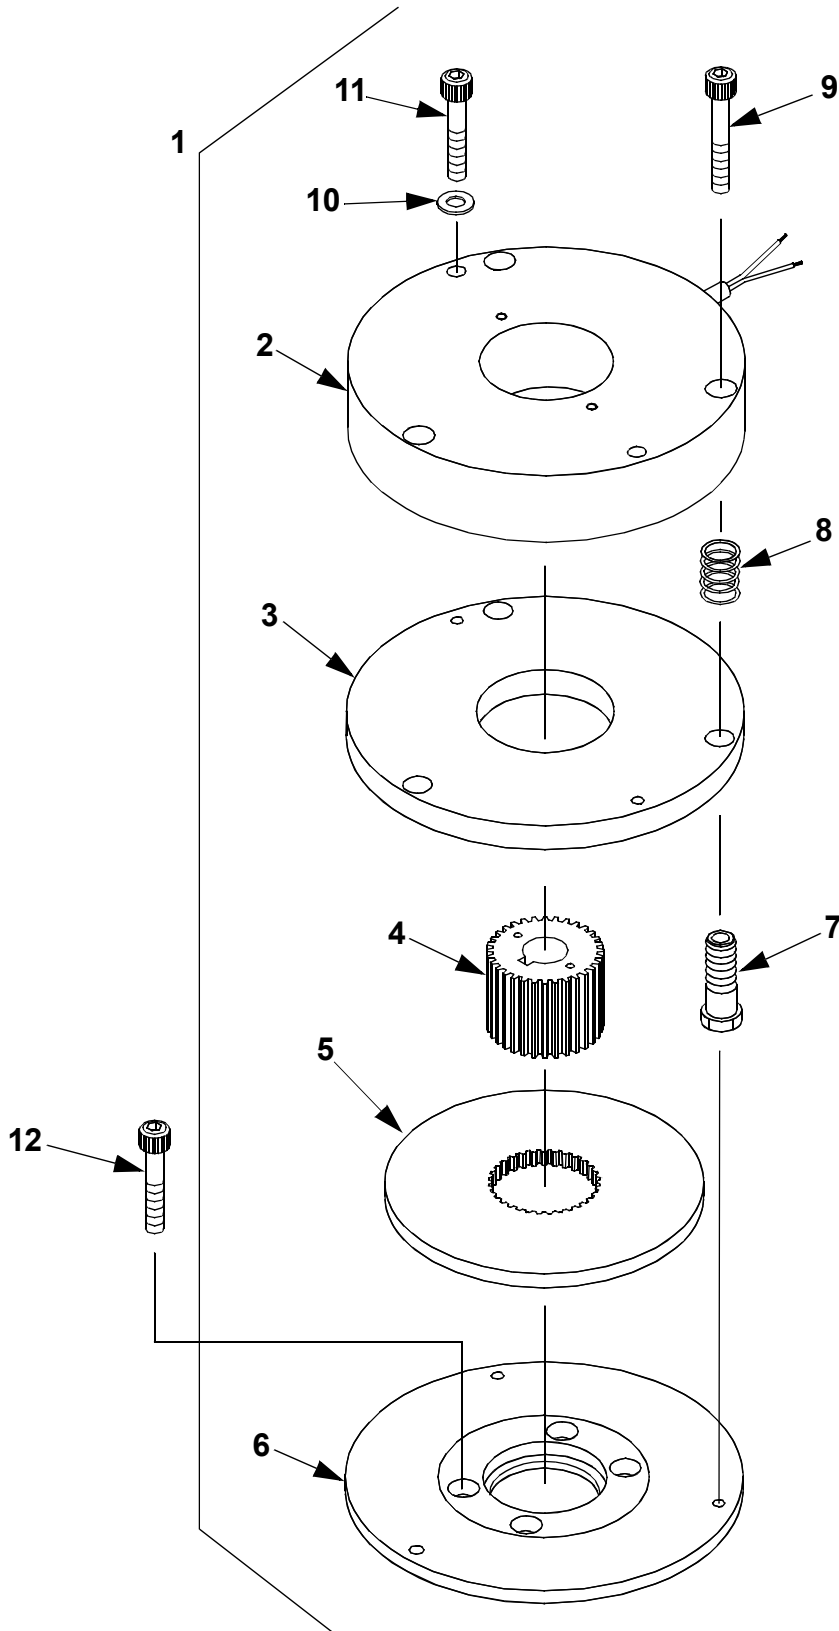


3561-000


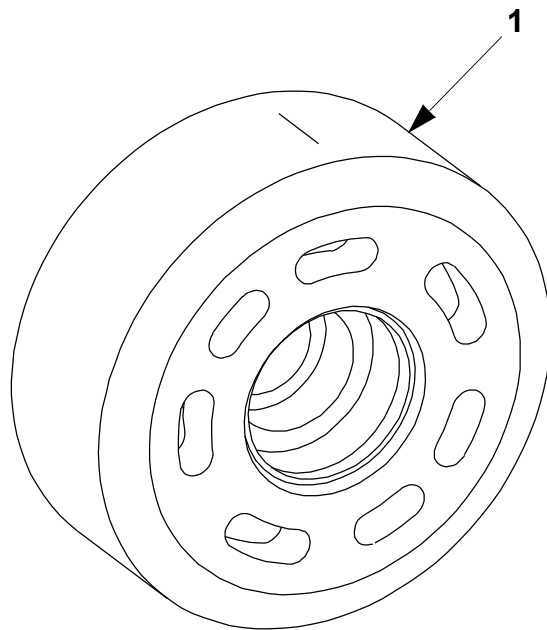


This page intentionally left blank

5201-000

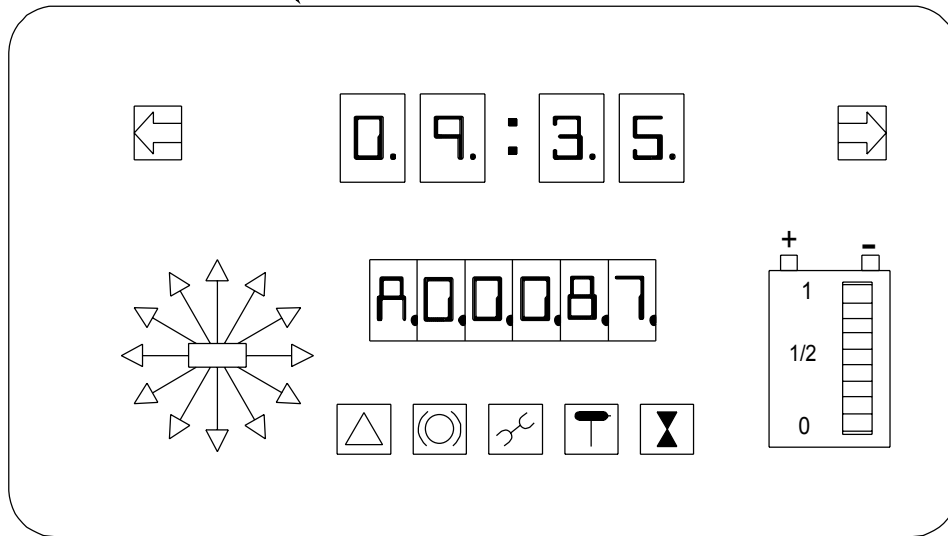


5391-000

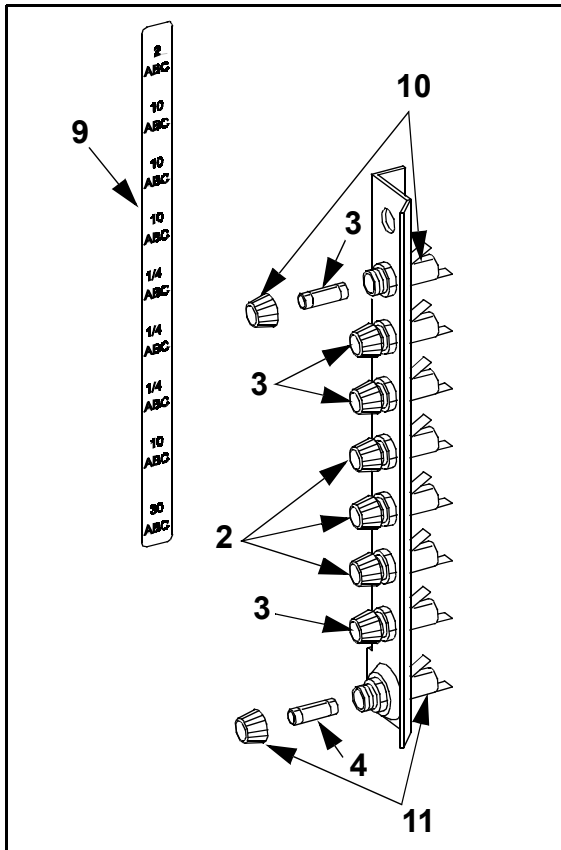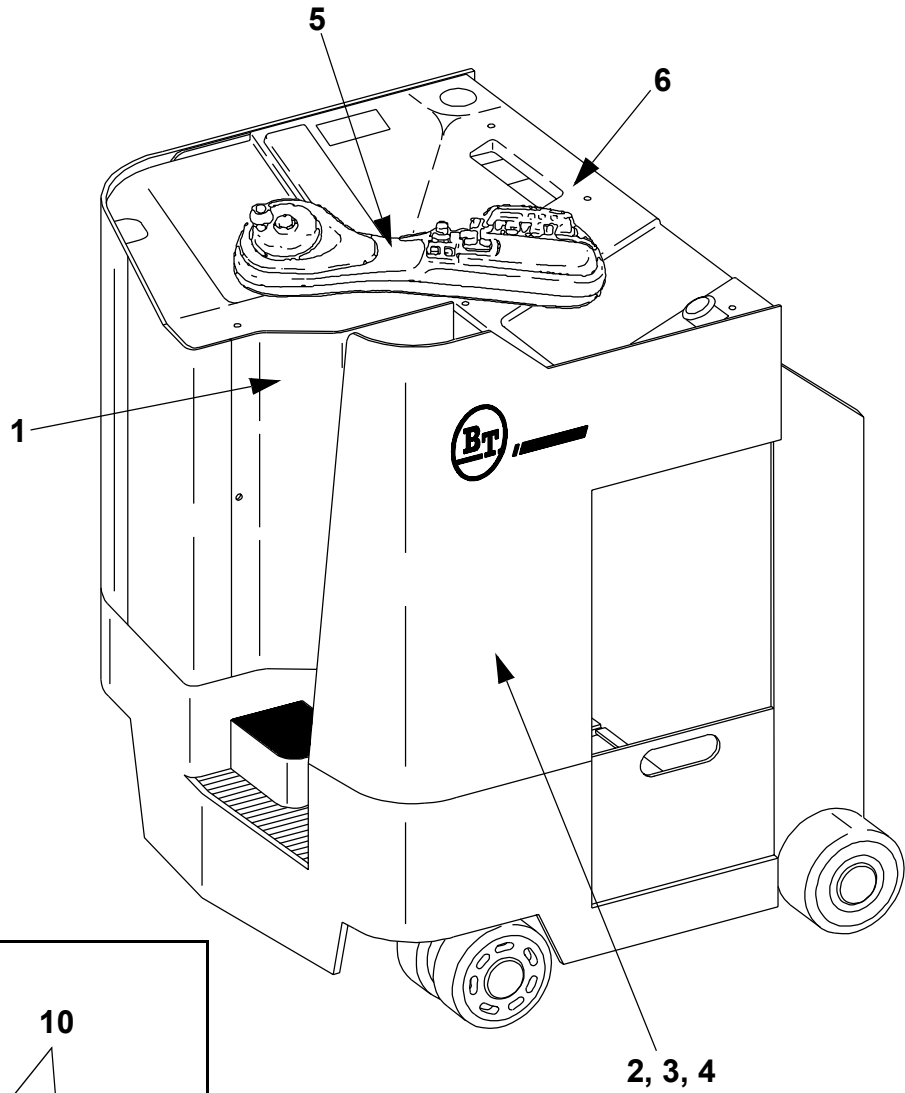

5461-001

Serial Number
31155001 - UP

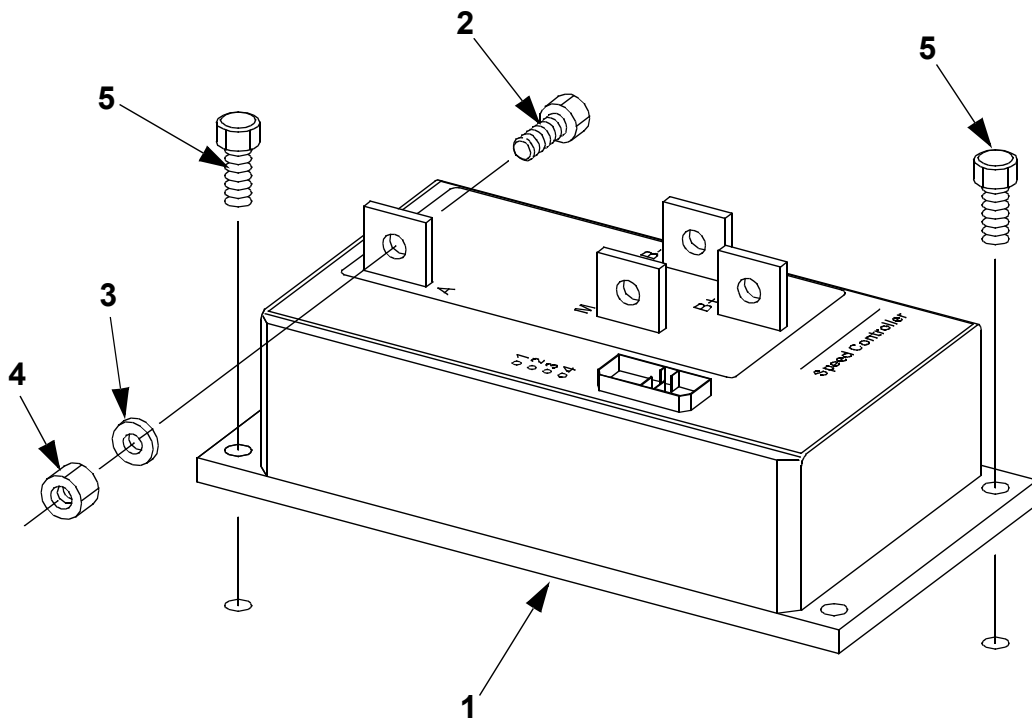

This page intentionally left blank

This page intentionally left blank

This page intentionally left blank

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL