

PARTS MANUAL
for
RT-700F
ROUGH TERRAIN FORKLIFT

Effective with All Models

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

**STEER AXLE INSTALLATION (2WD)
RT-700F SERIES**

01

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59988568	-Cap	2	27	95081808	-Washer, Lock (3/4)	2
2	59306258	-Sleeve	2	28	95077822	-Nut (3/4-10)	2
3	59988527	-Hub	2	29	95216677	-Nut (7/8-14)	2
-	58824046	-Cup (Inner)	1	-	95267688	-Nut (7/8-14) (RT-708F)	1
-	58824053	-Cup (Outer)	1	32	59309948	-Washer	1
4	59306241	-Seal	2	33	95108072	-Nut, Slotted (3/4-16)	1
5	59309898	-H.H.C.S. (3/4-16 x 3.0" lg.)	1	34	59309955	-Washer, Spindle	2
6	59988808	-Cone, Bearing (Inner)	2	35	59309492	-Nut, Slotted (1.12-12)	2
7	95200077	-Pin, Cotter (.125 x 1.25)	4	36	95201281	-Fitting, Grease	2
8	95093399	-Pin, Cotter (.187 x 2.0)	2	37	59989848	-Bushing, Split	1
9	95201281	-Lube, Ftg. (.125-27)	4	38	59989855	-Bushing, Split	1
10	59992289	-Axle, Steer	1	39	59371682	-Pin	1
11	95223996	-Ring, Retaining	2	40	59989434	-Knuckle, R.H. (sitting in operator's seat facing in forward direction of travel) (RT-705F, RT-706F and RT-708F) (Effective with S/N 5500)	1
12	95209490	-Pin, Dowel (1/2 x .75)	2	-	59989483	-Knuckle, R.H. (sitting in operator's seat facing in forward direction of travel) (RT-705F and RT-706F) (Prior to S/N 5500)	1
13	59309922	-Plug, Expansion	4	-	59989426	-Knuckle, R.H. (sitting in operator's seat facing in forward direction of travel) (RT-708F) (Prior S/N 5500)	1
14	59332486	-Steering Cylinder (See Breakdown) (Quantity is 2 for RT-708F)	1	43	59329359	-Hose Assembly (RT-705F and RT-706F) (Quantity was 1 prior to S/N 5500)	2
15	59988519	-Tie Rod Assembly (See Breakdown)	1	44	59329342	-Hose Assembly (RT-705F and RT-706F) (Prior to S/N 5500)	1
16	59971267	-Steer Cylinder End (Quantity is 2 for RT-708F)	1	43	59922864	-Fitting, 90° (6 ORS x 6 ORB)	1
17	59989467	-Knuckle, L.H. (sitting in operator's seat facing in forward direction of travel)	1	44	59919670	-Fitting, Str. (6 ORS x 6 ORB) (RT-705F and RT-706F)	1
18	59306274	-Pin, King	2	45	59918532	-Tee, Run (6 ORS x 6 ORB) (RT-708F)	2
19	59309880	-Retainer	2	46	59329367	-Hose Assembly (RT-708F)	1
20	59309930	-Washer	2	47	59921056	-Fitting, 90° (6 ORS x 6 ORB) (RT-708F)	1
21	59309484	-Pin, Cotter (.13 x 4.0)	2	-	-	-	-
22	59989863	-Bushing, Split	2	-	-	-	-
23	59988816	-Cone, Bearing (Outer)	2	-	-	-	-
24	59309989	-Washer, Thrust	2	-	-	-	-
25	59309997	-Washer, Thrust	2	-	-	-	-
26	95079588	-H.H.C.S. (3/4-10 x 4.5" lg.)	2	-	-	-	-

AXLE HOUSING - INTERNAL BREAKDOWN


NOTE: This Assembly is part of Steer Drive Axle (59416669)

RT-700F SERIES

07

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59402909	-Track Rod, R.H.	1	7	58844390	-Washer	1
-	59402917	-Track Rod, L.H.	1	8	58844408	-Bushing	1
2	59402925	-Axial Joint Assembly	2	9	59402818	-Plug, Screw	1
3	59402958	-Clamping Assembly	2	10	59402834	-Plug, Screw	1
4	58844416	-Ball Joint Assembly with Pipe, R.H. (Effective with S/N 5648)	1	11	59402826	-O-Ring	1
-	59402933	-Ball Joint Assembly with Pipe, R.H. (Prior to S/N 5648)	1	12	59402842	-O-Ring	1
-	58844424	-Ball Joint Assembly with Pipe, L.H. (Effective with S/N 5648)	1	13	59402891	-Valve, Vent	1
-	59402941	-Ball Joint Assembly with Pipe, L.H. (Prior to S/N 5648)	1	14	59402883	-Seal, Shaft	2
5	58844432	-Nut, Castle (Effective with S/N 5684)	2	15	59402875	-Bushing	2
-	59402974	-Nut, Castle (Prior to S/N 5648)	2	16	59399980	-Screw, Locking	12
6	59402966	-Pin, Cotter	2	-	59399998	-Screw Locking	2
				17	59402800	-Bushing	2
				18	59399972	-Axle Casing	1
				19	59402867	-Ring, Retaining	2
				20	59402859	-Shaft, Stub	2


RT-700F SERIES PARTS MANUAL

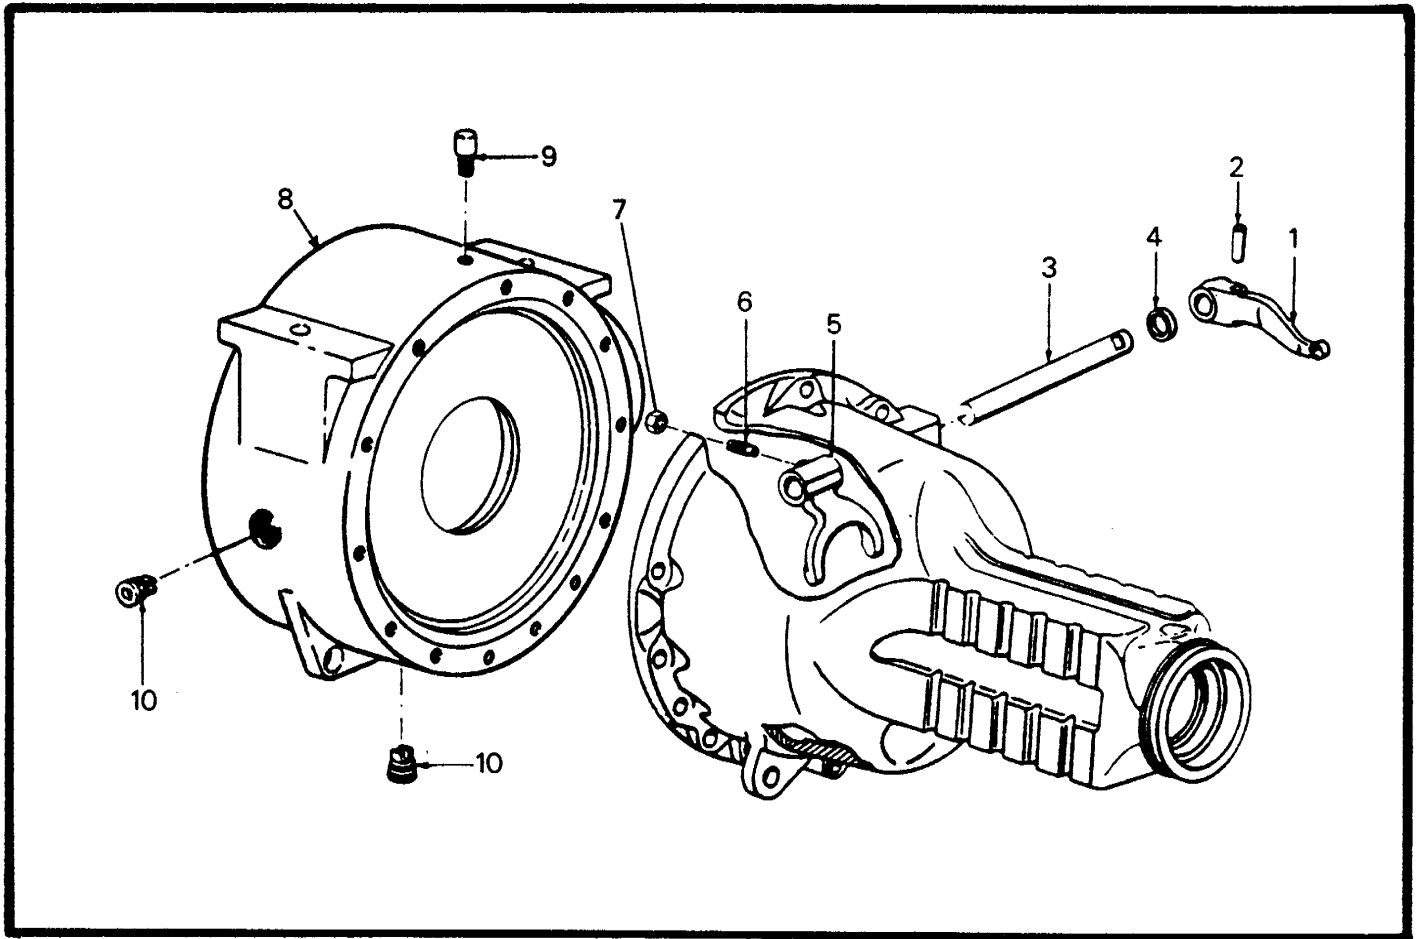

DRIVE AXLE - INTERNAL BREAKDOWN DIFFERENTIAL CENTER HOUSING AND LOCK RT-700F SERIES

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59381996	-Lever, Differential Lock Operating	1	6	59382044	-Screw, Differential Lock Fork (3/8-24)	1
2	59382002	-Pin, Lever to Shaft Locking	1	7	58845447	-Nut (3/8-24) (Fork to Rail)	1
3	59382010	-Shaft, Differential Lock Lever	1	8	59382051	-Housing, Axle Differential Center	1
4	59382028	-Seal, Differential Lock Lever Shaft (29.21 mm O.D.)	1	9	59382069	-Plug, Differential - Breather	1
5	59382036	-Fork, Rear Axle Differential Lock	1	10	59382077	-Plug, Magnetic	2

**RT-700F SERIES
PARTS MANUAL**

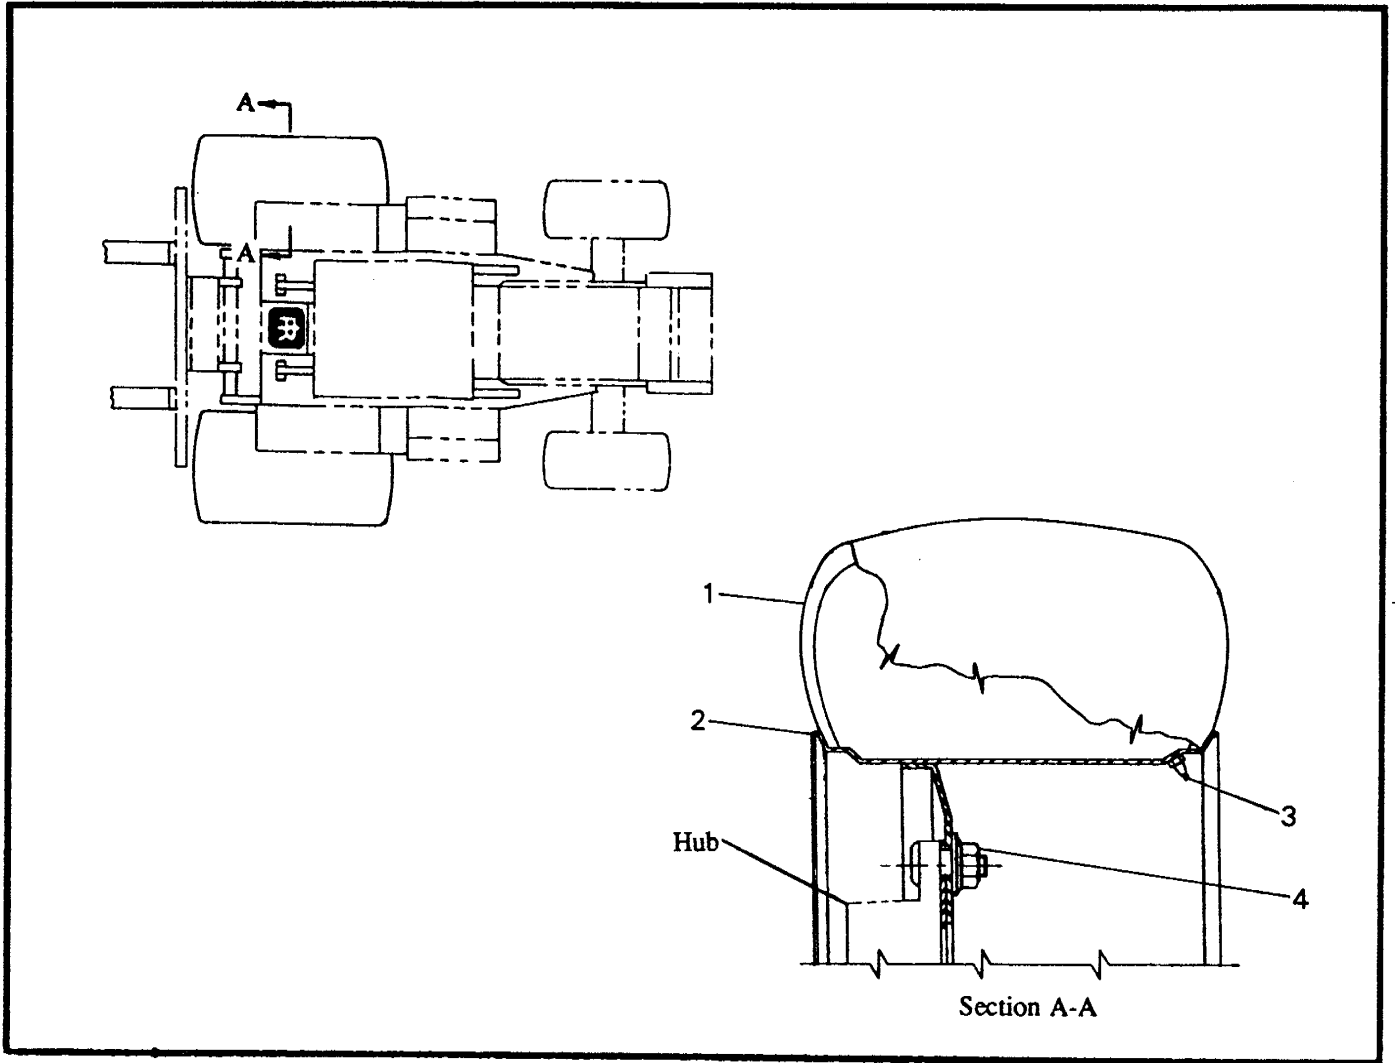


**TERRA TIRE ASSEMBLY
RT-705F**

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59329920	-Nut, Wheel	16	3	59392779	-Wheel	2
2	59392738	-Tire, Terra (54-31.00-26)	2	4	59524447	-Valve	2

18

RT-700F SERIES PARTS MANUAL

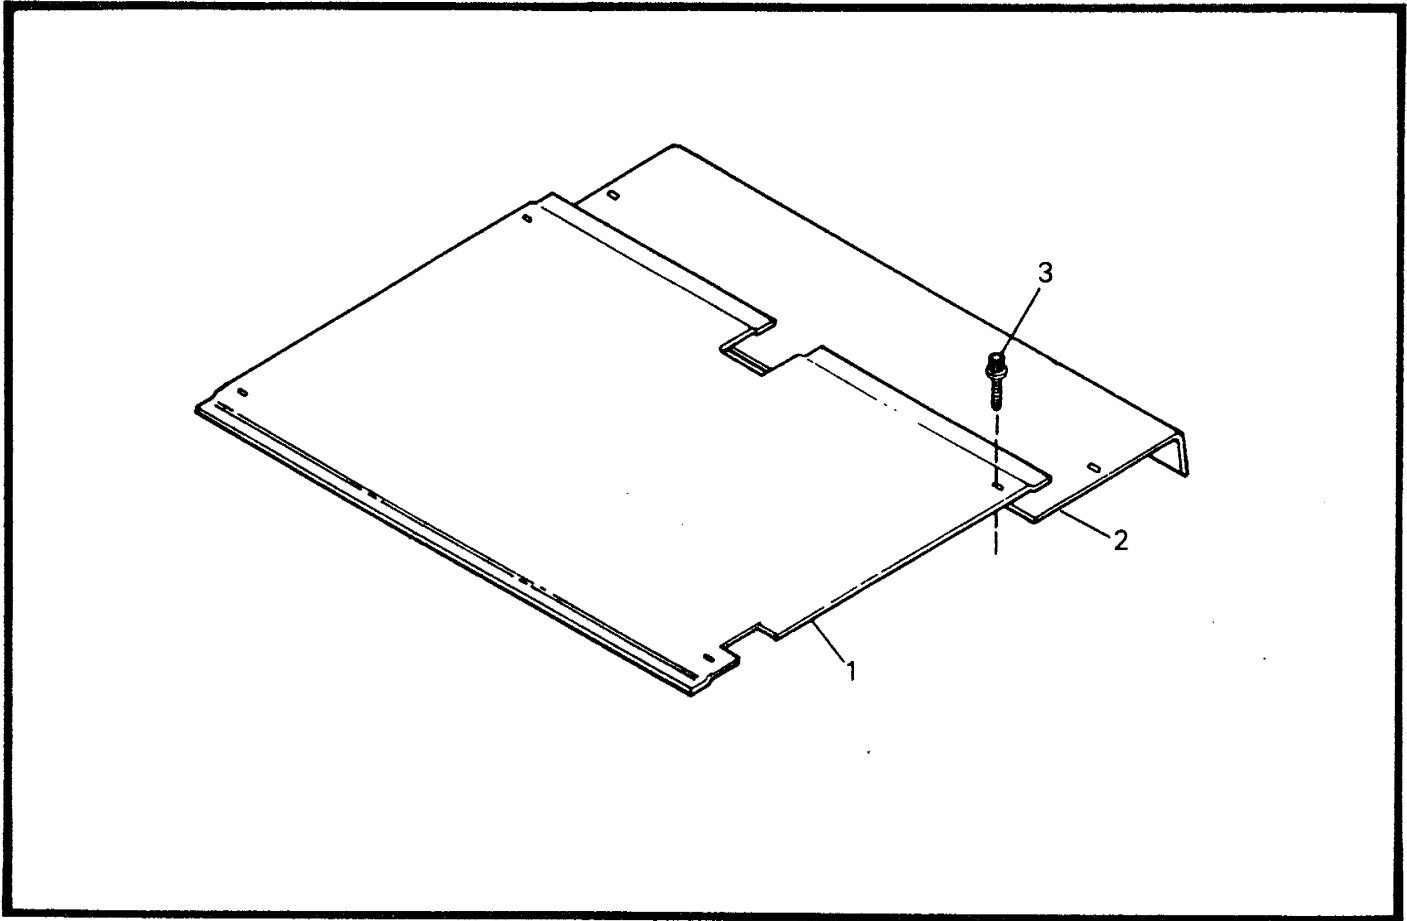

PLATFORM INSTALLATION RT-700F SERIES

27


ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59998112	-Plate, Floor, Front	1	3	59998096	-Screw, Self-Tapping (3/8-16)	6
2	59998104	-Plate, Floor, Rear	1			-----	

**SAF-T-CAB ENCLOSURE KIT (59397570) - INTERNAL BREAKDOWN
RT-700F SERIES**

30A

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	58844622	-Roof Panel Assembly	1	17	58844572	-Cylinder Boot Mount	4
2	95475505	-Bolt (3/8-16 UNC x 1 1/2" lg.)	28	18	58844606	-Control Box	1
3	95081857	-Washer, Lock (3/8)	42	19	58844598	-Control Box Mount	2
4	95077764	-Nut (3/8-16)	36	20	58844762	-Windshield Wiper Blade (22" lg.)	1
5	58844655	-Rear Panel Assembly	1	21	58844770	-Windshield Wiper Arm	1
6	95101812	-Bolt (5/16-18 x 1" lg.)	36	22	58844788	-Windshield Wiper Motor (Not Shown)	1
7	95043188	-Washer, Lock (5/16)	36	23	58844671	-Door Handle, Inside	2
8	95077756	-Nut (5/16-18)	36	24	58844689	-Latch Cover	2
9	58844648	-L.H. Side Panel Assembly	1	25	58844697	-Latch	2
10	95297586	-Bolt (3/8-16 UNC x 1" lg.)	6	26	58844705	-Latch Mount (Tube)	2
11	58844556	-Seal, Rubber (1" x 2")	A/R	27	58844713	-Latch Cover Mount	2
12	58844564	-Seal, Rubber (7/16" x 1")	A/R	28	58844721	-Door Handle Mount	2
13	58844663	-Front Panel Assembly	1	29	58844739	-Door Handle (Outside)	2
14	58844630	-R.H. Side Panel	1	30	58844747	-Striker Bolt	4
15	58844580	-Cylinder Boot	2	31	58844754	-Door Holdback Assembly	2
16	58844614	-Cab Mount	2			-----	


RT-700F SERIES PARTS MANUAL

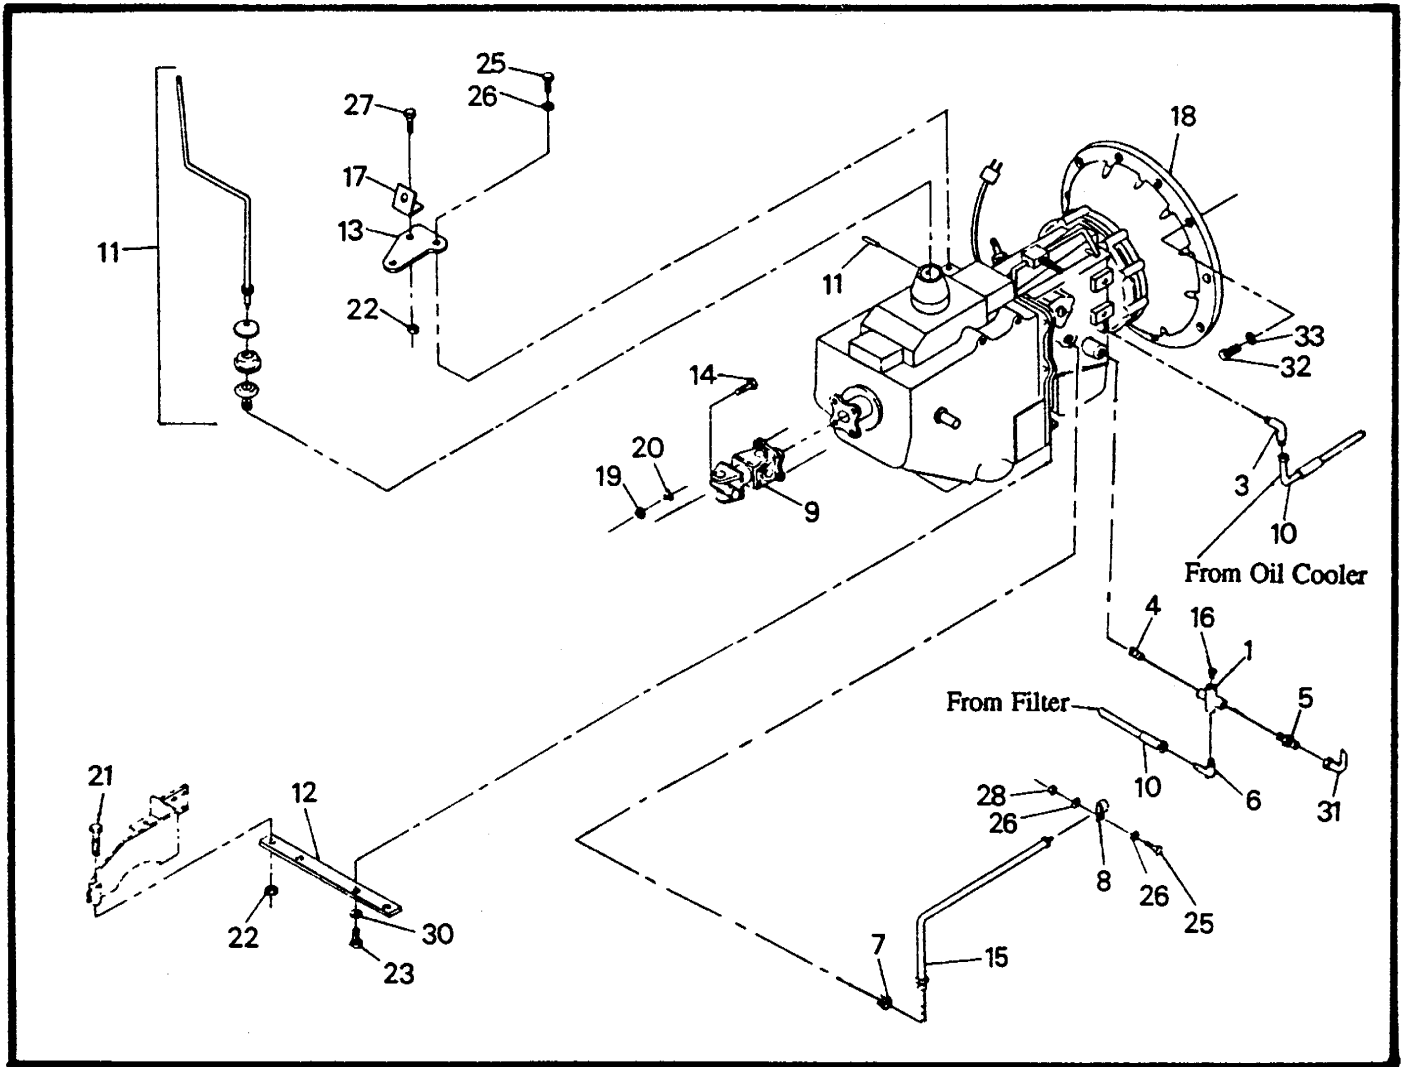

TRANSMISSION INSTALLATION (2WD) RT-700F SERIES

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	95378907	-Cross (1/2 NPT)	1	17	59340315	-Angle, Mounting	1
3	59923342	-Adapter, 90°	1	18	59988774	-Transmission Assembly (See Breakdown)	1
4	95323358	-Nipple (3/4 NPT x 1/2 NPT)	1	19	59329656	-Nut (.44-20)	4
5	59903138	-Adapter, Str. (8 ORS x 8 NPT)	1	20	95081865	-Washer, Lock (.44)	4
6	59903120	-Adapter, 90° (8 ORS x 8 NPT)	1	21	95442422	-Screw, Cap (1/2-13 x 3.5" lg.)	2
7	95219754	-Adapter, Str. (12 NPT x 16 JIC)	1	22	95077574	-Nut, Lock (1/2-13)	3
8	95654208	-Clamp (1.00)	1	23	95462750	-Screw, Cap (1/2-13 x 1.5" lg.)	2
9	59988634	-Drive Shaft (See Breakdown)	1	25	95430534	-Screw, Cap (3/8-16 x 1.25" lg.)	3
10	59331439	-Hose Assembly	2	26	95069597	-Washer, Lock (3/8)	2
11	59997718	-Control Lever Kit	1	27	95297602	-Screw, Cap (1/2-13 x 1.25" lg.)	1
-	59383679	-Washer, Spring	1	28	95077558	-Nut (1/2-13)	1
-	59383687	-Spring, Control Lever	1	30	95064697	-Washer, Flat (1/2)	2
-	59383661	-Cover, Dust	1	31	59371559	-Hose Assembly	1
12	59311654	-Support, Crossmember	1	32	59571794	-H.H.C.S. (M10 x 1.50 x 30)	12
13	59311662	-Plate, Bellcrank	1	33	59546291	-Washer, Flat (M10)	12
14	59307074	-Bolt, Flange (.44-20)	4	34	59306290	-Knob, Transmission (4-Speed, Engraved)	1
15	59306282	-Dipstick	1	-	59341727	-Knob, Transmission (3-Speed, Engraved)	1
16	59497867	-Switch, Transmission Oil Temperature (Effective with S/N 5605)	1	-	59340117	-Knob, Transmission (For use with inlay 59377648)	1
-	59971291	-Switch, Transmission Oil Temperature (Prior to S/N 5605)	1	-	59377648	-Knob Inlay (Use with 59340117)	1

RT-700F SERIES PARTS MANUAL

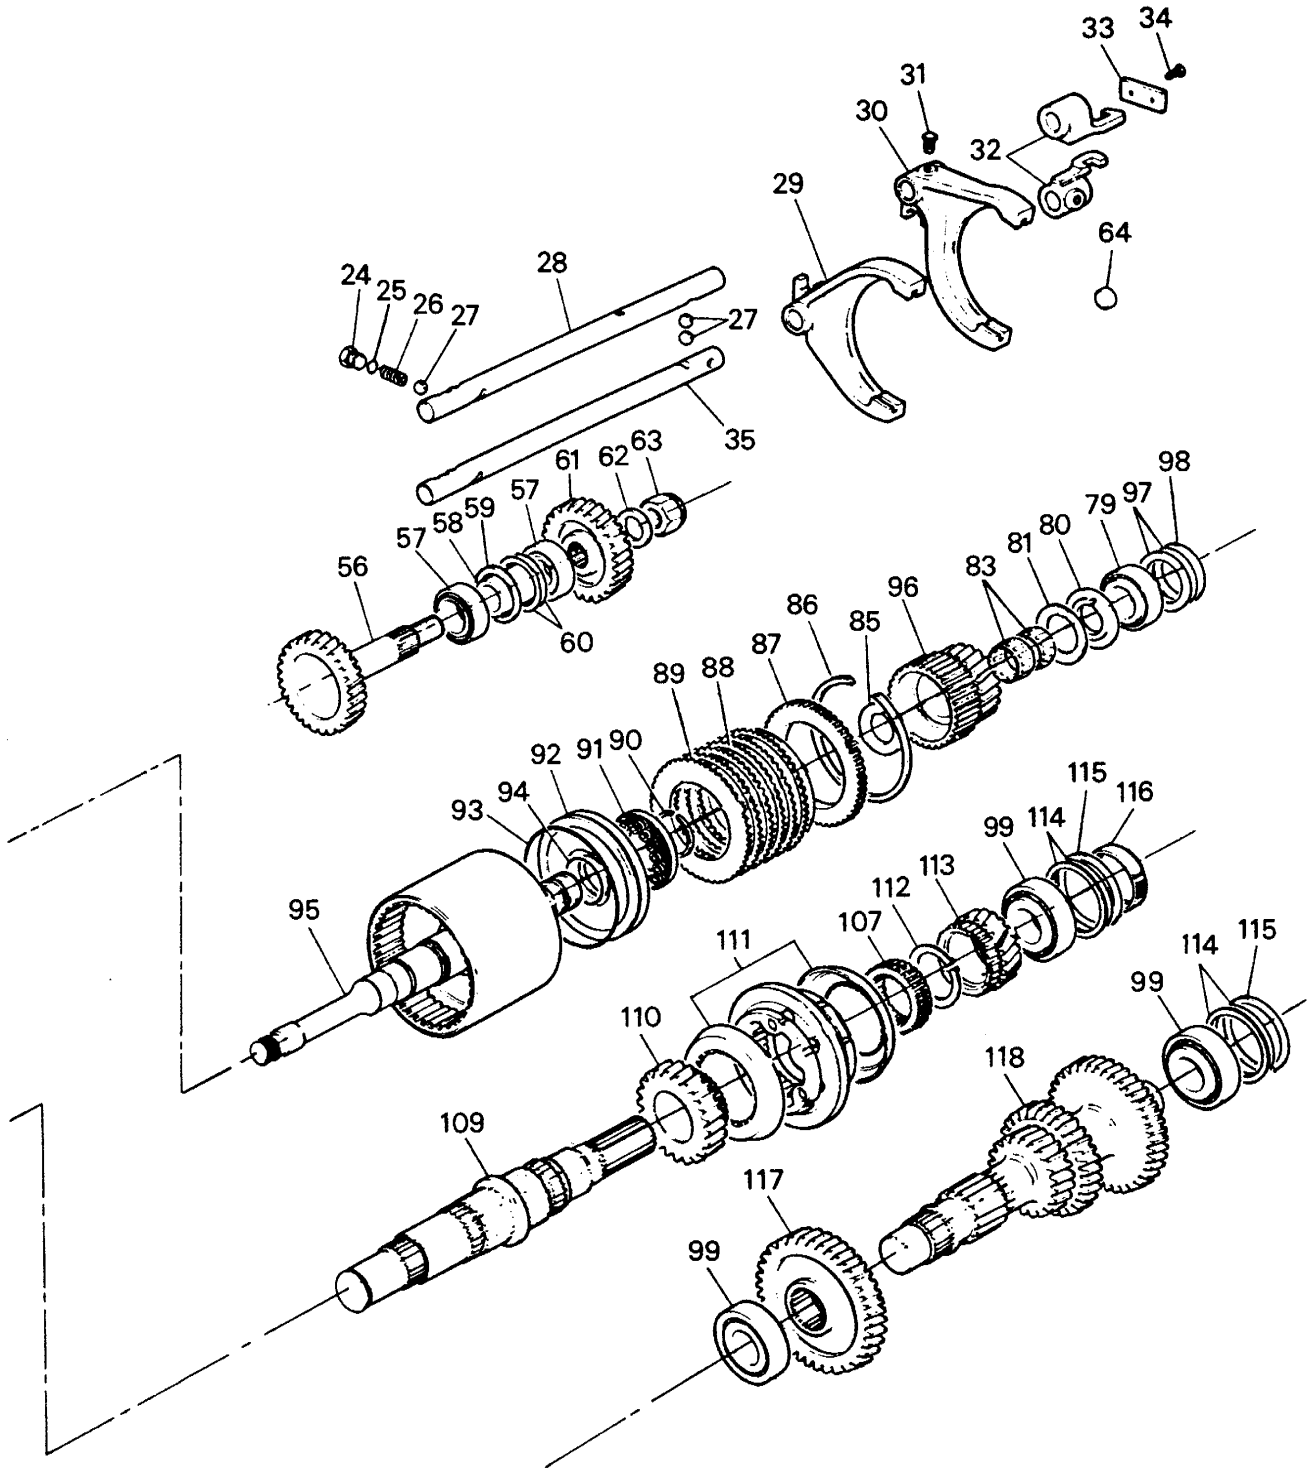

TRANSMISSION ASSEMBLY (59347567) - INTERNAL BREAKDOWN

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL



- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

RT-700F SERIES PARTS MANUAL

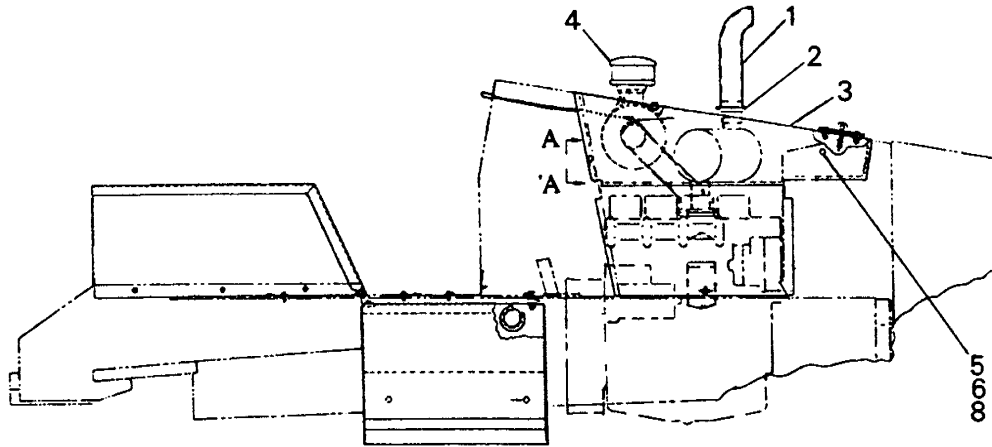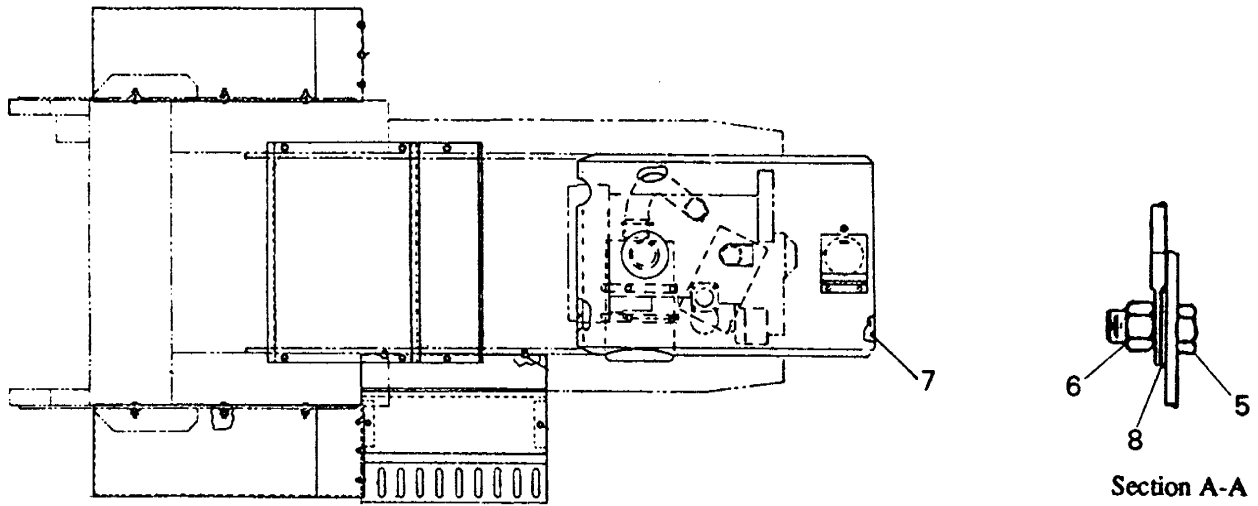


HOOD AND EXHAUST EXTENSION INSTALLATION RT-700F SERIES

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59988170	-Extension	1	-	59993378	-Plastic Bowl	1
2	59629857	-Clamp (4")	1	5	59680983	-Bolt (.375-16 x 1.0" lg.) (4WD)	4
3	59362376	-Hood (4WD)	1	6	95923223	-Nut, Lock	4
-	59996330	-Hood (2WD)	1	7	59998468	-Weatherstrip	1
4	59988097	-Precleaner Assembly	1	8	95922233	-Washer, Flat	4

46

RT-700F SERIES PARTS MANUAL

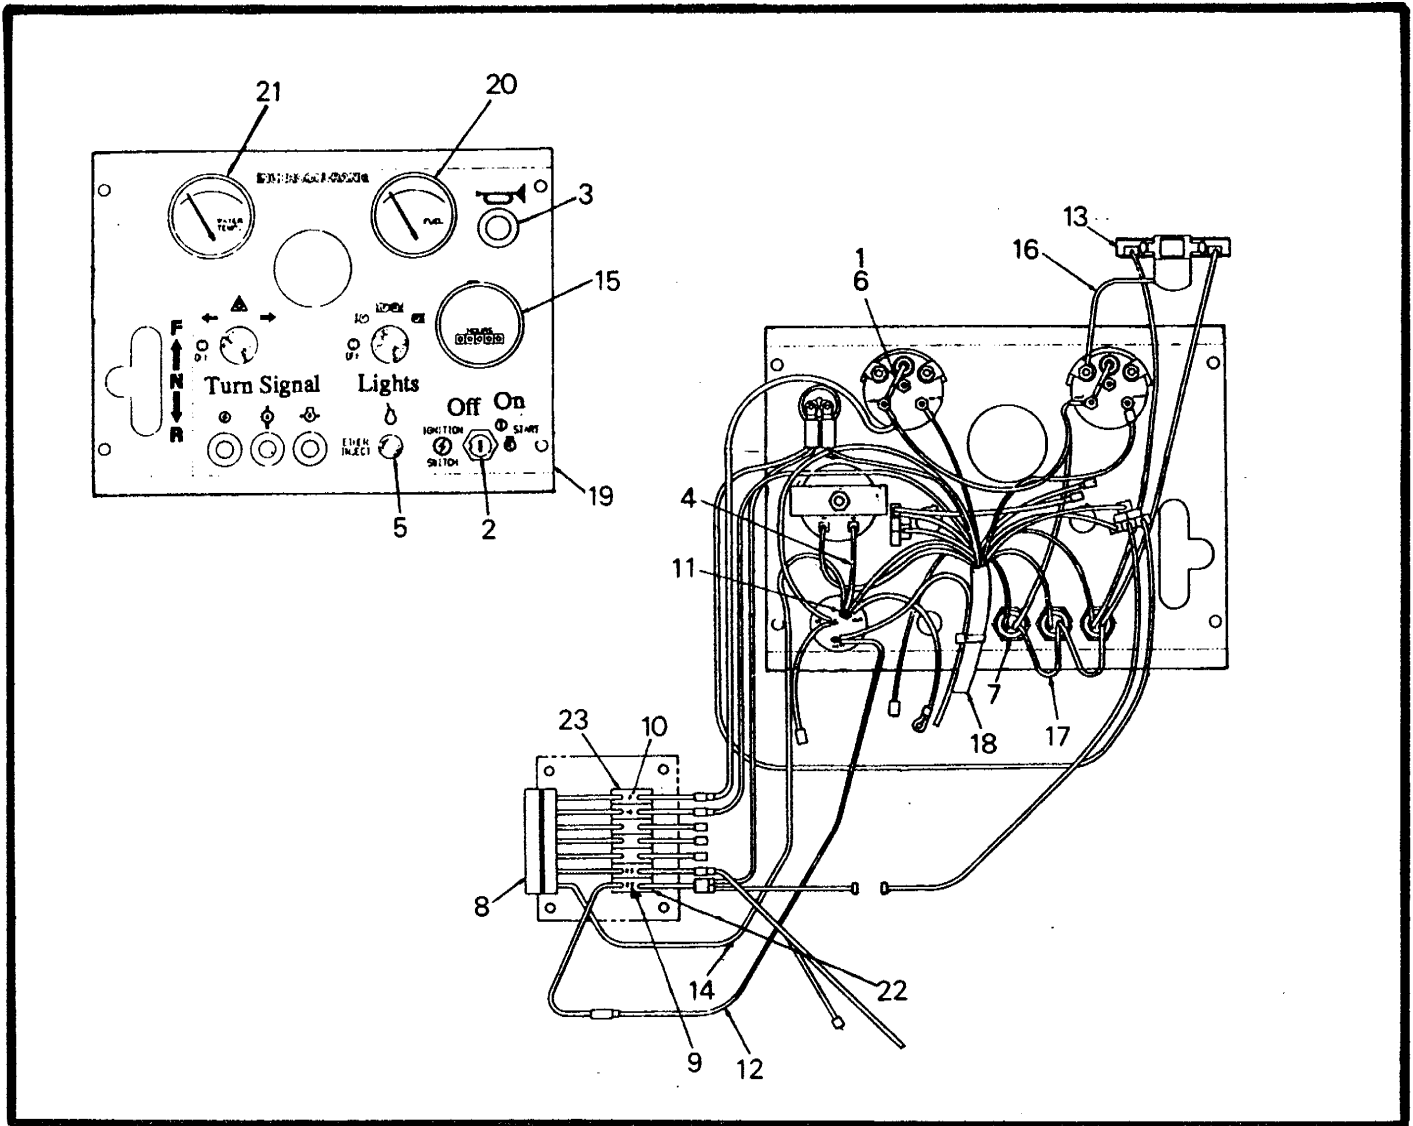

INSTRUMENT PANEL ASSEMBLY RT-700F SERIES


ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	95365615	-Terminal, Ring	2	13	59989814	-Resistor	1
2	59680140	-Switch, Ignition Start	1	14	59352369	-Wire Assembly	1
-	59502518	-Key (only)	1	15	59989558	-Hourmeter	1
3	59546762	-Button, Horn	1	16	59325639	-Wire Assembly	1
4	59325738	-Wire Assembly	1	17	59325670	-Wire Assembly	1
5	59325696	-Plug	1	18	59392761	-Wire Harness (Effective with S/N 5500)	1
6	59824250	-Light, Gauge	2	-	59325688	-Wire Harness (Prior to S/N 5500)	1
7	59816447	-Light, Indicator	3	19	59988493	-Instrument Panel	1
8	59309773	-Block, Terminal	1	20	59731281	-Gauge, Fuel	1
9	59325720	-Fuse (25 amp)	2	21	59816728	-Gauge, Water Temperature	1
10	59325712	-Fuse (10 amp)	2	22	59325761	-Fuse Holder	1
11	95073953	-Screw (8-32 x .50" lg.)	1	23	59325753	-Fuse Holder	6
12	59325654	-Wire Assembly	1			-----	

**4-SECTION CONTROL VALVE ASSEMBLY (59340109) - INTERNAL BREAKDOWN
RT-700F SERIES**

57

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59386805	BOLT KIT (Consists of 3 bolts and 3 nuts)	1	39	50668391	-O-Ring	1
2	59386813	-O-Ring, Exhaust (Large) (2 per section)	8	40	50842525	-O-Ring	1
-	59386821	-O-Ring, Pressure (Small) (2 per section)	8	41	50842517	-Ring, Backup	2
3	59386839	-Cover Plate Assembly (Left End) (Includes Items 4, 5 thru 19)	1	42	50668391	-O-Ring	1
4	N.S.S.	-Plate, Left End Cover	1	43	N.S.S.	-Body, Relief	1
5	59386847	-Relief Valve Assembly (Includes Items 6 thru 18)	1	44	50842491	-Ring, Backup	1
6	N.S.S.	-Body, Relief	1	45	50842509	-O-Ring	1
7	N.S.S.	-Ring, Backup	1	46	59387043	-Shim (.500 O.D. x .0418 Thick)	A/R
8	N.S.S.	-O-Ring	1	47	59387050	-Shim (.500 O.D. x .0209 Thick)	A/R
9	N.S.S.	-O-Ring	1	48	50668367	-Shim (.500 O.D. x .0097 Thick)	A/R
10	59386862	-Spring	1	49	N.S.S.	-Poppet	1
11	59386870	-Poppet	1	50	59387076	-Spring	1
12	N.S.S.	-O-Ring	1	-	57153595	-Seal Kit (Includes Items 39, 40, 41, 44 and 45)	1
13	59386888	-Nut, Acorn (.375-24)	1	51	59387118	-Spool Seal Retainer Assembly (Includes Items 52 and 53)	1
14	N.S.S.	-O-Ring	1	52	50980572	-Plate, Seal Retainer	1
15	59386896	-Piston, Relief	1	53	59387126	-S.H.C.S. (.25-20 x .50)	2
16	59383943	-Cap	1	54	59387167	-Spool Seal Assembly (Includes Items 55 thru 57)	2
17	59384297	-Stem, Adjusting	1	55	59387134	-O-Ring	2
18	59386904	-Nut, Hex Jam (.375-24)	1	56	59387142	-Washer	2
-	59386912	-Seal Kit (Includes Items 7, 8, 9, 12 and 14)	1	57	59387159	-Plate, Seal Retainer	2
19	59386854	-Plug	1	58	59387175	-4-Way Section Assembly (Includes Items 59 thru 77)	2
20	59386920	-Cover Plate Assembly (Right End) (Includes Items 21 and 22)	1			<i>NOTE: The quantities for items included with Item 58 are for one section.</i>	
21	N.S.S.	-Plate, Right End Cover	1	59	N.S.S.	-Housing	1
22	59386938	-Plug	1	60	N.S.S.	-Spool	1
23	59387084	-3-Way Section Assembly (Includes Items 24 thru 57) <i>NOTE: The quantities for items included with Item 23 are for one section.</i>	2	61	59386946	-Positioner, Spool (Includes items 27 thru 32)	1
24	N.S.S.	-Housing	1	62	59387183	-Load Check Plug Assembly (Includes Items 63 thru 70)	2
25	N.S.S.	-Spool	1	63	59387191	-Plug	1
26	59386946	-Positioner, Spool (Includes Items 27 thru 32)	1	64	59387209	-Spring	1
27	59386961	-Bonnet	1	65	59387217	-Poppet	1
28	59386979	-S.H.C.S. (.25-20 x .88)	2	66	N.S.S.	-O-Ring	1
29	59386987	-Washer, Lock (.25 I.D.)	2	67	N.S.S.	-Ring, Backup	1
30	59386995	-Collar, Spool	1	68	N.S.S.	-O-Ring	1
31	59387001	-Collar, Spring	2	69	N.S.S.	-Ring, Backup	1
32	59387019	-Spring	1	70	N.S.S.	-O-Ring	1
33	59387092	-Plug, Return Port (Includes Item 34)	1	-	59387068	-Seal Kit (Includes Items 66 thru 70)	1
34	59387027	-O-Ring	1	71	59387118	-Spool Seal Retainer Assembly (Includes Items 72 and 73)	1
35	59387100	-Relief Valve Assembly (Includes Items 36 thru 50)	1	72	50980572	-Plate, Seal Retainer	1
36	50842483	-Spring	1	73	59387126	-S.H.C.S. (.25-20 x .5)	2
37	50842475	-Poppet	1	74	59387167	-Spool Seal Assembly (Includes Items 75 thru 77)	2
38	59387035	-Cap, Relief	1	75	59387134	-O-Ring	2
				76	59387142	-Washer	2
				77	59387159	-Plate, Seal Retainer	2

RT-700F SERIES PARTS MANUAL

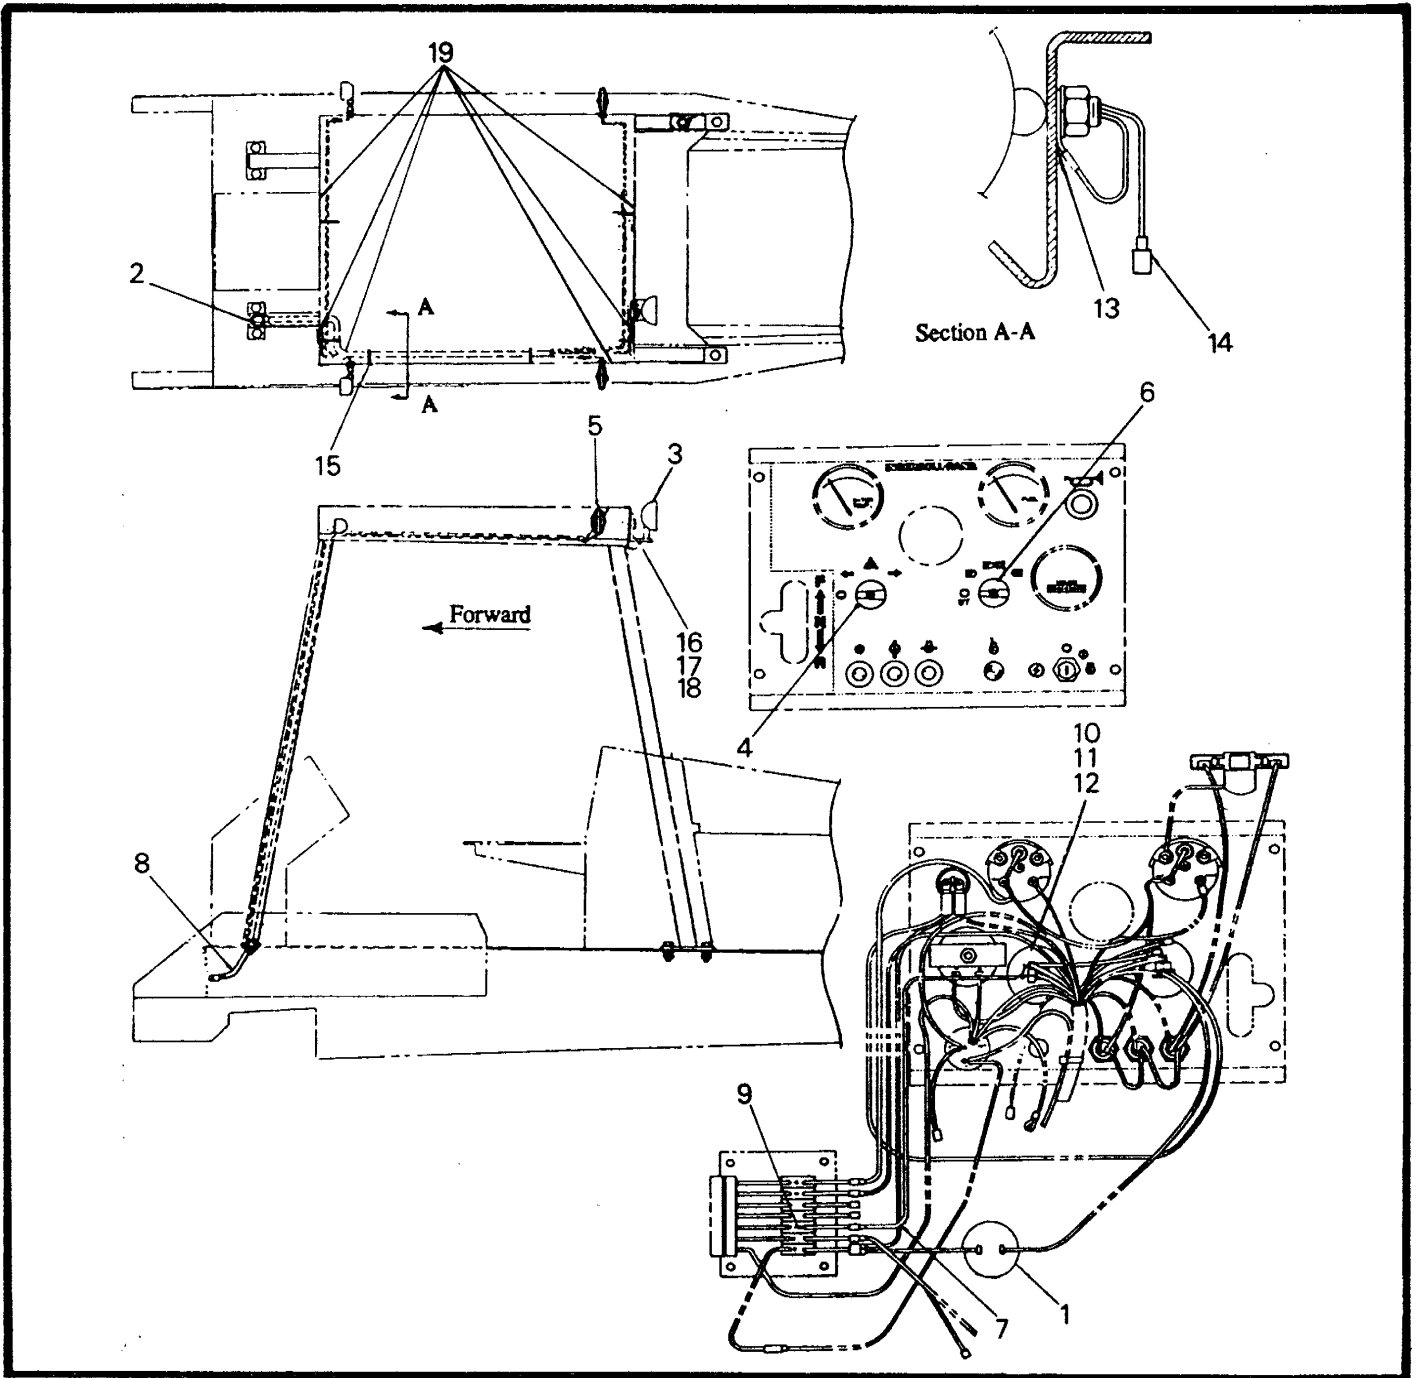

LIGHTS INSTALLATION RT-700F SERIES

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59759720	-Flasher	1	9	59325720	-Fuse (25 amp)	1
2	35895440	-Grommet	1	10	95073995	-Screw (10-24 x .50" lg.)	1
3	59603191	-Light, Flood	3	11	95076733	-Nut (10-24)	1
4	59988683	-Switch	1	12	95246930	-Washer, Lock, External Tooth	1
5	59759753	-Light, Turn Signal	2	13	59353425	-Terminal, Ring (1/2)	3
-	58844796	-Lens, Red	2	14	95371266	-Blade, Fully Insulated Female	5
-	58844804	-Lens, Amber	2	15	95373973	-Strap	8
-	58844812	-Bulb	2	16	59377606	-Angle, Mounting	1
6	59988642	-Switch, Master Light	1	17	59680983	-Bolt (3/8-16 x 1.0" lg.)	1
7	59937334	-Jump Wire	1	18	59807941	-Nut (3/8-16)	1
8	59340356	-Wire Harness	1	19	59670554	-Plate, Adhesive Mounting	6

ROLLER MAST INSTALLATION (22 FT.)

RT-706F

77

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
-	58780487	MAST GROUP (22 ft.)	1	14	58780255	-Fitting, Lube	2
-	59485870	MAST GROUP (22 ft.) (Extended tilt) (Includes Items 1 thru 33)	1	15	58780370	-Screw, Cap	5
1	58780495	-Rail, Inner	1	16	58780271	-Washer, Lock	5
2	58772880	-Plate, Wear (Not Shown)	4	17	58780503	-Rail, Middle	1
3	58780446	-Stud (Not Shown)	2	18	59484089	-Rail, Outer	1
4	59971275	-Bearing, Roller	8	19	58780446	-Stud (Not Shown)	2
5	59407825	-Shim	A/R	20	58780511	-Bracket Assembly, Cylinder	1
6	59407833	-Shim	A/R	21	58780321	-Screw, Cap	4
7	58780222	-Nut, Hex	8	22	58780453	-Washer, Lock (Not Shown)	4
8	59386565	-Anchor, Chain	4	23	58780347	-Nut, Hex (Not Shown)	4
9	58774266	-Chain	1	24	58780529	-Pin, Cylinder Rod	1
-	59386573	-Pin, Chain	A/R	25	58780537	-Cylinder Assembly, Hydraulic	1
-	58780230	-Plate, Link	A/R	-	59971101	-Seal Kit	2
10	59376848	-Roller Assembly, Chain (Includes Item 12)	2	26	59380089	-Tube Assembly	1
11	59971382	-Bearing, Chain Roller	2	27	59386409	-Regulator, Flow (15 GPM)	1
12	59376830	-Pin, Roller Chain (Included with Item 10)	2	28	58780479	-Fitting, Lube	2
13	58780248	-Pin, Spring	2	29	59321273	-Pin, Tilt and Side Shift Cylinder	3
				30	59321281	-Pin, Spiral	3
				31	58780545	-Decal, Trademark	2
				32	58780552	-Decal (22 ft.)	2
				33	58780560	-Plate, Guard (Not Shown)	2


OLOFSSON SIMPLEX MAST - 2-RAIL ROLLER (10 & 14 FT.) - INTERNAL BREAKDOWN

RT-705F

93


ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
		<i>NOTE: When Items 1 thru 3, 5 thru 7, 30 & 37 are required, mast height must be specified.</i>		21	58781311	-Washer, Lock	2
1	58780875	-Rail, Outer	1	22	58781048	-Ring, Retaining	1
2	58780883	-Rail, Inner	1	23	58781055	-Washer (Cylinder Base)	1
3	59312660	-Carriage Assembly, 48" Hook	1	24	58781063	-Spacer	1
-	59312686	-Carriage Assembly, 60" Hook	1	25	58781071	-Screw (Cylinder Top)	1
-	59312785	-Carriage Assembly, 60" Shaft	1	26	58781089	-Washer, Lock	1
4	58780891	-Cylinder Assembly (Includes Items 5 thru 17)	1	27	58781097	-Valve, Flow	1
5	58780909	-Tube, Outer	1	28	58781105	-Fitting	1
6	58780917	-Rod, Cylinder	1	29	58781113	-Fitting	1
7	58780925	-Spacer	1	30	58781121	-Rod, Connecting	2
8	58780933	-Nut, Gland	1	31	58781139	-Nut	4
9	58780941	-Piston	1	32	58781147	-Turnbuckle	2
10	58780958	-Ring, Retaining	1	33	58773789	-Anchor, Chain	4
-	58780966	-Packing Kit (Includes Items 11 thru 17)	1	34	58773953	-Nut, Chain Anchor	2
11	58780974	-U-Cup (Piston)	1	35	58773946	-Pin, Chain Connecting	4
12	58780982	-O-Ring (Piston)	1	36	58781402	-Pin, Cotter	8
13	58780990	-Ring, Back-Up	1	37	58781444	-Chain	2
14	58781006	-O-Ring, Outer (Gland)	1	38	58781154	-Roller, Chain	2
15	58781014	-O-Ring, Inner (Gland)	1	39	58781162	-Bearing	2
16	58781022	-Ring, Wear	1	40	58781170	-Washer, Thrust	4
17	58781030	-Wiper	1	41	58781188	-Roller, Shaft-Chain	2
18	58781287	-Roller, Load	8	42	58781196	-Fitting, Grease	2
19	58781295	-Shim	16	43	58775602	-Lock (Shaft)	2
20	58781303	-Bolt, Rail Stop	2	44	58781378	-Screw	2
				45	58781386	-Washer, Lock	2
				46	58781634	-Roller, Thrust	4
				47	58768094	-Bushing	2
				48	58775610	-Ring, Retaining	4

RT-700F SERIES
PARTS MANUAL

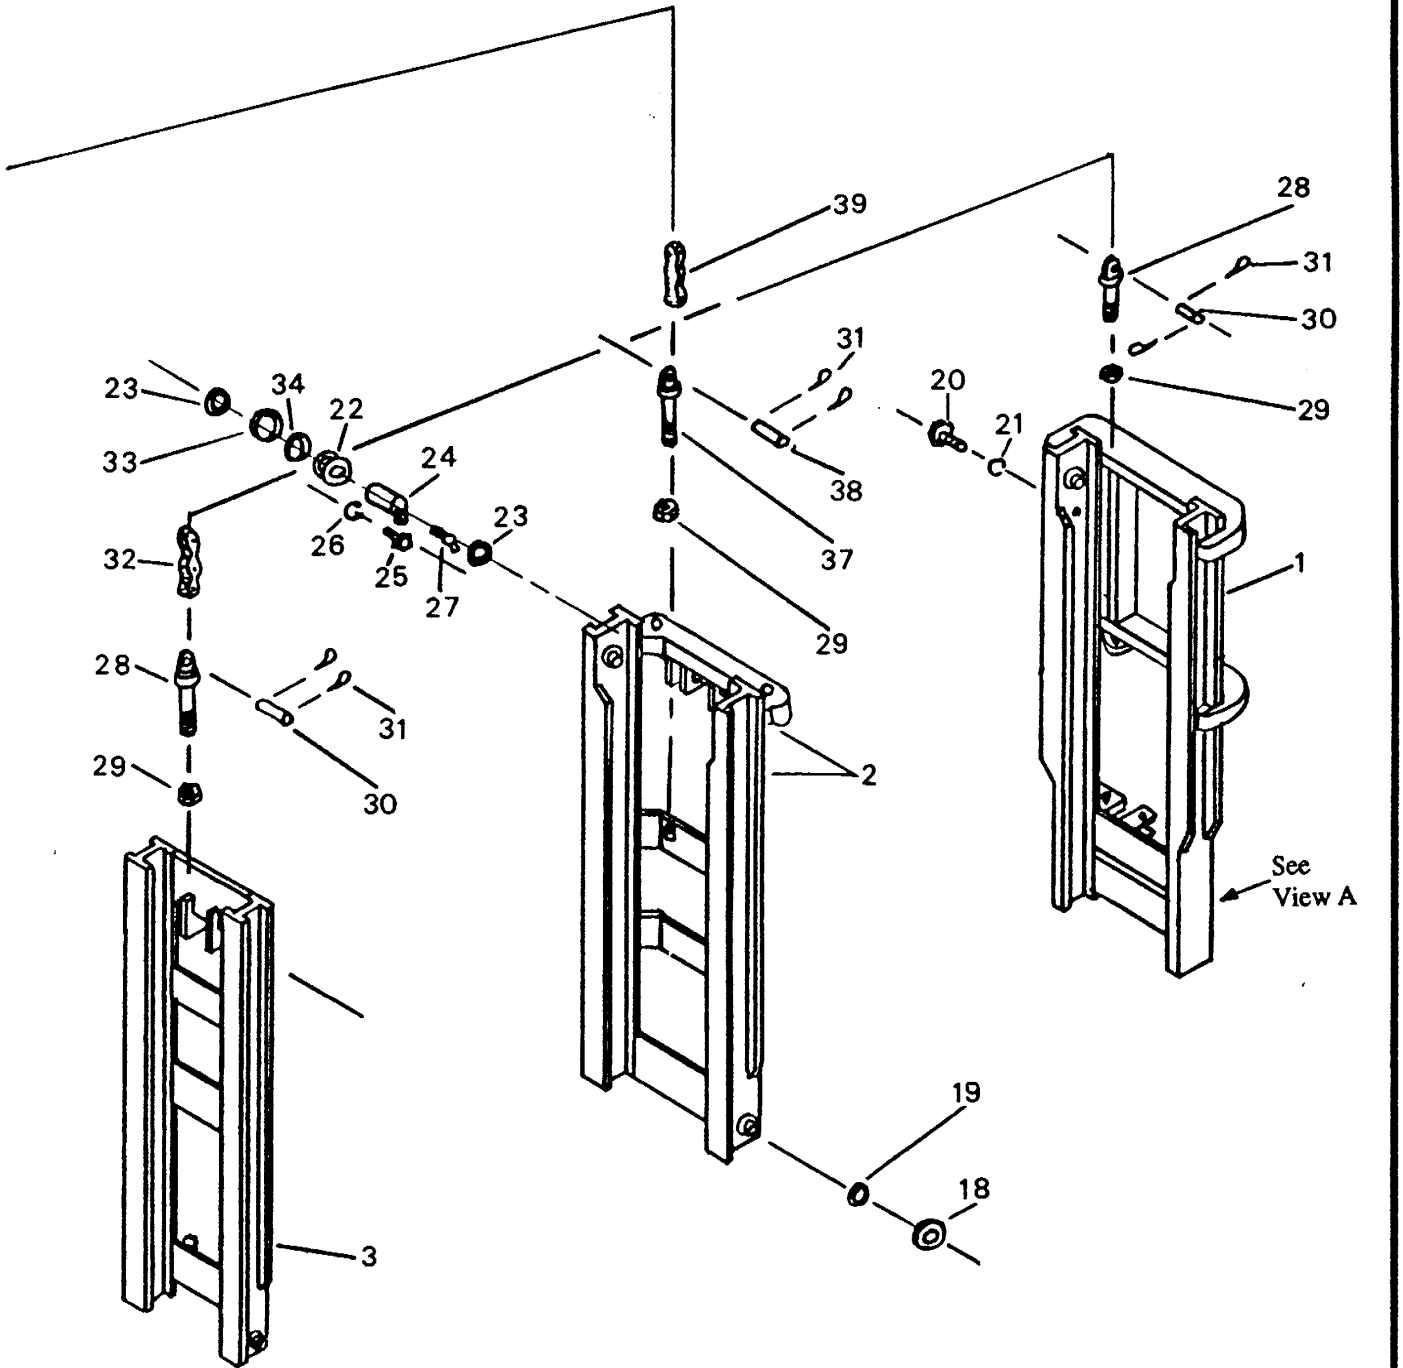

OLOFSSON MULTIVIEW MAST - 3-RAIL ROLLER (22 & 30 FT.) - INTERNAL BREAKDOWN
RT-708F

**RT-700F SERIES
PARTS MANUAL**

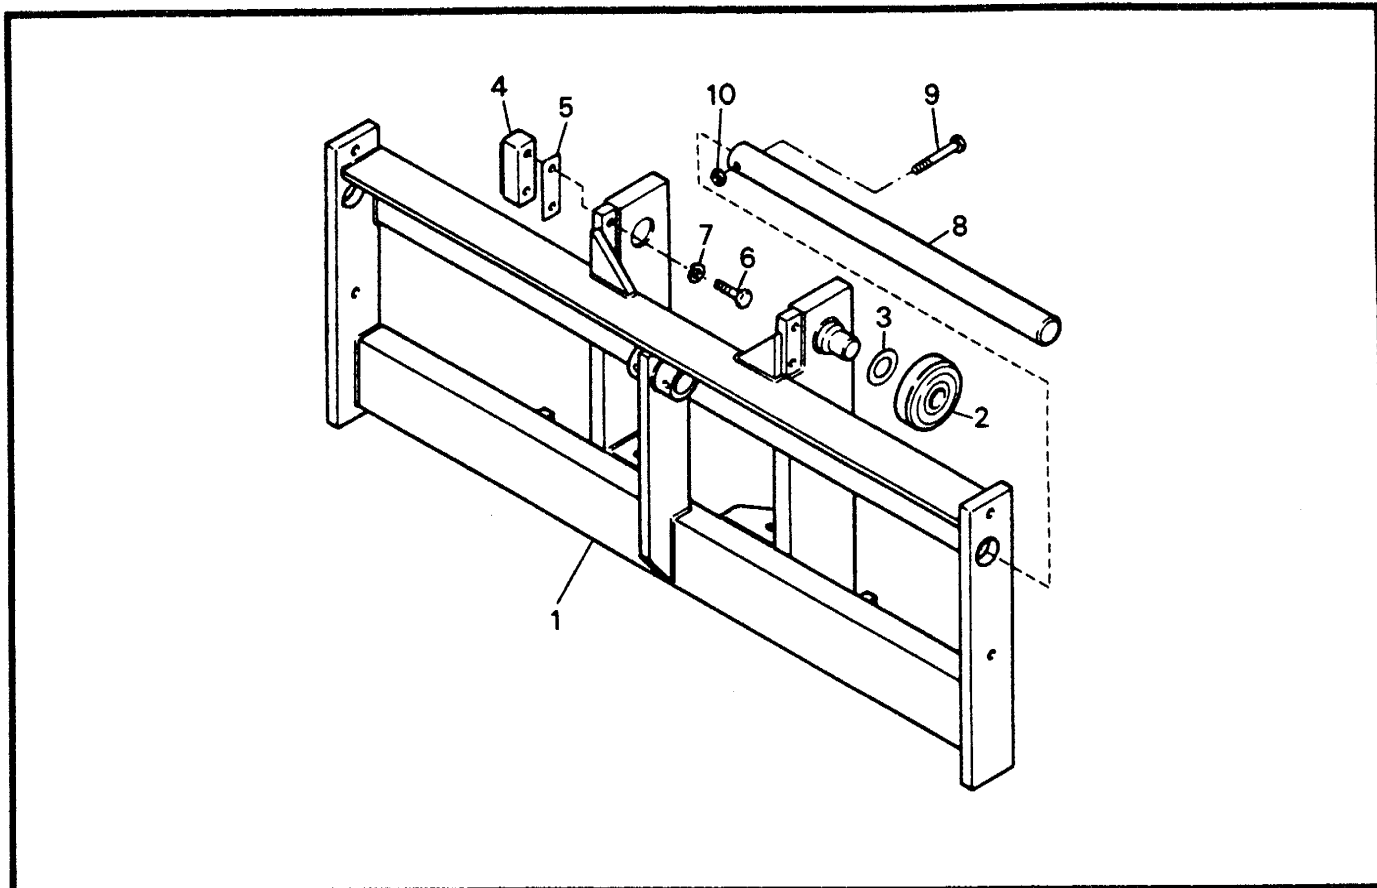


**CARRIAGE SHAFT MOUNT (60 IN.)
RT-708F**

81

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59388058	-Carriage Assembly (Includes Items 2 thru 10)	1	6	58775578	-Screw, Cap	8
2	59971176	-Bearing, Roller	4	7	58775511	-Washer, Lock (3/8)	10
3	59357640	-Shim	4	8	59380758	-Shaft, Fork	2
4	58774274	-Block Assembly, Bearing	4	9	58775537	-Screw, Cap	2
5	58775560	-Shim	16	10	58775529	-Nut (1/2-13)	2

RT-700F SERIES PARTS MANUAL

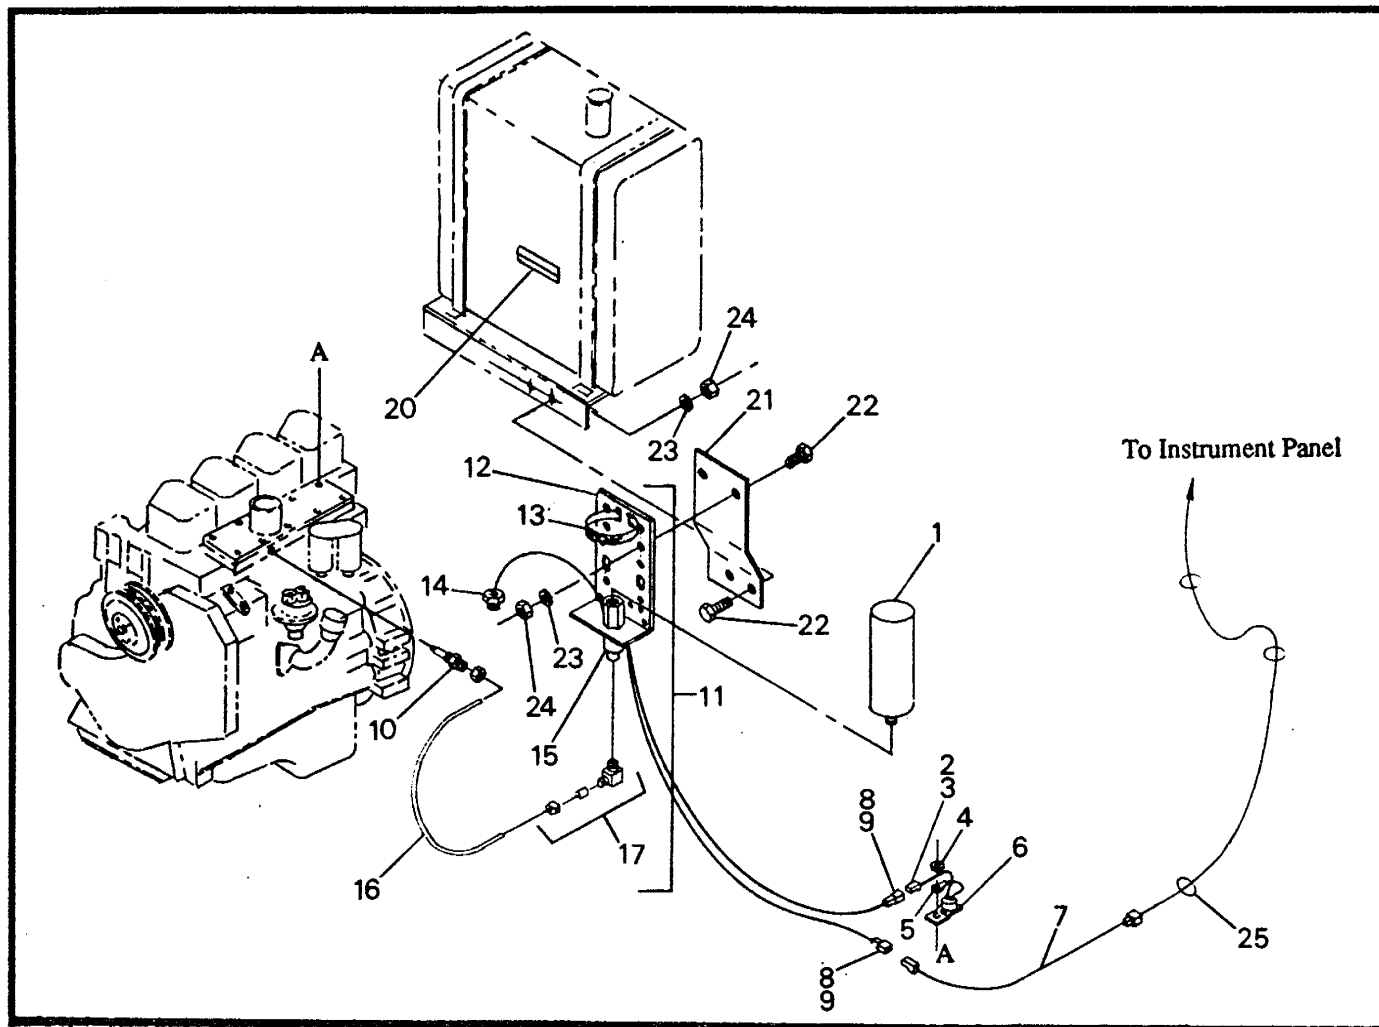

ETHER AID START INSTALLATION - OPTIONAL EQUIPMENT RT-700F SERIES

ITEM NO.	COMM. NO.	DESCRIPTION	QTY	ITEM NO.	COMM. NO.	DESCRIPTION	QTY
1	59866970	-Cylinder, Starting Fluid	1	13	N.S.S.	-Clamp, Cylinder	1
2	59331298	-Connector, Male	1	14	N.S.S.	-Cap, Dust	1
3	59338517	-Housing, Connector (Male)	1	15	N.S.S.	-Valve, Electrical	1
4	59887182	-Washer, Flat (Hardened) (5/16)	1	16	N.S.S.	-Tube, Nylon	1
5	95386587	-Terminal, Ring (.375)	1	17	N.S.S.	-Elbow, 90°, with Nut & Sleeve	1
6	59352476	-Switch, Thermo	1	18	N.S.S.	-Switch, Push Button (Not Shown)	1
7	59392753	-Wire Assembly	1	19	N.S.S.	-Decal, Push Button (Not Shown)	1
8	59352492	-Connector, Female	2	20	59945873	-Tape	2
9	59331280	-Housing, Connector (Female)	2	21	59377671	-Plate, Mounting	1
10	59352542	-Atomizer	1	22	95430534	-H.H.C.S. (3/8-16 x 1.25" lg.)	4
11	59398925	-Diesel Starting Kit (Includes Items 12 thru 19)	1	23	59731380	-Washer, Flat (Hardened) (3/8)	4
12	N.S.S.	-Bracket, Mounting	1	24	59327841	-Nut (3/8-16)	4
				25	95373973	-Cable Tie	4

**RT-700F SERIES
NUMERICAL INDEX**

COMM NO.	PGE	COMM. NO.	PGE	COMM NO.	PGE	COMM. NO.	PGE	COMM. NO.	PGE
	145	58844606	53		145	59309922	3	59312843	59
58784901	145	58844614	53	58845389	79	59309930	3	59312850	94
58784919	145	58844622	53	58845405	27	59309948	3	59312884	35
58784927	145	58844630	53	58845413	27	59309955	3	59312934	30
58784935	145	58844648	53	58845421	27	59309971	37	59312942	30
58784950	145	58844655	53	58845439	29	59309989	3	59312959	49
58784968	145	58844663	53	58845447	23	59309997	3	59312967	49
58784976	145	58844671	53	58845462	127	59311605	91	59312975	49
58784984	145	58844689	53	58850991	94	59311613	101	59312983	49
58784992	145	58844697	53	58923550	125		118	59312991	49
58802596	158	58844705	53	58974403	69		119	59313015	35
58812710	61	58844713	53	59001560	91		125	59313163	51
58824046	3	58844721	53	59004309	67	59311621	84	59318188	71
58824053	3	58844739	53	59023028	59	59311654	63	59320556	51
58829979	61	58844747	53	59306209	91	59311662	63	59320960	G
58829987	61	58844754	53	59306217	94	59311670	84		59
58844267	9	58844762	53	59306233	59	59311712	37	59321257	67
58844275	9	58844770	53	59306241	3	59311738	37	59321273	109
58844283	9	58844788	53	59306258	3	59311746	37		121
58844291	9	58844796	113	59306274	3	59311753	22		123
58844309	9	58844804	113	59306282	63	59311761	22		125
58844317	9	58844812	113	59306290	95	59311779	22		129
58844358	15	58844820	152	59306316	159	59311787	59	59321281	109
58844366	15	58844838	167	59306324	159	59311795	59		121
58844374	19	58844846	167	59336340	159		71		123
58844382	19	58844853	167	59306357	159	59311803	59		125
58844390	9	58844861	167	59306365	159	59311811	59		129
	13	58844879	167	59307009	161	59311837	59	59321299	I
58844408	9	58844895	165	59307017	59	59311845	59		148
	13	58844903	108	59307025	91	59311860	40		149
58844416	13	58844945	152		95	59311878	40	59322651	110
58844424	13	58844952	152	59307033	94	59311886	40		111
58844432	13	58845207	96	59337041	94	59311894	35		152
58844440	15	58845215	96	59307058	91	59311902	35		165
58844457	15	58845231	79	59307066	91	59311910	35		167
58844465	19	58845249	79	59307074	63	59311944	158	59324392	39
58844473	17	50845264	79	59307082	37	59311951	162		40
58844481	17	58845272	25	59307900	145	59311969	31	59325530	117
56844499	17	58845298	71	59307926	145	59311977	31	59325548	117
58844507	17	58845306	71	59307942	145	59312587	118	59325563	160
58844515	17	58845314	71	59307967	145	59312595	118		161
58844523	168	58845322	71	59308106	141	59312603	118	59325571	160
58844531	168	58845330	71	59308166	141		119		161
58844549	168	58845348	71	59309484	3		125	59325589	163
58844556	53	58845355	75	59309492	3	59312660	133		161
58844564	53	58845363	75	59309773	93	59312686	133	59325597	160
58844572	53	58845371	135	59309807	94	59312785	133		161
58844580	53		137	59309880	3	59312801	84	59325613	161
58844598	53		141	59309898	3	59312819	161	59325621	160

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL