




**ERSATZTEILE**

**SPARE PARTS**

**PIÈCES DETACHEES**

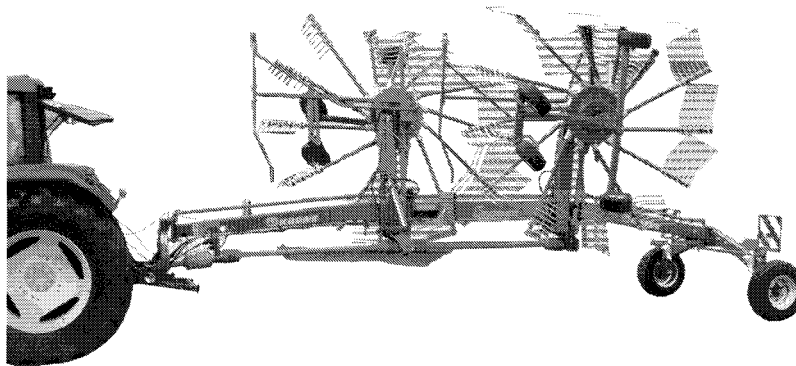

000 001 103 04 - 11/06/2015

**Swadro 807**

**Swadro 809**

**Swadro 810**

ab Masch.-Nr.  
from mach.-no.  
à partir de mach.-no

**833 001 -**

**// 000 001 103 04 //**

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Rahmen / Lenkstangen Frame / Steering rod Bâti / Barre de direction					833001 -	S W 8 0 7	S W 8 0 9	S W 8 1 0				000 001 103 04
											443 064 1	2.0
Pos.	ID-Nr.	Benennung	Description	Description	Masch.-Nr-						Bemerkung/Remarks/Remarque	
1	20 040 079 1	Rahmen -vorne	Frame -front	Cadre -devant		x						
	00 267 325 1	Rahmen -vorne	Frame -front	Cadre -devant			x	x				
2	00 934 935 0	Lagerbuchse	Bearing bush	Coussinet		x	x	x			40 X 44 X 50	
3	00 919 105 0	Kegelschmiernippel	Grease nipple	Graisneur à cone		x	x	x			AM 8 X 1	
4	00 185 523 3	Gummipuffer	Rubber pad	Tampon en caoutchouc		x	x	x			Rd. 60 X 36 / M 10	
5	00 910 639 1	Scheibe	Washer	Rondelle		x	x	x			11 X 48 X 5	
6	00 908 758 0	Sicherungsmutter	Locknut	Écrou hex		x	x	x			M 10	
7	00 901 137 1	6kt-Schraube	Hex head bolt	Boulon tête hex		x	x	x			M 16 X 80	
8	00 901 490 0	6kt-Schraube	Hex head bolt	Boulon tête hex		x					M 16 X 120	
	00 910 303 1	Scheibe	Washer	Rondelle		x	x	x			17 X 30 X 3	
9	00 908 719 0	Sicherungsmutter	Locknut	Écrou hex		x	x	x			M 16	
10	00 901 132 1	6kt-Schraube	Hex head bolt	Boulon tête hex		x	x	x			M 16 X 55	
11	00 271 388 1	Distanzhülse	Spacer bushing	Douille entretoise		x	x	x			16,5 X 25 X 26	
12	00 242 532 1	Rahmen -mitte	Frame -middle	Cadre -centre		x						
	00 267 351 6	Rahmen -mitte	Frame -middle	Cadre -centre			x	x				
13	20 040 080 1	Rahmen -hinten	Frame -back	Cadre -derrière		x						
14	20 041 643 0	Rahmen -hinten	Frame -back	Cadre -derrière			x	x				
	00 934 925 0	Lagerbuchse	Bearing bush	Coussinet		x	x	x			35 X 39 X 30	
15	00 912 714 2	Spannstift	Roll pin	Goupille de serrage		x	x	x			10 X 40	
16	00 242 551 0	Lenkstange -vorne	Steering rod -front	Bielle -devant		x						
	00 267 411 0	Lenkstange -vorne	Steering rod -front	Bielle -devant			x	x				
17	00 916 056 3	Bolzen	Pin	Boulon		x	x	x			Rd. 16 X 70	
18	00 912 584 2	Spannstift	Roll pin	Goupille de serrage		x	x	x			4 X 30	
19	00 266 598 1	Lenkstangenlager -kpl.	Steering rod bearing -cpl.	Palier de barre de direction - cpl.		x	x	x				
20	00 904 813 1	Flachrundscheibe	Coach bolt	Vis a tête bombée		x	x	x			M 8 X 30	
21	00 909 908 1	Sperrkantscheibe	Detent edged washer	Disque à bord d'arrêt		x	x	x			SKM 8	
22	00 908 210 0	6kt-Mutter	Hex nut	Écrou hex		x	x	x			M 8	
23	00 242 553 0	Lenkstange -mitte	Steering rod -middle	Bielle -centre		x					Rd. 35 X 2884	
	00 267 410 0	Lenkstange -mitte	Steering rod -middle	Bielle -centre			x	x			Rd. 35 X 2995	
24	00 908 039 1	6kt-Mutter	Hex nut	Écrou hex		x	x	x			M 30	
25	20 040 082 0	Lenkstange -hinten	Steering rod -back	Bielle -derrière		x						
	00 267 405 0	Lenkstange -hinten	Steering rod -back	Bielle -derrière			x	x				
26	00 267 408 1	Zuggabel	Trailer hitch	Forche de traction		x	x	x			M 30	
27	00 268 892 0	Abdeckung	Cover	Couvercle			x	x				
28	00 900 612 0	6kt-Schraube	Hex head bolt	Boulon tête hex			x	x			M 8 X 16	
29	00 910 413 0	Scheibe	Washer	Rondelle			x	x			8,4 X 17 X 1,6	
30	00 908 706 0	Sicherungsmutter	Locknut	Écrou hex			x	x			M 8	
31	90 002 040 0	Spannstift 21 x 28 Dacromet	Roll pin	Goupille de serrage		x	x	x				

T-Getriebe - Swadro 807 / 809					833001 -	S W 8 0 7	S W 8 0 9	S W 8 1 0				000 001 103 04
T-Gearbox												
T-Carter					Masch.-Nr-							Bemerkung/Remarks/Remarque
Pos.	ID-Nr.	Benennung	Description	Description								Bemerkung/Remarks/Remarque
1	20 043 036 0	T-Getriebe	T-Gearbox	T-Carter		x	x					
2	00 936 339 1	Radial-Wellendichtring	Radial-shaft sealing ring	Radial-bague d'étanchéité		x	x					A 35 X 80 X 13
3	00 911 673 0	Sicherungsring	Circlip	Circlip		x	x					80 X 2,5
4	00 910 741 1	Stützscheibe	Supporting disc	Rondelle diélectrique		x	x					S 63 X 80 X 3
5	00 911 022 0	Passscheibe	Shim ring	Cale		x	x					70 X 80 X 0,1
	00 911 023 0	Passscheibe	Shim ring	Cale		x	x					70 X 80 X 0,3
	00 911 024 1	Passscheibe	Shim ring	Cale		x	x					70 X 80 X 1,0
6	00 930 167 0	Rillenkugellager	Grooved ball bearing	Roulement à gorge		x	x					6307
7	00 267 330 0	Getriebegehäuse	Gearbox housing	Carter du boîte de vitesses		x	x					
8	00 906 040 1	Verschlussschraube	Screw plug	Bouchon fileté		x	x					M 18 X 1,5
9	00 145 397 0	Getriebewelle	Gearbox shaft	Arbre de boîte de vitesse		x	x					Rd. 42 X 374
10	00 915 122 0	Passfeder	Fit-in key	Clavette		x	x					A 10 X 8 X 40
11	20 043 030 0	Kegelritzel	Bevel pinion	Pignon conique		x	x					Z= 17
12	00 932 177 0	Kegelrollenlager	Taper roller bearing	Roulement à rouleaux coniques		x	x					32010 X
13	00 911 541 0	Sicherungsring	Circlip	Circlip		x	x					A 35 X 1,5
14	00 911 132 0	Passscheibe	Shim ring	Cale		x	x					35 X 45 X 0,3
	00 911 133 0	Passscheibe	Shim ring	Cale		x	x					35 X 45 X 0,5
	00 911 134 0	Passscheibe	Shim ring	Cale		x	x					35 X 45 X 1,0
15	20 043 031 0	Kegelrad	Bevel wheel	Pignon conique		x	x					Z= 22
16	00 910 900 0	Passscheibe	Shim ring	Cale		x	x					50 X 62 X 0,1
	00 910 902 0	Passscheibe	Shim ring	Cale		x	x					50 X 62 X 0,3
	00 910 903 0	Passscheibe	Shim ring	Cale		x	x					50 X 62 X 0,5
	00 910 904 0	Passscheibe	Shim ring	Cale		x	x					50 X 62 X 1,0
17	00 932 155 0	Kegelrollenlager	Taper roller bearing	Roulement à rouleaux coniques		x	x					32210 A
18	00 145 215 4	Getriebewelle	Gearbox shaft	Arbre de boîte de vitesse		x	x					Rd. 42 X 193
19	00 145 212 1	Getriebedichtung	Gearbox seal	Joint de boîte de vitesses		x	x					
20	00 146 976 4	Getriebedeckel	Gearbox cover	Couvercle du boîte de vitesses		x	x					
21	00 930 137 0	Rillenkugellager	Grooved ball bearing	Roulement à gorge		x	x					6207
22	00 910 727 1	Stützscheibe	Supporting disc	Rondelle diélectrique		x	x					S 35 X 45 X 2,5
23	00 936 337 1	Radial-Wellendichtring	Radial-shaft sealing ring	Radial-bague d'étanchéité		x	x					A 35 X 72 X 12
24	00 900 655 0	6kt-Schraube	Hex head bolt	Boulon tête hex		x	x					M 12 X 25
25	00 909 911 0	Sperrkantscheibe	Detent edged washer	Disque à bord d'arrêt		x	x					SKZ 12
26	00 926 101 0	Getriebeöl -Id.-Nr.= 1ltr	Oil -Id.-no.= 1ltr	Huile -Id.-no.= 1ltr		0,5	0,5					
27	00 490 161 1	Ölmesstab	Oil level dipstick	Jauge de niveau d'huile		x	x					M 18 X 1,5
28	90 001 226 0	Stützscheibe	Supporting disc	Rondelle diélectrique		x	x					S 70 X 80 X 3
29	00 920 931 0	Gewindereduzierstutzen	Threaded reducing adapter	Raccord reducteur filete		x	x					M 18 X 1,5 - R 1/4"
30	00 925 901 0	Winkel	Angle	Angle		x	x					1/4"
31	00 919 821 2	Belüftungsfilter	Breather	Reniflard		x	x					R 1/4"





CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL













CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL