




# STEYR MARINE ENGINES

**114 MARINE**  
TURBO DIESEL  
**+ SOLAS**

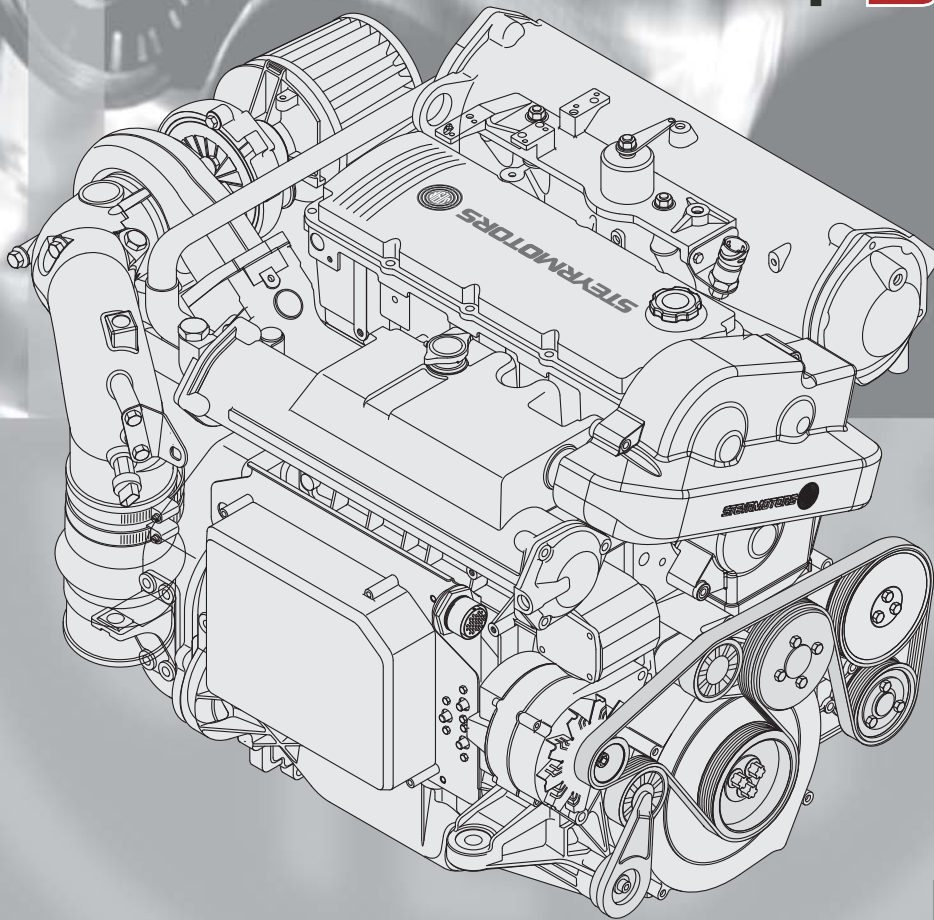

**MO114K33**

Serial no.: 48224 001 -->

# SPARE PARTS CATALOGUE

P/N Z001032-0 4<sup>th</sup> Edition, May 2014

**TEL** ++43 / 7252 / 222 / 20

**FAX** ++43 / 7252 / 222 / 29

**@** e.sales@steyr-motors.com

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL







<b>INTERCOOLER</b>	<b>114 MARINE</b> TURBO DIESEL <b>+ SOLAS</b>
--------------------	---

01084084-0

Pos.	Part.-No.	Qty	Designation	Step
10	2203706-9	1	INTAKE MANIFOLD, PAINTED —>482330249	.2
15	Z024015-0	1	INTAKE MANIFOLD, PAINTED 482330250—>	.2
20	2177593-1	1	INTERCOOLER	.2
30	2178483-0	4	O-RING 120,24 x 3,53	.2
40	2178415-8	1	COVER INTERCOOLER REAR, PAINTED	.2
50	9000064-0	6	HEX.SOCK. HD.CAP SCR. ISO 4762-M8x35-8.8-A3C	.2
60	3930261-0	6	WASHER ISO 7089-A8.4-140HV-A3C	.2
70	2174270-0	1	SPACER, INTERCOOLER	.2
80	2174261-9	1	COVER INTERCOOLER FRONT, PAINTED	.2
90	2178412-1	2	PLUG M18x1.5	.2
100	2178413-1	2	ZINC ANODE	.2
110	3098020-0	2	SEALING RING DIN 7603-A18x22-CU	.2
120	3802411-0	2	HEX.HD.SCR. ISO 4017-M8x16 A4-70	.2
130	3098009-0	4	SEALING RING DIN 7603-A8x14-CU	.2
140	2203794-0	1	DUO HOLLOW SCREW M8x1	.2
141	11869	1	HOLLOW SCREW M8x1 DIN 7643-4-3-A3C	.2
150	2203795-0	1	BANJO FITTING (ONLY FOR MO144M38)	.2
160	2203796-0	1	BANJO NUT DM8	.2
170	2203665-1	1	HOSE	.2
180	2178552-2	1	HOSE	.2
190	2178893-0	2	HOSE CLAMP 8-12-7,5	.2
200	3862447-0	4	HEX.SOCK. HD.CAP SCR. ISO 4762-M8x45-8.8-A2C	.2
210	9000312-0	4	HEX.SOCK. HD.CAP SCR. ISO 4762-M8x120-8.8-A2C	.2
220	3930261-0	8	WASHER ISO 7089-A8.4-140HV-A3C	.2
230	2203773-0	1	HOSE, TURBO CHARGER	.2
231	2203830-0	1	CHARGE AIR HOSE (ONLY FOR MO144M38)	.2
240	2179050-0	2	HOSE CLAMP WITH SPRING 40-60/9	.2
250	2203789-1	1	SHACKLE 48221115—>	.2
251	2203789-0	1	SHACKLE —>48221114	.2
260	9000271-0	3	HEX.FLANGE BOLT EN 1665-M8x25-10.9-DAC	.2
270	3800233-0	5	HEX.HD.SCR. ISO 4017-M6x16-A2-70	.2





**EXHAUST, HEAT EXCHANGER, GASKET**

**114 MARINE**  
TURBO DIESEL  
**+ SOLAS**

01144084-0

Pos.	Part.-No.	Qty	Designation	Step
1	2203703-0	1	EXHAUST MANIFOLD ASSY. PAINTED —>48227163	.2
2	Z002433-0	1	EXHAUST MANIFOLD ASSY. PAINTED 48227164—>	.2
3	2178112-0	3	CORE HOLE PLUG 40/8	..3
4	Z002048-0	9	CORE PLUG WITH O-RING	..3
5	2174617-0	1	PIPE FITTING	..3
6	2178331-0	1	FILLER NECK	..3
7	2170217-0	1	SCREW PLUG M10x1	..3
8	3098011-0	4	SEALING RING DIN 7603-A10x16-CU	.2
9	2174384-1	2	BANJO DN6 DIN 7642	.2
10	9000010-1	2	HOLLOW SCREW M10x1 DIN 7643-6-3-S	.2
12	2203704-0	1	HEATEXCHANGER	.2
14	2178413-1	2	ZINC ANODE	.2
16	Z002017-0	2	PLUG & SEAL FOR ZINC-ANODE	.2
17	3098020-0	1	SEALING RING DIN 7603-A18x22-CU	..3
18	2174155-1	1	GASKET, HEAT EXCHANGER COVER	.2
20	2173510-9	1	COVER HEAT EXCHANGER, FRONT PAINTED	.2
24	9000431-0	6	HEX.FLANGE BOLT EN 1665-M8x30-10.9-DAC	.2
26	2173636-0	2	O-RING 90x3	.2
28	2174073-0	1	SEAL FOR HEAT EXCHANGER COVER	.2
30	2177450-9	1	COVER HEAT EXCHANGER REAR, PAINTED	.2
36	2178598-0	1	DRAIN COCK ASSY.	.2
37	3098013-0	2	SEALING RING DIN 7603-A12x18-CU	.2
40	2174623-3	1	COOLANT TEMPERATURE SENSOR	.2
42	Z002489-0	1	SEAL KIT, EXH.MANIF - BLOCK 4 CYL.MARINE (O-RINGS)	.2
44	2174693-7	1	FILLER CAP ENGINE COOLANT	.2
50	9000248-1	8	HEX.FLANGE BOLT EN 1665-M8x110-10.9-A2C	.2
52	3880049-0	2	HEX.FLANGE NUT DIN 6923-M6-A2-70	.2
56	2178552-1	1	HOSE L=275mm	.2
58	2174405-0	2	HOSE CLAMP 10-16/7,5 EN 10088-1	.2
60	2174682-0	1	HOSE, OVERFLOW	.2
62	2203778-0	4	STUD HEAT-RESISTANT STEEL DIN 940-M8FOx25	.2





CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL







**SECURETYSYSTEM, FUSES, ECU, E-BOX**



06064084-2

Pos.	Part.-No.	Qty	Designation	Step
10	2203723-1	1	BASE PLATE —>482330249	.2
11	2204051-0	1	BASE PLATE 482330250—>	.2
15	2203723-B	1	BRACKET BASEPLATE	..3
20	2203744-0	4	RUBBER MOUNT	.2
30	3880049-0	13	HEX.FLANGE NUT EN 1661-M6-A2-70	.2
40	2173329-0	0.2	EDGE PROTECTOR	.2
50	O913774-0	3	AUTOMATIC CIRCUIT BREAKER 50A	.2
60	9000187-0	1	SOLENOID STARTER	.2
70	2176821-3	1	ECU 114 81kW-3800rpm —>48226999	.2
71	2176844-1	1	ECU 114 81kW-3800rpm 48227001—>482330249	.2
72	2176844-E	1	ECU 114 81kW-3800rpm 482330250—>	.2
80	2203753-0	2	CLAMP, FASTEN ENGINE-HARNESS	.2
90	9000012-0	10	WASHER LARGE SERIES ISO 7093-6.4-140HV-A2	.2
100	9000215-1	4	CROSS RECESS PAN HD.SCR. ISO 7045-M5x6-A2-50-H	.2
110	2179004-0	2	SILENT BLOCK M5	.2
120	2203720-0	1	COVERING, ENGINE ELECTRIC	.2
130	2171410-1	1	SEAL, COVERING ENGINE ELECTRIC	.2
140	9000003-0	5	HEX.SOCK. HD.CAP SCR. ISO 4762-M5x55-A2-70	.2
150	3930069-0	5	WASHER ISO 7089-5-200HV-A2	.2
160	2203724-0	2	SUPPORT BASE PLATE	.2
180	2178971-G	1	INVERSION-SWITCH ASSY	.2
200	3870050-0	3	HEX.NUT ISO 4032-M5-A2-70	.2
220	3930069-0	3	WASHER ISO 7089-5-200HV-A2	.2
230	2178975-0	1	CABLE INVERSION-SWITCH SOLAS	.2
240	9000424-0	6	HEX.HD.SCR. ISO 4017-8/32UNCx20-A2-70	.2
250	3930072-0	6	WASHER LARGE SERIES ISO 7093-4.3-A2	.2
260	3800224-0	2	HEX.HD.SCR. ISO 4017-M8x20-A2-70	.2
270	3880049-0	1	HEX.FLANGE NUT EN 1661-M6-A2-70	.2
280	2206161-0	1	POWER SOLENOID 12V	.2
290	2178870-0	1	FIXTURE, CABLE TIE	.2
300	2204060-0	1	SUPPORT BASE PLATE 482330250—>	.2









CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL