


DYNAPAC
CA702PD
SPARE PARTS
CATALOGUE
SCA702PD-1EN3

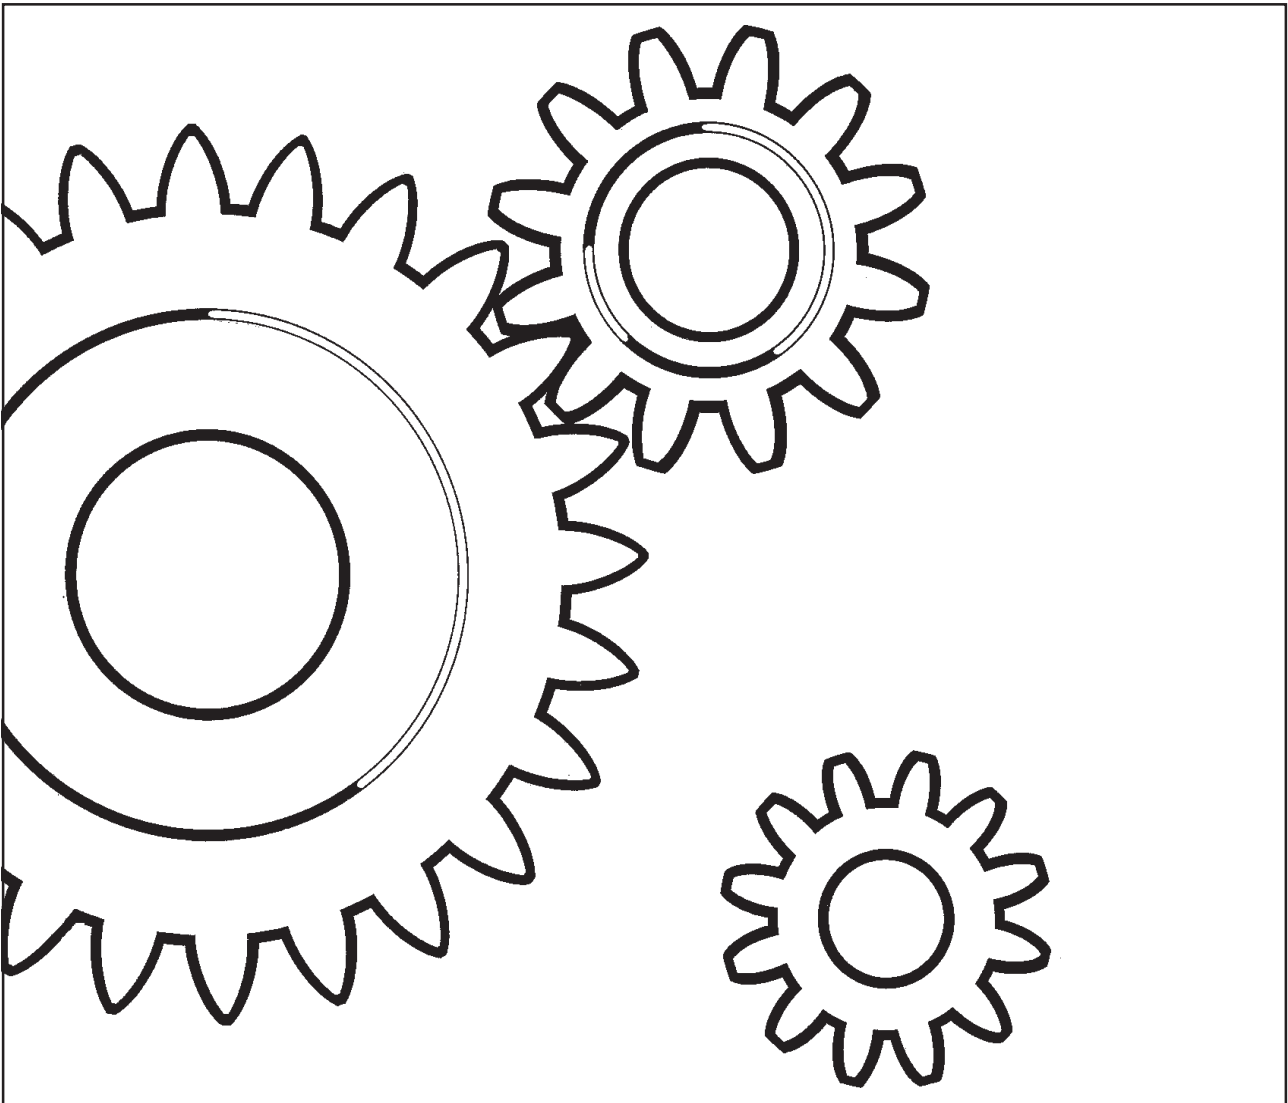

DYNAPAC

Part of the Atlas Copco Group

Box 504, SE-371 23 Karlskrona, Sweden
Phone: +46 455 30 60 00, Fax: +46 455 30 60 10
www.dynapac.com

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

4700945199 Service kit 1000 h

Item	Part No	Rem	Qty	Description	Code
	4700945199			Service kit (Page 10)	1000 h
1	4700945145		1	Oil filter element	A
2	4700945146		1	Fuel filter element	A
3	4700945147		1	Pre-fuel filter element	A
5	4700372229		2	Hydraulic oil filter element	A
7	4700357138	B	1	Ventilating filter	A
8	4700394690		1	Air filter element, main	A
9	4700394691		1	Air filter element, safety	A
10	4700945171		1	Valve cover gasket	A
B)				Ventilated oil filler cap for the hydraulic oil tank	

Scrapers

Item	Part No	Rem Qty	Description	Code
1	4700376551	18	Scraper tooth	
2	4700376622	18	Holder	
3	4700904232	36	Washer	
4	4700500165	36	Screw	M16-2,0x75 8,8

4700390920 Drum gear

Item	Part No	Rem Qty	Description	Code
	4700390920	1	Drum gear (Page 30)	
1		20	.Screw	
2		2	.Washer	
3		2	.Plug	
4	4700950594	1	.O-ring	
5		1	.Pad	
6		1	.Cover	
7		1	.Sun gear	
9		1	.Red. assembly	
10		1	.Red. assembly	
11		4	.Screw	
12		1	.Red. assembly	
13		4	.Bush	
14		1	.Housing/ bearing	
15		1	.Seal	
16		1	.Spring retainer plate	
17		1	.Hub	
18	4700950595	1	.O-ring	
19		1	.Brake shaft	
20		1	.Circlip	
21	4700950596	1	.Back-up ring	
22	4700950597	1	.Back-up ring	
23		5	.Brake disc	
24		5	.Brake disc	
25	4700950598	1	.O-ring	
26	4700950599	1	.O-ring	
27		1	.Brake piston	
28		24	.Spring	
29		1	.Spring retainer plate	
30		1	.Circlip	
31	4700950553	1	.O-ring	
32	4700950554	1	.O-ring	
33		7	.Washer	
34		3	.Extension	
37		3	.Screw	
38		4	.Plug	
39		1	.Motor adapter	
40	4700950600	1	.O-ring	
42		4	.Screw	
43		1	.Cover	
44		1	.Seal kit	

Cooling system

Item	Part No	Rem Qty	Description	Code
1	4700904551	2	Shock absorber	
2	4700385873	1	Radiator	
	4700940263	1	.Water cooler	
	4700940264	1	.Charge air cooler	
3	4700371774	2	Shock absorber	
4	4700386091	1	Cooler frame	
5	4700378690	1	Coolant hose	
6	4700379602	1	Coolant hose	
7	4700390500	2	Fan guard	
8	4700379537	1	Holder	
9	4700387130	1	Expansion tank	
10	4700903714	1	Cap	
11	4700381413	1	Washer	
12	4700904228	17	Washer	
13	4700500075	4	Screw	M6-1,0x25 8.8
14	4700386699	1	Air inlet	
15	4700371737	2	Air leading plate	
16			Not used on this model	
17	4700926985	2	Quick lock washer	
18	4700904486	2	Quick lock	
19	4700375172	1	Holder plate	
20	4700375171	1	Holder plate	
21	4700386118	1	Connector	
22	4700330328	2	Copper washer	10x14x1
23	4700903916	1	Banjo coupling	
24	4700903915	1	Hollow screw	
25	4700313010	4	Hose clamp	
26	4700313075	4	Hose clamp	
27	4700313004	3	Hose clamp	
28	4700904230	6	Washer	
29	4700904640	13	Washer	8,4x22x3
30	4700904229	11	Washer	8,4x16x1,5
31	4700500029	4	Screw	
32	4700500053	15	Screw	M8x20H 8.8
33	4700500018	3	Screw	M8-1,25x12 8,8
34	4700500040	8	Screw	M6-1x20 8,8
35	4700500012	2	Screw	M6x12
36	4700570004	3	Nut	M6X1,00 -8 A2K
37	4700202046	A 1XL	Rubber strip	25x10
38	4700202046	B 1XL	Rubber strip	25x10
39	4700902166	C 1XL	Edge trim	
40	4700902166	D 1XL	Edge trim	
41	4700902166	D 1XL	Edge trim	
42	4700903953	E 1XL	Edge trim	
43	4700902166	F 1XL	Edge trim	
44	4700902166	G 1XL	Edge trim	
45	4700902166	H 1XL	Edge trim	
46	4700288129	I 1XL	Edge trim	
47	4700387326	1	Air inlet	
48	4700570005	4	Nut	M8
49	4700313041	N	Cable ties	
A)	L = 0,375M			
B)	L = 0,400M			
C)	L = 0,610M			
D)	L = 0,555M			
E)	L = 1,650m			
F)	L = 0,440M			
G)	L = 0,420M			
H)	L = 0,390M			
I)	L = 0,730M			

Fuel system

Item	Part No	Rem Qty	Description	Code
1	4700387112	1	Fuel sender	
2	4700373460	1	Fuel cap	D
3	4700373574	2	Hose connection	
4	4700244054	1	Hose reinforced	
5	4700313001	2	Hose clamp	
6	4700392159	1	Fuel filter bracket	
7	4700230277	6	Copper washer	12,2x17,9x1,5
8	4700792251	3	Banjo coupling	M12 Hose 8
9	4700234919	3	Screw	M12-1,5-24-3
10	4700928910	1	Adapter 90 with O-ring	
11	4700393385	1	Fuel hose	
12	4700393386	1	Fuel hose	
13	4700904984	1	Fuel hose	D
14	4700313001	3	Hose clamp	
15	4700791513	1	Pipe clamp	
18	4700904557	2	Washer	
19	4700500030	2	Screw	
24	4700904231	1	Washer	13x24x2 300 HV
25	4700500163	1	Screw	M12x16
26	4700313041	N	Cable ties	
28	4700370745	1	Flange, cpl	
29	4700372718	1	Lid	
30	4700904206	5	Screw	
31	4700234840	2	Connector	
32	4700500022	2	Screw	M8x30H 8.8 A2K
33	4700904229	2	Washer	8,4x16x1,5
34	4700945538	1	Fuel filter head with hand pump	
35	4700945147	1	Pre-fuel filter element	A

Differential with no-spin

Item	Part No	Rem Qty	Description	Code
1		1	Nut	
2	4700929647	2	Bearing	
3	4700900969	1	Shim	T=0,10 mm
	4700900970	1	Shim	T=0,20
	4700900971	1	Shim	T=0,50 mm
	4700900972	1	Shim	T=0,15 mm
4	4700929624	2	Ring nut	
5	4700909548	2	Lock plate	
6	4700909547	2	Screw	
7	4700929625	8	Screw	
8	4700929630	1	Differential case	
9	4700929626	1	Non-spin unit	
10	4700909564	16	Spring washer	
11	4700929629	16	Screw	
12	4700909549	2	Roller bearing	
13	4700929631	1	Spacer	
14	4700939259	5	Shim	0,15mm
	4700909580	3	Shim	0,20mm
	4700929644	1	Shim	0,40mm
15		1	Spacer	
16		1	Seal	
17		1	Bevel gear set	

Propulsion and Oil cooling system, Rear

Item	Part No	Rem	Qty	Description	Code
1	4700391987		1	Propulsion pump	C
2	4700500037		4	Screw	
3	4700904703		4	Washer	
4	4700373361		1	Propulsion motor (Page 74)	C
	4700902581		1	.O-ring	D
5	4700792393		4	Screw	M18X50H 8.8
6	4700904793		4	Washer	19x34x3
7	4700379210		1	Stay, right	
8	4700904230		14	Washer	
9	4700500161		4	Screw	
11	4700379211		1	Stay, left	
12	4700376377		1	Hydraulic oil cooler (Page 78)	
13	4700379479		1	Cooler frame	
14	4700791614		4	Screw	
15	4700904640		8	Washer	8,4x22x3
16	4700791182		4	Lock nut	M8
17	4700500022		10	Screw	M8x30H 8.8 A2K
18	4700379482		1	Filter bracket	
19	4700904229		4	Washer	8,4x16x1,5
20	4700380490		1	Filter bracket	
21	4700359550	A	1	Hydraulic oil filter, cpl	
	4700359551		1	.Filter head	
	4700359552		1	.Cleaning filter element	Maximum 50 hours use
	4700372229	C	1	.Hydraulic oil filter element	A
22	4700500028		8	Screw	
23	4700372435	B	1	Hydraulic oil filter, cpl	
	4700372436		1	.Filter head	
	4700359552		1	.Cleaning filter element	Maximum 50 hours use
	4700372229	C	1	.Hydraulic oil filter element	A
24	4700345243		1	Connection block	
25	4700500033		2	Screw	M10-1,5x60 8,8
26	4700900229		2	Measuring nipple	
27	4700334468		2	Adapter	
28	4700234243		2	T-connector	
29	4700334162		1	Elbow 90, O-ring	
30	4700234909		1	Straight connector	
31	4700792381		2	Adapter	
32	4700923384		4	Flange half	
33	4700904638		16	Washer	12x22x2
34	4700502132		16	Screw	UNC 7/16" x 22
35	4700904005		4	O-ring	
36	4700334132		1	Elbow 45, O-ring	
37	4700334138		1	Adapter	
39	4700904282		1	Adapter	
40	4700374059		1	Check valve	
41	4700334532		1	Straight connector	
42	4700334163		1	Adapter	
43	4700234958		1	Connector	
44	4700393660		1	Connector	
47	4700162008		1	Seal washer	
48	4700482560		1	Hydraulic hose	D
49	4700482391		1	Hydraulic hose	
50	4700482391		1	Hydraulic hose	
51	4700484105		1	Hydraulic hose	D
52	4700483027		1	Hydraulic hose	

- A) Suction.
- B) Return.
- C) Spare part for ordinary service.

Vibration system

Item	Part No	Rem Qty	Description	Code
1	4700391988	1	Vibration pump	
2	4700391989	1	Vibration motor	
	4700160132	1	O-ring	D
3	4700903877	1	O-ring	124, 50x3, 00
5	4700502059	4	Screw	1/2"-13UNCx1.1/2" 8.8
6	4700483131	1	Hydraulic hose	
7	4700483939	1	Hydraulic hose	
8	4700483940	1	Hydraulic hose	
9	4700923384	8	Flange half	
10	4700904005	4	O-ring	
11	4700502132	16	Screw	UNC 7/16" x 22
12	4700904638	16	Washer	12x22x2
13	4700483022	1	Hydraulic hose	
14	4700334138	2	Adapter	
15	4700900229	2	Measuring nipple	D
16	4700483128	1	Hydraulic hose	
19	4700372580	2	Rubber part	
20	4700500192	3	Screw	M10x80
21	4700904230	7	Washer	
22	4700393824	2	Hose clamp	
23	4700500028	4	Screw	
25	4700372581	1	Rubber part	
27	4700234435	1	Adapter	
28	4700374217	1	Hose clamp	
29	4700393853	1	Hose clamp	
30	4700373112	3	Spacer	
31	4700586018	3	Lock nut	
32	4700904703	8	Washer	
33	4700791213	2	Flange fitting 90	
34	4700904495	2	Elbow 90	
35	4700234844	1	Adapter	
37	4700947689	4	Screw	
38	4700334491	1	T-connector	
39	4700234231	1	Reducer	
40	D433830401	1	Connector	
41	4700910161	1	Measuring nipple	D
43	4700334239	1	Elbow 90	
44	4700891922	1	T-connector	

Hydraulic oil tank

Item	Part No	Rem Qty	Description	Code
1	4700372044	1	Hydraulic oil tank, cpl	
2	4700372029	1	.Hydraulic oil tank	
3	4700349880	1	.O-ring	
4	4700349879	1	.Cover	
5	4700989151	1	.Oil level glass	D
6	4700500019	14	.Screw	M8x16H 8.8 A2K
7	4700904229	14	.Washer	8,4x16x1,5
8	4700357138	1	.Ventilating filter	A
9	4700791119	1	.Adapter	G3/4
10	4700233304	1	.Ball valve	
11	4700232039	1	.Plug	G3/4
12	4700791120	2	.Sealing washer	
13	4700500030	4	Screw	
14	4700904567	4	Washer	10,5x28x6 HB305
16			Not used on this model	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

Instrument box

Item	Part No	Rem Qty	Description	Code
1	4700374098	1	Instrument box	
2	4700374379	1	Control panel	
3	4700359845	1	Cover	
4	4700370165	1	Relay bracket	
10	4700903658	8	Screw	M5x10
12	4700500040	4	Screw	M6-1x20 8,8
13	4700904228	4	Washer	
14	4700902285	4	Lock nut	M6
44	4700903599	4	Trunnion	
45	4700903600	4	Rubber washer	
46	4700903601	4	Washer	
51	4700903678	4	Rubber washer	
52	4700903602	4	Locking device	
53	4700903436	8	Blind rivet	
54	4700374099	2	Bracket	
56	4700903961	4	Washer	
57	4700903653	4	Plug	
100		A 1	Control panel cover	
101	4700372103	1	Cover	
102	4700358881	1	Pad lock	
103	4700372104	1	Eyelet	
104	4700357855	2	Bushing	
105	4700372105	2	Bracket	
106	4700904207	2	Screw	
107	4700904208	2	Screw	
108	4700904228	2	Washer	
109	4700586002	2	Lock nut	
110	4700903658	4	Screw	M5x10

A) Option

Instrument panel Lower right

Item	Part No	Rem	Qty	Description	Code
1		A	1	Switch, cpl	
2	4700932058	B	1	.Switch	
3	4700903876		1	.Connector	
4	4700930163		2	.Contact piece, NO	D
5		C	1	Switch, cpl	D
6	4700930192	B	1	.Switch	D
7	4700903876		1	.Connector	
8	4700930163		1	.Contact piece, NO	D
9		D	1	Switch, cpl	D
10		B	1	.Switch	D
11	4700930163		3	.Contact piece, NO	D
12	4700930154		1	.Contact piece, NC	
13	4700985146		1	Pilot lamp cpl	D
	4700985012		1	Bulb	D
14	4700932034		1	Lamp glass, Red	
15	4700372663		1	Speedometer	
			1	Bulb	
16	4700386189		1	Control panel plate	
17	4700903657		6	Screw	
18	4700357526		1	Resistor	
19	4700345139		1	Hole plug	
20	4700911456		4	Hole plug	

Red

- A) Amplitude selector
- B) Black
- C) Cmv selector
- D) Rev selector.

Rotating beacon Option

Item	Part No	Rem	Qty	Description	Code
1	4700999011	1	1	Rotating beacon	D
2	4700358452		1	Lamp holder	
3	4700500021		2	Screw	M8-1,25x25 8.8
4	4700586003		2	Lock nut	M8
5	4700904229		2	Washer	8,4x16x1,5
6	4700500013		1	Screw	M6-1x16 8,8
7	4700904228		1	Washer	
8	4700371364		1	Lamp holder	
9	4700921039		1	Pipe clamp	
10	4700541702		1	Screw	M6x12
11	4700374398		1	Cable harness	
12	4700389577	2	1	Rotating beacon	D

1) Replaced by item 12, P/N 4700389577

2) Replaces item 1, P/N 4700999011.

Tachograph, simple cab Option

Item	Part No	Rem Qty	Description	Code
1	4700901209	1	Tachograph	
2	4700372497	1	Cable harness	
	4700908496	1	.Grommet	
	4700903717	1	.Resistor	470 ohm, 0.5w
3	4700372496	1	Cable harness	
4	4700372495	1	Cable harness	
	4700904015	1	.Fuse holder	
	4700904140	1	.Fuse	0.5A
5	4700313041	N	Cable ties	
6	4700385527	1	Cover	
7	4700385526	1	Holder plate	
10	4700904281	2	Washer	
11	4700500004	2	Screw	M5 0,8x12 8,8
16	4700904228	3	Washer	
19	4700586002	1	Lock nut	
22	4700904229	3	Washer	8,4x16x1,5
24	4700921031	1	Clamp	
45	4700378110	1	Bracket	
46	4700500075	3	Screw	M6-1,0x25 8.8
47	4700500053	3	Screw	M8x20H 8.8
48	4700904543	2	Cable tie holder	
49	4700903852	2	Screw	ST4,2x13

Geodynamic Compaction indicator Option

Item	Part No	Rem Qty	Description	Code
1	4700373979	1	Bracket	
2	4700541703	5	Screw	M6x16
3	4700373980	1	Lever	
5	4700921046	3	Clamp	
6	4700386645	1	Cable harness	
7	4700386646	1	Cable harness with sensor	
8	4700791452	1	Lock handle	
9	4700373140	1	Bracket	
10	4700500016	4	Screw	M6x55 8.8 A2K
11	4700902285	4	Lock nut	M6
12	4700500194	2	Screw	
13	4700904231	2	Washer	13x24x2 300 HV
14	4700902288	2	Nut	M12
15		A 1	Sensor	
16	4700901224	1	Fuse	3A
17	4700313041	N	Cable ties	D
18	4700932056	1	Switch	D
19	4700930165	1	Contact block	
20	4700985012	1	Bulb	D
23	4700387283	1	Decal	
24	4700791453	1	Pipe clamp block	
25	4700791454	1	Cover plate	
26	4700386298	1	Holder	
27	4700387280	1	Display unit	
28	4700926911	B 2XL	Rubber strip	
29	4700387282	1	Printer	
		1	.Printer cable	
30	4700387281	1	Processor	
31	4700499162	1	Hand knob	
32	4700386300	1	Holder	
33	4700386301	1	Cover plate	
34	4700386299	1	Display holder	
35	4700791171	4	Screw	
36	4700904206	6	Screw	
37	4700904289	4	Screw	
38	4700386647	C 1	Cable harness	
39	4700900528	2	Screw	
40	4700928927	2	Lock nut	

A) See section "Speedometer and Frequencymeter".

B) L=0,240MM

C) C1-cable

Drivers seat Turn-over platform

Item	Part No	Rem	Qty	Description	Code
1	4700359900		1	Seat frame	
3	4700381400		1	Bearing cover	
4	4700359574		1	Cover	
5	4700359914		1	Cover	
6	4700359915		1	Grommet	
7	4700377518		1	Drivers seat, cpl	
8	4700945661	B	1	.Adjuster kit	D
9	4700390963	A	1	.Arm rest kit	
10	4700945622		1	.Seat switch	
11	4700372964		1	Steering wheel, cpl	
			1	.Steering wheel	
12	4700935614		1	.Turning knob	D
13			1	.Insert adapter	D
14	4700935613		1	.Cover	
15	4700391163		1	Steering column (Page 154)	C
16			0	Steering system (Page 156)	
17			0	Turning	Controls
18	4700359419		1	Control cover	
20	4700904206		16	Screw	
21			0	Turning	Carrier
22	4700500028		3	Screw	
23	4700904557		3	Washer	
24	4700570006		3	Nut	
25	4700391346		1	Seat frame	
26	4700500021		6	Screw	M8-1,25x25 8.8
27	4700603019		6	Washer	
28	4700921104		1	Clamp	
29	4700904229		16	Washer	8,4x16x1,5
30	4700570005		12	Nut	M8
31	4700359920		1	Plug	
32	4700500040		6	Screw	M6-1x20 8,8
33	4700904228		6	Washer	
34	4700586002		4	Lock nut	
35	4700371407		1	Cover	
36	4700500019		8	Screw	M8x16H 8.8 A2K
37	4700904229		12	Washer	8,4x16x1,5
38	4700500021		4	Screw	M8-1,25x25 8.8
39	4700904229		1	Washer	8,4x16x1,5
100	4700348331		1	Seat cover	D

- A) One pair
- B) Left and right sliding rail.

Turning Carrier

Item	Part No	Rem	Qty	Description	Code
1	4700371374		1	Bearing housing	
2	4700359125		1	Ball bearing	
3	4700370955		1	Locking disc	
4	4700372966	A	1	Lock ring	
5	4700902520		12	Screw	
6	4700372965	B	1	Lock ring	
7	4700513003		8	Screw	
8	4700926214		1	Grease fitting	D
9	4700371418		1	Bracket	
10	4700508056		2	Screw	M8x40
11	4700904229		2	Washer	8,4x16x1,5
12	4700372961		1	Clamp	
13	4700372671		1	Clamp	
14	4700374417	C	1	Coupling link	
15	4700904231		1	Washer	13x24x2 300 HV
16	4700359820		1	Bushing	
17	4700630035		1	Split pin	D
18	4700359043		1	Spring	D
19	4700359818		2	Spring collar	
20	4700573008		2	Nut	M8
21	4700500013		1	Screw	M6-1x16 8,8
22	4700904228		1	Washer	
23	4700373547	D	1	Spacer	
	4700372459	E	1	Spacer	
24	4700500021		4	Screw	M8-1,25x25 8.8
25	4700904556		4	Washer	8,4x16x3,0
26	4700513013	D	8	Screw	
	4700903644	E	8	Screw	
27	4700372083	F	1	Spacer	
A)	Lower				
B)	Upper				
C)	For turning				
D)	Platform				
E)	Cab				
F)	Only for cab				

Cab, 12V contact

Item	Part No	Rem Qty	Description	Code
1	4700388981	1	Cable harness	
2	4700901227	1	Fuse	10A B
3	4700939603	1	Cable harness	
4	4700938691	2	Screw	
5	4700939521	1	Sign	12V
6	4700939522	1	Contact	12V

Tool equipment

Item	Part No	Rem Qty	Description	Code
1	4700355890	1	Tool set Cpl	
2		1	.Adjustable wrench	
3		1	.Screw driver	
4	4700902610	1	.Belt pliers	
5	4700311016	1	.Grease gun	
6		1	.Open end spanner	10mm
7		1	.Open end spanner	13mm
8		1	.Open end spanner	16mm
9		1	.Open end spanner	18mm
10		1	.Allen wrench	10mm
11		1	.Allen wrench	12mm
12		1	.Allen wrench	6mm
13		1	.Allen wrench	8mm
14		1	.Tool bag	
15		1	.Wheel nut key	30/32mm
16	4700901220	1	.Pressure gauge	
17	4700372837	1	Tool box	
18	4700372658	1	.Lock	
19	4700500021	3	Screw	M8-1,25x25 8.8
20	4700904640	6	Washer	8,4x22x3

Air conditioner and heater, Simple cab

Item	Part No	Rem	Qty	Description	Code
71	4700904734		2	Washer	8,4x26x4
72	4700908136		1	Bracket	
73	4700792015		1	Conduit	
74	4700313068		4	Cable ties	L=92 mm
75	4700925802		1	Cable ties	L=142 mm
76	4700391761		1	Bracket	Old version
77		C	1	V-belt	
78	4700500180		2	Screw	
80				Not used on this model	
81				Not used on this model	
82				Not used on this model	
83				Not used on this model	
84				Not used on this model	
85				Not used on this model	
86	4700945314		2	Guide ring	
87	4700945315		3	Screw	M8X100

C) See section "Engine installation"

Anti-spin

Item	Part No	Rem Qty	Description	Code
1	4700391680	1	Cable harness	
2	4700392043	1	Control unit	
11	4700500006	4	Screw	M5x16
12	4700904281	4	Washer	
13	4700373902	1	Sensor	
14	4700500021	4	Screw	M8-1,25x25 8.8
15	4700904640	2	Washer	8,4x22x3
16	4700904229	2	Washer	8,4x16x1,5
20	4700382089	1	Propulsion motor (Page 202)	C
22			Anti spin, Potentiometer installation (Page 210)	
26	4700394670	1	Spacer ring	
40	4700378132	1	Cable harness	
41	4700378133	1	Cable harness	
42	4700904216	1	Sensor	
43	4700904217	1	Sensor	
51	4700382088	1	Propulsion motor (Page 206)	

Anti spin, Potentiometer installation

Item	Part No	Rem	Qty	Description	Code
1	4700533008		3	Screw	
2	4700374190		1	Potentiometer	
3	4700373901	A	1	Bracket	
4	4700904227	A	1	Set screw	M3 x 4
5	4700373903	A	1	Clevis	
6	4700373905		1	Plate	
7	4700382070		1	Cable harness	
8	4700932058		1	Switch	
9	4700903876		1	Connector	
10	4700932060		1	Contact block	
11	4700382071		1	Control panel plate	
12	4700904206		4	Screw	

A) Removes with new part: 4700374190.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL