


**DYNAPAC
LP750
SPARE PARTS
CATALOGUE
SLP750-1EN6**

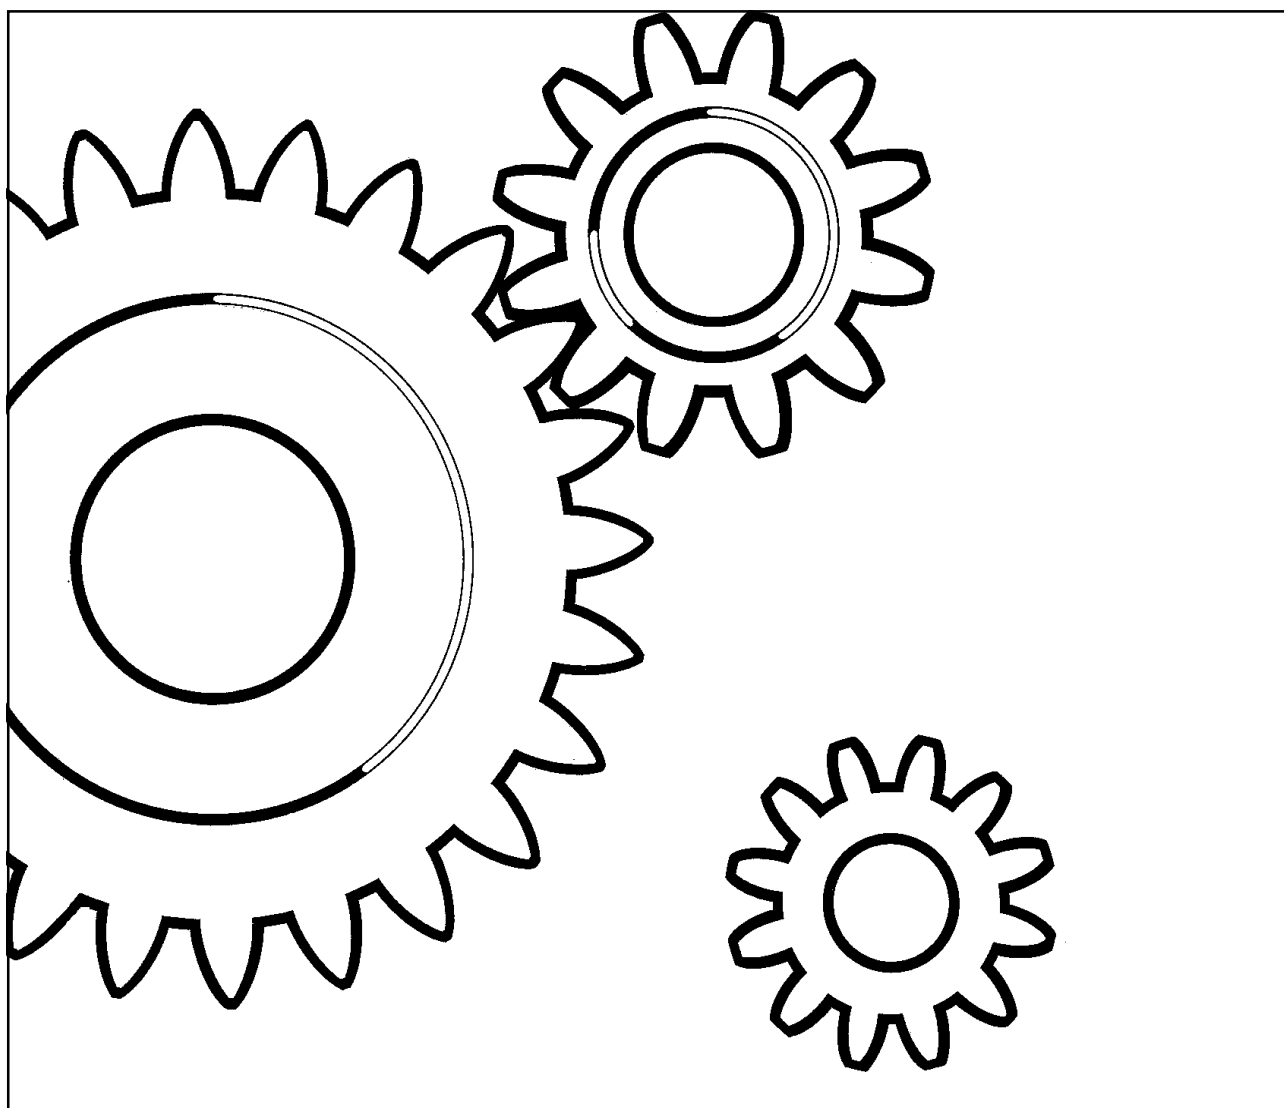

DYNAPAC

Part of the Atlas Copco Group

Atlas Copco Construction Tools AB

SE-105 23 Stockholm, Sweden

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

LP750

Item	Part No.	Rem. Qty	Description	Code
10			Frame (Page 4)	
20			Drums and eccentric element (Page 10)	
30			Engine (Page 14)	
40			Transmission (Page 24)	
50			Hydraulic system (Page 36)	
60			Electrical equipment (Page 48)	
70			Handle and controls (Page 52)	
80			Decals and documentation (Page 56)	

Drums and eccentric element

Item	Part No.	Rem. Qty	Description	Code
1	4700286880	1	Eccentric housing	
2	4700272507	1	Oil dipstick	
3	4700286882	1	Shaft	
4	4700114092	2	Roller bearing	D
5	4700274618	2	Gasket	D
6	4700500053	6	Screw	M8x20H 8.8
7	4700274615	1	Bearing cover	
8	4700232241	1	Oil plug	D
9	4700162011	1	Washer, sealing	D
10	4700286878	1	Bearing cover	
11	4700286877	1	Clutch	
12	4700162009	2	Seal ring	D
13	4700508019	7	Screw	M8x25
14	4700508092	2	Screw	
15	4700286914	1	Hydraulic motor, vibration	C
16	4700286916	2	Connection	
17	4700160031	1	O-ring	D
18	4700628007	2	Pin	
19	4700924762	8	Screw	
20	4700904232	8	Washer	
21	4700904231	23	Washer	13x24x2 300 HV
22	4700925519	16	Screw	M12x55 10.9 GEOMET
23	4700629033	8	Pin	
24	4700286945	2	Drum assy	
25	4700286797	C 4	.Sealing	D
	4700163096	D 1	.Sealing	
26	4700114007	2	.Spherical roller bearing	D
27	4700274622	1	.Bearing cover	
28	4700904229	4	.Washer	8,4x16x1,5
29	4700500047	4	.Screw	
30	4700274623	1	.Protecting plate	
31	4700163095	1	.Sealing	D
32	4700150017	2	.Retaining ring	D
33	4700380364	2	.Protective plug	
34	4700926214	2	.Grease fitting	D
35	4700274621	E 1	.Bearing housing	
	4700380369	F 1	.Bearing housing	
36	4700286799	2	.Bearing bracket	
37	4700513013	8	.Screw	
38	4700183936	1	.Drum Up to 47500626	
	D283599-03	1	.Drum From 47500627	
39	4700274589	E 1	.Bearing housing	
	4700380370	F 1	.Bearing housing	
40	4700274624	1	.Bearing cover	
41	4700508092	4	.Screw	

- C) Old version thickness=10mm
- D) New version thickness=8mm
- E) Without protective plug
- F) With protective plug

Engine, Hatz 1D81S From SN -47501033

Item	Part No.	Rem. Qty	Description	Code
59		1	Bracket	
60	4700239439	1	Crank handle, cpl	
61	4700287441	4	Shock absorber	D
62			Washer	D
63			Nut	D
64			Screw	D
65		1	Adapter	D
66	4700500029	2	Screw	
67	4700244054	1	Hose reinforced	
68	4700185324	2	Nipple	D
69	4700182947	1	Adapter	D
70	4700313003	1	Hose clamp	D
71	4700281115	2	Screw	
72	4700281116	2	Ryw-clips	
73	4700928849	1	Nut	M12-1,75
74	4700500194	1	Screw	

4700286400 Chain tensioner

Item	Part No.	Rem. Qty	Description	Code
1		1	Chain tensioner	
2	4700286390	1	.Holder plate	
3	4700286398	2	.Plastic wheel	
4	4700904230	8	.Washer	
5	4700500033	8	.Screw	M10-1,5x60 8,8

4700286912 Hydraulic pump

Item	Part No.	Rem. Qty	Description	Code
1		1	Hydraulic pump	
2	4700923092	1	.Oil seal	
3	4700910723	1	.Grease fitting	
4	4700910718	4	.Screw	
5	4700910748	1	.Housing	
6	4700910746	1	.Pin	
7	4700910738	A	.Rotor	
	4700939221	B	.Rotor	
8	4700910720	1	.O-ring	
9	4700910709	1	.Plug, cpl	
10	4700923090	1	..O-ring	
11	4700923088	1	.Relief valve, cpl	
12	4700910743	1	.Plug, cpl	
13	4700910713	1	..O-ring	
14	4700910710	2	.Snap ring	
15	4700910732	2	.Trunnion shaft	
16	4700910716	2	.Washer	
17	4700910744	2	.End cover	
18	4700910717	2	.Grease fitting	
19	4700910724	1	.Snap ring	
20	4700910719	C	.Ball bearing	
	4700939293	D	.Ball bearing	
21	4700910741	1	.Snap ring	
22	4700910733	1	.Swash plate	
23	4700910737	4	.Expanding pin	
24	4700910722	2	.Plug, cpl	
25	4700923087	1	..O-ring	D
26	4700813825	4	.Plug	
27	4700910735	1	.Cylinder block, cpl	
28		1	..Cylinder block	
29		1	..Retainer	
30		9	..Piston	
31	4700239931	1	.Pump shaft	
32	4700910730	1	.Valve plate	
33	4700910729	1	.Gasket	
34	4700910711	1	.Grease fitting	
35	4700910712	1	.Screw	
36	4700910707	1	.O-ring	
37	4700239868	1	.By-pass valve	
38	4700910742	1	.Ring	
39	4700910706	1	.O-ring	
40	4700910715	4	.Screw	
41	4700239926	1	.Splined sleeve	
42	4700239925	1	.Snap ring	
43	4700239927	1	.O-ring	
44	4700239928	1	.Flange	
45	4700239929	4	.Washer	

- A) With 6 splines
- B) With 12 splines
- C) For shaft with 20 mm diameter
- D) For shaft with 22 mm diameter

Handle and controls

Item	Part No.	Rem. Qty	Description	Code
10			Handle (Page 54)	

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: www.heydownloads.com by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL