

## Workshop literature

### CiTi One



CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

## Trouble shooting

### The right reactions with CiTi



113000\_00-003

#### The CiTi is not responding

The CiTi could be in standby mode. Restart after resetting the emergency stop switch

**Reminder:** after 10 minutes of inactivity, CiTi automatically switches to standby mode

- To restart CiTi, simply press on the emergency stop button and reset it.

#### Battery low

The CiTi has almost no power left and must be charged. For further information on charging the CiTi battery, please refer to the "Charging the battery" chapter in the "Battery equipment" sheet.

Reminder of the battery level information:

- 100 % (10 bars in the battery) = battery OK
- 20 % (2 bars) = flashing + danger sign: speed = 50 %



113000\_00-004


Step	INSTRUCTIONS	TEST ► YES	TEST ► NO
6	Repair the cables or replace the traction motor	End of procedure	
7	Connect the power supply correctly	End of procedure	

Figure 16: Lifting current - error codes 10, 11, 433

Step	INSTRUCTIONS	TEST ► YES	TEST ► NO
1	Check if the lifting motor cables are OK	Go to step 2	Go to step 6
2	Connector (2X1) disconnected?	Go to step 7	Go to step 3
3	Replace the lifting motor	Go to step 4	
4	Fault still present?	Go to step 5	End of procedure
5	Replace the controller	End of procedure	
6	Repair the cables or replace the lifting motor	End of procedure	
7	Connect the power supply correctly	End of procedure	

## Trouble shooting


## Display

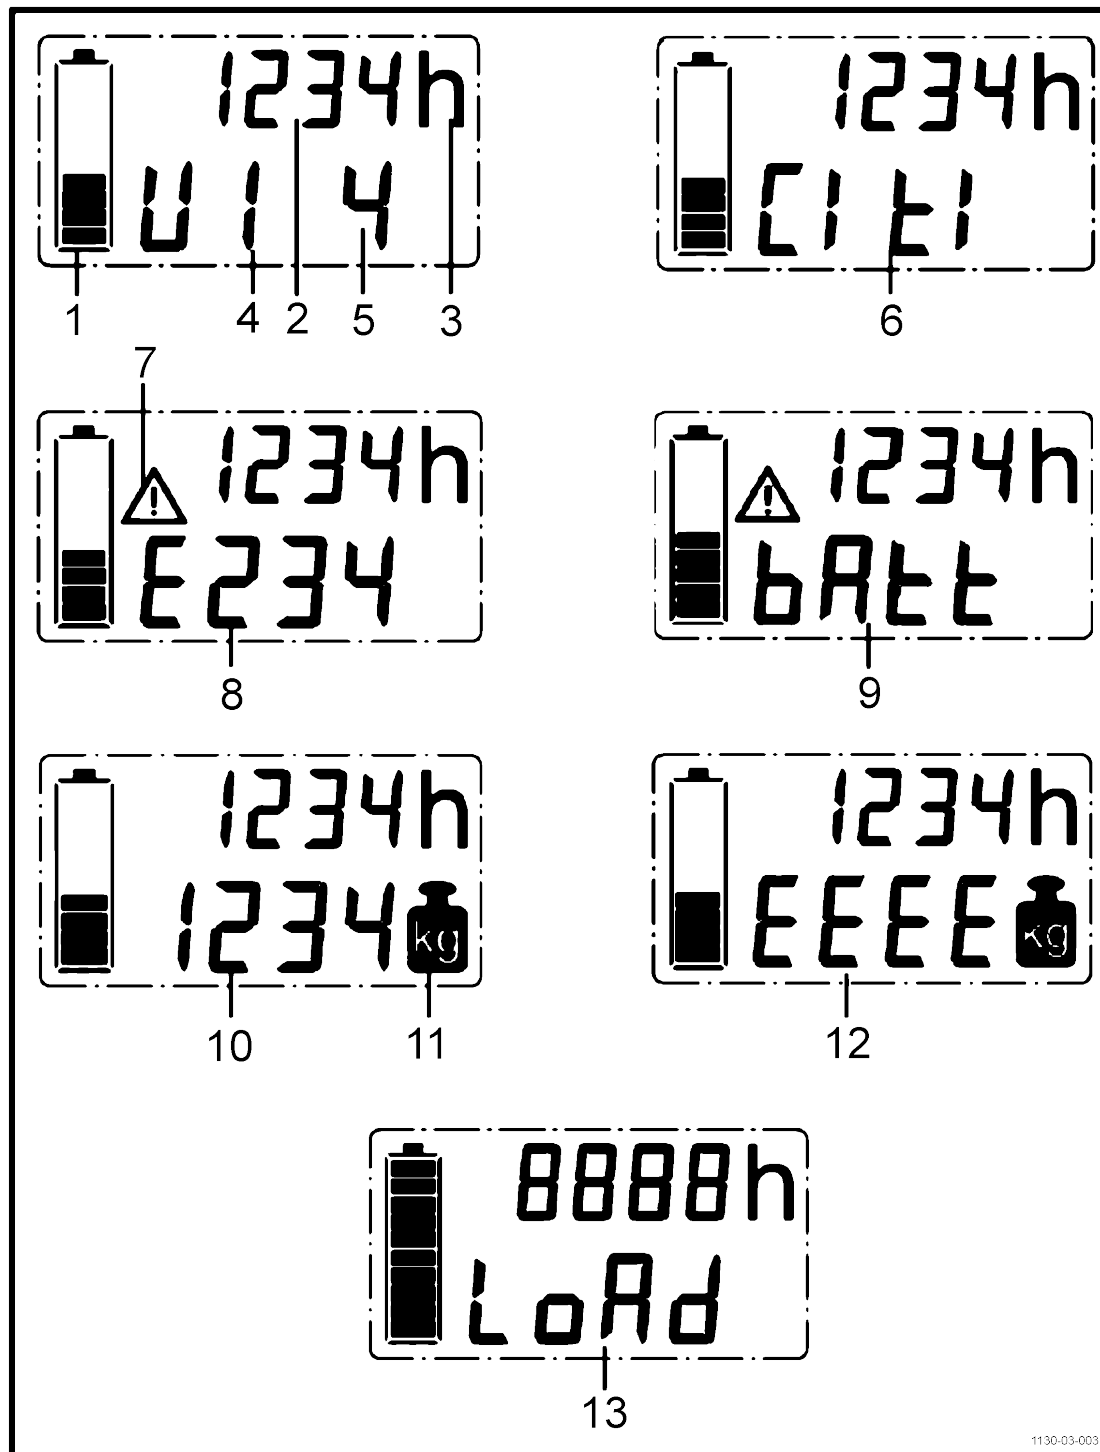

	Designation	Comment	Message on the display
1	Battery level	100% = full charge 10% = the battery must be charged 0% = battery empty, traction off	100% = battery ok 20% = flashing + symbol (7): speed = 50%



**Tiller**  
Control tiller

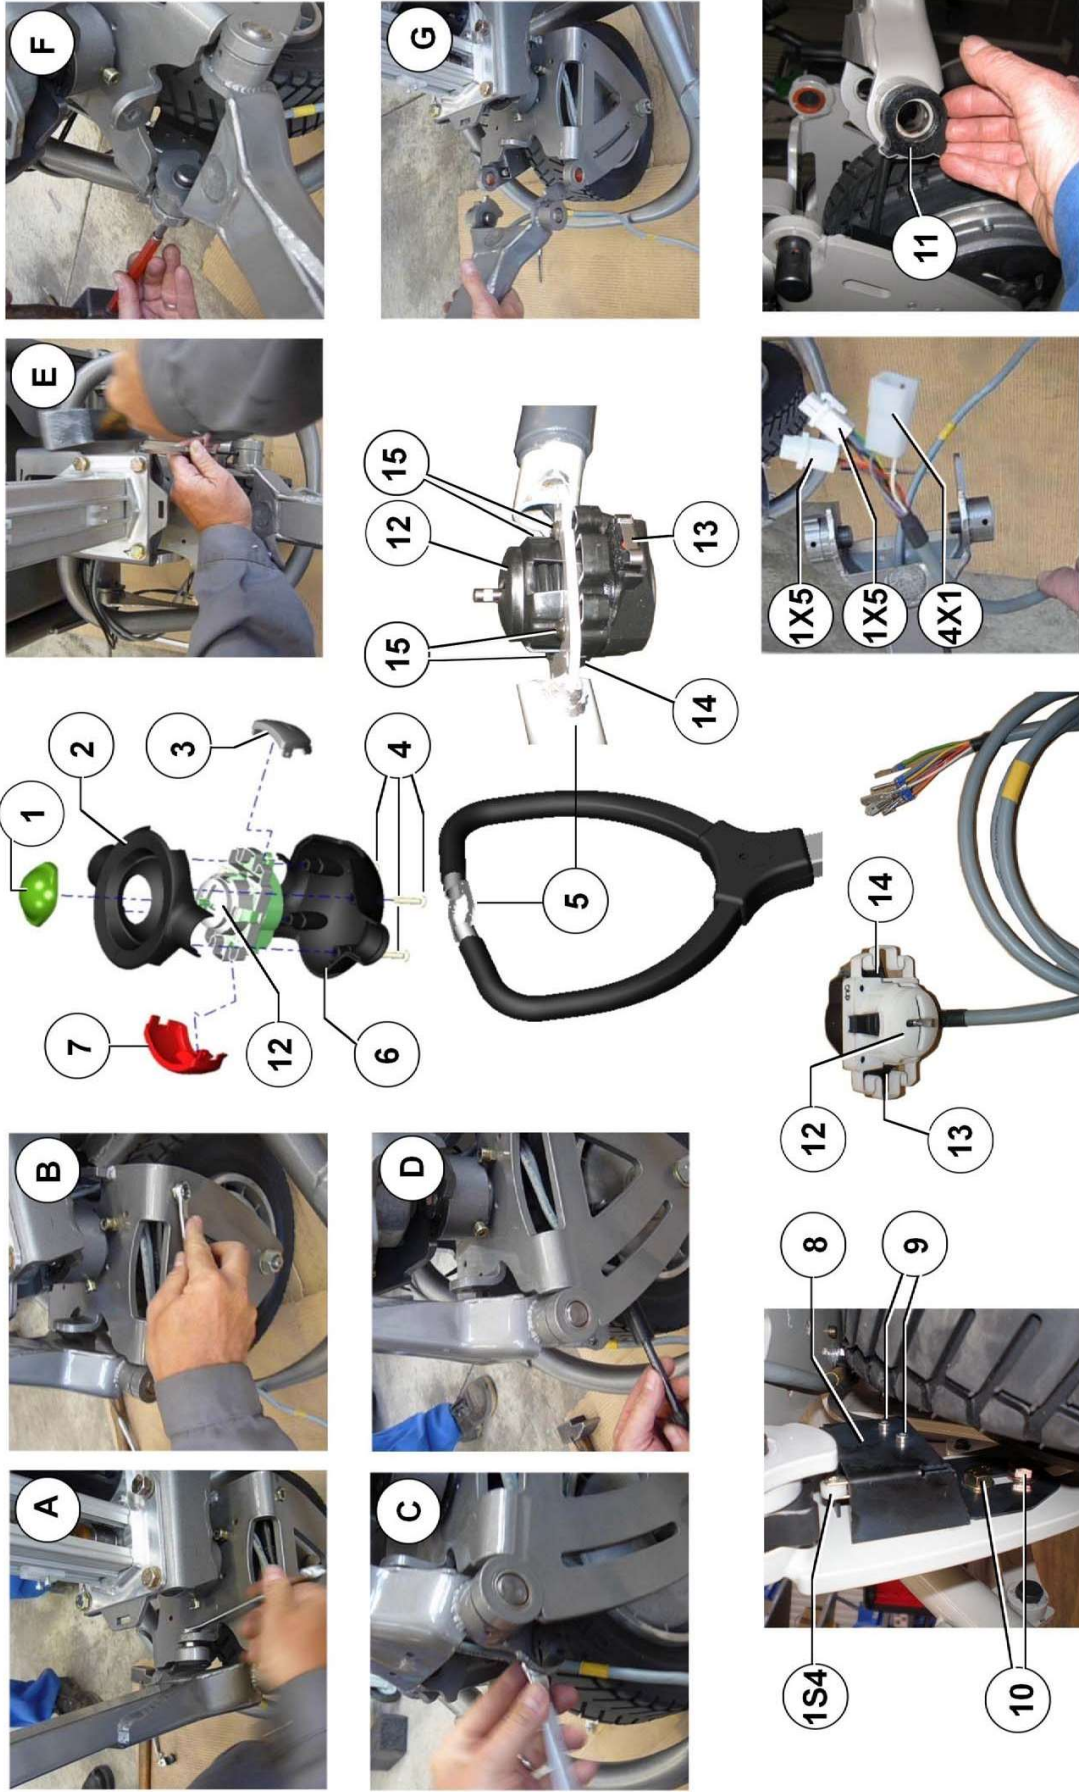

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL