

## SECTION 1 GENERAL

|                              |      |
|------------------------------|------|
| Group 1 Safety Hints .....   | 1-1  |
| Group 2 Specifications ..... | 1-10 |

## SECTION 2 STRUCTURE AND FUNCTION

|                                  |       |
|----------------------------------|-------|
| Group 1 Pump Device .....        | 2-1   |
| Group 2 Main Control Valve ..... | 2-23  |
| Group 3 Swing Device .....       | 2-59  |
| Group 4 Travel Device .....      | 2-70  |
| Group 5 RCV Lever .....          | 2-98  |
| Group 6 RCV Pedal .....          | 2-105 |

## SECTION 3 HYDRAULIC SYSTEM

|                                  |      |
|----------------------------------|------|
| Group 1 Hydraulic Circuit .....  | 3-1  |
| Group 2 Main Circuit .....       | 3-3  |
| Group 3 Pilot Circuit .....      | 3-6  |
| Group 4 Single Operation .....   | 3-14 |
| Group 5 Combined Operation ..... | 3-24 |

## SECTION 4 ELECTRICAL SYSTEM

|  |      |
|--|------|
| Group 1 Component Location .....                 | 4-1  |
| Group 2 Electrical Circuit .....                 | 4-3  |
| Group 3 Electrical Component Specification ..... | 4-22 |
| Group 4 Connectors .....                         | 4-30 |

## SECTION 5 MECHATRONICS SYSTEM

|   |      |
|---|------|
| Group 1 Outline .....                             | 5-1  |
| Group 2 Mode selection System .....               | 5-3  |
| Group 3 Automatic Deceleration System .....       | 5-6  |
| Group 4 Power Boost System .....                  | 5-7  |
| Group 5 Travel Speed Control System .....         | 5-8  |
| Group 6 Automatic Warming Up Function .....       | 5-9  |
| Group 7 Engine Overheat Prevention Function ..... | 5-10 |
| Group 8 Variable Power Control System .....       | 5-11 |

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL



# SECTION 1 GENERAL



|                              |      |
|------------------------------|------|
| Group 1 Safety Hints .....   | 1-1  |
| Group 2 Specifications ..... | 1-10 |

# GROUP 2 SPECIFICATIONS

## 1. MAJOR COMPONENT

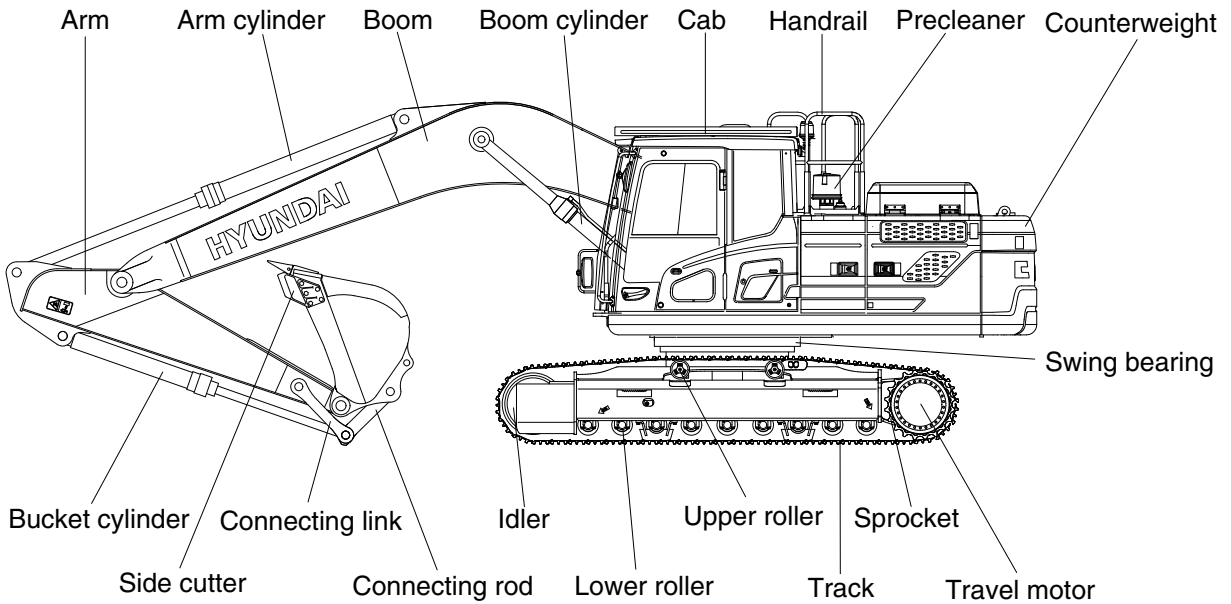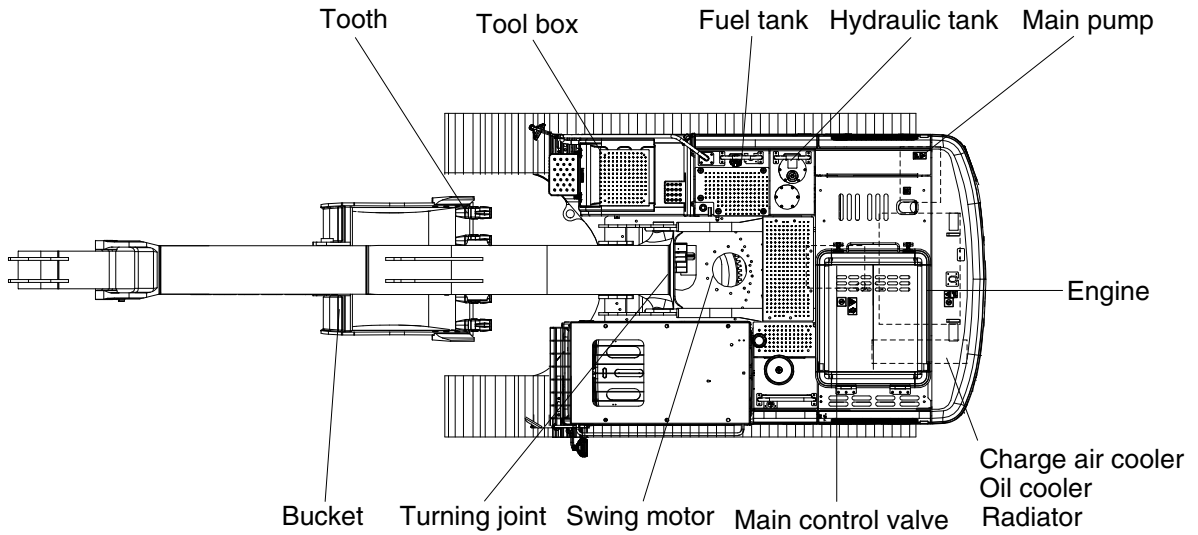










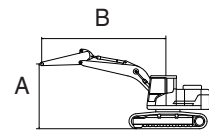

260SA2SP01

| Model          | Type         | Boom        | Arm         | Counterweight | Shoe       | Wheel      | Dozer |      | Outrigger |      |
|----------------|--------------|-------------|-------------|---------------|------------|------------|-------|------|-----------|------|
|                |              | Length [mm] | Length [mm] | weight [kg]   | width [mm] | width [mm] | Front | Rear | Front     | Rear |
| HX260LT3<br>HW | MONO<br>BOOM | 5850        | 2100        | 4600          | 600        | -          | -     | -    | -         | -    |

·  : Rating over-front

·  : Rating over-side or 360 degree



| Lift-point height (A) | Lift-point radius (B)   |   |   |   |   |   |   |   | At max. reach   |   |        |        |
|-----------------------|---|---|---|---|---|---|---|---|---|---|--------|--------|
|                       | 3.0 m (9.8 ft)  |   | 4.5 m (14.8 ft)   |   | 6.0 m (19.7 ft)   |   | 7.5 m (24.6 ft)   |   | Capacity  |   | Reach  |        |
|                       |  |  |  |  |  |  |  |  |  |  | m (ft) |        |
| 7.5 m (24.6 ft)       | kg  |   |   |   |   |   |   |   |   | *7200   | *7200  | 5.91   |
|                       | lb  |   |   |   |   |   |   |   |   | *15870  | *15870 | (19.4) |
| 6.0 m (19.7 ft)       | kg  |   | *7800   | *7800   | *7110   | *7110   |   |   |   | *7130   | 6500   | 6.98   |
|                       | lb  |   | *17200  | *17200  | *15670  | *15670  |   |   |   | *15720  | 14330  | (22.9) |
| 4.5 m (14.8 ft)       | kg  |   | *9890   | *9890   | *7920   | *7920   | *7230   | 5720  | *7230   | 5590  | 7.61   |        |
|                       | lb  |   | *21800  | *21800  | *17460  | *17460  | *15940  | 12610   | *15940  | 12320   | (25.0) |        |
| 3.0 m (9.8 ft)        | kg  |   |   |   | *9010   | 7730  | *7610   | 5610  | *7440   | 5190  | 7.90   |        |
|                       | lb  |   |   |   | *19860  | 17040   | *16780  | 12370   | *16400  | 11440   | (25.9) |        |
| 1.5 m (4.9 ft)        | kg  |   |   |   | *9940   | 7480  | *8040   | 5490  | 7580  | 5110  | 7.90   |        |
|                       | lb  |   |   |   | *21910  | 16490   | *17730  | 12100   | 16710   | 11270   | (25.9) |        |
| 0.0 m (0.0 ft)        | kg  |   | *14140  | 11220   | *10380  | 7360  | 8130  | 5450  | 7980  | 5350  | 7.60   |        |
|                       | lb  |   | *31170  | 24740   | *22880  | 16230   | 17920   | 12020   | 17590   | 11790   | (24.9) |        |
| -1.5 m (-4.9 ft)      | kg  | *13230  | *13230  | *13550  | 11290   | *10130  | 7380  |   |   | *8390   | 6060   | 6.97   |
|                       | lb  | *29170  | *29170  | *29870  | 24890   | *22330  | 16270   |   |   | *18500  | 13360  | (22.9) |
| -3.0 m (-9.8 ft)      | kg  | *16040  | *16040  | *11860  | 11520   |   |   |   |   | *8640   | 7820   | 5.89   |
|                       | lb  | *35360  | *35360  | *26150  | 25400   |   |   |   |   | *19050  | 17240  | (19.3) |

Note 1. Lifting capacity are based on ISO 10567.

2. Lifting capacity of the HX series does not exceed 75% of tipping load with the machine on firm level ground or 87% of full hydraulic capacity.

3. The Lift-point is bucket pivot mounting pin on the arm (without bucket mass).

4. \*Indicates load limited by hydraulic capacity.

※ Lifting capacities are based upon a standard machine conditions.

Lifting capacities will vary with different work tools ground conditions and attachments.

The difference between the weight of a work tool attachment must be subtracted.

Consult your HD Hyundai Construction Equipment dealer regarding the lifting capacities for specific work tools and attachments.

Failure to comply to the rated load can cause possible personal injury or property damage.

Make adjustments to the rated load as necessary for non-standard configurations.

### 3) GEAR PUMP

| Item             | Specification                             |
|------------------|---|
| Type             | Fixed displacement gear pump single stage |
| Capacity         | 10 cc/rev                                 |
| Maximum pressure | 40 kgf/cm <sup>2</sup> (570 psi)          |
| Rated oil flow   | 19 ℓ /min (5.0 U.S. gpm/4.2 U.K. gpm)     |

### 4) MAIN CONTROL VALVE

| Item                       | Specification   |                                    |
|----------------------------|---|------------------------------------|
| Type                       | 10 spools, two block  |                                    |
| Operating method           | Hydraulic pilot system  |                                    |
| Main relief valve pressure | 350 kgf/cm <sup>2</sup> (4980 psi) [380 kgf/cm <sup>2</sup> (5400 psi)] |                                    |
| Port relief valve pressure | Boom  | 400 kgf/cm <sup>2</sup> (5690 psi) |
|                            | Arm   | 400 kgf/cm <sup>2</sup> (5690 psi) |
|                            | Bucket  | 400 kgf/cm <sup>2</sup> (5690 psi) |

[ ] : Power boost


### 5) SWING MOTOR

| Item                   | Specification                                     |
|------------------------|---|
| Type                   | Fixed displacement axial piston motor             |
| Capacity               | 142.8 cc/rev                                      |
| Relief pressure        | 300 kgf/cm <sup>2</sup> (4267 psi)                |
| Braking system         | Automatic spring applied hydraulic released       |
| Braking torque         | 58 kgf · m (420 lbf · ft) over                    |
| Brake release pressure | 20.9~35.5 kgf/cm <sup>2</sup> (297~505 psi) below |
| Reduction gear type    | 2 - stage planetary                               |


### 6) TRAVEL MOTOR

| Item                   | Specification                               |                                  |
|------------------------|---|----------------------------------|
|                        | HX260LT3                                    | HX260LT3 HW                      |
| Type                   | Variable displacement axial piston motor    |                                  |
| Capacity               | 182.4/105.4 cc/rev                          | 282.6/156.9 cc/rev               |
| Relief pressure        | 350 kgf/cm <sup>2</sup> (4980 psi)          |                                  |
| Braking system         | Automatic spring applied hydraulic released |                                  |
| Braking torque         | 72 kgf · m (521 lbf · ft)                   | 134 kgf · m (969 lbf · ft)       |
| Brake release pressure | 16.8 kgf/cm <sup>2</sup> (239 psi)          | 17 kgf/cm <sup>2</sup> (242 psi) |
| Reduction gear type    | 2-stage planetary                           |                                  |

# REGULATOR (2/2)

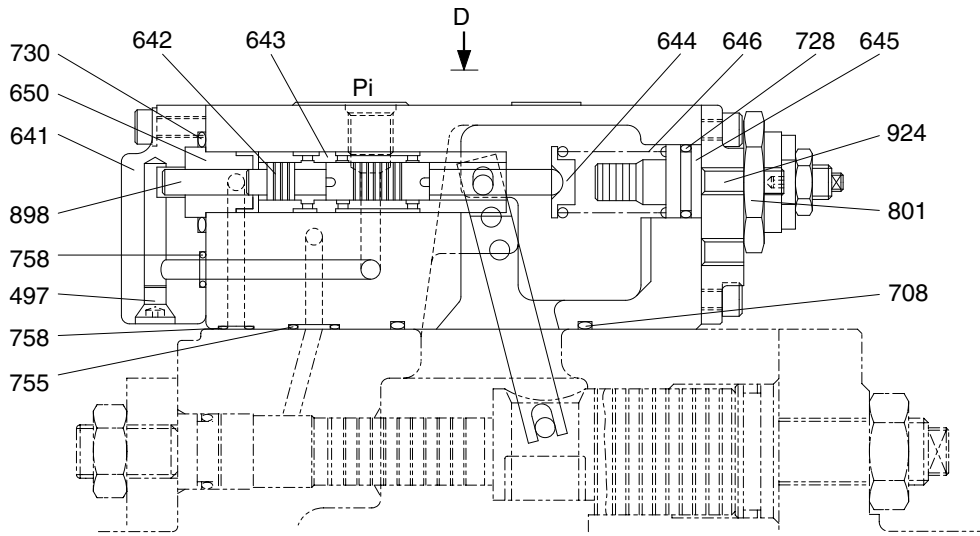

SECTION B-B

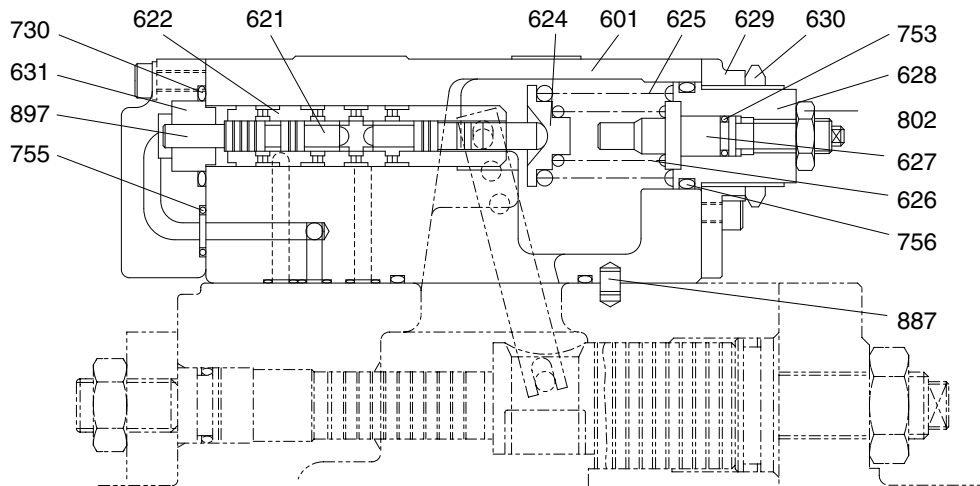

SECTION A-A

220S2MP09A

- |                        |                     |                 |
|------------------------|---------------------|-----------------|
| 497 Plug               | 630 Lock nut        | 730 O-ring      |
| 601 Casing             | 631 Sleeve, pf      | 753 O-ring      |
| 621 Compensator spool  | 641 Pilot cover     | 755 O-ring      |
| 622 Compensator sleeve | 642 Pilot spool     | 756 O-ring      |
| 624 Spring seat (C)    | 643 Pilot sleeve    | 758 Square ring |
| 625 Outer spring       | 644 Spring seat (Q) | 801 Nut         |
| 626 Inner spring       | 645 Adjust stem (Q) | 802 Nut         |
| 627 Adjust stem (C)    | 646 Pilot spring    | 887 Pin         |
| 628 Adjust screw (C)   | 650 Sleeve, pi      | 897 Piston, pf  |
| 629 Cover (C)          | 708 O-ring          | 898 Piston, pi  |
|                        | 728 O-ring          | 924 Set screw   |


① **Overload prevention function**

As own pump discharges pressure Pd1, or partner pump discharges pressure Pd2 increase, Pd1, and Pd2 work on the stepped section of the compensator spool (621), and spool moves toward right direction. And stops at the position where the force of the outer spring (625) and inner spring (626) and hydraulic pressure balances.

The movement of the compensator spool (621) causes the delivery pressure Pd1 to connect to the port C1 and to be admitted to the large-diameter section of the servo piston (532).


Although the delivery pressure Pd1 is constantly admitted to small diameter section of servo piston (532), the servo piston (532) moves to the left because of its difference of the area between large and small-diameter section.

As a result, the tilting angle is decreased. As the servo piston (532) moves, the feedback lever (611) rotates around the pivot A, and the compensator sleeve (622) moves to right direction till the opening between the spool and sleeve being closed.

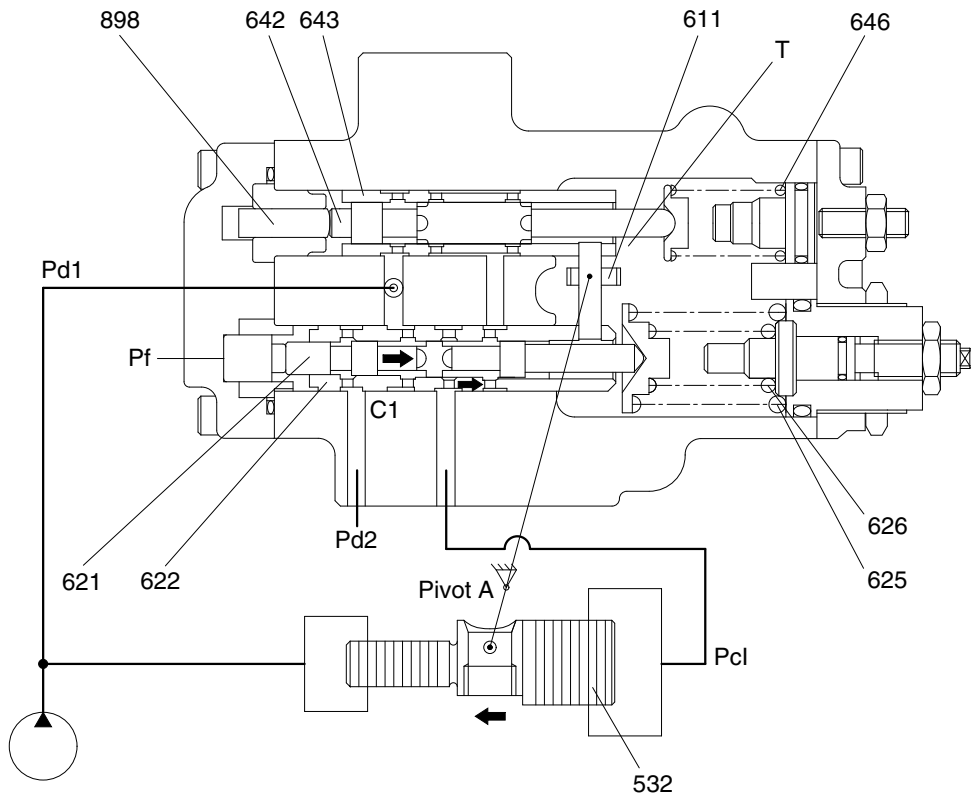


220S2MP21

# STRUCTURE (5/8)

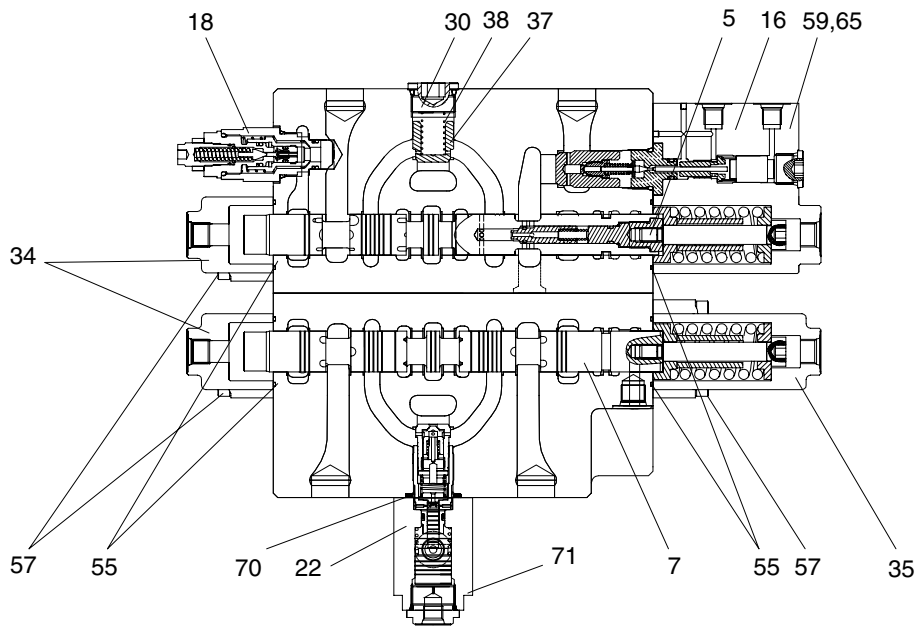

C-C' (SWING AND BOOM1)

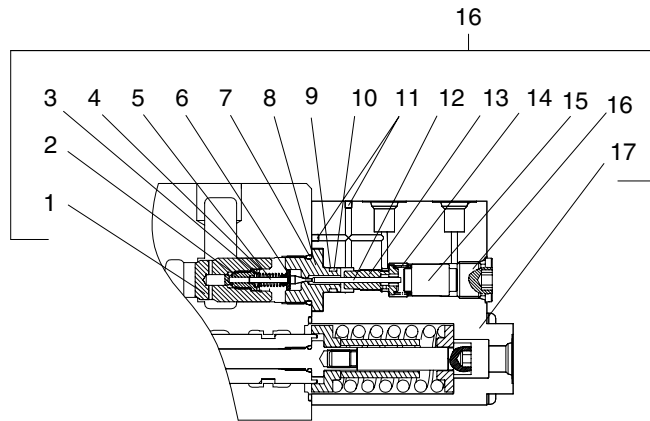

HOLDING VALVE

220SA2MC06


- |                       |                          |                         |
|-----------------------|--------------------------|-------------------------|
| 5 Boom 1 spool kit    | 16-9 Back up ring        | 30 Plug                 |
| 7 Swing spool kit     | 16-10 O-ring             | 34 Pilot cover A        |
| 16 Holding valve assy | 16-11 Plug               | 35 Pilot cover B        |
| 16-1 Main poppet      | 16-12 Pilot piston       | 37 Check valve poppet 1 |
| 16-2 Restrictor       | 16-13 Piston guide       | 38 Check valve spring 1 |
| 16-3 Pilot spring     | 16-14 Spring             | 55 O-ring               |
| 16-4 C-ring           | 16-15 Main piston        | 57 Hex socket head bolt |
| 16-5 Pilot poppet     | 16-16 Plug               | 59 Hex socket head bolt |
| 16-6 Poppet guide     | 16-17 Block              | 65 Spring washer        |
| 16-7 O-ring           | 18 Overload relief valve | 70 O-ring               |
| 16-8 Poppet seat      | 22 Swing logic valve     | 71 Hex socket head bolt |

### (3) Travel straight function

This function keeps straight travel in case of simultaneous operation of other actuators (boom, arm, bucket, swing etc) during a straight travel.

In normal conditions, travel straight spool keeps neutral conditions, the pressurized oil of the P1 and P2 pumps is supplied to each passage independently.

When the attachment spool is operated under the travel operation of both sides, the pilot pressure is supplied to the spring side port of the travel straight spool and then the travel straight spool is shifted to the left direction.

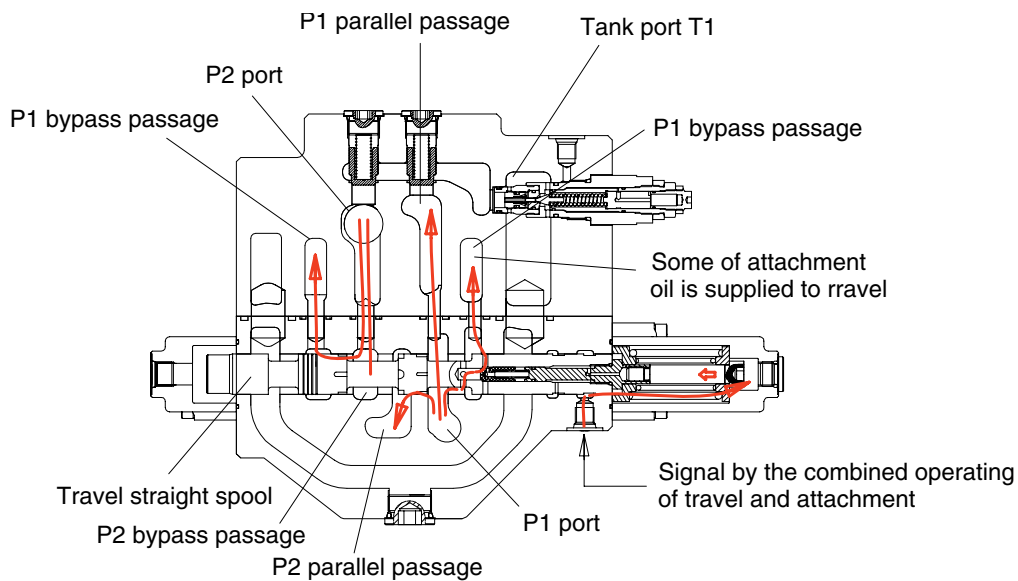

A-A' (STRAIGHT TRAVEL AND SUPPLY)

220SA2MC20

After changeover of the travel straight spool, the pressurized oil discharged from the P1 pump is connected with P2 port oil and is supplied to the attachment line through both parallel passage of the P1 and P2.

Also, some of the pressurized oil open the check valve of the spool inside through side of the travel straight spool and is connected with the bypass passage of the P2 side.

On the other hand, the pressurized oil discharged from the P2 pump is connected with P1 port oil and is supplied to the travel line through both parallel passage of the P1 and P2.

Accordingly the attachment spool is operated under the travel operation of both sides, the pressurized oil discharged from P2 pump is mainly supplied to left and right travel line and the pressurized oil discharged from P1 pump is mainly supplied to attachment line.


As a result, simultaneous operation of both travel spools and attachment is not influenced to the travel operation of the both sides and the machine keeps straight travel.

## (2) Boom priority function

This function is used to speed up of the boom by reducing the swing speed when the swing operation with boom operation simultaneously.

The boom priority signal is supplied the pilot port and the poppet of the swing logic valve is closed and then the pressurized oil from P2 port is reduced by the oil leaking through the orifice.


As a result, the swing speed is slowed.

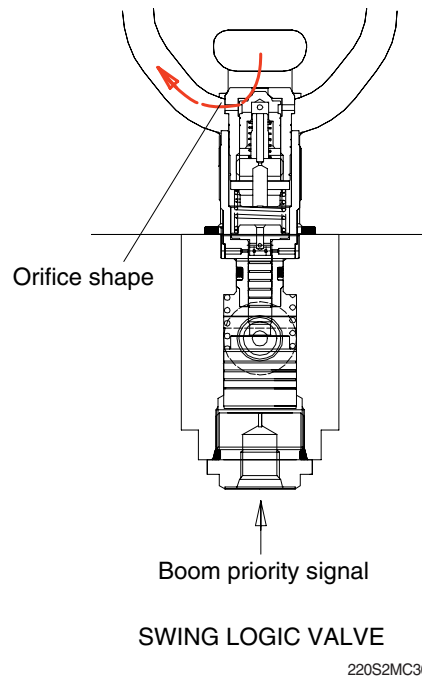

## 12) OPERATION OF PORT RELIEF VALVE

### (1) Function as relief valve


- ① The pressurized oil passes through the internal passage of the piston A, fitted in the main poppet and the orifice A and is filled up in the chamber A of the inside and seats the main poppet against socket and socket against the housing securely.

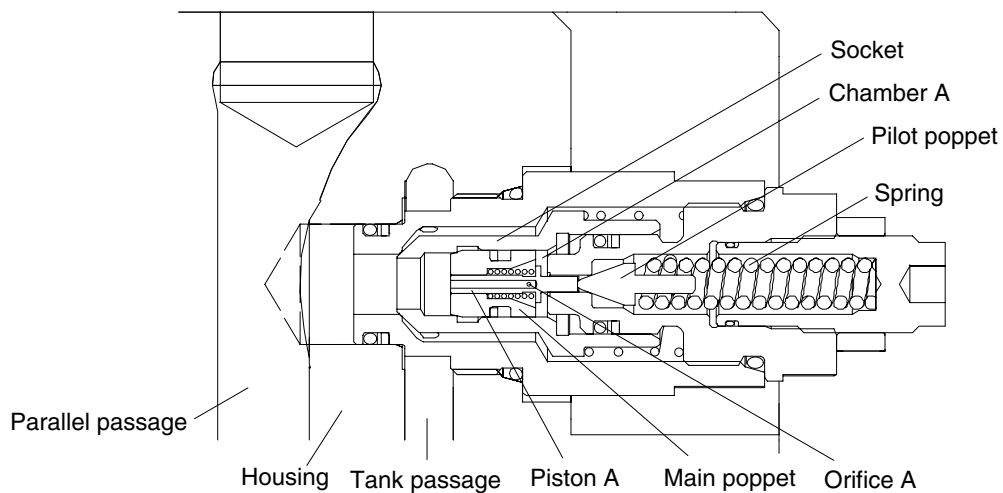

PORT RELIEF VALVE

220S2MC43

- ② When the pressurized oil from the actuators becomes equal to the set pressure of the spring, the hydraulic oil apply to the pilot poppet and pushes the pilot poppet to the right direction and flows to tank passage through the piston A internal passage, orifice A, chamber A, periphery orifice B and the hole E.

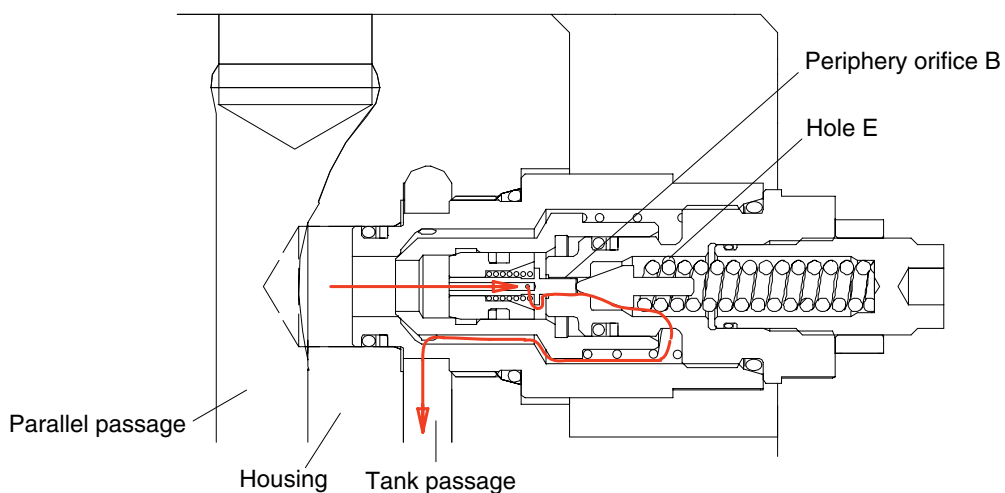

OPERATION 1 OF PORT RELIEF VALVE


220S2MC44

## 4) BRAKE SYSTEM

### (1) Control valve swing brake system

This is the brake system to stop the swing motion of the excavator during operation.

In this system, the hydraulic circuit is throttled by the swing control valve, and the resistance created by this throttling works as a brake force to slow down the swing motion.

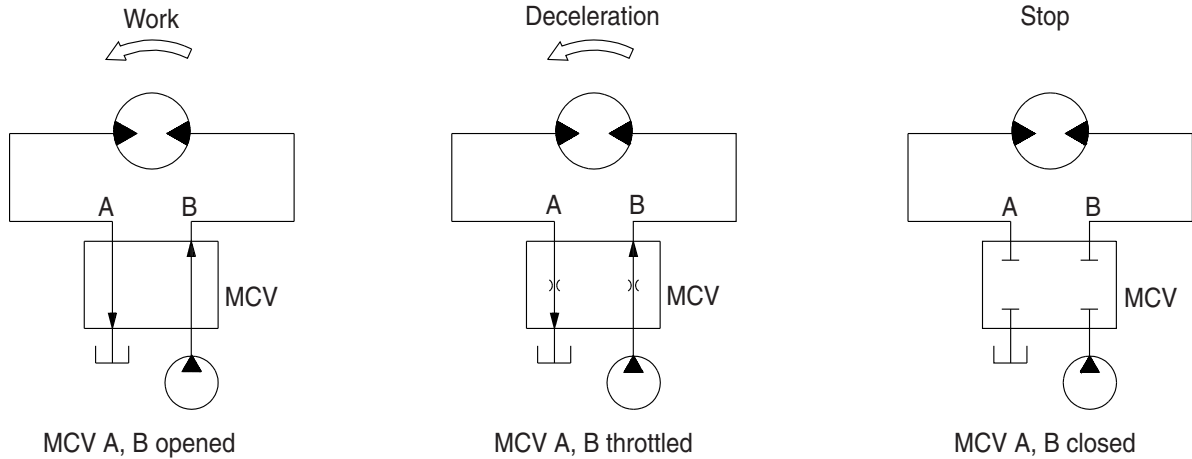

2-48(1)


### (2) Mechanical swing parking brake system

This is function as a parking brake only when all of the RCV lever (except swing, arm in) are not operated.

#### ① Brake assembly

Circumferential rotation of separate plate (14) is constrained by the groove located at casing (1). When housing is pressed down by brake spring (16) through friction plate (13), separate plate (14) and parking piston (15), friction force occurs there.

Cylinder block (8) is constrained by this friction force and brake acts, while brake releases when hydraulic force exceeds spring force.

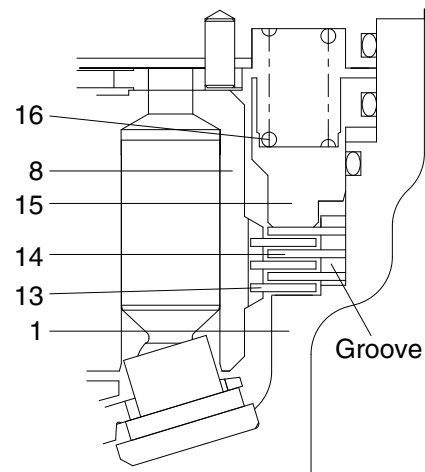

2209A2SM35

|    |                |    |                 |
|----|----------------|----|-----------------|
| 1  | Casing         | 14 | Separated plate |
| 8  | Cylinder block | 15 | Parking piston  |
| 13 | Friction plate | 16 | Brake spring    |


## (2) Operation

Two pieces of overload valves are located at cross-over position in the counterbalance circuit of brake valve and have the following functions :

- ① When hydraulic motor starts, keep the driving pressure below predetermined value and while accelerating, bypasses surplus oil to return line.
- ② When stopping the motor, keep the brake pressure, that develops on the outlet side of motor, under the predetermined value to stop the inertial force.
- ③ To accelerate sharply while starting, and to mitigate the braking shock while stopping. For these purposes, the developed pressure is kept comparatively low for a short period, then keep the line pressure as normal value. While the pressure is low, meshing of reduction gears, crawler and sprocket etc. can be smoothly done and the shock are absorbed.

When starting, "A" port pressure of overload valve increases, this pressure is applied to the effective diameter of poppet (42-10) which seats on the poppet seat (42-11) and, at the same time, is delivered, via small hole, to the spring seat (42-5) located inside the sleeve (42-6) and the seat bore pressure increases up to "A" port pressure. The poppet (42-10) opposes to spring (42-4) by the force of the pressure exerted on the area difference between poppet seat's effective diameter and spring seat bore and keep the predetermined pressure.

When hydraulically braking, the piston (42-7) is at the left position by the driving pressure, and when "A" port pressure increases, the pressure is applied also to the piston (42-7) through the small hole in the poppet (42-10) and piston (42-7) moves rightward until it touches the stopper in rear cover. In this while, the poppet (42-10) maintains "A" port pressure at comparatively low against the spring (42-4) force and exhaust oil to "B" port side. After the piston reached to the plug, the valve acts the same as at starting.

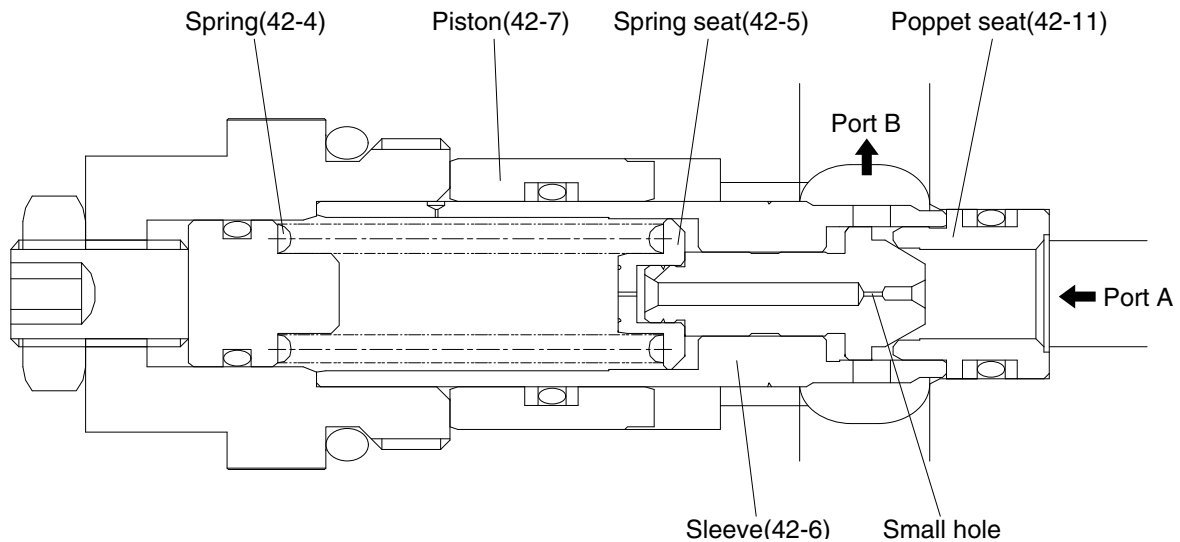


25092TM27

### 3. OPERATION

#### 1) MOTOR

High pressure oil delivered from hydraulic pump is led to inlet port that is provided in the brake valve portion and, through the rear cover (34) and valve plate (28), led to cylinder block (18). The oil flow and direction of shaft rotation are indicated in table.

Shaft rotation Left (Counterclockwise)      Shaft rotation Right (Clockwise)

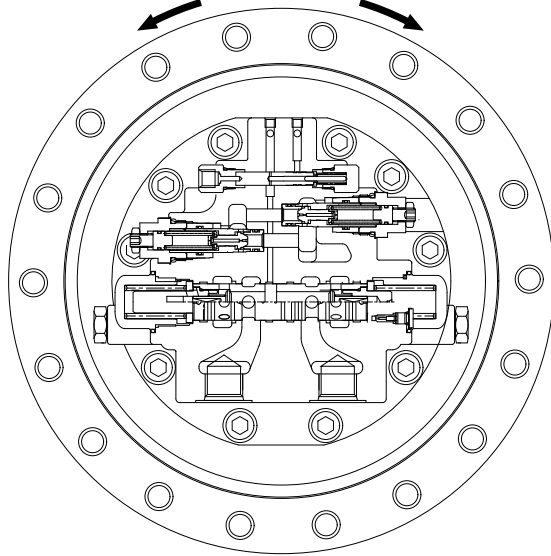

| Inlet port | Outlet port | Direction of shaft rotation (viewing from rear cover) |
|------------|-------------|---|
| VB         | VA          | Right (clockwise)                                     |
| VA         | VB          | Left (counterclockwise)                               |

300L2TM04

As shown in below figure, high pressure oil is supplied to the pistons which are on one side of the line Y-Y that connects upper and lower dead points and produces force F1.


$$F1 = P \times A \text{ (P : pressure, A : area of piston section)}$$

The swash plate (17) with inclined angle of  $\alpha$  divides this force F1 into thrust force F2 and radial force F31-34.

This radial force is applied to axis Y-Y as turning force and generate drive torque of T.

$$T = r_1 \cdot F31 + r_2 \cdot F32 + r_3 \cdot F33 + r_4 \cdot F34$$

This drive torque is transmitted via cylinder block (18) to driving shaft (9).

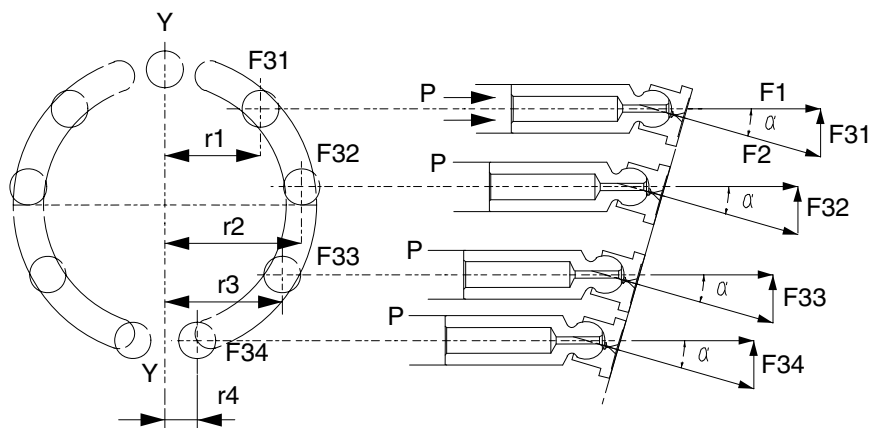

29092TM07

## 6) REDUCTION GEAR

Reduction unit slows down the rotating speed of motor and converts motor torque to strong rotating force.


This reduction unit utilizes two stages, planetary reduction system.

Planetary reduction system consists of sun gear, planetary gears, (planetary) carriers, and ring gear.

When the sun gear (s) is driven through input shaft, planetary pinions (b), rotating on their center, also move, meshing with fixed ring gear (a), around sun gear (s).

This movement is transferred to carrier (k) and deliver the torque.

This mechanism is called planetary gear mechanism.

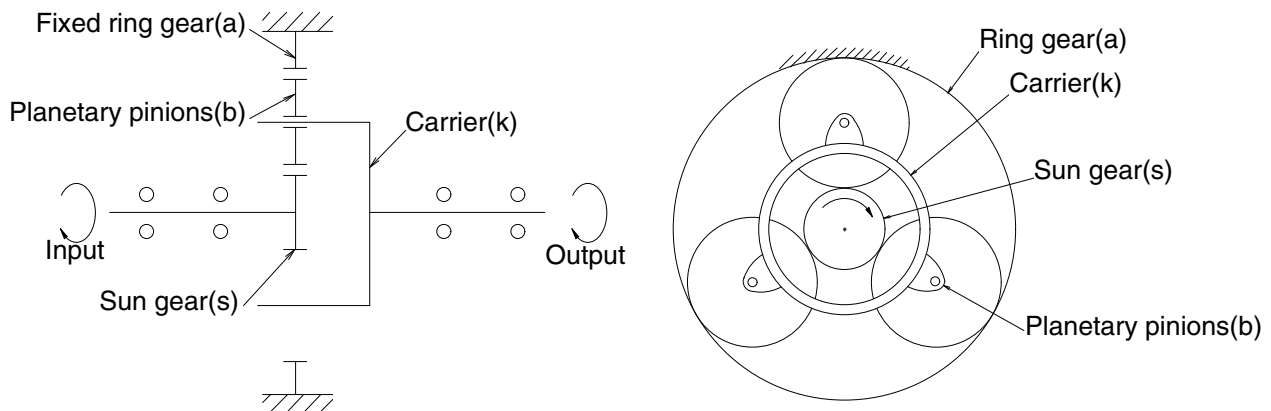


29072TM10

29072TM11

When the sun gear **S1** is driven by input shaft, planetary action occurs among gears **S1**, **a** and **b** and revolution of gear **b** transfers the rotation of carrier **K1** to second sun gear **S2**, and also evokes planetary action between gear **S2**, **a** and **d**.

This time, because carrier **K2** is fixed to frame, gear **d** drives ring gear **a** and then ring gear **a** rotates to drive sprocket.

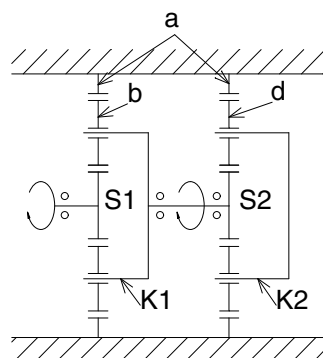

29072TM12

## 2. FUNCTION

### 1) FUNDAMENTAL FUNCTIONS

The pilot valve is a valve controls the spool stroke, direction, etc of a main control valve. This function is carried out by providing the spring at one end of the main control valve spool and applying the output pressure (secondary pressure) of the pilot valve to the other end.

For this function to be carried out satisfactorily, the pilot valve is composed of the following elements.

- (1) Inlet port (P) where oil is supplied from hydraulic pump.
- (2) Output port (1, 2, 3 & 4) to apply pressure supplied from inlet port to ends of control valve spools.
- (3) Tank port (T) necessary to control the above output pressure.
- (4) Spool to connect output port to inlet port tank port.
- (5) Mechanical means to control output pressure, including springs that work on the above spools.

### 2) FUNCTIONS OF MAJOR SECTIONS

The functions of the spool (8) are to receive the supply oil pressure from the hydraulic pump at its port P, and to change over oil paths to determine whether the pressure oil of port P is led to output ports 1, 2, 3 & 4 or the output spool to determine the output pressure.


The spring (6) works on this spool to determine the output pressure.

The change the deflection of this spring, the push rod (13) is inserted and can slide in the plug (20). For the purpose of changing th displacement of the push rod through the cam (27) and adjusting nut (32) are provided the pedal that can be tilted in any direction around the fulcrum of the cam (27) center.

The spring (9) works on the body (1) and spring seat (6) and tries to return the push rod (13) to the zero-displacement position irrespective of the output pressure, securing its resetting to the center position.

This also has the effect of a reaction spring to give appropriate control feeling to the operator.

## GROUP 3 PILOT CIRCUIT

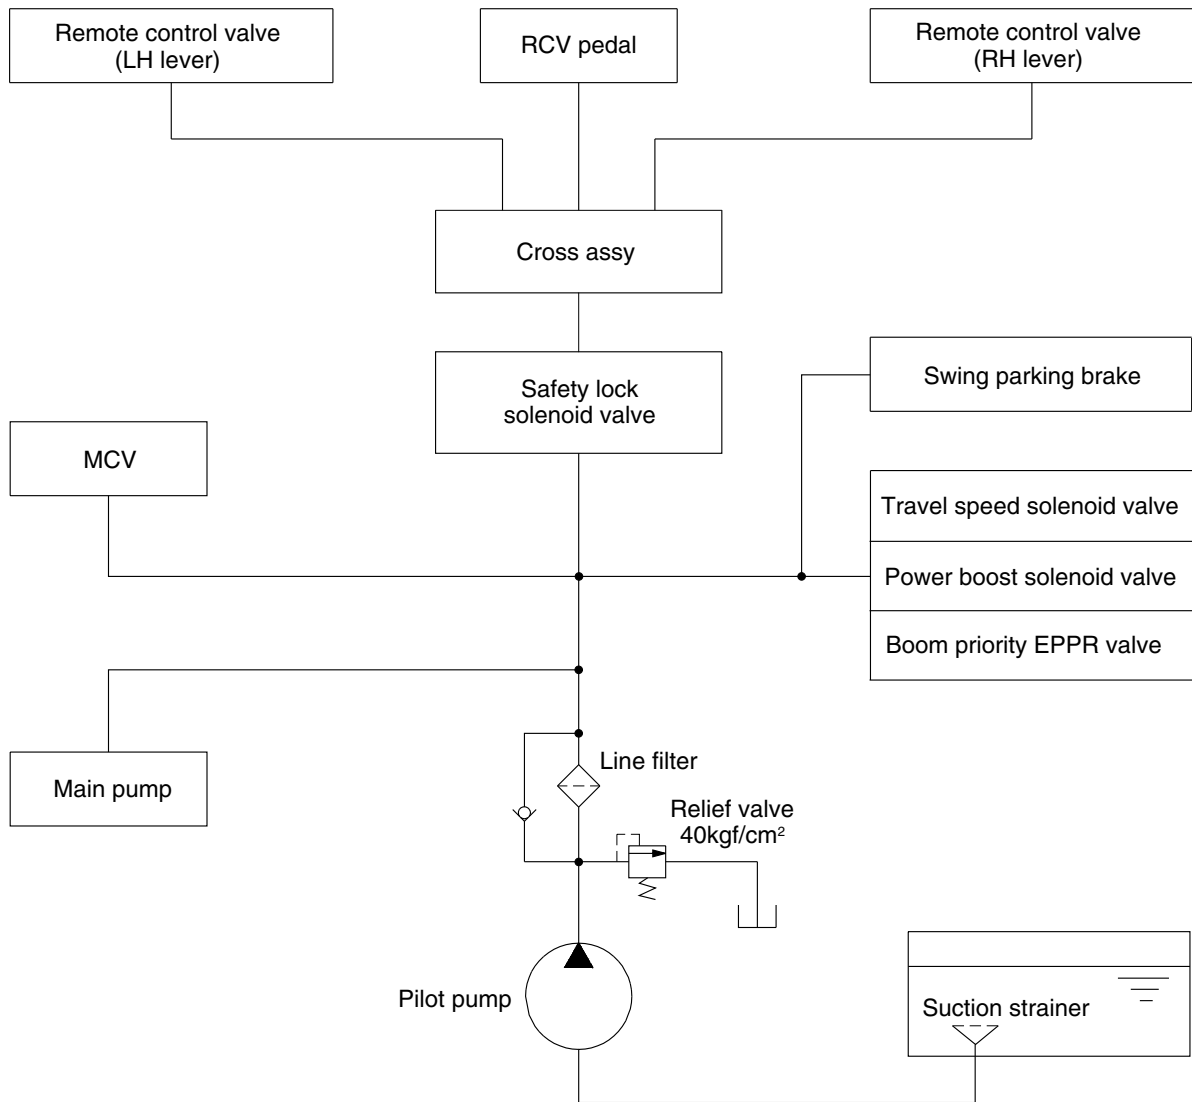


260SA3CI03

The pilot circuit consists of suction circuit, delivery circuit and return circuit.

The pilot pump is provided with relief valve, receives the oil from the hydraulic tank through the suction strainer.

The discharged oil from the pilot pump flows to the remote control valve through line filter, EPPR valve, solenoid valve assemblies, swing parking brake, main control valve, safety lock solenoid valve and cross assy.


### 3. ARM IN OPERATION

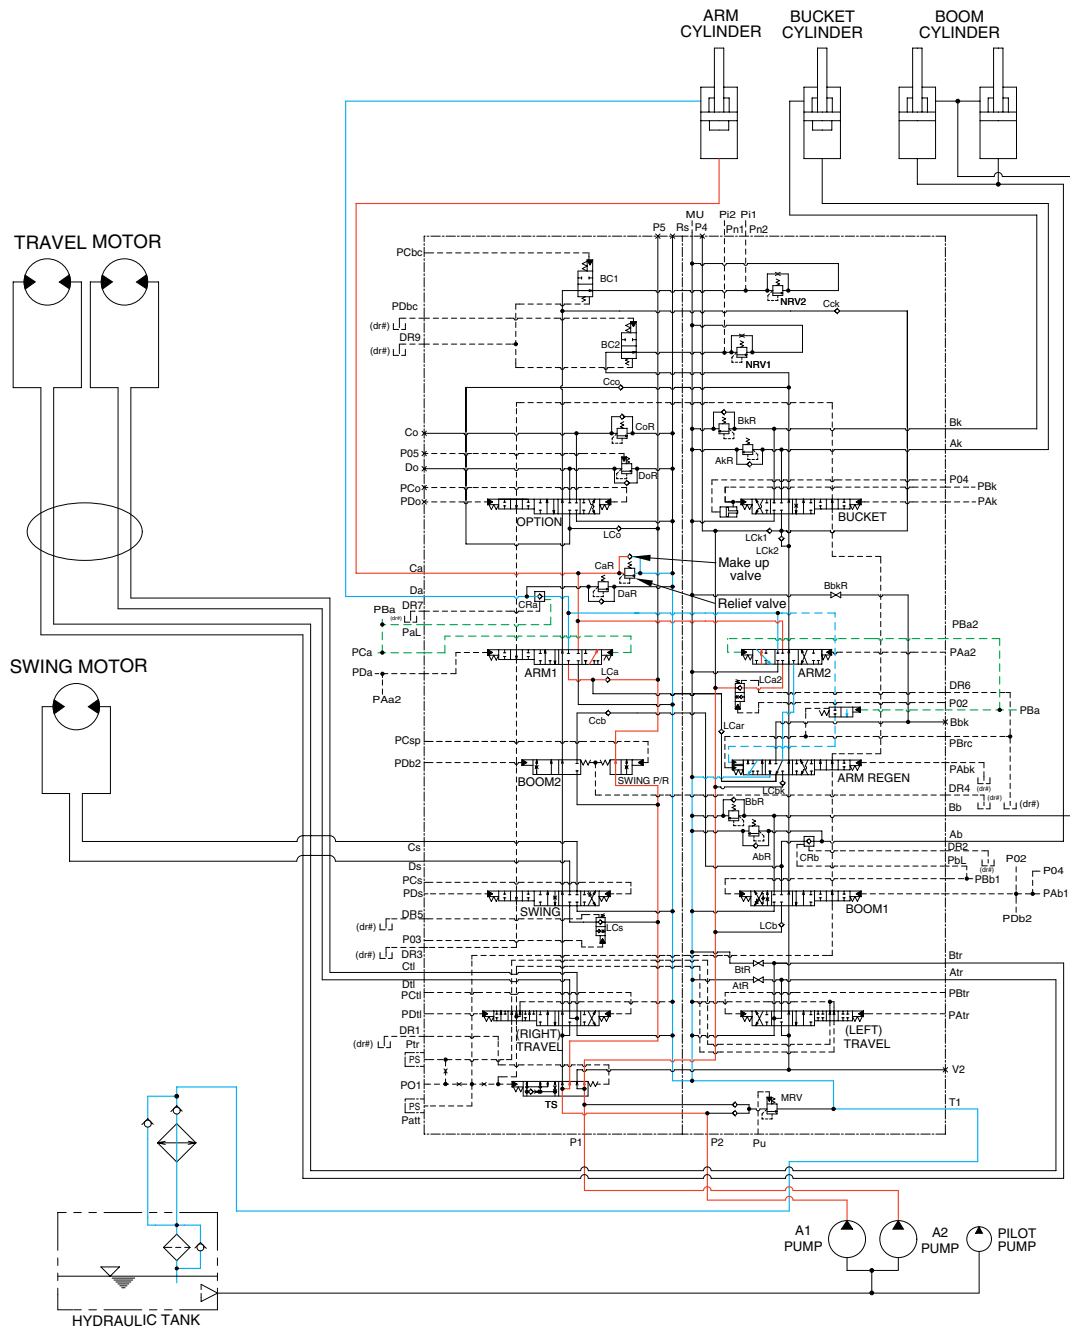

260SA3HC11

When the left control lever is pulled back, the arm spools in the main control valve are moved to the roll in position by the pilot oil pressure (PBa2, PCa) from the remote control valve. The oil from the A1 and A2 pump flows into the main control valve and then goes to the large chamber of arm cylinder. At the same time, the oil from small chamber of arm cylinder returns to the hydraulic oil tank through the arm 2 spool in the main control valve. When this happens, the arm rolls in. The excessive pressure in the arm cylinder head side is prevented by relief valve. The cavitation which will happen to the head side of the arm cylinder is also prevented by the make-up valve in the main control valve.

### 3. COMBINED SWING AND ARM OPERATION

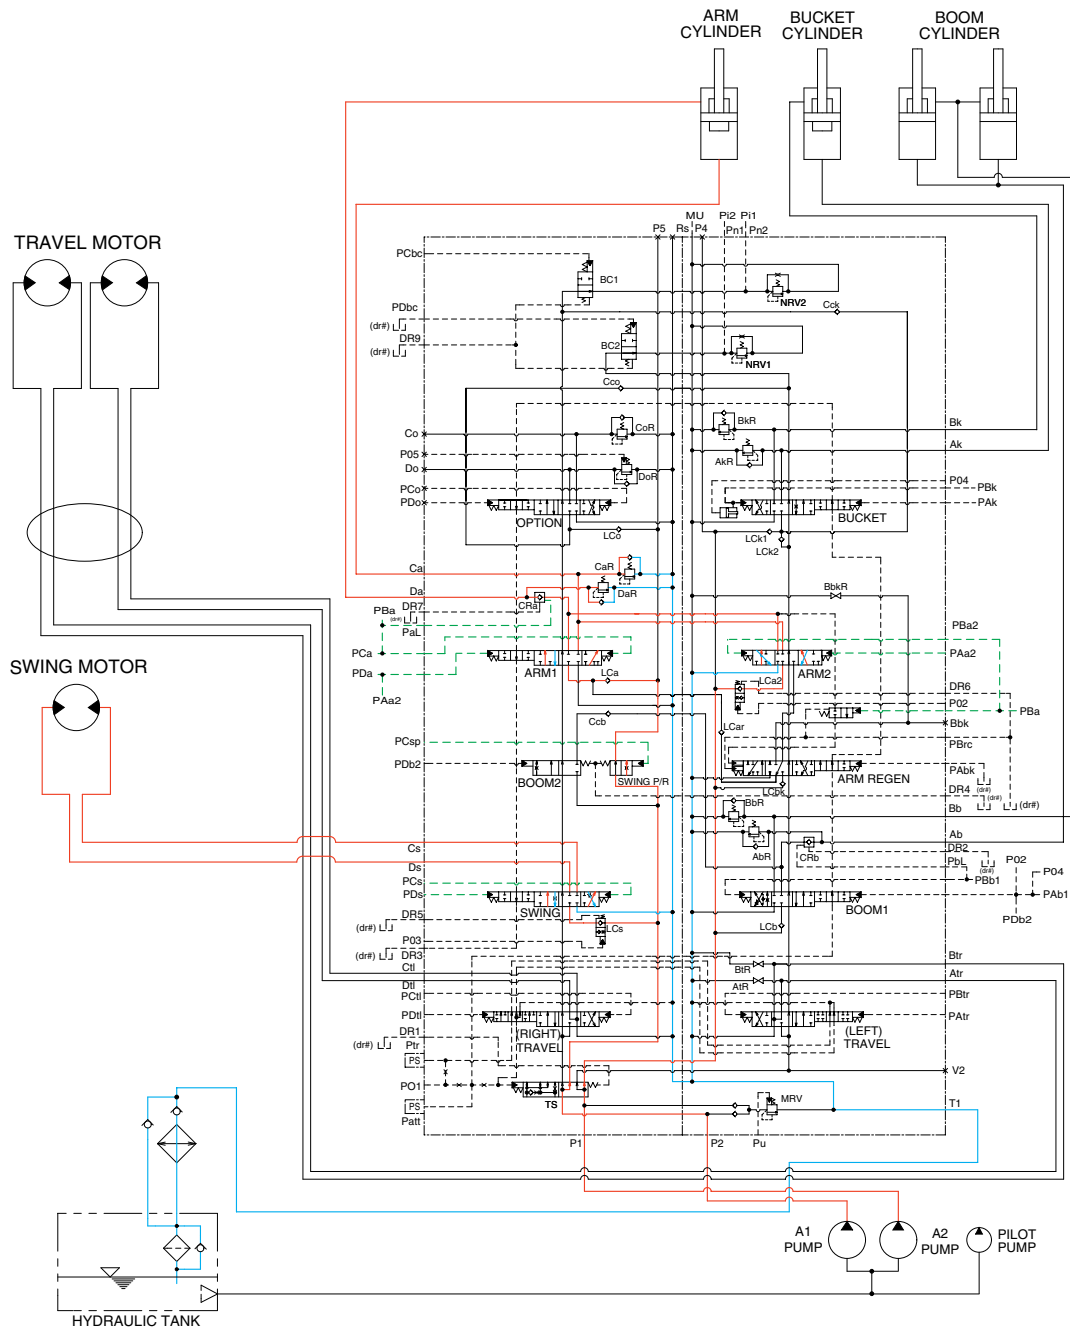

260SA3HC19



When the swing and arm functions are operated, simultaneously the swing spool and arm spools in the main control valve are moved to the functional position by the pilot oil pressure (PCs, PDs, PAA2, PBA2, PCa, PDa) from the remote control valve.

The oil from the A1 pump flows into the swing motor through swing spool and the arm cylinder through arm 1 spool.

The oil from the A2 pump flows into the arm cylinder through the arm 2 spool of the right control valve. The upper structure swings and the arm is operated.

Refer to page 2-51 for the swing operation preference function.

## 2. LOCATION 2

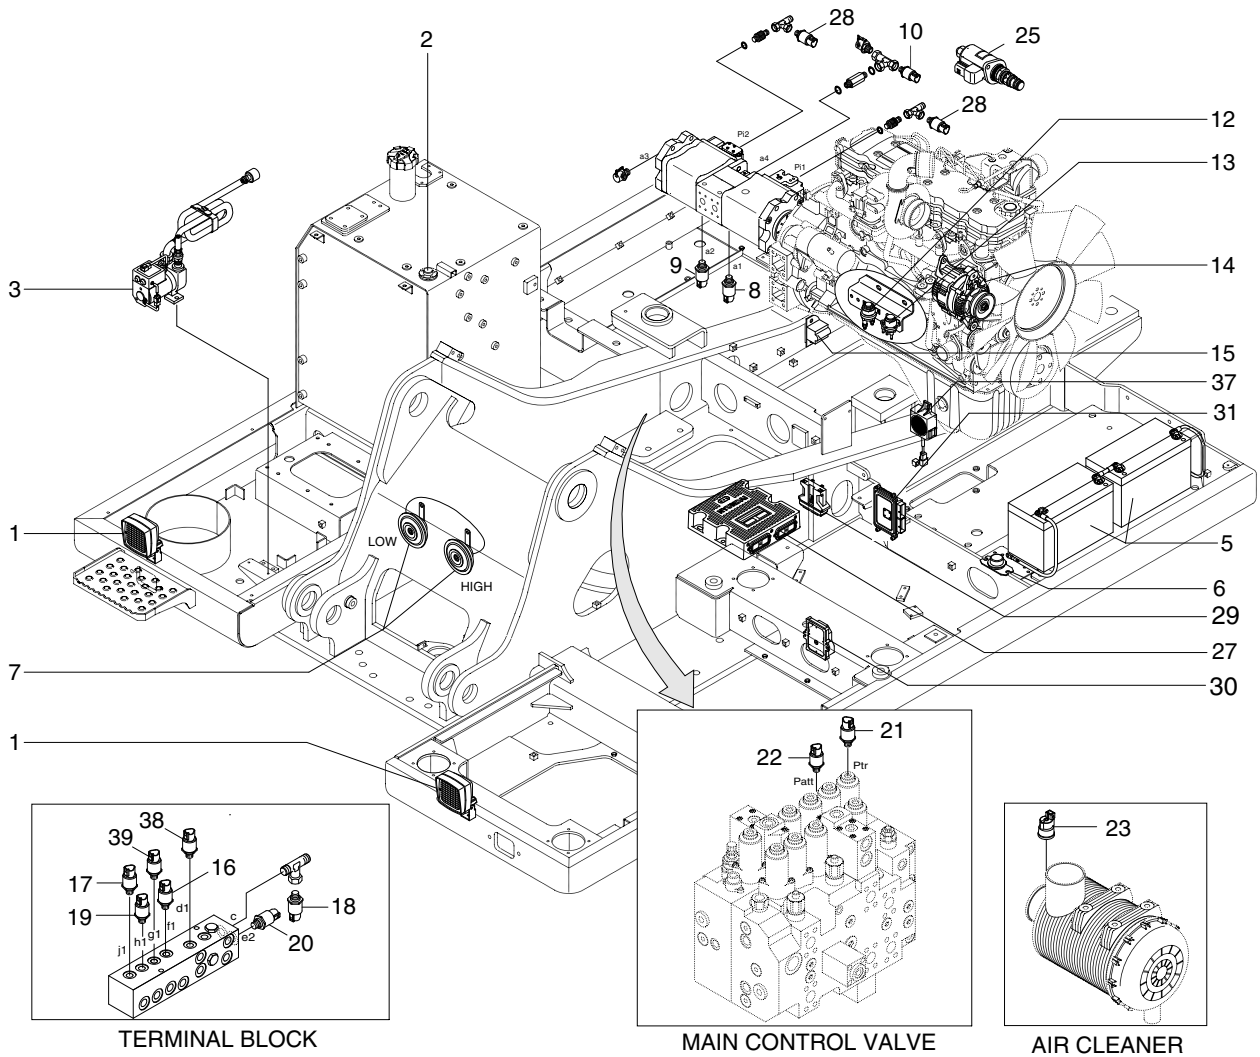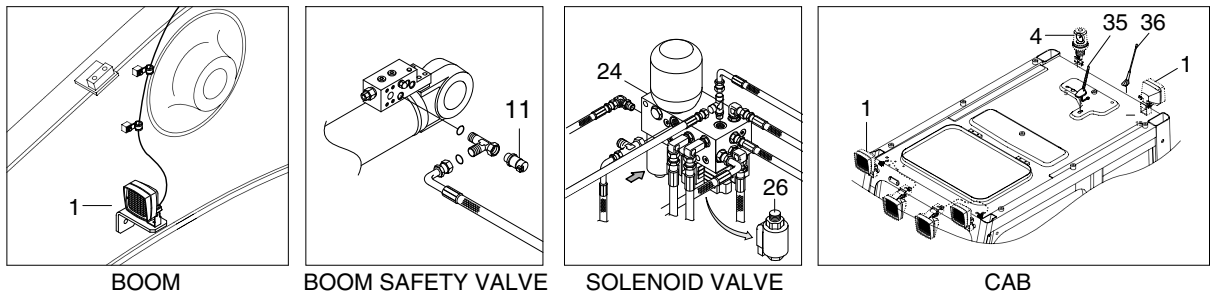

260SA4EL02

- |                             |                              |                               |
|-----------------------------|------------------------------|-------------------------------|
| 1 Lamp                      | 13 Heater relay              | 25 Pump EPPR valve            |
| 2 Fuel sender               | 14 Alternator                | 26 Boom priority EPPR valve   |
| 3 Fuel filler pump          | 15 Travel alarm buzzer       | 27 MCU                        |
| 4 Beacon lamp               | 16 Arm out pressure sensor   | 28 Pilot pressure sensor      |
| 5 Battery                   | 17 Boom up pressure sensor   | 29 PVG32 controller           |
| 6 Battery relay             | 18 Swing pressure sensor     | 30 Relay drive unit assy      |
| 7 Horn                      | 19 Boom down pressure sensor | 31 Around view controller     |
| 8 A1 pump pressure sensor   | 20 Arm in pressure sensor    | 35 Integrated antenna         |
| 9 A2 pump pressure sensor   | 21 Attach pressure sensor    | 36 Satellite antenna          |
| 10 EPPR pressure sensor     | 22 Travel pressure sensor    | 37 Warning buzzer             |
| 11 Overload pressure sensor | 23 Air cleaner sensor        | 38 Bucket in pressure sensor  |
| 12 Start relay              | 24 4 cartridge valve         | 39 Bucket out pressure sensor |

## 4. HEAD AND WORK LIGHT CIRCUIT

### 1) OPERATING FLOW

- Fuse box (No.20) → Head light relay [CR-13 (30, 86)]
- Fuse box (No.17) → Work light relay [CR-4 (30, 86)]
- Fuse box (No.13) → Membrane controller [CN-376 (1)]

#### (1) Head light switch ON

- Head light switch ON [CN-376 (13)] → Head light relay [CR-13 (85) → (87)]
  - Head light ON [CL-3 (2), CL-4 (1), CL-24 (2)]
  - I/conn [CN-5 (41)] → I/conn [CN-432 (1)] → Cigar lighter [CL-2]
  - I/conn [CN-5 (60)] → Radio & USB player illumination ON [CN-27A (9)]
  - I/conn [CN-7 (1)] → Accel dial LED [CN-279 (2)]

#### (2) Work light switch ON







- Work light switch ON [CN-376 (4)] → Work light relay [CR-4 (85) → (87)]
  - I/conn [CN-12 (2)] → Work light ON [CL-5 (2), CL-6 (2)]

### 2) CHECK POINT

| Engine | Start switch | Check point   | Voltage |
|--------|--------------|---|---------|
| STOP   | ON           | ① - GND (fuse box)<br>② - GND (switch power input)<br>③ - GND (head light relay)<br>④ - GND (head light)<br>⑤ - GND (fuse box)<br>⑥ - GND (switch power output)<br>⑦ - GND (work light relay)<br>⑧ - GND (work light) | 20~25V  |



※ GND : Ground

## GROUP 3 ELECTRICAL COMPONENT SPECIFICATION

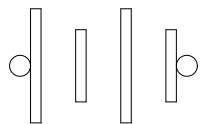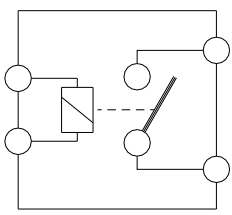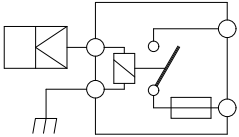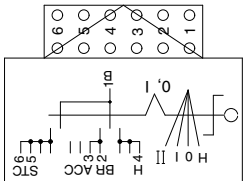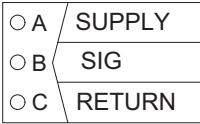
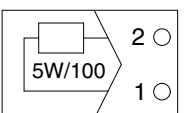
| Part name       | Symbol  | Specifications  | Check  |
|-----------------|---|---|--|
| Battery         |    | 12V × 100Ah<br>(2EA)  | ※ Check specific gravity<br>1.280 over : Over charged<br>1.280 ~ 1.250 : Normal<br>1.250 below : Recharging            |
| Battery relay   |  <p style="text-align: center;">CR-1</p>   | Rated load :<br>24V<br>100A (continuity)<br>1000A (30seconds) | ※ Check coil resistance(M4 to M4)<br>Normal : About 50Ω<br>※ Check contact<br>Normal : ∞Ω                              |
| Glow plug relay |  <p style="text-align: center;">CR-24</p>   | 24V 200A  | ※ Check contact<br>Normal : 0.942Ω<br>(For terminal 1-GND)   |
| Start switch    |  <p style="text-align: center;">CS-2A</p>  | B-BR : 24V 1A<br>B-ACC : 24V 10A<br>B-ST : 24V 40A            | ※ Check contact<br>OFF : ∞Ω (for each terminal)<br>ON : 0Ω (for terminal 1-3 and 1-2)<br>START : 0Ω (for terminal 1-6) |
| Pressure sensor |  <p style="text-align: center;">                     CD-6 CD-7 CD-24 CD-31<br/>                     CD-32 CD-35 CD-36 CD-42<br/>                     CD-43 CD-44 CD-69 CD-70<br/>                     CD-71 CD-85 CD-87 CD-90                 </p> | 8~30V   | ※ Check contact<br>Normal : 0.1Ω   |
| Resistor        |  <p style="text-align: center;">RS-1A RS-1B</p>  | 5W 100Ω   | ※ Check resistance<br>Normal : 100Ω<br>(For terminal 1-2)  |

| Connector number | Type      | No. of pin | Destination                 | Connector part No. |              |
|------------------|-----------|------------|-----------------------------|--------------------|--------------|
|                  |           |            |                             | Female             | Male         |
| CN-305           | DEUTSCH   | 12         | Proportional-Connector 1    | DTM06-12SA         | -            |
| CN-306           | DEUTSCH   | 12         | Proportional-Connector 2    | DTM06-12SB         | -            |
| CN-307           | DEUTSCH   | 3          | Proportional-Service tool   | DT06-3S-EP06       | DT04-3P-E005 |
| CN-307           | AMP       | 4          | Proportional-PVG32          | 2-967059-1         | -            |
| CN-309           | DEUTSCH   | 2          | Proportional-EPPR valve A1  | DT06-2S-EP06       | -            |
| CN-310           | DEUTSCH   | 2          | Proportional-EPPR valve A2  | DT06-2S-EP06       | -            |
| CN-370           | DEUTSCH   | 2          | Swing fine control solenoid | DT06-2S-EP06       | -            |
| CN-376           | TE        | 34         | Membrane controller         | 4-1437290-1        | -            |
| CN-401           | TE        | 35         | AAVM controller             | 776164-1           | -            |
| CN-402           | DEUTSCH   | 6          | Front view camera           | DT06-6S-P021       | DT04-6P-P021 |
| CN-403           | DEUTSCH   | 6          | Rear view camera            | DT06-6S-EP06       | DT04-6P-EP14 |
| CN-404           | DEUTSCH   | 6          | LH view camera              | DT06-6S-EP06       | DT04-6P-EP14 |
| CN-405           | DEUTSCH   | 6          | RH view camera              | DT06-6S-EP06       | DT04-6P-EP14 |
| CN-406           | DEUTSCH   | 3          | RS 232                      | DT06-3S-EP06       | DT04-3P-E005 |
| CN-419           | DEUTSCH   | 2          | Swing parking-A1            | DT06-2S-EP06       | -            |
| CN-420           | DEUTSCH   | 2          | Swing parking-A2            | DT06-2S-EP06       | -            |
| CN-421           | DEUTSCH   | 2          | Swing parking-A3            | DT06-2S-EP06       | -            |
| CN-427           | MOLEX     | 4          | Reader-RMS                  | 039012040          | 026013096    |
| CN-432           | AMP       | 3          | Cigar & power               | 174357-2           | 174359-2     |
| WIF              | DEUTSCH   | 2          | To engine connector         | -                  | DT04-2P-E005 |
| · Relay          |           |            |                             |                    |              |
| CR-1             | RING-TERM | -          | Battery relay               | ST710285-2         | -            |
|                  |           |            |                             | ST710289-2         | -            |
| CR-2             | -         | 5          | Horn relay                  | -                  | -            |
| CR-4             | -         | 5          | Working lamp relay          | -                  | -            |
| CR-5             | -         | 5          | Anti restart relay          | -                  | -            |
| CR-7             | -         | 5          | Aircon compressor relay     | -                  | -            |
| CR-9             | -         | 5          | Cabin lamp relay            | -                  | -            |
| CR-13            | -         | 5          | Head lamp relay             | -                  | -            |
| CR-23            | KET       | 2          | Start relay                 | MG610320           | S814-102001  |
| CR-24            | RING TERM | 1          | Preheat relay               | S822-014000        | -            |
| CR-35            | -         | 5          | Power relay                 | -                  | -            |
| CR-36            | -         | 5          | Preheat relay               | -                  | -            |
| CR-45            | -         | 5          | ECM power relay             | -                  | -            |
| CR-46            | -         | 5          | Fuel warmer relay           | -                  | -            |
| CR-62            | -         | 5          | Breaker relay               | -                  | -            |
| CR-85            | -         | 5          | Beacon lamp relay           | -                  | -            |
| · Switch         |           |            |                             |                    |              |
| CS-1             | SHUR      | 1          | Door switch                 | S822-014002        | S822-114002  |


### 5) 375 FASTEN TYPE CONNECTOR
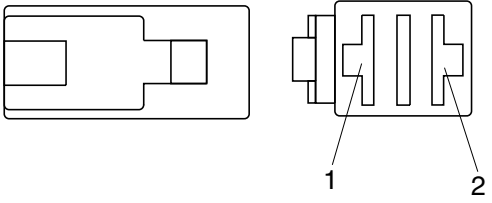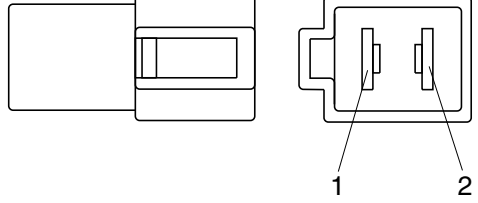
| No. of pin | Receptacle connector (female)  | Plug connector (male)   |
|------------|--|---|
| 2          |  <p style="text-align: center;">S810-002402</p> |  <p style="text-align: center;">S810-102402</p> |


### 6) AMP ECONOSEAL CONNECTOR
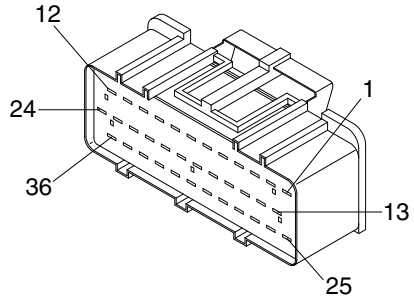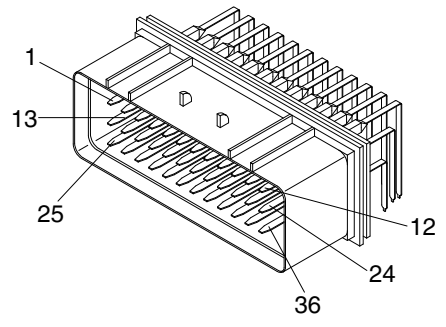
| No. of pin | Receptacle connector (female)  | Plug connector (male)   |
|------------|--|---|
| 36         |  <p style="text-align: center;">344111-1</p> |  <p style="text-align: center;">344108-1</p> |


### 7) AMP TIMER CONNECTOR
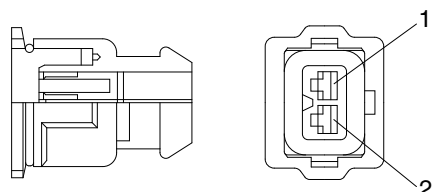
| No. of pin | Receptacle connector (female)  | Plug connector (male) |
|------------|--|-----------------------|
| 2          |  <p style="text-align: center;">85202-1</p> |                       |


### 21) DEUTSCH MCU CONNECTOR
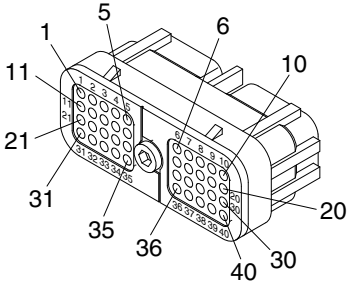
| No. of pin | Receptacle connector (Female)  | Plug connector (Male) |
|------------|--|-----------------------|
| 40         |  <p style="text-align: right;">DRC26-40SA/B</p> |                       |


### 22) DEUTSCH SERVICE TOOL CONNECTOR
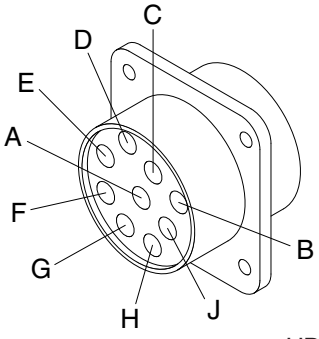
| No. of pin | Receptacle connector (Female)   | Plug connector (Male) |
|------------|---|-----------------------|
| 9          |  <p style="text-align: right;">HD10-9-96P</p> |                       |

### 23) AMP FUEL WARMER CONNECTOR
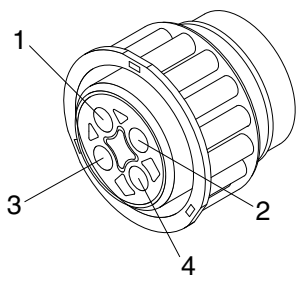
| No. of pin | Receptacle connector (Female)  | Plug connector (Male) |
|------------|--|-----------------------|
| 4          |  <p style="text-align: right;">2-967325-3</p> |                       |

# GROUP 5 TRAVEL SPEED CONTROL SYSTEM

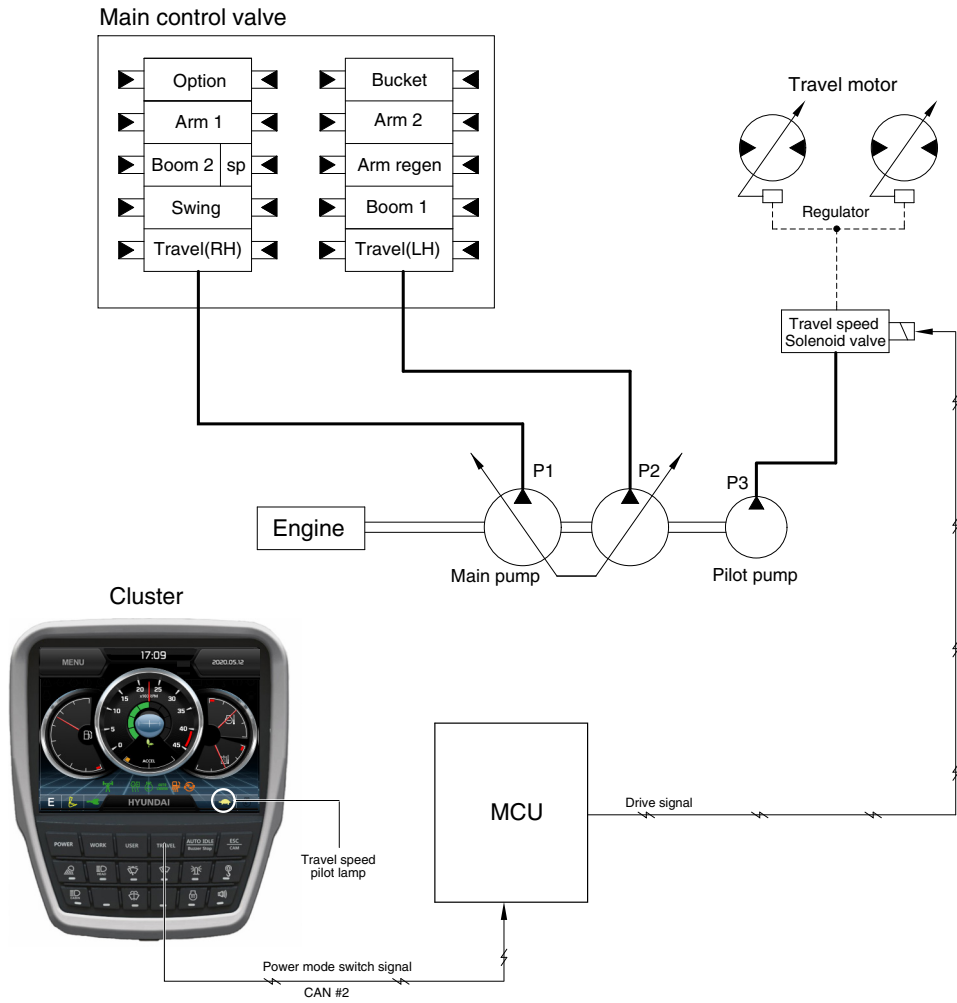

260SA5MS10

Travel speed can be switched manually by pressing the travel speed switch on the cluster.

| Speed | Travel speed solenoid valve | Lamp on cluster | Operation  |
|-------|-----------------------------|-----------------|--|
| Low   | OFF                         | Turtle          | Low speed, high driving torque in the travel motor |
| High  | ON                          | Rabbit          | High speed, low driving torque in the travel motor |

※ Default : Turtle (Low)

| DTC    |   | Diagnostic Criteria  | Application |   |   |
|--------|---|--|-------------|---|---|
| HCESPN | FMI   |  | G           | C | W |
| 120    | 0   | 10 seconds continuous, Main Pump 1 (P1) Press. Sensor Measurement Voltage > 5.2V   | ●           |   |   |
|        | 1   | 10 seconds continuous, $0.3V \leq$ Main Pump 1 (P1) Press. Sensor Measurement Voltage < 0.8V   | ●           |   |   |
|        | 4   | 10 seconds continuous, Main Pump 1 (P1) Press. Sensor Measurement Voltage < 0.3V   | ●           |   |   |
|        | (Results / Symptoms)<br>1. Monitor – Main Pump 1 (P1) Press. display failure<br>2. Control Function – Automatic voltage increase operation failure, Overload at compensation control failure<br><br>(Checking list)<br>1. CD-42 (#B) – CN-52 (#29) Checking Open/Short<br>2. CD-42 (#A) – CN-51 (#3) Checking Open/Short<br>3. CD-42 (#C) – CN-51 (#13) Checking Open/Short |  |             |   |   |
| 121    | 0   | 10 seconds continuous, Main Pump 2 (P2) Press. Sensor Measurement Voltage > 5.2V   | ●           |   |   |
|        | 1   | 10 seconds continuous, $0.3V \leq$ Main Pump 2 (P2) Press. Sensor Measurement Voltage < 0.8V   | ●           |   |   |
|        | 4   | 10 seconds continuous, Main Pump 2 (P2) Press. Sensor Measurement Voltage < 0.3V   | ●           |   |   |
|        | (Results / Symptoms)<br>1. Monitor – Main Pump 2 (P2) Press. display failure<br>2. Control Function – Automatic voltage increase operation failure, Overload at compensation control failure<br><br>(Checking list)<br>1. CD-43 (#B) – CN-52 (#30) Checking Open/Short<br>2. CD-43 (#A) – CN-51 (#3) Checking Open/Short<br>3. CD-43 (#C) – CN-51 (#13) Checking Open/Short |  |             |   |   |
| 122    | 1   | (when you had conditions mounting pressure sensor)<br>10 seconds continuous, $0.3V \leq$ Overload Press. Sensor Measurement Voltage < 0.8V | ●           |   |   |
|        | 4   | (when you had conditions mounting pressure sensor)<br>10 seconds continuous, Overload Press. Sensor Measurement Voltage < 0.3V             | ●           |   |   |
|        | (Results / Symptoms)<br>1. Monitor – Overload Press. display failure<br>2. Control Function – Overload warning alarm failure<br><br>(Checking list)<br>1. CD-31 (#B) – CN-52 (#39) Checking Open/Short<br>2. CD-31 (#A) – CN-51 (#3) Checking Open/Short<br>3. CD-31 (#C) – CN-51 (#13) Checking Open/Short   |  |             |   |   |

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

| DTC  |     | Diagnostic Criteria  | Application |   |   |
|--|-----|--|-------------|---|---|
| HCESPN   | FMI |  | G           | C | W |
| 181<br>(NA)  | 4   | (Model Parameter) mounting Reverse Cooling Fan Solenoid<br>(Detection)<br>(When Reverse Cooling Fan Solenoid is Off)<br>10 seconds continuous, Reverse Cooling Fan Solenoid drive unit<br>Measurement Voltage $\leq$ 3.0V<br>(Cancellation)<br>(When Reverse Cooling Fan Solenoid is Off)<br>3 seconds continuous, Reverse Cooling Fan Solenoid drive unit<br>Measurement Voltage $>$ 3.0V | ●           |   |   |
|  | 6   | (Detection)<br>(When Reverse Cooling Fan Solenoid is On)<br>10 seconds continuous, Reverse Cooling Fan Solenoid drive current $>$ 4.5 A<br>(Cancellation)<br>(When Reverse Cooling Fan Solenoid is On)<br>3 seconds continuous, Reverse Cooling Fan Solenoid drive current $\leq$ 4.5 A  | ●           |   |   |
| (Results / Symptoms)<br>1. Control Function – Cooling Fan reverse control operation failure (not applicable)   |     |  |             |   |   |
| 188  | 5   | (Detection)<br>(When Attachment Flow EPPR 1 current is equal or more than 300 mA)<br>10 seconds continuous, Attachment Flow EPPR drive current $<$ 100 mA<br>(Cancellation)<br>(When Attachment Flow EPPR 1 current is equal or more than 300 mA)<br>3 seconds continuous, Attachment Flow EPPR drive current $\geq$ 100 mA  | ●           |   |   |
|  | 6   | (Detection)<br>10 seconds continuous, Attachment Flow EPPR 1 drive current $>$ 1.0 A<br>(Cancellation)<br>3 seconds continuous, Attachment Flow EPPR 1 drive current $\leq$ 1.0 A  | ●           |   |   |
| (Results / Symptoms)<br>1. Control Function – IPC operation failure, Option attachment flow control operation failure<br>(Checking list)<br>1. CN-242 (#2) – CN-52 (#10) Checking Open/Short<br>2. CN-242 (#1) – CN-52 (#20) Checking Open/Short |     |  |             |   |   |

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

| DTC         |   | Diagnostic Criteria  | Application |   |   |
|-------------|---|--|-------------|---|---|
| HCESPN      | FMI   |  | G           | C | W |
| 841<br>(NA) | 2   | 10 seconds continuous, ECM Communication Data Error  | ●           |   |   |
|             | (Results / Symptoms)<br>1. Control Function – ECM operation failure<br>(Checking list)<br>1. CN-93 (#17) – CN-51 (#21) Checking Open/Short<br>2. CN-93 (#18) – CN-51 (#31) Checking Open/Short              |  |             |   |   |
| 845<br>(NA) | 2   | (When mounting the I/O Controller 1)<br>60 seconds continuous, I/O Controller 1 Communication Data Error   | ●           |   |   |
|             | (Results / Symptoms)<br>1. Control Function – I/O Controller 1 operation failure<br>(Checking list)<br>1. CN-53 (#21) – CN-51 (#23) Checking Open/Short<br>2. CN-53 (#31) – CN-51 (#33) Checking Open/Short |  |             |   |   |
| 848<br>(NA) | 2   | (When mounting the Haptic Controller)<br>60 seconds continuous, Haptic Controller Communication Data Error | ●           |   |   |
|             | (Results / Symptoms)<br>1. Control Function – Haptic Controller operation failure<br>(Checking list)<br>1. CN-8 (#2) – CN-51 (#22) Checking Open/Short<br>2. CN-8 (#3) – CN-51 (#32) Checking Open/Short    |  |             |   |   |
| 850         | 2   | (When mounting the RMCU)<br>60 seconds continuous, RMCU communication Data Error                           | ●           |   |   |
|             | (Results / Symptoms)<br>1. Control Function – RMCU operation failure<br>(Checking list)<br>1. CN-125A (#3) – CN-51 (#22) Checking Open/Short<br>2. CN-125A (#11) – CN-51 (#32) Checking Open/Short          |  |             |   |   |
| 861<br>(NA) | 2   | (When mounting the I/O Controller 2)<br>60 seconds continuous, I/O Controller 2 communication Data Error   | ●           |   |   |
|             | (Results / Symptoms)<br>1. Control Function – I/O Controller 2 operation failure<br>(Checking list)<br>1. CN-53 (#21) – CN-51 (#23) Checking Open/Short<br>2. CN-53 (#31) – CN-51 (#33) Checking Open/Short |  |             |   |   |

※ Some error codes are not applied to this machine.

G : General

C : Crawler Type

W : Wheel Type

| Fault code | J1939 SPN | J1939 FMI | Item                                  | Description  |
|------------|-----------|-----------|---------------------------------------|--|
| 2375       | 412       | 3         | Exhaust gas recirculation temperature | Exhaust gas recirculation temperature sensor circuit - voltage above normal, or shorted to high source |
| 2376       | 412       | 4         | Exhaust gas recirculation temperature | Exhaust gas recirculation temperature sensor circuit - voltage below normal, or shorted to low source  |
| 2377       | 647       | 3         | Fan clutch output device driver       | Fan control circuit - voltage above normal, or shorted to high source                                  |
| 2425       | 730       | 4         | Intake air heater # 2                 | Intake air heater 2 circuit - voltage below normal, or shorted to low source                           |
| 2426       | 730       | 3         | Intake air heater # 2                 | Intake air heater 2 circuit - voltage above normal, or shorted to high source                          |
| 2448       | 111       | 17        | Coolant level                         | Coolant level - data valid but below normal operating range - least severe level                       |
| 2555       | 729       | 3         | Inlet air heater driver #1            | Intake air heater #1 circuit - voltage above normal, or shorted to high source                         |
| 2556       | 729       | 4         | Inlet air heater driver #1            | Intake air heater #1 circuit - voltage below normal, or shorted to low source                          |
| 2557       | 697       | 3         | Auxiliary PWM driver #1               | Auxiliary PWM driver #1 - voltage above normal, or shorted to high source                              |
| 2558       | 697       | 4         | Auxiliary PWM driver #1               | Auxiliary PWM driver #1 - voltage below normal, or shorted to low source                               |
| 2963       | 110       | 15        | Engine coolant temperature            | Engine coolant temperature high - data valid but above normal operational range - least severe level   |
| 2973       | 102       | 2         | Boost pressure                        | Intake manifold pressure sensor circuit - data erratic, intermittent, or incorrect                     |

※ Some fault codes are not applied to this machine.

**(2) Premium type**


**① CN-56A**

| No. | Name           | Signal   |
|-----|----------------|----------|
| 1   | Battery 24V    | 20~32Vdc |
| 2   | Power IG {24V} | 20~32Vdc |
| 3   | GND            | -        |
| 4   | N.C            | -        |
| 5   | N.C            | -        |
| 6   | CAN 2 (H)      | 0~5Vdc   |
| 7   | CAN 2 (L)      | 20~32Vdc |
| 8   | N.C            | -        |
| 9   | N.C            | -        |
| 10  | N.C            | -        |
| 11  | N.C            | -        |
| 12  | N.C            | -        |

**② CN-56B**

| No. | Name         | Signal      |
|-----|--------------|-------------|
| 1   | CAM + 6.5V   | 6.3~6.7Vdc  |
| 2   | CAM GND      | -           |
| 3   | CAM DIFF (H) | 0~5V        |
| 4   | CAM DIFF (L) | 0~5V        |
| 5   | CAM 1        | NTSC signal |
| 6   | CAM 2        | NTSC signal |
| 7   | CAM 3        | NTSC signal |
| 8   | CAM shield   | 0~5Vdc      |

NTSC : National Television System Committee

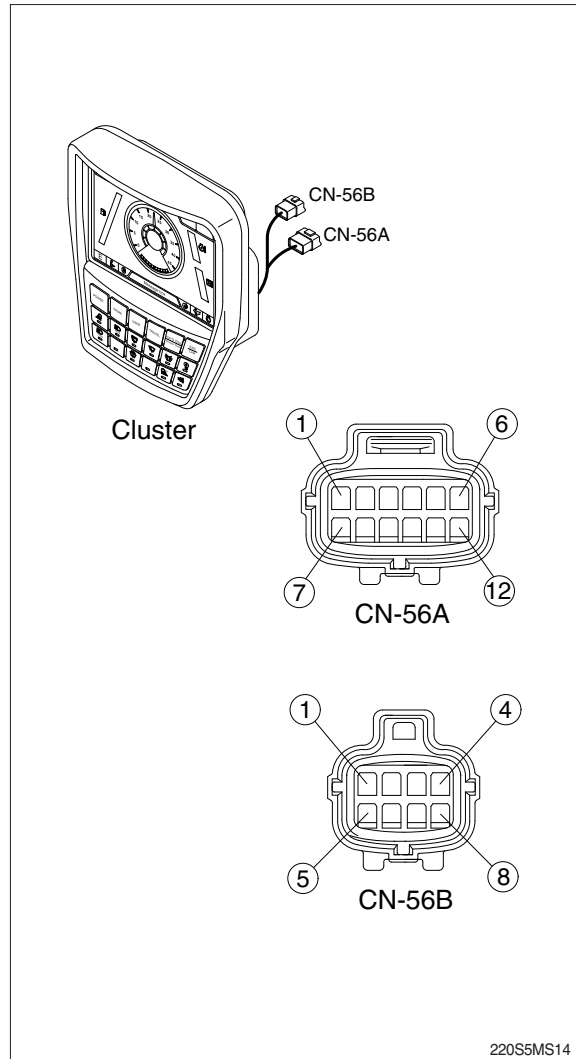

## 7) SWITCHES

### Normal type



220S3CD586A

### Premium type



220S3CD86B

※ When some of the switches are selected, the pilot lamps are displayed on the LCD. Refer to the page 5-65 for details.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below




- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL


### (3) Monitoring

#### ① Active fault

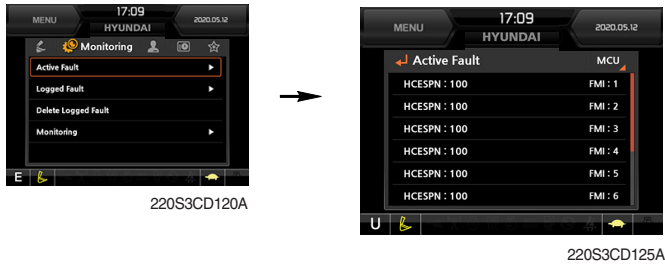

- The active faults of the MCU can be checked by this menu.

#### ② Logged fault

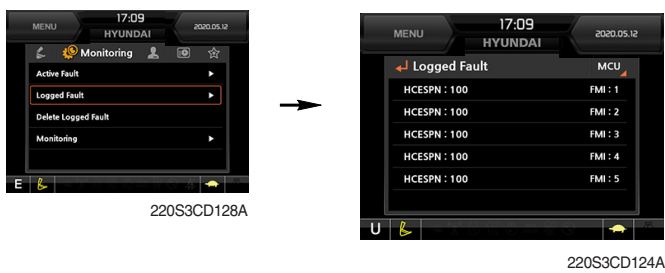


- The logged faults of the MCU can be checked by this menu.

#### ③ Delete logged fault



- The logged faults of the MCU can be deleted by this menu.

#### ④ Monitoring

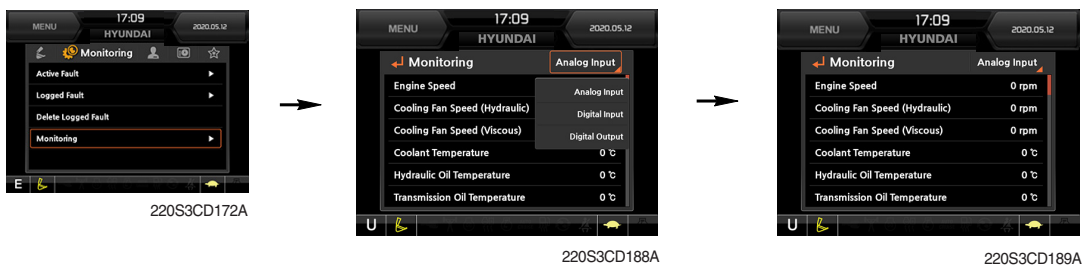

- The machine status such as the engine rpm, oil temperature, voltage and pressure etc. can be checked by this menu (Analog input).
- The switch status or output status can be confirmed by this menu (Digital input & Digital output).
- The activated switch or output pilot lamps ● are light ON.

## (6) Utilities


### ① Tripmeter



- Maximum 3 kinds of tripmeters can be used at the same time.
- Each tripmeter can be turned on by choosing "Start" while it also can be turned off by choosing "Stop".
- If the tripmeter icon is activated in the operation screen, it can be controlled directly there.

### ② Camera setting

- If the rear camera is not installed on the machine, set disable.
- If the rear camera installed on the machine, set enable.

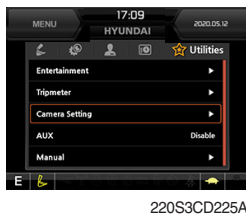


- In the operation screen, rear camera screen show up when ESC/CAM button is pushed.




### 3. HYDRAULIC SYSTEM


#### 1) HYDRAULIC OIL IS CLOUDY

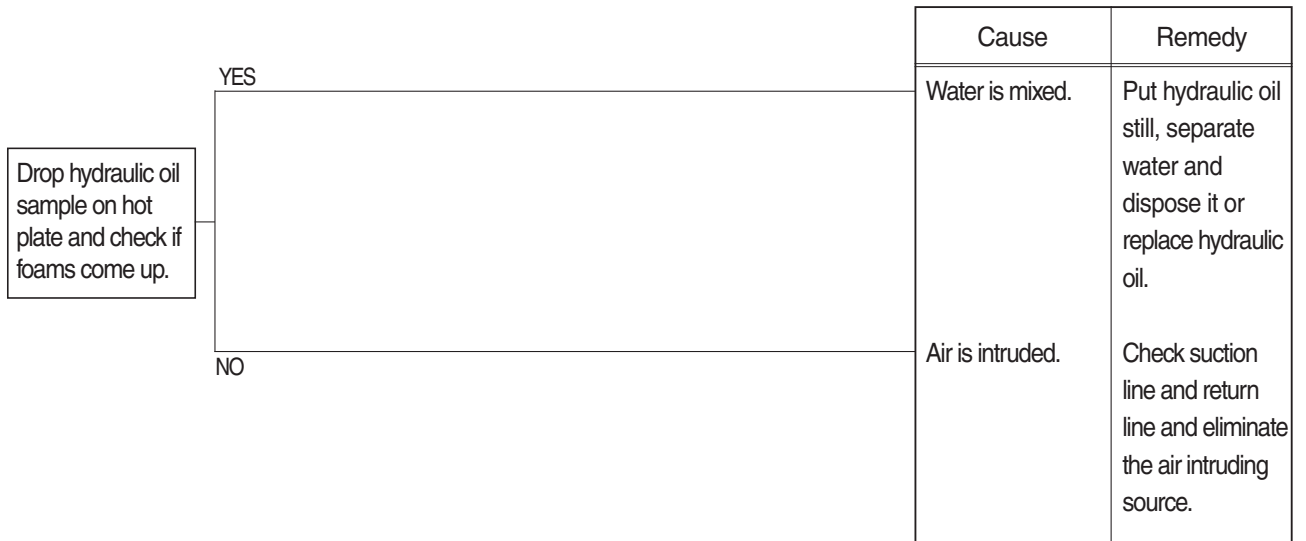

#### 2) HYDRAULIC OIL TEMPERATURE HAS RISEN ABNORMALLY

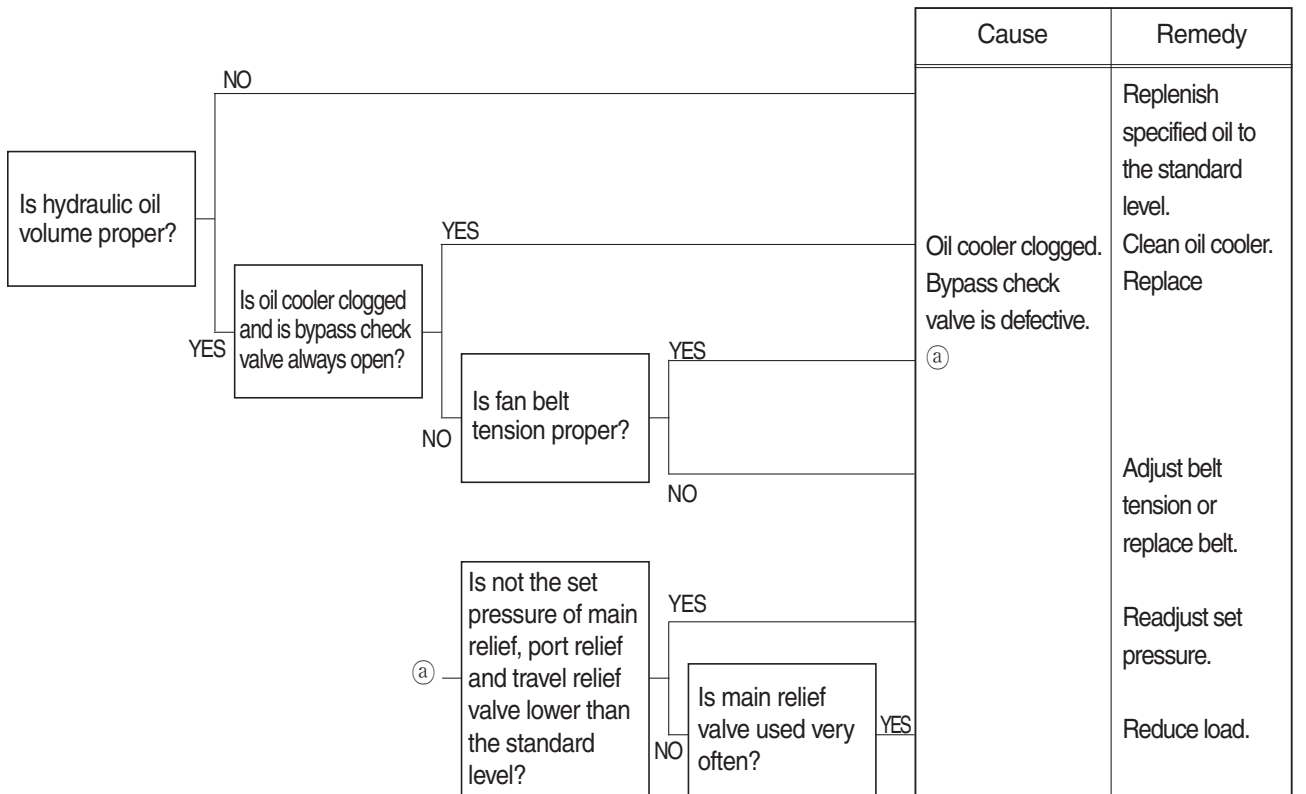

### 5) TRAVEL ACTION IS POWERLESS (travel only)

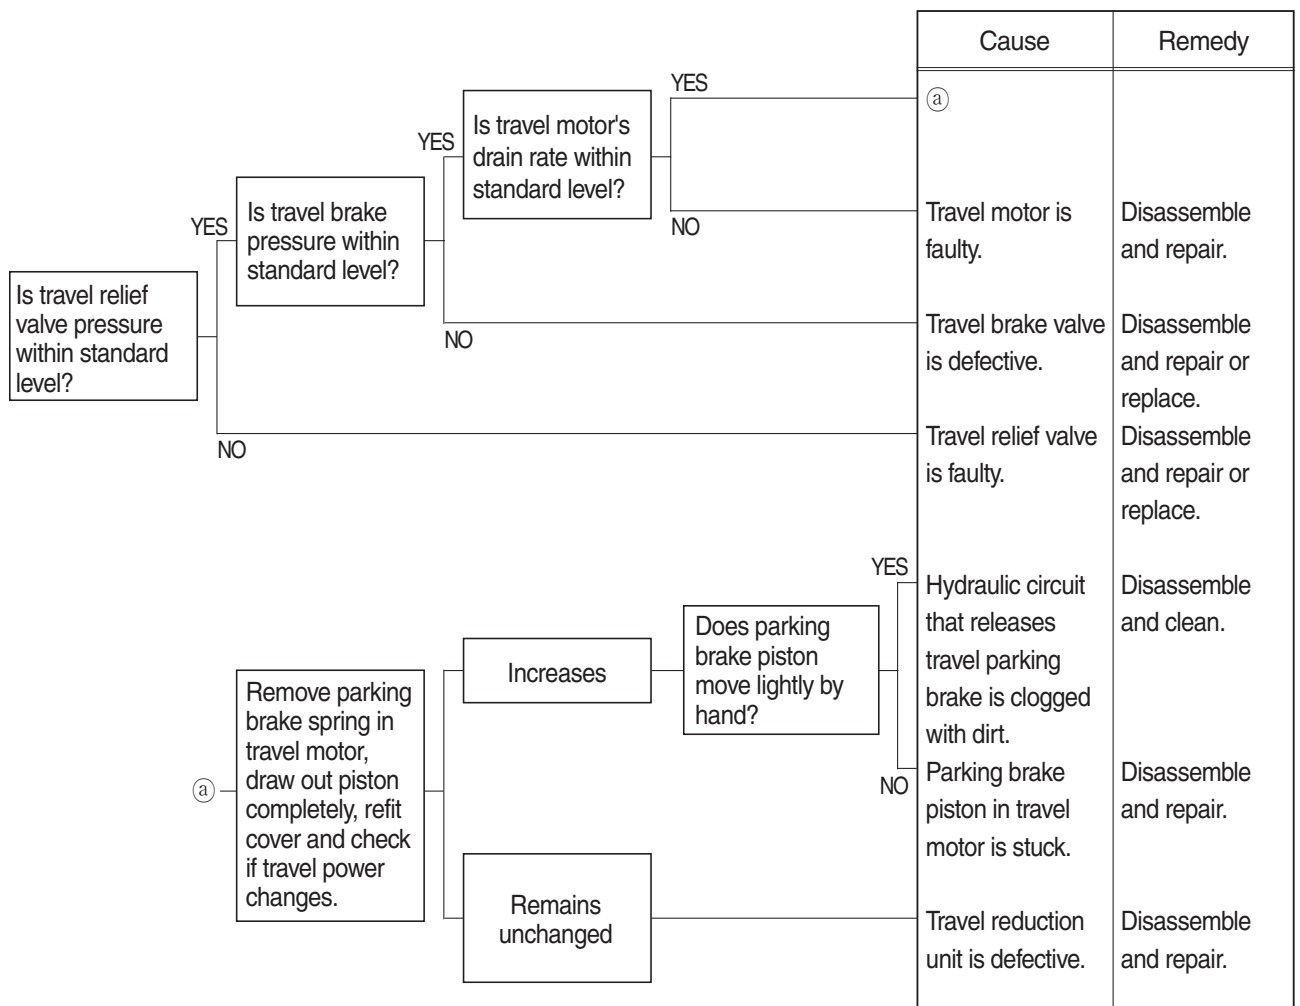


### 6) MACHINE RUNS RECKLESSLY ON A SLOPE




### 3. BATTERY CHARGING WARNING LAMP LIGHTS UP (Starting switch : ON)

- Before disconnecting the connector, always turn the starting switch OFF.
- Before carrying out below procedure, check all the related connectors are properly inserted.
- After checking, insert the disconnected connectors again immediately unless otherwise specified.

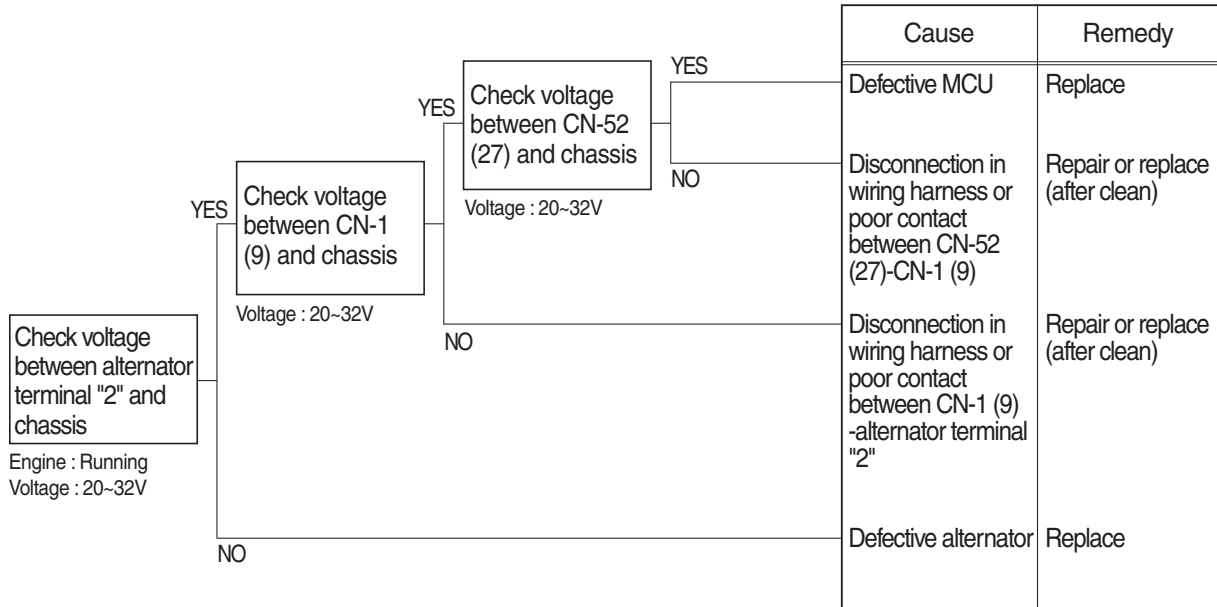



#### Check voltage

|     |        |
|-----|--------|
| YES | 20~32V |
| NO  | 0V     |

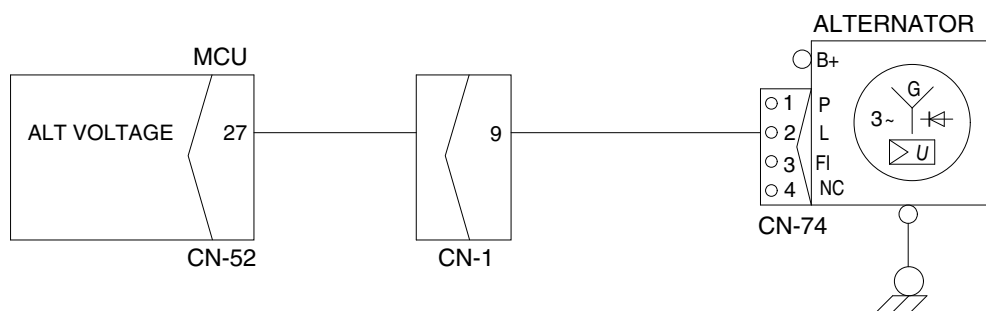

220SA6ES03


### 13. HORN DOES NOT SOUND

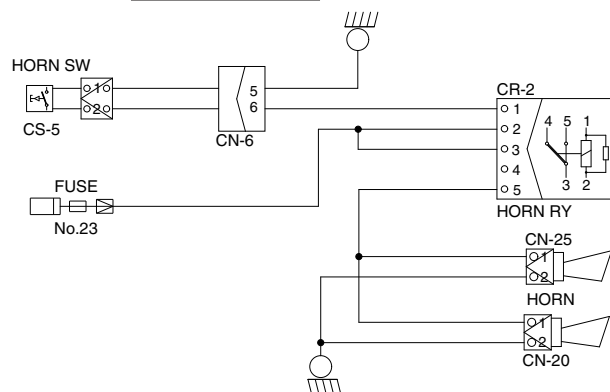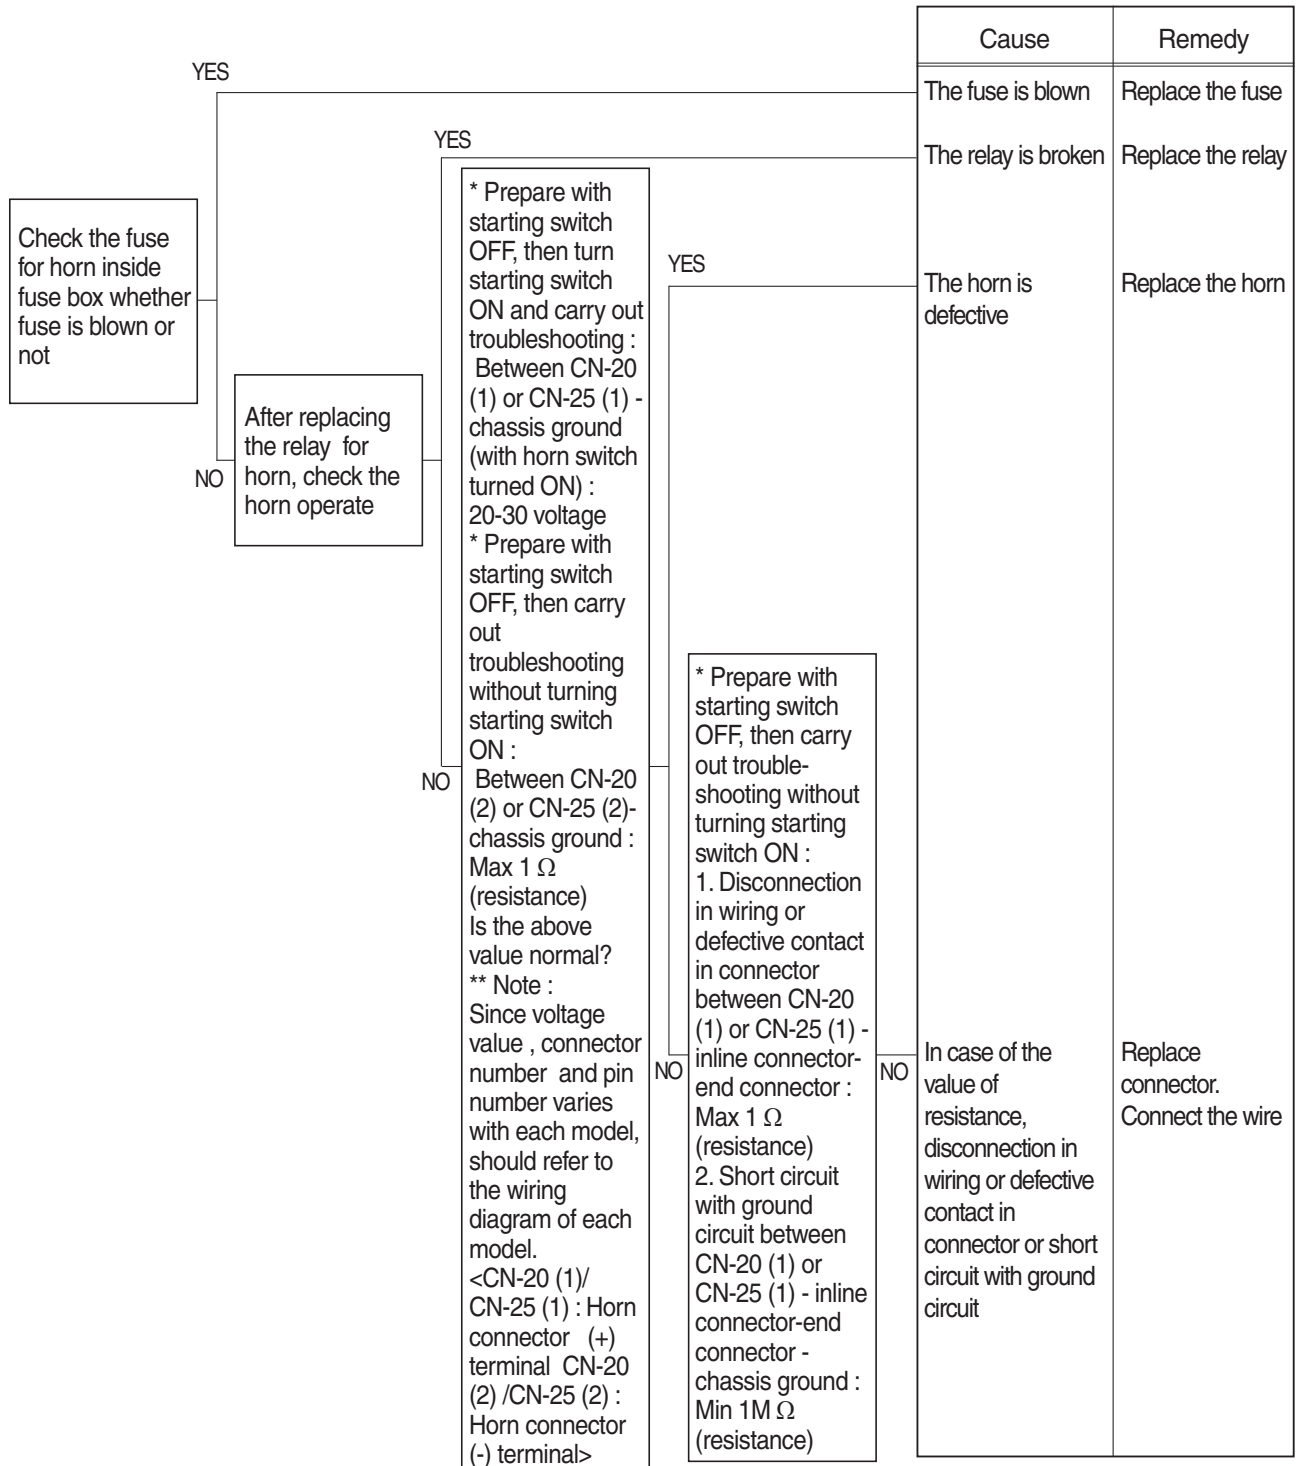


### 3. MALFUNCTION OF CLUSTER OR MODE SELECTION SYSTEM

※ Before carrying out below procedure, check all the related connectors are properly inserted.

#### 1) INSPECTION PROCEDURE

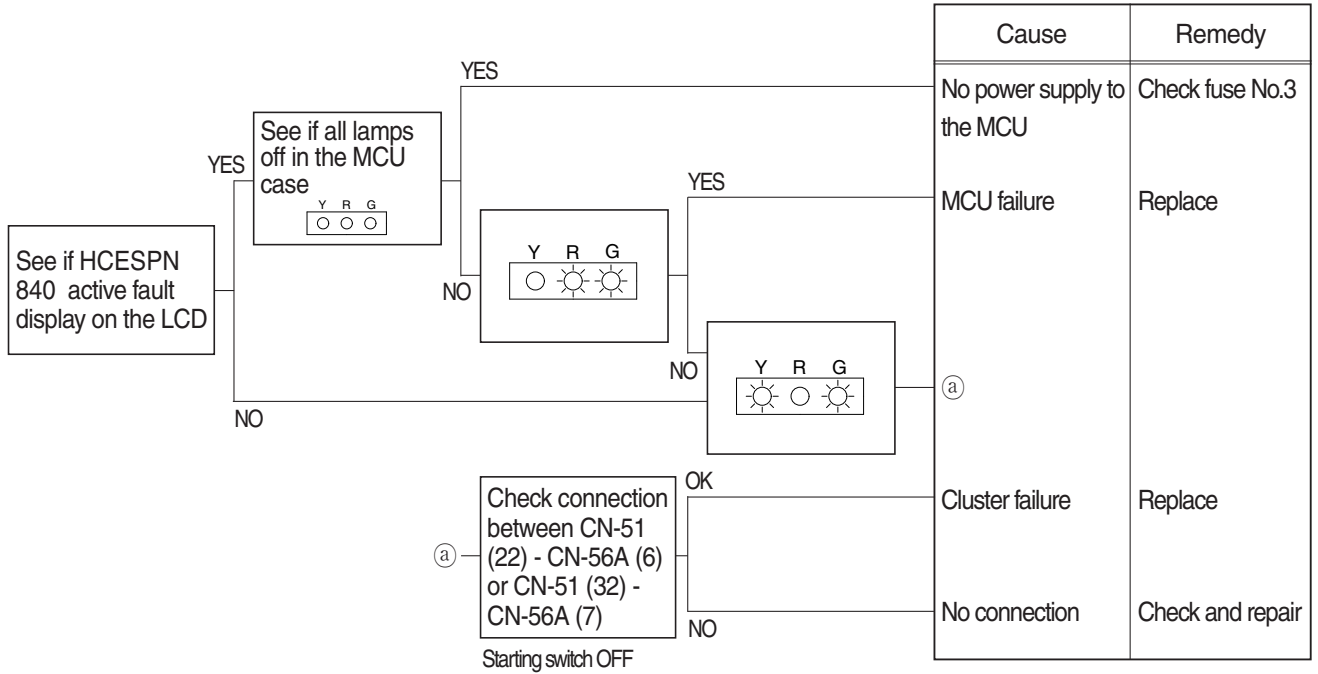

#### Wiring diagram

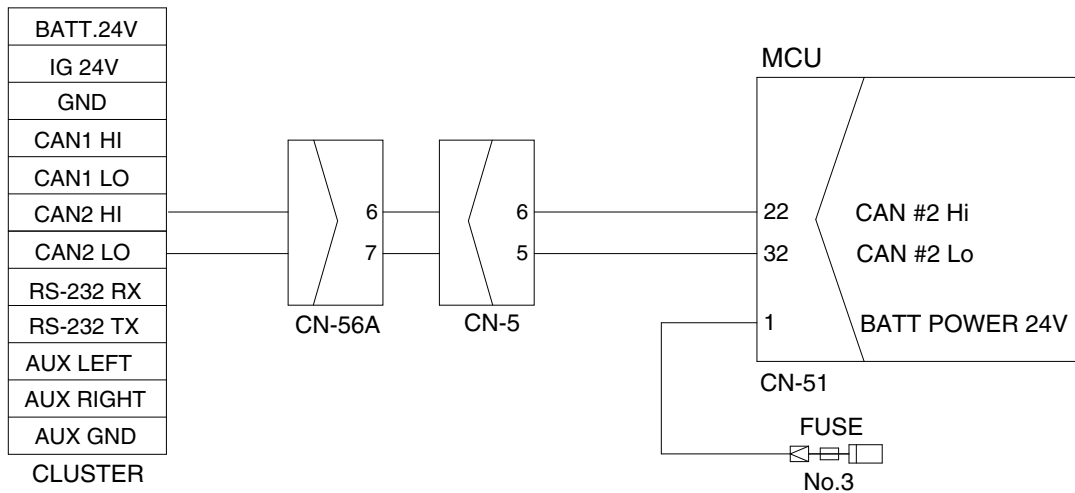


220S6MS02

## 2) TEST PROCEDURE

(1) **Test 12** : Check voltage at CN-52 (39) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (39) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

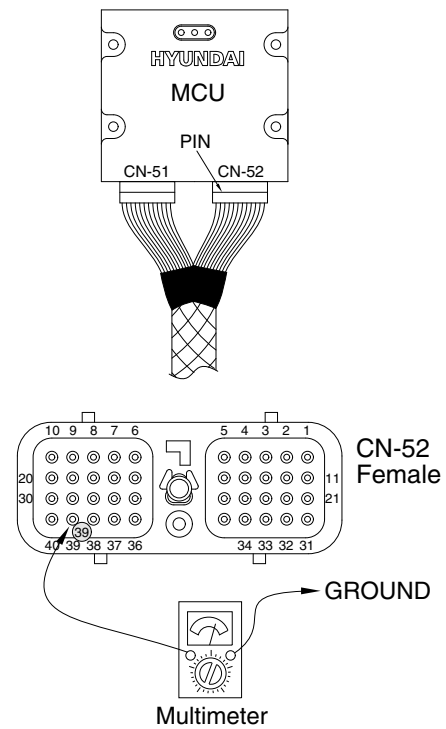


220S6MS12

## 2) TEST PROCEDURE

(1) **Test 17** : Check voltage at CN-52 (34) and ground.

- ① Prepare 1 piece of thin sharp pin, steel or copper.
- ② Insert prepared pin to rear side of connectors : One pin to (34) of CN-52.
- ③ Starting switch ON.
- ④ Check voltage as figure.

SPEC : Actuator operating : 1~5 V

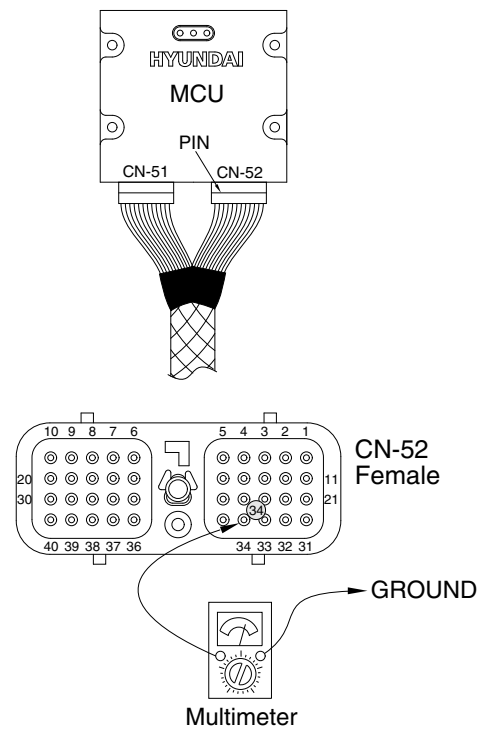

220S6MS26

### 3. OPERATION FOR PERFORMANCE TESTS


- 1) Observe the following rules in order to carry out performance tests accurately and safely.

#### The machine

- (1) Repair any defects and damage found, such as oil or water leaks, loose bolts, cracks and so on, before starting to test.

#### (2) Test area

- ① Select a hard, flat surface.
- ② Secure enough space to allow the machine to run straight more than 20m, and to make a full swing with the front attachment extended.
- ③ If required, rope off the test area and provide signboards to keep unauthorized personnel away.

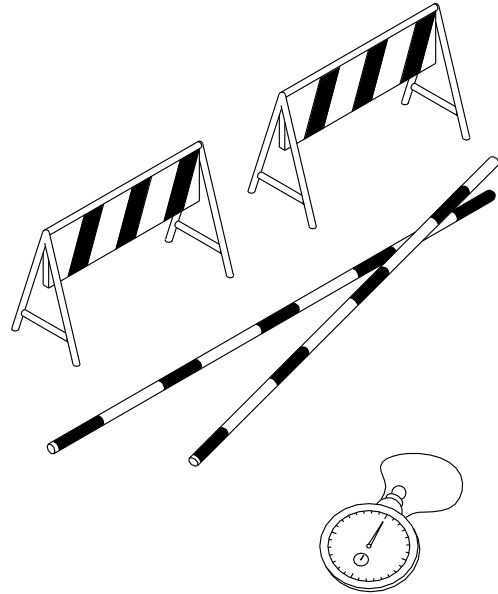

#### (3) Precautions

- ① Before starting to test, agree upon the signals to be employed for communication among coworkers. Once the test is started, be sure to communicate with each other using these signals, and to follow them without fail.
- ② Operate the machine carefully and always give first priority to safety.
- ③ While testing, always take care to avoid accidents due to landslides or contact with high voltage power lines. Always confirm that there is sufficient space for full swings.
- ④ Avoid polluting the machine and the ground with leaking oil. Use oil pans to catch escaping oil. Pay special attention to this when removing hydraulic pipings.

#### (4) Make precise measurements

- ① Accurately calibrate test instruments in advance to obtain correct data.
- ② Carry out tests under the exact test conditions prescribed for each test item.
- ③ Repeat the same test and confirm that the test data obtained can be procured repeatedly. Use mean values of measurements if necessary.


(290-7TIER) 7-3

## 10) DIG FUNCTION DRIFT CHECK

- (1) Measure dig function drift, which can be caused by oil leakage in the control valve and boom, standard arm, and standard bucket cylinders, with the loaded bucket. When testing the dig function drift just after cylinder replacement, slowly operate each cylinder to its stroke end to purge air.

### (2) Preparation

- ① Load bucket fully. Instead of loading the bucket, weight (W) of the following specification can be used.
  - $W = M^3 \times 1.5$
  - Where :
  - $M^3$  = Bucket heaped capacity ( $m^3$ )
  - 1.5 = Soil specific gravity
- ② Position the arm cylinder with the rod 20 to 30 mm extended from the fully retracted position.
- ③ Position the bucket cylinder with the rod 20 to 30 mm retracted from the fully extended position.
- ④ With the arm rolled out and bucket rolled in, hold the bucket so that the height of the bucket pin is the same as the boom foot pin.
- ⑤ Keep the hydraulic oil temperature at  $50 \pm 5^\circ C$ .

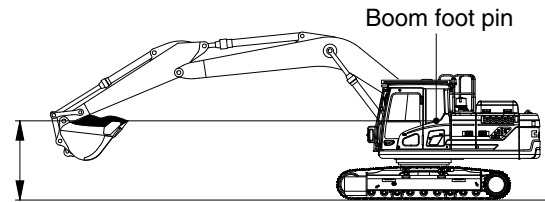

260SA7MS08

### (3) Measurement

- ① Stop the engine.
- ② Five minutes after the engine has been stopped, measure the changes in the positions of the boom, arm and bucket cylinders.
- ③ Repeat step ② three times and calculate the average values.

- (4) The measured drift should be within the following specifications.


Unit : mm / 5 min

| Model    | Drift to be measured | Standard | Maximum allowable | Remarks |
|----------|----------------------|----------|-------------------|---------|
| HX260LT3 | Boom cylinder        | 10 below | 20                |         |
|          | Arm cylinder         | 10 below | 20                |         |
|          | Bucket cylinder      | 40 below | 50                |         |

## 2. MAIN CONTROL VALVE

| Part name   | Inspection item  | Criteria & measure  |
|---|--|---|
| Casing  | <ul style="list-style-type: none"> <li>· Existence of scratches, rust or corrosion.</li> </ul>   | <ul style="list-style-type: none"> <li>· In case of damage in following section, replace casing.</li> <li>- Sliding sections of casing hole and spool, especially land sections applied with held pressure.</li> <li>- Seal pocket section where spool is inserted.</li> <li>- Sealing section of port where O-ring contacts.</li> <li>- Sealing section of each relief valve for main and port.</li> <li>- Sealing section of plug.</li> <li>- Other damages that may damage normal function.</li> </ul> |
| Spool   | <ul style="list-style-type: none"> <li>· Existence of scratch, gnawing, rusting or corrosion.</li> <li>· O-ring seal sections at both ends.</li> <li>· Insert spool into casing hole, rotate and reciprocate it.</li> </ul>        | <ul style="list-style-type: none"> <li>· Replacement when its outside sliding section has scratch (especially on seals-contacting section).</li> <li>· Replacement when its sliding section has scratch.</li> <li>· Correction or replacement when O-ring is damaged or when spool does not move smoothly.</li> </ul>   |
| Poppet  | <ul style="list-style-type: none"> <li>· Damage of spring</li> <li>· Damage of poppet</li> <li>· Insert poppet into casing and function it.</li> </ul>   | <ul style="list-style-type: none"> <li>· Replacement.</li> <li>· Correction or replacement when sealing is incomplete.</li> <li>· Normal when it can function lightly and smoothly without sticking.</li> </ul>   |
| Spring and related parts                                      | <ul style="list-style-type: none"> <li>· Rusting, corrosion, deformation or breakage of spring, spring seat, plug or cover.</li> </ul>   | <ul style="list-style-type: none"> <li>· Replacement for significant damage.</li> </ul>   |
| Around seal for spool   | <ul style="list-style-type: none"> <li>· External oil leakage.</li> <li>· Rusting, corrosion or deformation of seal plate.</li> </ul>  | <ul style="list-style-type: none"> <li>· Correction or replacement.</li> <li>· Correction or replacement.</li> </ul>  |
| Main relief valve, port relief valve & negative control valve | <ul style="list-style-type: none"> <li>· External rusting or damage.</li> <li>· Contacting face of valve seat.</li> <li>· Contacting face of poppet.</li> <li>· Defect of spring.</li> <li>· O-rings and back up rings.</li> </ul> | <ul style="list-style-type: none"> <li>· Replacement.</li> <li>· Replacement when damaged.</li> <li>· Replacement when damaged.</li> <li>· Replacement.</li> <li>· Replacement in principle.</li> </ul>   |

#### 4) TRACK

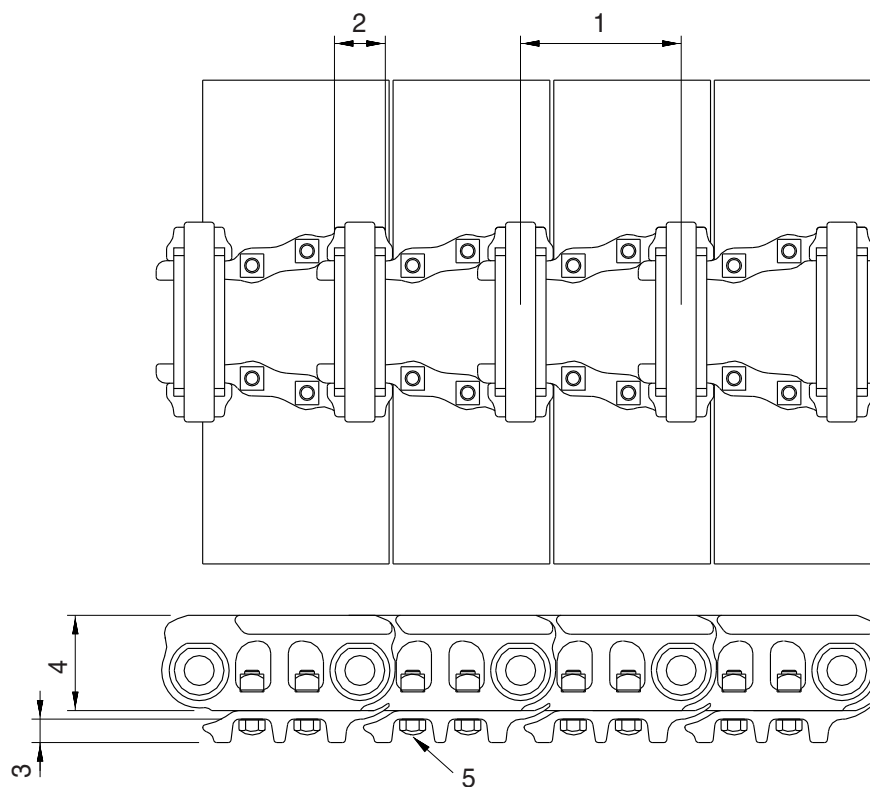

21037MS04

Unit : mm

| No. | Check item                  | Criteria                                       |              | Remedy             |
|-----|-----------------------------|--|--------------|--------------------|
|     |                             | Standard size                                  | Repair limit |                    |
| 1   | Link pitch                  | 190  | 194.4        | Turn or replace    |
| 2   | Outside diameter of bushing | Ø59  | Ø51          |                    |
| 3   | Height of grouser           | 26   | 16           | Rebuild or replace |
| 4   | Height of link              | 105  | 97           |                    |
| 5   | Tightening torque           | Initial tightening torque : $78 \pm 8$ kgf · m |              | Retighten          |

## GROUP 3 PUMP DEVICE

### 1. REMOVAL AND INSTALL

#### 1) REMOVAL

- (1) Lower the work equipment to the ground and stop the engine.
- (2) Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping
- (3) Loosen the breather slowly to release the pressure inside the hydraulic tank.



**▲ Escaping fluid under pressure can penetrate the skin causing serious injury.**

- (4) Remove the wirings for the pressure sensors and so on.
- (5) Loosen the drain plug under the hydraulic tank and drain the oil from the hydraulic tank.
  - Hydraulic tank quantity : 160 ℓ
- (6) Remove socket bolts (24) and disconnect pipe (10, 11).
- (7) Disconnect pilot line hoses (2, 3, 4, 5, 6, 7, 8, 9).

- (8) Remove socket bolts (23) and disconnect pump suction tube (1).
  - ※ When pump suction tube is disconnected, the oil inside the piping will flow out, so catch it in oil pan.

- (9) Sling the pump assembly and remove the pump mounting bolts (15).
  - Weight : 146 kg (322 lb)
  - Tightening torque :  $42 \pm 4.5$  kgf·m  
( $304 \pm 32.5$  lbf·ft)

- ※ Pull out the pump assembly from housing. When removing the pump assembly, check that all the hoses have been disconnected.

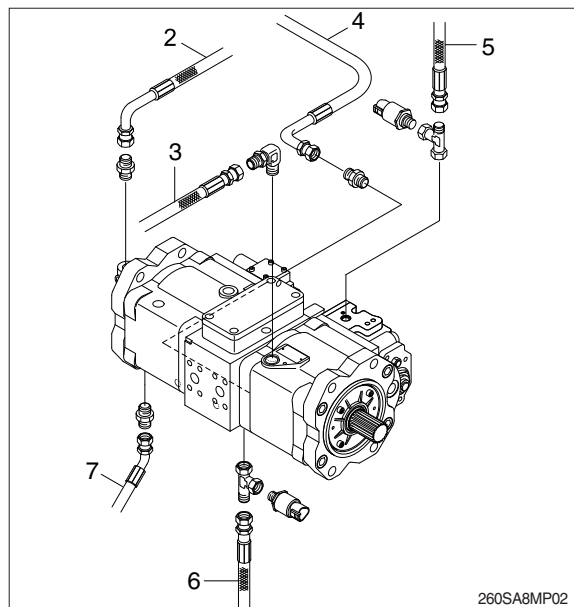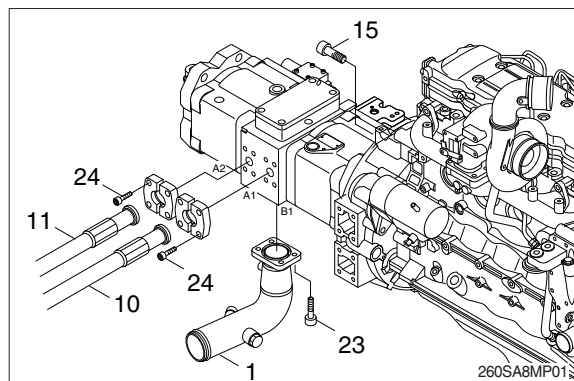


- (13) Remove the swash plates (212) and shoe plates (211) from swash plate support (251), and pull out the swash plates with turning shown in this picture from casing.



220S8MP21




220S8MP22

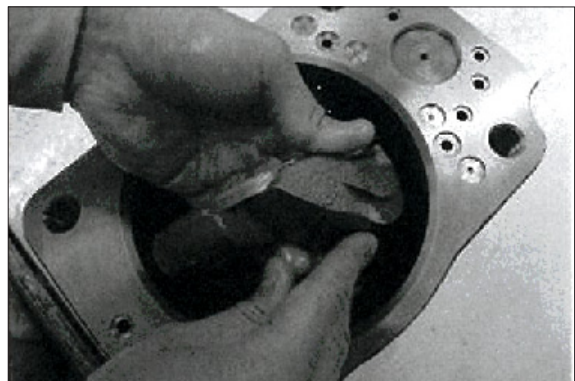

220S8MP23

- (14) Remove swash plate supports (251) from pump casing.

- ※ In this case it is difficult to remove, tap the opposite side of the swash plate support (251) with plastic hammer to remove it from pump casing easily.

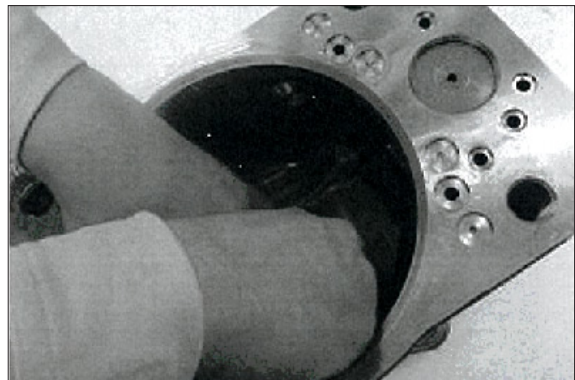


220S8MP24

## (2) Tightening torque

| Part name  | Bolt size | Torque  |          | Wrench size |    |
|--|-----------|---------|----------|-------------|----|
|  |           | kgf · m | lbf · ft | in          | mm |
| Hexagon socket head bolt<br>(Material : SCM435)                                    | M 5       | 0.7     | 5.1      | 0.16        | 4  |
|  | M 6       | 1.2     | 8.7      | 0.20        | 5  |
|  | M 7       | 3.0     | 21.7     | 0.24        | 6  |
|  | M 8       | 5.8     | 42       | 0.31        | 8  |
|  | M 9       | 10.0    | 72.3     | 0.39        | 10 |
|  | M14       | 16.3    | 118      | 0.47        | 12 |
|  | M16       | 23.5    | 170      | 0.55        | 14 |
|  | M18       | 33.7    | 244      | 0.55        | 14 |
|  | M20       | 43.8    | 317      | 0.67        | 17 |
|  | M22       | 64.2    | 464      | 0.67        | 17 |
| PT Plug (Material : S45C)<br>※ Wind a seal tape 1 1/2 to<br>2 turns round the plug | PT 1/8    | 1.2     | 8.7      | 0.20        | 5  |
|  | PT 1/4    | 2.2     | 15.9     | 0.24        | 6  |
|  | PT 3/8    | 4.5     | 32.5     | 0.31        | 8  |
|  | PT 1/2    | 6.6     | 47.7     | 0.39        | 10 |
| ROH Plug<br>PF 3/8 or under : S45C<br>PF 1/2 or over : SCM435                      | PF 1/4    | 3.5     | 25.3     | 0.24        | 6  |
|  | PF 3/8    | 7.5     | 54.2     | 0.31        | 8  |
|  | PF 1/2    | 11.2    | 81.0     | 0.39        | 10 |
|  | PF 3/4    | 17.3    | 125      | 0.55        | 14 |
| UNF plug<br>(Material : S45C)  | PPU916 W  | 1.6     | 11.6     | 0.75        | 19 |

## STRUCTURE (2/5)

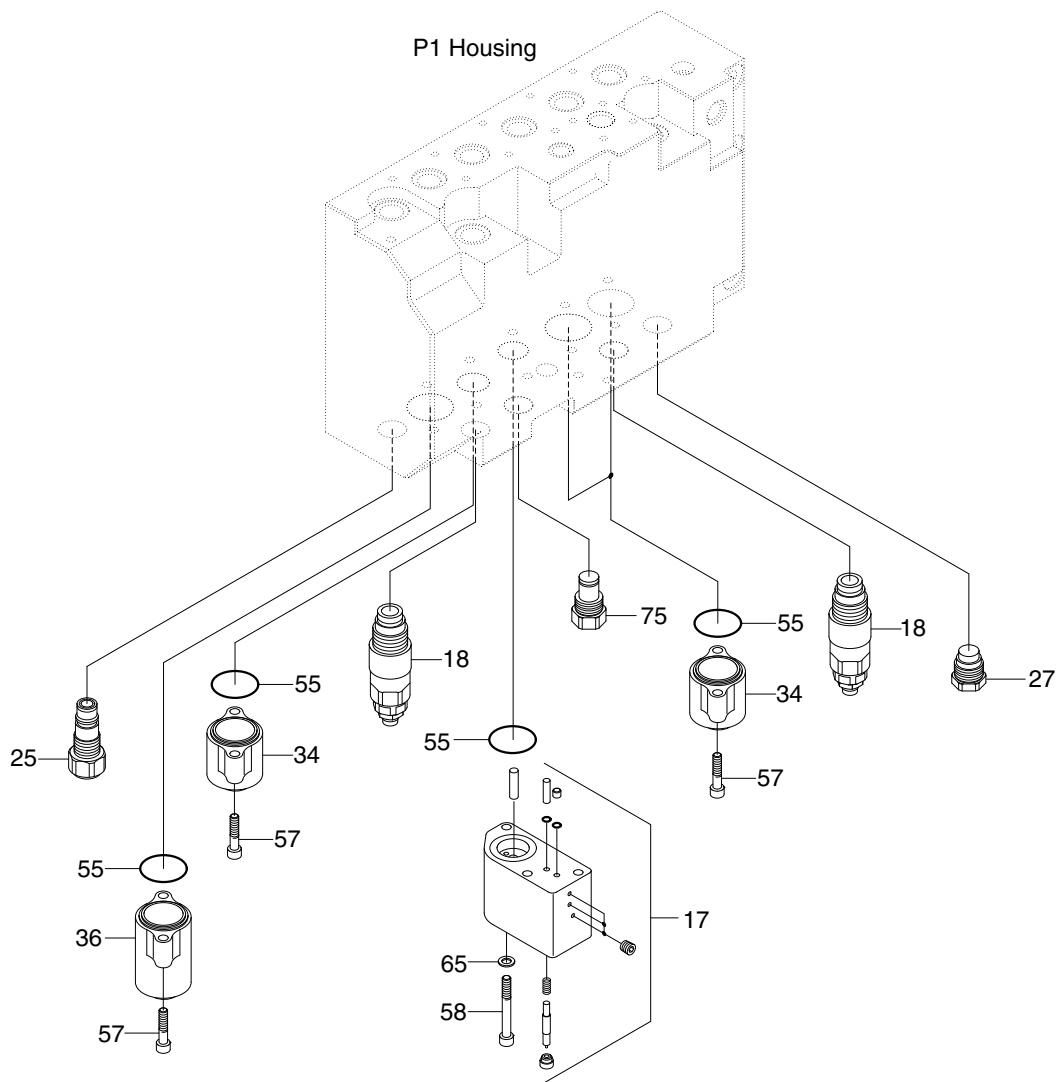

220SA8MC05

- |    |                           |    |             |    |               |
|----|---------------------------|----|-------------|----|---------------|
| 17 | Regen valve assy          | 34 | Spool cap   | 58 | Socket bolt   |
| 18 | Port relief valve assy    | 36 | Spool cap   | 65 | Spring washer |
| 25 | Negacon relief valve assy | 55 | O-ring      | 75 | Plug kit      |
| 27 | Overload plug assy        | 57 | Socket bolt |    |               |

**(13) Disassembling of check valve ( Plug (27)  
2EA )**

- ① Loosen the plug (27) and remove the poppet (37), spring (38).  
[ Hexagon key wrench 10 mm ]




**(14) Main spool disassembly**

- ① Fix the spool to the dedicated jig and take it apart.  
(Spacer bolt, spring, stopper, spring seat)  
[ Hexagon key wrench 8 mm ]




③ Assemble 9 piston assy (12) into retainer plate (11).

- Piston assy × 9EA
- Retainer plate × 1EA

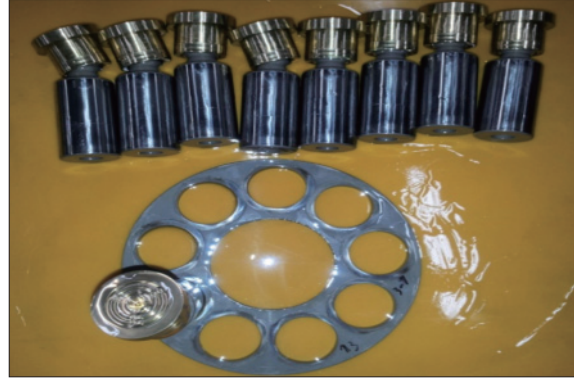

2209A8SM70

④ Assemble parts of procedure ② and ③.

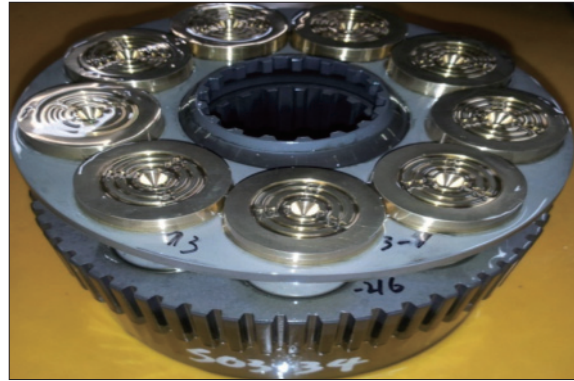

2209A8SM71

### (3) Assemble valve casing sub

① Assemble make up check valve sub

Assemble check valve (24), O-ring (27), plug (26) in that order and then screw it torque wrench.

- Make up check valve × 2EA
- Spring × 2EA
- Plug × 2EA
- O-ring × 2EA




2209A8SM72

② Assemble anti rotating valve assy

Assemble anti rotating valve assy (31), plug (32), O-ring (33, 34) in that order and then screw it a torque wrench.

- Reactionless valve assy (31) × 2EA
- Plug (32) × 2EA
- O-ring (33, 34) × 2EA

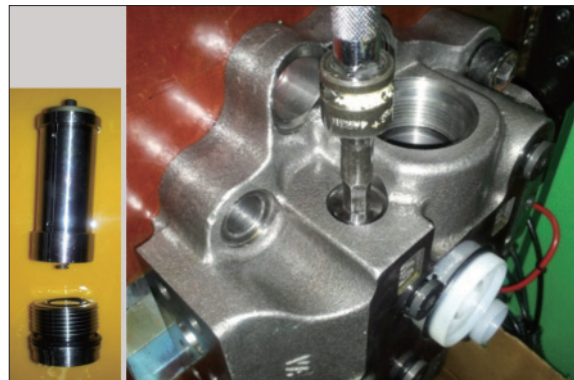

2209A8SM73

- c. Remove drive shaft sub assy from casing.  
※ Set a rack for flange of casing, and remove drive shaft sub assy from casing by using press.



2209A8SM09

- d. Remove oil seal & taper bearing (small) from casing.  
※ Do not re-use oil seal. It is impossible to disassemble drive shaft sub assy.



2209A8SM10




2209A8SM11

- (4) Screw 12 bolts (M16×45) to connect casing sub assy and ring gear (01) by using torque wrench.

Bolt (M16, 12EA) = 12.9T

The tightening torque =  $27 \pm 2.7$  kgf-m  
( $195 \pm 19.5$  lbf-ft)

- ※ Apply enough loctite #242 before screwing bolts.

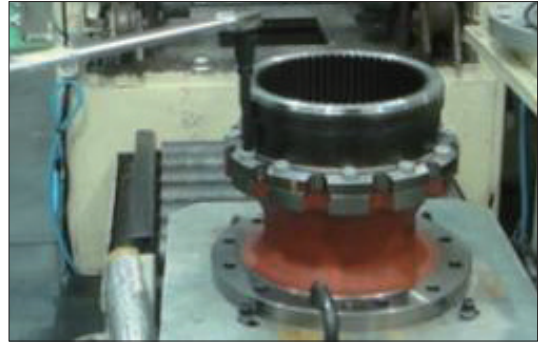

2209A8SM42

- (5) Use paint marker for checking surplus parts after assembling.



2209A8SM43




2209A8SM44


(8) Disassemble the cylinder block (18), retainer plate (21), piston assy (22), ball guide (20) and spring (19) from the cylinder block kit.




25098TM046

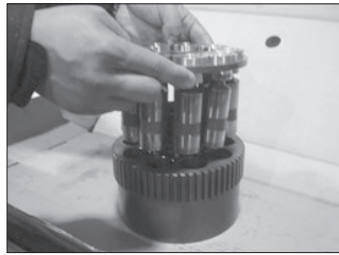


25098TM047

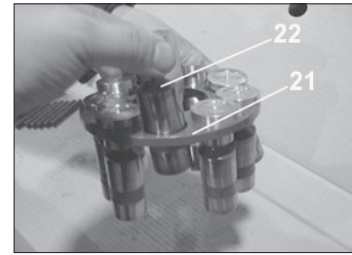

25098TM048

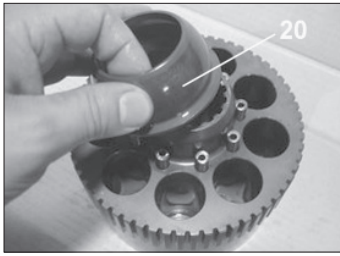


25098TM049

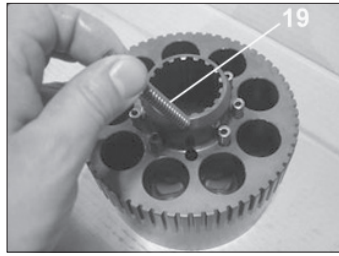


25098TM050

(9) Disassemble the swash plate (17) from the casing.

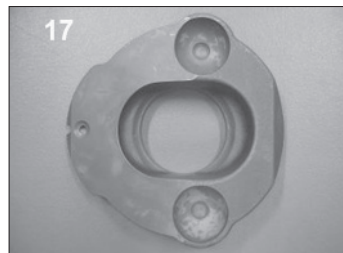


25098TM051

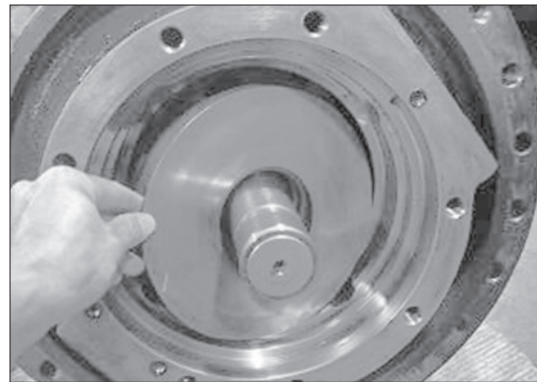


25098TM052

(10) Disassemble the steel ball (15) and swash piston (6) from the casing.

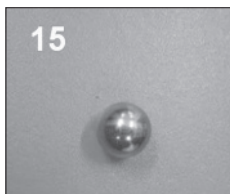


25098TM053

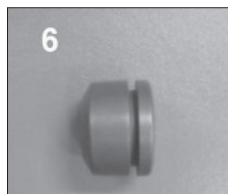


25098TM054



25098TM055

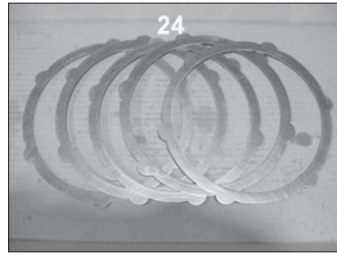


25098TM114

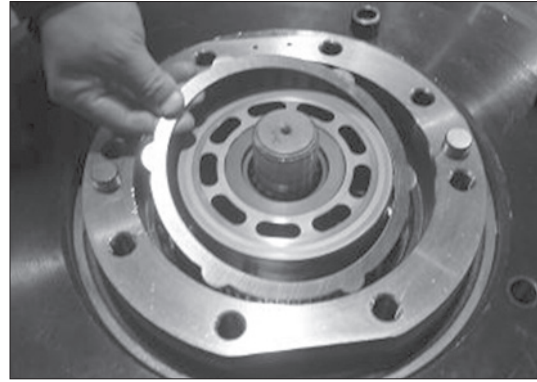


25098TM115

(23) Apply some grease on the D-ring and assemble it parking piston.

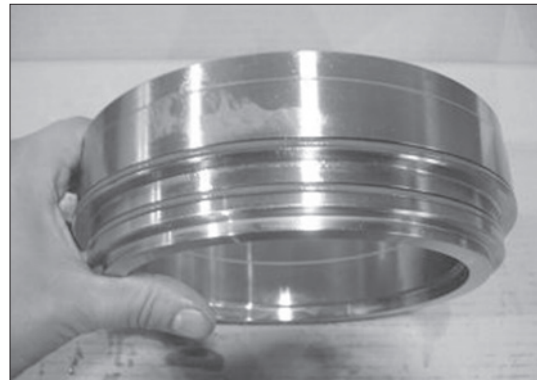


25098TM116

(24) Insert the parking piston into the casing and assemble it by using jig.

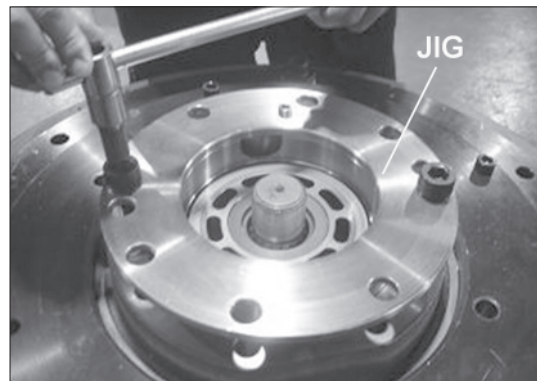

25098TM117

(25) Assemble the brake spring (30, 18EA) into the piston.

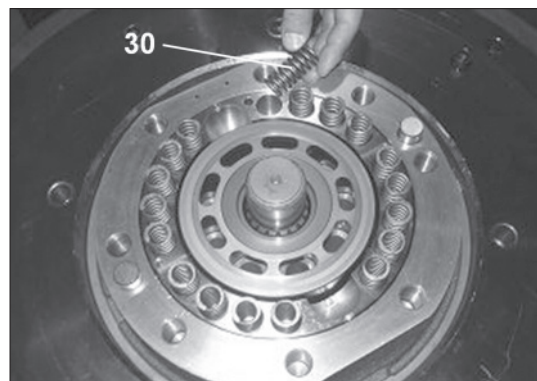

25098TM118


(4) Caulk carrier holes as shown on the picture.



25098TM146

### 3) ASSEMBLING CARRIER 2 ASSY

- (1) Put No.2 carrier on a flat place.
- (2) Install No.2 needle bearing into No.2 planetary gear, put 2EA of No.2 thrust washer on both sides of planetary gear, and then, install it into carrier.

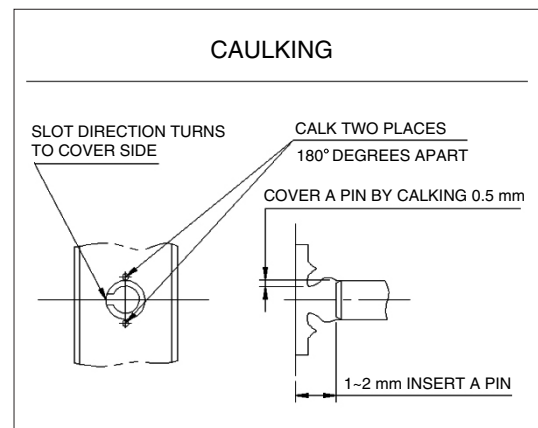

220SA8TM147


- (3) After install solid pin into the holes, install No.2 pin into No.1 carrier where the holes for No.1 pin are to be in line with those of No.1 carrier, and then, install spring pins into the holes.
- (4) Caulk carrier holes as shown on the picture.



25098TM148

### 4) ASSEMBLING FLOATING SEAL


- (1) Assemble floating seal into motor by use of pressing jig.  
Grease the contact parts for floating seal which is assembled into motor.
- ※ Be sure to maintain it vertical with the ground when assembling bearing and floating seal.

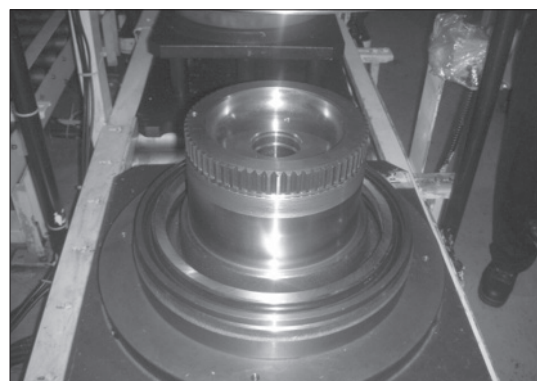


25098TM149

## 2) DISASSEMBLING TRAVEL MOTOR

- (1) Disassemble plug (37) from rear cover (34) using spanner and torque wrench and then disassemble spring (38), main spool assy (35).

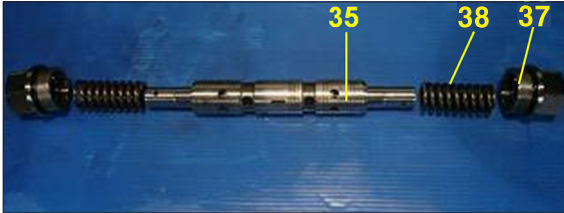

2609A8TM02A

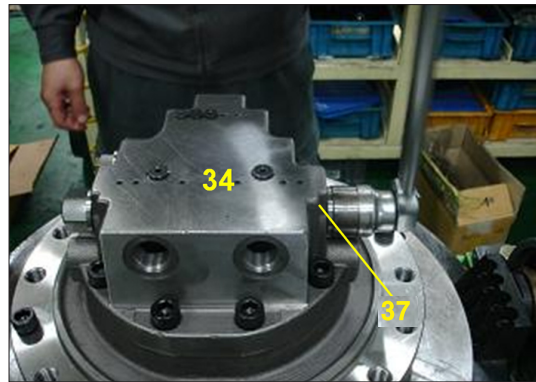

2609A8TM03A

- (2) Disassemble wrench bolt (55) using torque wrench.



2609A8TM04

- (3) Take out rear cover (34) from casing (1).




2609A8TM05

- (4) Remove brake spring (30, 14EA)



2609A8TM06

(17) Warm piston seal (8) and assemble it on swash piston (7) and then bind the piston seal (8) with a bend for a minute. Remove the bend and assemble it into casing (1).

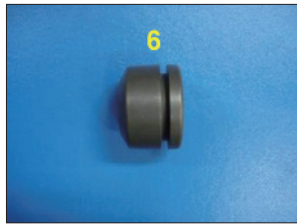

2609A8TM67



2609A8TM68

(18) Apply the grease to steel ball (15) and then assemble steel ball (15) into casing (1).



2609A8TM69



2609A8TM70

(19) Apply the grease to swash plate (17) and then assemble swash plate (17) into casing (1).



2609A8TM71



2609A8TM72

- ② Then remove planetary gear No.1 (19) and thrust washer No.1 (21) from carrier No.1 (18).



2609A8TM15

**(15) Carrier No.2 sub-assembly**

Same as carrier No.1 (18) sub-assembly.



2609A8TM16

**(16) Coupling**


Remove retainer ring (30) inside coupling (9) with nipper.



2609A8TM17

## 2. DISASSEMBLY AND ASSEMBLY

### 1) STRUCTURE

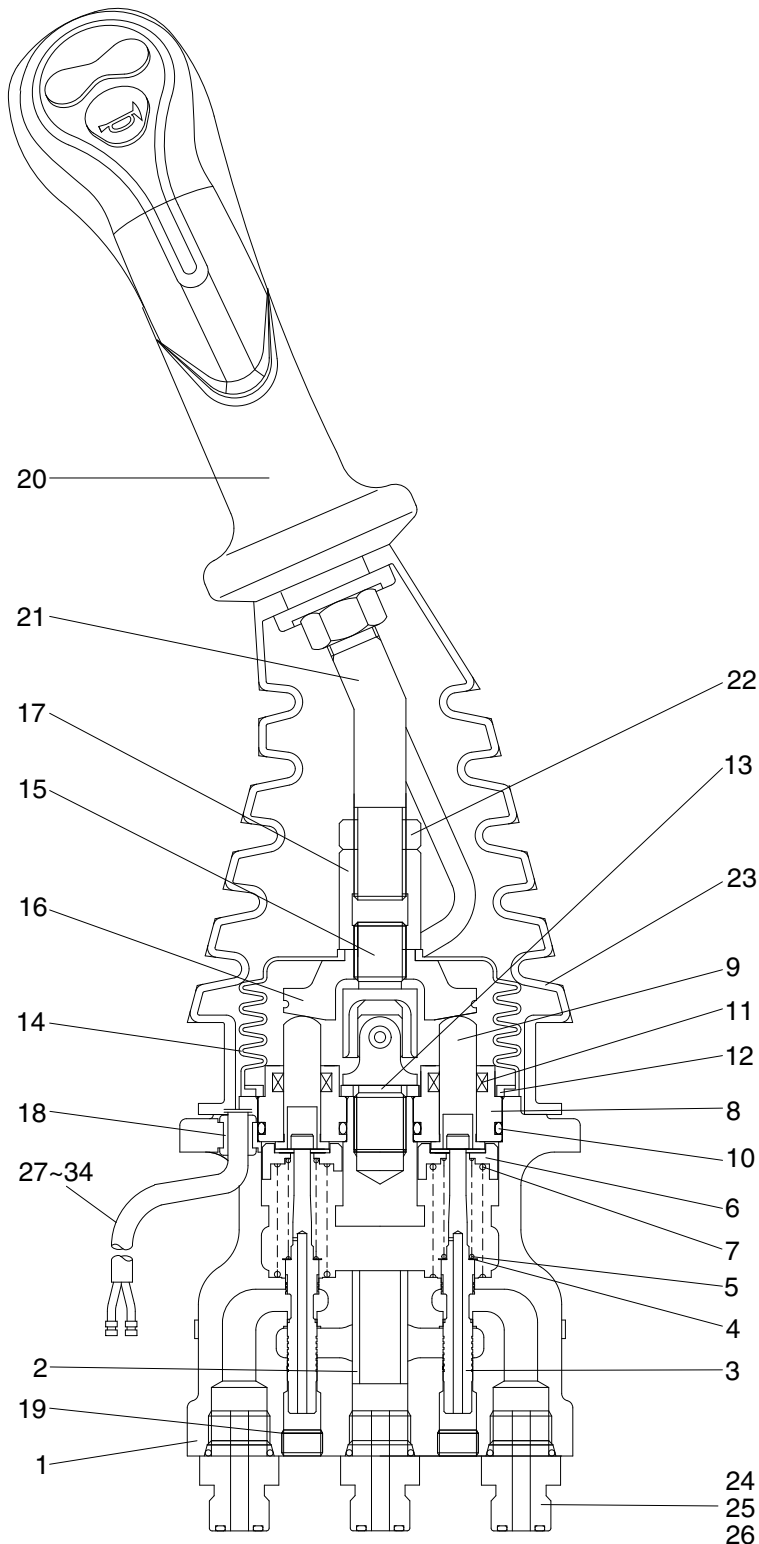


- 1 Case
- 2 Bushing
- 3 Spool
- 4 Shim
- 5 Spring
- 6 Spring seat
- 7 Spring
- 8 Plug
- 9 Push rod
- 10 O-ring
- 11 Rod seal
- 12 Plate
- 13 Spacer
- 14 Boot
- 15 Joint assembly
- 16 Swash plate
- 17 Adjusting nut
- 18 Bushing
- 19 Plug
- 20 Handle assembly
- 21 Handle bar
- 22 Nut
- 23 Boot
- 24 Last guard filter
- 25 Connector
- 26 Connector
- 27 Connector
- 28 Connector
- 27 Connector
- 29 Connector
- 30 Connector
- 31 Small guide
- 32 Connector
- 33 Big guide
- 34 Connector

210S2RL06


(10) Assemble swash plate (16) to joint (15).

- ※ Screw it to position that it contacts with 4 push rods evenly.
- ※ Do not screw it over.

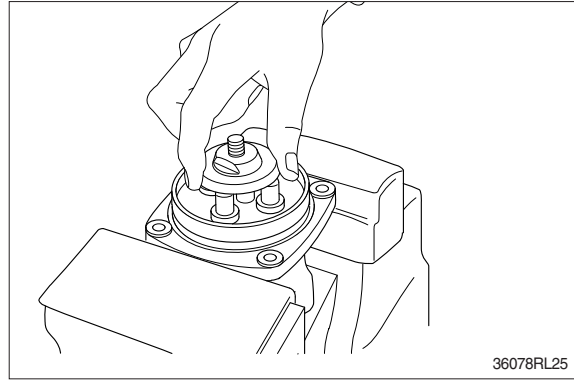


(11) Assemble adjusting nut (17), apply spanner to width across flat of plate (16) to fix it, and tighten adjusting nut to the specified torque.

- ※ During tightening, do not change position of disk.

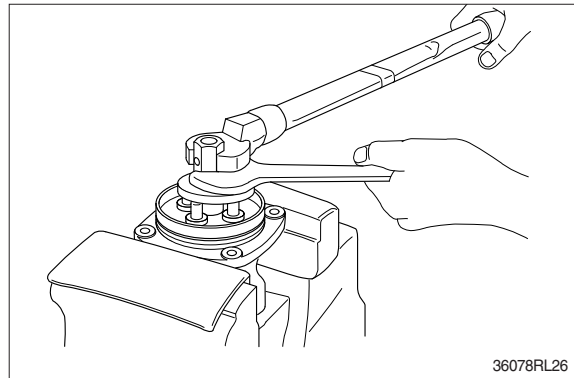

(12) Fit boot (14) to plate.

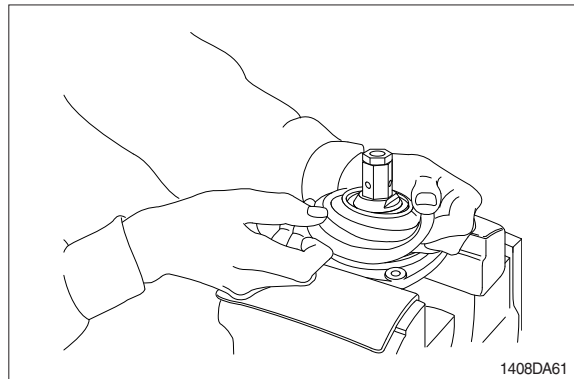


## 2) ARM CYLINDER

### (1) Removal


- ※ Expand the arm and bucket fully, lower the work equipment to the ground and stop the engine.
- ※ Operate the control levers and pedals several times to release the remaining pressure in the hydraulic piping.
- ※ Loosen the breather slowly to release the pressure inside the hydraulic tank.

**▲ Escaping fluid under pressure can penetrate the skin causing serious injury.**


- ※ Fit blind plugs in the hoses after disconnecting them, to prevent dirt or dust from entering.
- ① Set block between arm cylinder and boom.

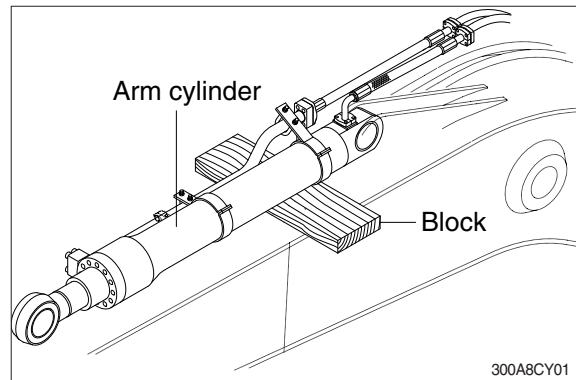


- ② Disconnect grease line hose (9).
- ③ Remove bolt (2) and pull out pin (1).
- ※ Tie the rod with wire to prevent it from coming out.
  - Tightening torque (2) :  $57.9 \pm 8.7 \text{ kgf} \cdot \text{m}$   
( $419 \pm 62.9 \text{ lbf} \cdot \text{ft}$ )

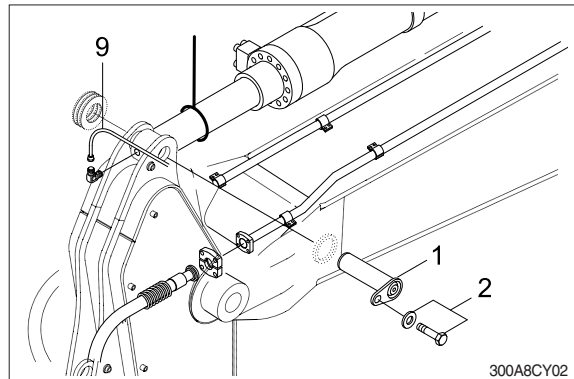


- ④ Disconnect arm cylinder hoses (4) and put plugs on cylinder pipe.
- ⑤ Disconnect greasing pipings (5).

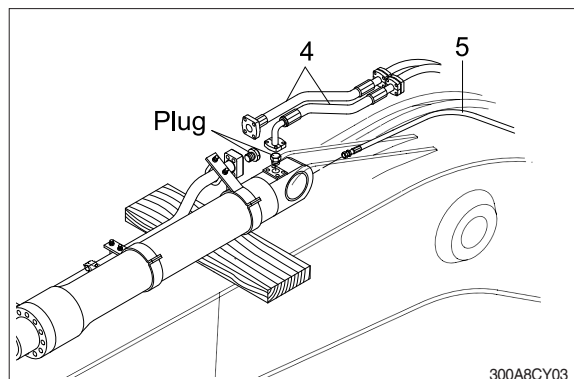

## Boom cylinder (SHPAC)

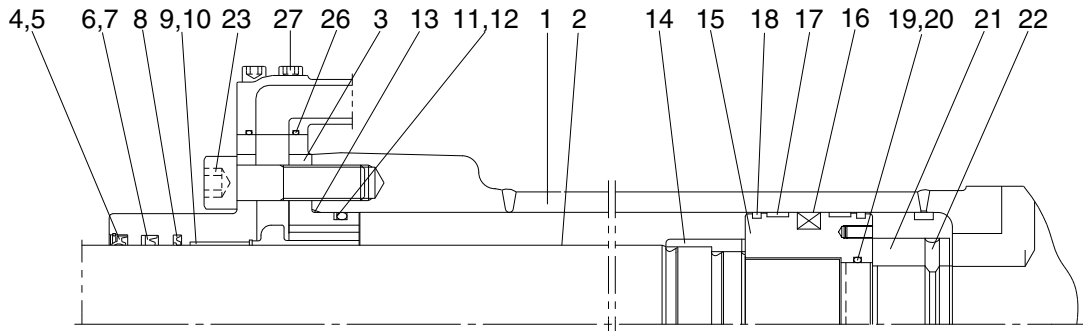

Internal detail


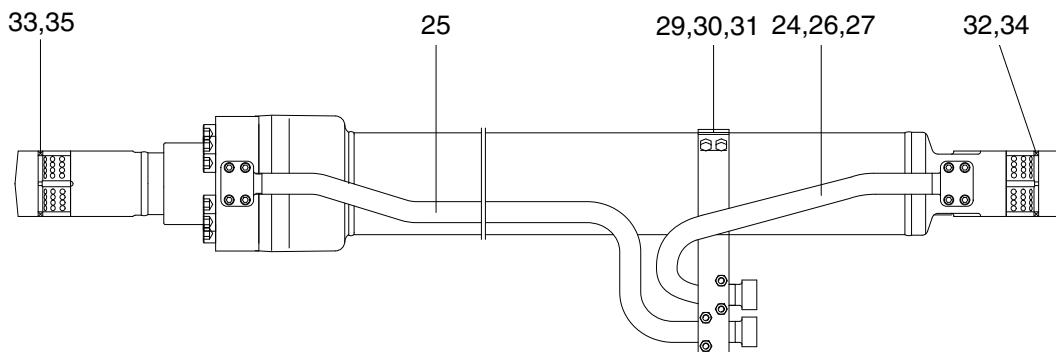


32K7-50110E-00

|    |                |    |                          |    |                          |
|----|----------------|----|--------------------------|----|--------------------------|
| 1  | Tube assembly  | 13 | O-ring                   | 25 | Pipe assembly-R, LH/RH   |
| 2  | Rod assembly   | 14 | Cushion ring             | 26 | O-ring                   |
| 3  | Gland          | 15 | Piston                   | 27 | Hexagon socket head bolt |
| 4  | Dust wiper     | 16 | Piston seal              | 28 | Band assembly            |
| 5  | Retaining ring | 17 | Wear ring                | 29 | U-bolt                   |
| 6  | Rod seal       | 18 | Dust ring                | 30 | Hexagon nut              |
| 7  | Back up ring   | 19 | O-ring                   | 31 | Spring washer            |
| 8  | Buffer ring    | 20 | Back up ring             | 32 | Dimple bushing           |
| 9  | Dry bearing    | 21 | Lock nut                 | 33 | Dimple bushing           |
| 10 | Retaining ring | 22 | Hexagon socket set screw | 34 | Dust seal                |
| 11 | O-ring         | 23 | Hexagon socket head bolt | 35 | Dust seal                |
| 12 | Back up ring   | 24 | Pipe assembly-B, LH/RH   |    |                          |

### (3) Overall assemble

- ① Place a V-block on a rigid work bench.  
Mount the tube assembly (1) on it and fix the assembly by passing a bar through the clevis pin hole to lock the assembly.
- ② Insert the rod assembly in to the tube assembly, while lifting and moving the rod assembly with a crane.
  - ※ Be careful not to damage piston seal by thread of tube assembly.
- ③ Match the bolt holes in the cylinder head flange to the tapped holes in the tube assembly and tighten socket bolts to a specified torque.
  - ※ Refer to the table of tightening torque.

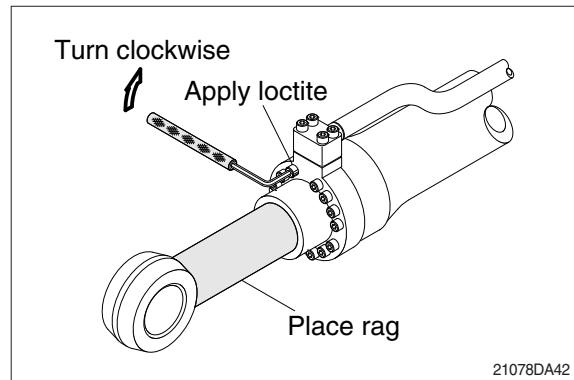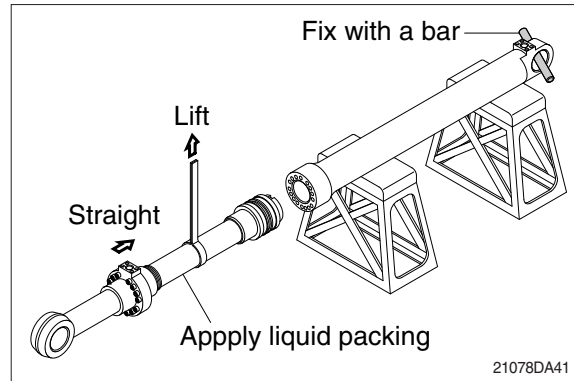

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL

- Thank you very much for reading the preview of the manual.
- You can download the complete manual from: [www.heydownloads.com](http://www.heydownloads.com) by clicking the link below



- Please note: If there is no response to CLICKING the link, please download this PDF first and then click on it.

CLICK HERE TO **DOWNLOAD** THE COMPLETE MANUAL